

3. Hardware Installation

3.1 Common Item of Installation and De-Installation

3.1.1 How to open/close the cover

1. Front Logic Box Cover

Removal

- a. Loosen the three screws.
- b. Open the four hooks.
- c. Remove the Front Logic Box cover from the Front Logic Box.

Attachment

- a. Attach the Front Logic Box cover to the Front Logic Box.
- b. Close the four hooks.
- c. Fasten the three screws.

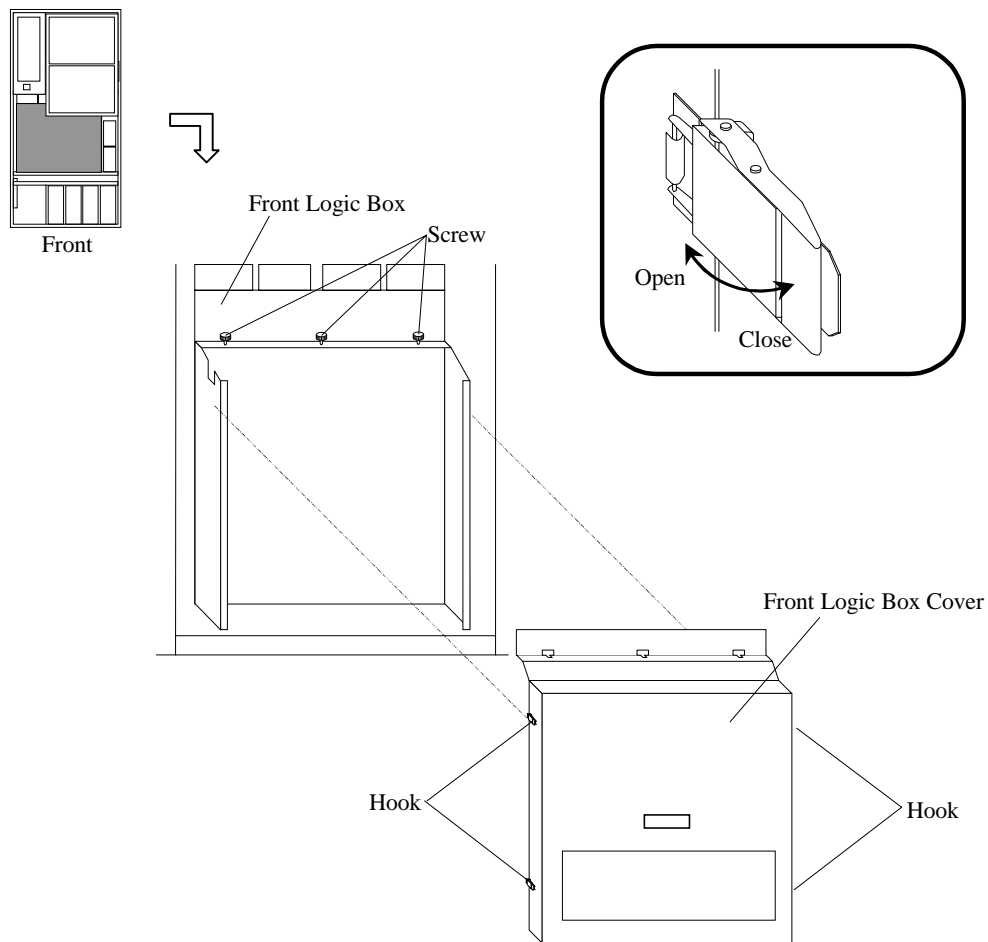


Fig. 3.1.1-1 Open the Front Logic Box Cover

3.1.2 Attaching the Wrist Strap

- (1) To protect the IC and LSI on the PCB from static electricity damage, put on the wrist straps and connect them into the ground wires on the DKC before starting work (see Fig. 3.1.2-1).

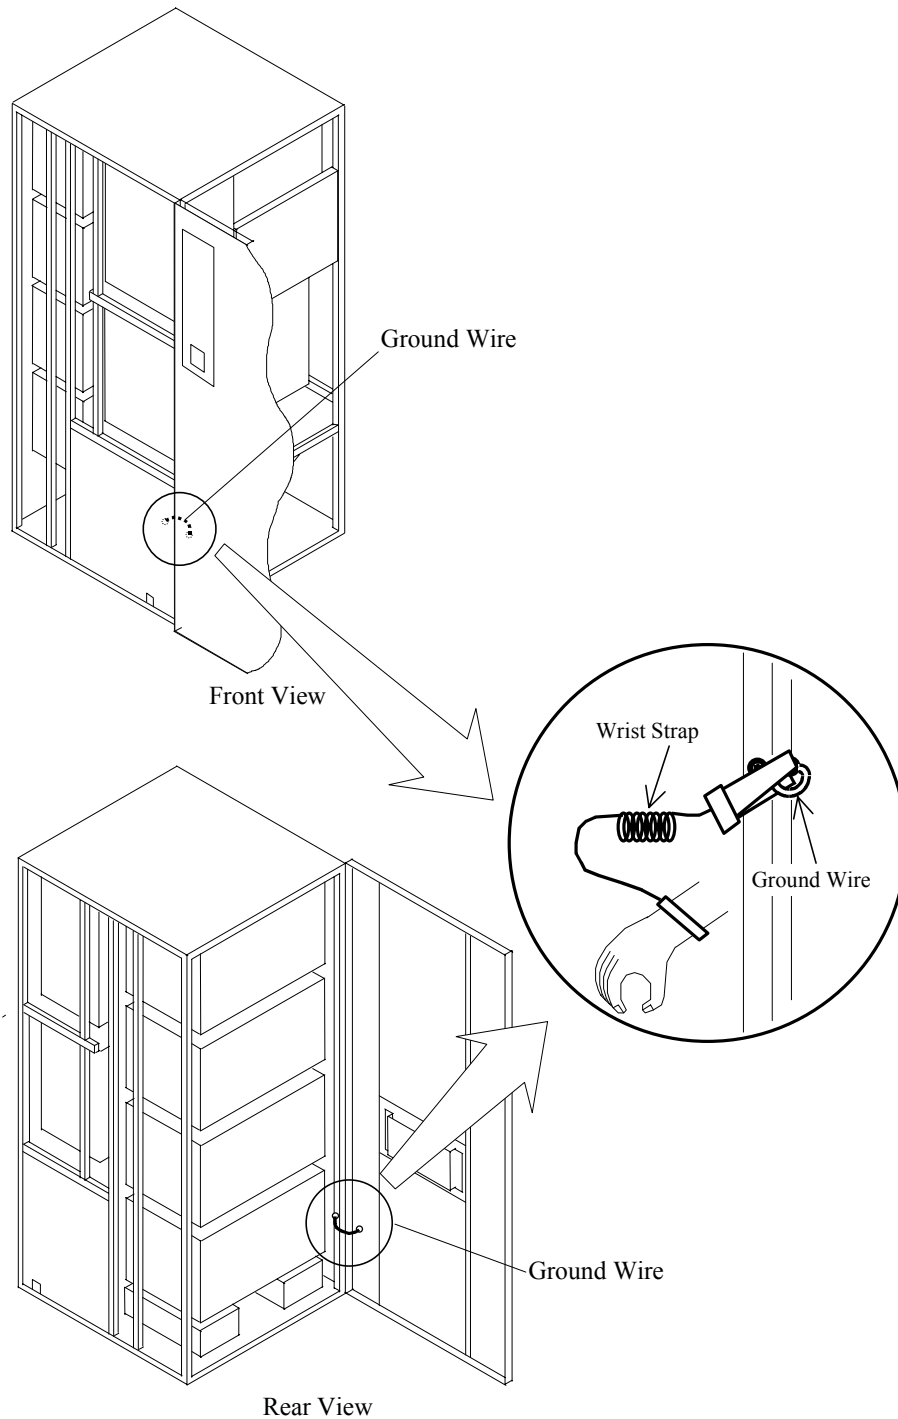


Fig. 3.1.2-1 Location of Ground Wire on the DKC

3.2 UNPACKING AND INSPECTION

Receiving and Inspection

Before unpacking the unit, check the physical condition of the packed unit.

1. Prior to unpacking, check the container for visible damage or any indication of excessive shock, tilt or anything else abnormal during transportation and handling.
2. Obtain and check shipping manifest for missing units.
3. If anything abnormal is found, appropriate action should be taken before starting an installation.

Unpacking Procedure

NOTICE:

- Be very careful when handling the equipment.
- Do not drop the equipment from a height more than 5 mm (0.2in.) high.
- Floor unevenness must be less than 10 mm (0.4in.). Move slowly and lift the four screw jacks at the bottom of each frame to the highest position to prevent contact with the ramp.

3.2.1 Unpacking

3.2.1.1 Disk Subsystem (DKC465I)

1. Card board crate overview is shown in Fig. 3.2.1.1-1.
2. Cut the polyester bands.
3. Remove the nails.

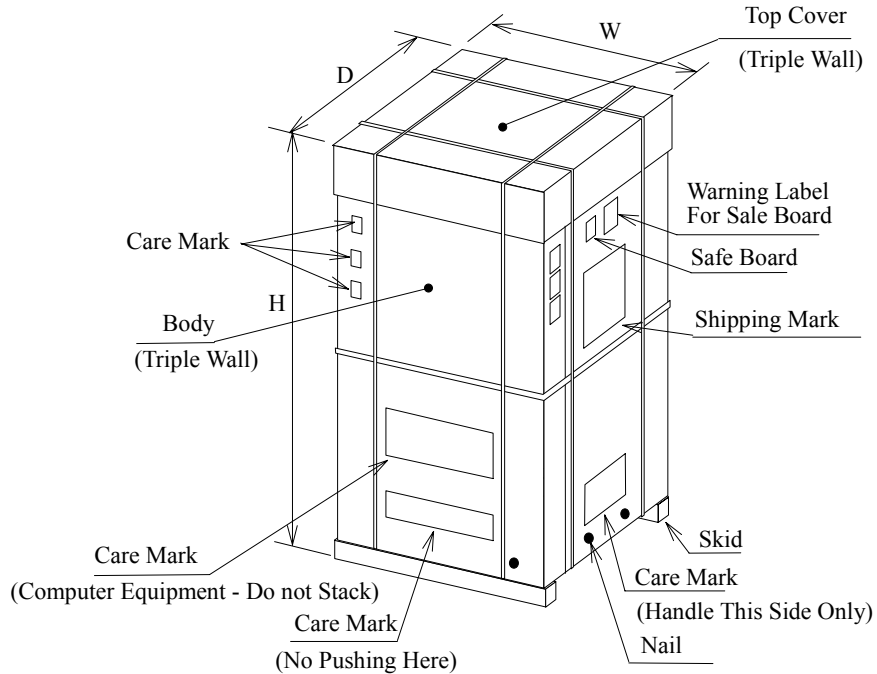


Fig. 3.2.1.1-1 Card Board Crate Overview

4. Remove Top Cover and Side Covers.

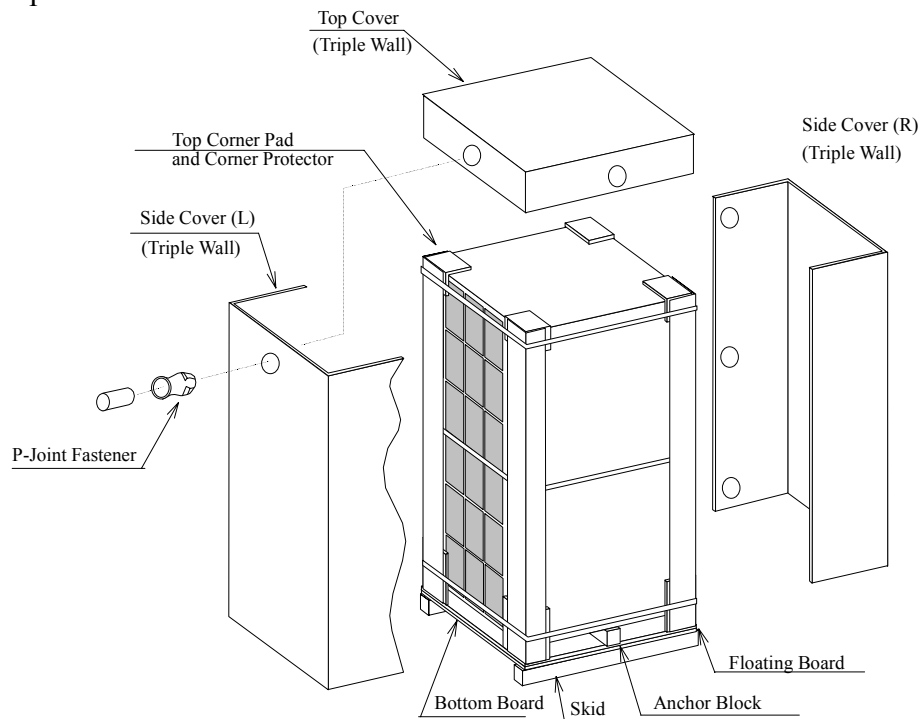


Fig. 3.2.1.1-2 Breakdown of CARD BOARD Crate

5. Take the equipment down from FLOATER by lifting the equipment with forklift a minimum amount needed to remove the FLOATER/DECK/SKID assembly.
6. Gently lower the equipment onto floor.
7. Remove adhesive tape and corner protectors.

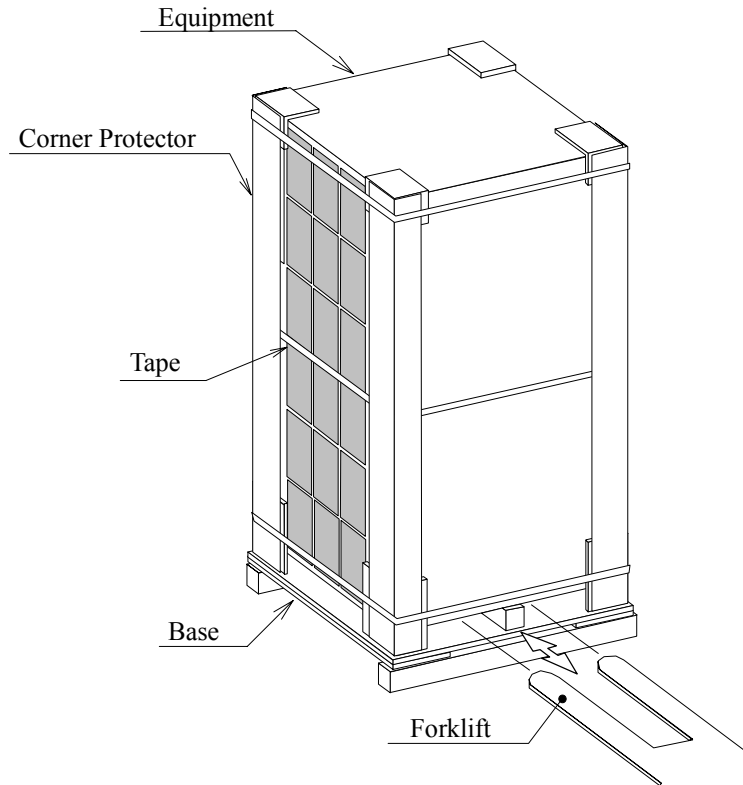


Fig. 3.2.1.1-3 Lift of Equipment

8. Remove the polyethylene bag and adhesive tape.

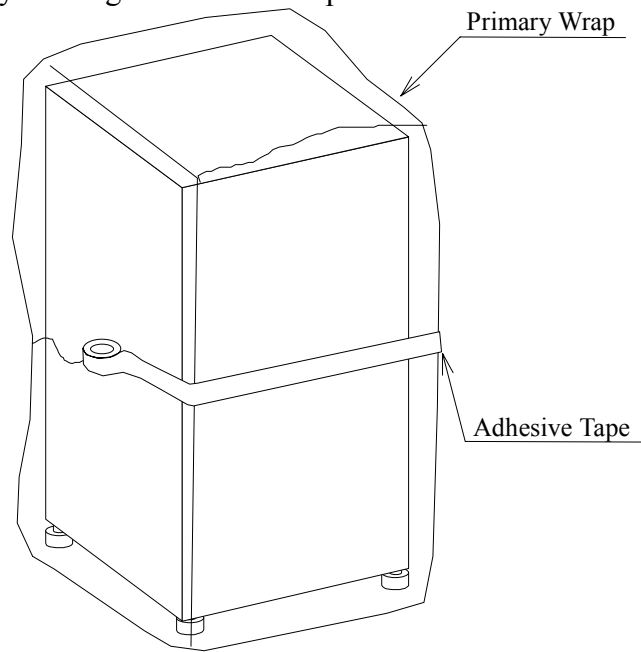


Fig. 3.2.1.1-4 Removal of Wrap Material

9. Remove the band.
10. Remove the adhesive tape and cushions from Operator Panel Cover.

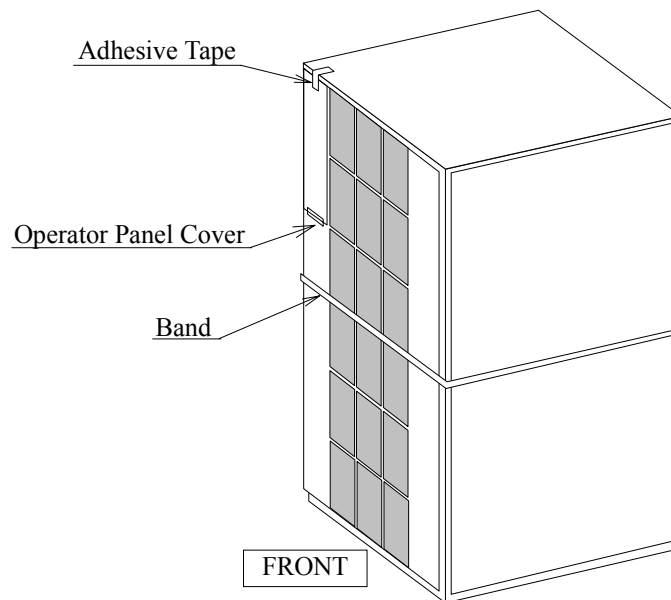


Fig. 3.2.1.1-5 Surface Unpacking

11. Open the front and rear door, remove the shipping cushions and tapes from the container.
12. Visually check the unit for any damage.

3.2.2 Inspection of Packaged Parts and Accessories

1. Match the unpacked parts against the parts lists in Tables 3.3.2-1 to verify that all parts are supplied.


DKC465I

Table 3.2.2-1 List of Packaged Parts and Accessories

No.	Name of parts	Parts number	Quantity/Unit	Remarks
1	Disk Subsystem	-----	1	
2	Kick Plate (Side)	3263389-2	2	
3	Kick Plate (F/R)	3263388-2	2	
4	Screw (Black)	5411531-2	4	
5	Label (V/Hz/PH.)	3264271-1	1	

3.3 Subsystem Installation

3.3.1 Flowchart

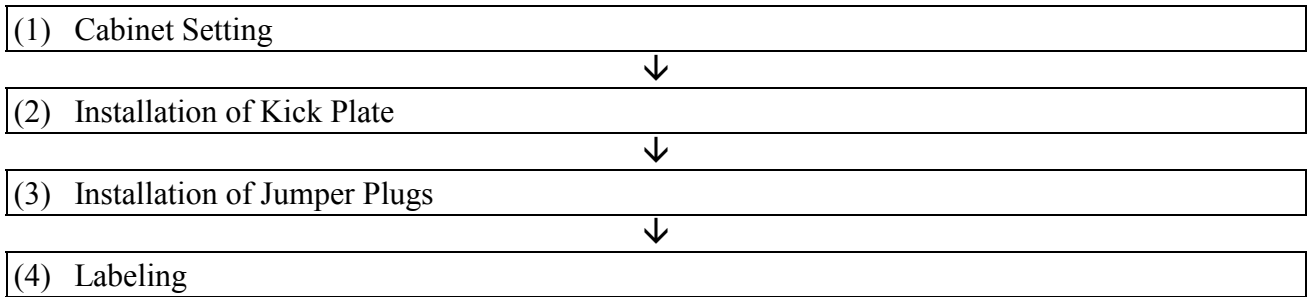

3.3.2 Cabinet Setting

1. Open the front and rear doors on the DKC.
2. Remove the screws for transporting the movable rack and SVP rack, and then fasten the screws.

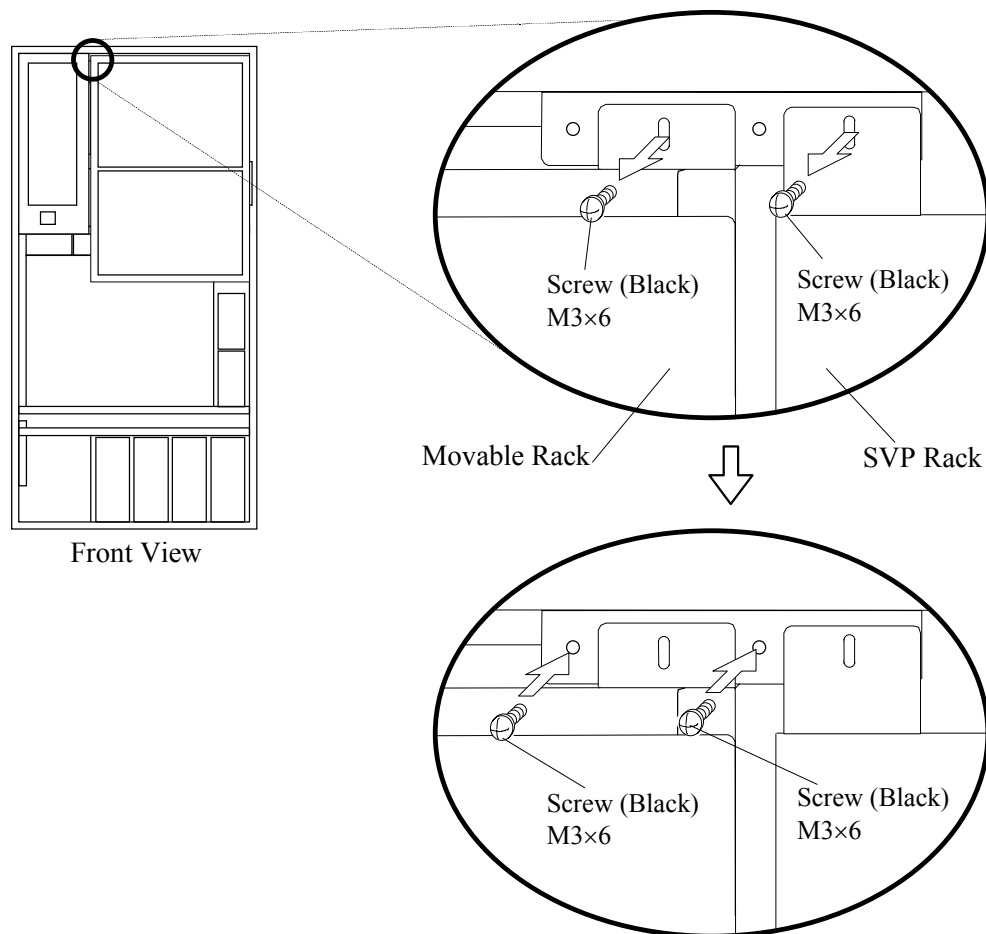


Fig. 3.3.2-1 Removal of Screw for Transporting the Movable Rack

3. Loosen the screws fastening the SVP stopper, slide the stopper toward the left, and tighten the screws again. When no SVP is to be added, it is not required to shift the stopper.

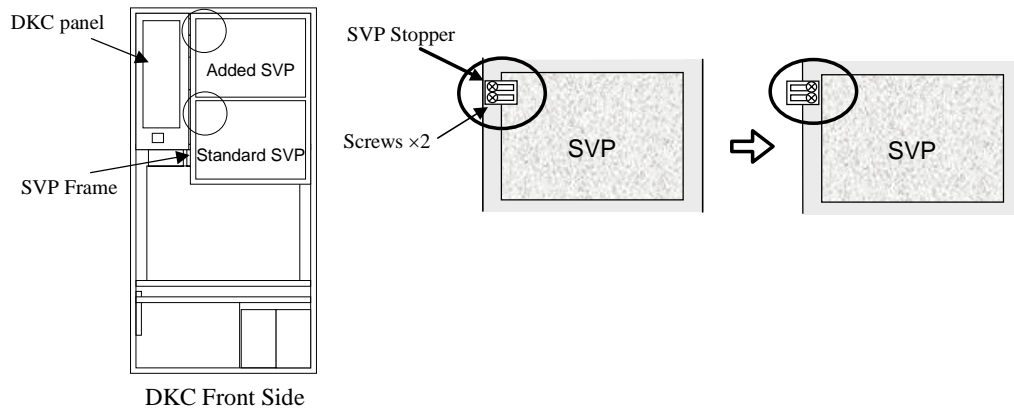


Fig. 3.3.2-2 Shifting SVP Stopper

CAUTION

Prevention of tumble and screw jack damage.

When adjusting the height of the device, 4 screw jacks must be turned with 1/4 turns for each alternately.

Prevention of screw jack damage.

When the screw jacks are turned, put oil into the screw jacks.

4. Lower the screw jacks until caster is 2.5mm (0.1in.) from the floor.
5. Level the device as shown Fig. 3.3.2-3b.


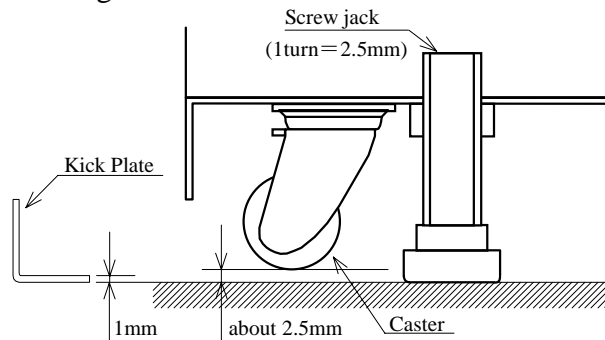


Fig. 3.3.2-3a Gap between Caster and Floor

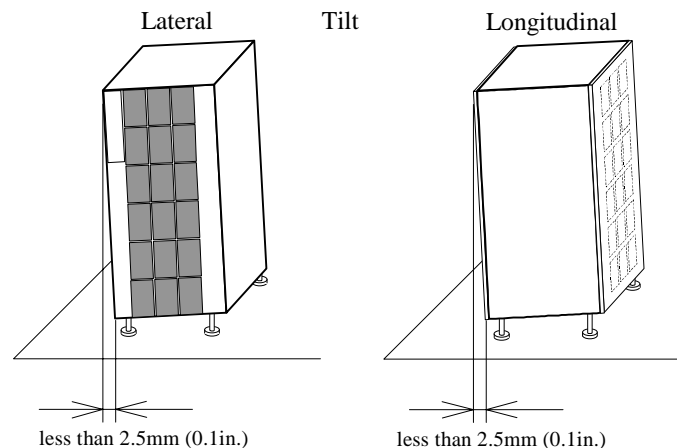

3.3.3 Installation of Kick Plate

1. Attach the kick plates with the binding screws. See Fig. 3.3.3-1.

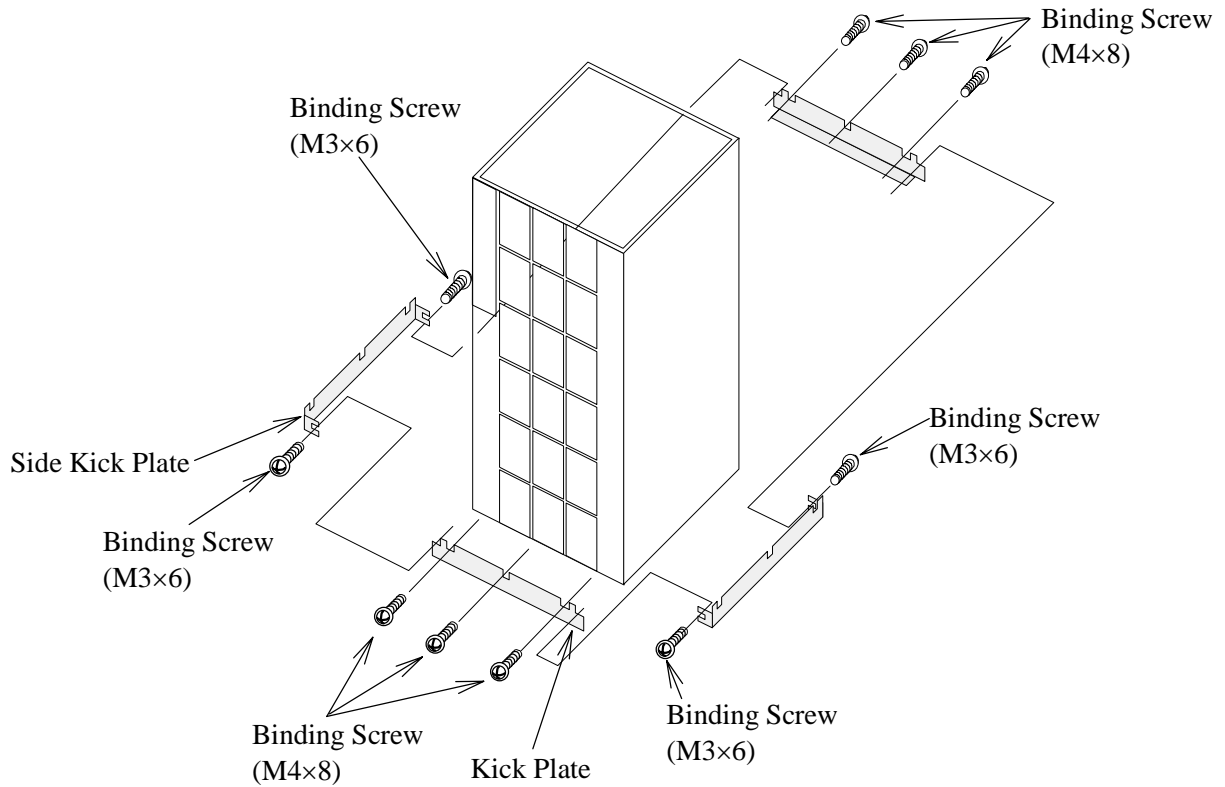


Fig. 3.3.3-1 Installation of Kick Plate

NOTICE:

Contact the kick plate to the floor to prevent static electricity.

3.3.4 Installation of Jumper Plugs

Be sure to wear your wrist strap and attach to ground prior to performing the following work. This will ensure that the IC and LSI on the PCB are protected from static electricity.

3.3.4.1 Installation of Jumper Plugs in PCI CON PCB

Install the jumper plugs in the PCI CON PCB as indicated in the table below.

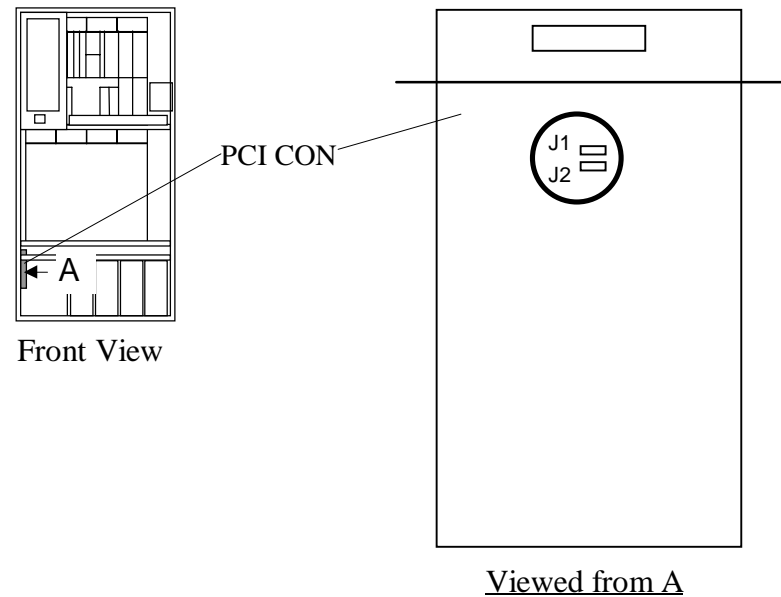


Fig. 3.3.4.1-1 Installation of Jumper Plugs in PCI CON PCB

Table 3.3.4.1-1 Installation of Jumper Plugs in PCI CON PCB

No.	Description	Installing status JP1 and JP2
1	When power is controlled from the host(at least one PCI cable attached to JP1-JP8 on PCI CON PCB and the upper PCI is operating), set the jumpers as shown.	<div> <div>1 2 3</div> <div>JP1 ● ● ●</div> </div> <div> <div>1 2 3</div> <div>JP2 ● ● ●</div> </div>
2	When power is not controlled from the host, no PCI cable attached to JP1-JP8 PCI CON PCB or to disable the EPO of host, set the jumpers as shown.	<div> <div>1 2 3</div> <div>JP1 ● ● ●</div> </div> <div> <div>1 2 3</div> <div>JP2 ● ● ●</div> </div>

3.3.4.2 Installation of Jumper Connectors in BATCTR PCB

1. Open the locking clamp and remove the two jumper connectors.

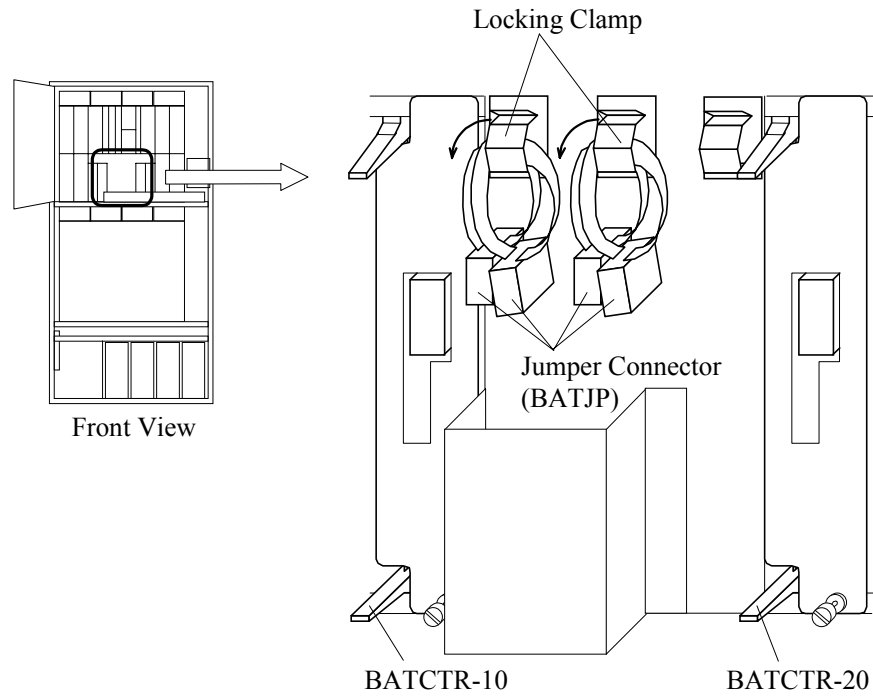


Fig. 3.3.4.2-1 Removal of Jumper Connectors

2. Install the jumper connectors in the BATCTR PCBs as indicated in the figure below.

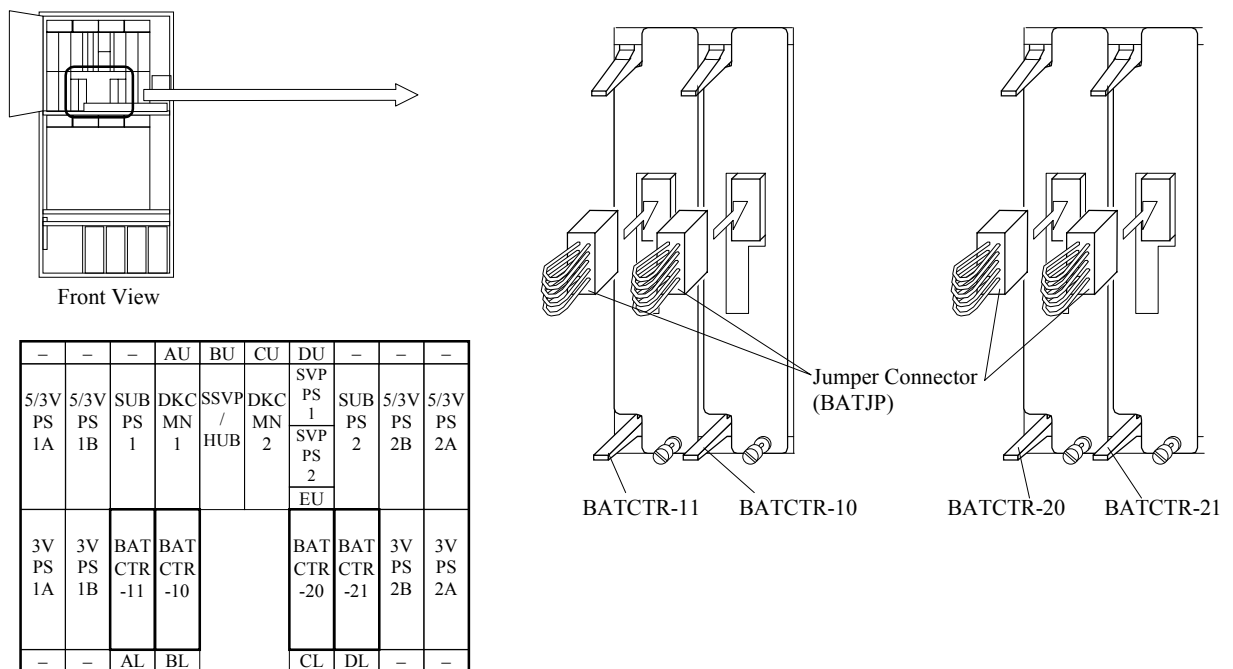


Fig. 3.3.4.2-2 Installation of Jumper Connectors in BATCTR PCB

3.3.5 Labeling

1. Attach the label (V/Hz/PH.) to the DKC bottom base. Label (V/Hz/PH.) should be selected among the sheet of Label (V/Hz/PH.) corresponding to the operating voltage and frequency.

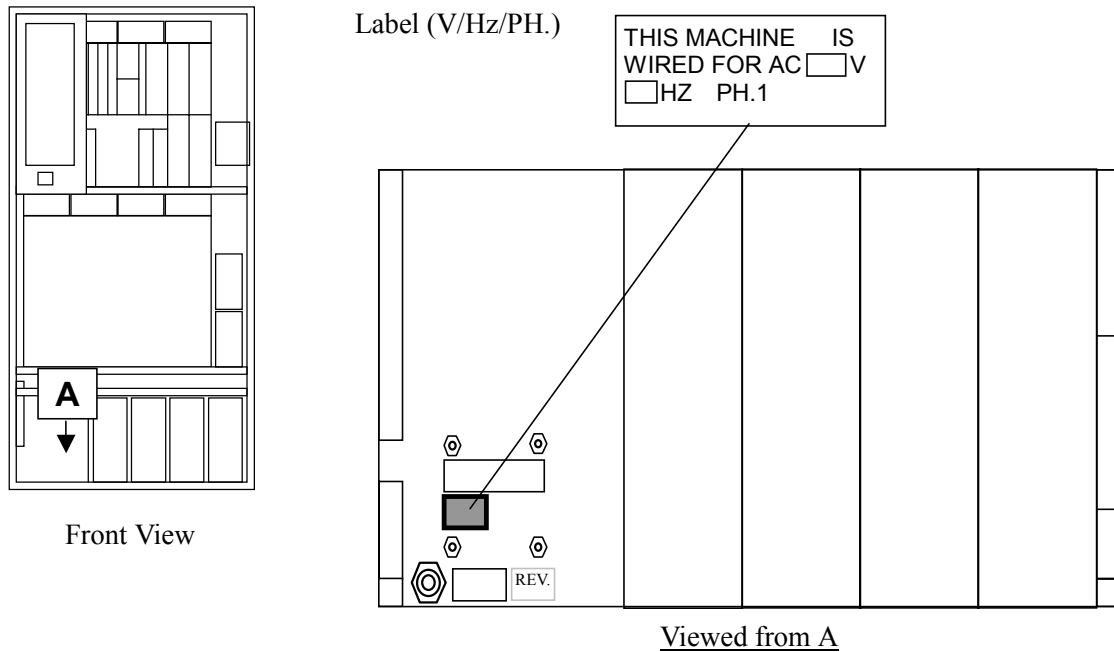


Fig. 3.3.5-1 Attachment of Label

3.4 Installation of AC Box Kit

Notice:

Perform this addition after you have separate the subsystem from the host (OS) and turned off the subsystem powered.

3.4.1 Installation of AC Box Kit for Single Phase/50A or 3 Phase/30A (DKC-F465I-1PS/3PS)

Table 3.4.1-1 Parts List

No.	Model Number	Part Name	Part No.	Quantity	Remarks
1	DKC-F465I-1PS	AC Box	5513939-A	2	
		Screw	SB306N	4	
		Nameplate (HDS)	2105894-1	1	RSD
		Nameplate (HP)	2105894-101	1	RSD
2	DKC-F465I-3PS	AC Box	5513938-A	2	
		Screw	SB306N	4	
		Nameplate (HDS)	2105894-2	1	RSD
		Nameplate (HP)	2105894-102	1	RSD

1. Attach the AC Boxes.
 - a. Remove the screws and remove the plates from the bases.

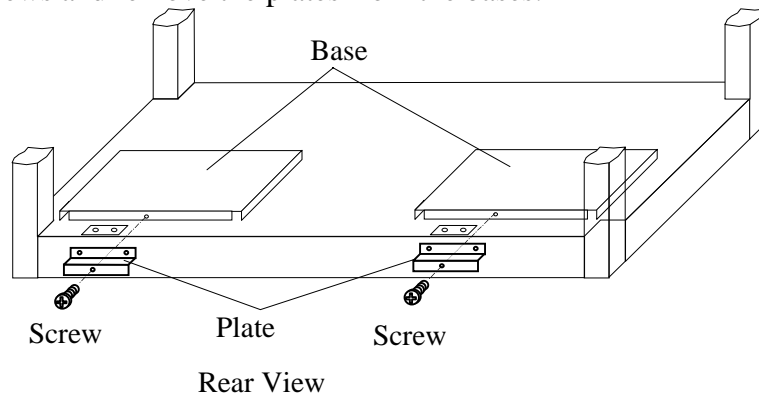


Fig. 3.4.1-1 Removal of Plates

- b. Attach the AC Boxes to the bases.

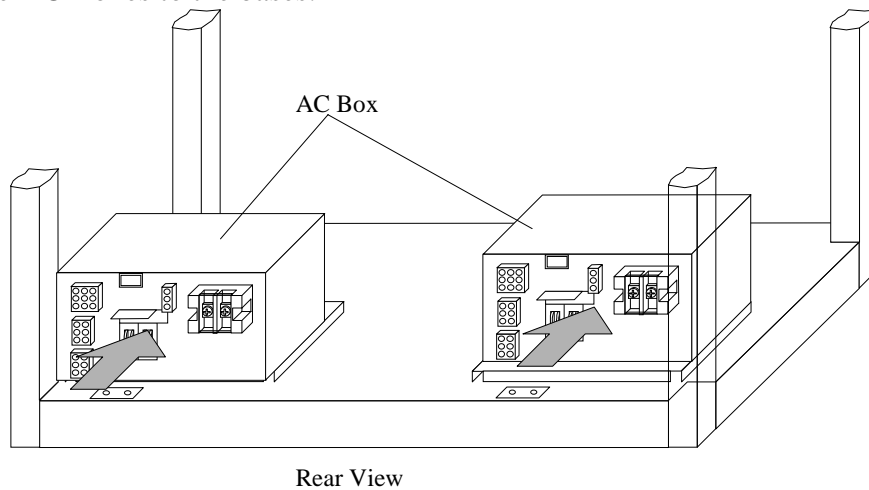


Fig. 3.4.1-2 Attachment of AC Boxes

- c. Attach the plates with the screws.

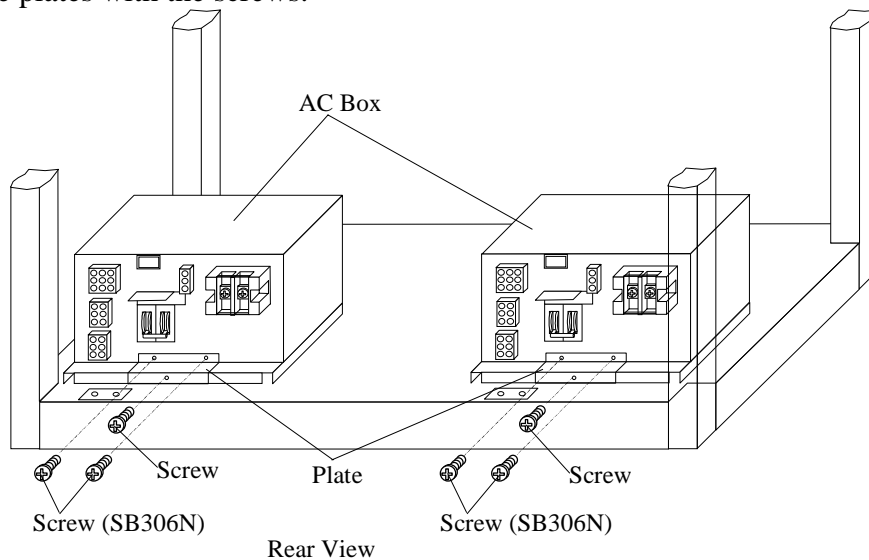


Fig. 3.4.1-3 Attachment of Plates

- d. Attach frame ground cable with the screw and lock washer.

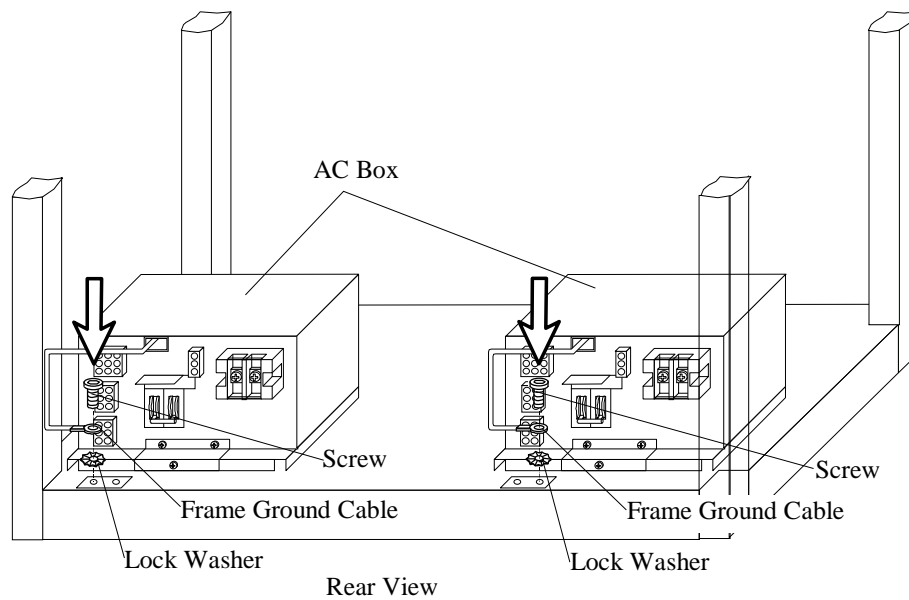


Fig. 3.4.1-4 Attachment of Ground Cables

2. Connect the cables.

DKC-F465I-1PS

- a. Connect the cables to the AC Boxes.



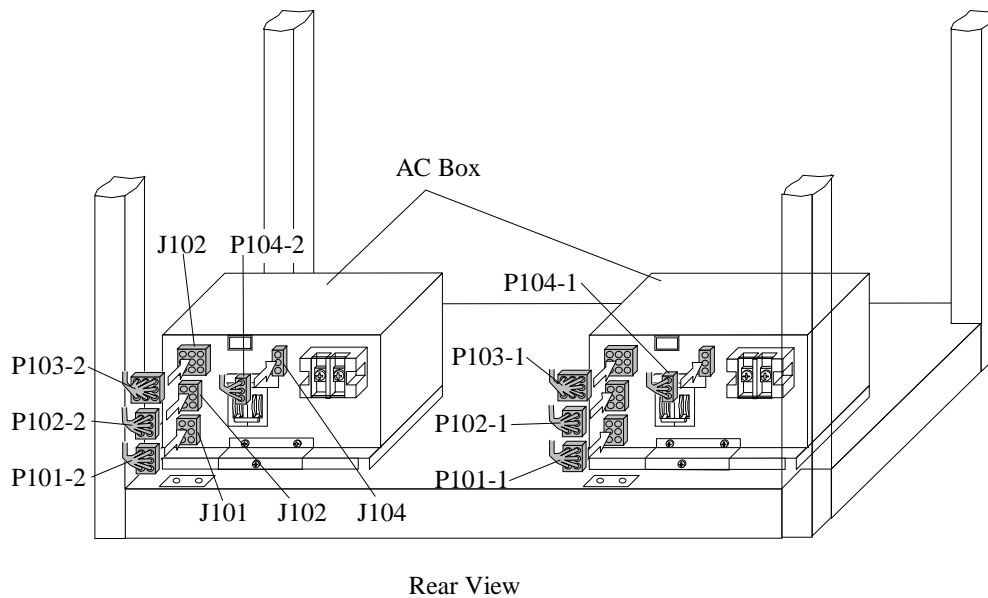



Fig. 3.4.1-5 Connection of Cables

DKC-F465I-3PS

- Connect the cables and dummy connector to the AC Boxes.
- Connect the Voltage setting jumper (P105) correspond to AC Input Voltage, connect the dummy connector to free connector.

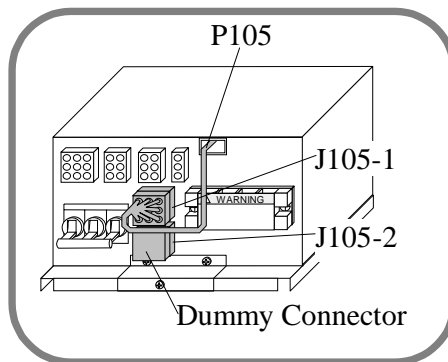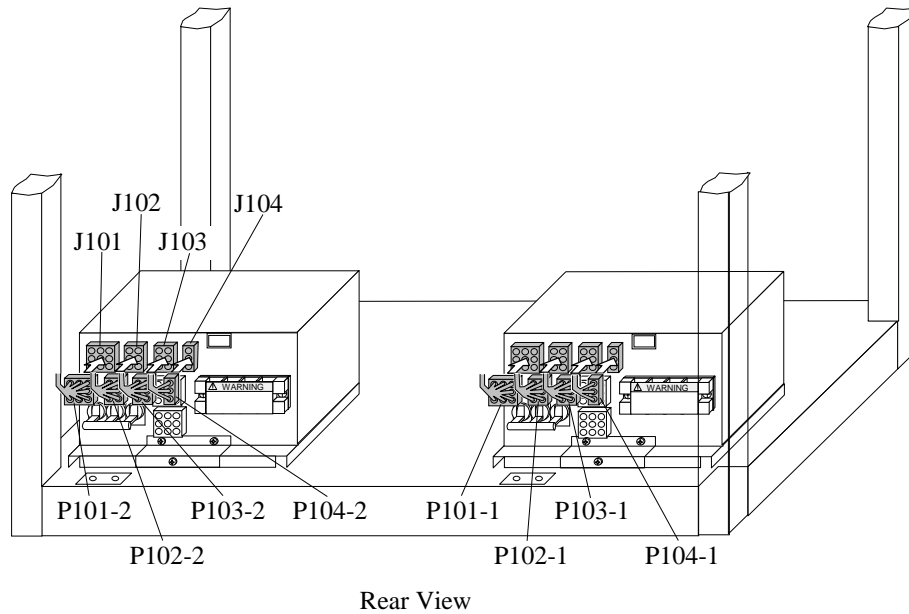

Input AC Voltage: 200-240V

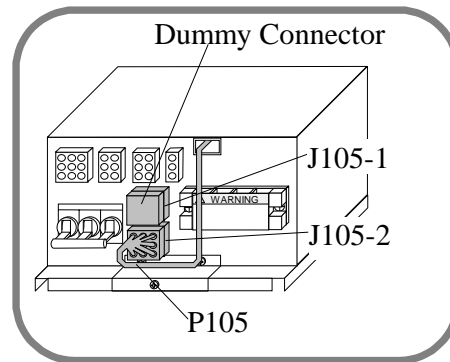

Input AC Voltage: 380-415V

Fig. 3.4.1-6 Connection of Cables

3. Attach the Nameplate.
 - a. Attach the nameplate to the Front Logic Box cover.

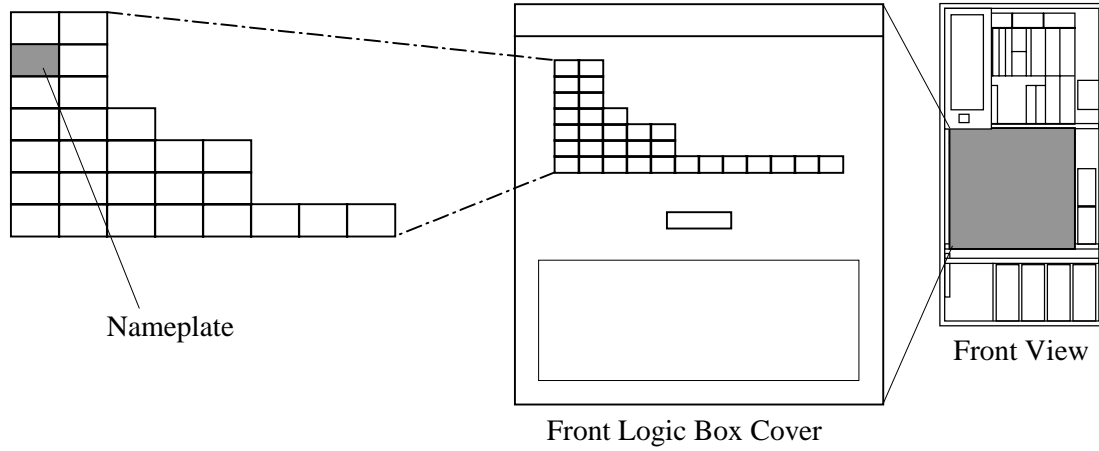


Fig. 3.4.1-7 Location of Nameplate

3.4.2 Installation of AC Box Kit for Single Phase/30A (DKC-F465I-1PSD)

Table 3.4.2-1 Parts List

No.	Model Number	Part Name	Part No.	Quantity	Remarks
1	DKC-F465I-1PSD	AC Box	5518053-A	2	For 30A
		Bracket	3265678-1	1	
		Cover	5513750-1	1	
		Screw	SB306N	6	
		Label (V.Hz.PH.A.W)	3265705-1	1	
		Nameplate (HDS)	2105894-13	1	RSD
		Nameplate (HP)	2105894-110	1	RSD

Notice:

There are some subsystems in which the AC Box Kit for Single Phase/30A (DKC-F465I-S1PSD) cannot be installed depending on the serial numbers (S#) of the subsystem because they have no connector for connecting the FG cable.

Serial numbers of subsystems in which the AC Box Kit above cannot be installed:

20025-20120, 20126, 20130, 20134, 20136, and 20137

Serial numbers of subsystems in which the AC Box Kit above can be installed:

20121-20125, 20127-20129, 20131-20133, 20135, and 20138 and over

1. Attach the AC Boxes.
 - a. Remove the screws and remove the plates from the bases.

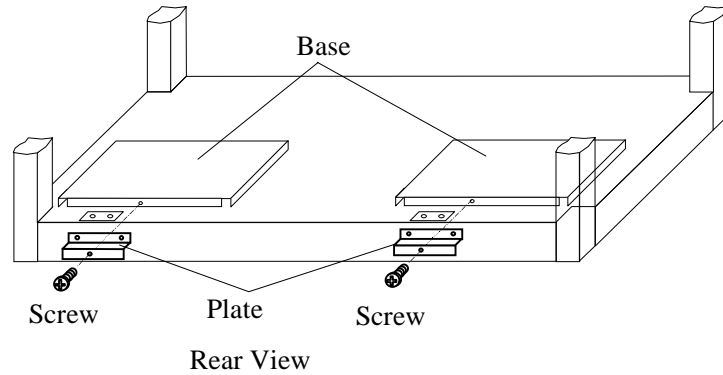


Fig. 3.4.2-1 Removal of Plates

- b. Attach the AC Boxes to the bases.

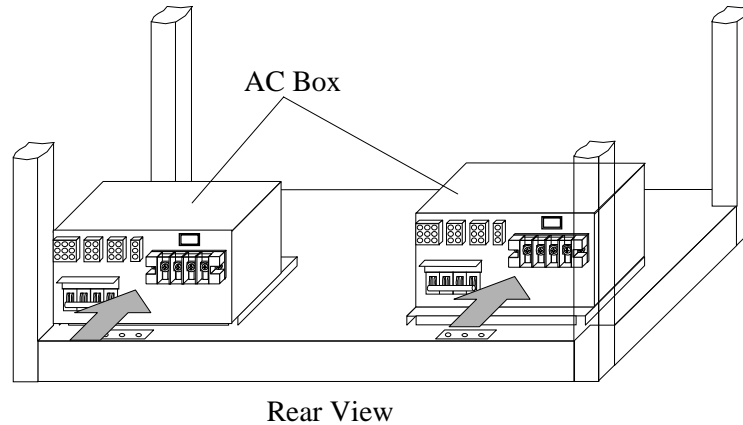


Fig. 3.4.2-2 Attachment of AC Boxes

- c. Attach the plates with the screws.

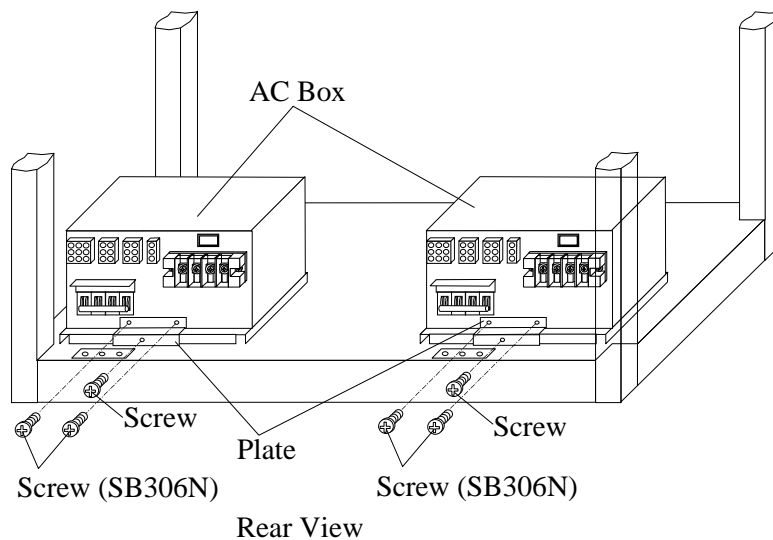


Fig. 3.4.2-3 Attachment of Plates

- d. Attach frame ground cable with the screw and lock washer.

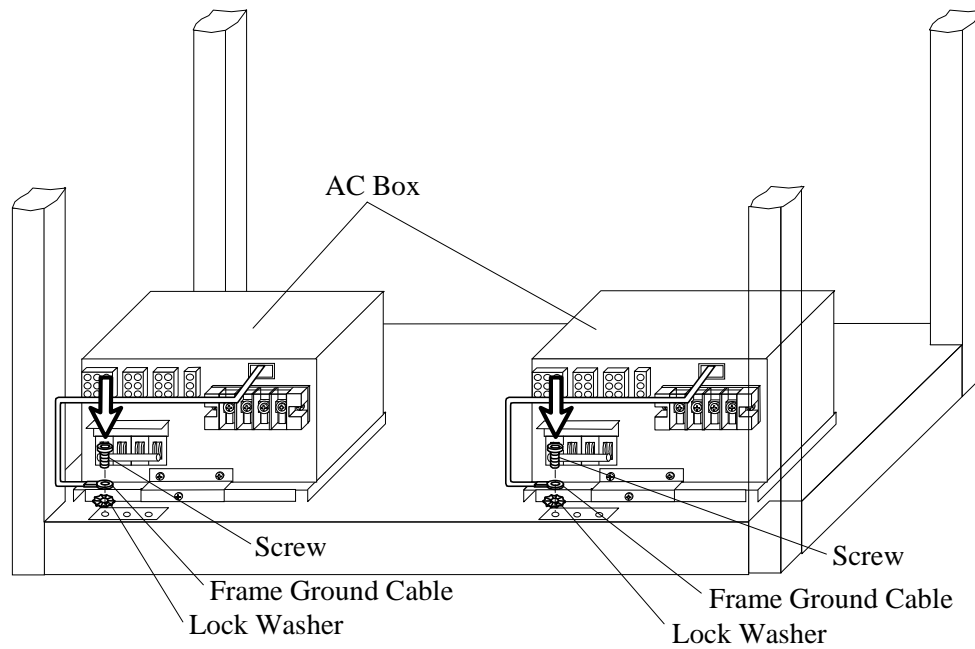


Fig. 3.4.2-4 Attachment of Ground Cables

2. Connect the cables.

- a. Connect the cables (P101-1, P102-1, P103-1, P104-1, P101-2, P102-2, P103-2 and P104-2) to the AC Boxes.

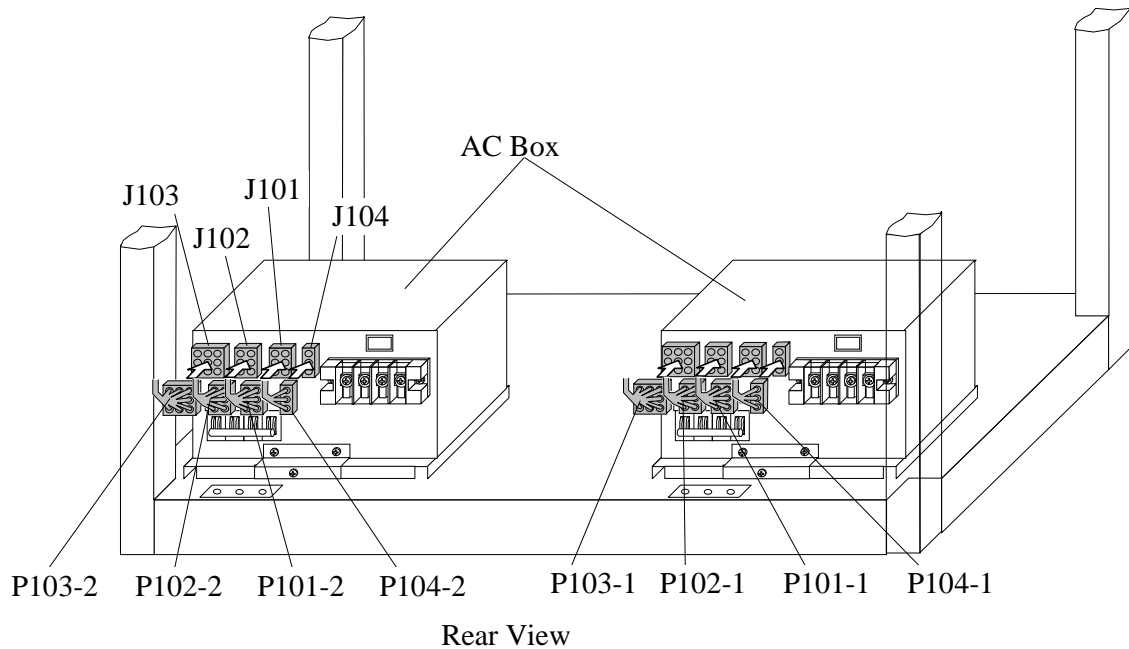


Fig. 3.4.2-5 Connection of Cables

3. Attach the Power Cable Unit.
 - a. Attach the power cable unit to the bracket and fasten the six screws.

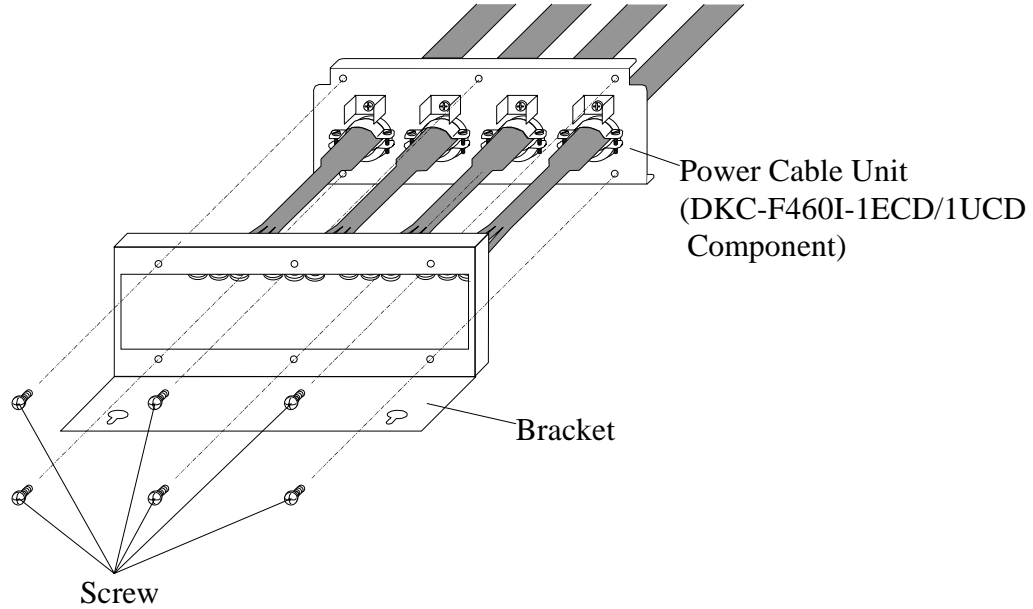


Fig. 3.4.2-6 Attachment of Power Cable Unit

- b. Attach the bracket with the two screws.
 - c. Attach the cover with the two screws.

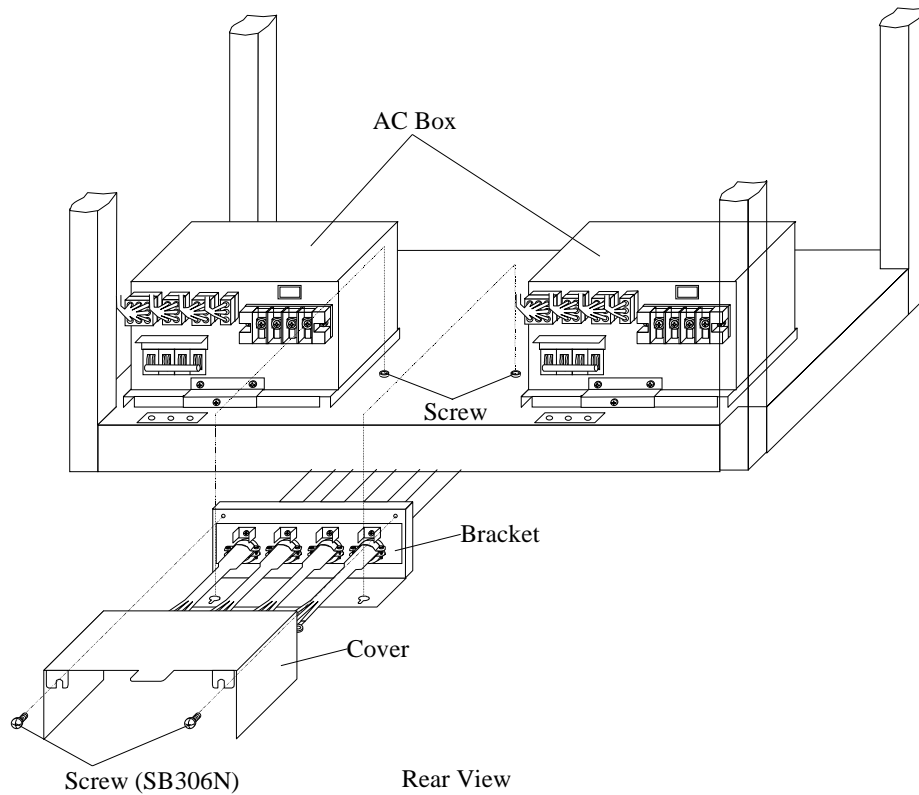


Fig. 3.4.2-7 Attachment of Bracket

4. Attach the Nameplate and Labels.
 - a. Attach the nameplate to the Front Logic Box cover.

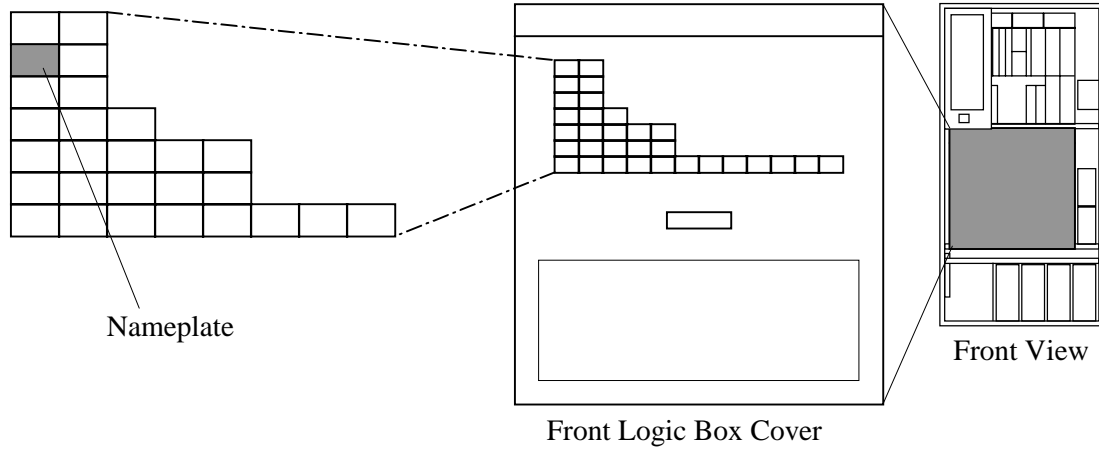


Fig. 3.4.2-8 Location of Nameplate

- b. Attach the label (V/Hz/PH.). Label (V/Hz/PH.) should be selected among the sheet of Label (V/Hz/PH.) corresponding to the operating voltage and frequency.
 - c. Attach the label (V.Hz.PH.A.W) to the frame.

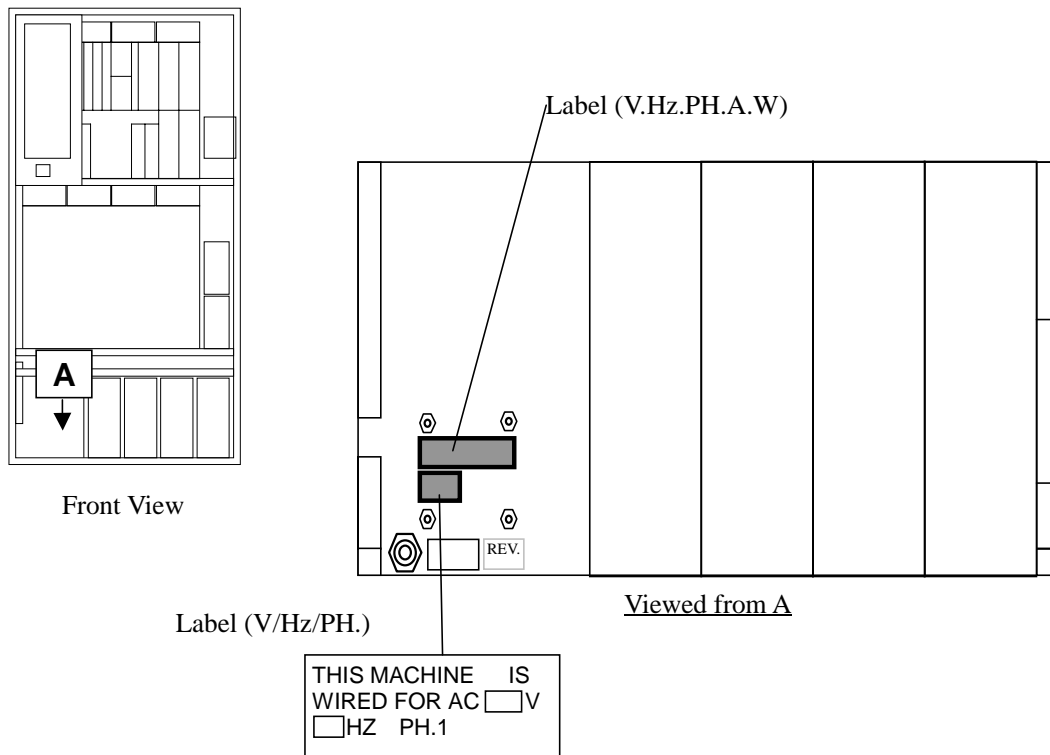


Fig. 3.4.2-9 Attachment of Labels

3.5 Installation of Power Cable Kit (DKC-F465I-1EC/1UC/3EC/3UC, DKC-F460I-1ECD/1UCD)

CAUTION

Perform The Power Cable Kit with care.
This Power Cable Kit is concerned with Primary Circuit.
Perform this procedure before connecting the Power Cable.
(Turn off the circuit breakers on the power distribution panel)
Turn off the main circuit breaker CB101 located in the AC Box.

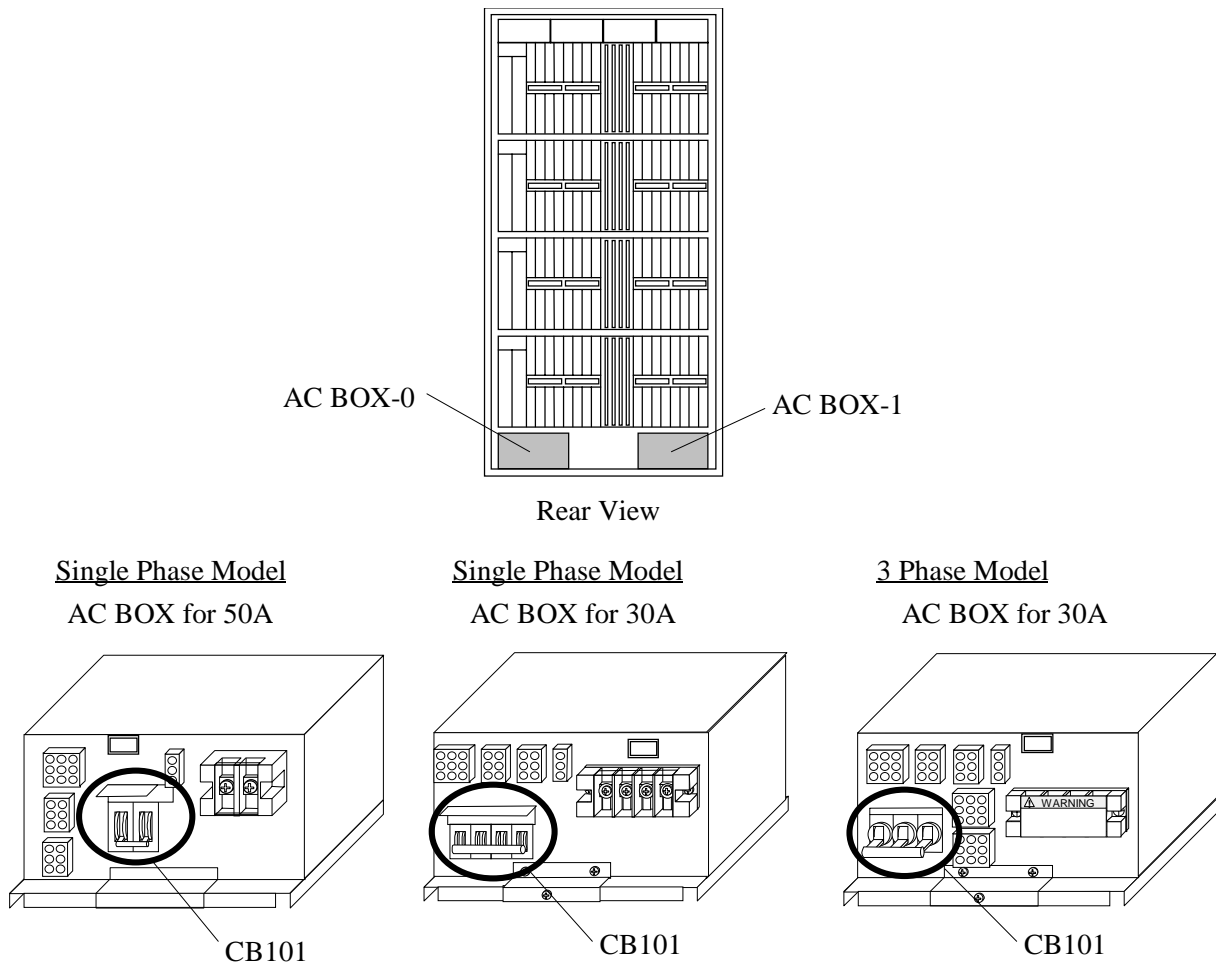


Fig. 3.5-1 Location of the Circuit Breakers

Table 3.5-1 Circuit Breakers

No.	Location No.	Breaker No.	Remarks
1	AC BOX-0	CB101	
2	AC BOX-1	CB101	

3.5.1 Installation of Power Cable Kit for Single Phase/50A or 3 Phase/30A

Table 3.5.1-1 Parts List

No.	Model Number	Part Name	Part No.	Quantity	Remarks
1	DKC-F465I-1UC	Power Cable	3263436-A	1	
		Cover	5513750-1	1	
		Nameplate (HDS)	2105894-3	1	RSD
		Nameplate (HP)	2105894-103	1	RSD
2	DKC-F465I-1EC	Power Cable	3263438-A	1	
		Cover	5513750-1	1	
		Nameplate (HDS)	2105894-5	1	RSD
		Nameplate (HP)	2105894-105	1	RSD
3	DKC-F465I-3UC	Power Cable	3263437-A	1	
		Cover	5513750-1	1	
		Nameplate (HDS)	2105894-4	1	RSD
		Nameplate (HP)	2105894-104	1	RSD
4	DKC-F465I-3EC	Power Cable	3263439-A	1	
		Cover	5513750-1	1	
		Nameplate (HDS)	2105894-6	1	RSD
		Nameplate (HP)	2105894-106	1	RSD

1. Install the Power Cable.
 - a. Loosen the two screws①. Attach the Power Cable and secure the two screws.
 - b. Attach the cover with the two screws②.

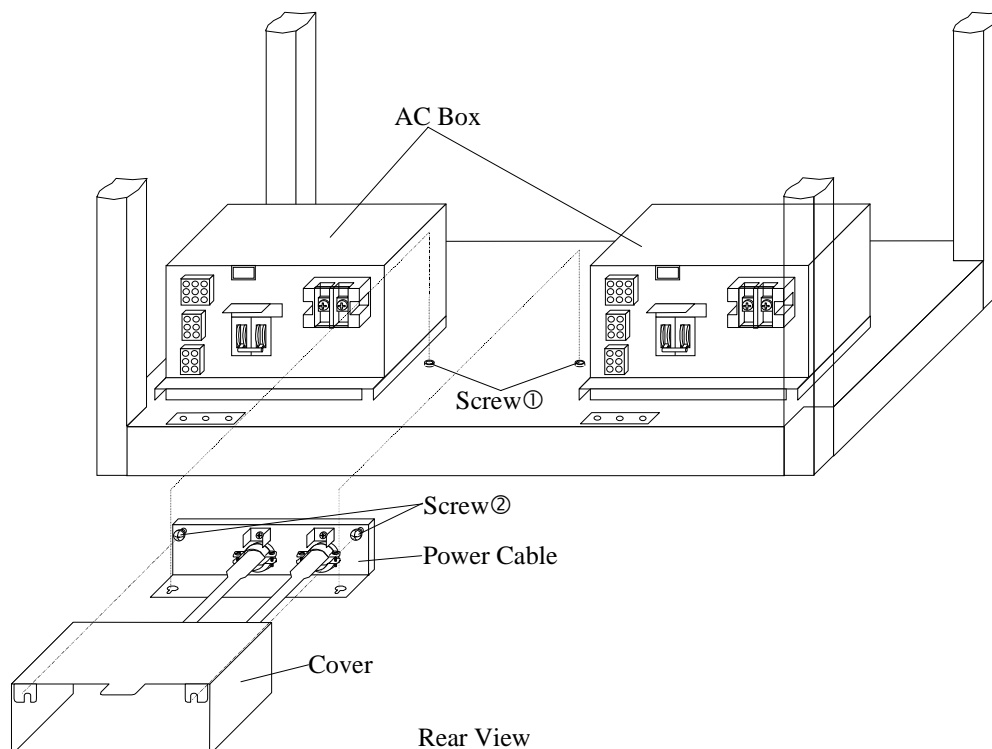


Fig. 3.5.1-1 Attachment of Power Cable

- c. Attach frame ground cable with the screw and lock washer.

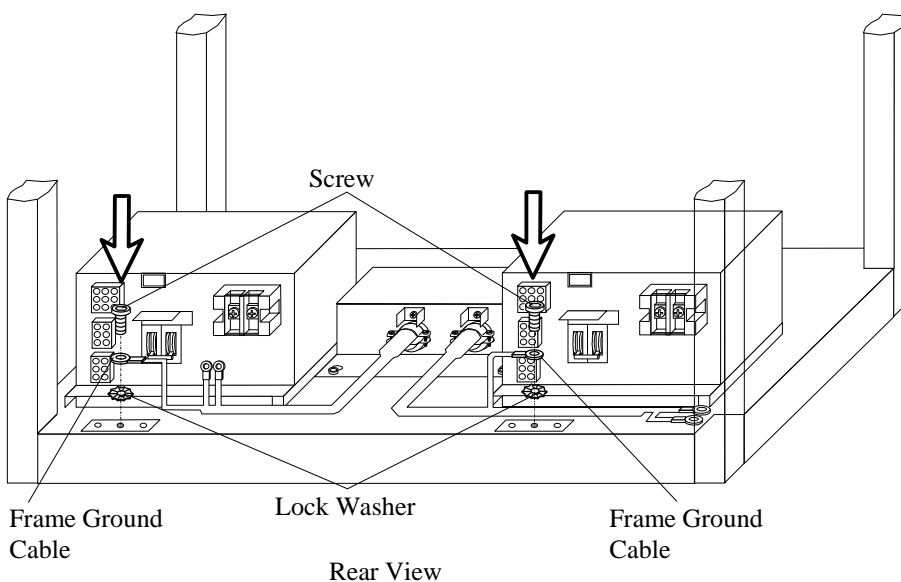


Fig. 3.5.1-2 Attachment of Frame Ground Cable

- d. Remove the terminal block covers.
- e. Connect the AC power cables to the terminal block and attach terminal block cover. Refer to Fig. 3.5.1-3, Fig. 3.5.1-4 and Table 3.5.1-2.

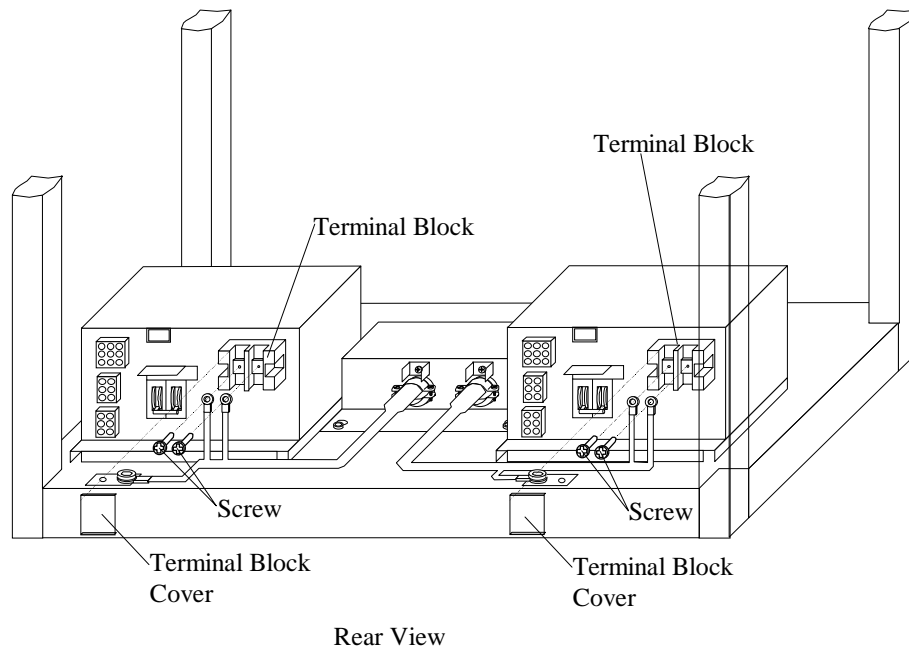


Fig. 3.5.1-3 Connection of AC Power Cable

Table 3.5.1-2 AC Power Cable Conductors Numbers

No.	Model Number	Input Voltage	AC Power Cable Conductors	Remarks
1	DKC-F465I-1UC	200-230V	3 conductors (U/L1, V/L2, FG)	
2	DKC-F465I-1EC	200-240V	3 conductors (U/L1, V/L2, FG)	
3	DKC-F465I-3UC	200-230V	4 conductors (L1, L2, L3, FG)	
4	DKC-F465I-3EC	380-415V	5 conductors (L1, L2, L3, N, FG)	


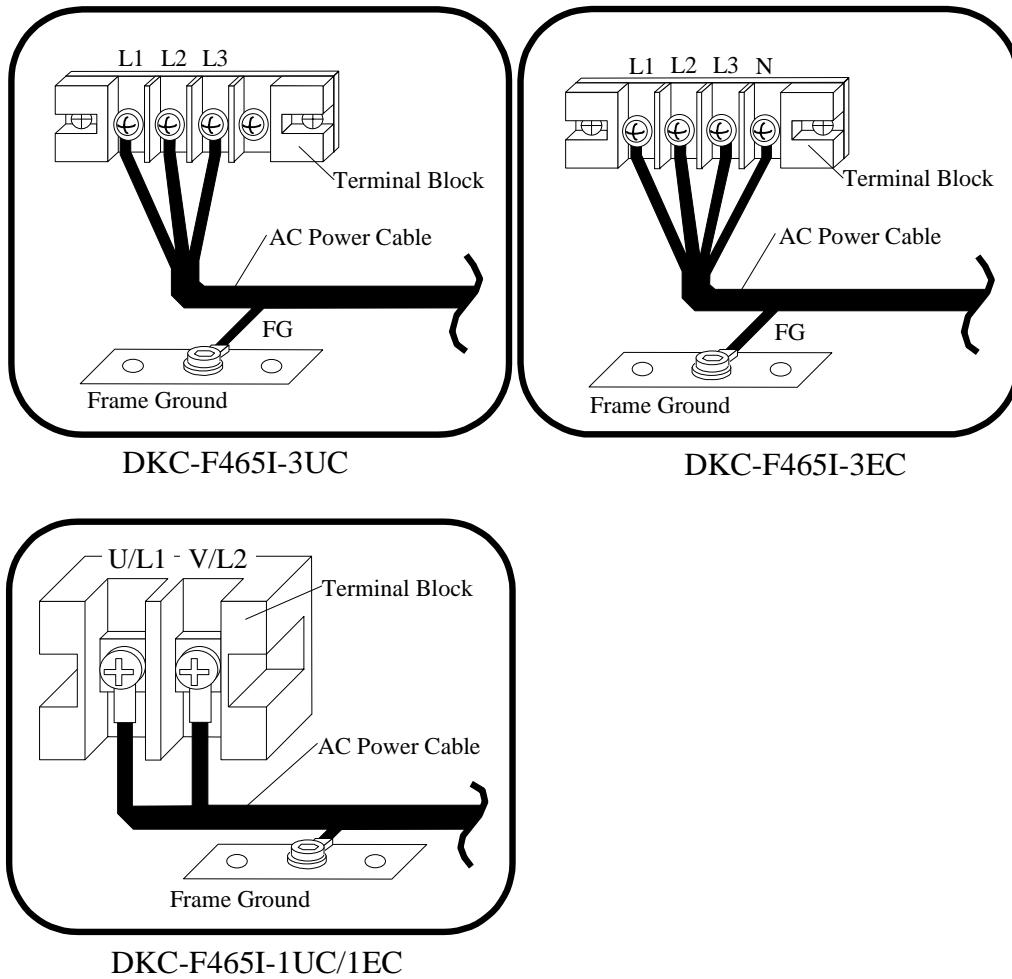


Fig. 3.5.1-4 Connection of AC Power Cables to the Terminal Block


2. Reset the Jumper Cable Setting.
 - a. When the 3 Phase Model (DKC-F465I-3UC/3EC) is installed, connect the jumper cable (P105) as indicated in the table below.
When the Single Phase Model (DKC-F465I-1UC/1EC) is installed, go to step 3.

Table 3.5.1-3 Jumper Cable (P105) Locations

No.	Model Number	Input Voltage	Jumper Cable (P105) Location	Remarks
1	DKC-F465I-3UC	200-230V	J105-1	J105-2: Dummy Connector
2	DKC-F465I-3EC	380-415V	J105-2	J105-1: Dummy Connector

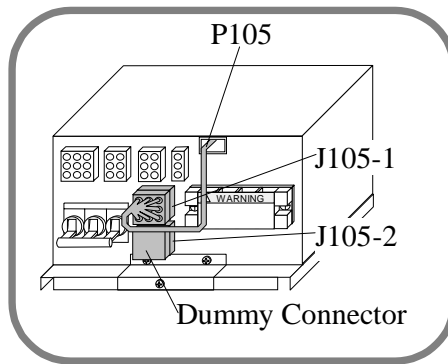

Input AC Voltage: 200-240V

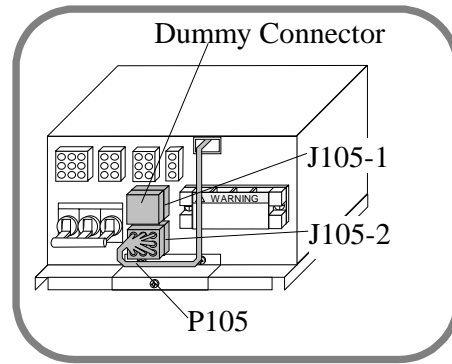

Input AC Voltage: 380-415V

Fig. 3.5.1-5 Jumper Cable P105 Setting

3. Attach the Nameplate.
 - a. Attach the nameplate to the Front Logic Box cover.

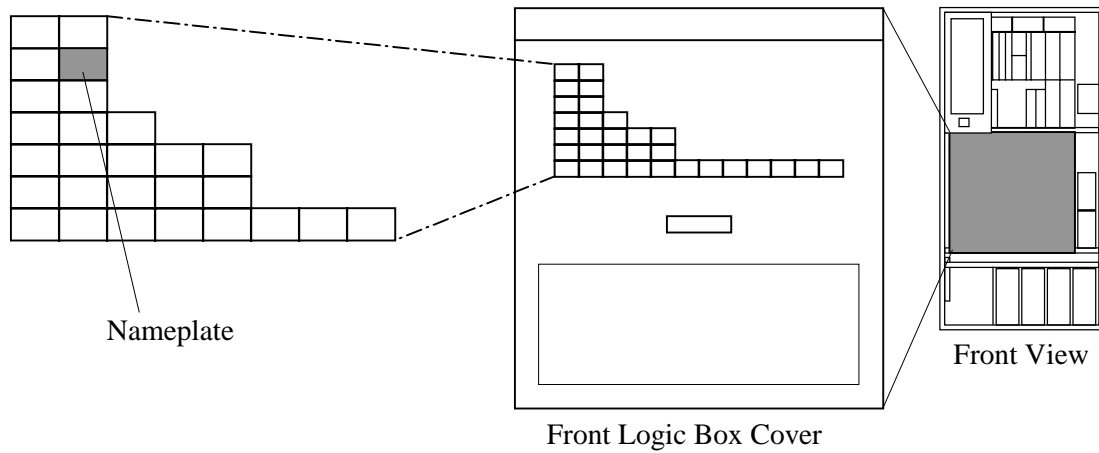


Fig. 3.5.1-6 Location of Nameplate

3.5.2 Installation of Power Cable Kit for Single Phase/30A

Table 3.5.2-1 Parts List

No.	Model Number	Part Name	Part No.	Quantity	Remarks
1	DKC-F460I-1UCD	Power Cable Unit	3265665-A	1	
		Screw	SB408N	2	
		Screw	SB510N	4	
		Toothed Washer	WT005N	4	
		Nameplate (HDS)	2105902-131	1	RSD
			2105903-131/231		HICAM/HICEF
		Nameplate (HP)	—	1	RSD
			—		HICAM/HICEF
2	DKC-F460I-1ECD	Power Cable Unit	3265664-A	1	
		Screw	SB408N	2	
		Screw	SB510N	4	
		Toothed Washer	WT005N	4	
		Nameplate (HDS)	2105902-130	1	RSD
			2105903-130/230		HICAM/HICEF
		Nameplate (HP)	—	1	RSD
			—		HICAM/HICEF

1. Attach the Power Cable Unit.
 - a. Attach the power cable unit to the bracket and fasten the six screws.

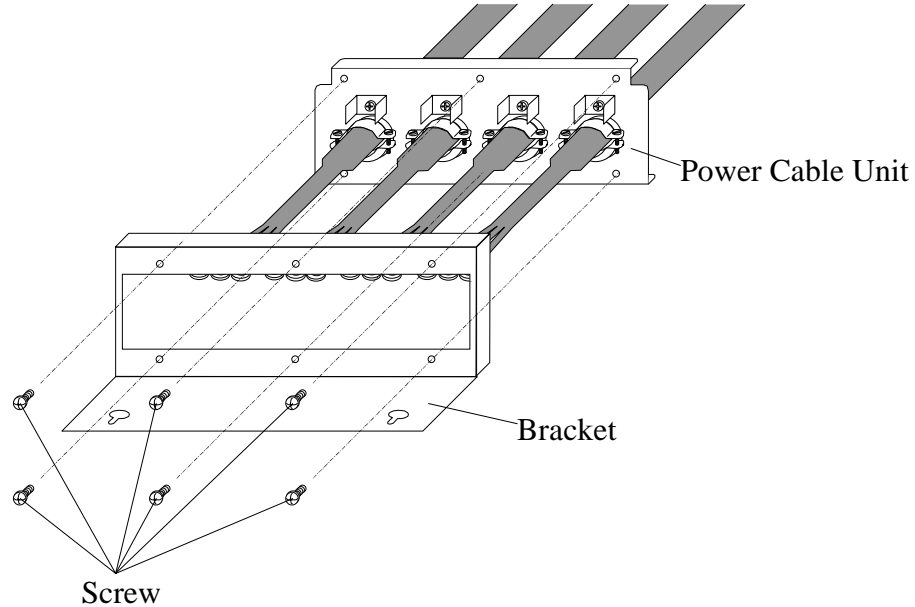


Fig. 3.5.2-1 Attachment of Power Cable Unit

- b. Attach the bracket with the two screws.
 - c. Attach the cover with the two screws.

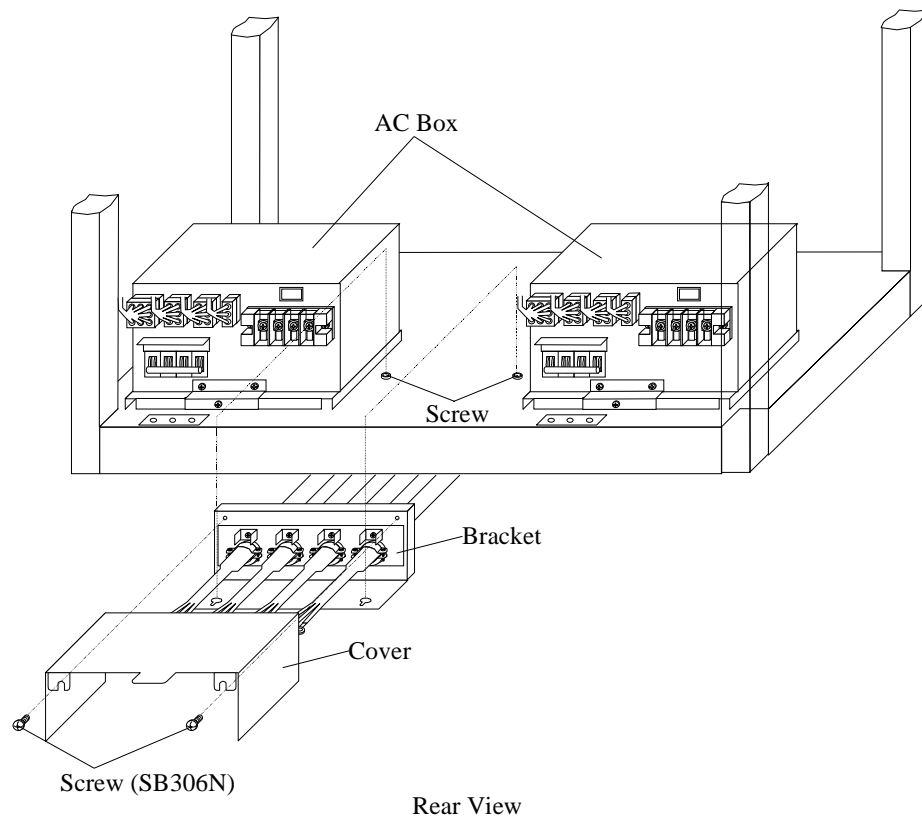


Fig. 3.5.2-2 Attachment of Power Cable

- d. Attach frame ground cable with the screw and lock washer.

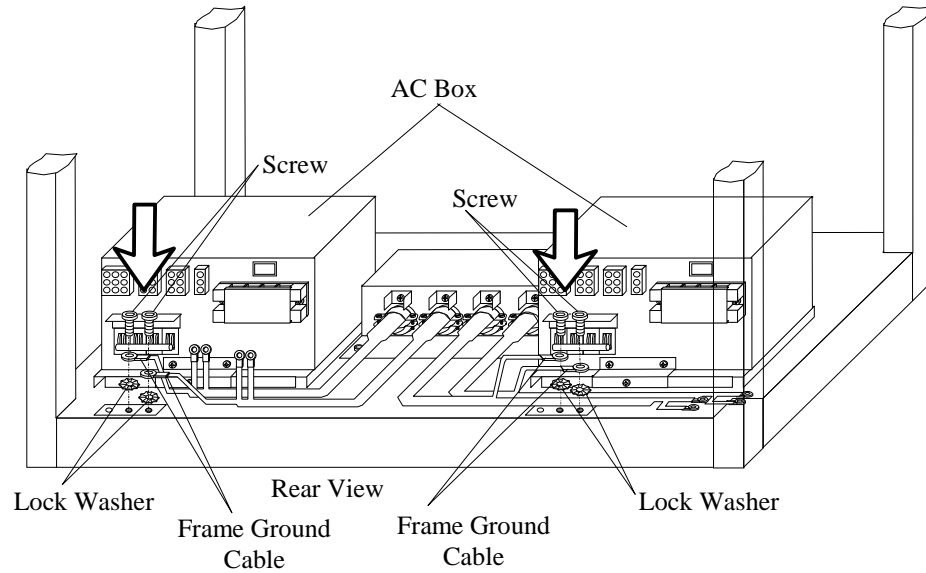


Fig. 3.5.2-3 Attachment of Frame Ground Cable

- e. Remove the terminal block covers.
- f. Connect the AC power cables to the terminal block and attach terminal block cover. Refer to Fig. 3.5.2-4, Fig. 3.5.2-5 and Table 3.5.2-2.

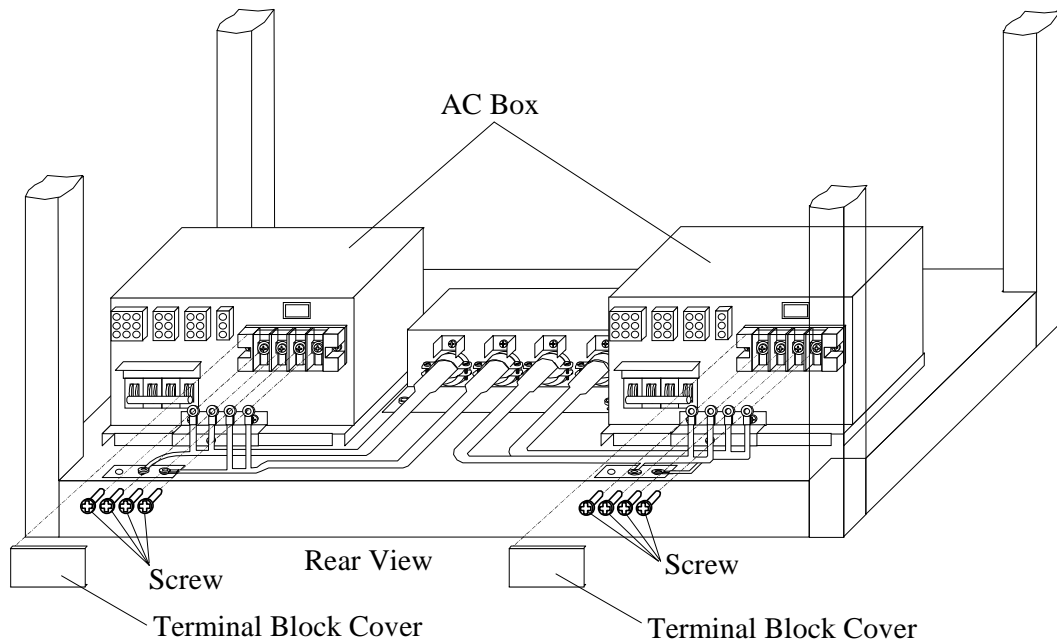


Fig. 3.5.2-4 Connection of AC Power Cable

Table 3.5.2-2 AC Power Cable Conductors Numbers

No.	Model Number	Input Voltage	AC Power Cable Conductors	Remarks
1	DKC-F460I-1UCD	200-230V	6 conductors (U/L1, V/L2, FG) ×2	
2	DKC-F460I-1ECD	200-240V	6 conductors (U/L1, V/L2, FG) ×2	

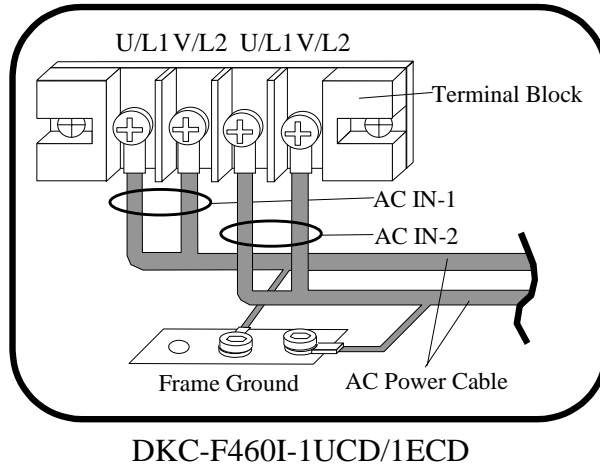


Fig. 3.5.2-5 Connection of AC Power Cables to the Terminal Block

2. Attach the Nameplate.
 - a. Attach the nameplate to the Front Logic Box cover.

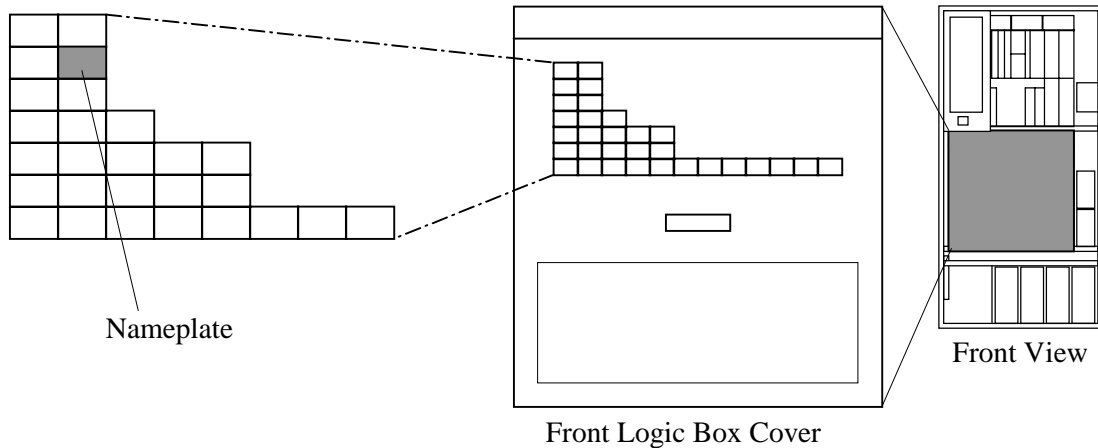


Fig. 3.5.2-6 Location of Nameplate

3.6 Installation of Channel Adapter

3.6.1 Installation of Serial 8-port Adapter (DKC-F460I-8S)


Table 3.6.1-1 Parts List

No.	Model Number	Part Name	Part No.	Quantity	Remarks
1	DKC-F460I-8S	Serial 4-port Adapter PCB	5513983-A	2	Color of PCB lever: Blue
		Holder	2084816-1	8	
		Cable Clamp	2105506-1	2	
		Nameplate (HDS)	2105902-106	1	RSD
			2105903-106		HICAM
			2105903-206		HICEF
		Nameplate (HP)	2105902-206	1	RSD
			2105903-306		HICAM
			2105903-406		HICEF


1. Setting up the New Device Structure Information

1. <Mode Change>
Change the mode to Modify Mode.
Select (CL) [Install].


2. <Start the 'Menu Dialog' screen>
Select (CL) [Change Configuration].

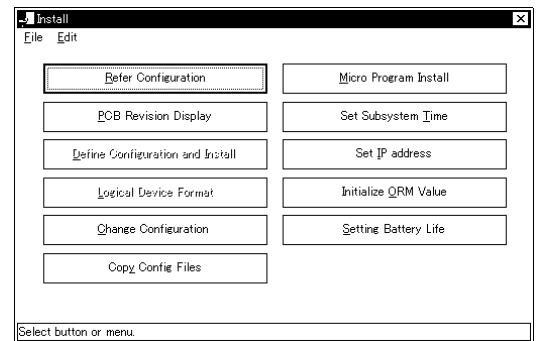

3. <Start Device Structure Setup screen>
Select (CL) [Installation] in the 'Menu Dialog' dialog box and select (CL) [OK].

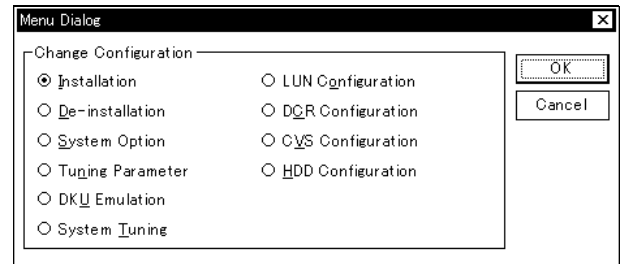

4. <Select a part to be changed>
Select (CL) [Number of Channel], and select (CL) [OK].

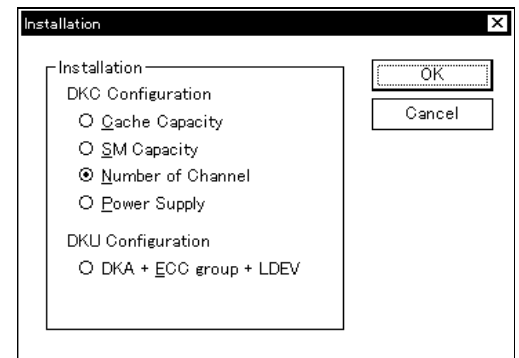

2. SVP pre procedure

1. <Update Configuration Information>

Enter the item to CHA in the 'DKC Configuration' window.

Make sure that the entered item is correct and select (CL) [>>Next].

2-1. <Defining channel type>

Input each item in the "Host Interface Configuration" window.

Repeat the operation above as many times as the number of channels installed.

Select (CL) [Serial 4ch]. When setting the HRC/HORC, select (CL) [RCP Set...] and go to step 2-2.

Verify that the inputted item is correct and select (CL) [>>Next].

Go to step 3.

2-2. <Defining RCP port>

When setting the HRC/HORC, select (CL) the item defined as an RCP port and select (CL) [OK].

The routine returns to step 2-1.

When [Cancel] is selected (CL), the routine returns to step 2-1.

3. <Defining DKC emulation type>

Define the DKC emulation type in the "DKC Emulation Configuration" window.

After the setting is completed, select (CL) [>>Next].

4. <Setting CU number>
CU number is displayed.
After the setting is completed, select (CL) [\gg Next].


5. <SVP message>
Select (CL) [OK] in response to the confirmation message “Data will be lost from the logical device if you connect the interface cable to an incorrect port. Be sure to connect the cable to the correct port.”.

6. <Start installation>
Select (CL) [Yes] in response to “Are you sure you want to renew subsystem?”.
- When [No] is selected (CL), returns to [INST03-8S-20](#) step 3.

7. <Download microprogram>
Microprograms are automatically downloaded for shared memory.

8. <Install CHA >
“Upgrading of the CHA...”

9. <Check that hardware components are installed>
“Please install the units in the system before starting this process. If installation has been completed, push OK.”
is displayed.

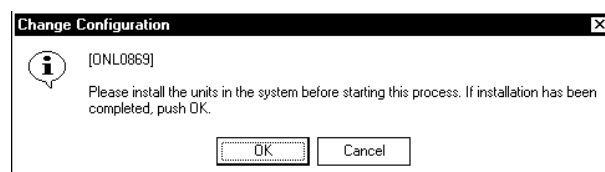

3. Installation Procedure of Serial 8-port Adapter

Note: Be sure to wear your wrist strap and attach to ground prior to performing the following work. This will ensure that the IC and LSI on the PCB are protected from static electricity.

3-1 Insertion of the PCBs

Note: Make sure that a color of the levers of the PCB to be installed is blue.
Never insert a PCB whose lever is not blue.

- a. Remove the dummy plate installed in the installation location referring to the Fig. 3.6.1-1.
(Note) Dummy plates should be stored for future use in De-installation.
- b. Insert the PCBs to the correct locations in the Logic Box. Refer to Table 3.6.1-2.
- c. Fasten the two screws referring to Fig. 3.6.1-2.

Table 3.6.1-2 Inserting Location (Front of the unit)

Cluster	CL1							CL2						
Slot No.	A	B	C	D	E	F		G	H	J	K	L	M	
Function	CSW	DKA	CHA	CHA	CACHE	CHA	DKA	CHA	CACHE	CHA	CHA	DKA	DKA	CSW
Location No.	CSW	DKA	CHA	CHA	CACHE	CHA	DKA	CHA	CACHE	CHA	CHA	DKA	DKA	CSW
	-1A	-1B	-1C	-1D	-1E	-1F	-1F	-2G	-2H	-2J	-2K	-2K	-2L	-2M
Order of addition		Basic	Basic	Add.1		Add.2	Add.1	Basic		Add.1	Add.2	Add.1	Basic	

Up to 3 serial 8-port adapters can be installed in the subsystem.

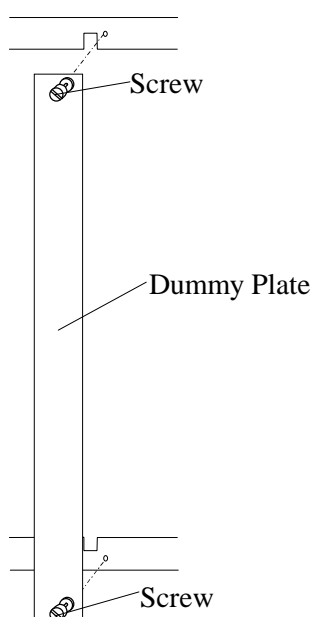


Fig. 3.6.1-1 Removal of Dummy Plate


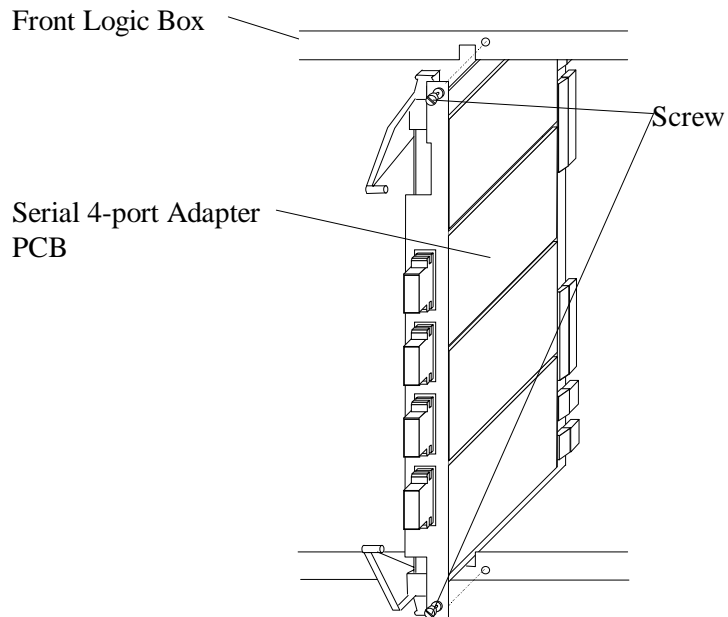


Fig. 3.6.1-2 Insertion of PCB

3-2 Remove the bracket and fibre cable routing.

- Loosen the four screws and remove the two brackets. Refer to Fig. 3.6.1-3.
- Pull the optical fiber cable into the DKC through the I/F connector panel.

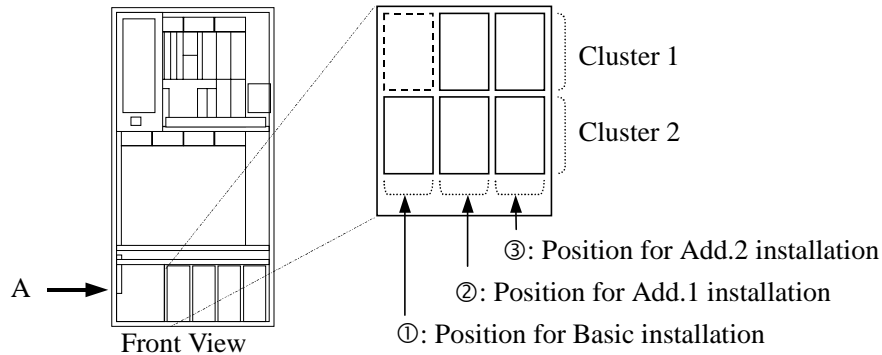

Refer to the following figure for how to attach the cable clamp and cable routing.

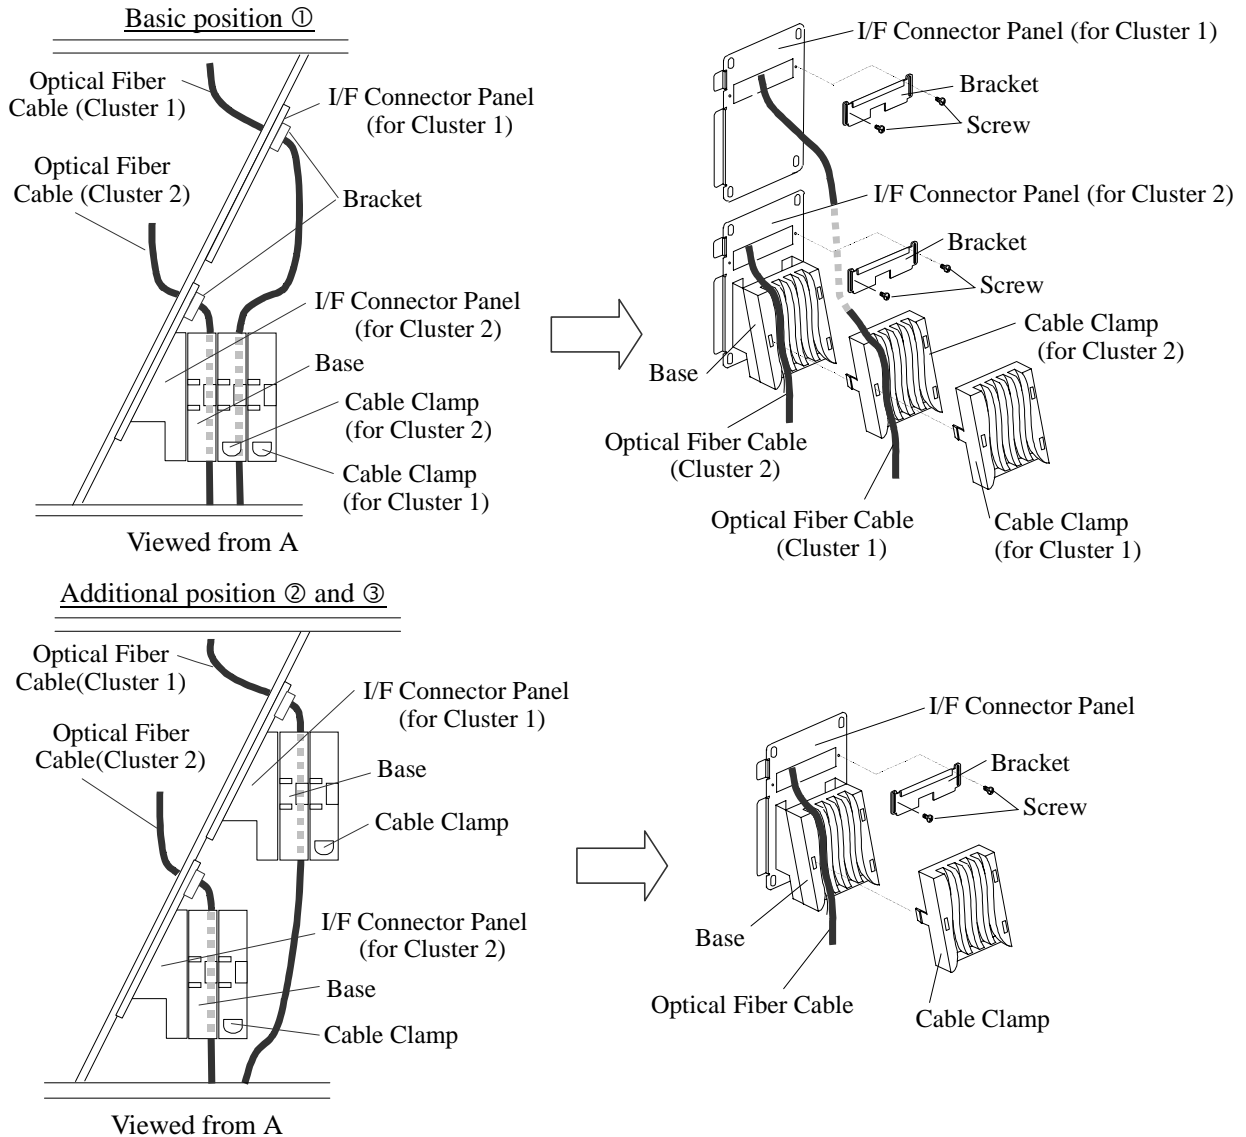


Fig. 3.6.1-3 Installation of Optical Fiber Cable

3-3 Cleaning the fiber cable connectors.

For the tools needed for the cleaning, refer to the tool list on page [PARTS06-10](#).

- Blow compressed gas against the connector using an air sprayer (for about five seconds).
- Wipe the connector lightly with a piece of cut gauze wet with ethyl alcohol.
- Blow compressed air again and check the result of the cleaning. (None of dust, sticking of foreign matter, and dirt must be observed.)

3-4 Connection of the optical fibre cables

- Connect the optical fiber cable to the PCB referring to Fig. 3.6.1-4.
- Fix the cable with Holder.
- Fix the cable to base and attach the cable clamp and bracket referring to Fig. 3.6.1-3.

CHA PCB

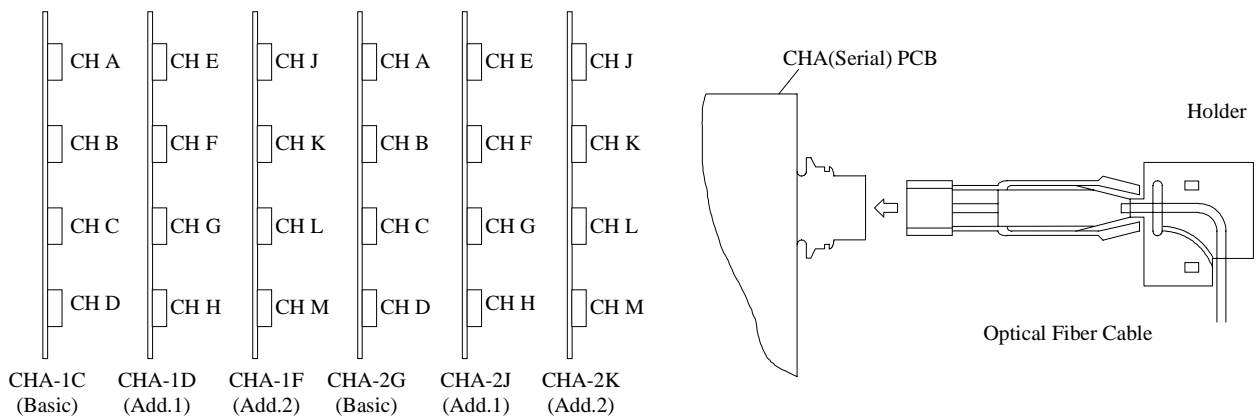


Fig. 3.6.1-4 Connection of Optical Fiber Cable

3-5 Attachment of the nameplate

- Attach the nameplate referring to Fig. 3.6.1-5.


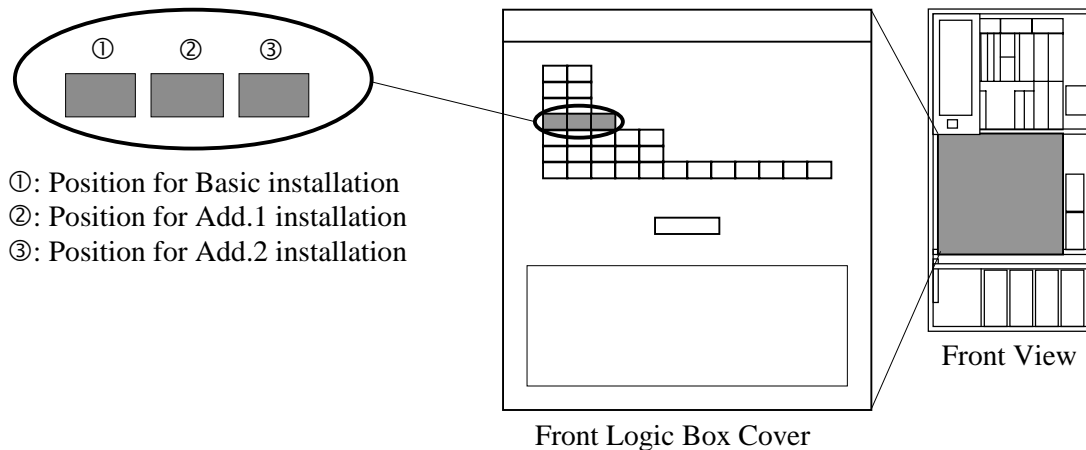


Fig. 3.6.1-5 Attachment of Nameplate

4. SVP post procedure

1. <Check that hardware components are installed>

Select (CL) [OK] after making sure that all hardware components are installed correctly in response to “Please install the units in the system before starting this process. If installation has been completed, push OK.”.

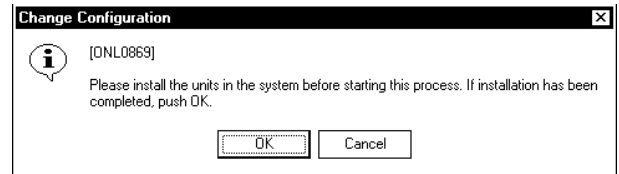

When [Cancel] is selected (CL), returns to [INST03-8S-20](#) step 3.

2.

“Waiting for Power Event... Usually, several minutes (maximum 15 minutes)” is displayed.

3. <DKU PATH INLINE>

When DKA is installed, “DKU PATH INLINE is now running...” is displayed.

4. <End of system update processing>

“Renewal process has completed. Please check the subsystem status.” is displayed when recovery processing on all installed components is completed. Select (CL) [OK] in response to this message.




5.

“Reading subsystem configuration data...” is displayed.

“Please insert the Config FD in the FDD.” is displayed.


Insert the configuration FD into FDD, and select (CL) [OK].

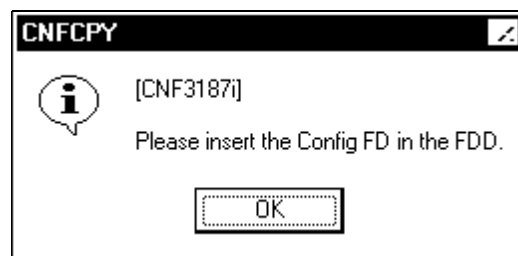

6.


When this procedure is completed, the message “Please remove the Config FD.” is displayed.

Remove the FD, select (CL) [OK].

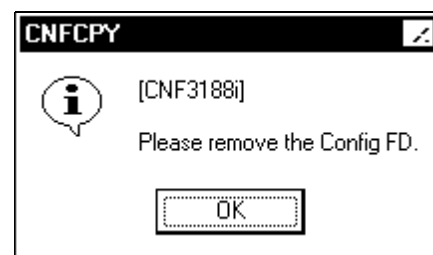

7.

After the procedure is completed, return to “Install”.
Select (CL) [File]-[Exit].

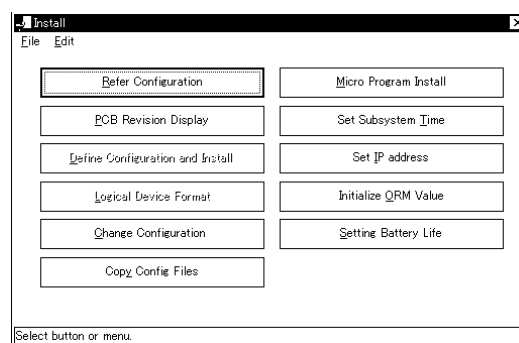

8.

<Mode Change>

Change the mode to View Mode.

3.6.2 Installation of Fibre 4/8-port Adapter (DKC-F460I-8GSE/4HSE/8HSE/8HLE/8GSF/4HSF/8HSF/8HLF)

Table 3.6.2-1 Parts List

No.	Model Number	Part Name	Part No.	Quantity	Remarks
1	DKC-F460I-8GSE	Fibre 4-port Adapter PCB	5513980-B	2	Color of PCB lever : Blue
		Cable Clamp	2105506-1	2	
		Nameplate (HDS)	2105902-107	1	RSD
			2105903-107		HICAM
			2105903-207		HICEF
		Nameplate (HP)	2105902-207	1	RSD
			2105903-307		HICAM
			2105903-407		HICEF
2	DKC-F460I-4HSE (Short Wavelength)	Fibre 2-port Adapter PCB	5513981-C	2	Color of PCB lever : Blue
		Cable Clamp	2105506-1	2	
		Nameplate (HDS)	2105902-108	1	RSD
			2105903-108		HICAM
			2105903-208		HICEF
		Nameplate (HP)	2105902-208	1	RSD
			2105903-308		HICAM
			2105903-408		HICEF
3	DKC-F460I-8HSE (Short Wavelength)	Fibre 4-port Adapter PCB	5513981-A	2	Color of PCB lever : Blue
		Cable Clamp	2105506-1	2	
		Nameplate (HDS)	2105902-109	1	RSD
			2105903-109		HICAM
			2105903-209		HICEF
		Nameplate (HP)	2105902-209	1	RSD
			2105903-309		HICAM
			2105903-409		HICEF
4	DKC-F460I-8HLE (Long Wavelength)	Fibre 4-port Adapter PCB	5513981-B	2	Color of PCB lever : Blue
		Cable Clamp	2105506-1	2	
		Nameplate (HDS)	2105902-110	1	RSD
			2105903-110		HICAM
			2105903-210		HICEF

(To be continued)


(Continued from the preceding page)

No.	Model Number	Part Name	Part No.	Quantity	Remarks
5	DKC-F460I-8GSF (Check data assist support)	Fibre 4-port Adapter PCB	5518079-C	2	Color of PCB lever : Blue
		Cable Clamp	2105506-1	2	
		Nameplate (HDS)	2105902-136	1	RSD
			2105903-136		HICAM
			2105903-236		HICEF
		Nameplate (HP)	2105902-236	1	RSD
			2105903-336		HICAM
			2105903-436		HICEF
6	DKC-F460I-4HSF (Short Wavelength, Check data assist support)	Fibre 2-port Adapter PCB	5518079-D	2	Color of PCB lever : Blue
		Cable Clamp	2105506-1	2	
		Nameplate (HDS)	2105902-137	1	RSD
			2105903-137		HICAM
			2105903-237		HICEF
		Nameplate (HP)	2105902-237	1	RSD
			2105903-337		HICAM
			2105903-437		HICEF
7	DKC-F460I-8HSF (Short Wavelength, Check data assist support)	Fibre 4-port Adapter PCB	5518079-A	2	Color of PCB lever : Blue
		Cable Clamp	2105506-1	2	
		Nameplate (HDS)	2105902-138	1	RSD
			2105903-138		HICAM
			2105903-238		HICEF
		Nameplate (HP)	2105902-238	1	RSD
			2105903-338		HICAM
			2105903-438		HICEF
8	DKC-F460I-8HLF (Long Wavelength, Check data assist support)	Fibre 4-port Adapter PCB	5518079-B	2	Color of PCB lever : Blue
		Cable Clamp	2105506-1	2	
		Nameplate (HDS)	2105902-139	1	RSD
			2105903-139		HICAM
			2105903-239		HICEF


1. Setting up the New Device Structure Information

1. <Mode Change>
Change the mode to Modify Mode.
Select (CL) [Install].


2. <Start the 'Menu Dialog' screen>
Select (CL) [Change Configuration].

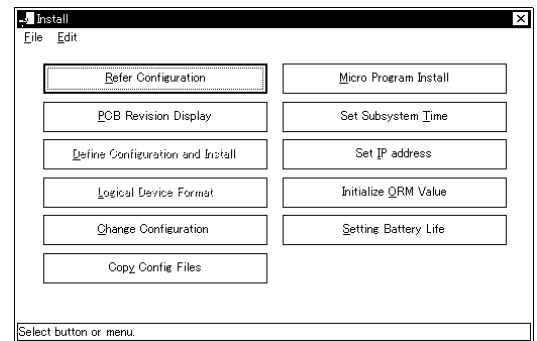

3. <Start Device Structure Setup screen>
Select (CL) [Installation] in the 'Menu Dialog' dialog box and select (CL) [OK].

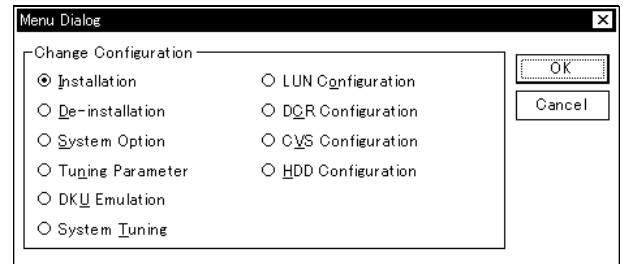

4. <Select a part to be changed>
Select (CL) [Number of Channel], and select (CL) [OK].

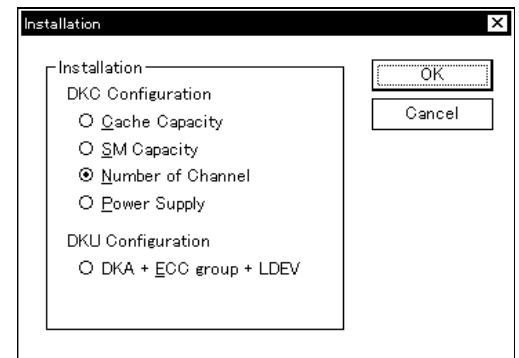

2. SVP pre procedure

1. <Update Configuration Information>

Enter the item to CHA in the 'DKC Configuration' window.

Make sure that the entered item is correct and select (CL) [>>Next].

The DKC Configuration window contains the following sections:

- DKC:** Serial No. (09595), Number of CJA (06), IP Address (126.255.255.15), Subnet Mask (255.0.0.0).
- Cache:** Basic CMG/512MB Super/512MB/2, On-Demand/0MB/2, Option: Not installed, Total cache size: 512MB/2, DCR available: 256MB/2.
- CHA:** Basic (checked), Option (checked), Option 2 (checked), Option 3 (unchecked).
- DKA:** Number of DKA (2).

Buttons: System Option..., Banner Supply..., IP Address Configuration..., Cache Configuration..., Cancel, >> Next.

2-1. <Defining channel type>

Input each item in the "Host Interface Configuration" window.

Repeat the operation above as many times as the number of channels installed.

Select (CL) [Fibre *]. When setting the HRC/HORC, select (CL) [Mode Set...] and go to step 2-2.

Verify that the inputted item is correct and select (CL) [>>Next].

Go to step 3.

The Host Interface Configuration window shows:

- Interface Type: 4HSE/F Fibre 2ch-2mp (selected).
- Buttons: Mode Set..., Before <<, >> Next, Cancel.

2-2. <Defining Fibre Mode>

Select (CL) the item defined as an Fibre Mode (set the 'Target/Initiator' only when setting the 'Fibre PCB Mode' or HRC/HORC) and select (CL) [OK].

The routine returns to step 2-1.

When [Cancel] is selected (CL), the routine returns to step 2-1.

The CHA-1Q/CHA-2W Fibre Mode Configuration window shows:

- CHA-1Q:** Fibre PCB Mode: Standard, Target/Initiator: Port E (Target), Port F (Target), Port G (Target), Port H (Target).
- CHA-2W:** Fibre PCB Mode: Standard, Target/Initiator: Port E (Target), Port F (Target), Port G (Target), Port H (Target).
- Buttons: Cancel, OK.

3. <Setting Channel>

Set the 'Channel Speed'.


After setting up, select (CL) [>>Next].

The Channel Configuration window shows:

- CHA-1Q:** Port E, F, G, H: Channel Speed: Auto (selected).
- Channel Speed:** Checkboxes for each port are checked.
- Buttons: Before <<, >> Next.

4. <Start installation>
Select (CL) [Yes] in response to “Are you sure you want to renew subsystem?”.


When [No] is selected (CL), returns to
[INST03-FIB-20](#) step 3.

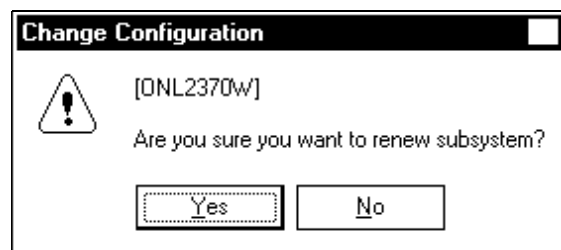

5. <Download microprogram>
Microprograms are automatically downloaded for shared memory.

6. <Install CHA >
“Upgrading of the CHA...”

7. <Check that hardware components are installed>
“Please install the units in the system before starting this process. If installation has been completed, push OK.” is displayed.

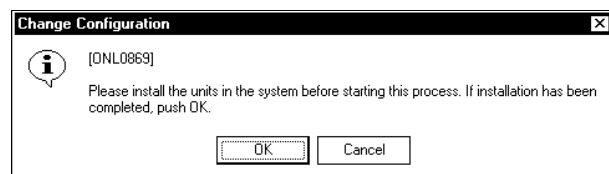

3. Installation Procedure of Fibre 4/8-port Adapter

Note: Be sure to wear your wrist strap and attach to ground prior to performing the following work. This will ensure that the IC and LSI on the PCB are protected from static electricity.

3-1 Insertion of the PCBs

Note: Make sure that a color of the levers of the PCB to be installed is blue. Never insert a PCB whose lever is not blue.

- a. Remove the dummy plate installed in the installation location referring to the Fig. 3.6.2-1.
(Note) Dummy plates should be stored for future use in De-installation.
- b. Insert the PCBs to the correct locations in the Logic Box. Refer to Table 3.6.2-2.
- c. Fasten the two screws referring to Fig. 3.6.2-2.

Table 3.6.2-1 Inserting Location (Front of the unit)

Cluster	CL1							CL2						
Slot No.	A	B	C	D	E	F		G	H	J	K	L	M	
Function	CSW	DKA	CHA	CHA	CACHE	CHA	DKA	CHA	CACHE	CHA	CHA	DKA	DKA	CSW
Location No.	CSW	DKA	CHA	CHA	CACHE	CHA	DKA	CHA	CACHE	CHA	CHA	DKA	DKA	CSW
	-1A	-1B	-1C	-1D	-1E	-1F	-1F	-2G	-2H	-2J	-2K	-2K	-2L	-2M
Order of addition		Basic	Basic	Add.1		Add.2	Add.1	Basic		Add.1	Add.2	Add.1	Basic	

Up to 3 Fibre 4/8-port adapters can be installed in the subsystem.

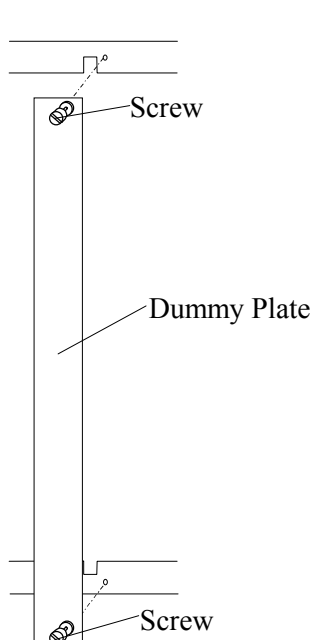


Fig. 3.6.2-1 Removal of Dummy Plate


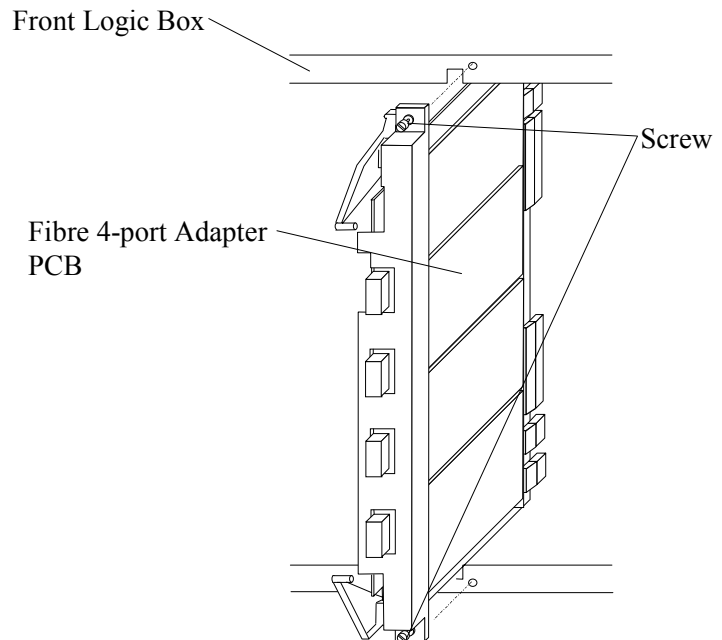


Fig. 3.6.2-2 Insertion of PCB

3-2 Remove the bracket and fibre cable routing.

- Loosen the four screws and remove the two brackets. Refer to Fig. 3.6.2-3.
- Pull the optical fiber cable into the DKC through the I/F connector panel.

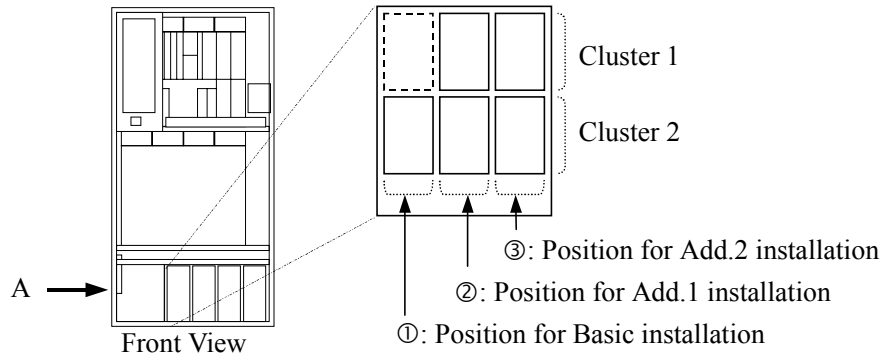

Refer to the following figure for how to attach the cable clamp and cable routing.

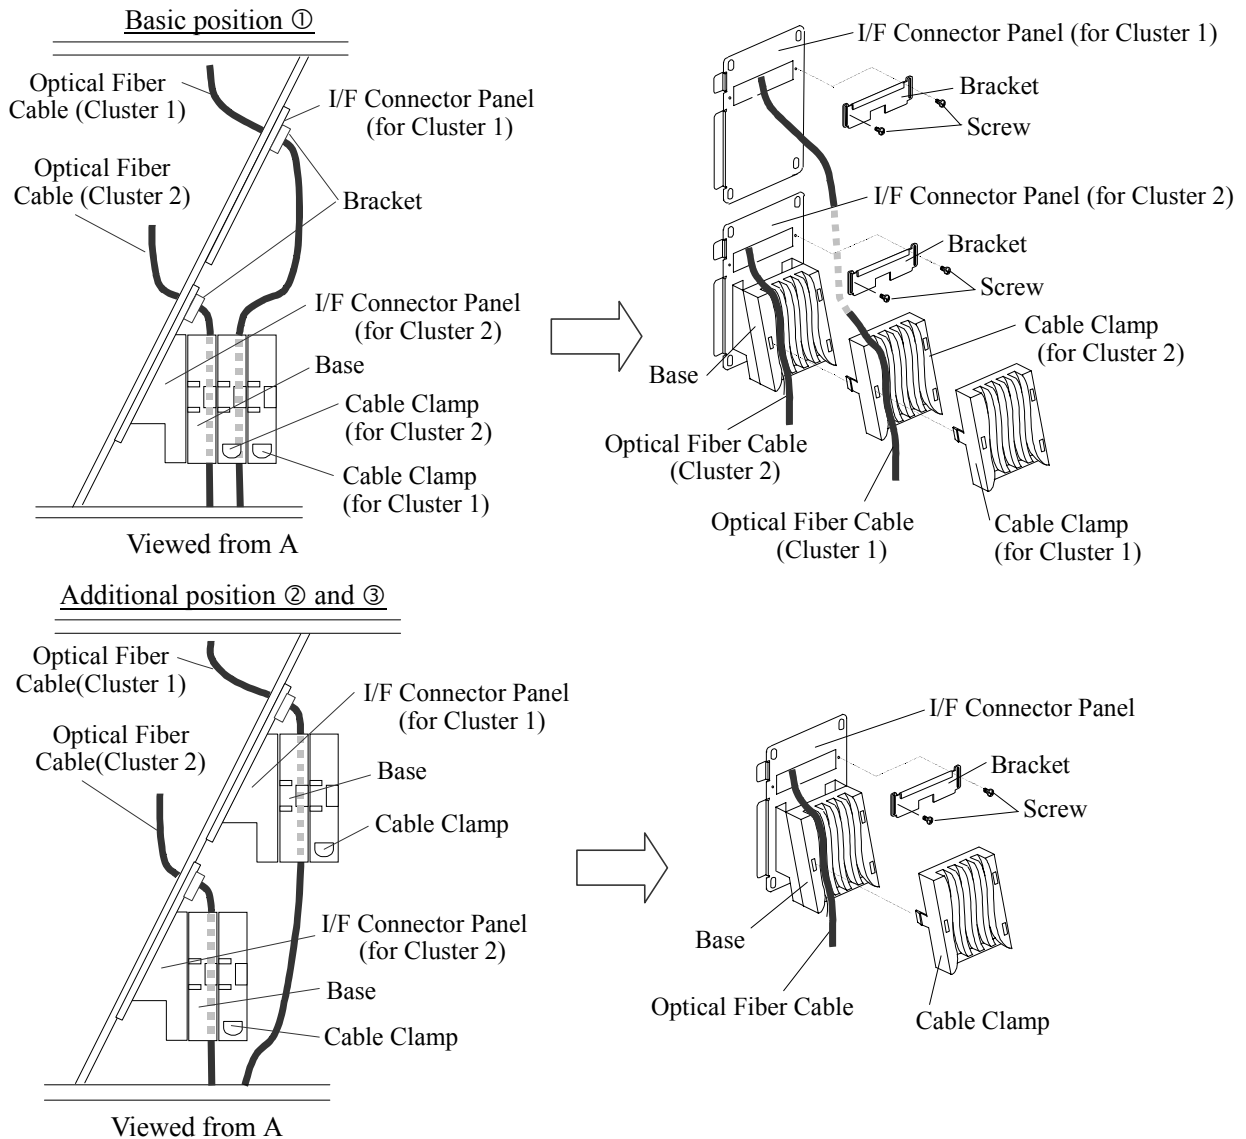


Fig. 3.6.2-3 Installation of Optical Fiber Cable

3-3 Cleaning the fiber cable connectors.

For the tools needed for the cleaning, refer to the tool list on page [PARTS06-10](#).

- Blow compressed gas against the connector using an air sprayer (for about five seconds).
- Wipe the connector lightly with a piece of cut gauze wet with ethyl alcohol.
- Blow compressed air again and check the result of the cleaning. (None of dust, sticking of foreign matter, and dirt must be observed.)

CAUTION

When Installation of PCB in HIGH PERFORMANCE MODE, some LOOP ID (FC-AL) volumes of the parts on the PCB may conflict. So you must operate LUN Management ([INST05-610](#)) to change the values, and then insert Optical Fibre cable.

If you operate in the reverse order, SIM=2190XY (ALPA conflict) will be logged on SVP.

3-4 Connection of the optical fibre cable

- Connect the optical fiber cable to the PCB referring to Fig. 3.6.2-4.
- Fix the cable to base and attach the cable clamp and bracket referring to Fig. 3.6.2-3.

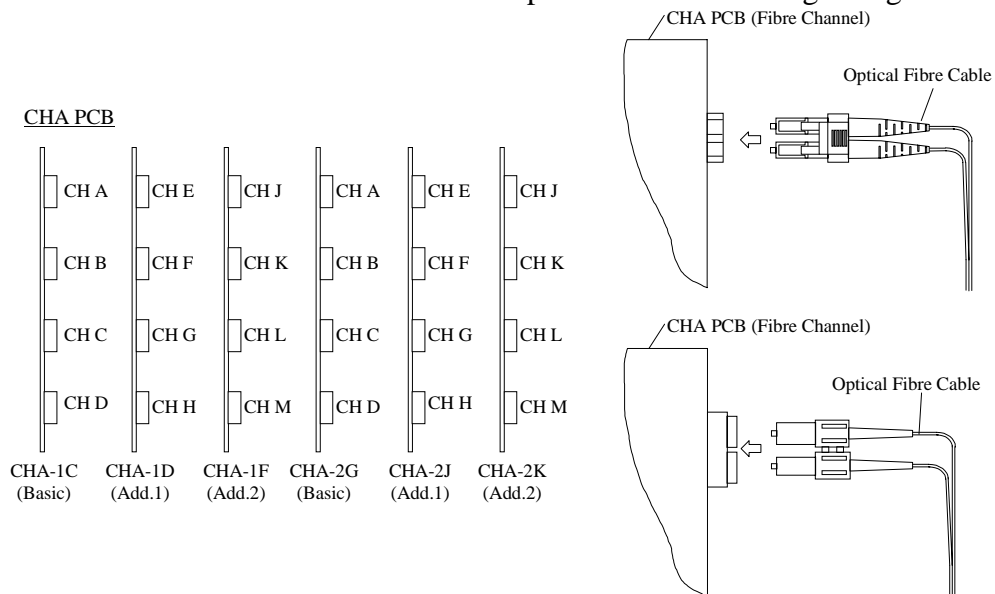


Fig. 3.6.2-4 Connection of Optical Fiber Cable

3-5 Attachment of the nameplate

- Attach the nameplate referring to Fig. 3.6.2-5.


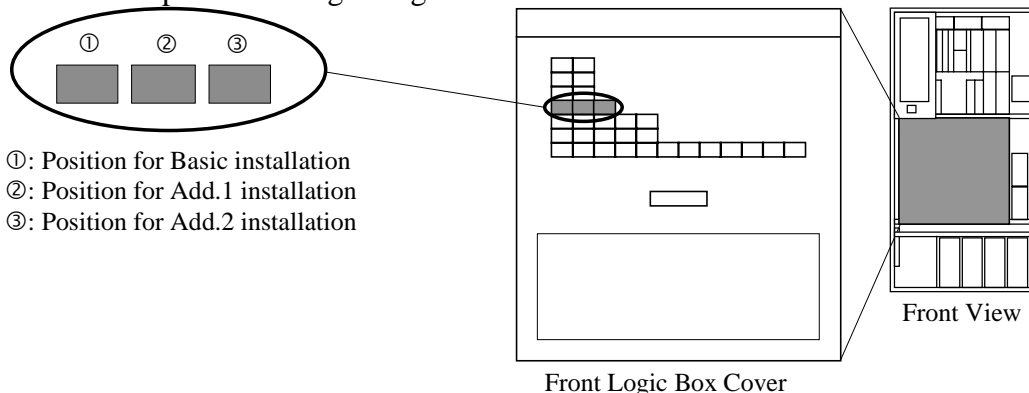


Fig. 3.6.2-5 Attachment of Nameplate

4. SVP post procedure

1. <Check that hardware components are installed>

Select (CL) [OK] after making sure that all hardware components are installed correctly in response to “Please install the units in the system before starting this process. If installation has been completed, push OK.”.

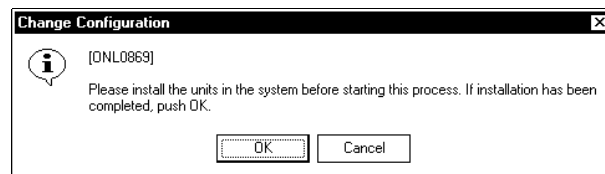

When [Cancel] is selected (CL), returns to [INST03-FIB-20](#) step 3.

- 2.


“Waiting for Power Event... Usually, several minutes (maximum 15 minutes)” is displayed.

3. <DKU PATH INLINE>


When DKA is installed, “DKU PATH INLINE is now running...” is displayed.

4. <End of system update processing>


“Renewal process has completed. Please check the subsystem status.” is displayed when recovery processing on all installed components is completed. Select (CL) [OK] in response to this message.

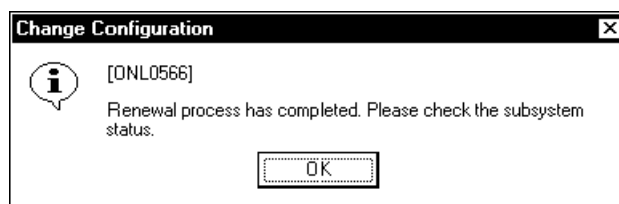


5. “Reading subsystem configuration data...” is displayed.
 “Please insert the Config FD in the FDD.” is displayed.
 Insert the configuration FD into FDD, and select (CL) [OK].

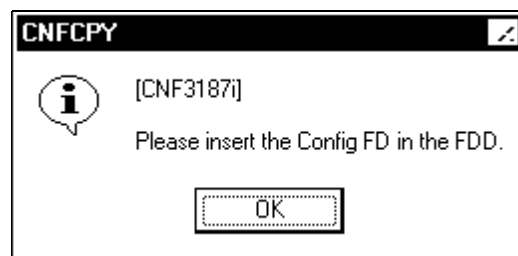

6. When this procedure is completed, the message “Please remove the Config FD.” is displayed.
 Remove the FD, select (CL) [OK].

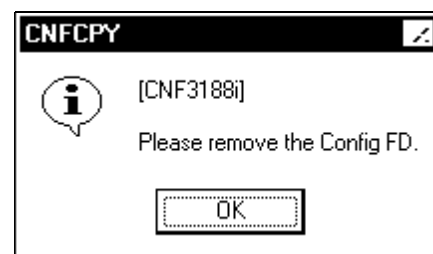

7. After the procedure is completed, return to “Install”.
 Select (CL) [File]-[Exit].

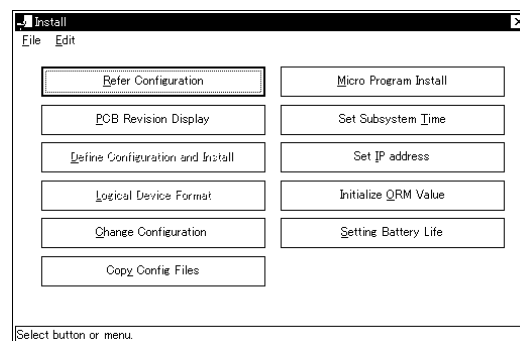

8. <Mode Change>
 Change the mode to View Mode.

3.6.3 Installation of Mainframe Fibre 8-port Adapter (DKC-F460I-8MS/8ML)


Table 3.6.3-1 Parts List

No.	Model Number	Part Name	Part No.	Quantity	Remarks
1	DKC-F460I-8MS (Short Wavelength)	Fibre 4-port Adapter PCB	5513984-A	2	Color of PCB lever : Blue
		Cable Clamp	2105506-1	2	
		Nameplate (HDS)	2105902-112	1	RSD
			2105903-112		HICAM
			2105903-212		HICEF
2	DKC-F460I-8ML (Long Wavelength)	Fibre 4-port Adapter PCB	5513984-B	2	Color of PCB lever : Blue
		Cable Clamp	2105506-1	2	
		Nameplate (HDS)	2105902-113	1	RSD
			2105903-113		HICAM
			2105903-213		HICEF


1. Setting up the New Device Structure Information

1. <Mode Change>
Change the mode to Modify Mode.
Select (CL) [Install].


2. <Start the 'Menu Dialog' screen>
Select (CL) [Change Configuration].

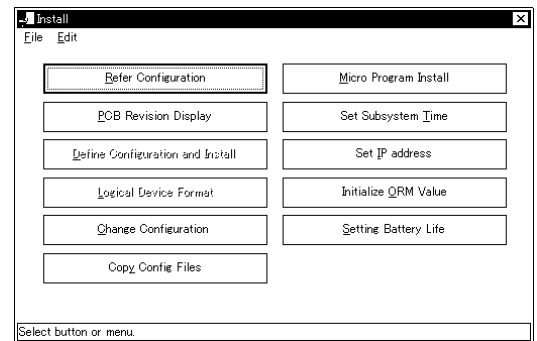

3. <Start Device Structure Setup screen>
Select (CL) [Installation] in the 'Menu Dialog' dialog box and select (CL) [OK].

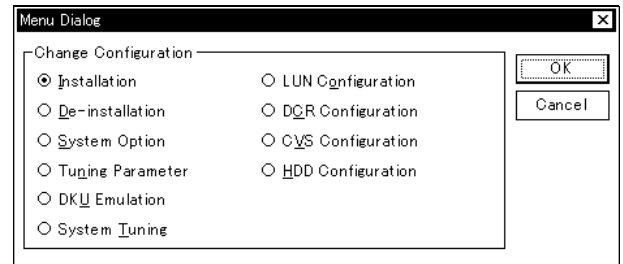

4. <Select a part to be changed>
Select (CL) [Number of Channel], and select (CL) [OK].

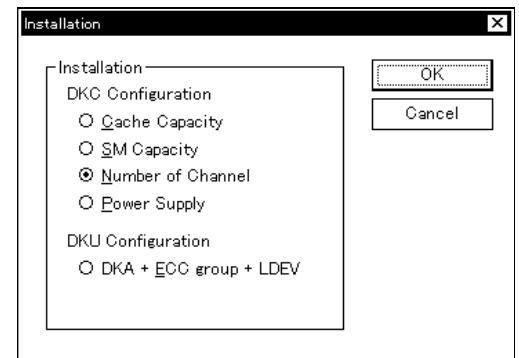

2. SVP pre procedure

1. <Update Configuration Information>

Enter the item to CHA in the 'DKC Configuration' window.

Make sure that the entered item is correct and select (CL) [>>Next].

The DKC Configuration window contains the following sections:

- DKC:** Serial No. (09505), Number of CUs (04), System Option..., Power Supply...
- IP Address:** IP Address (126.255.255.15), Subnet Mask (255.0.0.0), IP Address Configuration...
- Cache:** Basic CMQ/512MB Size/512MBx2, On-Demand/6MBx2, Option: Not installed, Total cache size: 512MBx2, DCR available: 256MBx2, Cache Configuration...
- CHA:** ☒ Basic, ☒ Option, ☐ Option 2, ☐ Option 3
- DKA:** Number of DKA (2), Cancel, >> Next

2. <Defining channel type>

Input each item in the "Host Interface Configuration" window.

Repeat the operation above as many times as the number of channels installed.

Select (CL) [Mfibre *].

The Host Interface Configuration window shows:

- Please select the interface type of CHA.
- CHA-1Q/CHA-2W
- Interface Type: 8MS Mfibre 4ch (selected from a dropdown menu)
- Buttons: Before <<, >> Next, Cancel

Verify that the inputted item is correct and select (CL) [>>Next].

Go to step 3.

3. <Defining DKC emulation type>

Define the DKC emulation type in the "DKC Emulation Configuration" window.


After the setting is completed, select (CL) [>>Next].

The DKC Emulation Configuration window shows:

- Please Select the DKC Emulation type.
- CHA-1P/CHA-2V
- DKC Emulation: [Cluster 1] CHA-1P (selected from a dropdown menu showing i-2105-F20), [Cluster 2] CHA-2V = Cluster 1 (selected from a dropdown menu)
- Buttons: Before <<, >> Next

4. <Start installation>
Select (CL) [Yes] in response to “Are you sure you want to renew subsystem?”.


When [No] is selected (CL), returns to
[INST03-MF-20](#) step 3.

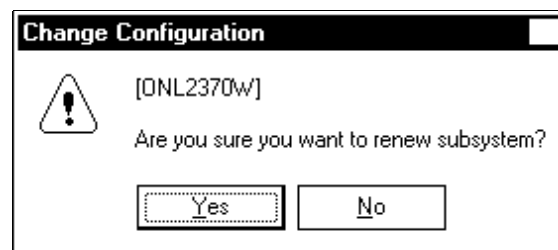

5. <Download microprogram>
Microprograms are automatically downloaded for shared memory.

6. <Install CHA >
“Upgrading of the CHA...”

7. <Check that hardware components are installed>
“Please install the units in the system before starting this process. If installation has been completed, push OK.”.

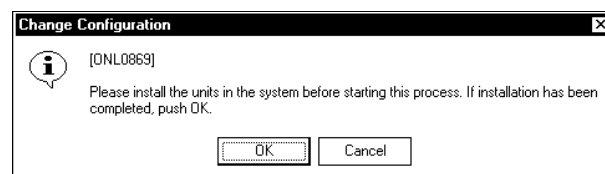

Blank Sheet

REV.1	Jun.2001	Jun.2002				
-------	----------	----------	--	--	--	--

3. Installation Procedure of Mainframe Fibre 8-port Adapter

Note: Be sure to wear your wrist strap and attach to ground prior to performing the following work. This will ensure that the IC and LSI on the PCB are protected from static electricity.

3-1 Insertion of the PCBs

Note: Make sure that a color of the levers of the PCB to be installed is blue. Never insert a PCB whose lever is not blue.

- a. Remove the dummy plate installed in the installation location referring to the Fig. 3.6.3-1.
(Note) Dummy plates should be stored for future use in De-installation.
- b. Insert the PCBs to the correct locations in the Logic Box. Refer to Table 3.6.3-2.
- c. Fasten the two screws referring to Fig. 3.6.3-2.

Table 3.6.3-2 Inserting Location (Front of the unit)

Cluster	CL1							CL2						
Slot No.	A	B	C	D	E	F		G	H	J	K		L	M
Function	CSW	DKA	CHA	CHA	CACHE	CHA	DKA	CHA	CACHE	CHA	CHA	DKA	DKA	CSW
Location No.	CSW -1A	DKA -1B	CHA -1C	CHA -1D	CACHE -1E	CHA -1F	DKA -1F	CHA -2G	CACHE -2H	CHA -2J	CHA -2K	DKA -2K	DKA -2L	CSW -2M
Order of addition		Basic	Basic	Add.1		Add.2	Add.1	Basic		Add.1	Add.2	Add.1	Basic	

Up to 3 Mainframe Fibre 8-port adapters can be installed in the subsystem.

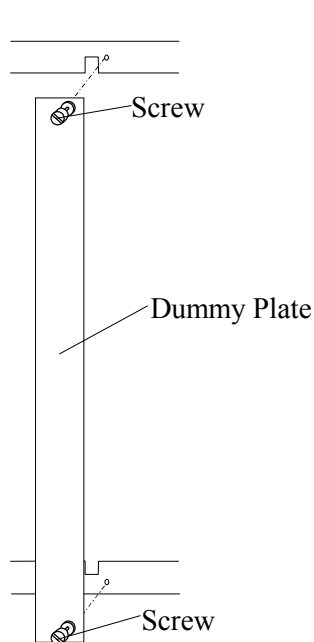


Fig. 3.6.3-1 Removal of Dummy Plate


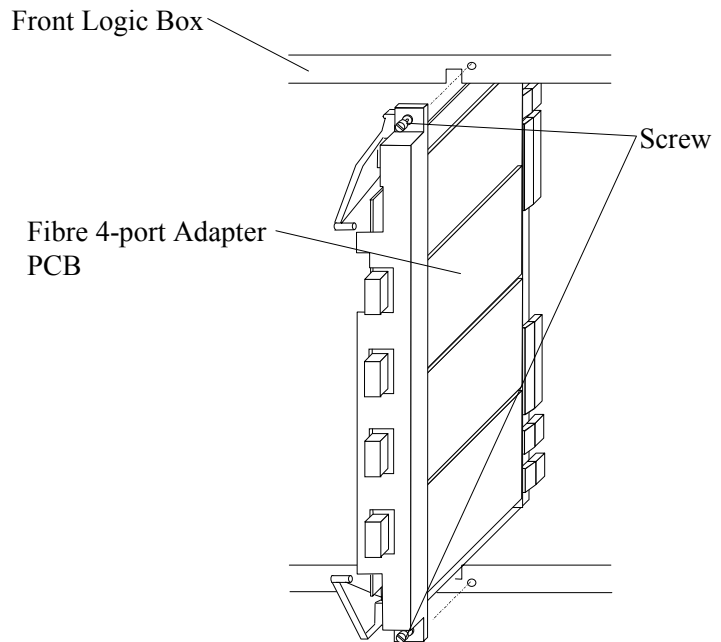


Fig. 3.6.3-2 Insertion of PCB

3-2 Remove the strain relief and fibre cable routing.

- Loosen the four screws and remove the two brackets. Refer to Fig. 3.6.3-3.
- Pull the optical fiber cable into the DKC through the I/F connector panel.

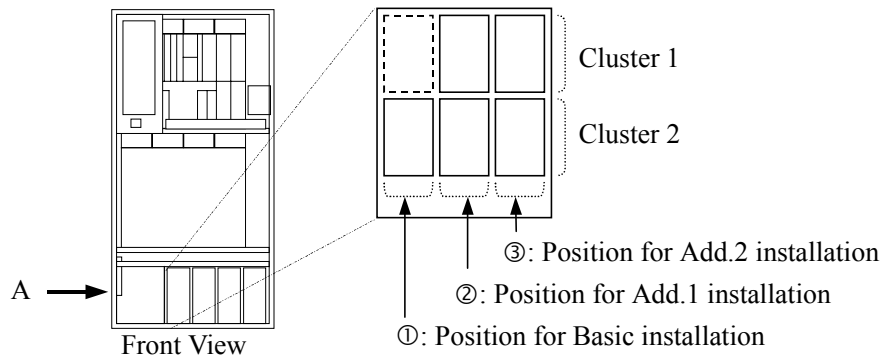

Refer to the following figure for how to attach the cable clamp and cable routing.

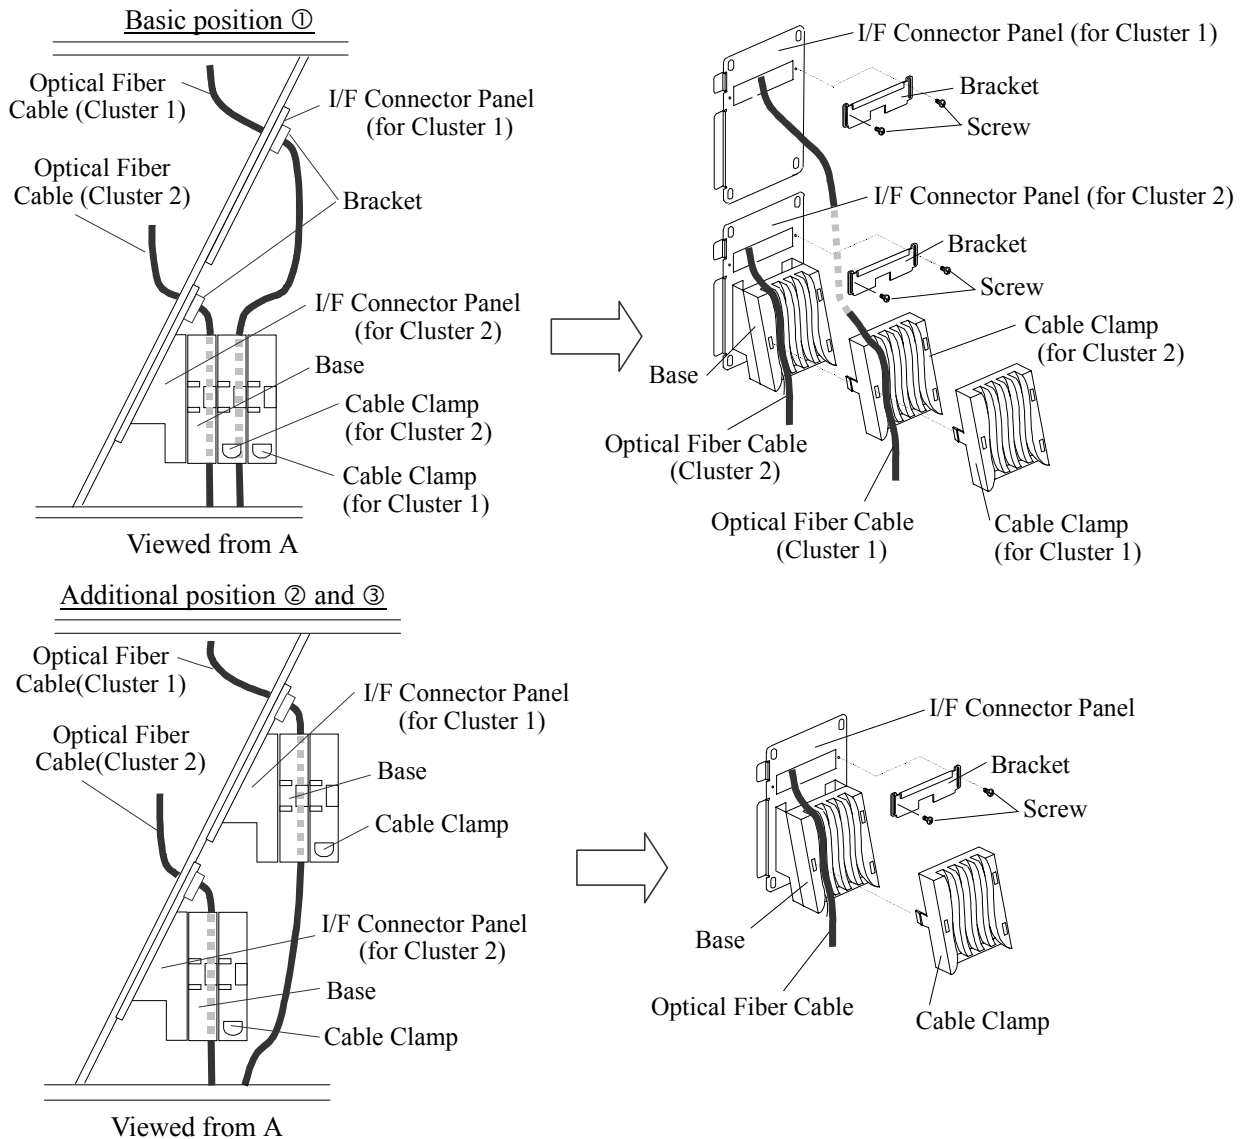


Fig. 3.6.3-3 Installation of Optical Fiber Cable

3-3 Cleaning the fiber cable connectors.

For the tools needed for the cleaning, refer to the tool list on page [PARTS06-10](#).

- Blow compressed gas against the connector using an air sprayer (for about five seconds).
- Wipe the connector lightly with a piece of cut gauze wet with ethyl alcohol.
- Blow compressed air again and check the result of the cleaning. (None of dust, sticking of foreign matter, and dirt must be observed.)

CAUTION

When Installation of PCB in HIGH PERFORMANCE MODE, some LOOP ID (FC-AL) volumes of the parts on the PCB may conflict. So you must operate LUN Management ([INST05-610](#)) to change the values, and then insert Optical Fibre cable.

If you operate in the reverse order, SIM=2190XY (ALPA conflict) will be logged on SVP.

3-4 Connection of the optical fibre cable

- Connect the optical fiber cable to the PCB referring to Fig. 3.6.3-4.
- Fix the cable to base and attach the cable clamp and bracket referring to Fig. 3.6.3-3.

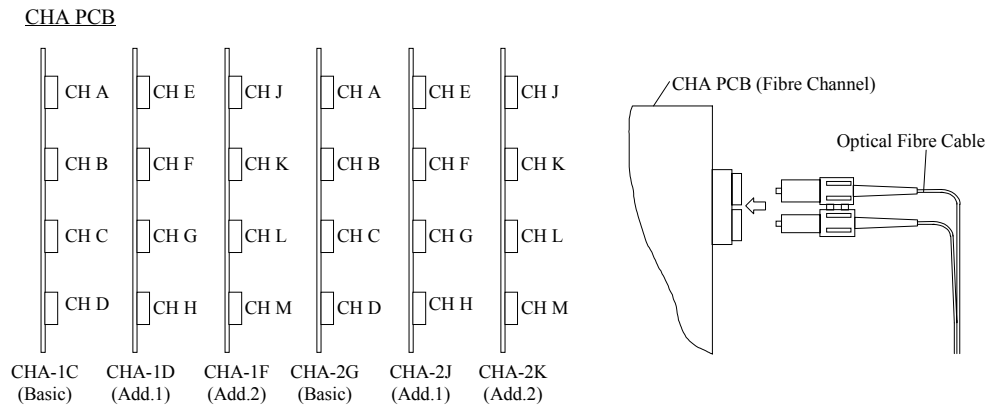


Fig. 3.6.3-4 Connection of Optical Fiber Cable

3-5 Attachment of the nameplate

- Attach the nameplate referring to Fig. 3.6.3-5.


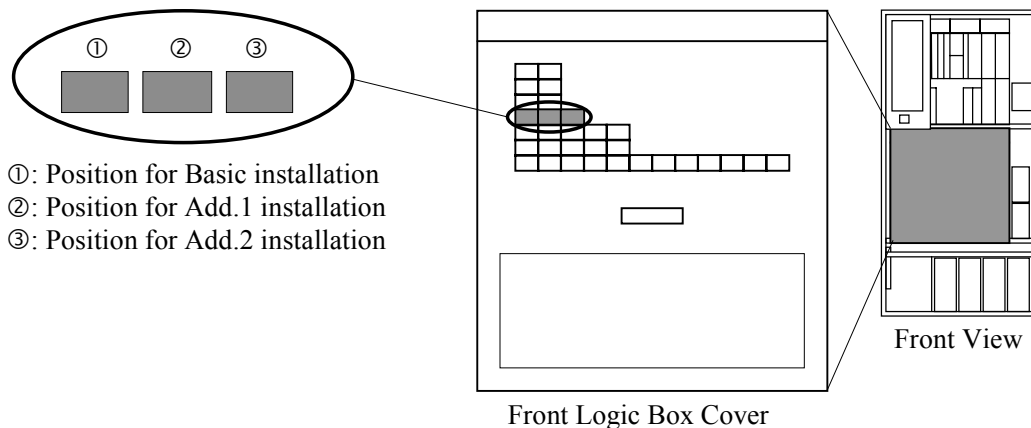


Fig. 3.6.3-5 Attachment of Nameplate

4. SVP post procedure

1. <Check that hardware components are installed>

Select (CL) [OK] after making sure that all hardware components are installed correctly in response to “Please install the units in the system before starting this process. If installation has been completed, push OK.”.

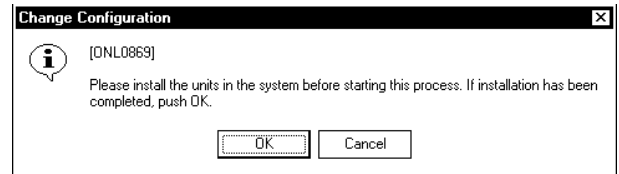

When [Cancel] is selected (CL), returns to [INST03-MF-20](#) step 3.

2.


“Waiting for Power Event... Usually, several minutes (maximum 15 minutes)” is displayed.

3. <DKU PATH INLINE>

When DKA is installed, “DKU PATH INLINE is now running...” is displayed.

4. <End of system update processing>

“Renewal process has completed. Please check the subsystem status.” is displayed when recovery processing on all installed components is completed. Select (CL) [OK] in response to this message.

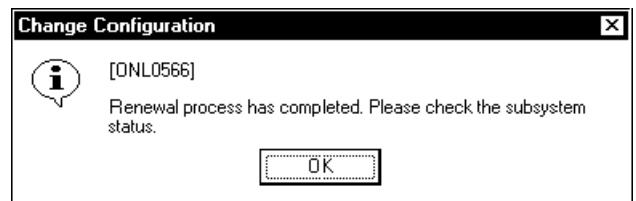


5.

“Reading subsystem configuration data...” is displayed.

“Please insert the Config FD in the FDD.” is displayed.


Insert the configuration FD into FDD, and select (CL) [OK].

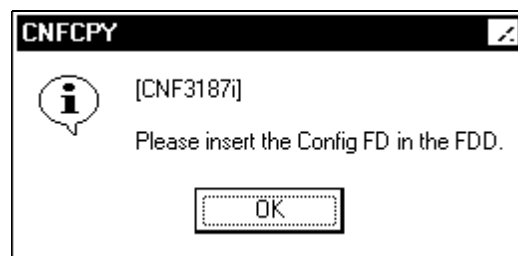

6.


When this procedure is completed, the message “Please remove the Config FD.” is displayed.

Remove the FD, select (CL) [OK].

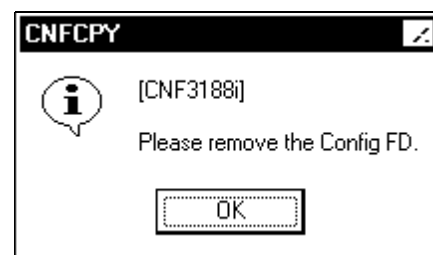

7.

After the procedure is completed, return to “Install”.
Select (CL) [File]-[Exit].

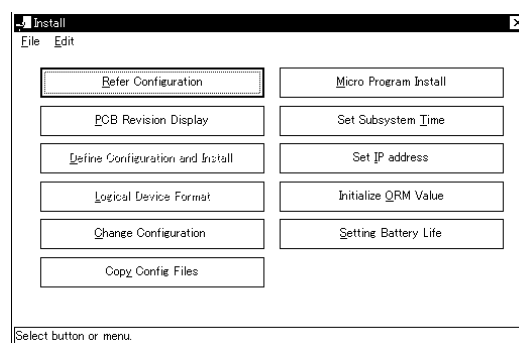

8.

<Mode Change>

Change the mode to View Mode.

3.7 Installation of Shared Memory and Cache Memory

3.7.1 Installation of Additional Shared Memory (DKC-F460I-S512)

NOTICE:

The installed Shared Memory capacity with using HMRCF/HOMRCF/HRC/HORC/HHSM functions is different from ones without using these functions.

(1) Refer to the “[INST01-70] Table 1.1.2-4” in these functions use.

(Note1) When you use these functions, you need to install more Shared Memory.

(2) Refer to the “[INST01-60] Table 1.1.2-3” in these functions non-use.


Table 3.7.1-1 Parts List

No.	Model Number	Part Name	Part No.	Quantity	Remarks
1	DKC-F460I-S512	SH287-B	5513978-B	2	Shared Memory Module (256MB)


1. Setting up the New Device Structure Information

1. <Mode Change>
Change the mode to Modify Mode.
Select (CL) [Install].


2. <Start the 'Menu Dialog' screen>
Select (CL) [Change Configuration].

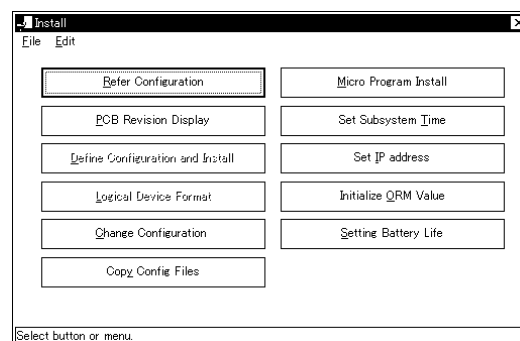

3. <Start Device Structure Setup screen>
Select (CL) [Installation] in the 'Menu Dialog' dialog box and select (CL) [OK].

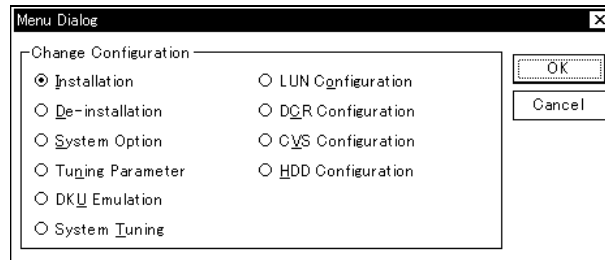

4. <Select a part to be changed>
Select (CL) [SM Capacity], and select (CL) [OK].

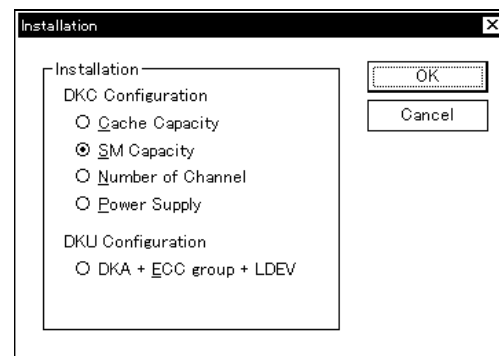


2. SVP pre procedure on the Cluster 1.

(1) <Define Shared Memory Size>

Define the shared memory size in the 'Shared Memory Size Configuration' dialog box.

When you want to add the SM for the HMRCF/HOMRCF/HRC/HORC/HIMSM function, check the "Install HMRCF/HOMRCF/HRC/HORC/HIMSM Function.". (There may be no change in SM capacity.)

If the installed SM after the addition conforms to that shown in the "Cache PCB Image", select (CL) the [Next] button.

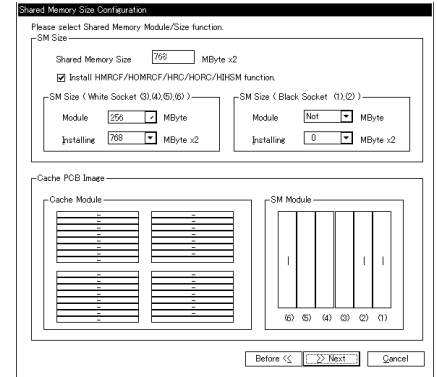


(1-1)

Make sure if the desired configuration is in the valid extent.

In the valid extent: Select (CL) [OK].

Out of the valid extent: Select (CL) [Cancel].

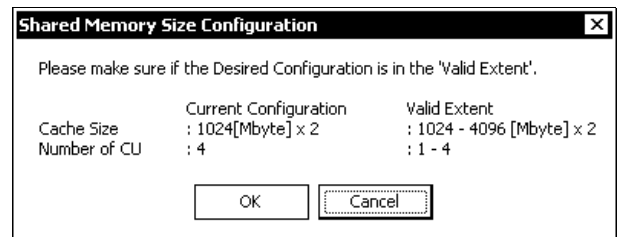


(2) <Start installation>

Select (CL) [Yes] in response to "Are you sure you want to renew subsystem?".

If there is change in SM capacity, go to INST03-SM-30 step 3.

If there is no change in SM capacity, go to [INST03-SM-150](#) step 3.

When [No] is selected (CL), returns to [INST03-SM-20](#) step 2.

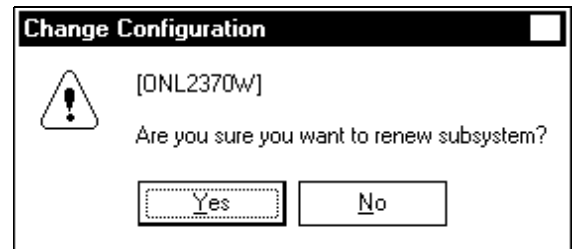

(3)

"The Shared Memory PCB is being blocked..." is displayed.

"Lighting LED of the PCB..." is displayed.

(4) <Perform cache hardware installation>


At this point refrain from pressing the [OK] button.

When “Replace or insert the Memory PCB(s) of cluster-1.

When completed, please press OK.” is displayed, install hardware components according to the cache hardware installation procedure.

Make sure of the installation location and size of the module to be added and insert the correct module in the correct location.

(Uninstalled module is displayed as looks depressed.)

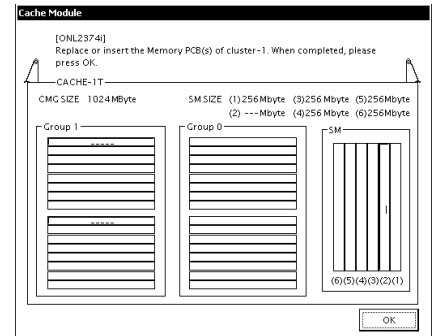

3-1 Install the Shared Memory on the Cluster 1.

Be sure to wear your wrist strap and attach to ground prior to performing the following work. This will ensure that the IC and LSI on the PCB are protected from static electricity.

3-1. Remove the PCB.

- a. While referring to Fig. 3.7.1-1 and Table 3.7.1-2, check the Shut Down LED on the Cache Memory PCB in the Front Logic Box. Connect the Maintenance Jumper to the Shut Down Connector if the Shut Down LED is not on. (This procedure [2-1. a.] is not valid for a New Installation.)

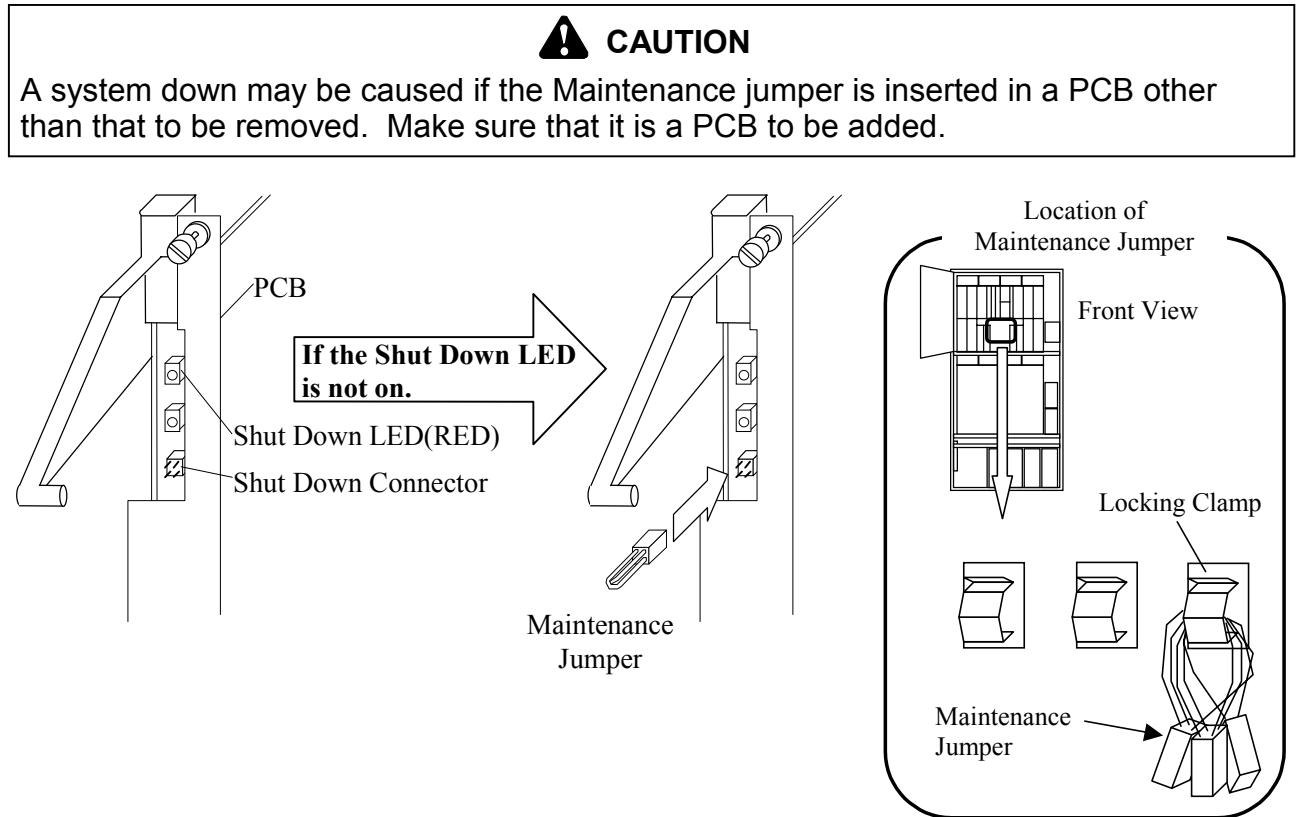


Fig. 3.7.1-1 Location of the Shut Down LED

Table 3.7.1-2 Location of the Cache PCB

Cluster	PCB Name	Box	Slot No.	Location No.	Remarks
1	WP490-A	Front Logic Box	E	CACHE-1E	Cache Memory PCB

- b. Remove the two screws and remove the Cache Memory PCB.

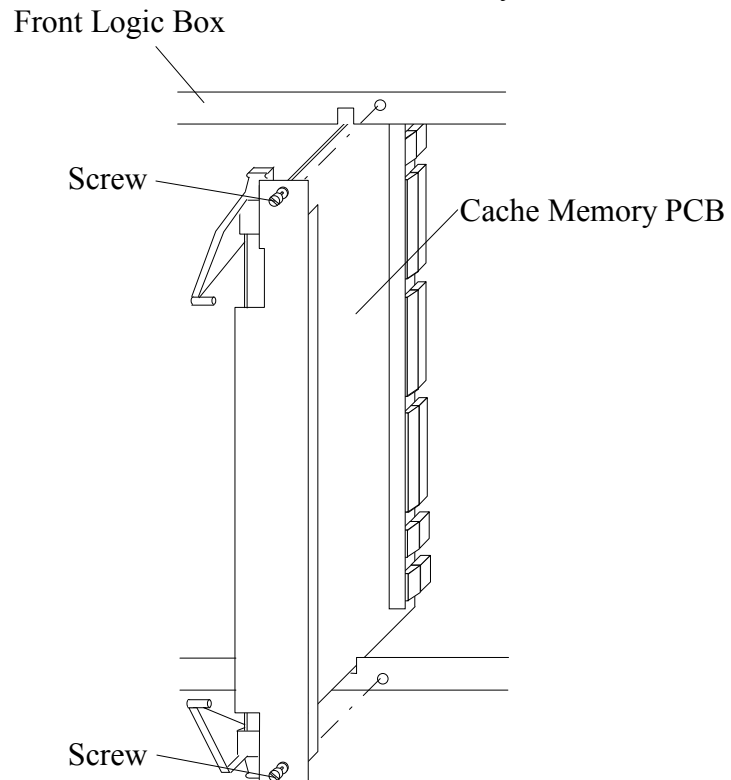


Fig. 3.7.1-2 Removal of the Cache Memory PCB

- c. Remove the Maintenance Jumper if it is mounted.

3-2. Insert the Shared Memory Modules.

Notice

The required capacity of the shared memory varies depending on whether the HRC/HORC/HMRCF/HOMRCF/HHSM function is supported or not.

Calculate the required shared memory capacity referring to Table 3.7.1-3 when none of the functions is supported (in the case of basic configuration) or Table 3.7.1-4 when at least one of the functions is supported.

- Remove the dust covers that match the required Shared Memory capacity referring to Fig. 3.7.1-3, Table 3.7.1-3 and Table 3.7.1-4.
- Insert the Shared Memory Modules that match the required Shared Memory capacity.

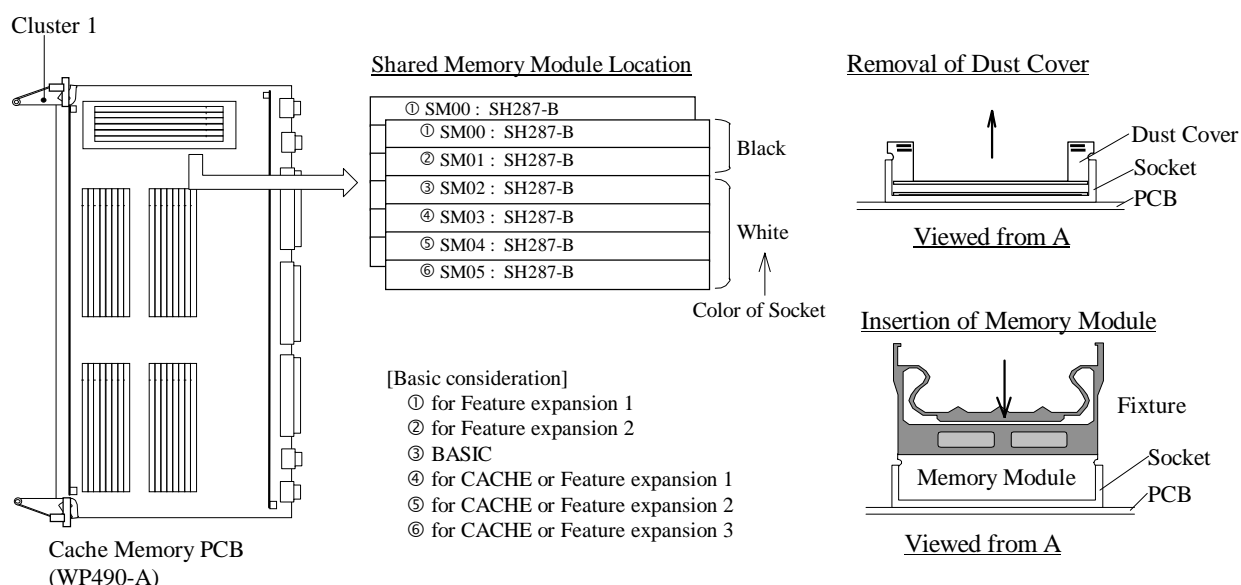


Fig. 3.7.1-3 Inserting Location of the Shared Memory Module

Table 3.7.1-3 Number of SMs and Corresponding Shared Memory Capacity (BASIC)

Cache Memory Capacity (GB)	Number of CU:1-4 (to 1024LDEV)			Number of CU:5-8 (to 2048LDEV)			Number of CU:9-16 (to 4096LDEV)			Number of CU:17-32 (to 8192LDEV)		
	SM (MB)	S512	Install loc. *1	SM (MB)	S512	Install loc. *1	SM (MB)	S512	Install loc. *1	SM (MB)	S512	Install loc. *1
2	512	1	③	1536	3	③①④	1536	3	③①④	2048	4	③①②④
4	512	1	③	1536	3	③①④	1536	3	③①④	2048	4	③①②④
6	512	1	③	1536	3	③①④	1536	3	③①④	2048	4	③①②④
8	512	1	③	1536	3	③①④	1536	3	③①④	2048	4	③①②④
10	1024	2	③④	1536	3	③①④	1536	3	③①④	2048	4	③①②④
12	1024	2	③④	1536	3	③①④	1536	3	③①④	2048	4	③①②④
14	1024	2	③④	1536	3	③①④	1536	3	③①④	2048	4	③①②④
16	1024	2	③④	1536	3	③①④	1536	3	③①④	2048	4	③①②④
18	1024	2	③④	1536	3	③①④	2048	4	③①④⑤	2560	5	③①②④⑤
20	1024	2	③④	1536	3	③①④	2048	4	③①④⑤	2560	5	③①②④⑤
22	1024	2	③④	1536	3	③①④	2048	4	③①④⑤	2560	5	③①②④⑤
24	1024	2	③④	1536	3	③①④	2048	4	③①④⑤	2560	5	③①②④⑤
26	1024	2	③④	1536	3	③①④	2048	4	③①④⑤	2560	5	③①②④⑤
28	1024	2	③④	1536	3	③①④	2048	4	③①④⑤	2560	5	③①②④⑤
30	1024	2	③④	1536	3	③①④	2048	4	③①④⑤	2560	5	③①②④⑤
32	1024	2	③④	1536	3	③①④	2048	4	③①④⑤	2560	5	③①②④⑤

Note. *1 : Location ① through ⑥ shows actual location of Shared Memory on Cache Memory PCB.

Table 3.7.1-4 Number of SMs and Corresponding Shared Memory Capacity
(HRC/HORC/HMRCF/HOMRCF/HHSM supported)

Cache Memory Capacity (GB)	Number of CU:1-4 (to 1024LDEV)			Number of CU:5-8 (to 2048LDEV)			Number of CU:9-16 (to 4096LDEV)			Number of CU:17-32&TPF (to 8192LDEV)		
	SM (MB)	S512	Install loc. *1	SM (MB)	S512	Install loc. *1	SM (MB)	S512	Install loc. *1	SM (MB)	S512	Install loc. *1
2	1024	2	③④	2048	4	③①④⑤	2048	4	③①④⑤	2560	5	③①②④⑤
4	1024	2	③④	2048	4	③①④⑤	2048	4	③①④⑤	2560	5	③①②④⑤
6	1024	2	③④	2048	4	③①④⑤	2048	4	③①④⑤	2560	5	③①②④⑤
8	1024	2	③④	2048	4	③①④⑤	2048	4	③①④⑤	2560	5	③①②④⑤
10	1536	3	③④⑤	2048	4	③①④⑤	2048	4	③①④⑤	2560	5	③①②④⑤
12	1536	3	③④⑤	2048	4	③①④⑤	2048	4	③①④⑤	2560	5	③①②④⑤
14	1536	3	③④⑤	2048	4	③①④⑤	2048	4	③①④⑤	2560	5	③①②④⑤
16	1536	3	③④⑤	2048	4	③①④⑤	2048	4	③①④⑤	2560	5	③①②④⑤
18	1536	3	③④⑤	2048	4	③①④⑤	2560	5	③①④⑤⑥	3072	6	③①②④⑤⑥
20	1536	3	③④⑤	2048	4	③①④⑤	2560	5	③①④⑤⑥	3072	6	③①②④⑤⑥
22	1536	3	③④⑤	2048	4	③①④⑤	2560	5	③①④⑤⑥	3072	6	③①②④⑤⑥
24	1536	3	③④⑤	2048	4	③①④⑤	2560	5	③①④⑤⑥	3072	6	③①②④⑤⑥
26	1536	3	③④⑤	2048	4	③①④⑤	2560	5	③①④⑤⑥	3072	6	③①②④⑤⑥
28	1536	3	③④⑤	2048	4	③①④⑤	2560	5	③①④⑤⑥	3072	6	③①②④⑤⑥
30	1536	3	③④⑤	2048	4	③①④⑤	2560	5	③①④⑤⑥	3072	6	③①②④⑤⑥
32	1536	3	③④⑤	2048	4	③①④⑤	2560	5	③①④⑤⑥	3072	6	③①②④⑤⑥

Note. *1 : Location ① through ⑥ shows actual location of Shared Memory on Cache Memory PCB.

3-3. Insert the PCB.

- Insert the Cache Memory PCB into the Front Logic Box referring to Table 3.7.1-5.
- Fasten the two screws.


Table 3.7.1-5 Location of the Cache PCB

Cluster	PCB Name	Box	Slot No.	Location No.	Remarks
1	WP490-A	Front Logic Box	E	CACHE-1E	Cache Memory PCB

4. SVP post procedure on the Cluster 1.

(1)

After installation of shared memory on one side is completed, select (CL) [OK] in response to “Replace or insert the Memory PCB(s) of cluster-1. When completed, please press OK.”.

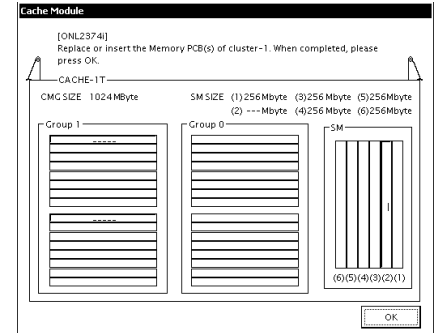

(2)

“Changing the configuration date, for equipment of shared/cache memory...” is displayed.
 “INLINE CUDG is now running...” is displayed.
 “Restoring the Cache Memory PCB...” is displayed.
 “Restoring the Shared Memory PCB...” is displayed.

5. SVP pre procedure on the Cluster 2.

(1) <Recover one side of cache>

When recovery processing is completed,

“The Shared Memory PCB is being blocked.” message appears.

Processing proceeds to blocking of the other side of Shared Memory.

(2) <Perform cache hardware installation>


At this point refrain from pressing the [OK] button.

When “Replace or insert the Memory PCB(s) of cluster-2.

When completed, please press OK.” is displayed, install hardware components according to the cache hardware installation procedure.

Make sure of the installation location and size of the module to be added and insert the correct module in the correct location.

(Uninstalled module is displayed as looks depressed.)

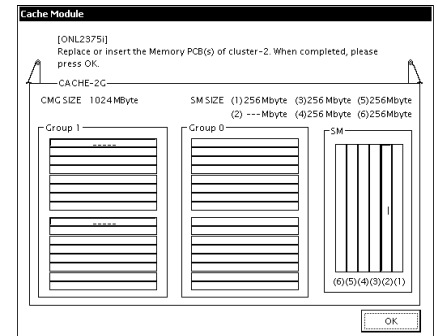

6 Install the Shared Memory on the Cluster 2.

Be sure to wear your wrist strap and attach to ground prior to performing the following work. This will ensure that the IC and LSI on the PCB are protected from static electricity.

6-1. Remove the PCB.

- a. While referring to Fig. 3.7.1-4 and Table 3.7.1-6, check the Shut Down LED on the Cache Memory PCB in the Front Logic Box. Connect the Maintenance Jumper to the Shut Down Connector if the Shut Down LED is not on. (This procedure [4-1. a.] is not valid for a New Installation.)

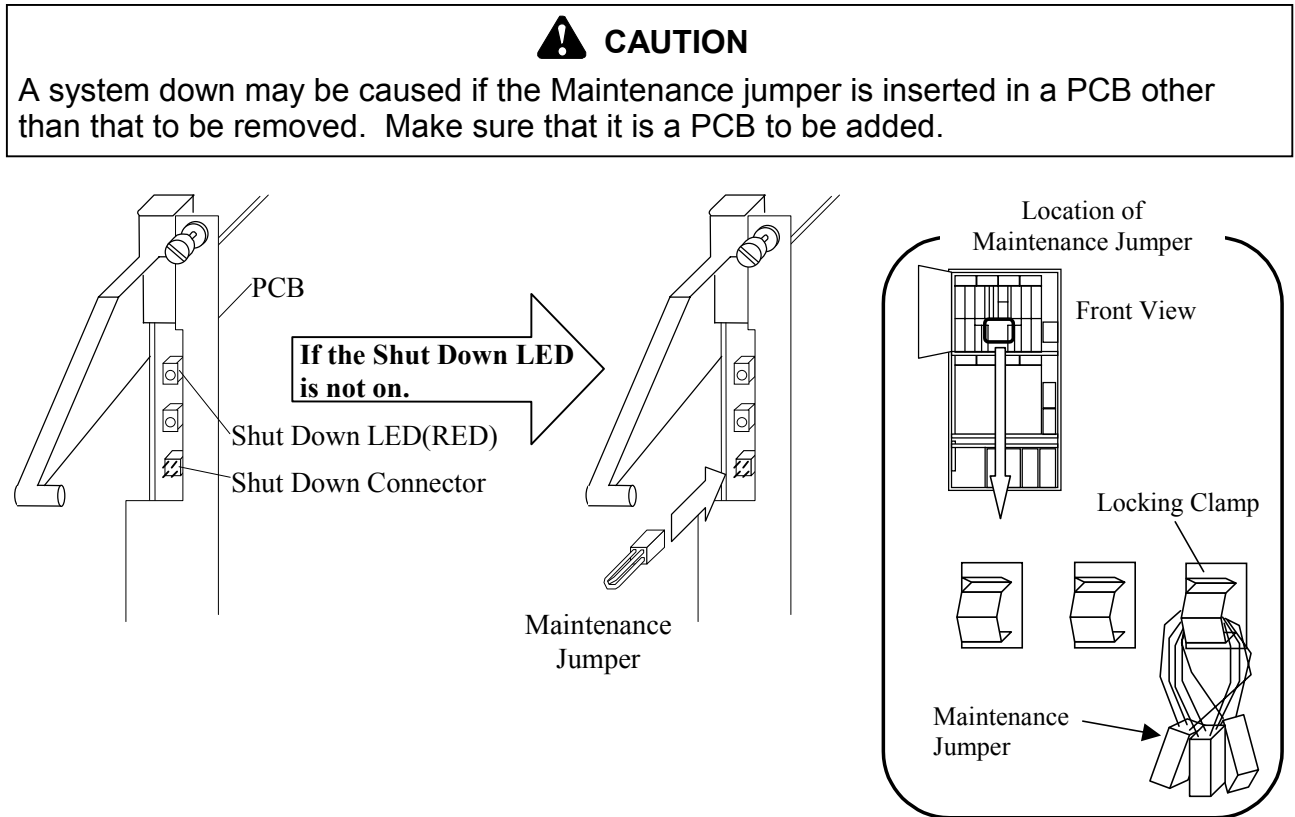


Fig. 3.7.1-4 Location of the Shut Down LED

Table 3.7.1-6 Location of the Cache PCB

Cluster	PCB Name	Box	Slot No.	Location No.	Remarks
2	WP490-A	Front Logic Box	H	CACHE-2H	Cache Memory PCB

- b. Remove the two screws and remove the Cache Memory PCB.

Front Logic Box

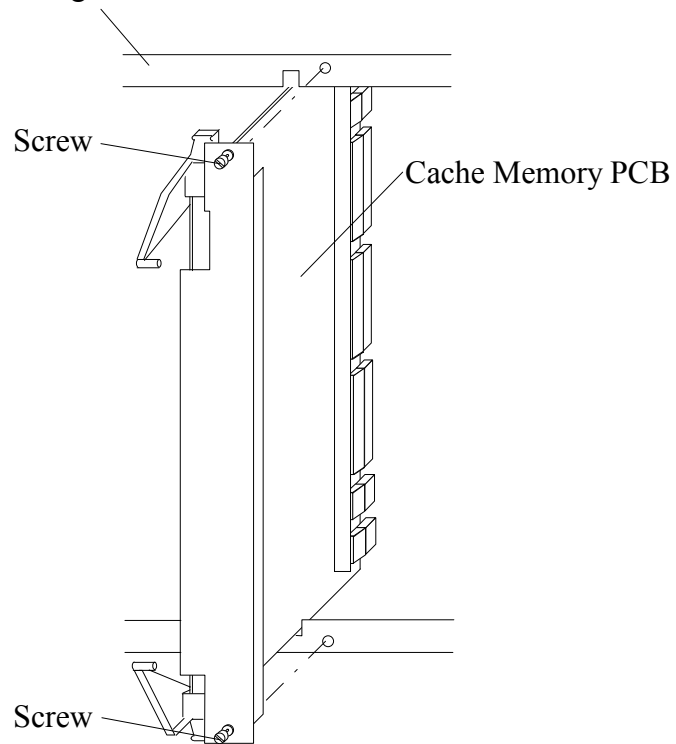


Fig. 3.7.1-5 Removal of the Cache Memory PCB

- c. Remove the Maintenance Jumper if it is mounted.

6-2. Insert the Shared Memory Modules.

Notice

The required capacity of the shared memory varies depending on whether the HRC/HORC/HMRCF/HOMRCF/HHSM function is supported or not.

Calculate the required shared memory capacity referring to Table 3.7.1-7 when none of the functions is supported (in the case of basic configuration) or Table 3.7.1-8 when at least one of the functions is supported.

- Remove the dust covers that match the required Shared Memory capacity referring to Fig. 3.7.1-6, Table 3.7.1-7 and Table 3.7.1-8.
- Insert the Shared Memory Modules that match the required Shared Memory capacity.

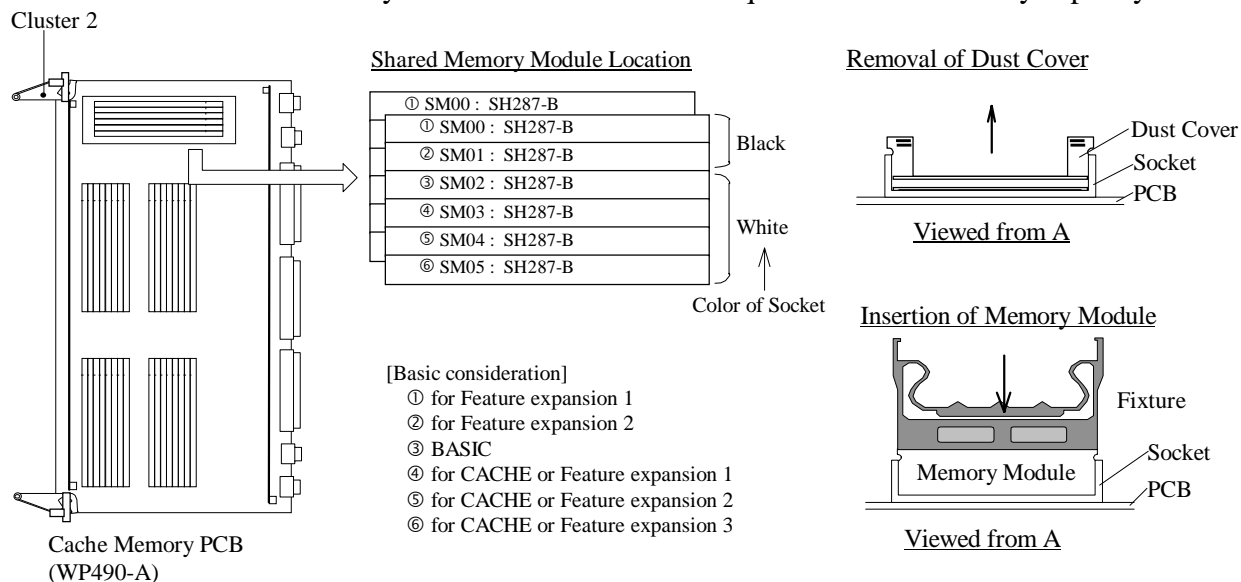


Fig. 3.7.1-6 Inserting Location of the Shared Memory Module

Table 3.7.1-7 Number of SMs and Corresponding Shared Memory Capacity (BASIC)

Cache Memory Capacity (GB)	Number of CU:1-4 (to 1024LDEV)			Number of CU:5-8 (to 2048LDEV)			Number of CU:9-16 (to 4096LDEV)			Number of CU:17-32 (to 8192LDEV)		
	SM (MB)	S512	Install loc. *1	SM (MB)	S512	Install loc. *1	SM (MB)	S512	Install loc. *1	SM (MB)	S512	Install loc. *1
2	512	1	③	1536	3	③①④	1536	3	③①④	2048	4	③①②④
4	512	1	③	1536	3	③①④	1536	3	③①④	2048	4	③①②④
6	512	1	③	1536	3	③①④	1536	3	③①④	2048	4	③①②④
8	512	1	③	1536	3	③①④	1536	3	③①④	2048	4	③①②④
10	1024	2	③④	1536	3	③①④	1536	3	③①④	2048	4	③①②④
12	1024	2	③④	1536	3	③①④	1536	3	③①④	2048	4	③①②④
14	1024	2	③④	1536	3	③①④	1536	3	③①④	2048	4	③①②④
16	1024	2	③④	1536	3	③①④	1536	3	③①④	2048	4	③①②④
18	1024	2	③④	1536	3	③①④	2048	4	③①④⑤	2560	5	③①②④⑤
20	1024	2	③④	1536	3	③①④	2048	4	③①④⑤	2560	5	③①②④⑤
22	1024	2	③④	1536	3	③①④	2048	4	③①④⑤	2560	5	③①②④⑤
24	1024	2	③④	1536	3	③①④	2048	4	③①④⑤	2560	5	③①②④⑤
26	1024	2	③④	1536	3	③①④	2048	4	③①④⑤	2560	5	③①②④⑤
28	1024	2	③④	1536	3	③①④	2048	4	③①④⑤	2560	5	③①②④⑤
30	1024	2	③④	1536	3	③①④	2048	4	③①④⑤	2560	5	③①②④⑤
32	1024	2	③④	1536	3	③①④	2048	4	③①④⑤	2560	5	③①②④⑤

Note. *1 : Location ① through ⑥ shows actual location of Shared Memory on Cache Memory PCB.

Table 3.7.1-8 Number of SMs and Corresponding Shared Memory Capacity
(HRC/HORC/HMRCF/HOMRCF/HHSM supported)

Cache Memory Capacity (GB)	Number of CU:1-4 (to 1024LDEV)			Number of CU:5-8 (to 2048LDEV)			Number of CU:9-16 (to 4096LDEV)			Number of CU:17-32&TPF (to 8192LDEV)		
	SM (MB)	S512	Install loc. *1	SM (MB)	S512	Install loc. *1	SM (MB)	S512	Install loc. *1	SM (MB)	S512	Install loc. *1
2	1024	2	③④	2048	4	③①④⑤	2048	4	③①④⑤	2560	5	③①②④⑤
4	1024	2	③④	2048	4	③①④⑤	2048	4	③①④⑤	2560	5	③①②④⑤
6	1024	2	③④	2048	4	③①④⑤	2048	4	③①④⑤	2560	5	③①②④⑤
8	1024	2	③④	2048	4	③①④⑤	2048	4	③①④⑤	2560	5	③①②④⑤
10	1536	3	③④⑤	2048	4	③①④⑤	2048	4	③①④⑤	2560	5	③①②④⑤
12	1536	3	③④⑤	2048	4	③①④⑤	2048	4	③①④⑤	2560	5	③①②④⑤
14	1536	3	③④⑤	2048	4	③①④⑤	2048	4	③①④⑤	2560	5	③①②④⑤
16	1536	3	③④⑤	2048	4	③①④⑤	2048	4	③①④⑤	2560	5	③①②④⑤
18	1536	3	③④⑤	2048	4	③①④⑤	2560	5	③①④⑤⑥	3072	6	③①②④⑤⑥
20	1536	3	③④⑤	2048	4	③①④⑤	2560	5	③①④⑤⑥	3072	6	③①②④⑤⑥
22	1536	3	③④⑤	2048	4	③①④⑤	2560	5	③①④⑤⑥	3072	6	③①②④⑤⑥
24	1536	3	③④⑤	2048	4	③①④⑤	2560	5	③①④⑤⑥	3072	6	③①②④⑤⑥
26	1536	3	③④⑤	2048	4	③①④⑤	2560	5	③①④⑤⑥	3072	6	③①②④⑤⑥
28	1536	3	③④⑤	2048	4	③①④⑤	2560	5	③①④⑤⑥	3072	6	③①②④⑤⑥
30	1536	3	③④⑤	2048	4	③①④⑤	2560	5	③①④⑤⑥	3072	6	③①②④⑤⑥
32	1536	3	③④⑤	2048	4	③①④⑤	2560	5	③①④⑤⑥	3072	6	③①②④⑤⑥

Note. *1: Location ①-⑥ shows actual location of shared memory module on Cache PCB.

6-3. Insert the PCB.

- Insert the Cache Memory PCB into the Front Logic Box referring to Table 3.7.1-9.
- Fasten the two screws.

Table 3.7.1-9 Location of the Cache PCB

Cluster	PCB Name	Box	Slot No.	Location No.	Remarks
2	WP490-A	Front Logic Box	H	CACHE-2H	Cache Memory PCB

6-4 Change the nameplate.

- a. Refer to Fig. 3.7.1-7 and Table 3.7.1-10 to paint out unnecessary numbers on the nameplate.

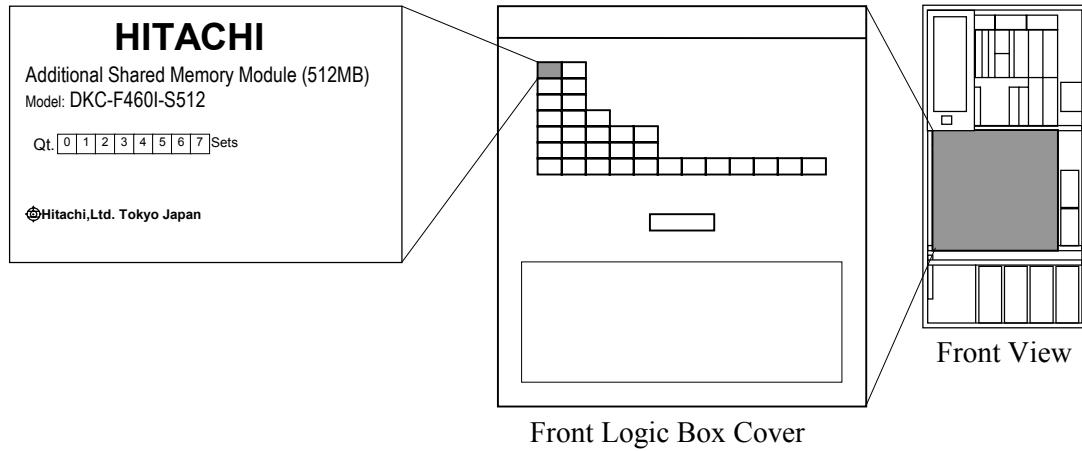


Fig. 3.7.1-7 Location of the Nameplate


Table 3.7.1-10 Quantity Marking

No.	Quantity Marking	
	Number of DKC-F460I-S512 sets	Qt.
1	1 set	2 3 4 5 6 7
2	2 sets	3 4 5 6 7
3	3 sets	4 5 6 7
4	4 sets	5 6 7
5	5 sets	6 7
6	6 sets	7

7. SVP post procedure on the Cluster 2.

(1)

After installation of shared memory on one side is completed, select (CL) [OK] in response to “Replace or insert the Memory PCBs of cluster-x. When completed, please press [OK].”.

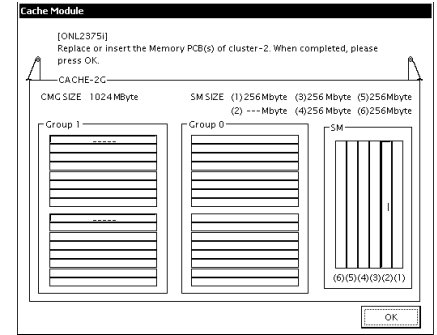


(2)

“Changing the configuration date, for equipment of shared/cache memory...” is displayed.
 “INLINE CUDG is now running...” is displayed.
 “Restoring the Cache Memory PCB...” is displayed.
 “Restoring the Shared Memory PCB...” is displayed.


(3) <End of system update processing>

“Renewal process has completed. Please check subsystem status.” is displayed when recovery processing on all installed components is completed. Select (CL) [OK] in response to this message.

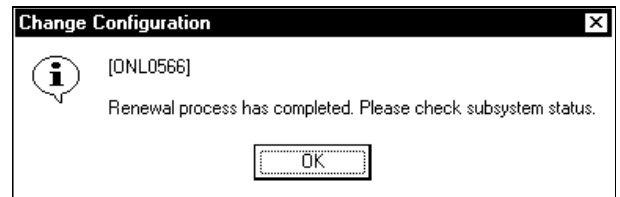


(4)

“Reading subsystem configuration data...” is displayed.
 “Please insert the Config FD in the FDD.” is displayed.
 Insert the configuration FD into FDD, and select (CL) [OK].

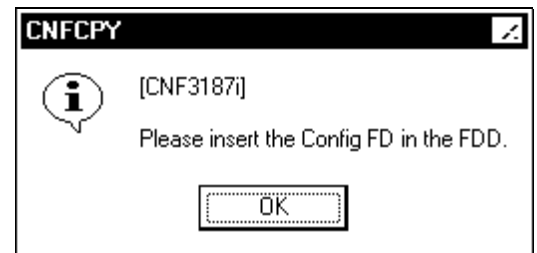


(5)

When this procedure is completed, the message “Please remove the Config FD.” is displayed.
Remove the FD, and select (CL) [OK].

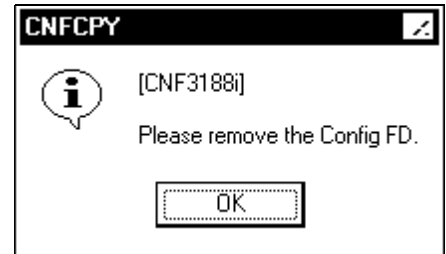

(6)

After the procedure is completed, return to “Install”.
Select (CL) [File]-[Exit].

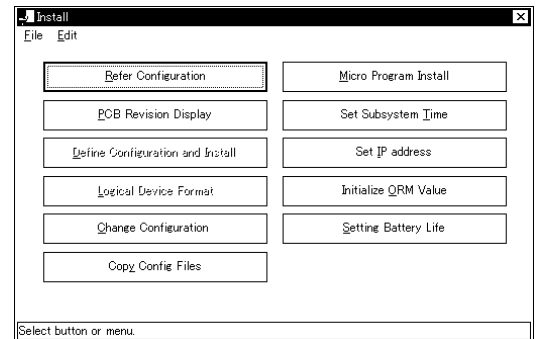

(7) <Mode Change>

Change the mode to View Mode.

3.7.2 Installation of Additional Cache Memory (DKC-F460I-2048)

NOTICE:

The installed Shared Memory capacity with using HMRCF/HOMRCF/HRC/HORC/HHSM functions is different from ones without using these functions.

(1) Refer to the “[[INST01-70](#)] Table 1.1.2-4” in these functions use.

(Note1) When you use these functions, you need to install more Shared Memory.

(2) Refer to the “[[INST01-60](#)] Table 1.1.2-3” in these functions non-use.

Table 3.7.2-1 Parts List

No.	Model Number	Part Name	Part No.	Quantity	Remarks
1	DKC-F460I-2048	SH288-B	5513977-B	4	Cache Memory Module (512 MB)

Matters to be checked before adding the cache memory


Before starting the addition of the cache memory, determine the necessary number of the shared memories by referring to “Relation between Shared Memory and Cache Memory” on pages [INST01-60 to INST01-70](#).

When the shared memory or memories must be added, perform the addition of it (them) beforehand referring to “Installation of Additional Shared Memory (DKC-F460I-S512)” on page [INST03-SM-10](#).


1. Setting up the New Device Structure Information

1. <Mode Change>
Change the mode to Modify Mode.
Select (CL) [Install].


2. <Start the 'Menu Dialog' screen>
Select (CL) [Change Configuration].

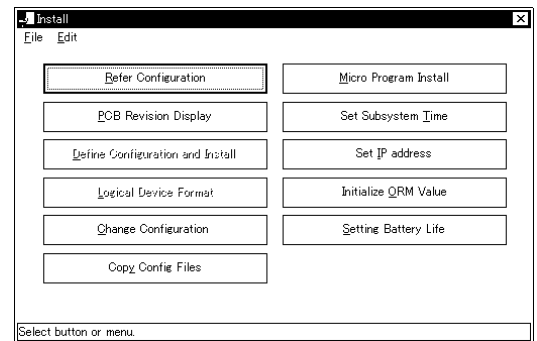

3. <Start Device Structure Setup screen>
Select (CL) [Installation] in the 'Menu Dialog' dialog box and select (CL) [OK].

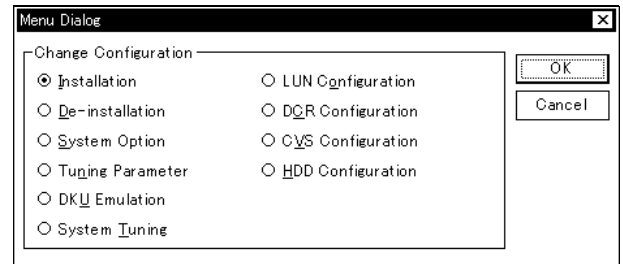


4. <Select a part to be changed>
Select (CL) [Cache Capacity], and select (CL) [OK].

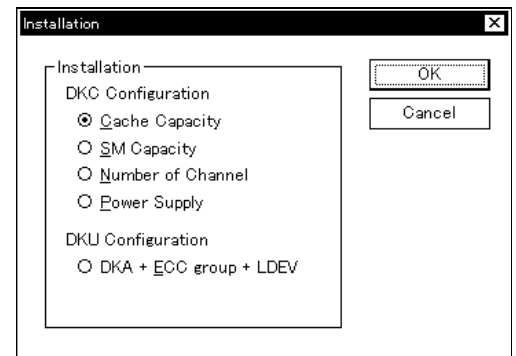

5. <Update Configuration Information>
Select (CL) [Cache Configuration] in the 'DKC Configuration' window.
(Go to step 5-1.)

Note: It is not possible to install or de-install plural parts at the same time.


Make sure that all entered items are correct and select (CL) [>>>Next].
Go to step 6.

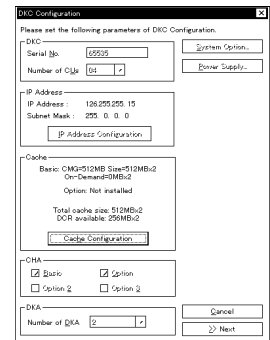

5-1. <Define Cache>

Define each item in the 'Cache Configuration' windows.
When a change in the DCR setting is necessary, select (CL) [Change...].
(Go to step 5-2.)
(See SSD Optional Function Section)


Note: For Single Cabinet Model,
Option is not displayed.

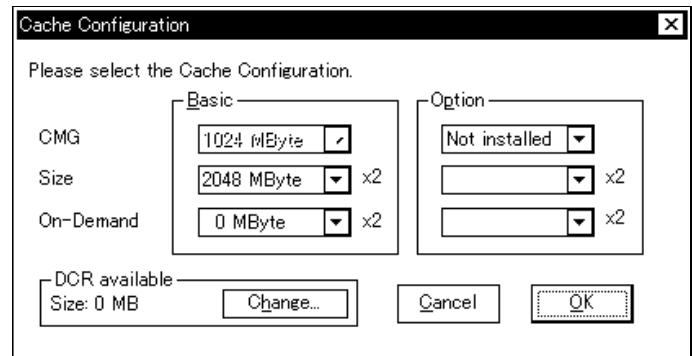

After setting up all items, select (CL) [OK].
Return to step 5.


5-2. <Setting DCR size>

Set the DCR Available size in the 'DCR Available Size' dialog box and select (CL) the [OK] button.
Return to Step 5-1.

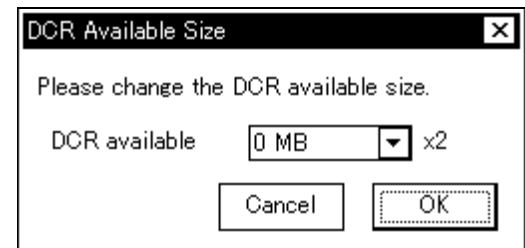

6. <Display SM size>


The 'Shared Memory size Configuration' dialog box is displayed.
Select (CL) [>>>Next].

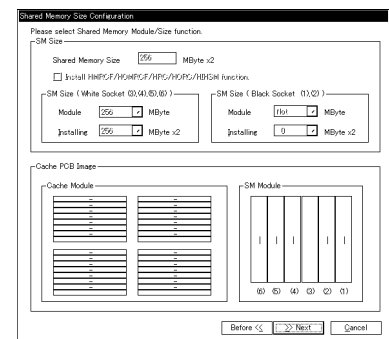

2. SVP pre procedure on the Cluster 1.

1. <Start installation>
Select (CL) [Yes] in response to “Are you sure you want to renew subsystem?”.

When [No] is selected (CL), returns to
[INST03-CM-20](#) step 3.

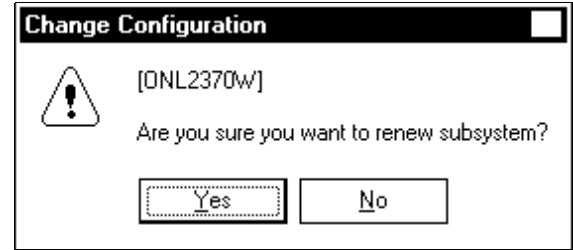


2.
“The Shared Memory PCB is being blocked...”
“The Cache Memory PCB is being blocked...”
“Lighting LED of the PCB...” is displayed.

3. <Perform cache hardware installation>
At this point refrain from pressing the [OK] button.
When “Replace or insert the Memory PCB(s) of cluster-x.
When completed, please press OK.” is displayed, install
hardware components according to the cache hardware
installation procedure.


Make sure of the installation location and size of the module
to be added and insert the correct module in the correct
location.

(Uninstalled module is displayed as looks depressed.)

(A PCB to be added)

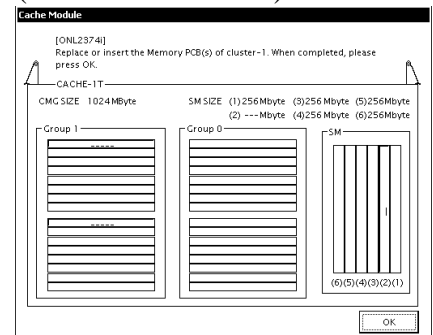

(Two PCBs to be added)

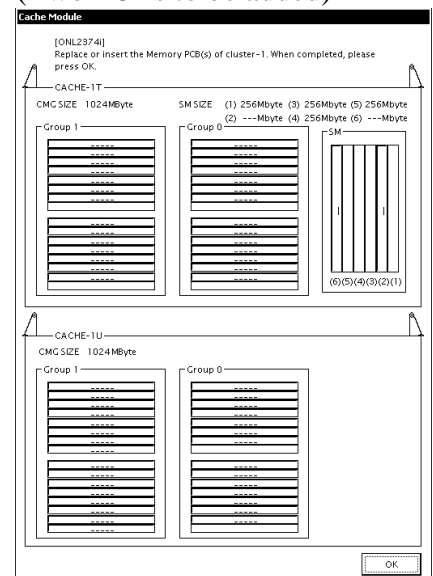

3. Install the Cache Memory on the cluster 1.

Be sure to wear your wrist strap and attach to ground prior to performing the following work.
This will ensure that the IC and LSI on the PCB are protected from static electricity.

3-1. Remove the PCB.

- a. While referring to Fig. 3.7.2-1 and Table 3.7.2-2, check the Shut Down LED on the Cache Memory PCB. Connect the Maintenance Jumper to the Shut Down Connector if the Shut Down LED is not on. (This procedure [3-1 a.] is not valid for a New Installation.)

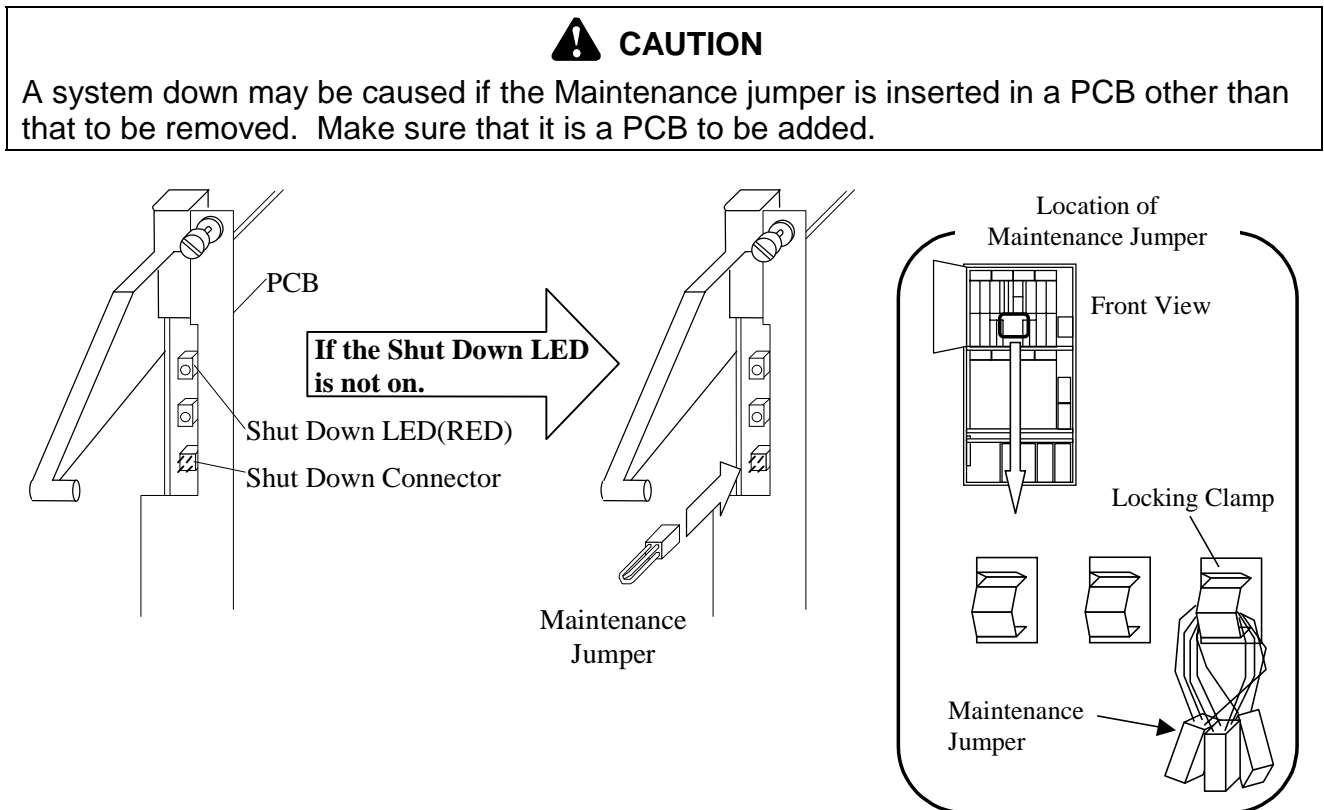


Fig. 3.7.2-1 Location of the Shut Down LED

Table 3.7.2-2 Location of the Cache Memory PCB

Cluster	PCB Name	Box	Slot No.	Location No.	Remarks
1	WP490-A	Front Logic Box	E	CACHE-1E	Cache Memory PCB

- b. Remove the two screws and remove the Cache Memory PCB.

Front Logic Box

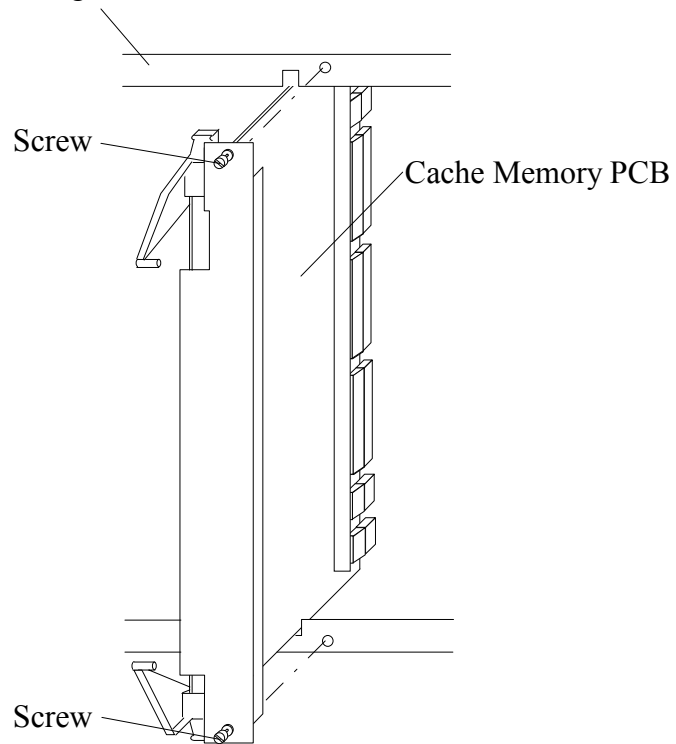


Fig. 3.7.2-2 Removal of the Cache Memory PCB

- c. Remove the Maintenance Jumper if it is mounted.

3-2. Insert the Cache Memory Modules.

- Remove the dust covers that match the required Cache Memory capacity referring to Fig. 3.7.2-3 and Table 3.7.2-3.
- Insert the Cache Memory Modules that match the required Cache Memory capacity.

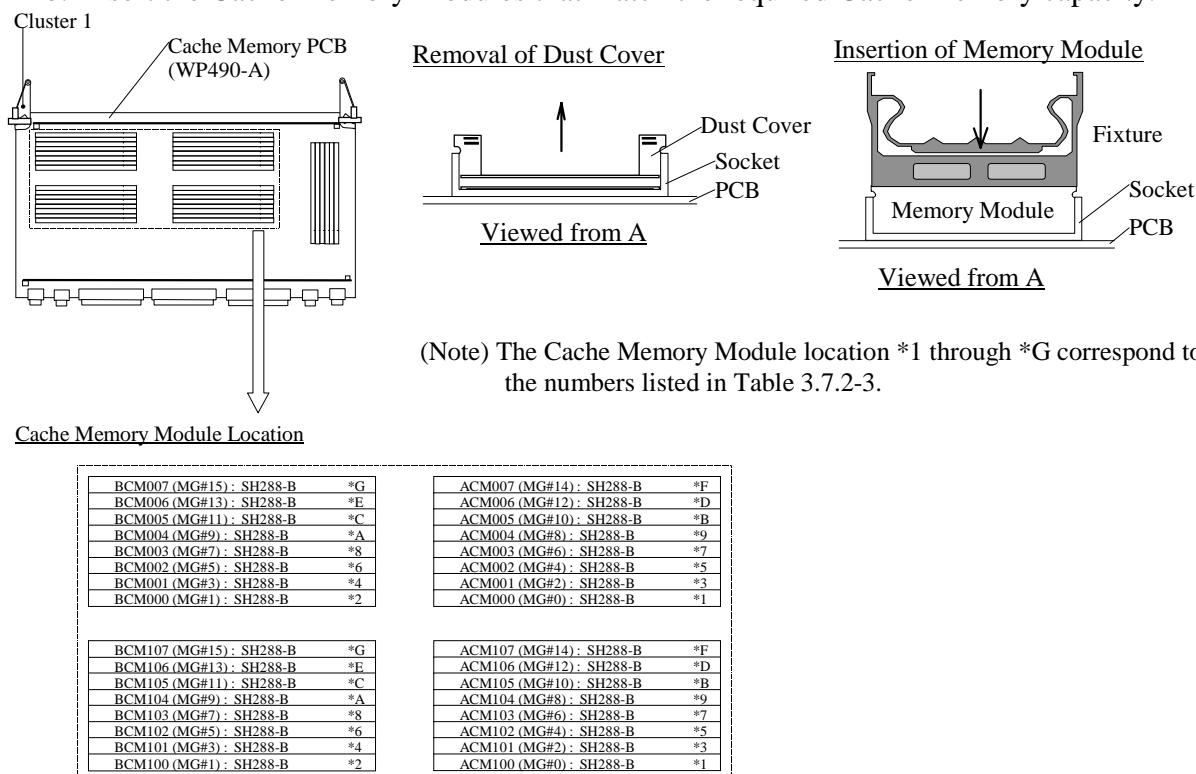


Fig. 3.7.2-3 Inserting Location of the Cache Memory Module

Table 3.7.2-3 Number of CMs and Corresponding Cache Memory Capacity
(When the Cache Memory was composed only of DKC-F460I-2048)

No. (Note 2)	Cache Memory capacity (×2)		Model No.	Cluster 1	
	From (Note 1)	To (Note 1)		Part name	Quantity
1	0 GB	1 GB	DKC-F460I-2048 1 set	SH288-B	2
2	1 GB	2 GB	DKC-F460I-2048 2 sets	SH288-B	2
3	2 GB	3 GB	DKC-F460I-2048 3 sets	SH288-B	2
4	3 GB	4 GB	DKC-F460I-2048 4 sets	SH288-B	2
5	4 GB	5 GB	DKC-F460I-2048 5 sets	SH288-B	2
6	5 GB	6 GB	DKC-F460I-2048 6 sets	SH288-B	2
7	6 GB	7 GB	DKC-F460I-2048 7 sets	SH288-B	2
8	7 GB	8 GB	DKC-F460I-2048 8 sets	SH288-B	2
9	8 GB	9 GB	DKC-F460I-2048 9 sets	SH288-B	2
A	9 GB	10 GB	DKC-F460I-2048 10 sets	SH288-B	2

(To be continued.)

(Continued from preceding sheet.)

No. (Note 2)	Cache Memory capacity (×2)		Model No.	Cluster 1	
	From (Note 1)	To (Note 1)		Part name	Quantity
B	10 GB	11 GB	DKC-F460I-2048 11 sets	SH288-B	2
C	11 GB	12 GB	DKC-F460I-2048 12 sets	SH288-B	2
D	12 GB	13 GB	DKC-F460I-2048 13 sets	SH288-B	2
E	13 GB	14 GB	DKC-F460I-2048 14 sets	SH288-B	2
F	14 GB	15 GB	DKC-F460I-2048 15 sets	SH288-B	2
G	15 GB	16 GB	DKC-F460I-2048 16 sets	SH288-B	2

Note 1: This value is a half value of whole capacity of cache memories. (the capacity of cache memories on the one side)

Note 2: The above numbers represent the Cache Memory Module locations shown in Fig. 3.7.2-3.

3-3. Insert the PCB.

- Insert the Cache Memory PCB referring to Table 3.7.2-4.
- Fasten the two screws.

Table 3.7.2-4 Location of the Cache Memory PCB


Cluster	PCB Name	Box	Slot No.	Location No.	Remarks
1	WP490-A	Front Logic Box	E	CACHE-1E	Cache Memory PCB

4. SVP post procedure on the Cluster 1.


1.

After installation of cache memory on one side is completed, select (CL) [OK] in response to “Replace or insert the Memory PCBs of cluster-1. When completed, please press [OK].”.

(A PCB to be added)

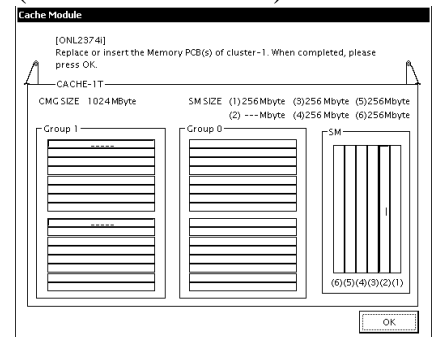

(Two PCBs to be added)

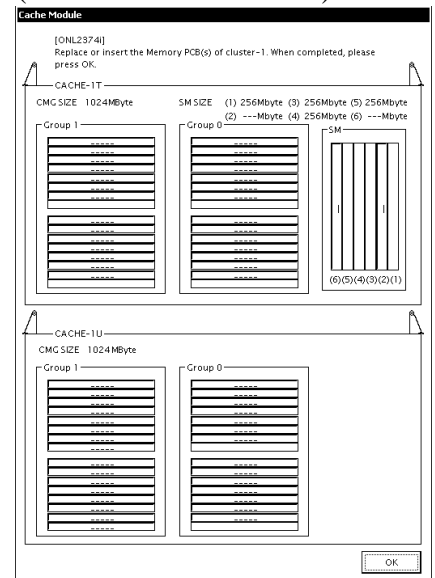

2. <Cache CUDG executes>
“INLINE CUDG is now running...” is displayed.

3.

“Changing the configuration date, for equipment of shared/cache memory...”
“Restoring the Cache Memory PCB...”
“Restoring the Shared Memory PCB...” is displayed.

5. SVP pre procedure on the Cluster 2.

1. <Recover one side of cache>

When recovery processing is completed,
 “The Cache Memory PCB is being blocked...”
 “The Shared Memory PCB is being blocked...”
 “Lighting LED of the PCB...” message appears.
 Processing proceeds to blocking of the other side of Cache Memory.


2. <Perform cache hardware installation>

At this point refrain from pressing the [OK] button.
 When “Replace or insert the Memory PCB(s) of cluster-2.
 When completed, please press OK.” is displayed, install
 hardware components according to the cache hardware
 installation procedure.


Make sure of the installation location and size of the module
 to be added and insert the correct module in the correct
 location.

(Uninstalled module is displayed as looks depressed.)

(A PCBs to be added)

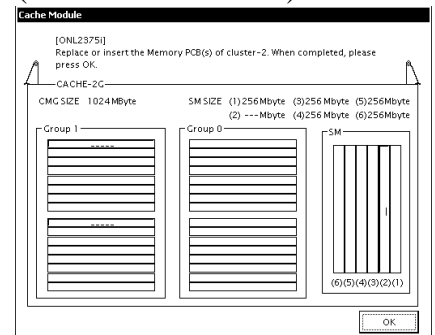

(Two PCBs to be added)

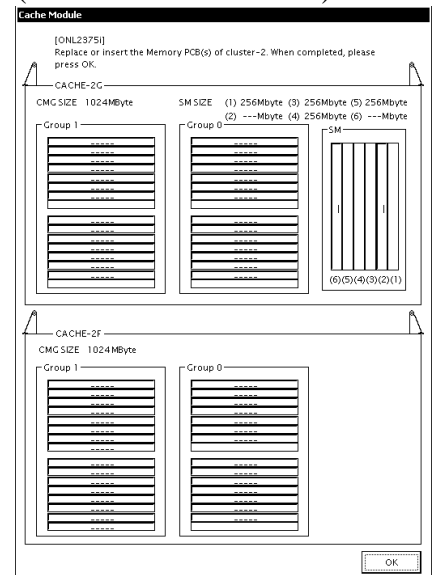

6. Install the Cache Memory and Shared Memory on the cluster 2.
Be sure to wear your wrist strap and attach to ground prior to performing the following work.
This will ensure that the IC and LSI on the PCB are protected from static electricity.

6-1. Remove the PCB.

- a. While referring to Fig. 3.7.2-4 and Table 3.7.2-5, check the Shut Down LED on the Cache Memory PCB. Connect the Maintenance Jumper to the Shut Down Connector if the Shut Down LED is not on. (This procedure [6-1. a.] is not valid for a New Installation.)

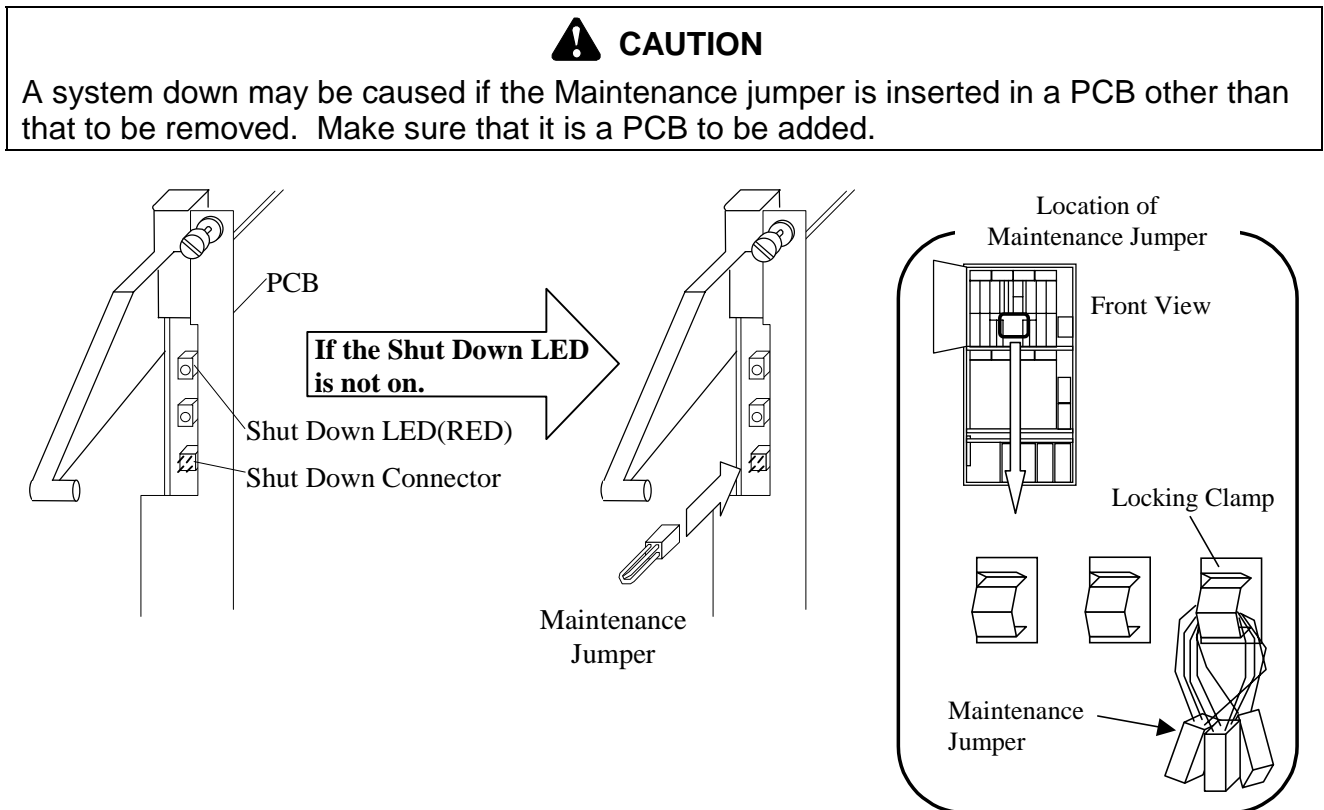


Fig. 3.7.2-4 Location of the Shut Down LED

Table 3.7.2-5 Location of the Cache Memory PCB

Cluster	PCB Name	Box	Slot No.	Location No.	Remarks
2	WP490-A	Front Logic Box	H	CACHE-2H	Cache Memory PCB

- b. Remove the two screws and remove the Cache Memory PCB.

Front Logic Box

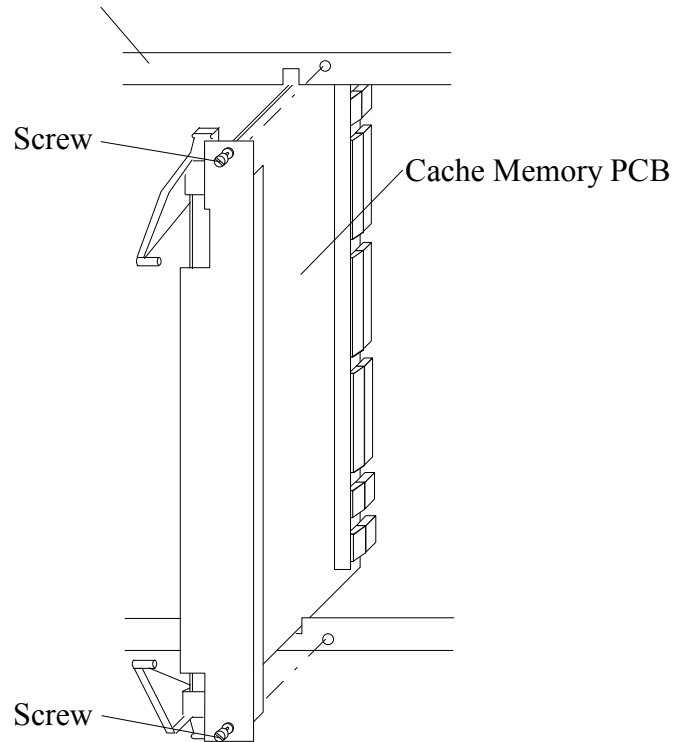


Fig. 3.7.2-5 Removal of the Cache Memory PCB

- c. Remove the Maintenance Jumper if it is mounted.

6-2. Insert the Cache Memory Modules.

- Remove the dust covers that match the required Cache Memory capacity referring to Fig. 3.7.2-6 and Table 3.7.2-6.
- Insert the Cache Memory Modules that match the required Cache Memory capacity.

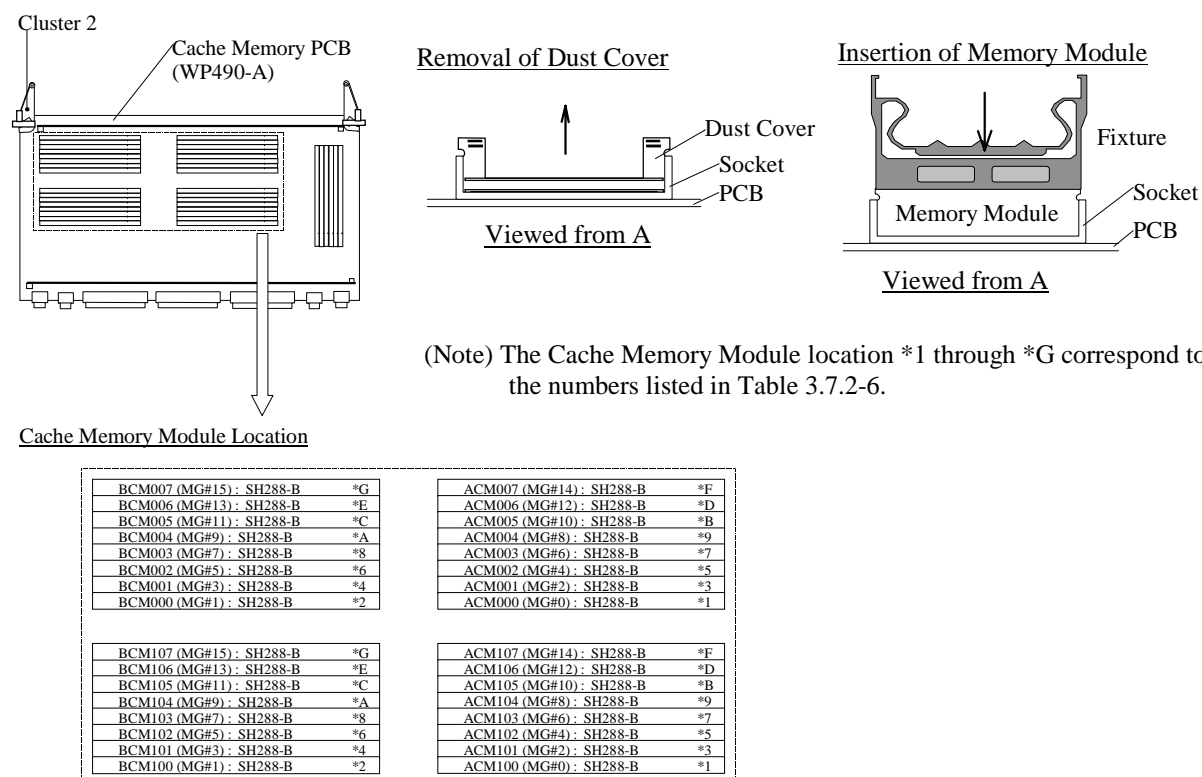


Fig. 3.7.2-6 Inserting Location of the Cache Memory Module

Table 3.7.2-6 Number of CMs and Corresponding Cache Memory Capacity
(When the Cache Memory was composed only of DKC-F460I-2048)

No. (Note 2)	Cache Memory capacity (×2)		Model No.	Cluster 2	
	From (Note 1)	To (Note 1)		Part name	Quantity
1	0 GB	1 GB	DKC-F460I-2048 1 set	SH288-B	2
2	1 GB	2 GB	DKC-F460I-2048 2 sets	SH288-B	2
3	2 GB	3 GB	DKC-F460I-2048 3 sets	SH288-B	2
4	3 GB	4 GB	DKC-F460I-2048 4 sets	SH288-B	2
5	4 GB	5 GB	DKC-F460I-2048 5 sets	SH288-B	2
6	5 GB	6 GB	DKC-F460I-2048 6 sets	SH288-B	2
7	6 GB	7 GB	DKC-F460I-2048 7 sets	SH288-B	2
8	7 GB	8 GB	DKC-F460I-2048 8 sets	SH288-B	2
9	8 GB	9 GB	DKC-F460I-2048 9 sets	SH288-B	2
A	9 GB	10 GB	DKC-F460I-2048 10 sets	SH288-B	2

(To be continued.)

(Continued from preceding sheet.)

No. (Note 2)	Cache Memory capacity (×2)		Model No.	Cluster 2	
	From (Note 1)	To (Note 1)		Part name	Quantity
B	10 GB	11 GB	DKC-F460I-2048 11 sets	SH288-B	2
C	11 GB	12 GB	DKC-F460I-2048 12 sets	SH288-B	2
D	12 GB	13 GB	DKC-F460I-2048 13 sets	SH288-B	2
E	13 GB	14 GB	DKC-F460I-2048 14 sets	SH288-B	2
F	14 GB	15 GB	DKC-F460I-2048 15 sets	SH288-B	2
G	15 GB	16 GB	DKC-F460I-2048 16 sets	SH288-B	2

Note 1: This value is a half value of whole capacity of cache memories. (the capacity of cache memories on the one side)

Note 2: The above numbers represent the Cache Memory Module locations shown in Fig. 3.7.2-6.

6-3. Insert the PCB.

- Insert the Cache Memory PCB referring to Table 3.7.2-7.
- Fasten the two screws.

Table 3.7.2-7 Location of the Cache Memory PCB

Cluster	PCB Name	Box	Slot No.	Location No.	Remarks
2	WP490-A	Front Logic Box	H	CACHE-2H	Cache Memory PCB

6-4 Change the nameplate.

- Refer to Fig. 3.7.2-7 to paint out necessary numbers on the nameplate.

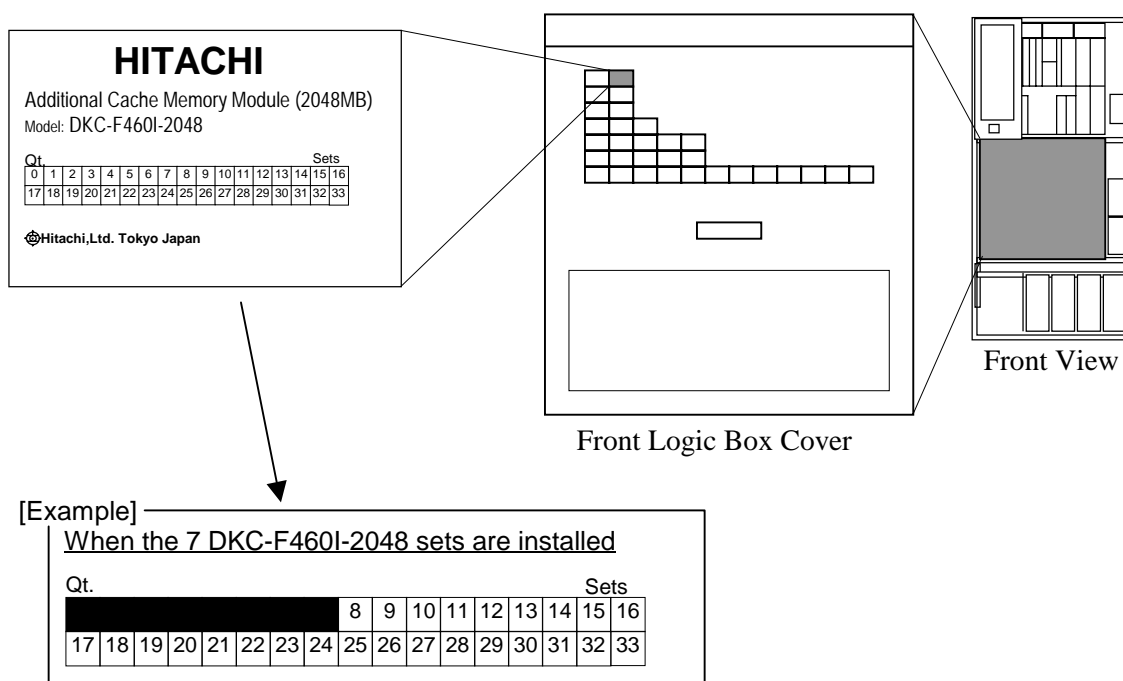



Fig. 3.7.2-7 Location of the Nameplate

7. SVP post procedure on the Cluster 2.


1.

After installation of cache memory on one side is completed, select (CL) [OK] in response to “Replace or insert the Memory PCBs of cluster-2. When completed, please press [OK].”.

(A PCB to be added)

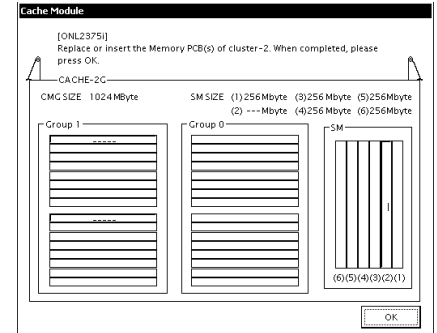


(Two PCBs to be added)

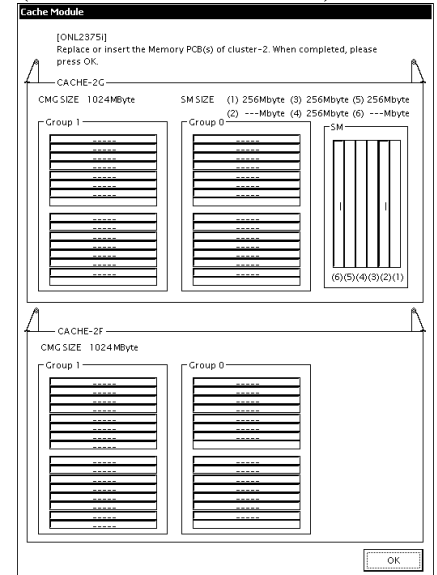


2. <Cache CUDG executes>
“INLINE CUDG is now running...” is displayed.

3.
“Changing the configuration date, for equipment of shared/cache memory...”
“Restoring the Cache Memory PCB...”
“Restoring the Shared Memory PCB...” is displayed.


4. <End of system update processing>
 “Renewal process has completed. Please check subsystem status.” is displayed when recovery processing on all installed components is completed. Select (CL) [OK] in response to this message.

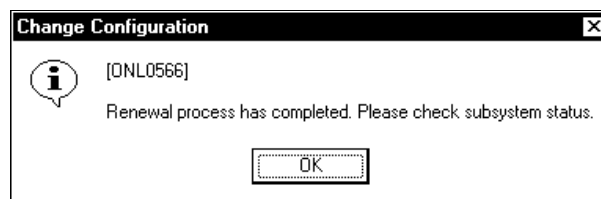


5. “Reading subsystem configuration data...” is displayed.
 “Please insert the Config FD in the FDD.” is displayed.
 Insert the configuration FD into FDD, and select (CL) [OK].

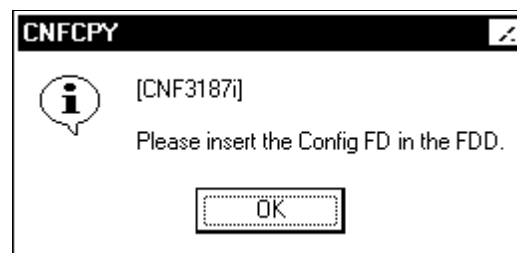

6. When this procedure is completed, the message “Please remove the Config FD.” is displayed.
 Remove the FD, and select (CL) [OK].

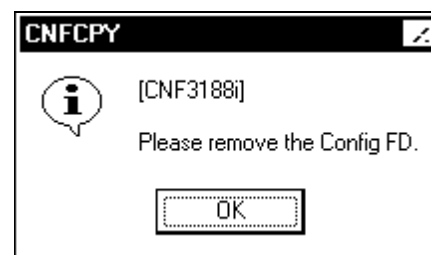

7. After the procedure is completed, return to [Install].
 Select (CL) [File]-[Exit].

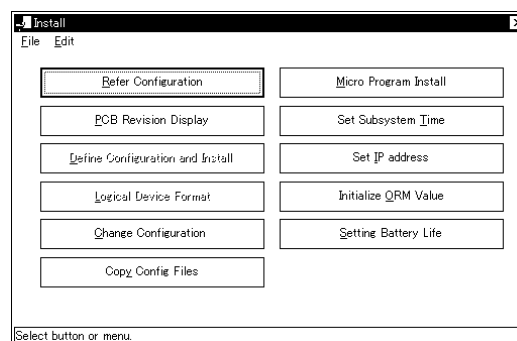

8. <Mode Change>
 Change the mode to View Mode.

3.8 Installation of Additional Disk Adapter, Additional Disk Port Switch, Disk Path Expansion Kit and HDD Canister (DKC-F465I-100/FSW/FSW2, DKC-F460I-200, DKU-F455I-36K4/36K1/72J4/72J1)

Table 3.8-1 Parts List

No.	Model Number	Parts Name	Parts No.	Quantity	Remarks
1	DKC-F465I-100	Disk Adapter PCB	5513979-A	2	Color of PCB Lever: Blue
		Nameplate (HDS)	2105894-7	1	RSD
			2105895-7/207		HICAM/HICEF
2	DKC-F460I-200	Disk Adapter PCB	5513979-B	2	Color of PCB Lever: Blue
		Nameplate (HDS)	2105902-103	1	RSD
			2105903-103/203		HICAM/HICEF
		Nameplate (HP)	2105902-203	1	RSD
			2105903-303/403		HICAM/HICEF
3	DKC-F465I-FSW	FSW PCB	5513854-B	8	
		Nameplate (HDS)	2105894-8	1	RSD
			2105895-8/208		HICAM/HICEF
		Nameplate (HP)	2105894-108	1	RSD
			2105895-108/308		HICAM/HICEF
4	DKC-F465I-FSW2	FSW PCB	5513854-C	8	
		Nameplate (HDS)	2105894-9	1	RSD
			2105895-9/209		HICAM/HICEF
		Nameplate (HP)	2105894-109	1	RSD
			2105895-109/309		HICAM/HICEF
5	DKU-F455I-36K4	HDU450-36K1FC	5515544-A	4	
		Nameplate(HDS)	2105914-6/14/22	1	RSD/HICAM/HICEF
		Nameplate(HP)	2105914-50/54/58	1	RSD/HICAM/HICEF
6	DKU-F455I-36K1	HDU450-36K1FC	5515544-A	1	
		Nameplate(HDS)	2105914-5/13/21	1	RSD/HICAM/HICEF
		Nameplate(HP)	2105914-49/53/57	1	RSD/HICAM/HICEF
7	DKU-F455I-72J4	HDU450-72J1FC	5513873-A	4	
		Nameplate(HDS)	2105914-8/16/24	1	RSD/HICAM/HICEF
		Nameplate(HP)	2105914-52/56/60	1	RSD/HICAM/HICEF
8	DKU-F455I-72J1	HDU450-72J1FC	5513873-A	1	
		Nameplate(HDS)	2105914-7/15/23	1	RSD/HICAM/HICEF
		Nameplate(HP)	2105914-51/55/59	1	RSD/HICAM/HICEF

3.8.1 Flowchart

There are four cases (① to ④) of these addition works as shown in the following table because two or more options are to be added at the same time. Perform the work referring to the flowchart of each work.

Case	Option Installation Procedure	Page
①	When only HDD Canister is to be installed (DKU-F455I-36K1/36K4/72J1/72J4)	INST03-DKA-30
②	When HDD Canister and FSW are to be installed at the same time (DKC-F465I-FSW, DKU-F455I-36K1/36K4/72J1/72J4)	INST03-DKA-30
③	When HDD Canister, DKA and FSW are to be installed at the same time (DKC-F460I-FSW2, DKC-F460I-200, DKU-F455I-36K1/36K4/72J1/72J4)	INST03-DKA-30
④	When HDD Canister DKA and FSW are to be installed at the same time (Only new installation) (DKC-F465I-100/FSW/FSW2, DKC-F460I-200, DKU-F455I-36K1/36K4/72J1/72J4)	INST03-DKA-30

① When only HDD Canister is to be installed ----- [INST03-DKA-40 through 170]

1. Setting up the New Device Structure Information



2. Installation Procedure of HDD Canister



3. SVP post procedure

② When HDD Canister and FSW are to be installed at the same time

----- [INST03-DKA-180 through 330]

1. Setting up the New Device Structure Information



2. Installation Procedure of Additional Disk Port Switch



3. Installation Procedure of HDD Canister



4. SVP post procedure

③ When HDD Canister, DKA and FSW are to be installed at the same time

----- [INST03-DKA-340 through 520]

1. Setting up the New Device Structure Information



2. Installation Procedure of Additional Disk Adapter



3. Installation Procedure of Disk Path Expansion Kit



4. Installation Procedure of HDD Canister



5. SVP post procedure

④ When HDD Canister, DKA and FSW are to be installed at the same time

----- [INST03-DKA-530 through 620]

1. Installation Procedure of Additional Disk Adapter



2. Installation Procedure of Additional Disk Port Switch and Disk Path Expansion Kit




3. Installation Procedure of HDD Canister

3.8.2 When only HDD Canister is to be installed (DKU-F455I-36K4/36K1/72J4/72J1)


1. Setting up the New Device Structure Information

1. <Mode Change>
Change the mode to Modify Mode.
Select (CL) [Install].


2. <Start the 'Menu Dialog' screen>
Select (CL) [Change Configuration].

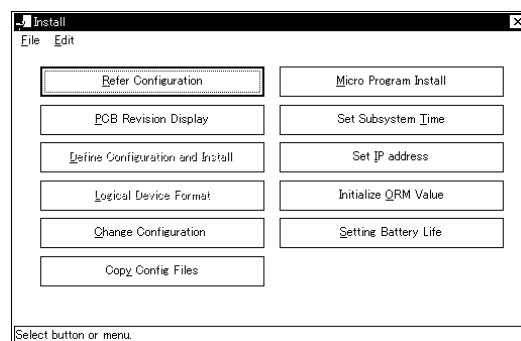

3. <Start Device Structure Setup screen>
Select (CL) [Installation] in the 'Menu Dialog' dialog box and select (CL) [OK].

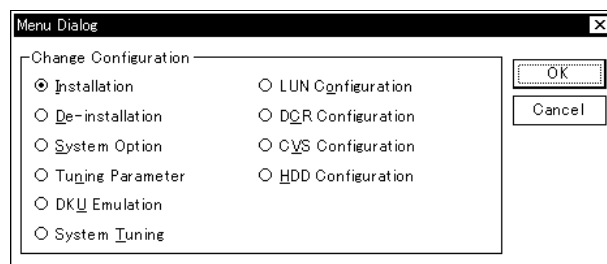

4. <Select a part to be changed>
Select (CL) [DKA + ECC group + LDEV], and select (CL) [OK].

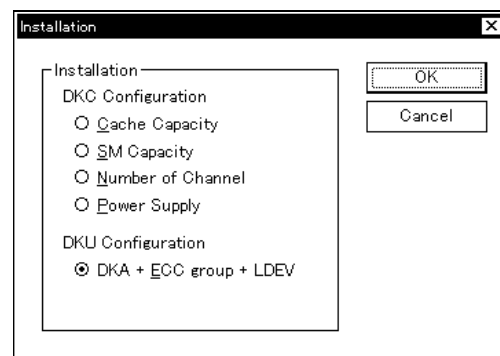

5. <Update Configuration Information>

Define the number of CU in DKC in the 'DKC Configuration' window.

Make sure that the entered item is correct and select (CL) [>>Next].

Note: There may be a case where an addition of the SM is required to add the CU.

When adding the SM, refer to page [INST03-SM-10](#).

The screenshot shows the 'DKC Configuration' window with the following fields and options:

- DVC:** Serial No. (00000), Number of CU (04), System Option, Power Supply.
- IP Address:** IP Address (126.255.255.15), Subnet Mask (255.0.0.0), IP Address Configuration.
- Cache:** Basic: CM0=512MB, SW=512MB/2, On-Demand=5MB/2, Option: Not installed, Total cache size: 512MB/2, DCR available: 256MB/2, Cache Configuration.
- CHA:** Basic (checked), Option (checked), Option 2, Option 3.
- DEA:** Number of DEA (2), Cancel, >> Next.

8. <Change Drive Configuration Information>


Define drive configuration according to the 'Physical Device Configuration' screen.

Detailed procedure is shown below.

[Set...]: Defines the parity group or spare disk. The routine proceeds to Step 8-1.

[Clear...]: Cancels the setting of the B4.

After setting up all items, select (CL) [>>Next]. Go to step 9.

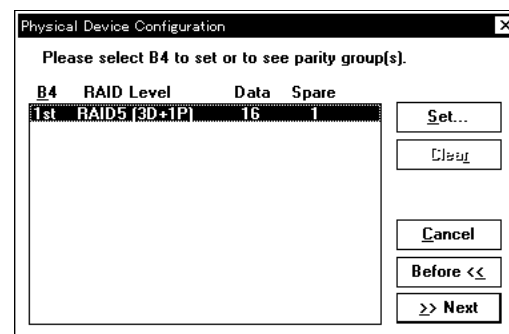

Selecting (CL) [Before<<] returns you to the previous screen.

[Multi Cabinet Model]

B4	Location	B4	Location
1st	HDU-R10, 11, 12, 13	7th	HDU-L20, 21, 22, 23
2nd	HDU-R14, 15, 16, 17	8th	HDU-L24, 25, 26, 27
3rd	HDU-L10, 11, 12, 13	9th	HDU-R30, 31, 32, 33
4th	HDU-L14, 15, 16, 17	10th	HDU-R34, 35, 36, 37
5th	HDU-R20, 21, 22, 23	11th	HDU-L30, 31, 32, 33
6th	HDU-R24, 25, 26, 27	12th	HDU-L34, 35, 36, 37

Note: The 9th to 12th of the B4 are valid only when the DKUs for the RAID 400 are connected.

[Single Cabinet Model]

B4	Location	Comment
1st	HDU-0, 1, 2, 3	HDD-X00 ~ X0F
2nd	HDU-0, 1, 2, 3	HDD-X10 ~ X1F

8-1. <Define Parity Group>


[Group...]: Defines the parity group. See Step 8-1-1.

[Spare...]: Defines the spare drive. See Step 8-1-2.

[Delete]: Deletes the added parity group or spare drive.


Note: If you want to set any Spare Drive in B4, please define the Spare Drive first.

After setting up all items, select (CL) [OK]. Return to step 8.

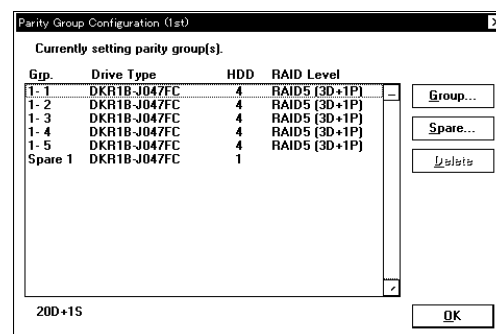

- To display LDEV ID in Parity group, select an item to be displayed and select (DC) this item on list box. The 'Device List' dialog box will appear.


“(no LDEV)” is displayed for the added parity group.

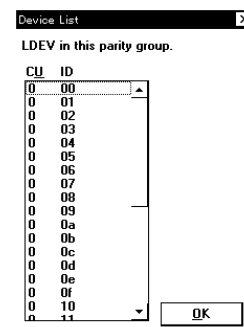

8-1-1.

Define the RAID Level and the Drive Type and the Number of Group in the 'Parity Group' dialog box.

Then select (CL) [OK]. Return to step 8-1.

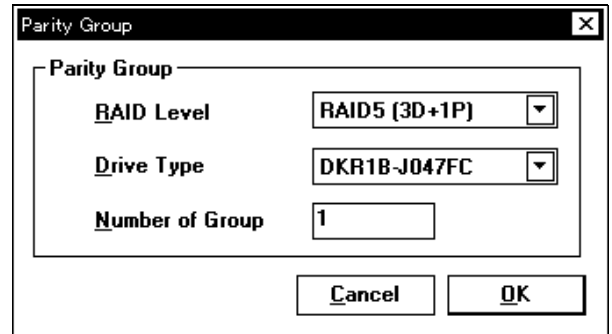

Parity Group dialog box showing the following fields:


- RAID Level:** RAID5 (3D+1P)
- Drive Type:** DKR1B-J047FC
- Number of Group:** 1

Buttons: Cancel, OK

8-1-2.

Define the RAID Level and the Drive Type and the Number of Spare in the 'Spare' dialog box.

Then select (CL) [OK]. Return to step 8-1.

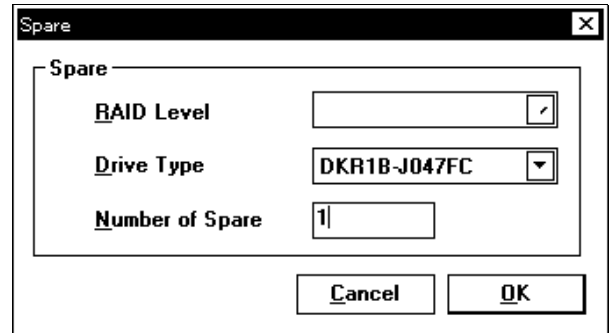

Spare dialog box showing the following fields:

- RAID Level:** (empty)
- Drive Type:** DKR1B-J047FC
- Number of Spare:** 1

Buttons: Cancel, OK

9. <Define Device Emulation>

After setting up all items for definition of Device Emulation, select (CL) [>>Next].

Selecting (CL) [Before<<] returns you to the previous screen.

For defining Device Emulation:


Select (CL) parity group and select (CL) [Set...].

Go to step 9-1

For detailed display:

Select (CL) parity group and select (CL) [Detail...].

The detailed information is displayed.

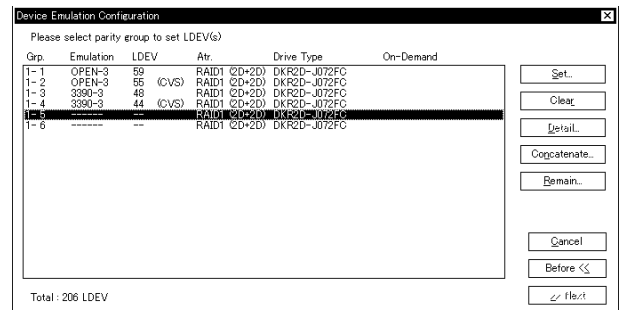

Device Emulation Configuration dialog box showing a table of configurations:

Grp.	Emulation	LDEV	Atr.	Drive Type	On-Demand
1-1	OPEN-3	59		RAID1 (2D+2D)	DKR2D-J072FC
1-2	OPEN-3	55	(CVS)	RAID1 (2D+2D)	DKR2D-J072FC
1-3	3390-3	48		RAID1 (2D+2D)	DKR2D-J072FC
1-4	3390-3	44	(CVS)	RAID1 (2D+2D)	DKR2D-J072FC
1-5	3390-3	44	(CVS)	RAID1 (2D+2D)	DKR2D-J072FC
1-6	3390-3	44	(CVS)	RAID1 (2D+2D)	DKR2D-J072FC


Total : 206 LDEV

Buttons: Set..., Clear, Detail..., Copagate..., Remain..., Cancel, Before <<, Next >>

9-1.

After setting up all items in the 'Device Emulation Type Define' dialog box, select (CL) [OK].

Selecting (CL) [Cancel] returns you to step 9.

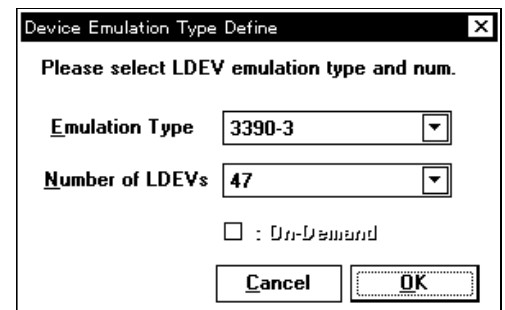

Device Emulation Type Define dialog box showing the following fields:

- Emulation Type:** 3390-3
- Number of LDEVs:** 47
- ☐ : On-Demand


Buttons: Cancel, OK

9-2. <Displaying remaining slot(s)>

The Remaining Slot window is displayed.

An allowable number of times of PDEV addition corresponding to the specified drive type is displayed.

Select (CL) the [OK]. The routine returns to Step 9.

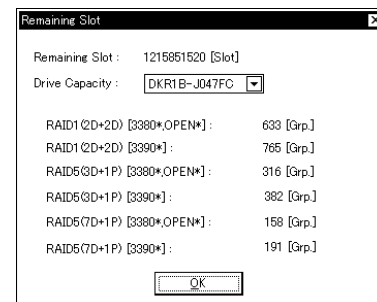

9-3. <Setting RAID concatenation>

Select (CL) [Concatenate...].


When you do not perform the RAID concatenation, return to Step 9.

9-4.

Parity groups to which the RAID concatenation can be applied are displayed in the Parity group List.

Select (CL) parity groups to which you want to apply the RAID concatenation and press (CL) the [>>] button.


Note: Only the parity groups, which have been added and to which the RAID concatenation can be applied are displayed in the Parity group List.

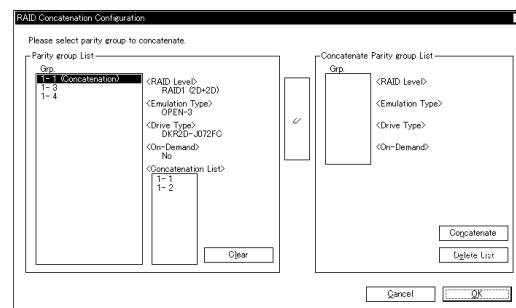

9-5.

The selected parity groups are registered in the Concatenate Parity group List. Then press (CL) the [Concatenate] button.

Note: The [Concatenate] button cannot be pressed if the concatenation does not meet a condition of the RAID concatenation. Adjust the number of the parity groups in the Concatenate Parity group List.

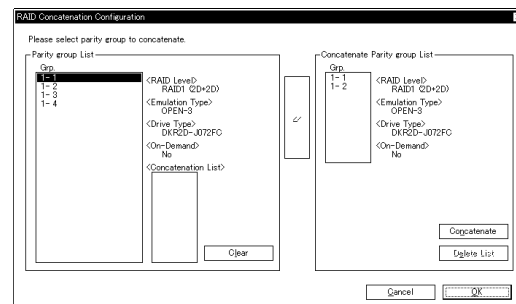


9-6.

When the RAID concatenation is completed, "(Concatenation)" is displayed in the Parity group List. Selecting the "(Concatenation)" displays the concatenated parity groups in the Concatenation List. Pressing the [Clear] button cancels the RAID concatenation.

When all the settings of the RAID concatenation are completed, press (CL) the [OK] button.

Pressing (CL) the [Cancel] button returns the routine to Step 9.

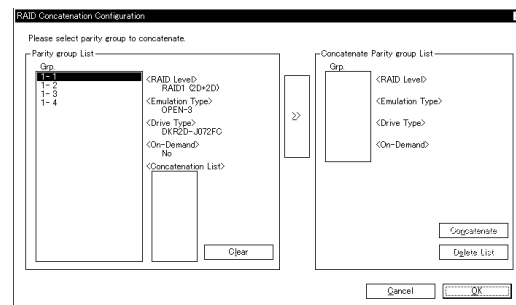

10. <Define LDEV ID>

Definition Screen for LDEV ID.

Select (CL) the parity group to be defined and select (CL) a function from the [LDEV ID] list box.

[Linear...]: LDEV ID is assigned to LDEV in the order of parity groups. See step 10-1.

[Disperse...]: LDEV is assigned discretely in the order of parity groups. See step 10-1.


[Detail...]: A screen to define LDEV in detail is displayed.

See step 10-2. (When plural groups are selected (CL), it is invalid.)

[Clear]: Select (CL) [Clear] to delete.

- '-----' is displayed in the Status area for the parity group to which LDEV ID is not assigned.

After setting up all items, select (CL) [>>Next]. (Go to Step 11)

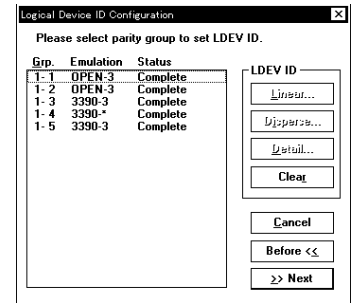

10-1. Detailed Definition Screen for LDEV ID


LDEV ID is defined in detail for each LDEV in the parity group.

Select (CL) LDEV from the list box and select (CL) [Change...].

The screen for LDEV ID input is displayed.

After setting, select (CL) [OK]. Return to step 10

- '-----' is displayed in the CU area and the ID area for the LDEV to which LDEV ID is not assigned.

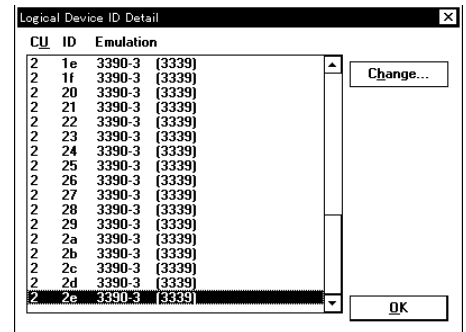

10-2. Input LDEV ID

Select CU ID in the CU combo box.


The status of usage of ID in the CU is displayed in the LDEV ID panel.

White disk of panel: not used

Patterned disk of panel: using


Input LDEV ID you want to set or the head LDEV ID in the ID Edit box.

After setting, select (CL) [OK]. Return to step 10-1

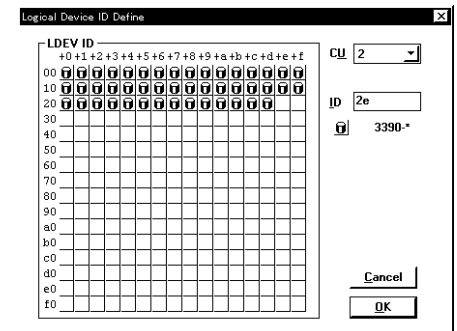

11. <Define Subsystem ID Boundary>


Press (CL) the [>>>Next] button to change the screen to the “Set SSID Boundary” screen.

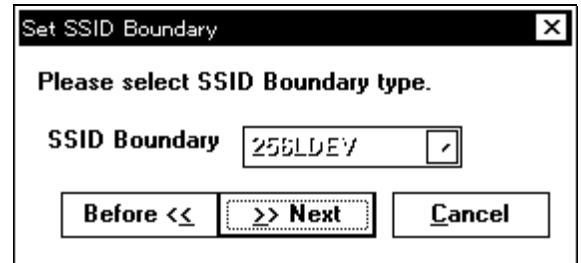

12. <Define Subsystem ID>


To define Subsystem ID, select (CL) the item from the list box and select (CL) [SSID]. See step 12-1.

After setting, select (CL) [>>>Next].

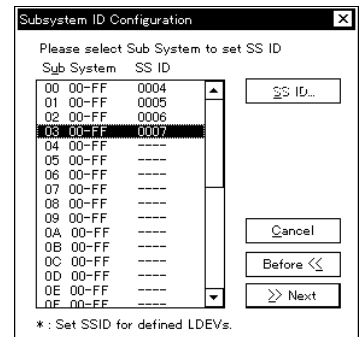

12-1. Define Subsystem ID and select (CL) [OK].


Return to step 12.

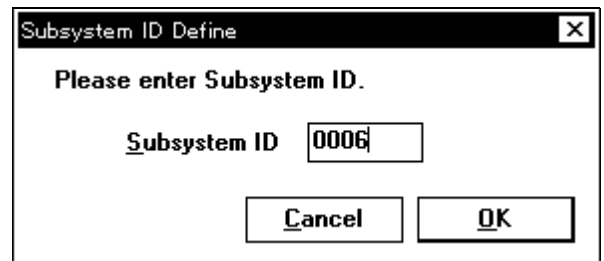

13. <Start installation>

Select (CL) [Yes] in response to “Are you sure you want to renew subsystem?”.

When [No] is selected (CL), returns to [INST03-DKA-40](#) step 3.

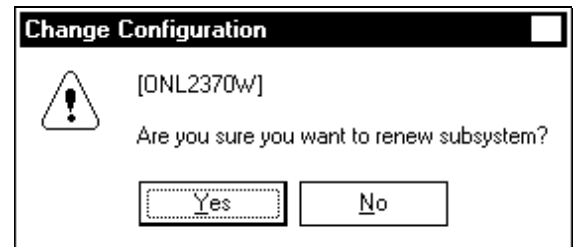

14. <Download microprogram>

Microprograms are automatically downloaded for each processor.


15. <Install DKA>

“Upgrading of the DKA...”

16. <Check that hardware components are installed>

At this point refrain from pressing the [OK] button.

“Please install the units in the system before starting this process. If installation has been completed, push OK.” is displayed.

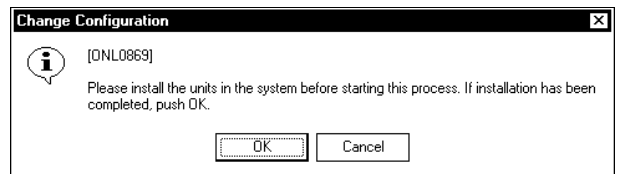

2. Installation Procedure of HDD Canister

2-1 Confirmation of position to install HDD canister

a. Confirm a position to install HDD canister.

No.	Model Number	Model Name	Data and Parity
1	DKU-F455I-36K4/72J4	4 HDD Canisters	Data and Parity Drive

(1) Entry Model or Full-spec Model (1 DKA Pair Model)

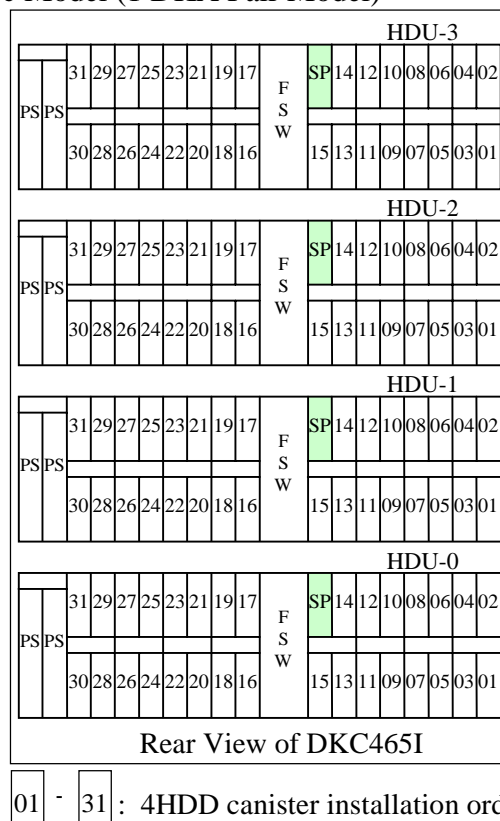


Fig. 3.8.2-1 Data Drive/Parity Drive Expansion Sequence (1 DKA Pair Model)

The relationship between HDDs installation order and RAID group number is shown in the following table.

Table 3.8.2-1 Relation between HDDs installation order and RAID group number (1 DKA Pair Model)

Group No.	Installation Order	Group No.	Installation Order	Group No.	Installation Order	Group No.	Installation Order
1-1	001	1-2	002	1-3	003	1-4	004
1-5	005	1-6	006	1-7	007	1-8	008
1-9	009	1-10	010	1-11	011	1-12	012
1-13	013	1-14	014	1-15	015	1-16	SP
1-17	016	1-18	017	1-19	018	1-20	019
1-21	020	1-22	021	1-23	022	1-24	023
1-25	024	1-26	025	1-27	026	1-28	027
1-29	028	1-30	029	1-31	030	1-32	031

(2) Full-spec Model (2 DKA Pairs Model)

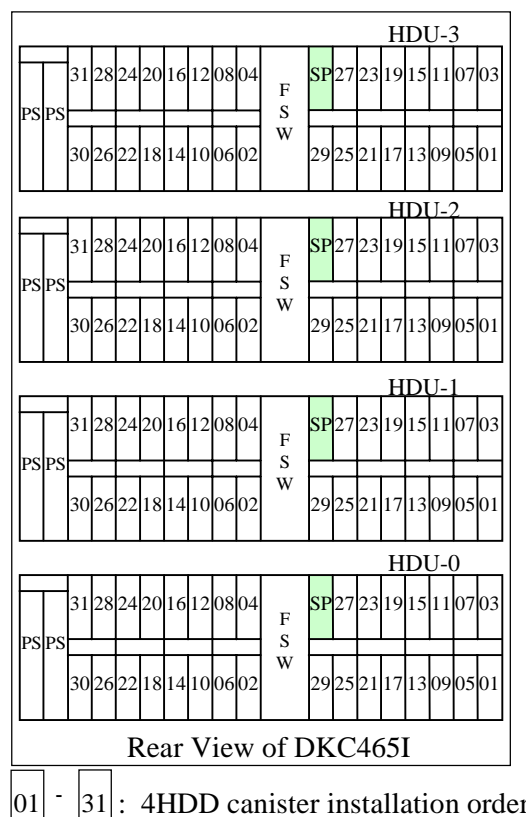


Fig. 3.8.2-2 Data Drive/Parity Drive Expansion Sequence


The relationship between HDDs installation order and RAID group number is shown in the following table.

Table 3.8.2-2 Relation between HDDs installation order and RAID group number (2 DKA Pairs Model)


Group No.	Installation Order	Group No.	Installation Order	Group No.	Installation Order	Group No.	Installation Order
1-1	001	1-2	003	1-3	005	1-4	007
1-5	009	1-6	011	1-7	013	1-8	015
1-9	017	1-10	019	1-11	021	1-12	023
1-13	025	1-14	027	1-15	029	1-16	SP
2-1	002	2-2	004	2-3	006	2-4	008
2-5	010	2-6	012	2-7	014	2-8	016
2-9	018	2-10	020	2-11	022	2-12	024
2-13	026	2-14	028	2-15	030	2-16	031

No.	Model Number	Model Name	Data and Parity
1	DKU-F455I-36K1/72J1	1 HDD Canister	Spare Drive

Entry Model or
Full-spec Model (1DKA Pair Model)

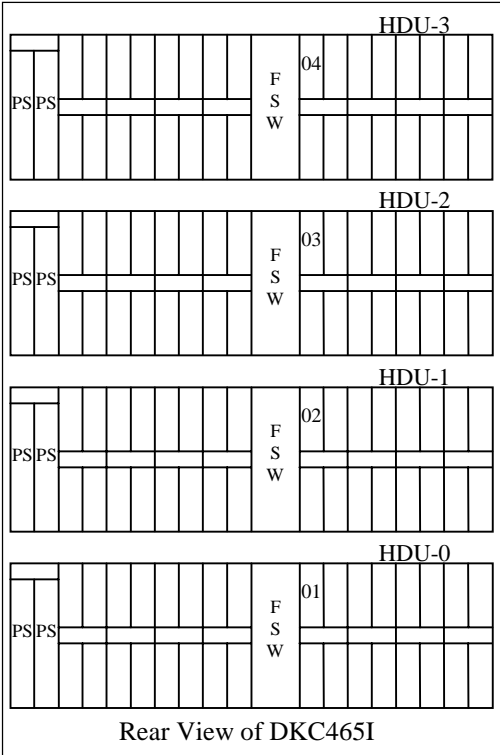

Full-spec Model (2DKA Pairs Model)

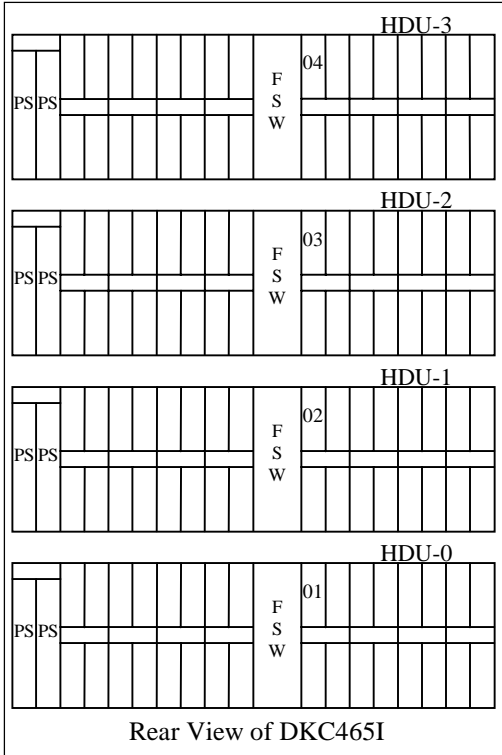

01 - 04 : Spare HDD canister installation order

Fig. 3.8.2-3 Spare Drive Expansion Sequence

2-2 Installation of the HDD Canister.

NOTICE:

Since the HDD is a precision component, handle it very carefully not to apply a vibration or shock to it.

- a. Remove the dummy canister from the HDU Box.
When the dummy canister cannot be removed by pulling of it only, remove it referring to page [INST03-DKA-630](#).
- b. Install the HDD canister. (For the detailed procedure for installation, refer to the procedure for installing HDD canister on page [INST03-DKA-640](#).)


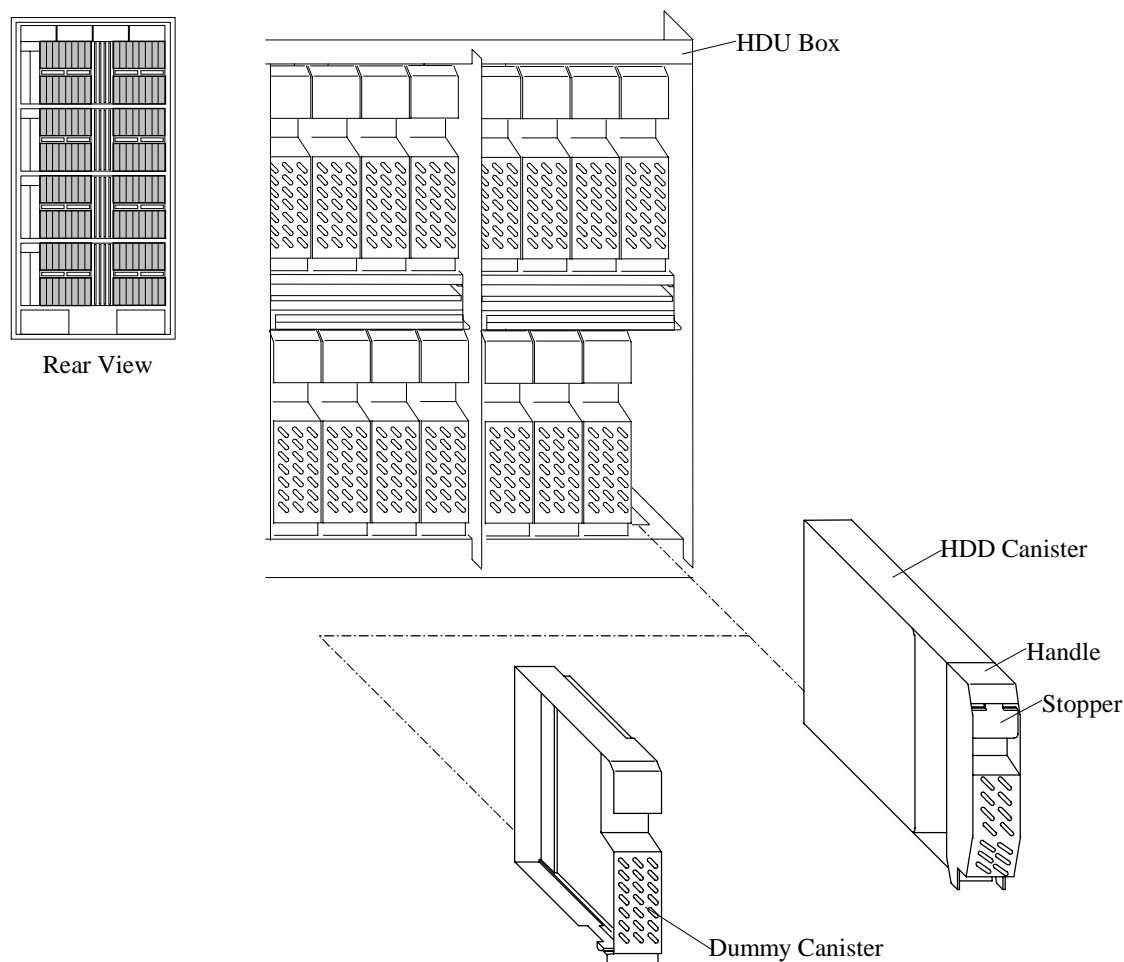


Fig. 3.8.2-4 Installation of HDD Canister

2-3 Attachment of the nameplate.

- a. When the corresponding nameplate is not attached, attach the nameplate from the left of cover. Paint out mounting numbers on the nameplate.

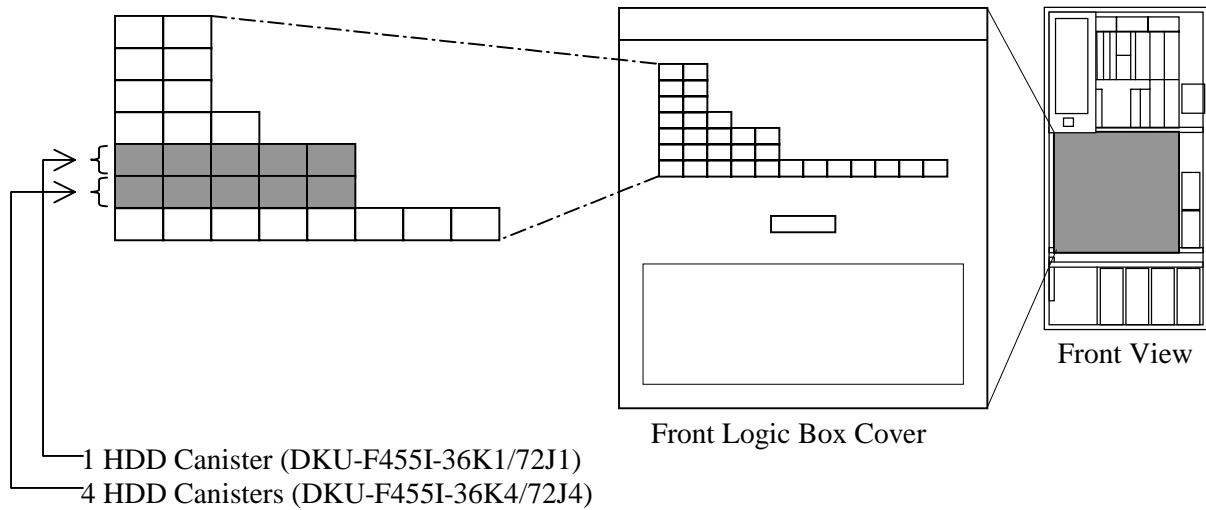

[Example]

When the 7 DKU-F455I-72J4 sets are installed


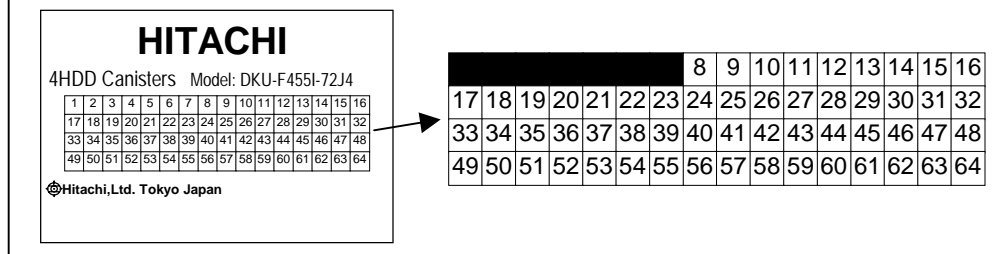


Fig. 3.8.2-5 Attachment of Nameplate

3. SVP post procedure

1. <Check that hardware components are installed>

Select (CL) [OK] after making sure that all hardware components are installed correctly in response to “Please install the units in the system before starting this process. If installation has been completed, push OK.”.

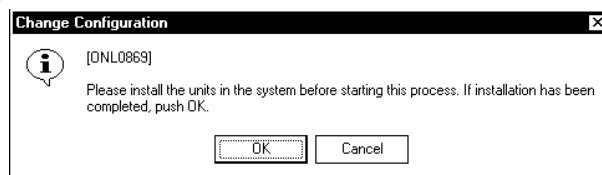


2. <DKU PATH INLINE>

When DKA is installed, “DKU PATH INLINE is now running...” is displayed.

3. <LDEV FORMAT>

“Formatting the logical device...” is displayed when Parity Group is defined.

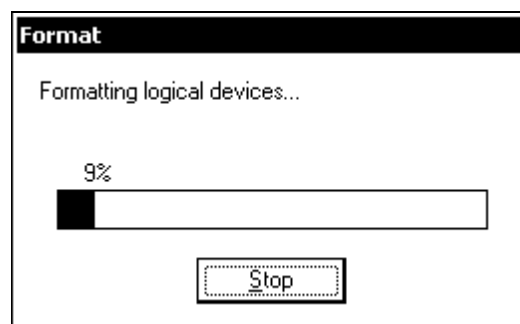

4. <End of system update processing>

“Renewal process has completed. Please check the subsystem status.” is displayed when recovery processing on all installed components is completed. Select (CL) [OK] in response to this message.




5.

“Reading subsystem configuration data...” is displayed.

“Please insert the Config FD in the FDD.” is displayed.


Insert the configuration FD into FDD, and select (CL) [OK].

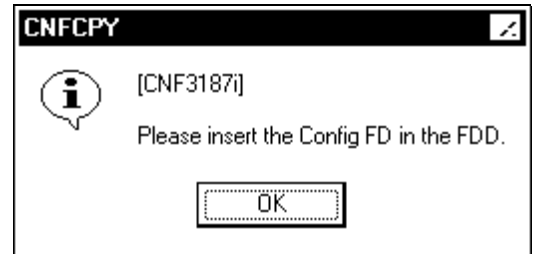

6.


When this procedure is completed, the message “Please remove the Config FD.” is displayed.

Remove the FD, select (CL) [OK].

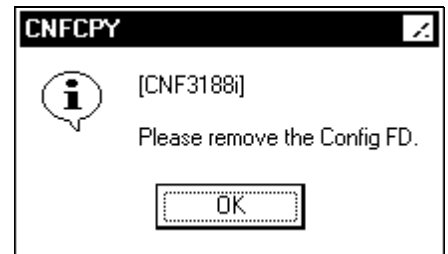

7.

After the procedure is completed, return to ‘Install’.
Select (CL) [File]-[Exit].

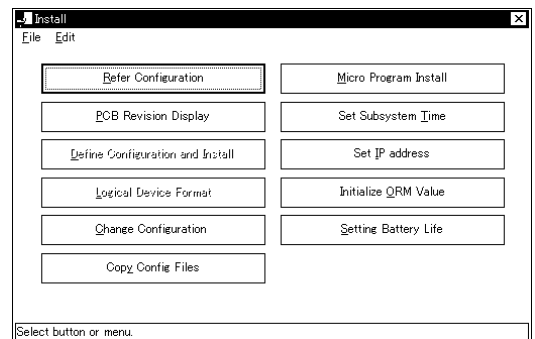

8.

<Mode Change>


Change the mode to View Mode.

3.8.3 When HDD Canister and FSW are to be installed at the same time (DKC-F465I-FSW, DKU-F455I-36K4/36K1/72J4/72J1)


1. Setting up the New Device Structure Information

1. <Mode Change>
Change the mode to Modify Mode.
Select (CL) [Install].


2. <Start the 'Menu Dialog' screen>
Select (CL) [Change Configuration].

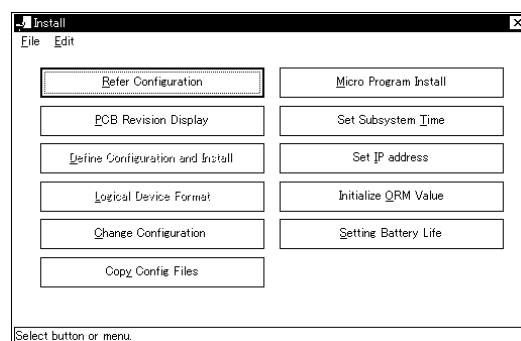

3. <Start Device Structure Setup screen>
Select (CL) [Installation] in the 'Menu Dialog' dialog box and select (CL) [OK].

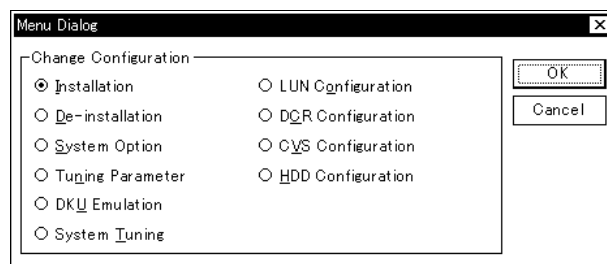

4. <Select a part to be changed>
Select (CL) [DKA + ECC group + LDEV], and select (CL) [OK].

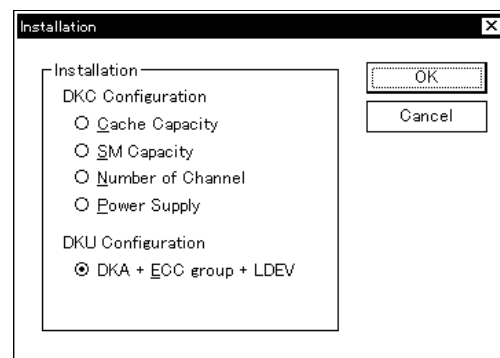

5. <Update Configuration Information>

Define the number of CU in DKC in the 'DKC Configuration' window.

Make sure that the entered item is correct and select (CL) [>>Next].

Note: There may be a case where an addition of the SM is required to add the CU.

When adding the SM, refer to page [INST03-SM-10](#).

The screenshot shows the 'DKC Configuration' window with the following fields and options:

- DVC**: Serial No. (00000), Number of CU (04), System Option, Power Supply.
- IP Address**: IP Address (126.255.255.15), Subnet Mask (255.0.0.0), IP Address Configuration.
- Cache**: Basic: CM0=512MB, SW=512MB/2, On-Demand=5MB/2, Option: Not installed, Total cache size: 512MB/2, DCR available: 256MB/2, Cache Configuration.
- CHA**: ☒ Basic, ☒ Option, ☐ Option 2, ☐ Option 3.
- DEA**: Number of DEA (2), Cancel, >> Next.

8. <Change Drive Configuration Information>


Define drive configuration according to the 'Physical Device Configuration' screen.

Detailed procedure is shown below.

[Set...]: Defines the parity group or spare disk. The routine proceeds to Step 8-1.

[Clear...]: Cancels the setting of the B4.

After setting up all items, select (CL) [>>Next]. Go to step 9.

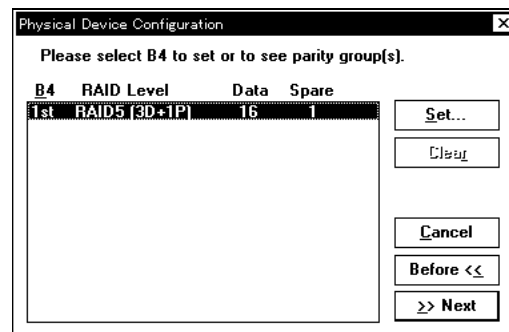

Selecting (CL) [Before<<] returns you to the previous screen.

[Multi Cabinet Model]

B4	Location	B4	Location
1st	HDU-R10, 11, 12, 13	7th	HDU-L20, 21, 22, 23
2nd	HDU-R14, 15, 16, 17	8th	HDU-L24, 25, 26, 27
3rd	HDU-L10, 11, 12, 13	9th	HDU-R30, 31, 32, 33
4th	HDU-L14, 15, 16, 17	10th	HDU-R34, 35, 36, 37
5th	HDU-R20, 21, 22, 23	11th	HDU-L30, 31, 32, 33
6th	HDU-R24, 25, 26, 27	12th	HDU-L34, 35, 36, 37

Note: The 9th to 12th of the B4 are valid only when the DKUs for the RAID 400 are connected.

[Single Cabinet Model]

B4	Location	Comment
1st	HDU-0, 1, 2, 3	HDD-X00 ~ X0F
2nd	HDU-0, 1, 2, 3	HDD-X10 ~ X1F

8-1. <Define Parity Group>


[Group...]: Defines the parity group. See Step 8-1-1.

[Spare...]: Defines the spare drive. See Step 8-1-2.

[Delete]: Deletes the added parity group or spare drive.


Note: If you want to set any Spare Drive in B4, please define the Spare Drive first.

After setting up all items, select (CL) [OK]. Return to step 8.

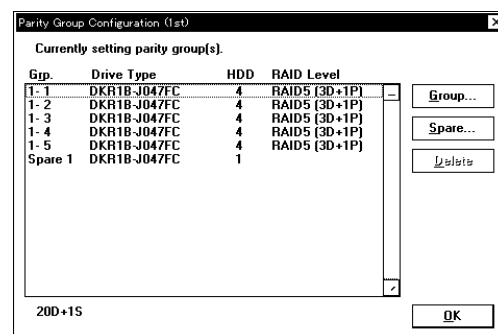

- To display LDEV ID in Parity group, select an item to be displayed and select (DC) this item on list box. The 'Device List' dialog box will appear.


“(no LDEV)” is displayed for the added parity group.

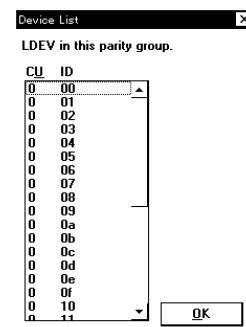

8-1-1.

Define the RAID Level and the Drive Type and the Number of Group in the 'Parity Group' dialog box.

Then select (CL) [OK]. Return to step 8-1.

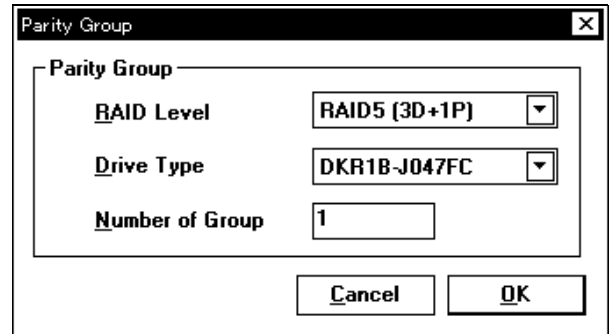

Parity Group dialog box showing configuration options:


- RAID Level:** RAID5 (3D+1P)
- Drive Type:** DKR1B-J047FC
- Number of Group:** 1

Buttons: Cancel, OK

8-1-2.

Define the RAID Level and the Drive Type and the Number of Spare in the 'Spare' dialog box.

Then select (CL) [OK]. Return to step 8-1.

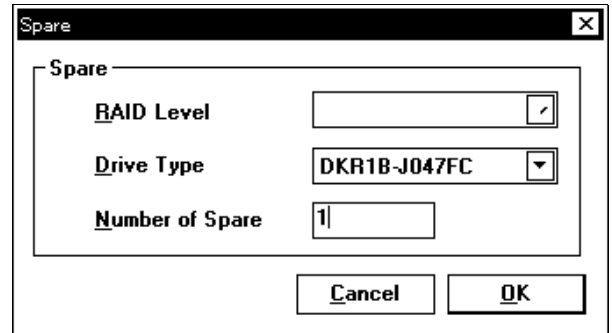

Spare dialog box showing configuration options:

- RAID Level:** (Empty)
- Drive Type:** DKR1B-J047FC
- Number of Spare:** 1

Buttons: Cancel, OK

9. <Define Device Emulation>

After setting up all items for definition of Device Emulation, select (CL) [>>Next].

Selecting (CL) [Before<<] returns you to the previous screen.

For defining Device Emulation:


Select (CL) parity group and select (CL) [Set...].

Go to step 9-1

For detailed display:

Select (CL) parity group and select (CL) [Detail...].

The detailed information is displayed.

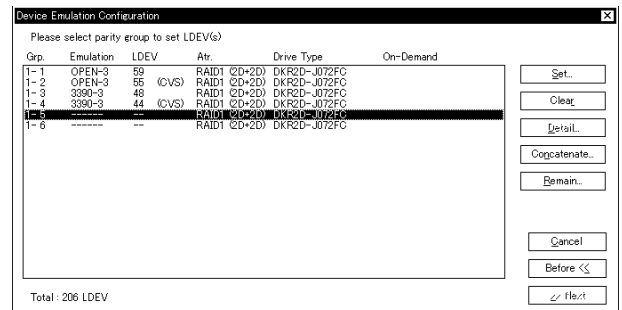

Device Emulation Configuration dialog box showing a table of configurations:

Grp.	Emulation	LDEV	Atr.	Drive Type	On-Demand
1-1	OPEN-3	59		RAID1 (2D+2D)	DKR2D-J072FC
1-2	OPEN-3	55 (CVS)		RAID1 (2D+2D)	DKR2D-J072FC
1-3	3390-3	48		RAID1 (2D+2D)	DKR2D-J072FC
1-4	3390-3	44 (CVS)		RAID1 (2D+2D)	DKR2D-J072FC
1-5	3390-3	44 (CVS)		RAID1 (2D+2D)	DKR2D-J072FC
1-6	3390-3	44 (CVS)		RAID1 (2D+2D)	DKR2D-J072FC


Total : 206 LDEV

Buttons: Set..., Clear, Detail..., Copagate..., Remain..., Cancel, Before <<, Next >>

9-1.

After setting up all items in the 'Device Emulation Type Define' dialog box, select (CL) [OK].

Selecting (CL) [Cancel] returns you to step 9.

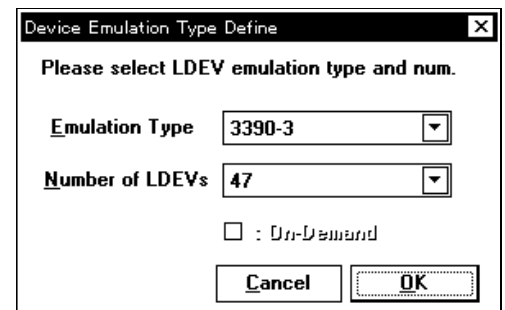

Device Emulation Type Define dialog box showing configuration options:

- Emulation Type:** 3390-3
- Number of LDEVs:** 47
- ☐ : On-Demand


Buttons: Cancel, OK

9-2. <Displaying remaining slot(s)>

The Remaining Slot window is displayed.

An allowable number of times of PDEV addition corresponding to the specified drive type is displayed.

Select (CL) the [OK]. The routine returns to Step 9.

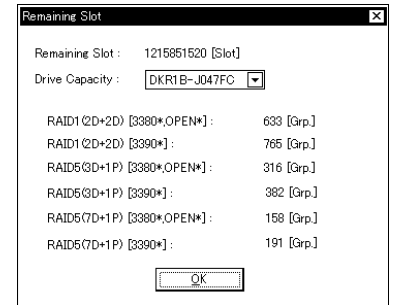

9-3. <Setting RAID concatenation>

Select (CL) [Concatenate...].


When you do not perform the RAID concatenation, return to Step 9.

9-4.

Parity groups to which the RAID concatenation can be applied are displayed in the Parity group List.

Select (CL) parity groups to which you want to apply the RAID concatenation and press (CL) the [>>] button.


Note: Only the parity groups, which have been added and to which the RAID concatenation can be applied are displayed in the Parity group List.

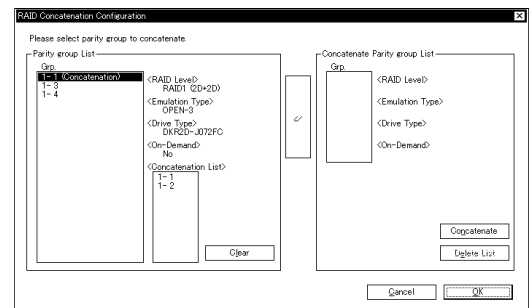

9-5.

The selected parity groups are registered in the Concatenate Parity group List. Then press (CL) the [Concatenate] button.

Note: The [Concatenate] button cannot be pressed if the concatenation does not meet a condition of the RAID concatenation. Adjust the number of the parity groups in the Concatenate Parity group List.

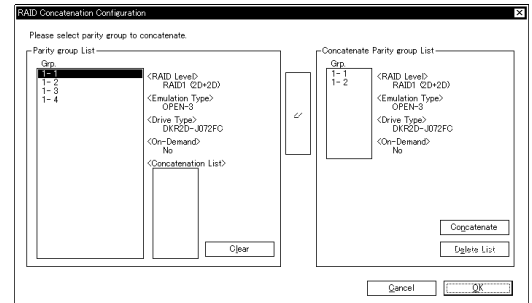


9-6.

When the RAID concatenation is completed, "(Concatenation)" is displayed in the Parity group List. Selecting the "(Concatenation)" displays the concatenated parity groups in the Concatenation List. Pressing the [Clear] button cancels the RAID concatenation.

When all the settings of the RAID concatenation are completed, press (CL) the [OK] button.

Pressing (CL) the [Cancel] button returns the routine to Step 9.

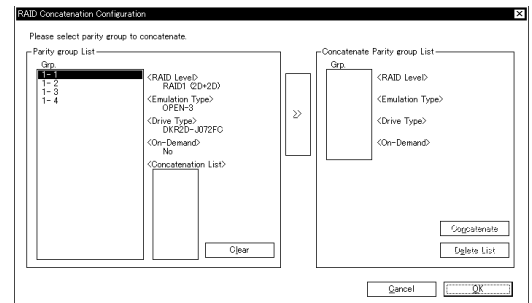

10. <Define LDEV ID>

Definition Screen for LDEV ID.

Select (CL) the parity group to be defined and select (CL) a function from the [LDEV ID] list box.

[Linear...]: LDEV ID is assigned to LDEV in the order of parity groups. See step 10-1.

[Disperse...]: LDEV is assigned discretely in the order of parity groups. See step 10-1.


[Detail...]: A screen to define LDEV in detail is displayed.

See step 10-2. (When plural groups are selected (CL), it is invalid.)

[Clear]: Select (CL) [Clear] to delete.

- '-----' is displayed in the Status area for the parity group to which LDEV ID is not assigned.

After setting up all items, select (CL) [>>Next]. (Go to Step 11)

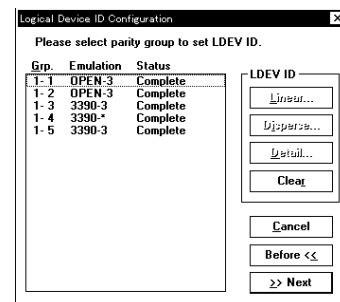

10-1. Detailed Definition Screen for LDEV ID


LDEV ID is defined in detail for each LDEV in the parity group.

Select (CL) LDEV from the list box and select (CL) [Change...].

The screen for LDEV ID input is displayed.

After setting, select (CL) [OK]. Return to step 10

- '-----' is displayed in the CU area and the ID area for the LDEV to which LDEV ID is not assigned.

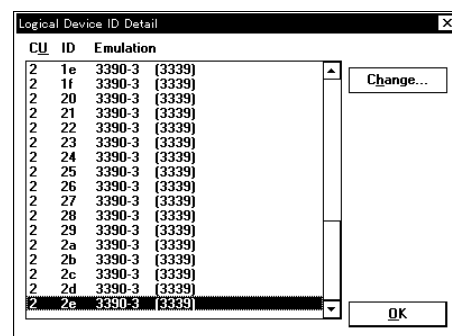

10-2. Input LDEV ID

Select CU ID in the CU combo box.


The status of usage of ID in the CU is displayed in the LDEV ID panel.

White disk of panel: not used

Patterned disk of panel: using


Input LDEV ID you want to set or the head LDEV ID in the ID Edit box.

After setting, select (CL) [OK]. Return to step 10-1

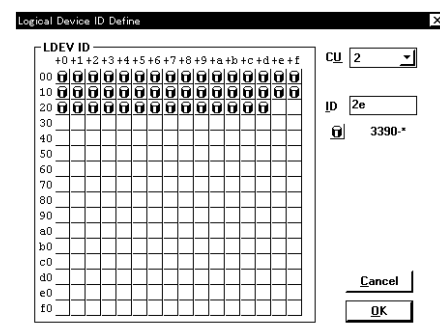

11. <Define Subsystem ID Boundary>


Press (CL) the [>>>Next] button to change the screen to the “Set SSID Boundary” screen.

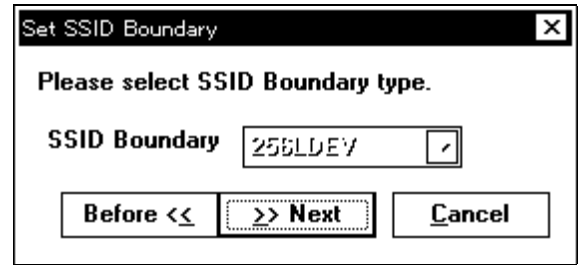

12. <Define Subsystem ID>


To define Subsystem ID, select (CL) the item from the list box and select (CL) [SSID]. See step 12-1.

After setting, select (CL) [>>>Next].

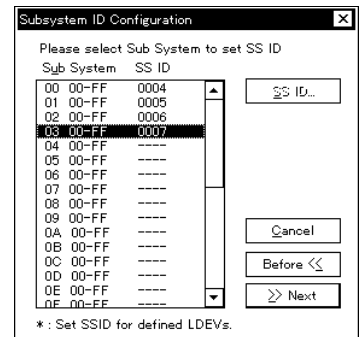

12-1. Define Subsystem ID and select (CL) [OK].


Return to step 12.

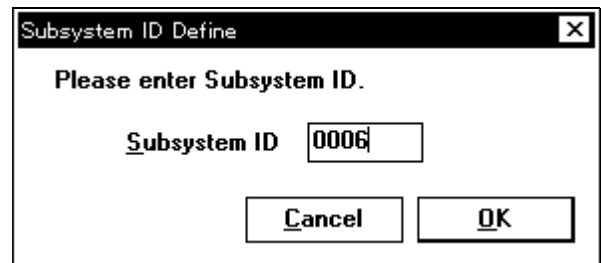

13. <Start installation>

Select (CL) [Yes] in response to “Are you sure you want to renew subsystem?”.

When [No] is selected (CL), returns to [INST03-DKA-180](#) step 3.

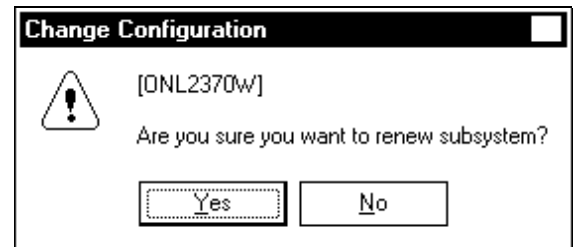

14. <Download microprogram>

Microprograms are automatically downloaded for each processor.


15. <Install DKA>

“Upgrading of the DKA...”

16. <Check that hardware components are installed>

At this point refrain from pressing the [OK] button.


“Please install the units in the system before starting this process. If installation has been completed, push OK.” is displayed.

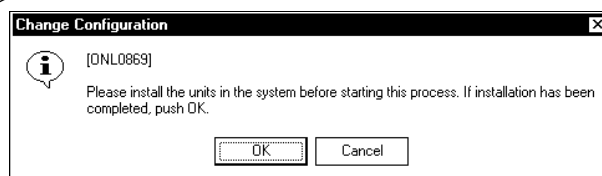

2. Installation Procedure of Additional Disk Port Switch

Note: Be sure to wear your wrist strap and attach to ground prior to performing the following work. This will ensure that the IC and LSI on the PCB are protected from static electricity.

2-1 Insert the PCBs.

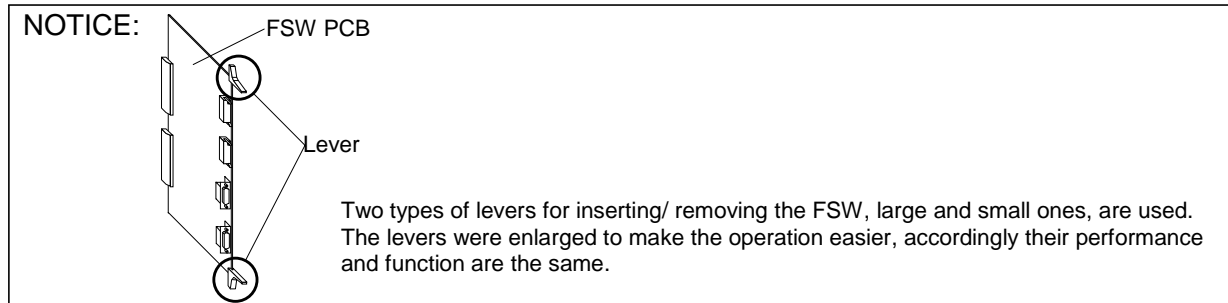

- Loosen the four screws① and remove the cable covers.
- Insert the FSW PCBs.
- Rotate the stoppers and fasten the two screws②.
- Attach the cable covers① stored the cable covers② and fasten the four screws①.

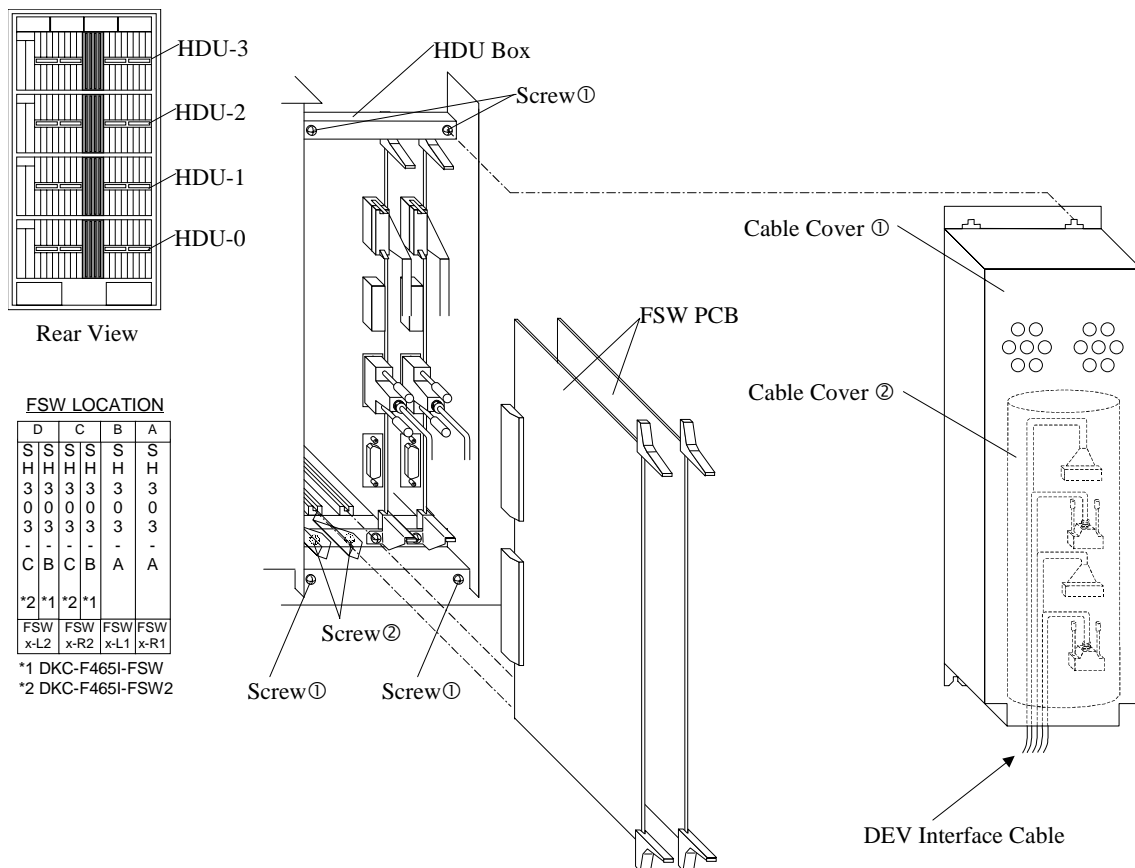


Fig. 3.8.3-1 Insertion of FSW PCBs

2-2 Attach the nameplate

- a. Attach the nameplate regardless of the model number from the left of the cover.

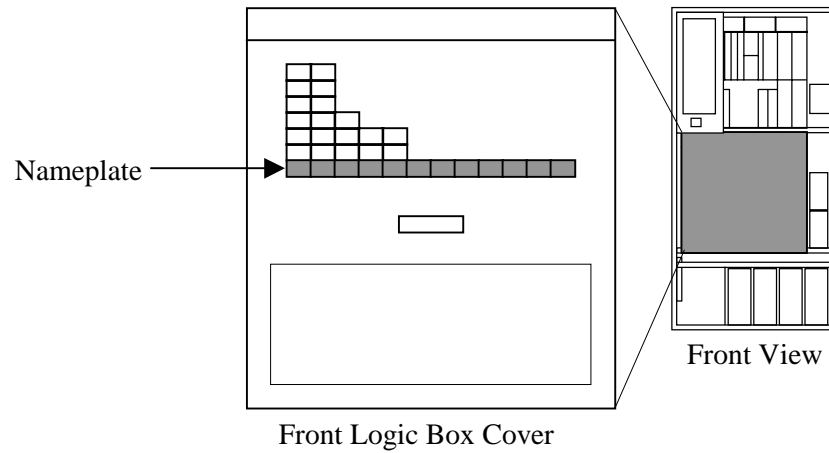


Fig. 3.8.3-2 Attachment of Nameplate

3. Installation Procedure of HDD Canister

3-1 Confirmation of position to install HDD canister

a. Confirm a position to install HDD canister.

No.	Model Number	Model Name	Data and Parity
1	DKU-F455I-36K4/72J4	4 HDD Canisters	Data and Parity Drive

(1) Entry Model or Full-spec Model (1 DKA Pair Model)

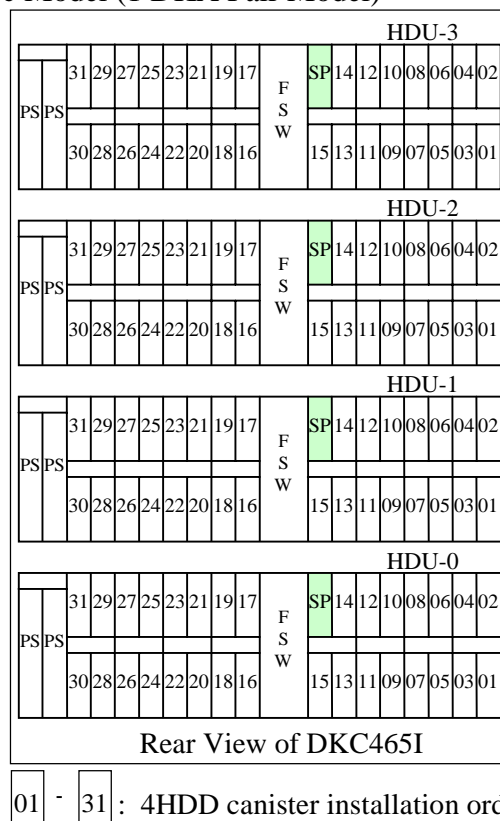


Fig. 3.8.3-3 Data Drive/Parity Drive Expansion Sequence (1 DKA Pair Model)


The relationship between HDDs installation order and RAID group number is shown in the following table.

Table 3.8.3-1 Relation between HDDs installation order and RAID group number (1 DKA Pair Model)

Group No.	Installation Order	Group No.	Installation Order	Group No.	Installation Order	Group No.	Installation Order
1-1	001	1-2	002	1-3	003	1-4	004
1-5	005	1-6	006	1-7	007	1-8	008
1-9	009	1-10	010	1-11	011	1-12	012
1-13	013	1-14	014	1-15	015	1-16	SP
1-17	016	1-18	017	1-19	018	1-20	019
1-21	020	1-22	021	1-23	022	1-24	023
1-25	024	1-26	025	1-27	026	1-28	027
1-29	028	1-30	029	1-31	030	1-32	031

No.	Model Number	Model Name	Data and Parity
1	DKU-F455I-36K1/72J1	1 HDD Canister	Spare Drive

Entry Model or
Full-spec Model (1DKA Pair Model)

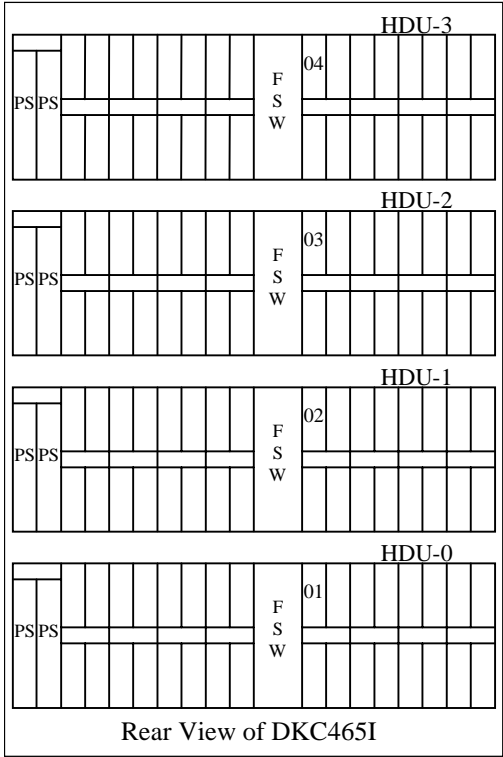

01 - 04 : Spare HDD canister installation order

Fig. 3.8.3-4 Spare Drive Expansion Sequence

Blank Sheet

3-2 Installation of the HDD Canister.

NOTICE:

Since the HDD is a precision component, handle it very carefully not to apply a vibration or shock to it.

- a. Remove the dummy canister from the HDU Box.
When the dummy canister cannot be removed by pulling of it only, remove it referring to page [INST03-DKA-630](#).
- b. Install the HDD canister. (For the detailed procedure for installation, refer to the procedure for installing HDD canister on page [INST03-DKA-640](#).)


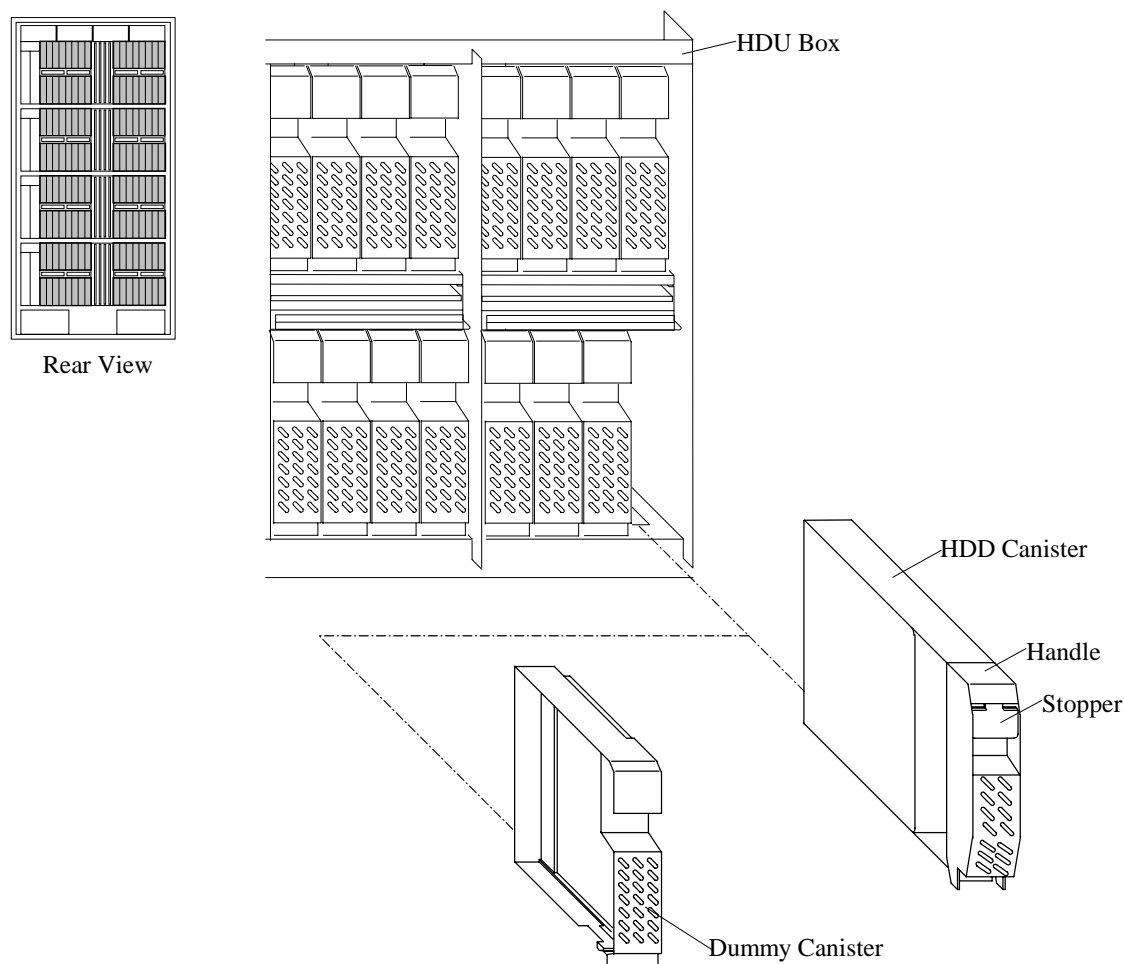


Fig. 3.8.3-5 Installation of HDD Canister

3-3 Attachment of the nameplate.

- a. When the corresponding nameplate is not attached, attach the nameplate from the left of cover. Paint out mounting numbers on the nameplate.

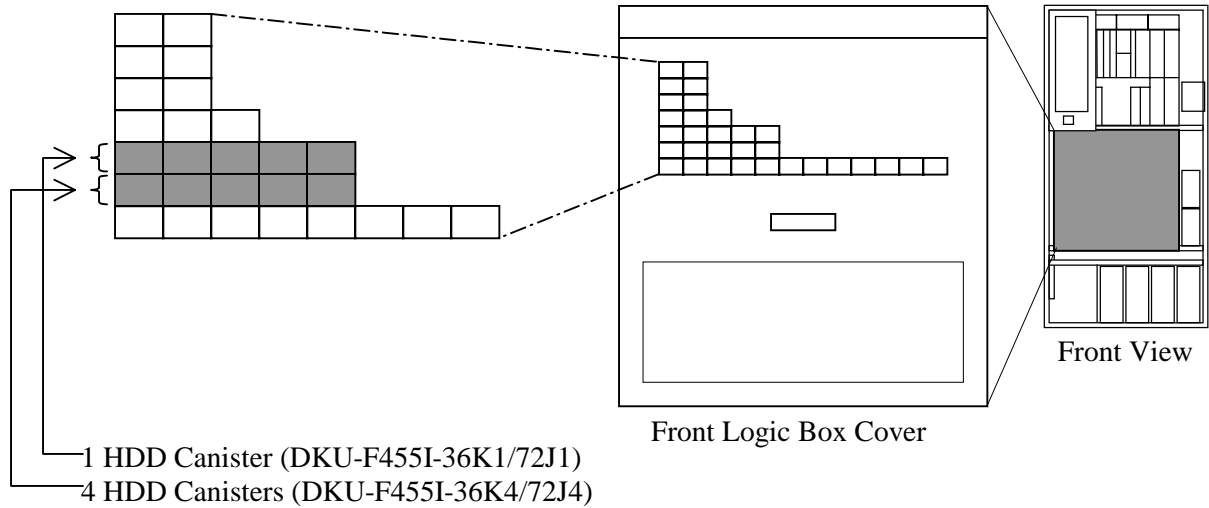

[Example]

When the 7 DKU-F455I-72J4 sets are installed


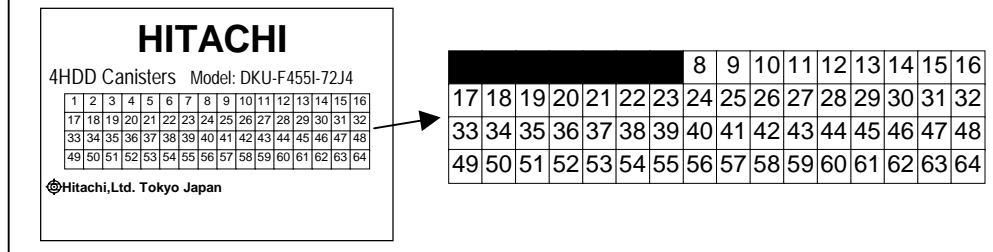


Fig. 3.8.3-6 Attachment of Nameplate

4. SVP post procedure

1. <Check that hardware components are installed>

Select (CL) [OK] after making sure that all hardware components are installed correctly in response to “Please install the units in the system before starting this process. If installation has been completed, push OK.”.

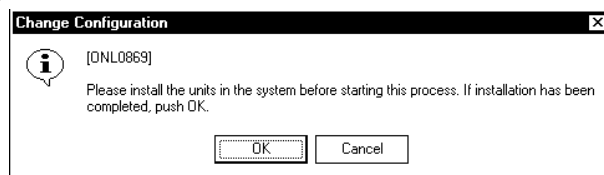

- 2.


“Waiting for Power Event... Usually, several minutes (maximum 15 minutes)” is displayed.

3. <DKU PATH INLINE>

When DKA is installed, “DKU PATH INLINE is now running...” is displayed.

4. <LDEV FORMAT>


“Formatting the logical device...” is displayed when Parity Group is defined.

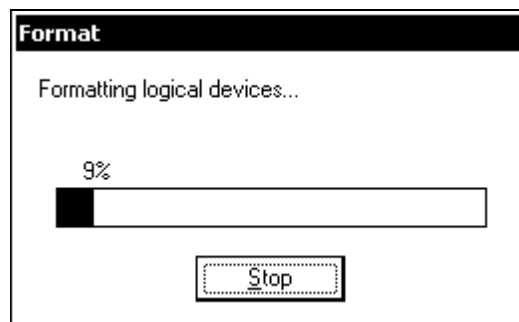


5. <End of system update processing>
 “Renewal process has completed. Please check the subsystem status.” is displayed when recovery processing on all installed components is completed. Select (CL) [OK] in response to this message.




6.
 “Reading subsystem configuration data...” is displayed.
 “Please insert the Config FD in the FDD.” is displayed.
 Insert the configuration FD into FDD, and select (CL) [OK].

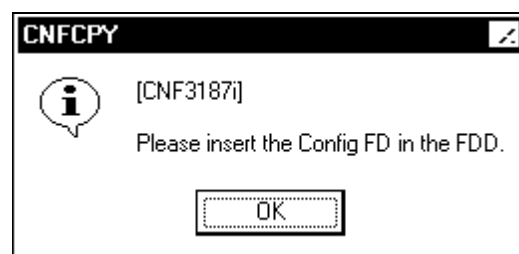

7.
 When this procedure is completed, the message “Please remove the Config FD.” is displayed.
 Remove the FD, select (CL) [OK].

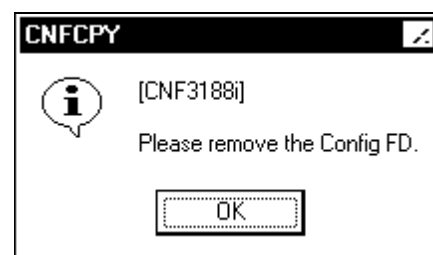

8.
 After the procedure is completed, return to ‘Install’.
 Select (CL) [File]-[Exit].

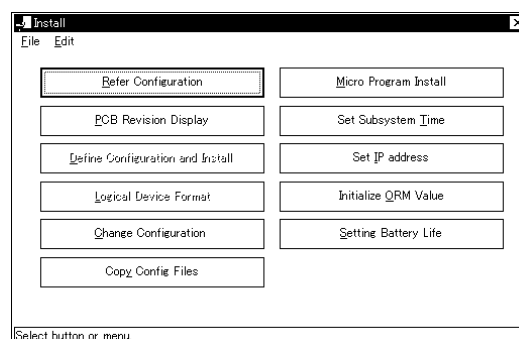


9. <Mode Change>
 Change the mode to View Mode.

3.8.4 When HDD Canister, DKA and FSW are to be installed at the same time (DKC-F465I-FSW2, DKC-F460I-200, DKU-F455I-36K4/36K1/72J4/72J1)


1. Setting up the New Device Structure Information

1. <Mode Change>
Change the mode to Modify Mode.
Select (CL) [Install].


2. <Start the 'Menu Dialog' screen>
Select (CL) [Change Configuration].

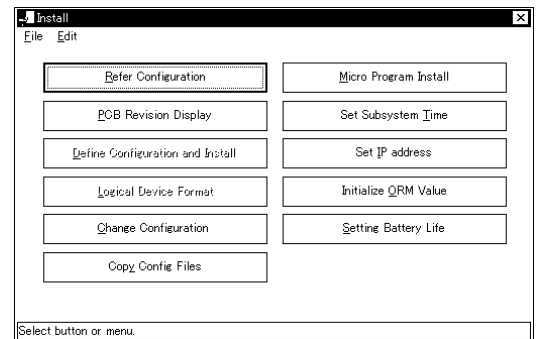

3. <Start Device Structure Setup screen>
Select (CL) [Installation] in the 'Menu Dialog' dialog box and select (CL) [OK].

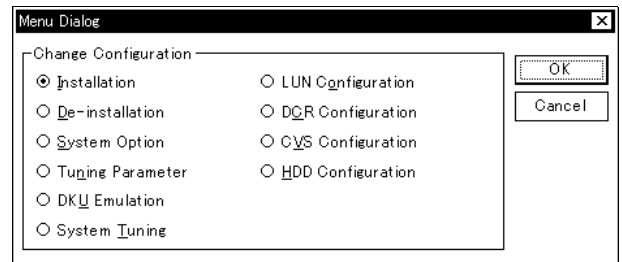

4. <Select a part to be changed>
Select (CL) [DKA + ECC group + LDEV], and select (CL) [OK].

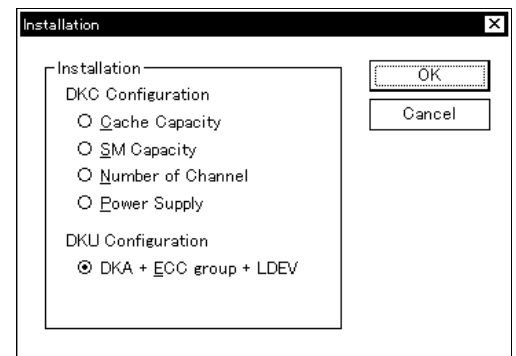

5. <Update Configuration Information>

Define the number of CU in DKC and the number of DKA in the 'DKC Configuration' window.

Make sure that the entered item is correct and select (CL) [>>Next].

Note: There may be a case where an addition of the SM is required to add the CU.

When adding the SM, refer to page [INST03-SM-10](#).

6. <Setting DKA type>

Define the DKA type in the 'Disk Interface Configuration' dialog box. After setting it, select (CL) the [>>Next] button.

8. <Change Drive Configuration Information>


Define drive configuration according to the 'Physical Device Configuration' screen.

Detailed procedure is shown below.

[Set...]: Defines the parity group or spare disk. The routine proceeds to Step 8-1.

[Clear...]: Cancels the setting of the B4.

After setting up all items, select (CL) [>>Next]. Go to step 9.

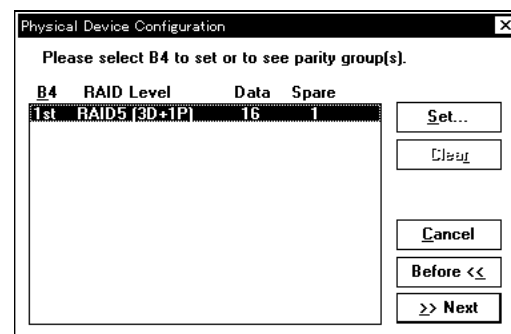

Selecting (CL) [Before<<] returns you to the previous screen.

[Multi Cabinet Model]

B4	Location	B4	Location
1st	HDU-R10, 11, 12, 13	7th	HDU-L20, 21, 22, 23
2nd	HDU-R14, 15, 16, 17	8th	HDU-L24, 25, 26, 27
3rd	HDU-L10, 11, 12, 13	9th	HDU-R30, 31, 32, 33
4th	HDU-L14, 15, 16, 17	10th	HDU-R34, 35, 36, 37
5th	HDU-R20, 21, 22, 23	11th	HDU-L30, 31, 32, 33
6th	HDU-R24, 25, 26, 27	12th	HDU-L34, 35, 36, 37

Note: The 9th to 12th of the B4 are valid only when the DKUs for the RAID 400 are connected.

[Single Cabinet Model]

B4	Location	Comment
1st	HDU-0, 1, 2, 3	HDD-X00 ~ X0F
2nd	HDU-0, 1, 2, 3	HDD-X10 ~ X1F

8-1. <Define Parity Group>


[Group...]: Defines the parity group. See Step 8-1-1.

[Spare...]: Defines the spare drive. See Step 8-1-2.

[Delete]: Deletes the added parity group or spare drive.


Note: If you want to set any Spare Drive in B4, please define the Spare Drive first.

After setting up all items, select (CL) [OK]. Return to step 8.

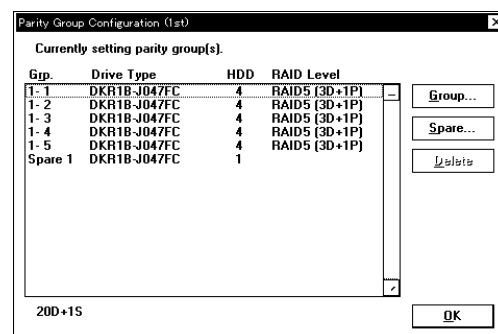

- To display LDEV ID in Parity group, select an item to be displayed and select (DC) this item on list box. The 'Device List' dialog box will appear.


“(no LDEV)” is displayed for the added parity group.

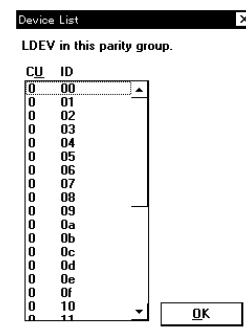

8-1-1.

Define the RAID Level and the Drive Type and the Number of Group in the 'Parity Group' dialog box.

Then select (CL) [OK]. Return to step 8-1.

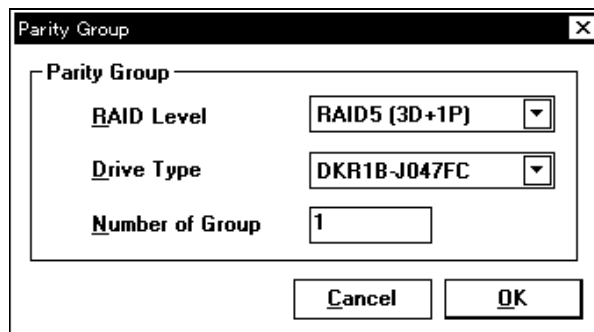

Parity Group dialog box showing the following fields:


- RAID Level:** RAID5 (3D+1P)
- Drive Type:** DKR1B-J047FC
- Number of Group:** 1

Buttons: Cancel, OK

8-1-2.

Define the RAID Level and the Drive Type and the Number of Spare in the 'Spare' dialog box.

Then select (CL) [OK]. Return to step 8-1.

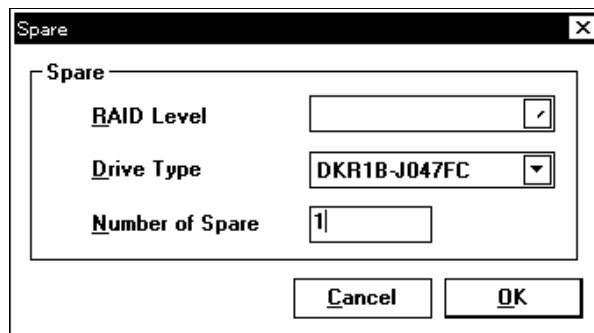

Spare dialog box showing the following fields:

- RAID Level:** (Empty)
- Drive Type:** DKR1B-J047FC
- Number of Spare:** 1

Buttons: Cancel, OK

9. <Define Device Emulation>

After setting up all items for definition of Device Emulation, select (CL) [>>Next].

Selecting (CL) [Before<<] returns you to the previous screen.

For defining Device Emulation:


Select (CL) parity group and select (CL) [Set...].

Go to step 9-1

For detailed display:

Select (CL) parity group and select (CL) [Detail...].

The detailed information is displayed.

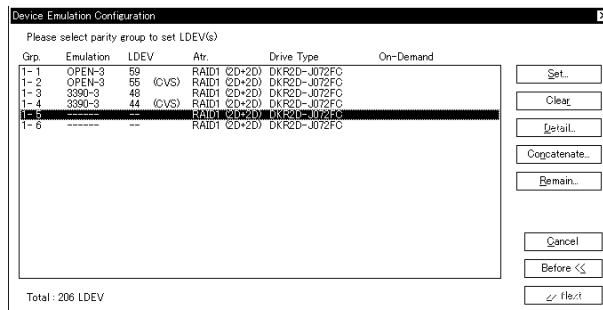

Device Emulation Configuration dialog box showing a table of configurations:

Grp.	Emulation	LDEV	Atr.	Drive Type	On-Demand
1-1	OPEN-3	59		RAID1 (2D+2D)	DKR2D-J072FC
1-2	OPEN-3	55	(CVS)	RAID1 (2D+2D)	DKR2D-J072FC
1-3	3390-3	48		RAID1 (2D+2D)	DKR2D-J072FC
1-4	3390-3	44	(CVS)	RAID1 (2D+2D)	DKR2D-J072FC
1-5	3390-3	44	(CVS)	RAID1 (2D+2D)	DKR2D-J072FC
1-6	3390-3	44	(CVS)	RAID1 (2D+2D)	DKR2D-J072FC


Total : 206 LDEV

Buttons: Set..., Clear, Detail..., Copagate..., Remain..., Cancel, Before <<, Next >>

9-1.

After setting up all items in the 'Device Emulation Type Define' dialog box, select (CL) [OK].

Selecting (CL) [Cancel] returns you to step 9.

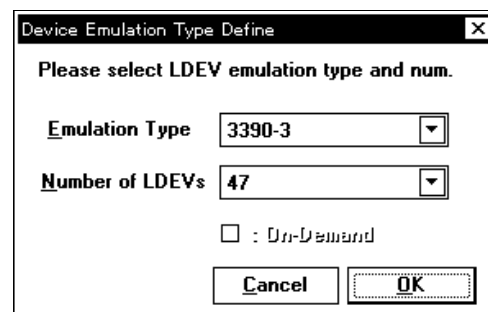

Device Emulation Type Define dialog box showing the following fields:

- Emulation Type:** 3390-3
- Number of LDEVs:** 47
- ☐ : On-Demand


Buttons: Cancel, OK

9-2. <Displaying remaining slot(s)>

The Remaining Slot window is displayed.

An allowable number of times of PDEV addition corresponding to the specified drive type is displayed.

Select (CL) the [OK]. The routine returns to Step 9.

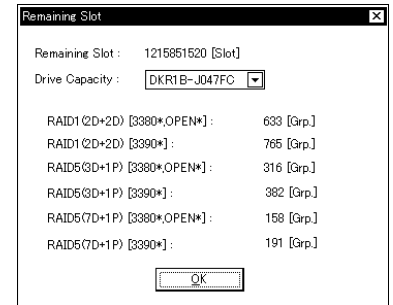

9-3. <Setting RAID concatenation>

Select (CL) [Concatenate...].


When you do not perform the RAID concatenation, return to Step 9.

9-4.

Parity groups to which the RAID concatenation can be applied are displayed in the Parity group List.

Select (CL) parity groups to which you want to apply the RAID concatenation and press (CL) the [>>] button.


Note: Only the parity groups, which have been added and to which the RAID concatenation can be applied are displayed in the Parity group List.

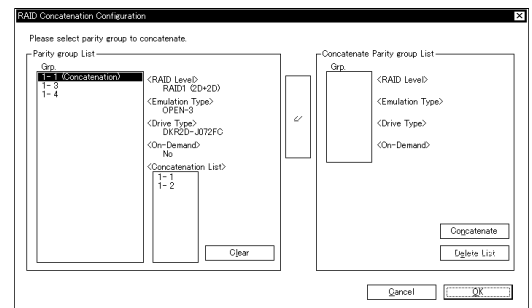

9-5.

The selected parity groups are registered in the Concatenate Parity group List. Then press (CL) the [Concatenate] button.

Note: The [Concatenate] button cannot be pressed if the concatenation does not meet a condition of the RAID concatenation. Adjust the number of the parity groups in the Concatenate Parity group List.

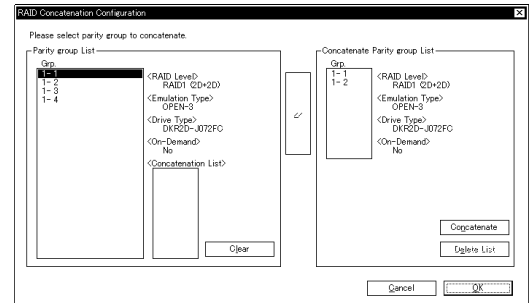


9-6.

When the RAID concatenation is completed, "(Concatenation)" is displayed in the Parity group List. Selecting the "(Concatenation)" displays the concatenated parity groups in the Concatenation List. Pressing the [Clear] button cancels the RAID concatenation.

When all the settings of the RAID concatenation are completed, press (CL) the [OK] button.

Pressing (CL) the [Cancel] button returns the routine to Step 9.

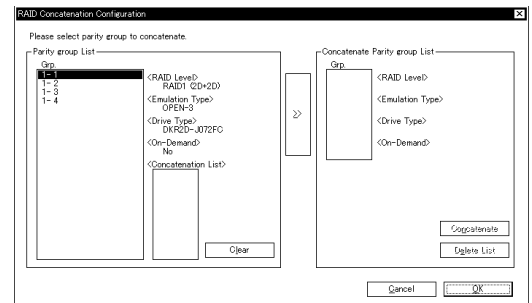

10. <Define LDEV ID>

Definition Screen for LDEV ID.

Select (CL) the parity group to be defined and select (CL) a function from the [LDEV ID] list box.

[Linear...]: LDEV ID is assigned to LDEV in the order of parity groups. See step 10-1.

[Disperse...]: LDEV is assigned discretely in the order of parity groups. See step 10-1.


[Detail...]: A screen to define LDEV in detail is displayed.

See step 10-2. (When plural groups are selected (CL), it is invalid.)

[Clear]: Select (CL) [Clear] to delete.

- '-----' is displayed in the Status area for the parity group to which LDEV ID is not assigned.

After setting up all items, select (CL) [>>Next]. (Go to Step 11)

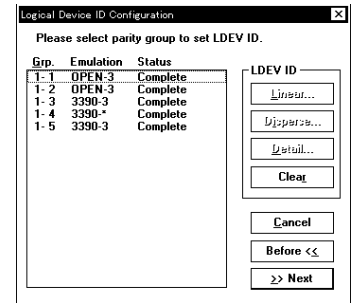

10-1. Detailed Definition Screen for LDEV ID


LDEV ID is defined in detail for each LDEV in the parity group.

Select (CL) LDEV from the list box and select (CL) [Change...].

The screen for LDEV ID input is displayed.

After setting, select (CL) [OK]. Return to step 10

- '-----' is displayed in the CU area and the ID area for the LDEV to which LDEV ID is not assigned.

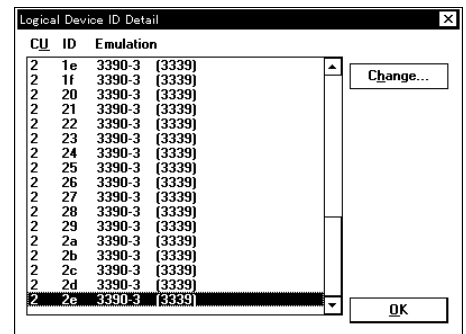

10-2. Input LDEV ID

Select CU ID in the CU combo box.


The status of usage of ID in the CU is displayed in the LDEV ID panel.

White disk of panel: not used

Patterned disk of panel: using


Input LDEV ID you want to set or the head LDEV ID in the ID Edit box.

After setting, select (CL) [OK]. Return to step 10-1

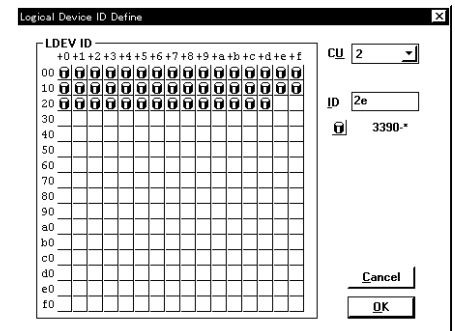

11. <Define Subsystem ID Boundary>


Press (CL) the [>>>Next] button to change the screen to the “Set SSID Boundary” screen.

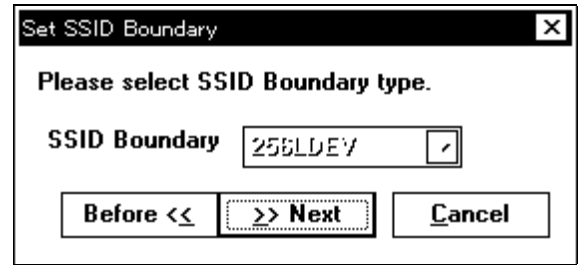

12. <Define Subsystem ID>


To define Subsystem ID, select (CL) the item from the list box and select (CL) [SSID]. See step 12-1.

After setting, select (CL) [>>>Next].

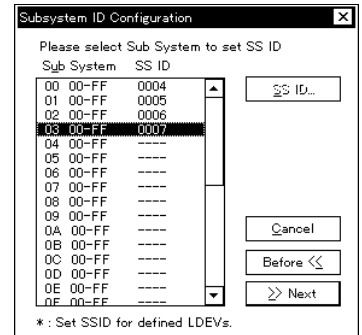

12-1. Define Subsystem ID and select (CL) [OK].


Return to step 12.

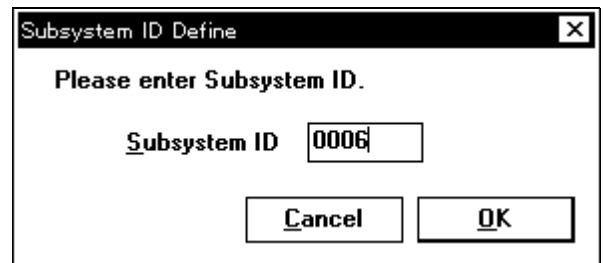

13. <Start installation>

Select (CL) [Yes] in response to “Are you sure you want to renew subsystem?”.

When [No] is selected (CL), returns to [INST03-DKA-340](#) step 3.

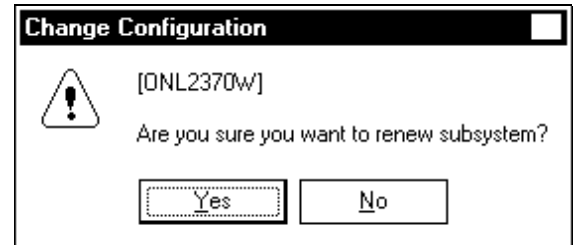

14. <Download microprogram>

Microprograms are automatically downloaded for each processor.


15. <Install DKA>

“Upgrading of the DKA...”

16. <Check that hardware components are installed>

At this point refrain from pressing the [OK] button.

“Please install the units in the system before starting this process. If installation has been completed, push OK.” is displayed.

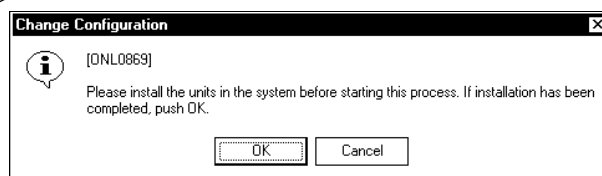

2. Installation Procedure of Additional Disk Adapter

Note: Be sure to wear your wrist strap and attach to ground prior to performing the following work. This will ensure that the IC and LSI on the PCB are protected from static electricity.

2-1 Insertion of the PCBs

Note: Make sure that a color of the levers of the PCB to be installed is blue. Never insert a PCB whose lever is not blue.

- a. Remove the dummy plate installed in the installation location referring to the Fig. 3.8.4-1.
(Note) Dummy plates should be stored for future use in De-installation.
- b. Insert the PCBs to the correct locations in the Logic Box. Refer to Table 3.8.4-1.
- c. Fasten the two screws referring to Fig. 3.8.4-2.

Table 3.8.4-1 Inserting Location (Rear of the unit)

Cluster	CL1							CL2						
Slot No.	A	B	C	D	E	F		G	H	J	K		L	M
Function	CSW	DKA	CHA	CHA	CACHE	CHA	DKA	CHA	CACHE	CHA	CHA	DKA	DKA	CSW
Location No.	CSW -1A	DKA -1B	CHA -1C	CHA -1D	CACHE -1E	CHA -1F	DKA -1F	CHA -2G	CACHE -2H	CHA -2J	CHA -2K	DKA -2K	DKA -2L	CSW -2M
Order of addition		Basic	Basic	Add.1		Add.2	Add.1	Basic		Add.1	Add.2	Add.1	Basic	

Up to 2 disk adapters can be installed in the subsystem. (Only DKC-F460I-200)

Rear Logic Box

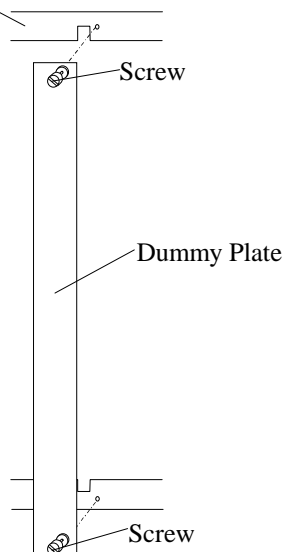


Fig. 3.8.4-1 Removal of Dummy Plate

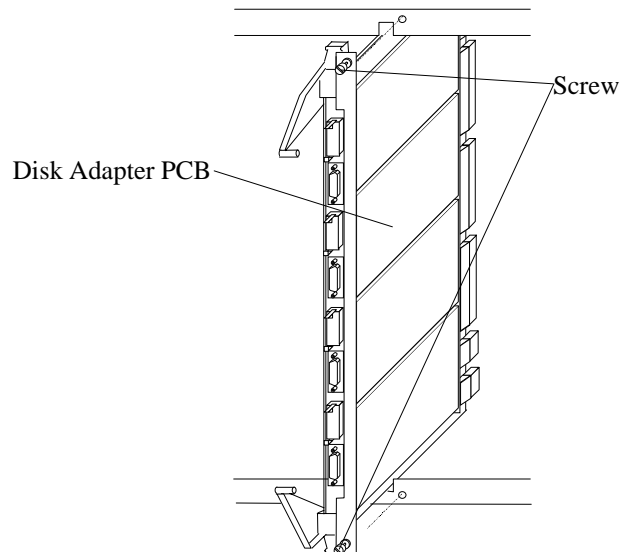


Fig. 3.8.4-2 Insertion of PCB

2-2 Connection of cables

Note:

Colors of the labels of the subsystem shipped from the factory from June of 2002 and on are as follows. Labels on the cluster1 (CL1) side and the cluster2 (CL2) side are white and yellow respectively.

In case of Add.1

- a. Loosen the six screws and remove the cover(H/S-PS).

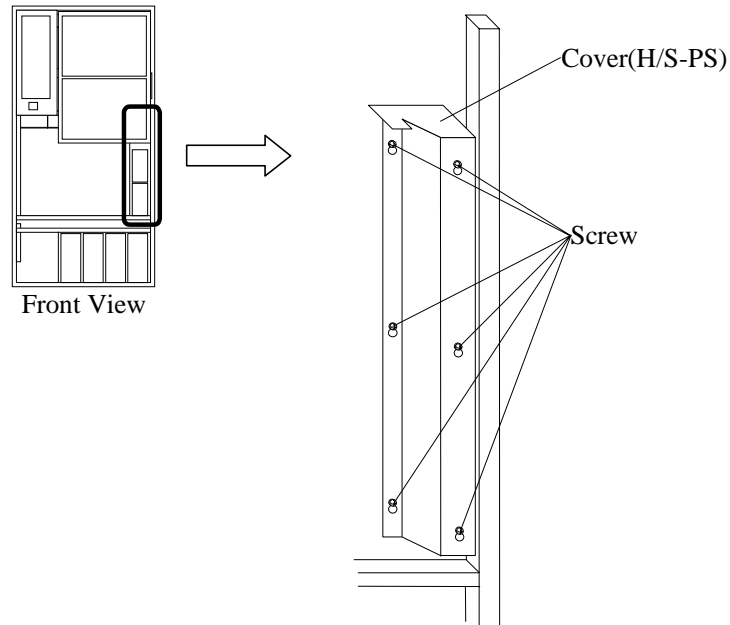


Fig.3.8.4-3 Removal of Cover

- b. Remove the two screws ① and remove the cover ①.
- c. Loosen the two screws ② and remove the cover ②.
- d. Remove the three screws ③ and remove the cover ③.
- e. Remove the four screws ④ and remove the cover ④.
- f. Connect the cables stored under the cover ④ to the PCB.
- g. Attach the covers ④ through ① with the screws.

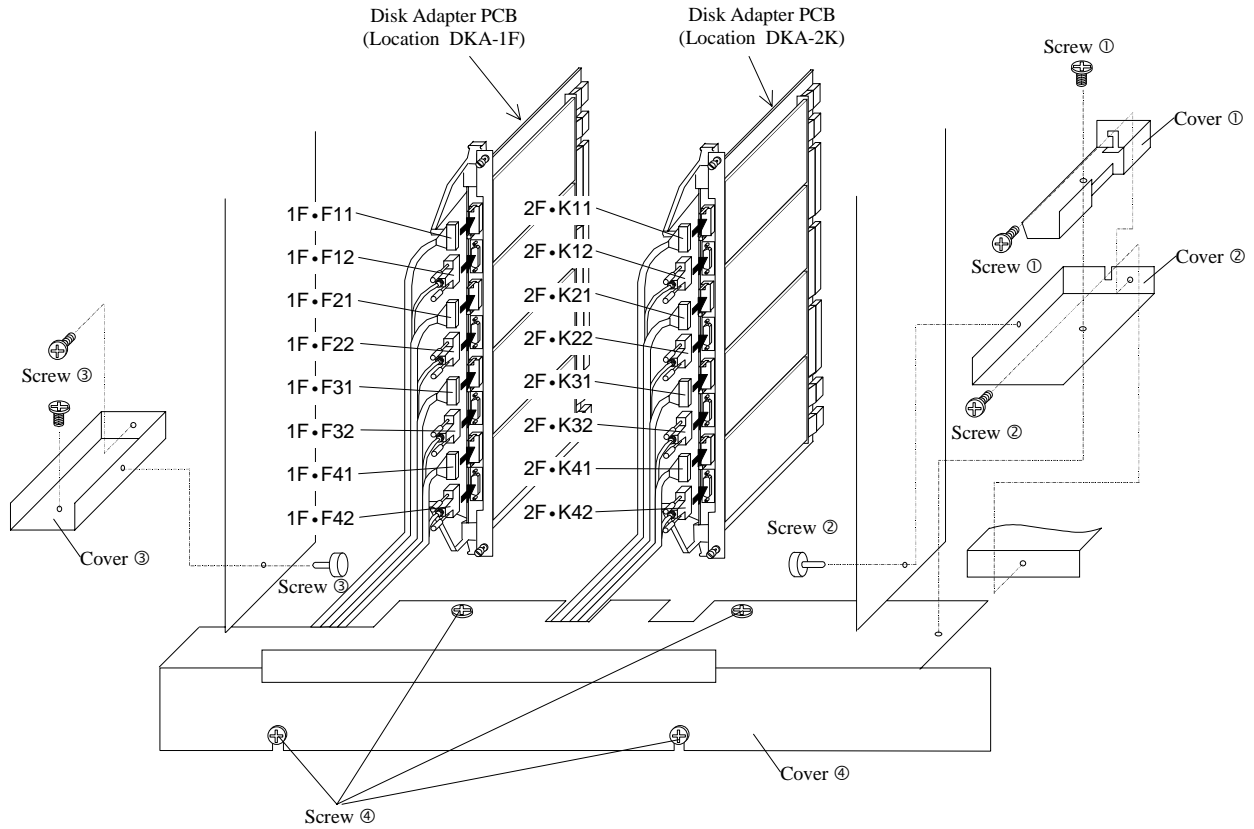


Fig.3.8.4-4 Connection of Cable (Add.1)

2-3 Attachment of the nameplate

- a. Attach the nameplate to the Front Logic Box cover.

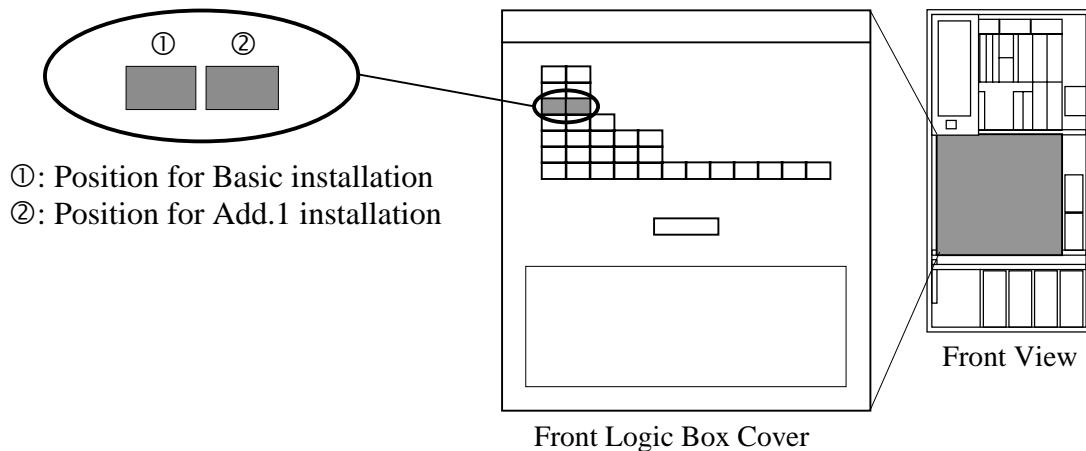



Fig. 3.8.4-5 Attachment of Nameplate

3. Installation Procedure of Disk Path Expansion Kit

Note: Be sure to wear your wrist strap and attach to ground prior to performing the following work. This will ensure that the IC and LSI on the PCB are protected from static electricity.

3-1 Insert the PCBs.

NOTICE:

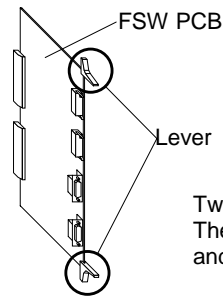

Two types of levers for inserting/ removing the FSW, large and small ones, are used. The levers were enlarged to make the operation easier, accordingly their performance and function are the same.

Colors of the labels of the subsystem shipped from the factory from June of 2002 and on are as follows. Labels on the cluster1 (CL1) side and the cluster2 (CL2) side are white and yellow respectively.

- a. Loosen the four screws① and remove the cable covers.
- b. Insert the FSW PCBs.
- c. Rotate the stoppers and fasten the two screws②.
- d. Remove the cables from the cable covers② and connect the cables to FSW PCBs.
- e. Attach the cable covers① stored the cable covers② and fasten the four screws①.

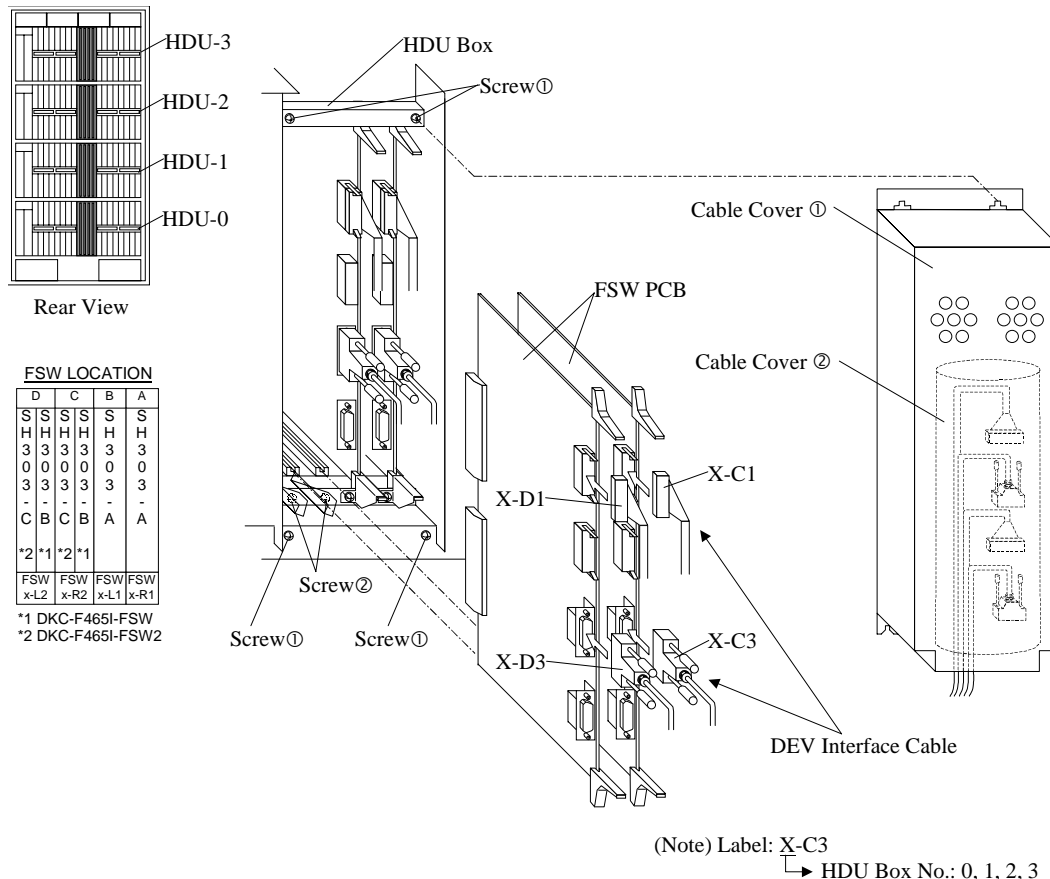


Fig. 3.8.4-6 Insertion of FSW PCBs

3-2 Attach the nameplate

- a. Attach the nameplate regardless of the model number from the left of the cover.

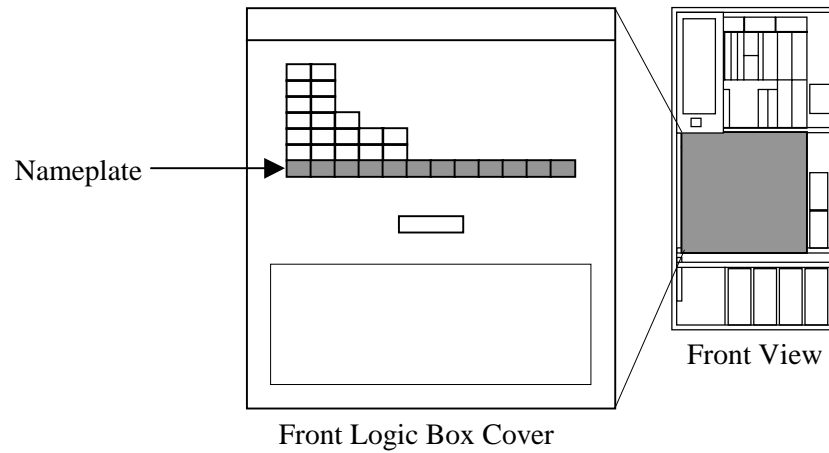


Fig. 3.8.4-7 Attachment of Nameplate

4. Installation Procedure of HDD Canister

4-1 Confirmation of position to install HDD canister

a. Confirm a position to install HDD canister.

No.	Model Number	Model Name	Data and Parity
1	DKU-F455I-36K4/72J4	4 HDD Canisters	Data and Parity Drive

(1) Full-spec Model (2 DKA Pairs Model)

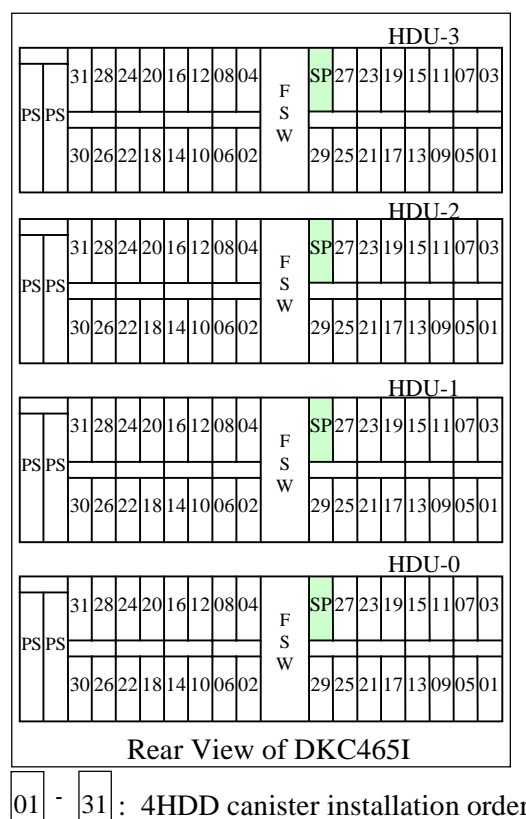


Fig. 3.8.4-8 Data Drive/Parity Drive Expansion Sequence


The relationship between HDDs installation order and RAID group number is shown in the following table.

Table 3.8.4-2 Relation between HDDs installation order and RAID group number (2 DKA Pairs Model)

Group No.	Installation Order	Group No.	Installation Order	Group No.	Installation Order	Group No.	Installation Order
1-1	001	1-2	003	1-3	005	1-4	007
1-5	009	1-6	011	1-7	013	1-8	015
1-9	017	1-10	019	1-11	021	1-12	023
1-13	025	1-14	027	1-15	029	1-16	SP
2-1	002	2-2	004	2-3	006	2-4	008
2-5	010	2-6	012	2-7	014	2-8	016
2-9	018	2-10	020	2-11	022	2-12	024
2-13	026	2-14	028	2-15	030	2-16	031

No.	Model Number	Model Name	Data and Parity
1	DKU-F455I-36K1/72J1	1 HDD Canister	Spare Drive

Full-spec Model (2DKA Pairs Model)

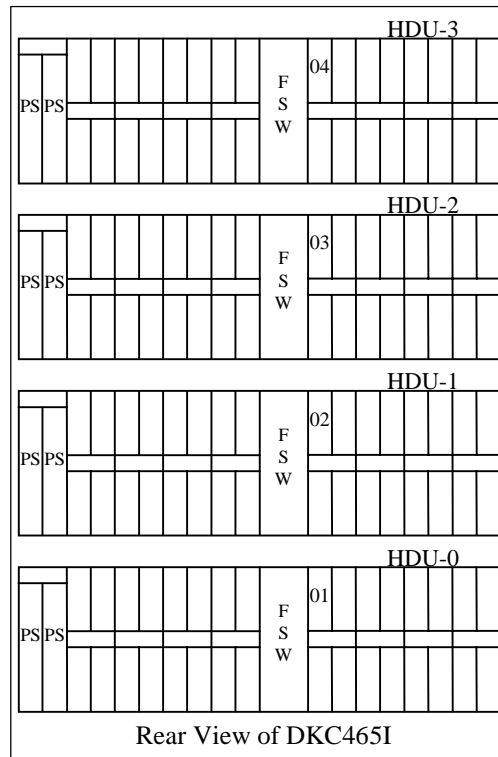

01 - 04 : Spare HDD canister installation order

Fig. 3.8.4-9 Spare Drive Expansion Sequence

Blank Sheet

4-2 Installation of the HDD Canister.

NOTICE:

Since the HDD is a precision component, handle it very carefully not to apply a vibration or shock to it.

- a. Remove the dummy canister from the HDU Box.
When the dummy canister cannot be removed by pulling of it only, remove it referring to page [INST03-DKA-630](#).
- b. Install the HDD canister. (For the detailed procedure for installation, refer to the procedure for installing HDD canister on page [INST03-DKA-640](#).)


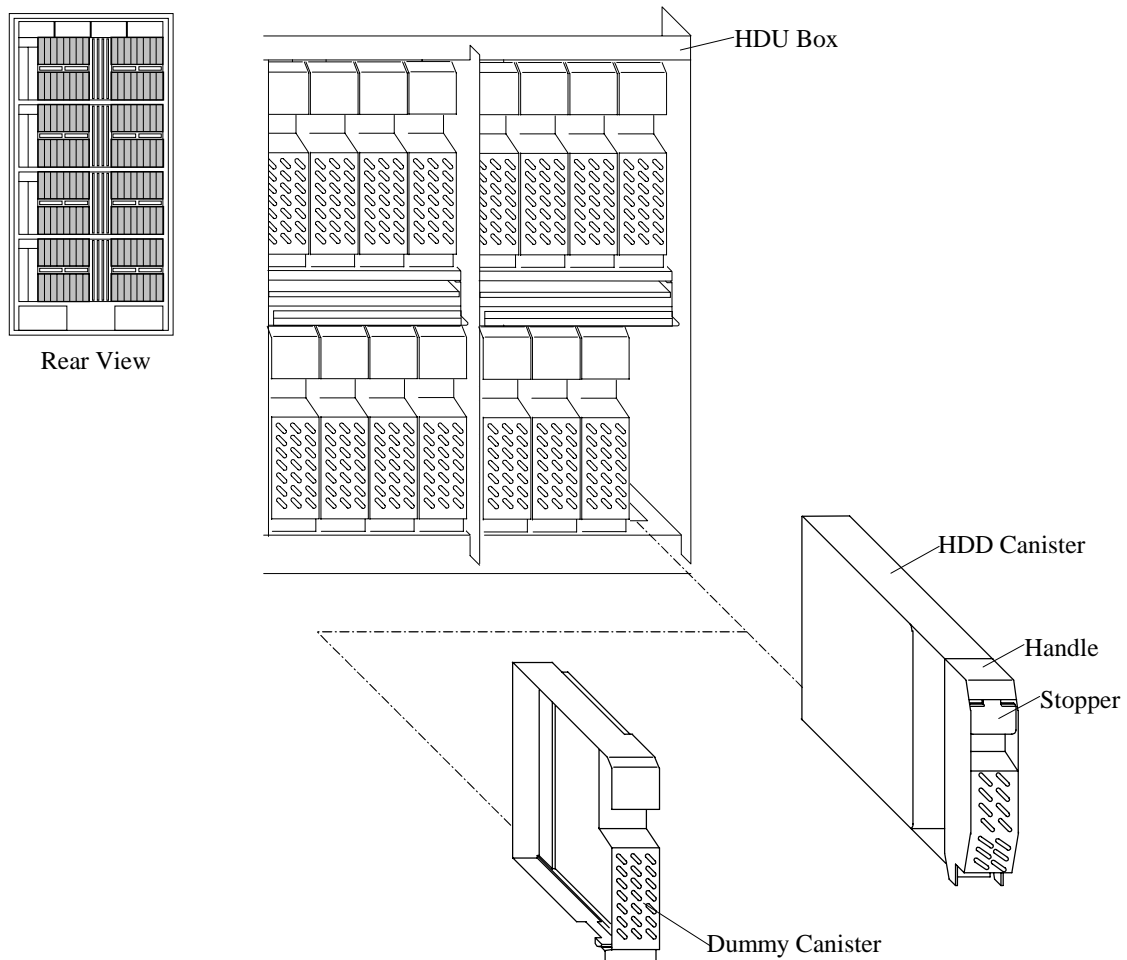


Fig. 3.8.4-10 Installation of HDD Canister

4-3 Attachment of the nameplate.

- a. When the corresponding nameplate is not attached, attach the nameplate from the left of cover. Paint out mounting numbers on the nameplate.

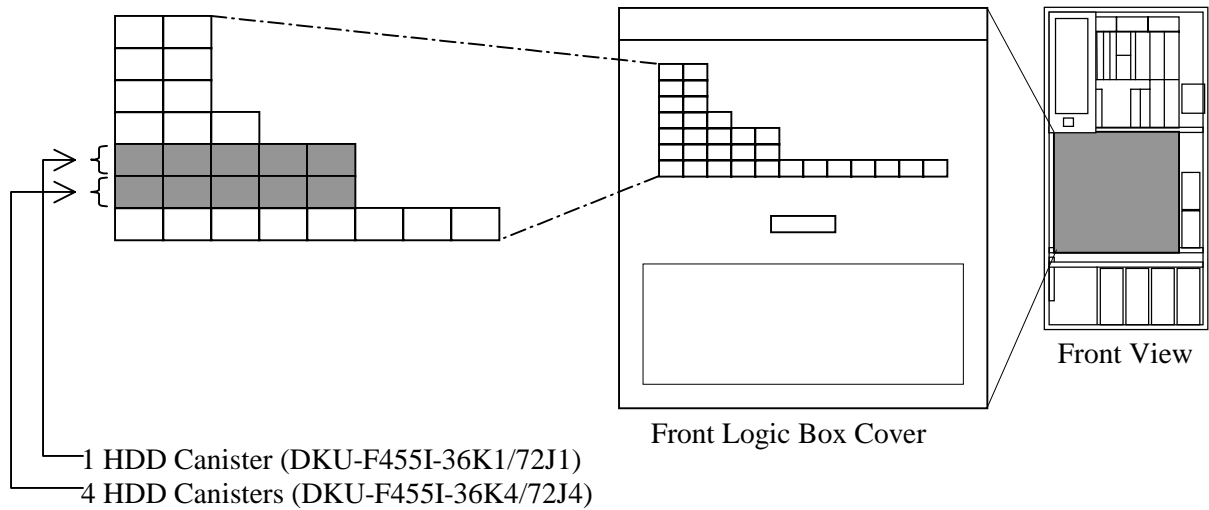

[Example]

When the 7 DKU-F455I-72J4 sets are installed


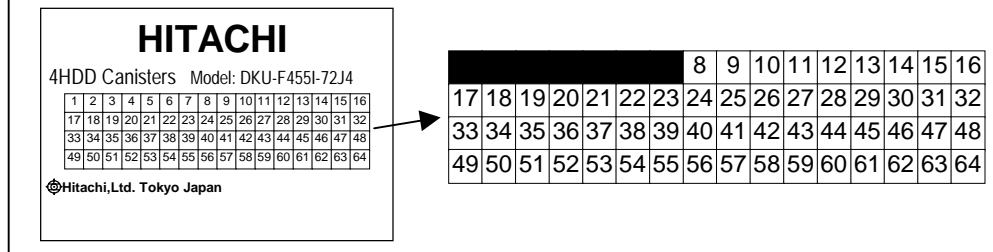


Fig. 3.8.4-11 Attachment of Nameplate

5. SVP post procedure

1. <Check that hardware components are installed>

Select (CL) [OK] after making sure that all hardware components are installed correctly in response to “Please install the units in the system before starting this process. If installation has been completed, push OK.”.

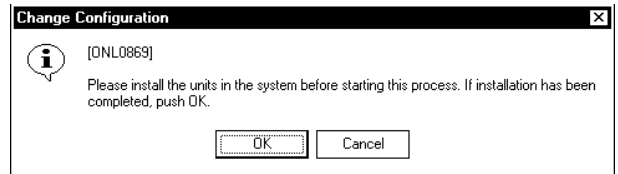

- 2.


“Waiting for Power Event... Usually, several minutes (maximum 15 minutes)” is displayed.

3. <DKU PATH INLINE>


When DKA is installed, “DKU PATH INLINE is now running...” is displayed.

4. <LDEV FORMAT>


“Formatting the logical device...” is displayed when Parity Group is defined.

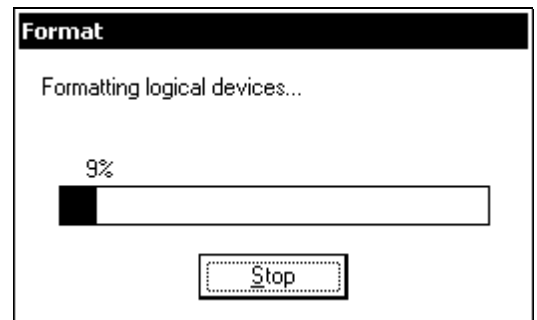


5. <End of system update processing>
 “Renewal process has completed. Please check the subsystem status.” is displayed when recovery processing on all installed components is completed. Select (CL) [OK] in response to this message.

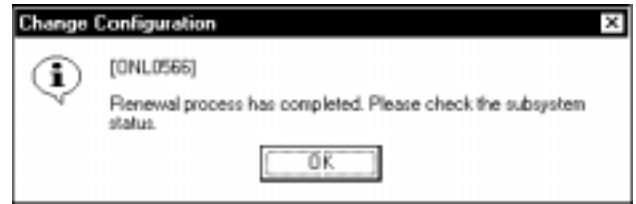


6.
 “Reading subsystem configuration data...” is displayed.
 “Please insert the Config FD in the FDD.” is displayed.
 Insert the configuration FD into FDD, and select (CL) [OK].

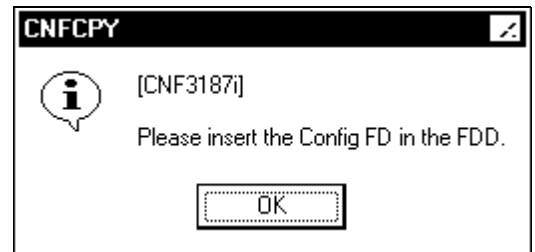

7.
 When this procedure is completed, the message “Please remove the Config FD.” is displayed.
 Remove the FD, select (CL) [OK].

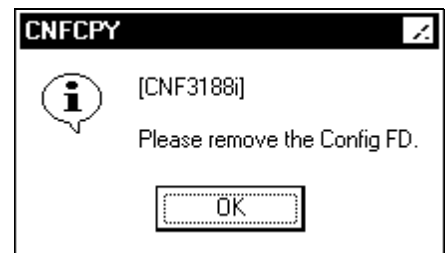

8.
 After the procedure is completed, return to ‘Install’.
 Select (CL) [File]-[Exit].

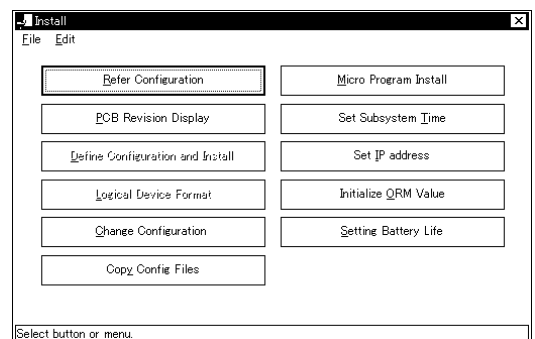

9. <Mode Change>
 Change the mode to View Mode.

3.8.5 When HDD Canister, DKA and FSW are to be installed at the same time (Only new installation) (DKC-F465I-100/FSW/FSW2, DKC-F460I-200, DKU-F455I-36K4/36K1/72J4/72J1)

1. Installation Procedure of Additional Disk Adapter

Note: Be sure to wear your wrist strap and attach to ground prior to performing the following work. This will ensure that the IC and LSI on the PCB are protected from static electricity.

1-1 Insertion of the PCBs

Note: Make sure that a color of the levers of the PCB to be installed is blue. Never insert a PCB whose lever is not blue.

- a. Remove the dummy plate installed in the installation location referring to the Fig. 3.8.5-1.
(Note) Dummy plates should be stored for future use in De-installation.
- b. Insert the PCBs to the correct locations in the Logic Box. Refer to Table 3.8.5-1.
- c. Fasten the two screws referring to Fig. 3.8.5-2.

Table 3.8.5-1 Inserting Location (Rear of the unit)

Cluster	CL1							CL2						
Slot No.	A	B	C	D	E	F		G	H	J	K		L	M
Function	CSW	DKA	CHA	CHA	CACHE	CHA	DKA	CHA	CACHE	CHA	CHA	DKA	DKA	CSW
Location No.	CSW -1A	DKA -1B	CHA -1C	CHA -1D	CACHE -1E	CHA -1F	DKA -1F	CHA -2G	CACHE -2H	CHA -2J	CHA -2K	DKA -2K	DKA -2L	CSW -2M
Order of addition		Basic	Basic	Add.1		Add.2	Add.1	Basic		Add.1	Add.2	Add.1	Basic	

Up to 2 disk adapters can be installed in the subsystem. (Only DKC-F460I-200)

Rear Logic Box

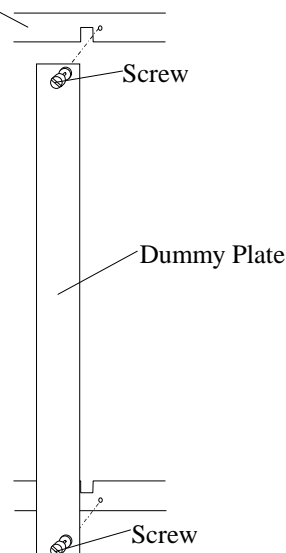


Fig. 3.8.5-1 Removal of Dummy Plate

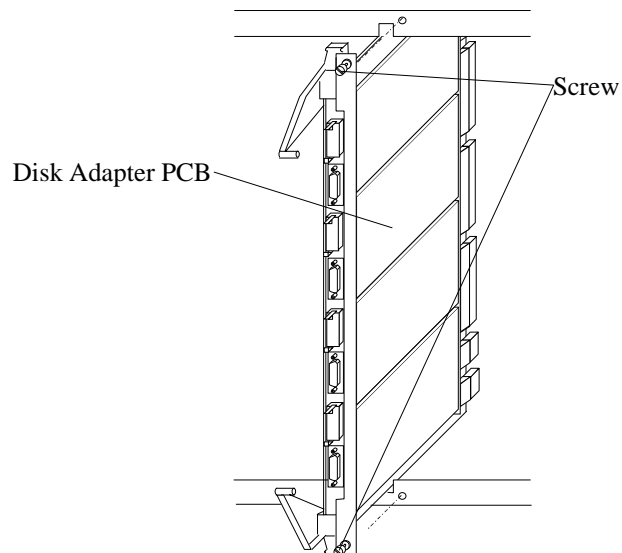


Fig. 3.8.5-2 Insertion of PCB

1-2 Connection of cables

Note:

Colors of the labels of the subsystem shipped from the factory from June of 2002 and on are as follows. Labels on the cluster1 (CL1) side and the cluster2 (CL2) side are white and yellow respectively.

In case of Basic

- a. Connect the cable to the sub-edge of PCB.

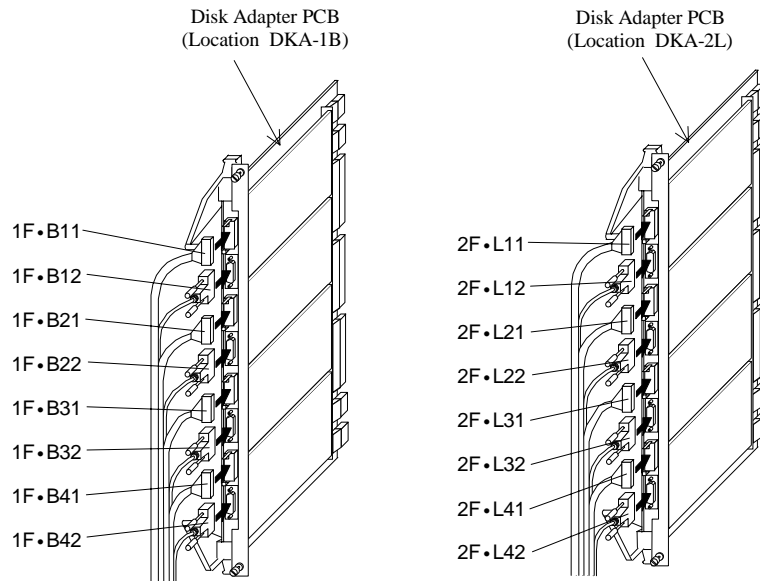


Fig.3.8.5-3 Connection of cable (Basic)

In case of Add.1

- a. Loosen the six screws and remove the cover(H/S-PS).

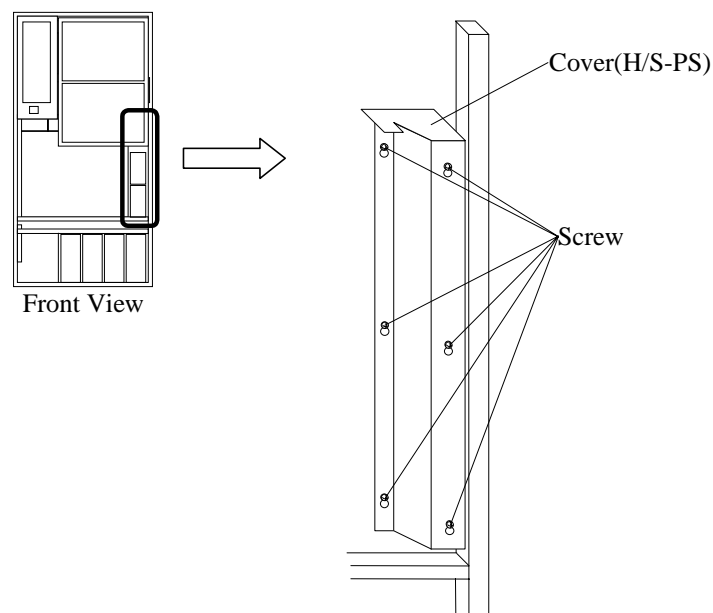


Fig.3.8.5-4 Removal of Cover

- b. Remove the two screws ① and remove the cover ①.
- c. Loosen the two screws ② and remove the cover ②.
- d. Remove the three screws ③ and remove the cover ③.
- e. Remove the four screws ④ and remove the cover ④.
- f. Connect the cables stored under the cover ④ to the PCB.
- g. Attach the covers ④ through ① with the screws.

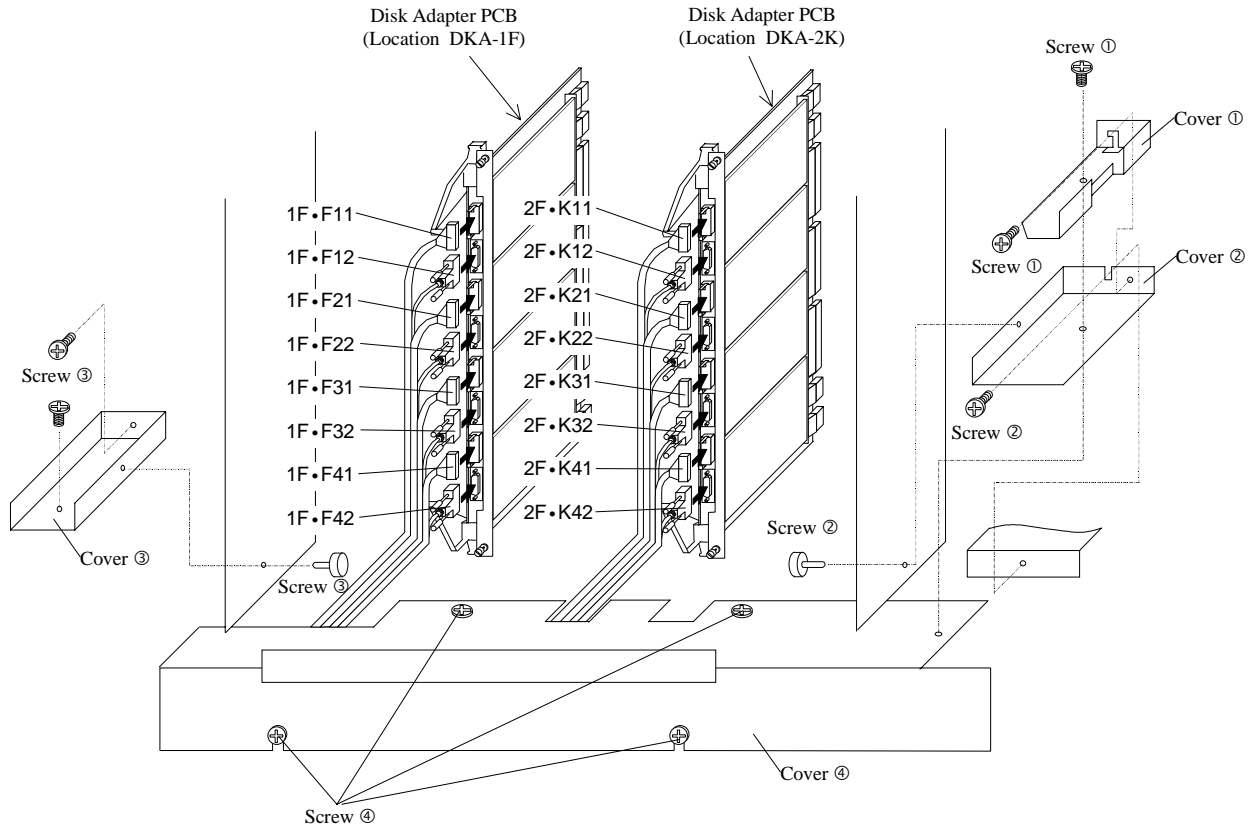


Fig.3.8.5-5 Connection of Cable (Add.1)

1-3 Attachment of the nameplate

- a. Attach the nameplate to the Front Logic Box cover.

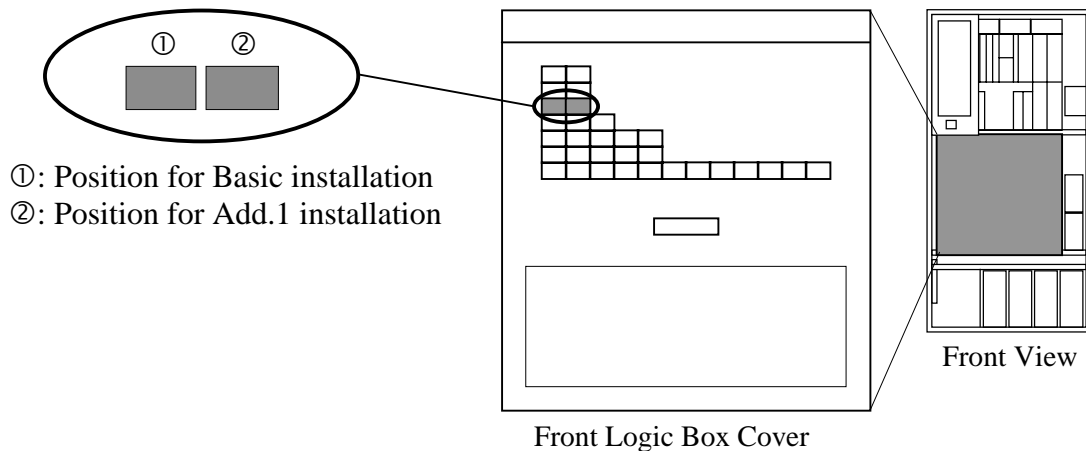



Fig. 3.8.5-6 Attachment of Nameplate

2. Installation Procedure of Additional Disk Port Switch and Disk Path Expansion Kit

Note: Be sure to wear your wrist strap and attach to ground prior to performing the following work. This will ensure that the IC and LSI on the PCB are protected from static electricity.

2-1 Insert the PCBs.

NOTICE:

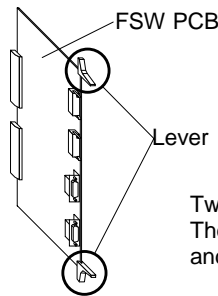

Two types of levers for inserting/ removing the FSW, large and small ones, are used. The levers were enlarged to make the operation easier, accordingly their performance and function are the same.

Colors of the labels of the subsystem shipped from the factory from June of 2002 and on are as follows. Labels on the cluster1 (CL1) side and the cluster2 (CL2) side are white and yellow respectively.

- a. Loosen the four screws① and remove the cable covers.
- b. Insert the FSW PCBs.
- c. Rotate the stoppers and fasten the two screws②.
- d. Remove the cables from the cable covers② and connect the cables to FSW PCBs. (only DKC-F465I-FSW2)
- e. Attach the cable covers① stored the cable covers② and fasten the four screws①.

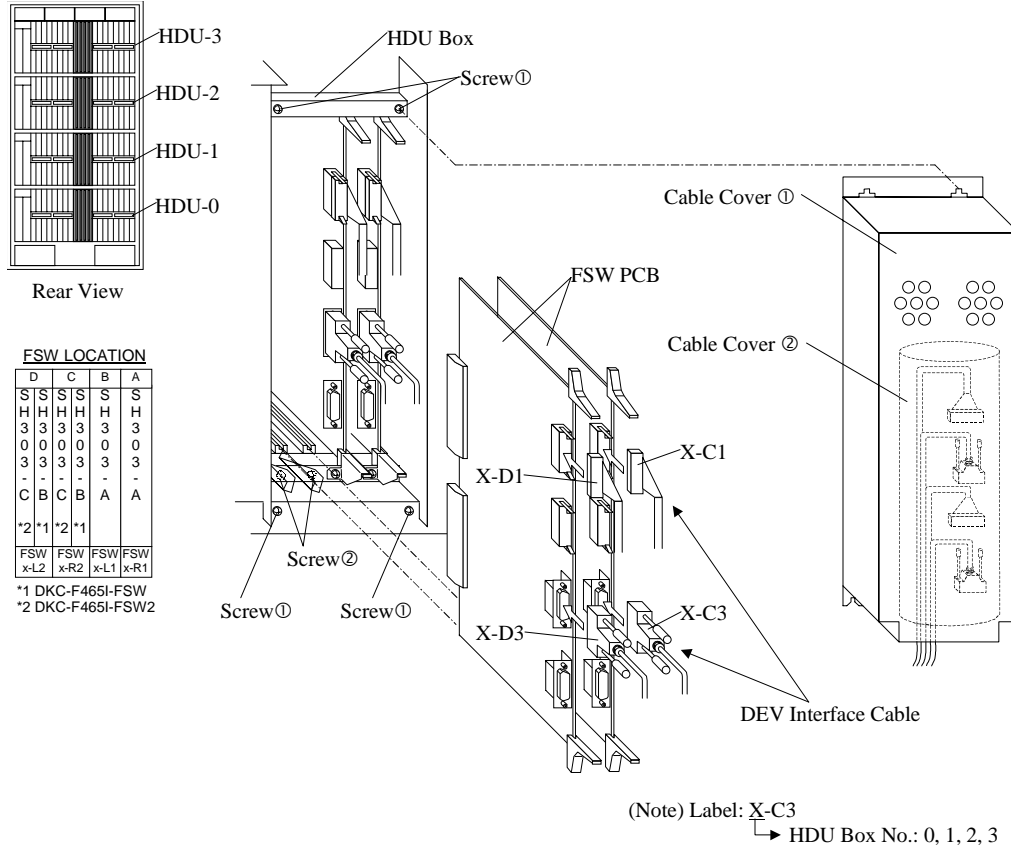


Fig. 3.8.5-7 Insertion of FSW PCBs

2-2 Attach the nameplate.

- a. Attach the nameplate regardless of the model number from the left of the cover.

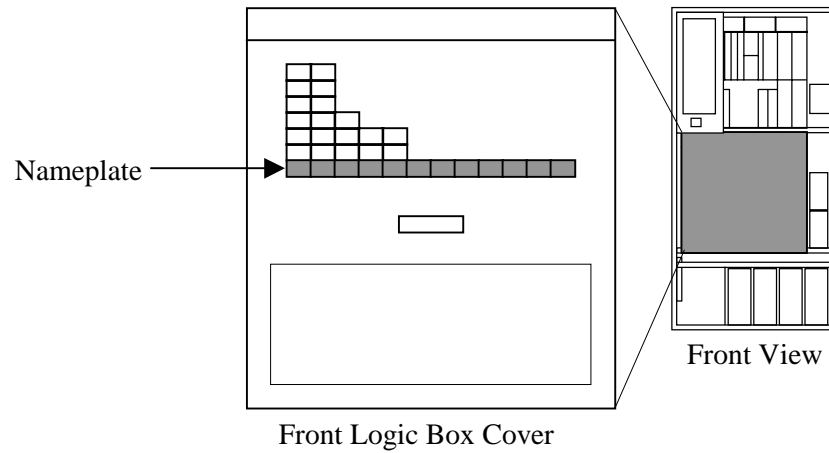


Fig. 3.8.5-8 Attachment of Nameplate

3. Installation Procedure of HDD Canister

3-1 Confirmation of position to install HDD canister

a. Confirm a position to install HDD canister.

No.	Model Number	Model Name	Data and Parity
1	DKU-F455I-36K4/72J4	4 HDD Canisters	Data and Parity Drive

(1) Entry Model or Full-spec Model (1 DKA Pair Model)

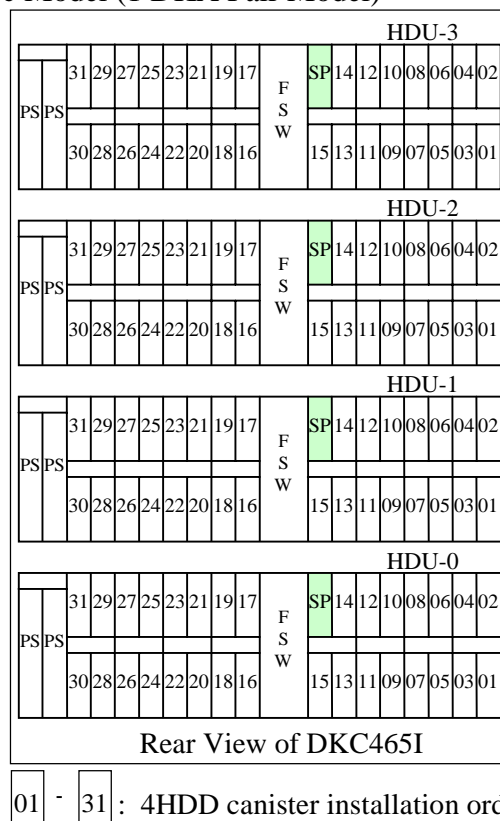


Fig. 3.8.5-9 Data Drive/Parity Drive Expansion Sequence (1 DKA Pair Model)

The relationship between HDDs installation order and RAID group number is shown in the following table.

Table 3.8.5-2 Relation between HDDs installation order and RAID group number (1 DKA Pair Model)

Group No.	Installation Order	Group No.	Installation Order	Group No.	Installation Order	Group No.	Installation Order
1-1	001	1-2	002	1-3	003	1-4	004
1-5	005	1-6	006	1-7	007	1-8	008
1-9	009	1-10	010	1-11	011	1-12	012
1-13	013	1-14	014	1-15	015	1-16	SP
1-17	016	1-18	017	1-19	018	1-20	019
1-21	020	1-22	021	1-23	022	1-24	023
1-25	024	1-26	025	1-27	026	1-28	027
1-29	028	1-30	029	1-31	030	1-32	031

(2) Full-spec Model (2 DKA Pairs Model)

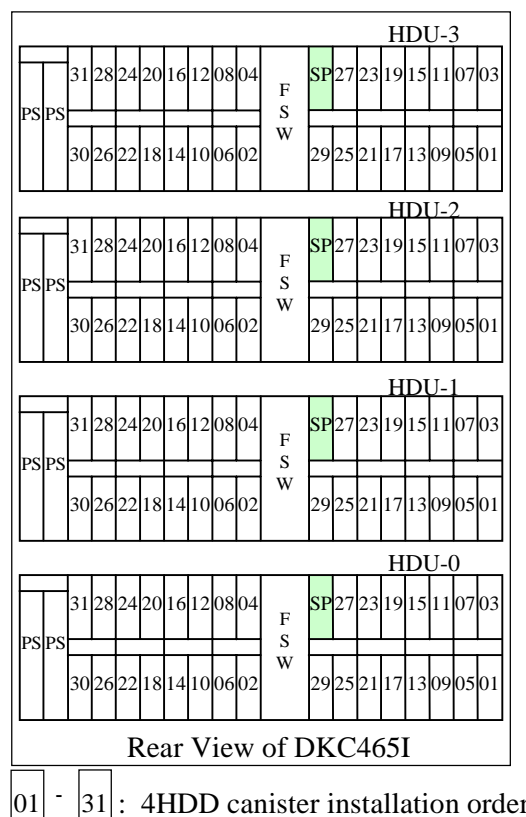


Fig. 3.8.5-10 Data Drive/Parity Drive Expansion Sequence


The relationship between HDDs installation order and RAID group number is shown in the following table.

Table 3.8.5-3 Relation between HDDs installation order and RAID group number (2 DKA Pairs Model)


Group No.	Installation Order	Group No.	Installation Order	Group No.	Installation Order	Group No.	Installation Order
1-1	001	1-2	003	1-3	005	1-4	007
1-5	009	1-6	011	1-7	013	1-8	015
1-9	017	1-10	019	1-11	021	1-12	023
1-13	025	1-14	027	1-15	029	1-16	SP
2-1	002	2-2	004	2-3	006	2-4	008
2-5	010	2-6	012	2-7	014	2-8	016
2-9	018	2-10	020	2-11	022	2-12	024
2-13	026	2-14	028	2-15	030	2-16	031

No.	Model Number	Model Name	Data and Parity
1	DKU-F455I-36K1/72J1	1 HDD Canister	Spare Drive

Entry Model or
Full-spec Model (1DKA Pair Model)

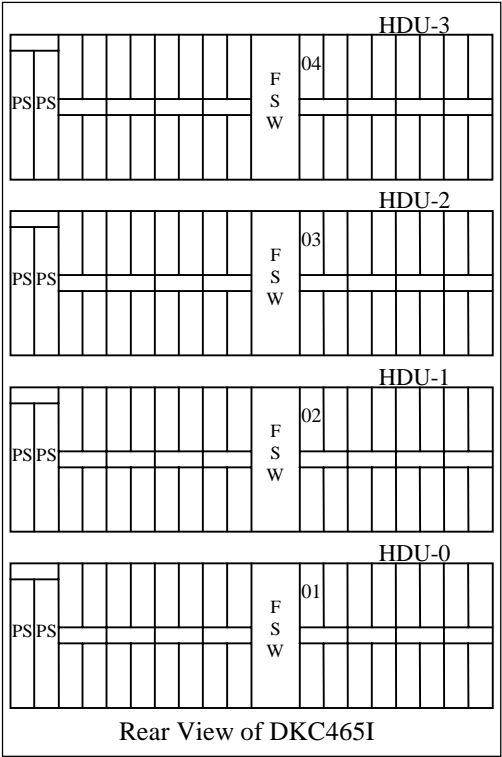

Full-spec Model (2DKA Pairs Model)

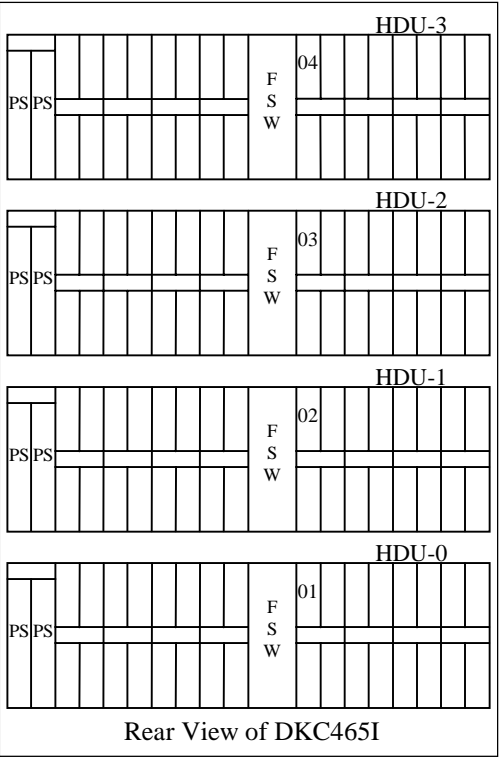

01 - 04 : Spare HDD canister installation order

Fig. 3.8.5-11 Spare Drive Expansion Sequence

3-2 Installation of the HDD Canister.

NOTICE:

Since the HDD is a precision component, handle it very carefully not to apply a vibration or shock to it.

- a. Remove the dummy canister from the HDU Box.
When the dummy canister cannot be removed by pulling of it only, remove it referring to page [INST03-DKA-630](#).
- b. Install the HDD canister. (For the detailed procedure for installation, refer to the procedure for installing HDD canister on page [INST03-DKA-640](#).)


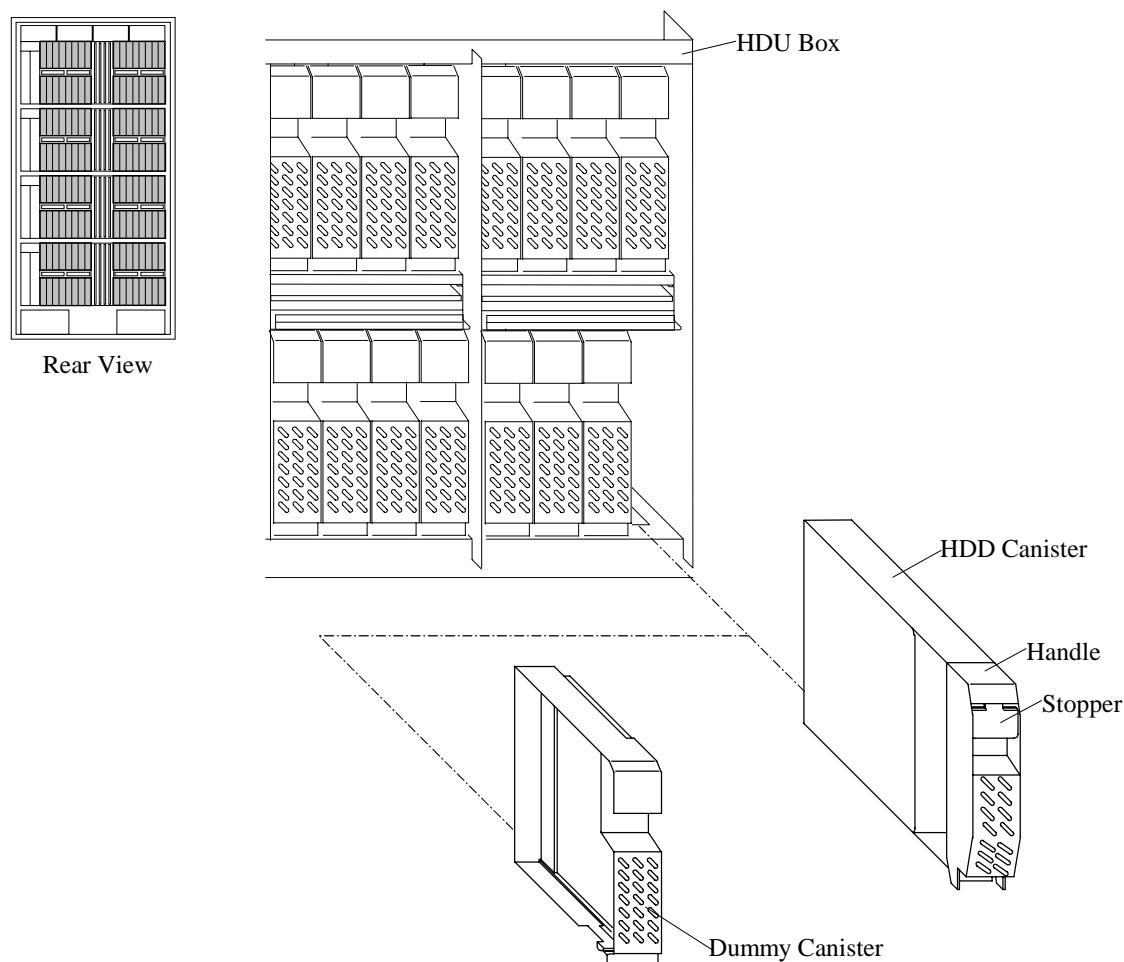


Fig. 3.8.5-12 Installation of HDD Canister

3-3 Attachment of the nameplate.

- a. When the corresponding nameplate is not attached, attach the nameplate from the left of cover. Paint out mounting numbers on the nameplate.

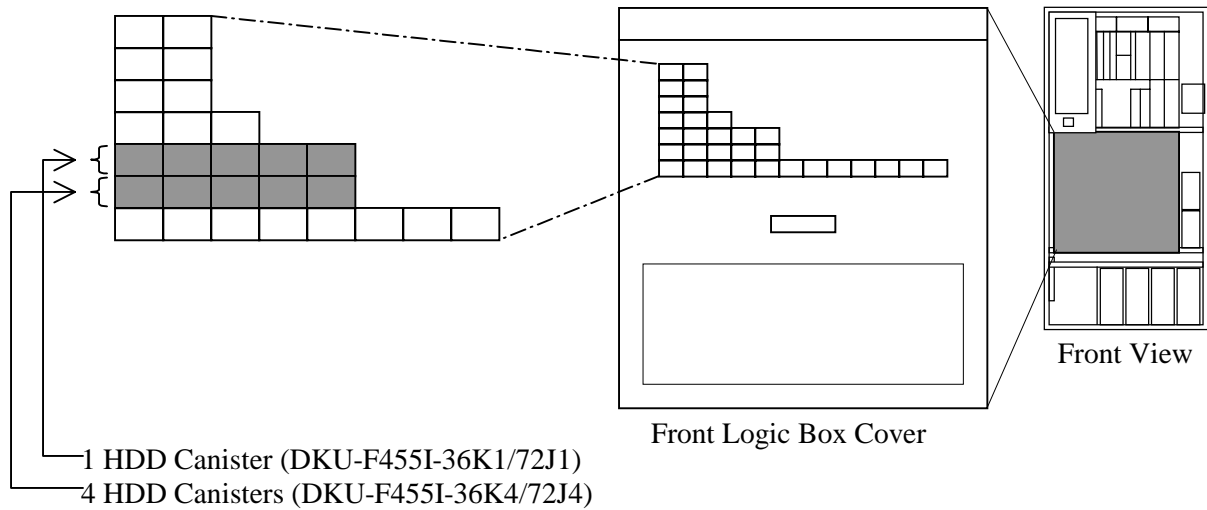

[Example]

When the 7 DKU-F455I-72J4 sets are installed


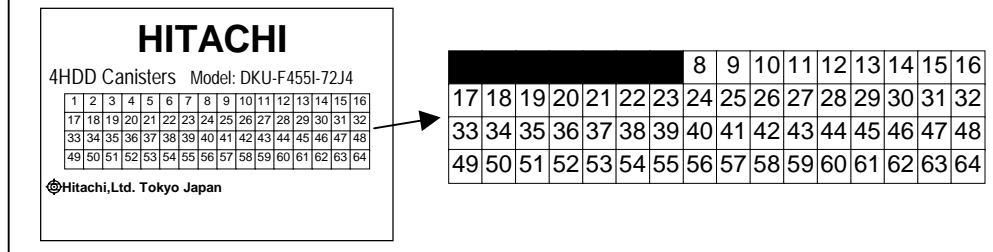


Fig. 3.8.5-13 Attachment of Nameplate

Procedure for removing the dummy canisters when they cannot be removed by pulling only.

- a. While pulling the dummy canister by hand, insert a screwdriver (whose maximum shaft diameter is 5mm) into the gap of the canisters.
- b. Release the hook using the screwdriver and remove the dummy canister.

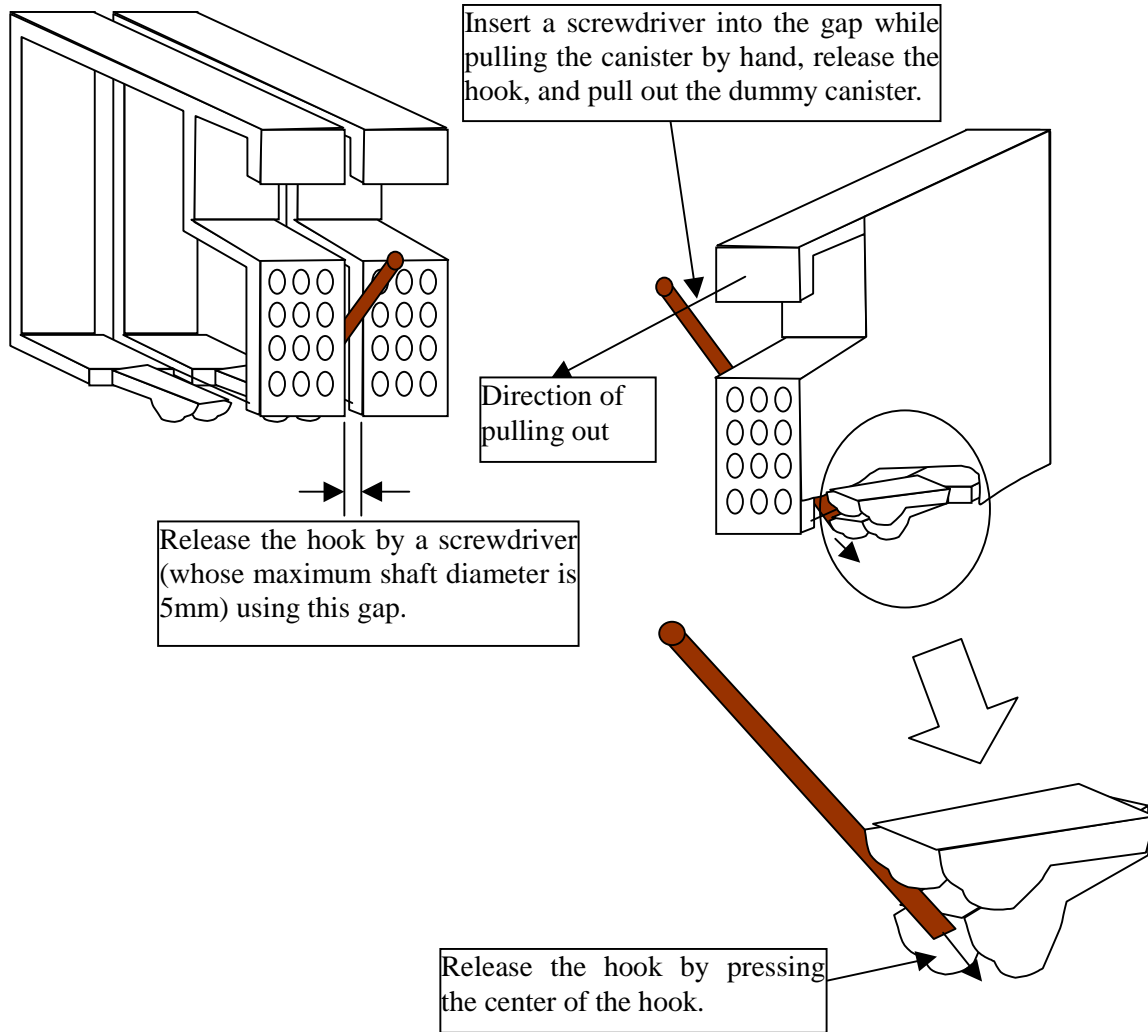

HDD canister install procedure


Note on the installation: Do not insert the HDD canister by pushing its frame.

- (1) Insert the HDD canister into the HDU Box holding its handle.

(Insert the canister until the claws that are located at the bottom of the handle come in contact with the front side of the HDU Box.)


- (2) Turn the handle at a stroke by pushing its top with your thumb.
(Turn the handle until it latches with the stopper. Do not stop the handle on its way of turning.)

Handling of the canister

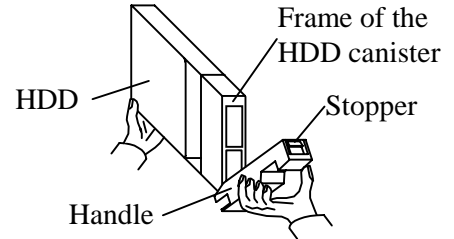

- (1) Insert the HDD canister into the HDU Box holding its handle.

A gap exists between the connectors.

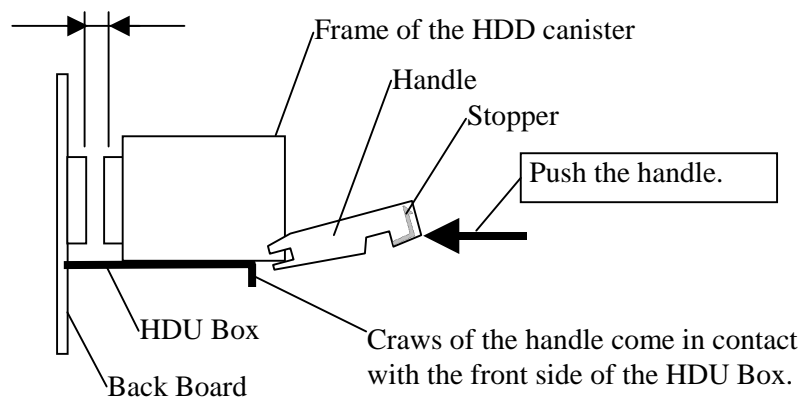

- (2) Turn the handle at a stroke by pushing its top with your thumb.
(Do not stop the lever on its way of turning.)

The connectors have been coupled.

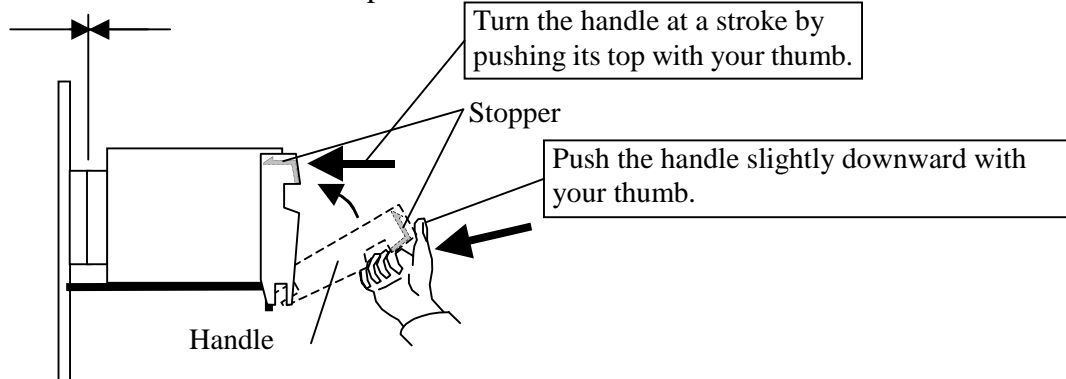


Fig. 3.8.5-14 Method of Installing HDD Canister

3.9 Installation of SVP High Reliability Kit (DKC-F460I-SVP)

Table 3.9-1 Parts List

No.	Model Number	Part Name	Part No.	Quantity	Remarks
1	DKC-F460I-SVP	SVP ASSY	2105598-B	1	
		SVPPS BOX	5513997-A	1	
		Stopper (SVP-WR)	5515587-1	1	
		Rubber (SVP-WR)	5515588-1	1	
		Stopper (SVP-WF)	5515586-1	1	
		Screw	BS306N	4	
		Screw	SB408N	3	
		Screw (Stopper)	5513661-408	2	
		Hinge (SVP)	3254970-1	2	
		Nameplate (HDS)	2105902-105	1	RSD
			2105903-105		HICAM
			2105903-205		HICEF
		Nameplate (HP)	2105902-205	1	RSD
			2105903-305		HICAM
			2105903-405		HICEF

1. Installation Procedure of SVP High Reliability Kit

Be sure to wear your wrist strap and attach to ground prior to performing the following work. This will ensure that the IC and LSI on the PCB are protected from static electricity.

1-1 Attach the stopper.

- a. Attach the Hinges (SVP) with the four screws.

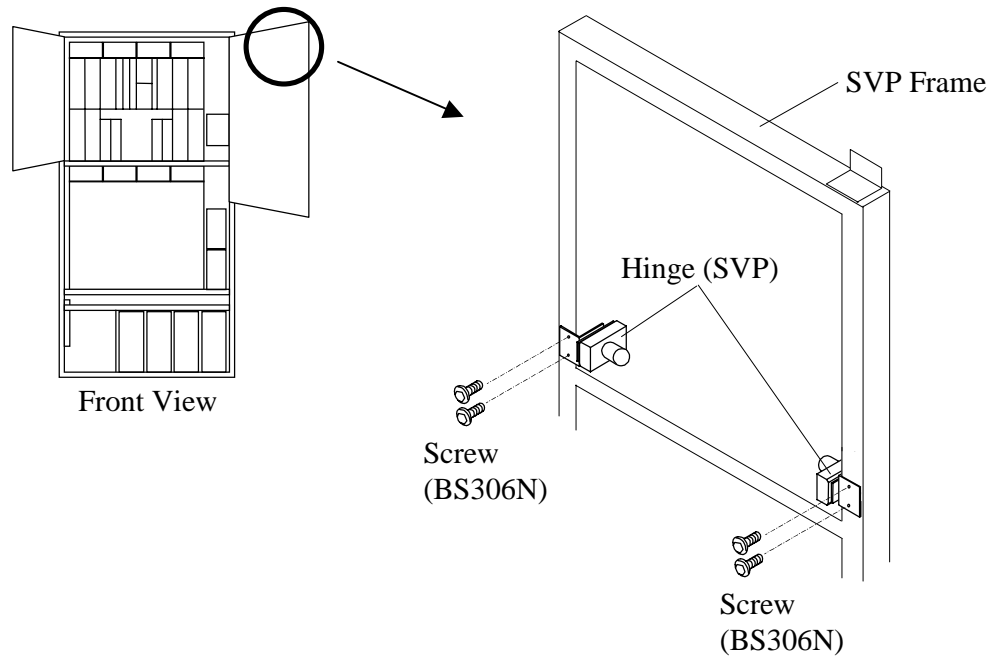


Fig. 3.9-1 Attachment of Hinges

- b. Stick the Rubber (SVP-WR) to the Stopper (SVP-WR).
- c. Attach the Stopper (SVP-WR) with the two screws.

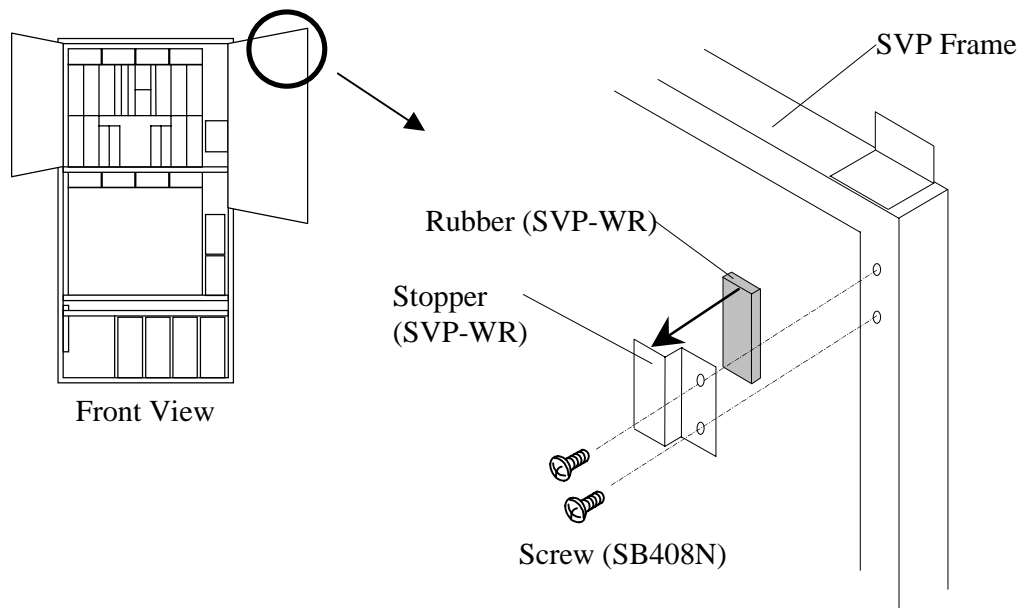


Fig. 3.9-2 Attachment of Stopper

- d. Attach the Stopper (SVP-WF) with the two screws.

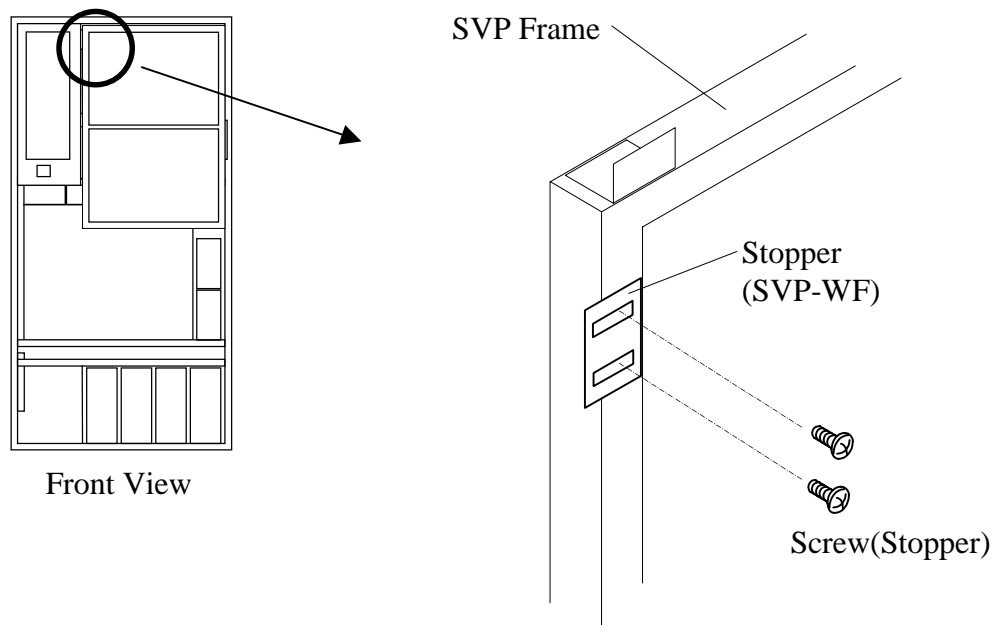


Fig. 3.9-3 Attachment of Stopper

1-2 Attach the SVP Assy.

- Loosen the two screws and remove the SVP cover.
- Install the SVP Assy to the cabinet and attach the stoppers with screws.
- Attach the SVP cover with the screws.

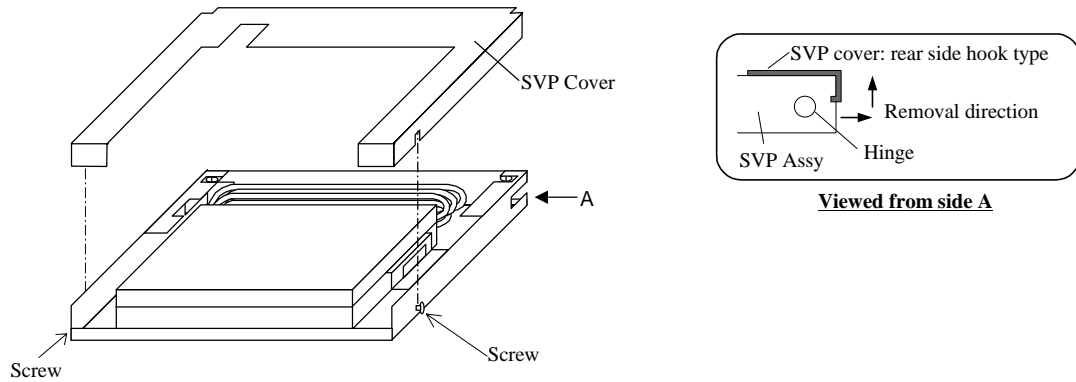


Fig. 3.9-4 Removal of SVP Cover

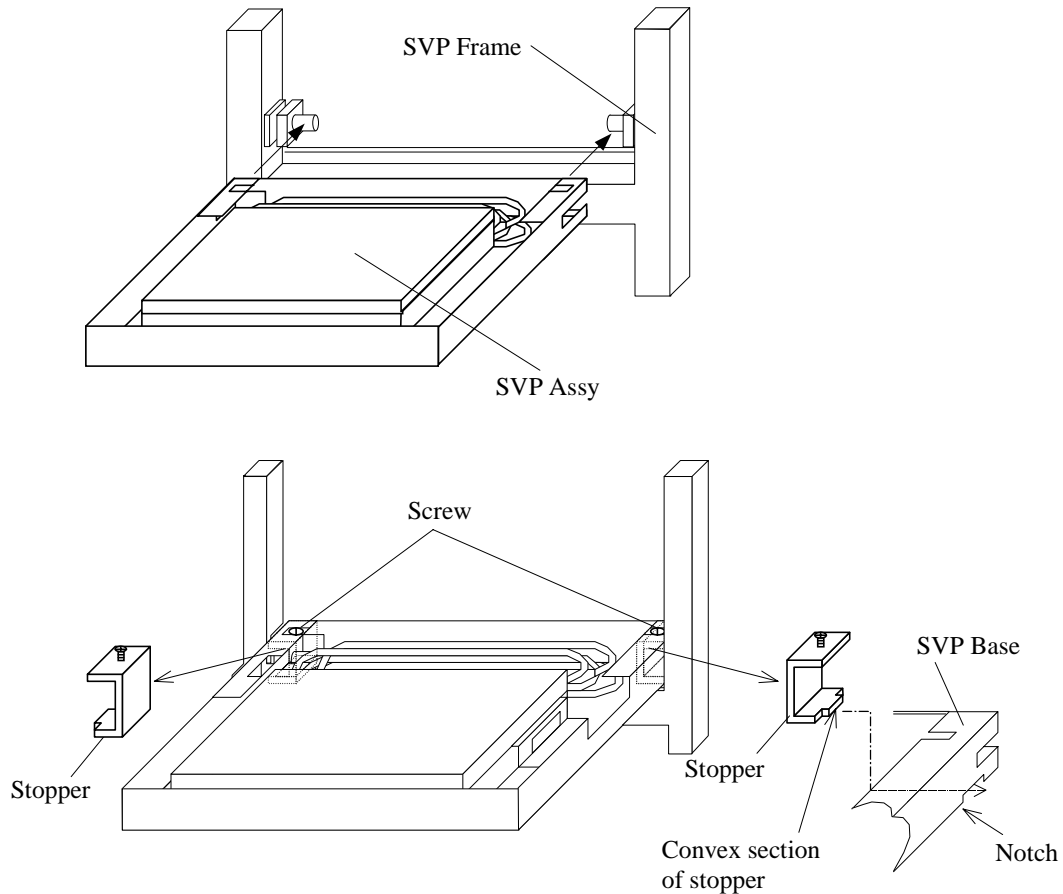


Fig. 3.9-5 Insertion of SVP ASSY

1-3 Attach the SVPPS BOX.

- a. Attach the SVPPS BOX with the screw.

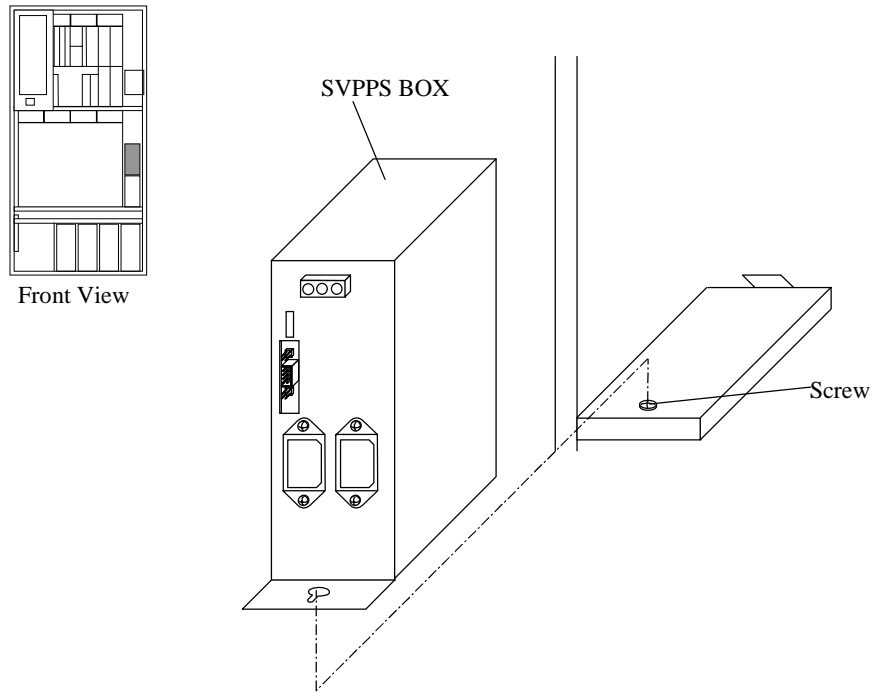


Fig. 3.9-6 Attachment of SVPPS BOX

1-4 Fix the cables.

- a. Fix the cables with the locking clamps.

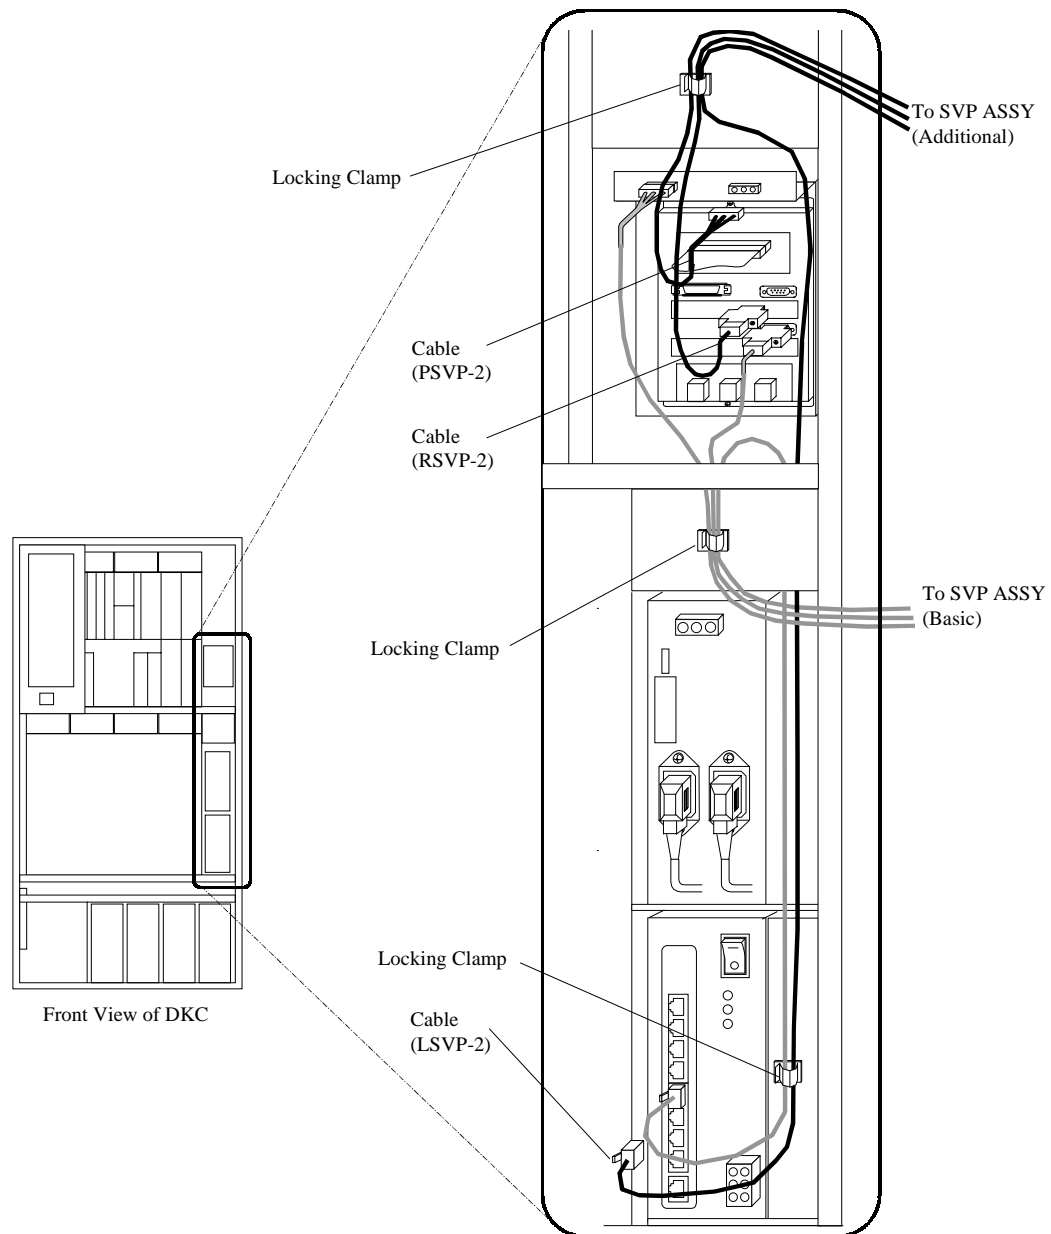


Fig. 3.9-7 Fixation of Cables

1-5 Connect the cables (1).

- a. Connect the cables (P40, PS-BOX-1, PS-BOX-2) to the SVPPS BOX.
The cable (P41) is not to be connected at this time, however.

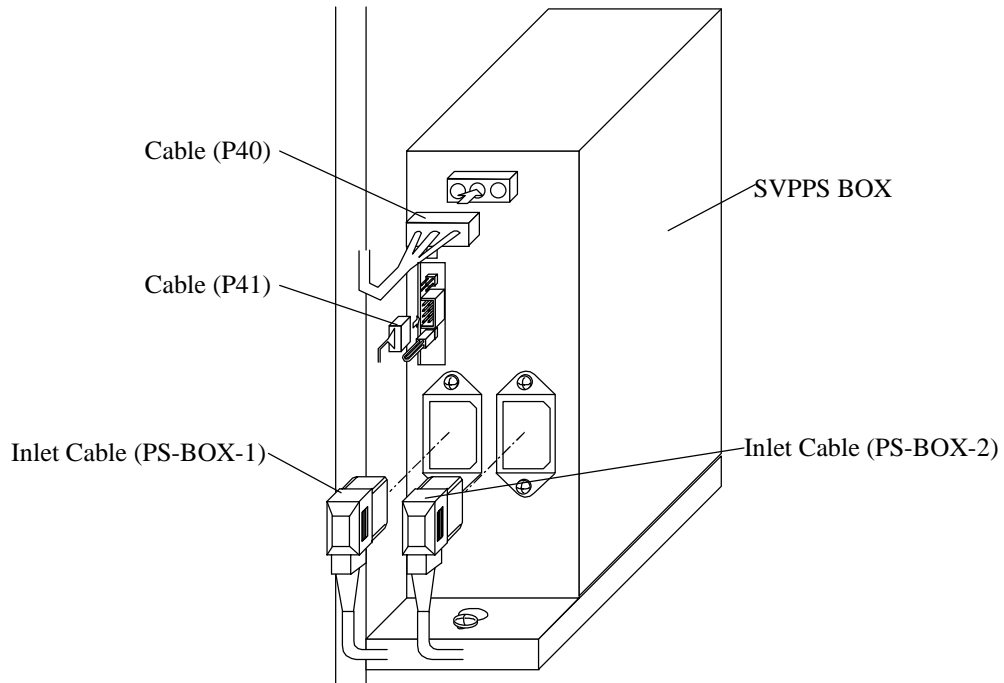


Fig. 3.9-8 Connection of Cables

- b. Connect the cables (PSVP-2, RSVP-2) to the RS CON.

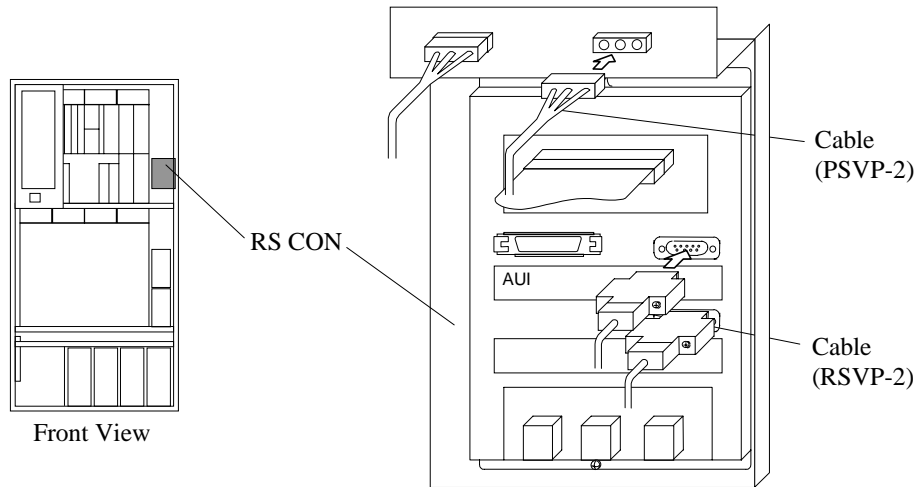


Fig. 3.9-9 Connection of Cables

Note: The LAN cable to the HUB BOX is not to be connected.

1-6 Attach the nameplate.

- a. Attach the nameplate regardless of the model number from the left of the cover.

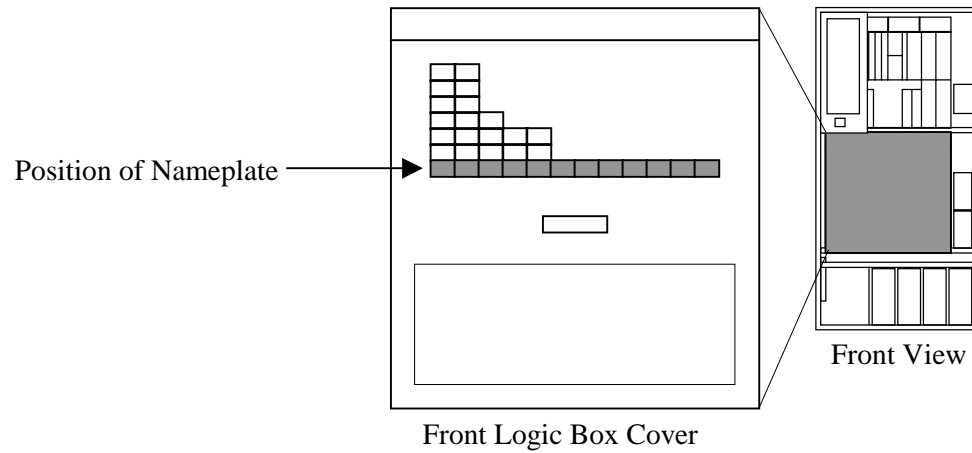


Fig. 3.9-10 Location of the Nameplate

2. Operating Additional SVP

Operate the additional SVP as shown below.

CAUTION

The SIMRC = 7410ff/7ff200/7ff201 may occur during this operation. But that is not a problem.

2-1 Set Date/Time


(1) <Open [Control Panel]>

Select (DR) [Settings] and then [Control Panel] from [Start].




(2) <Open [Date/Time]>


Select (DC) [Date/Time] from [Control Panel].

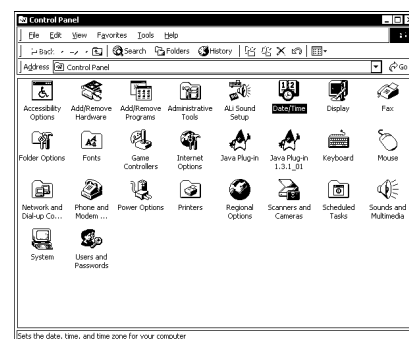


- (3) <Select [Time Zone]>
Select (CL) [Time Zone].

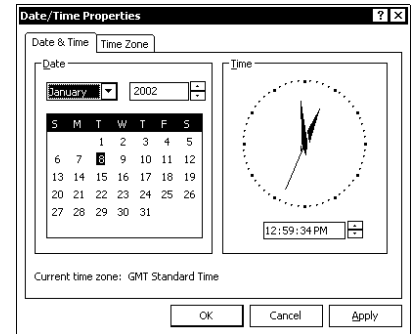


- (4) <Check the setting of [Time Zone]>
Make sure that the setting of [Time Zone] is without the relation of a subsystem position “[GMT] Greenwich Mean Time; Dublin, Edinburgh, Lisbon, London”. Also, make sure that a check box on the left of “Automatically adjust clock for daylight saving changes” is ☐ (without a check mark). Then, select (CL) [Date/Time].

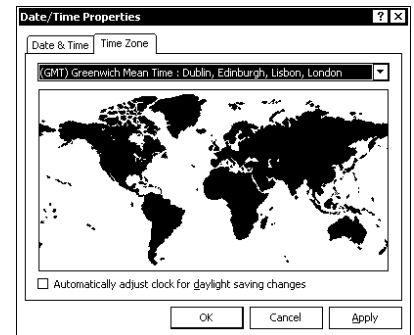

- (5) <Set the [Date/Time]>
Check if the [Date/Time] is set to the current time and date. If not, reset it correctly. Then, select (CL) [OK].

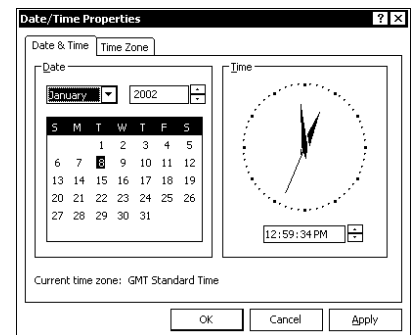

- (6) <Close “Control Panel”>
Select (CL) [File] on “Control Panel”.
Select (CL) [Close].

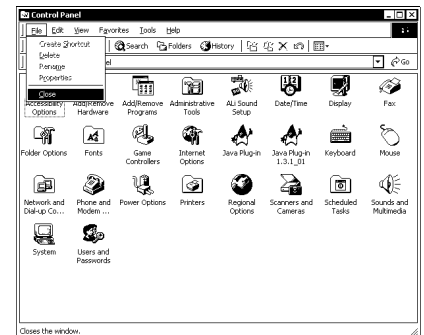

2-2 Installation of Micro-program


- ① Insert the CD-ROM disk into the CD-ROM drive and then wait one minute.
- ② Select (CL) [Run...] from the [Start]. Enter “e:/setup.exe” and press the [Enter] key.

2-3 Installation of Configuration

(1) Inserting the Config FD


- ① A message “Please insert the Config FD into the FDD.” is displayed.
- ② Insert the Config FD into the FDD and select (CL) [OK].

If you insert the previously backed-up Config FD, the original configuration is recovered.

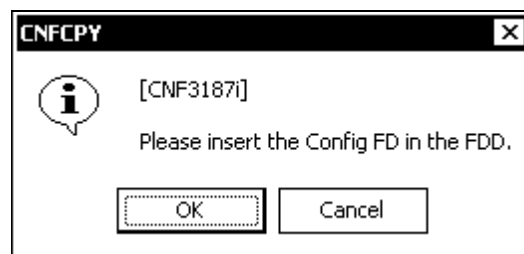

(2) Removing the Config FD

- ① When the copying of the Config is completed, a message “Please remove the Config FD.” is displayed.
- ② Remove the Config FD from the FDD and select (CL) [OK].

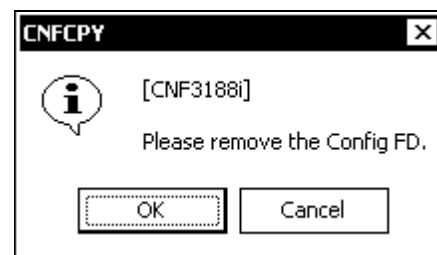


2-4 JAVA Setup

2-4-1 JAVA Setup

Java Setup is executed. When Java has already been installed, proceed to Step 2-4-2.


(1)

Select (CL) [Yes].

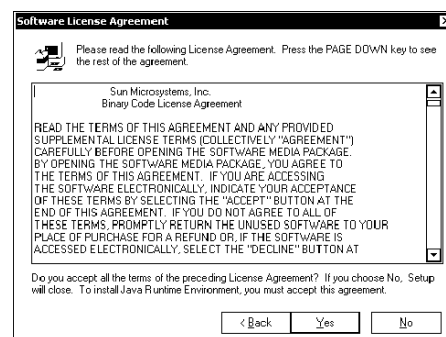

(2)

Select (CL) [Next].

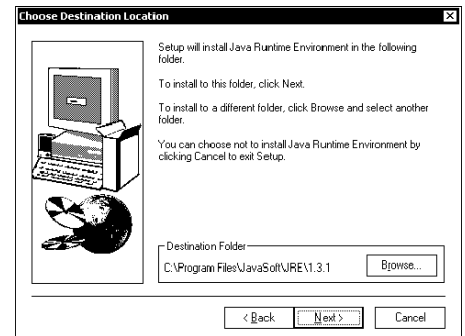


2-4-2 APACHE Setup

APACHE Setup is executed. When APACHE has already been installed, proceed to Step 2-5.


(1)

Select (CL) [Next].

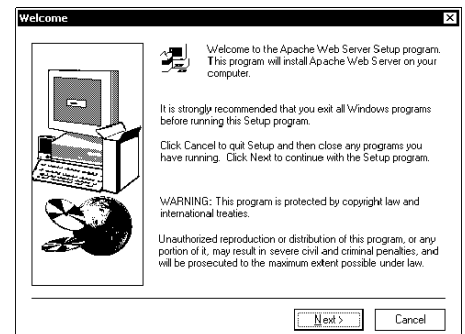


(2)

Select (CL) [Yes].

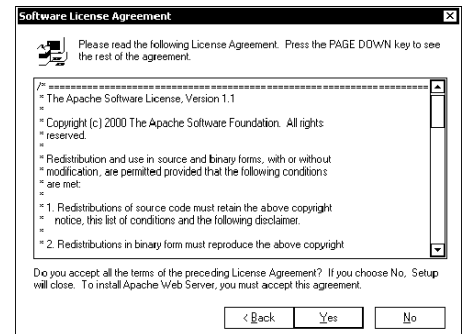


(3)

Select (CL) [Next].

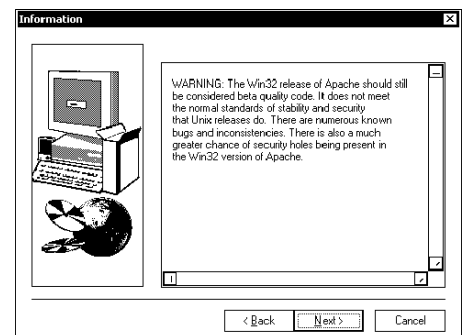


(4)

Select (CL) [Next].

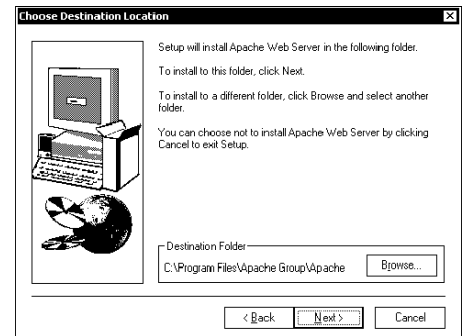


(5)

Select (CL) [Next].

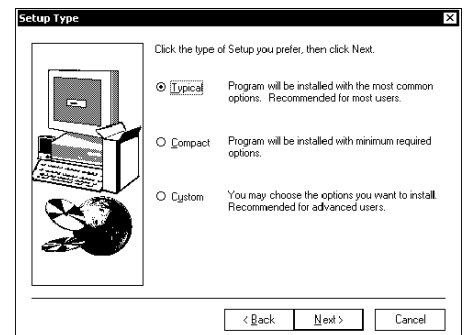


(6)

Select (CL) [Next].

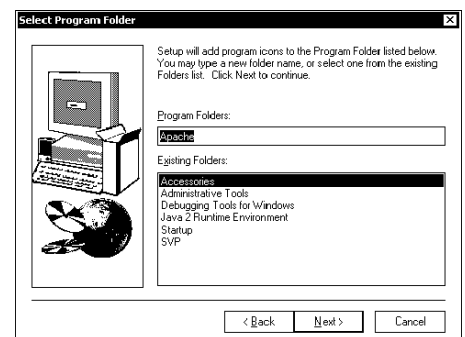

(7)

Remove the check box of "Yes and I want to view the README file.", and select (CL) [Finish].

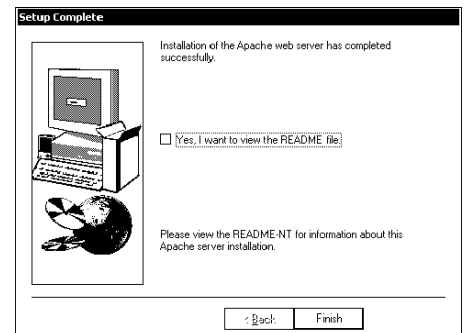

2-5 Restarting the SVP

When the setup is completed, the SVP restarts automatically.

2-6 <Setting an IP Address and Duplication of Optional SVP>

(1) <Changing the mode>


Change the mode by selecting [Modify Mode].

(2) <Opening the Install window>

Select (CL) [Install] from the [SVP] menu.

(3) <Selecting [Set SVP IP Address]>

Select (CL) [Set IP Address] in the [Install] window.

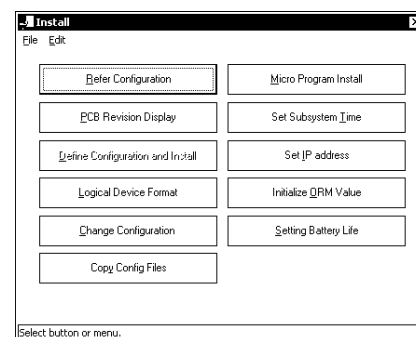

(4) <Setting an IP address>

Select (CL) [SVP] in the Internal IP Address box and enter an IP address and subnet mask of the internal IP address.

The 'Set IP Address' dialog box contains the following fields and options:

- Internal IP Address:**
 - Target: ☒ SVP, ☐ SVP and D/KC
 - IP Address: [] [] [] [] 15
 - Subnet Mask: [] [] [] [] 0
 - IP Address source: ☒ Based on Serial Number, ☐ Based on Magic Number, ☐ Specified
- External IP Address:**
 - ☒ Use Duplex SVP
 - SVP Kind: ☒ Master SVP, ☐ Standby SVP
 - Master SVP:** IP Address [158] [214] [127] [170], Subnet Mask [255] [255] [255] [0]
 - Standby SVP:** IP Address [158] [214] [127] [172], Subnet Mask [255] [255] [255] [0]

Buttons: OK, Cancel

(5) <Setting the SVP duplication>

- Select (CL) [Use Duplex SVP] in the External IP address box.
- Select (CL) [Standby SVP] in the SVP Kind box.
- Enter the IP addresses and subnet masks of the Master and Standby SVPs, and then select (CL) [OK].

* You do not have to enter the information of Item (c) above when the setting of the external IP address is not required.

This dialog box is identical to the one in step 4, but with the following changes:

- External IP Address:** ☒ Use Duplex SVP
- SVP Kind:** ☐ Master SVP, ☒ Standby SVP

Buttons: OK, Cancel

(6) <Confirming the external IP address setting>

When a message, "After finishing this operation, you must use the Windows Control Panel to change the external IP address." is displayed, select (CL) the [OK] button.

The 'SVP' dialog box displays a warning icon and the following text:

[INS3325W]
After finishing this operation, you must use the Windows Control Panel to change the external IP address.

Button: OK

(7) <Inserting the Config FD>

Insert the Config FD into the FDD and select (CL) [OK].


The 'CNFCPY' dialog box displays an information icon and the following text:

[CNF3187i]
Please insert the Config FD in the FDD.

Button: OK

(8) <Removing the Config FD>

When the copying of the Config is completed, a message, “Please remove the Config FD.” is displayed. Remove the FD and select (CL) [OK].

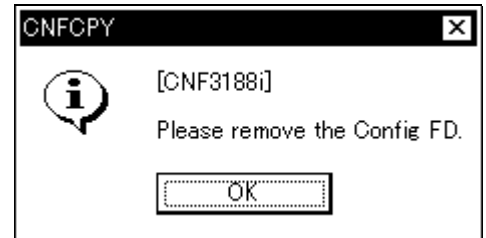

(9) <Confirming rebooting of the SVP>

Select (CL) [OK] in response to a message, “This will reboot SVP.”.




2-7 <Setting an external IP address>


When the setting of the external IP address is not required, go to Step 2-8.

(1) <Opening the Network and Dial-up Connections window>


Select (CL) [Settings] and [Network and Dial-up Connections] in this order from the [Start].

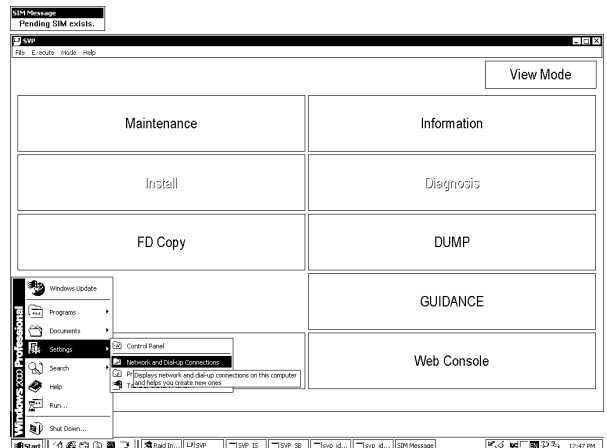


- (2) <Opening the Local Area Connection 2 window>
Select (CL) [Local Area Connection 2] in the Network and Dial-up Connections window.

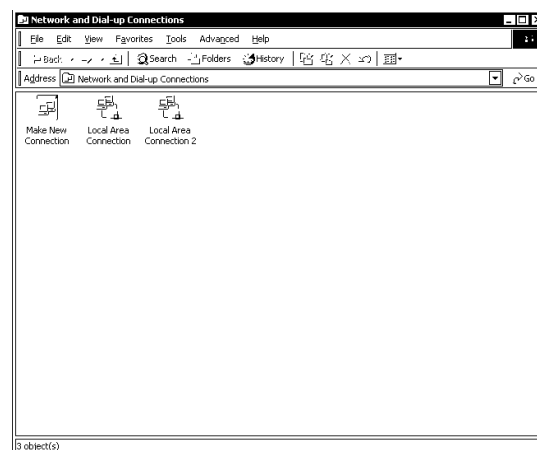

- (3) <Opening the Local Area Connection 2 Properties window>
Select (CL) [Internal Protocol (TCP/IP)] in the Local Area Connection 2 Properties window, and then select the [Properties] button.

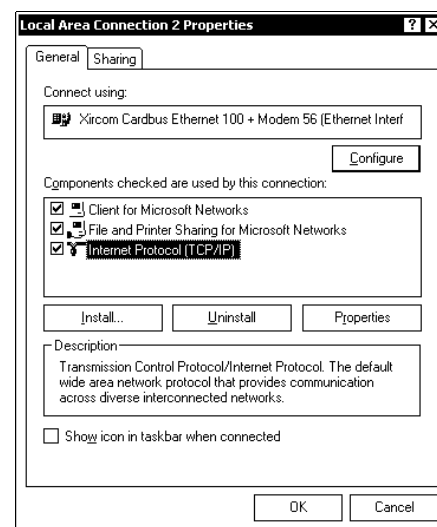

- (4) <Setting an external IP address>
Set the IP address and subnet mask, and then select (CL) the [OK] button.

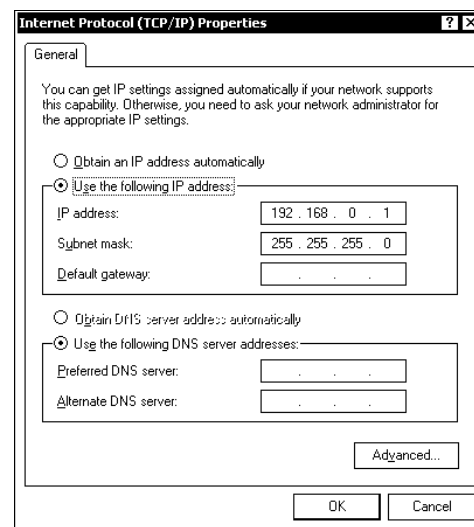

2-8 Setting Web Console

Make a setting of the Web Console according to [Web Station] section. ([WEB01-10](#))

i) Copy the following files under c:\program files\apache group\apache\cgi-bin\Utility\CSV.

- USERLIST.CSV
- STRLIST.CSV
- ENV.CSV

ii) Please perform the following procedure, when you use SNMP Agent.

1. Push Web Console button.
2. Open the SNMP Information Tab.
3. Remove the check mark of Extension SNMP and push Apply button.
4. Add the check mark of Extension SNMP and push Apply button again.

iii) Please perform the following procedure, when you don't use SNMP Agent.

1. Push Web Console button.
2. Specify Name, Contact and Location on Information Tab again.


2-9 <Erasing logs>

Erase all logs that were made during operation of the SVP.

2-10 <Shutting down the Additional SVP>

(1) <Quitting Windows>

Select (CL) [Shut Down...] from the [Start] menu.

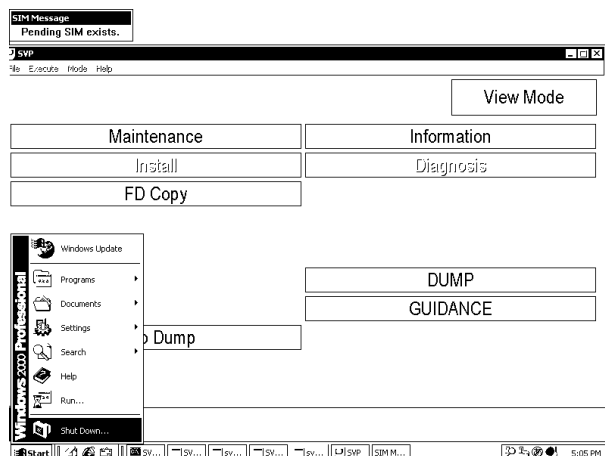

(2) <Shutting down the SVP>

Select (CL) "Shut down" in the Closing window of Windows. When a message, "What do you want the computer to do?" is displayed, select (CL) the [OK] button.



3. Operating the Basic SVP

Operate the basic SVP as follows.

3-1 Setting duplication of the Basic SVP

Operate the basic SVP as follows.

(1) <Changing the mode>


Change the mode by selecting [Modify Mode].

(2) <Opening the Install window>


Select (CL) [Install] from the [SVP] menu.

(3) <Selecting [Set SVP IP Address]>

Select (CL) [Set IP Address] in the Install window.

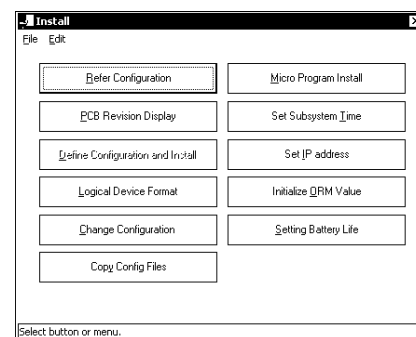

- (4) <Setting the SVP duplication>
- Select (CL) [Use Duplex SVP] in the External IP Address box.
 - Select (CL) [Master SVP] in the SVP Kind box.
 - Enter the IP addresses and subnet masks of the Master and Standby SVPs, and then select (CL) [OK].

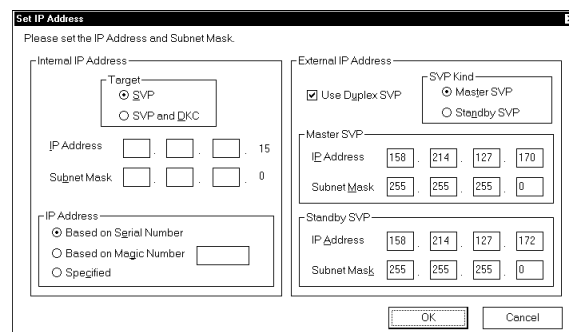


The 'Set IP Address' dialog box is titled 'Please set the IP Address and Subnet Mask.' It contains three main sections:

- Internal IP Address:** Includes a 'Target' section with radio buttons for 'SVP' (selected) and 'SVP and D/C'. Below are fields for 'IP Address' (158.214.127.15) and 'Subnet Mask' (255.255.255.0).
- External IP Address:** Includes a 'Use Duplex SVP' checkbox (checked). To its right is the 'SVP Kind' section with radio buttons for 'Master SVP' (selected) and 'Standby SVP'. Below are fields for 'Master SVP' IP Address (158.214.127.170) and Subnet Mask (255.255.255.0), and 'Standby SVP' IP Address (158.214.127.172) and Subnet Mask (255.255.255.0).
- IP Address:** Includes radio buttons for 'Based on Serial Number' (selected), 'Based on Magic Number', and 'Specified'.


Buttons for 'OK' and 'Cancel' are at the bottom right.

* You do not have to enter the information of Item (c) above when the setting of the external IP address is not required.


- (5) <Confirming the external IP address setting>
- When a message, "After finishing this operation, you must use the Windows Control Panel to change the external address." is displayed, select (CL) the [OK] button.

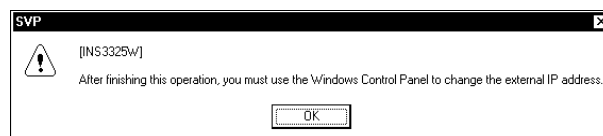

- (6) <Inserting the Config FD>
- Insert the Config FD into the FDD and select (CL) [OK].

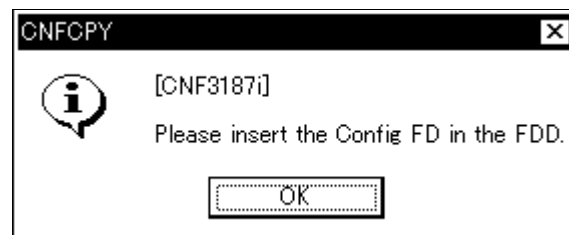

- (7) <Removing the Config FD>
- When the copying of the Config is completed, a message, "Please remove the Config FD." is displayed. Remove the FD and select (CL) [OK].

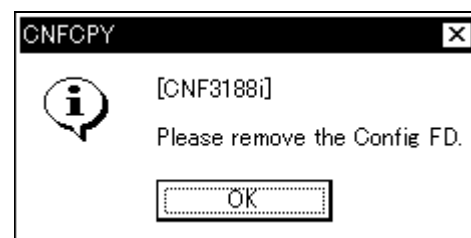

- (8) <Confirming rebooting of the SVP>
Select (CL) [OK].




3-2 <Setting an external IP address>

When the setting of the external IP address is not required, go to Step 2-12.


- (1) <Opening the Network and Dial-up Connections window>

Select (CL) [Settings] and [Network and Dial-up Connections] in this order from the [Start] menu.

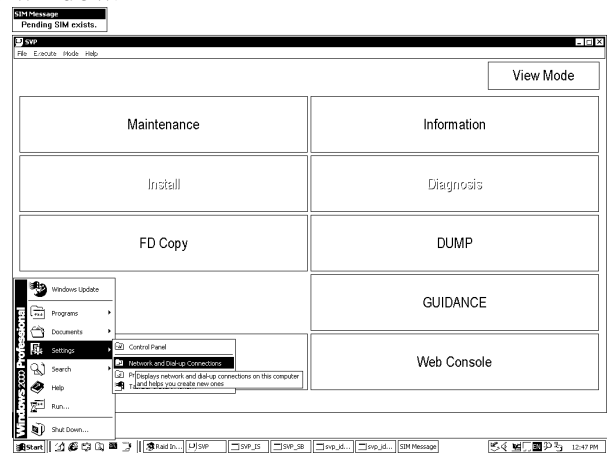


- (2) <Opening the Local Area Connection 2 window>


Select (CL) [Local Area Connection 2] in the Network and Dial-up Connections window.

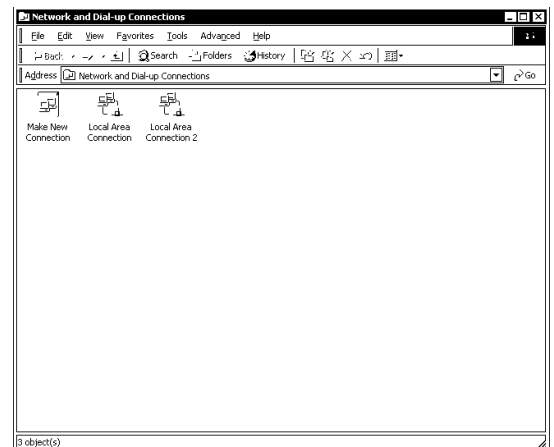

- (3) <Opening the Local Area Connection 2 Properties window>
 Select (CL) [Internal Protocol (TCP/IP)] in the [Local Area Connection 2 Properties] window, and then select (CL) the [Properties] button.

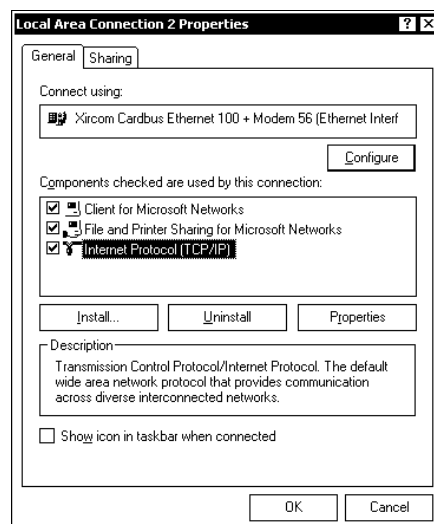

- (4) <Setting an external IP address>
 Set the IP address and subnet mask, and then select (CL) the [OK] button.

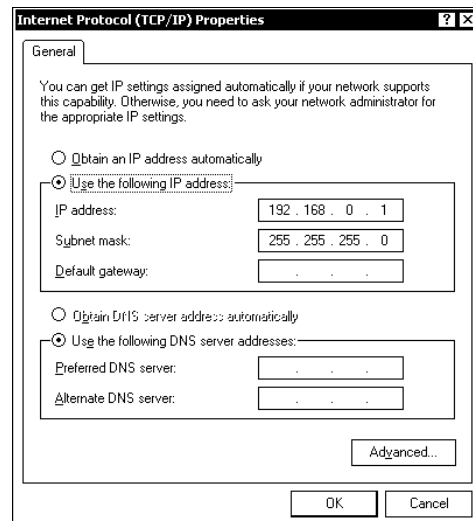

4. Connect the cables (2).

4-1 Connect the cable (P41) to the SVPPS BOX.

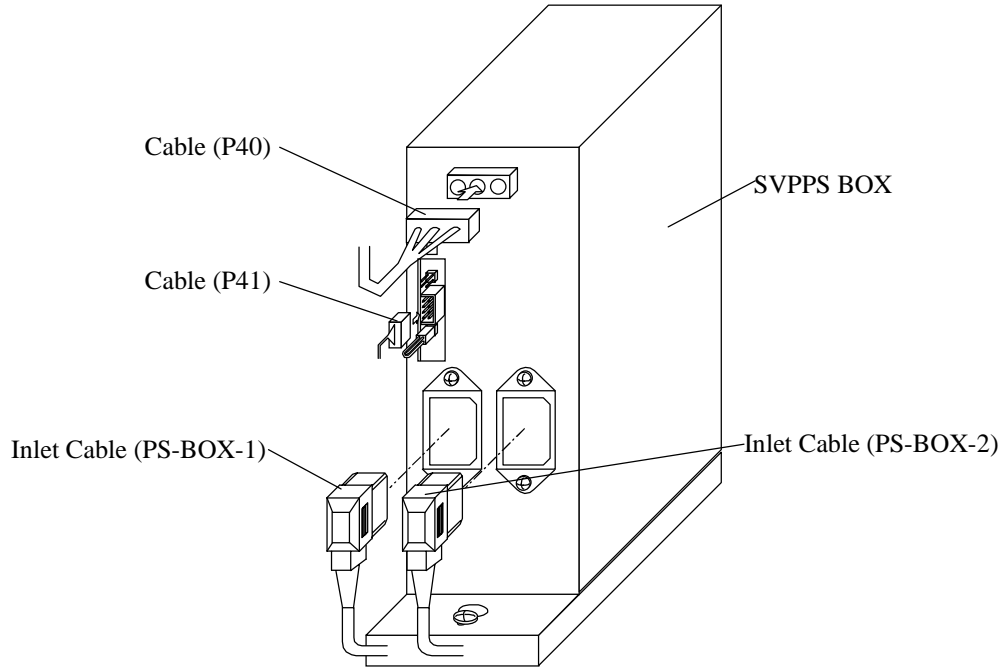


Fig. 3.9-11 Connection of Cables

4-2 Connect the LAN cable to the HUB BOX.

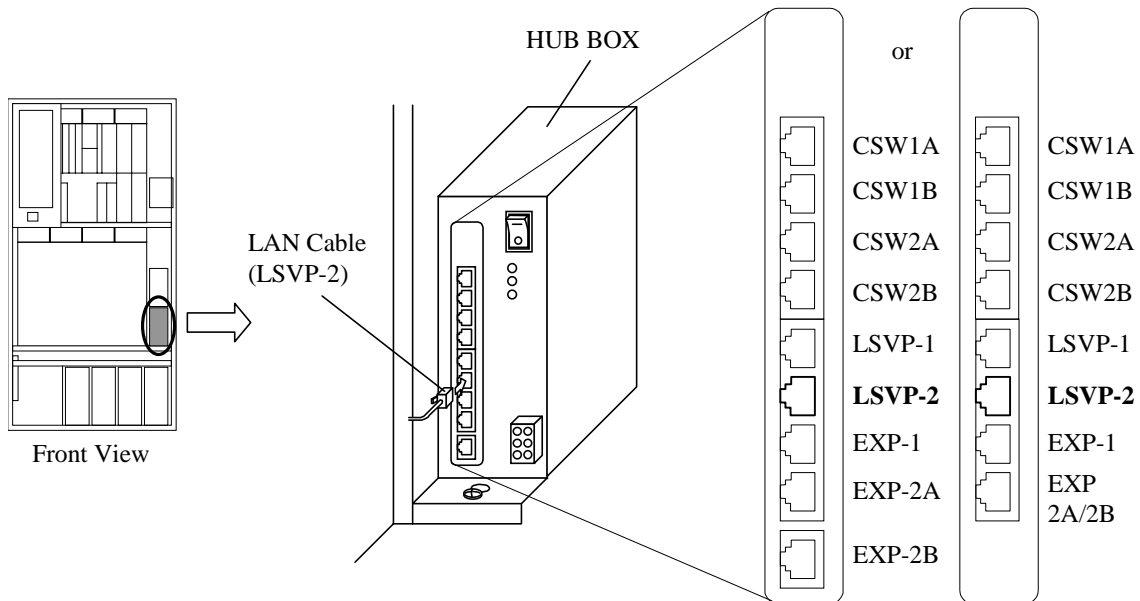


Fig. 3.9-12 Connection of Cables

5. Executing SSVP Reset

5-1 Execute the SSVP reset by pressing the SSVP ALARM RESET switch.

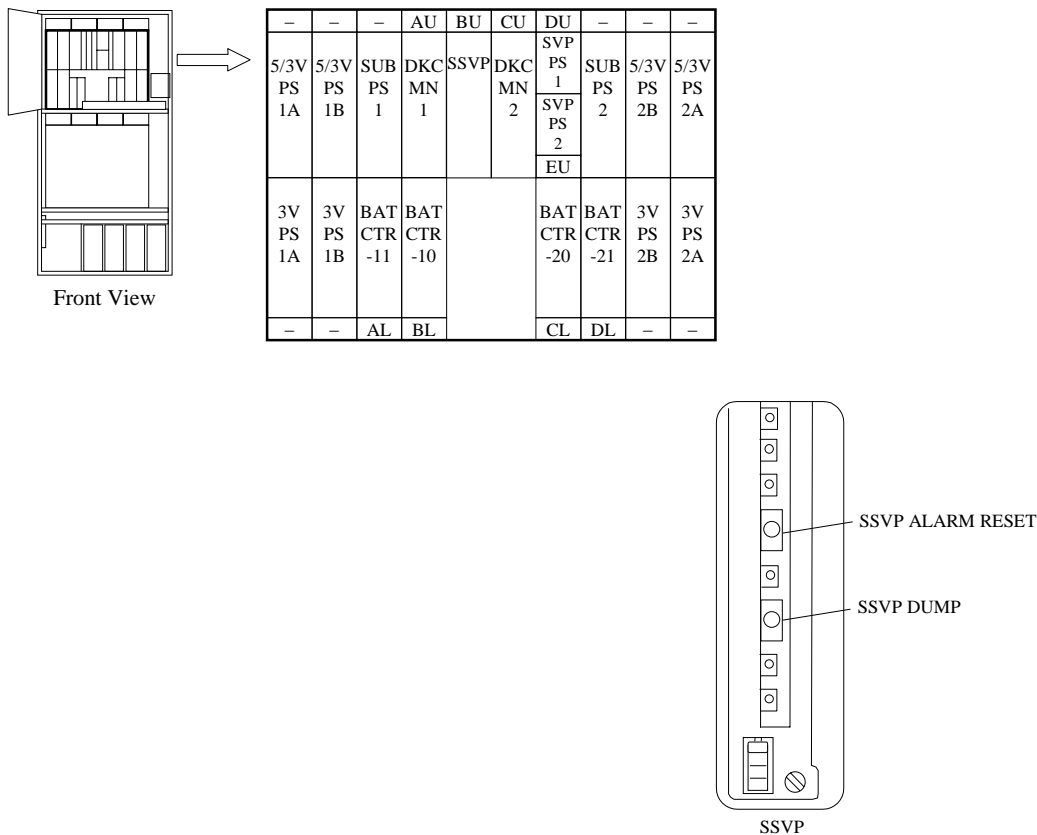


Fig. 3.9-13 SSVP Reset

5-2 Make sure that the additional SVP is powered on about eight minutes after the SSVP reset. Further, make sure that it enters the standby status about 20 minutes later.

3.10 Installation of PCI I/F Connector (DKC-F460I-18)

Table 3.10-1 Parts List

No.	Model Number	Part Name	Part No.	Quantity	Remarks
1	DKC-F460I-18	PCI CON	3257397-A	1	
		Bracket (460)	5517954-1	1	for DKC460I
		Bracket (465)	5513818-1	1	for DKC465I
		Nameplate (HDS)	2105902-104	1	RSD
			2105903-104		HICAM
			2105903-204		HICEF

Notes:

1. The subsystem is powered on when it is given an powering on instruction by any one of the host devices connected to it.

The subsystem performs the EPO or powering off when all the EPO or powering off instructions from all the host devices connected to it are given.

1. Installation Procedure of PCI I/F Connector

Be sure to wear your wrist strap and attach to ground prior to performing the following work. This will ensure that the IC and LSI on the PCB are protected from static electricity.

- 1-1 Confirm that the REMOTE/LOCAL Switch of DKC Panel is set to LOCAL. If not, set the REMOTE/LOCAL Switch to LOCAL.

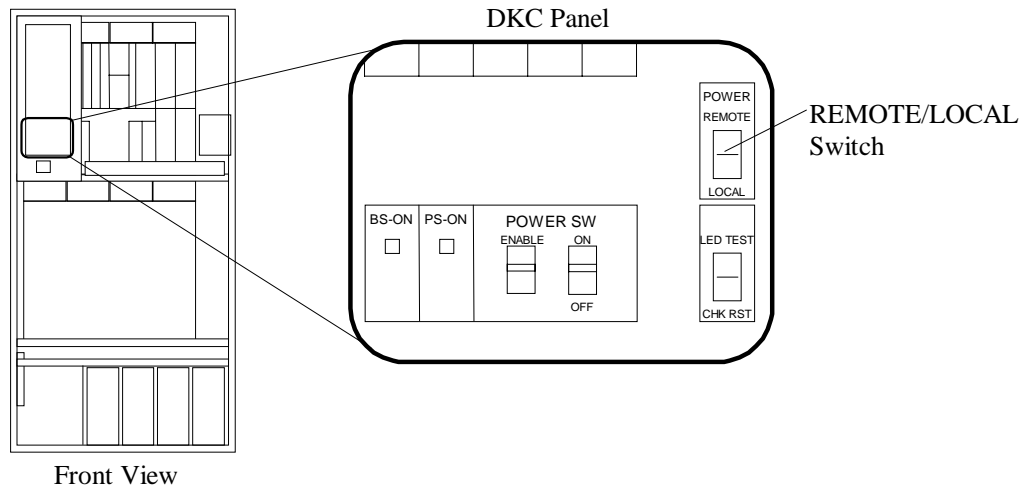


Fig. 3.10-1 Setting of REMOTE/LOCAL Switch

1-2 Setting Suppression of DKC Panel Function.

- a. Suppress the DKC panel function by inserting the maintenance jumpers into the jumper pins on the DKCMN PCBs as shown in Figure 3.10-2.

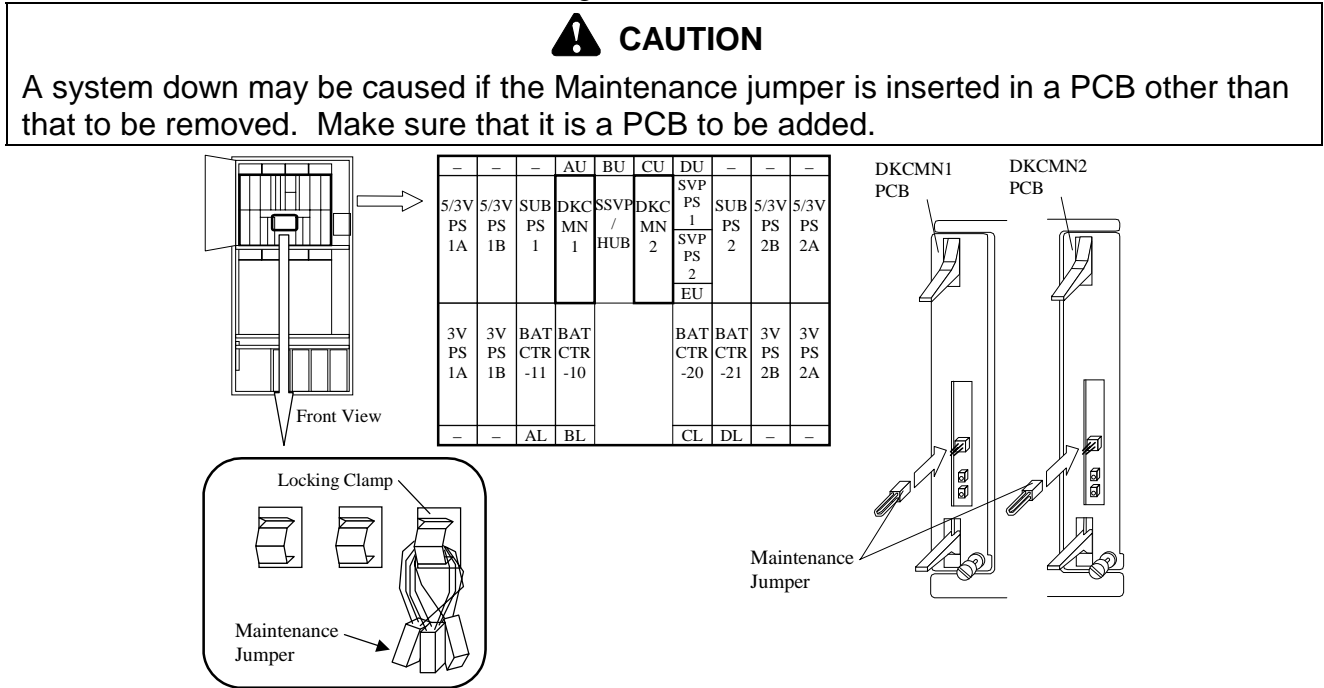


Fig. 3.10-2 Insertion of Jumper Plug

1-3 Installing PCI CON Panel.

- a. Remove the screw and remove the bracket.
- b. Attach the bracket (465) with the screw.

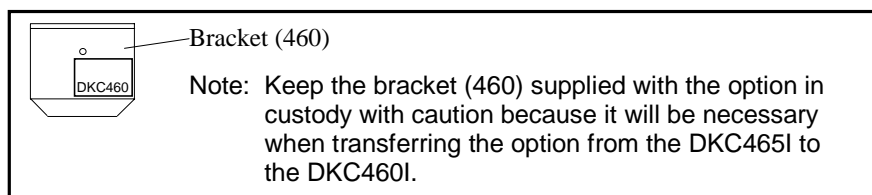
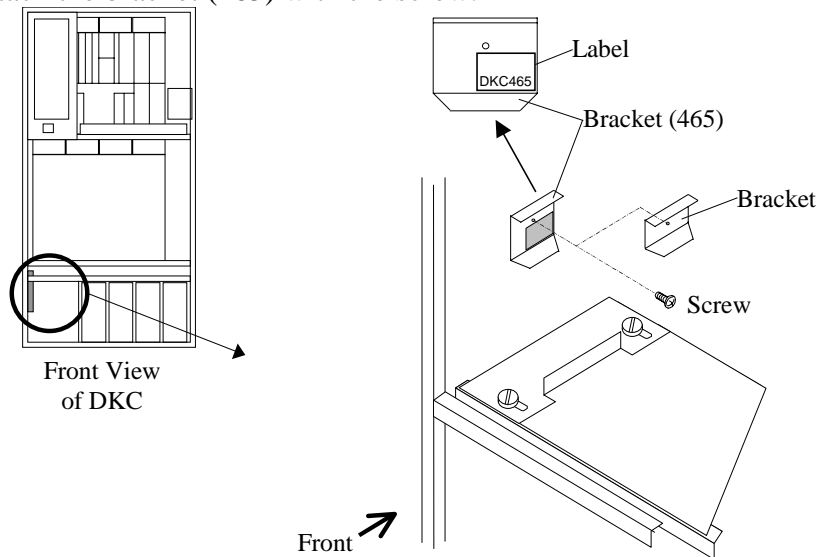


Fig. 3.10-2A Attachment of Bracket

- c. Loosen the screw ① and remove the screw ② from the base plate.
- d. Slide the plate and turn it using the screw ① as an axis.
- e. Install the PCI CON panel in the lower left position of the DKC by fastening it with the screw ③.
- f. Return the plate as it was and tighten the screws ① and ②.
- g. Connect the cable to the PCI CON panel which has been installed.

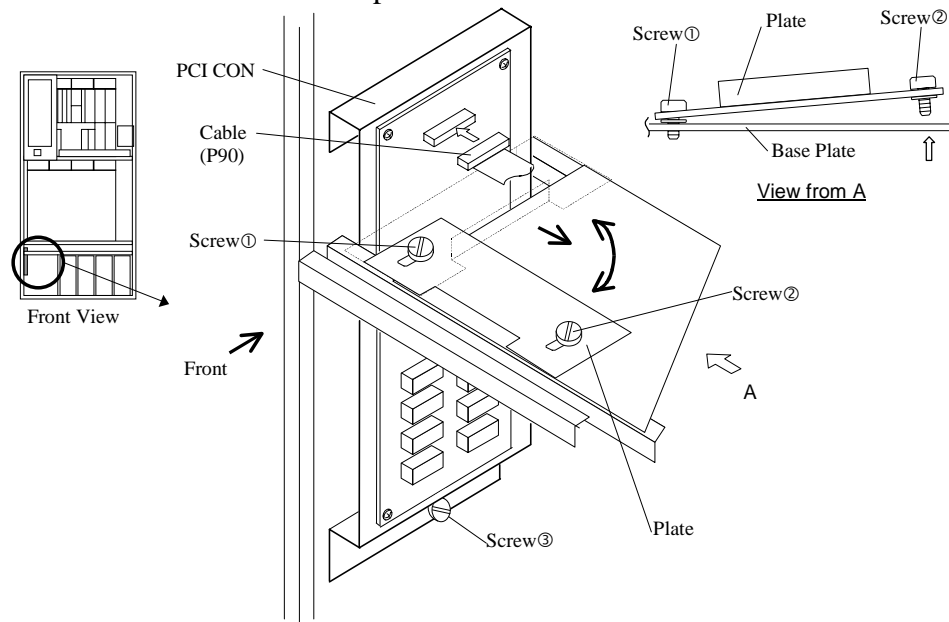


Fig. 3.10-3 Attachment of PCI CON PCB

1-4 Set the REMOTE/LOCAL switch and jumper plugs (JP1 and JP2).

- a. Set the REMOTE/LOCAL switch to REMOTE when the upper PCI is already operating.
Set the REMOTE/LOCAL switch to LOCAL when the upper PCI does not operate yet.
However, reset it to REMOTE when the upper PCI starts its operation.
- b. Set the jumper plugs (JP1 and JP2) of the PCI CON referring to Fig. 3.10-4 and Table 3.10-2.

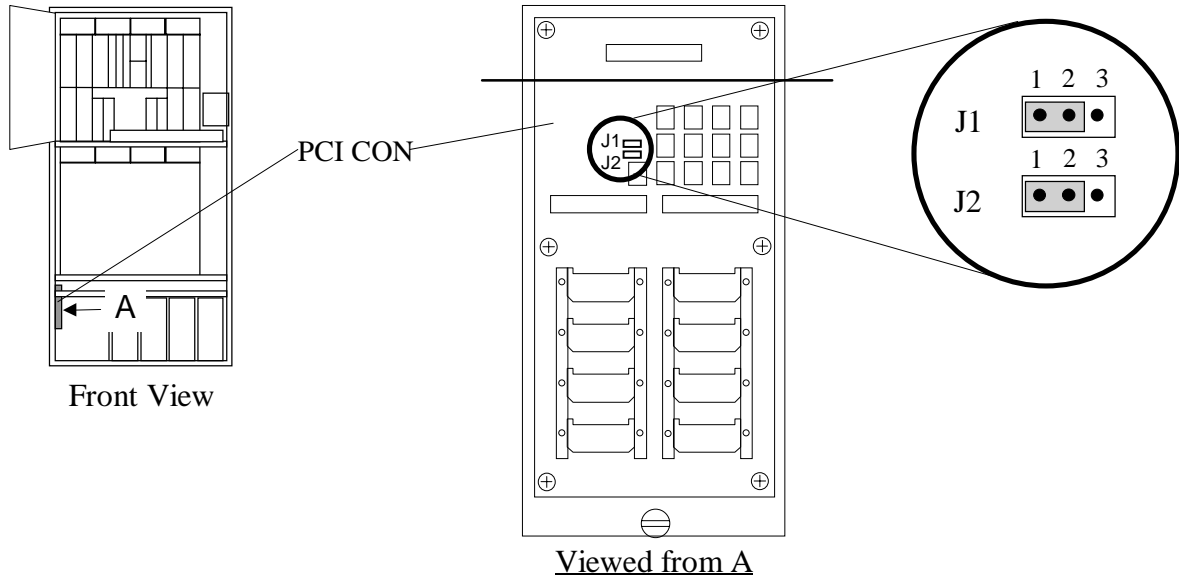
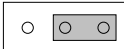
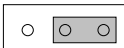
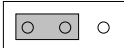
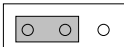


Fig. 3.10-4 Setting of Jumper Plugs

Table 3.10-2 Jumper setting of PCI CON

No.	Description	JP1 and JP2 Setting
1	When power is controlled from the host (at least one PCI cable attached to JP1-JP8 on PCI CON PCB and the upper PCI is operating), set the jumpers as shown.	<div>  JP1 1 2 3 </div> <div>  JP2 1 2 3 </div>
2	When power is not controlled from the host, no PCI Cable attached to JP1-JP8 PCI CON PCB, to disable the EPO of host, set the jumpers as shown.	<div>  JP1 1 2 3 </div> <div>  JP2 1 2 3 </div>

1-5 Disconnect the "DKC Panel INH" jumper plug from the socket on the DKCMN.

1-6 Attach the nameplate.

- a. Attach the nameplate regardless of the model number from the left of the cover.

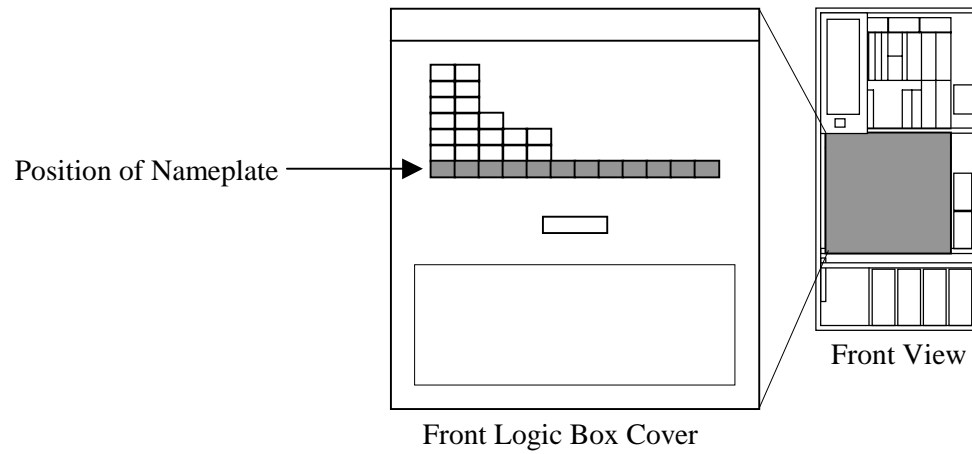


Fig. 3.10-5 Location of the Nameplate

3.11 Installation of UPS Connection Kit (DKC-F460I-UPS)

Table 3.11-1 Parts List

No.	Model Number	Part Name	Part No.	Quantity	Remarks
1	DKC-F460I-UPS	SH307-B	5513986-B	2	DKCMN
		SH298-A	5513547-A	1	UPS CON
		SH302-C	5513988-C	1	DKC Panel
		DSUB Cable	5485510-15	4	
		Cable	3261826-D	1	Label: PA-1 – P5
		Repeat Binder	5409042-2	2	
		Bracket (460)	5517954-1	1	for DKC460I
		Bracket (465)	5513818-1	1	for DKC465I
		Nameplate (HDS)	2105902-114	1	RSD
			2105903-114		HICAM
			2105903-214		HICEF
		Nameplate (HP)	2105902-214	1	RSD
			2105903-314		HICAM
			2105903-414		HICEF

1. Installation Procedure of UPS Connection Kit

Note: Be sure to wear your wrist strap and attach to ground prior to performing the following work. This will ensure that the IC and LSI on the PCB are protected from static electricity.

1-1 Replace the DKC Panel.

- a. Loosen the screw. Pull the plate forward, then lift up remove it.

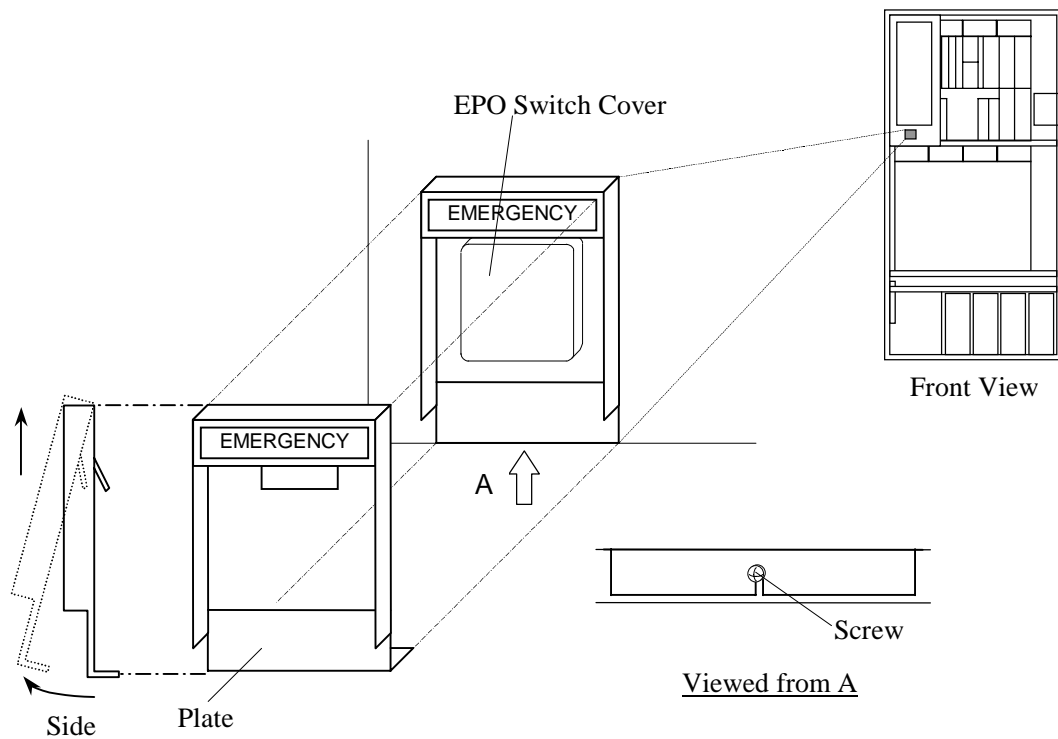


Fig. 3.11-1 Removal of Plate

- b. Remove the EPO Switch cover.

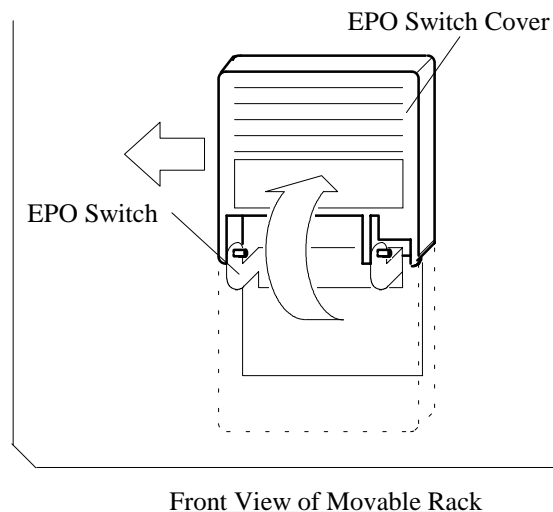


Fig. 3.11-2 Removal of EPO Switch Cover

- c. Loosen the three screws and remove the plate.

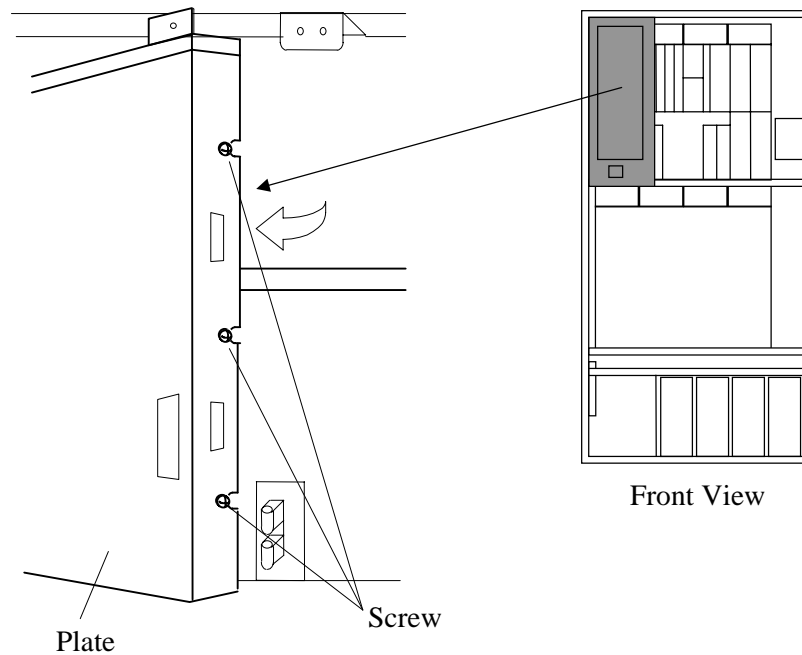


Fig. 3.11-3 Removal of Plate

- d. Disconnect the cables from the DKC Panel PCB.
 e. Loosen the six screws and remove the DKC Panel PCB from the Movable rack.
 f. Install the DKC Panel PCB for UPS by fastening it with the screws.
 g. Connect the cables to the new PCB.

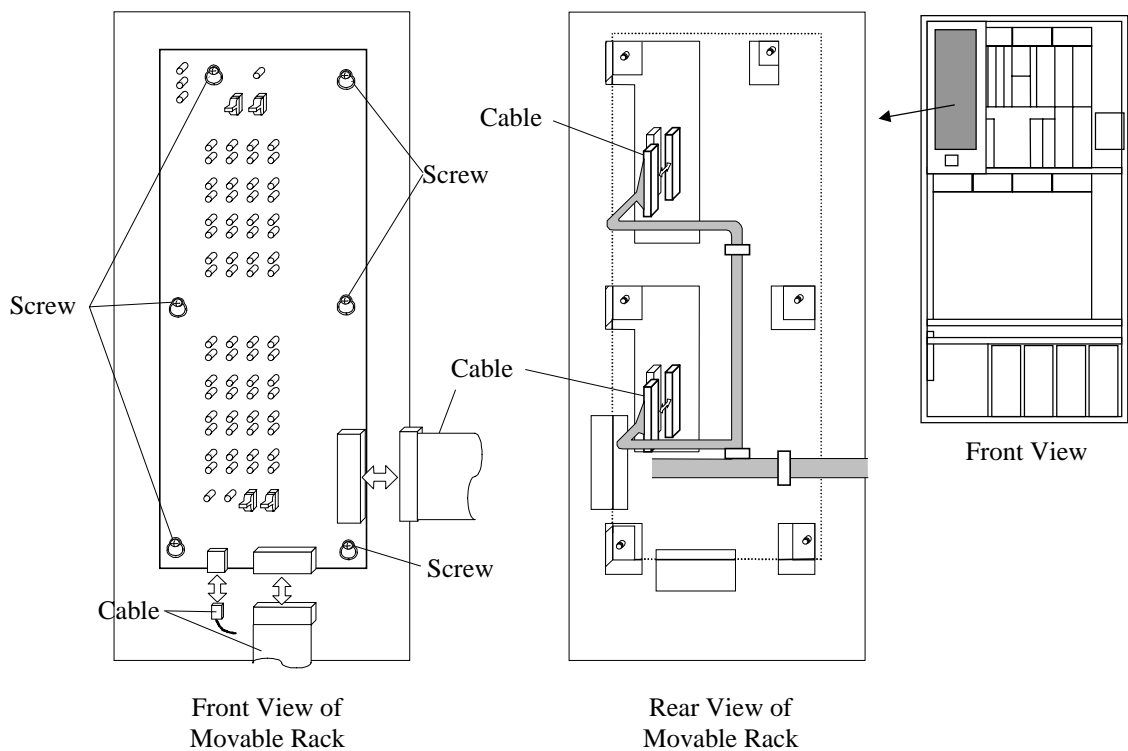


Fig. 3.11-4 Removal of PCB

- h. Attach the plate to the Movable rack and fasten the three screws. Refer to Fig. 3.11-3.
- i. Attach the EPO Switch cover. Refer to Fig. 3.11-2.
- j. Attach the plate and fasten the screw. Refer to Fig. 3.11-1.

1-2 Replace the DKCMN.

- a. Set the jumper plugs in the DKCMN PCBs referring to Fig. 3.11-5, Table 3.11-2.
(Both DKCMN1 and DKCMN2)

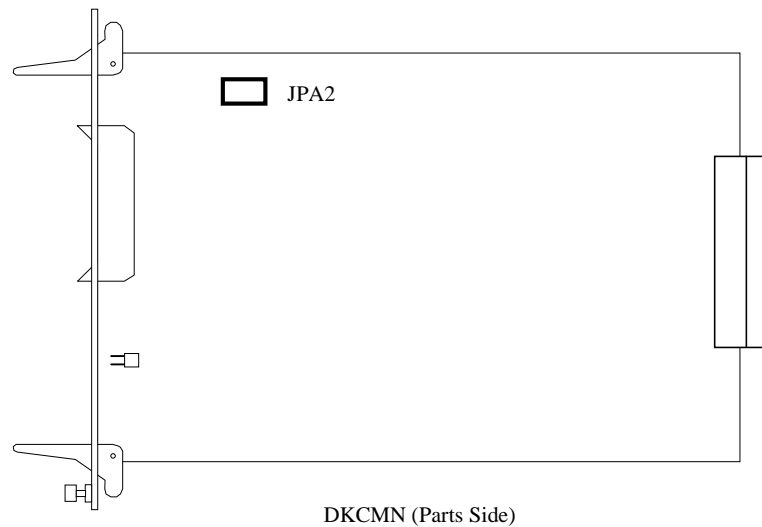


Fig. 3.11-5 Location of Jumper Plugs

Table 3.11-2 Setting of Server Shutdown Setup Jumper

	Setting of Server Shutdown Setup Jumper			
	2.5 minutes	5 minutes	10 minutes	20 minutes
JPA2	<p>Fixed Black Jumper</p>	<p>Fixed Black Jumper</p>	<p>Fixed Black Jumper</p>	<p>Fixed Black Jumper</p>

Select the necessary time from four kinds of Jumper setting and set it up to shutdown a server.

- b. Loosen the screw and remove the DKCMN PCB (SH307-A).

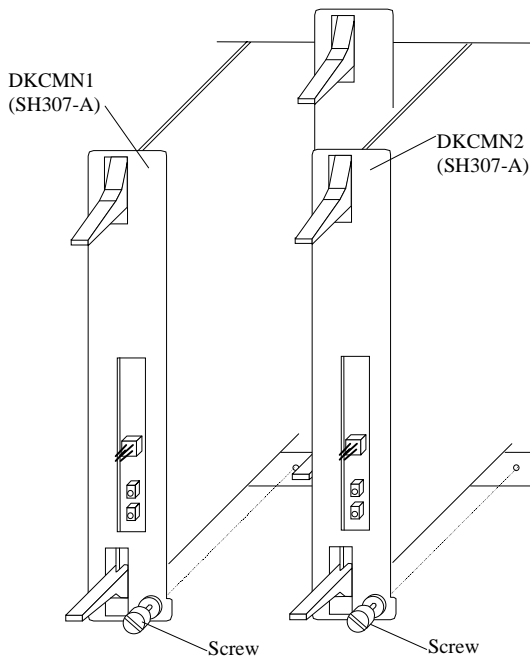


Fig. 3.11-6 Removal of DKCMN PCBs

- c. Install the DKCMN PCB (SH307-B) for UPS by fastening it with the screws.
d. Connect the cable to the new DKCMN PCB.

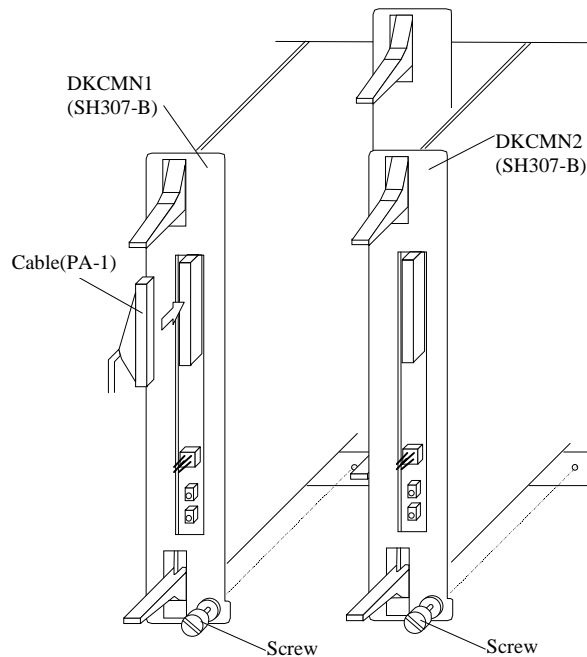


Fig. 3.11-7 Insertion of DKCMN PCBs

1-3 Attach the Cable.

- a. Loosen the six screws③ and remove the Cover (HUB/SVP-PS) ASSY.
- b. Loosen the two screws② and remove the cable cover②.
- c. Loosen the two screws① and remove the cable cover①.
- d. Install the cable in the DKC frame.
- e. Fasten the cable with two Repeat Binders.
- f. Install the cable covers① and ② by fastening them with the screws. When installing the covers, make the installed cable pass through their cuts.
- g. Install the Cover (HUB/SVP-PS) ASSY by fastening it with the screws.

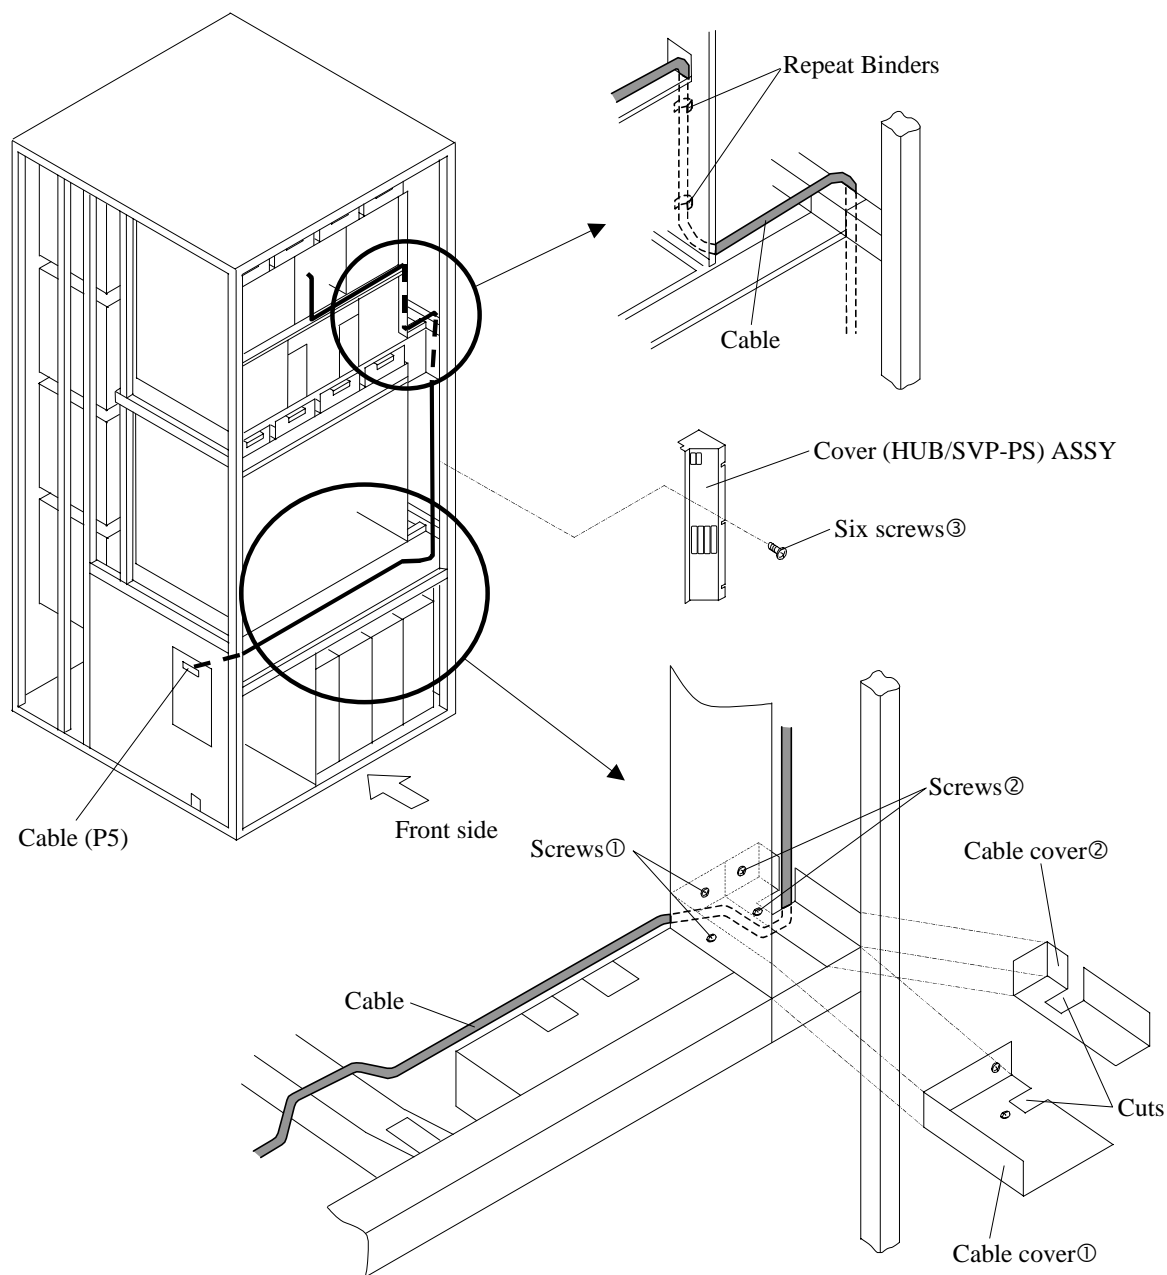


Fig. 3.11-8 Fixing of Cable

1-4 Attach the UPS CON.

- a. Remove the screw and remove the bracket.
- b. Attach the bracket (465) with the screw.

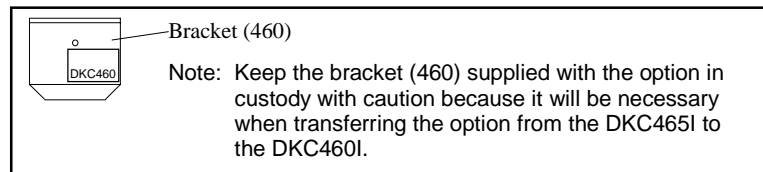
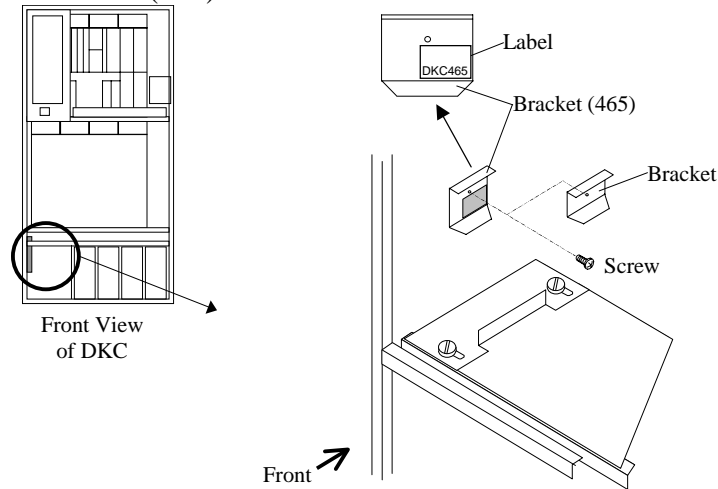


Fig. 3.11-8A Attachment of Bracket

- c. Loosen the screw① and remove the screw② from the base plate.
- d. Slide the plate and turn it using the screw① as an axis.
- e. Install the UPS CON by fastening it with the screw③.
- f. Return the plate as it was and tighten the screws① and ②.
- g. Connect the cable(P5) to the UPS CON.

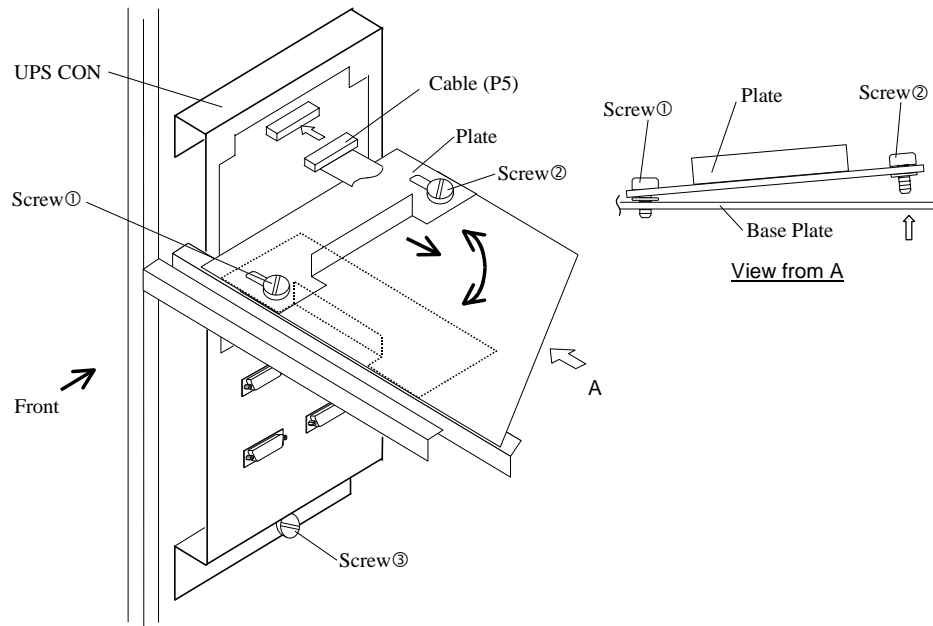


Fig. 3.11-9 Attachment of UPS CON

1-5 Connect the DSUB Cables.

a. Connect the DSUB cables to the UPS CON.

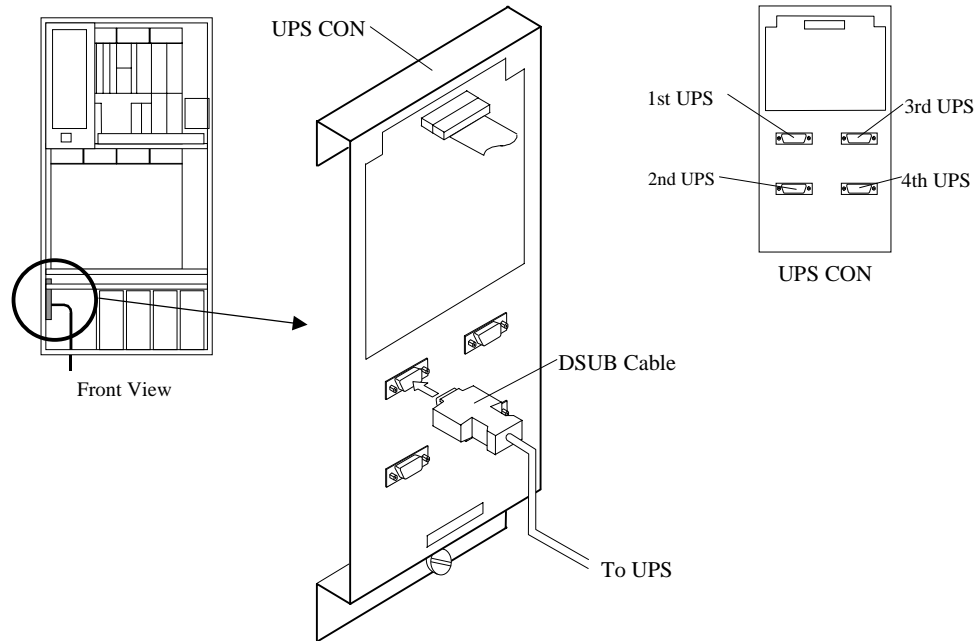


Fig. 3.11-10 Connection of DSUB Cables

1-6 Connect the AC Power Cables.



CAUTION

Perform the UPS Connection Kit with care
 Perform this procedure before connecting the AC Power Cable.
 (Turn off the circuit breakers on the power distribution panel)
 Turn off the main circuit breakers (CB101) located in the AC Boxes.

- a. Disconnect the AC power cables from the distribution board
- b. Connect the ac power cables to the branch distribution box.

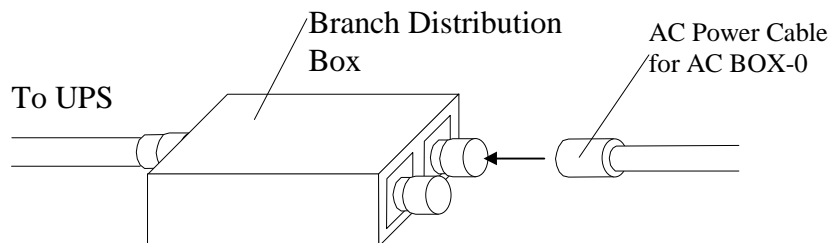
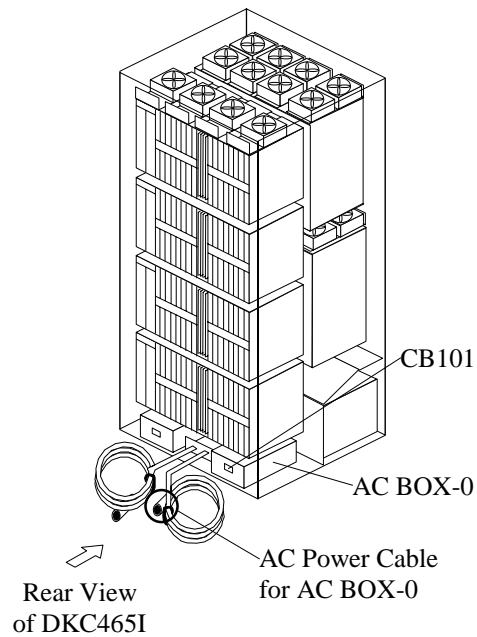


Fig. 3.11-11 Connection of AC Power Cables

1-7 Attach the Nameplate

- a. Attach the nameplate regardless of the model number from the left of the cover.

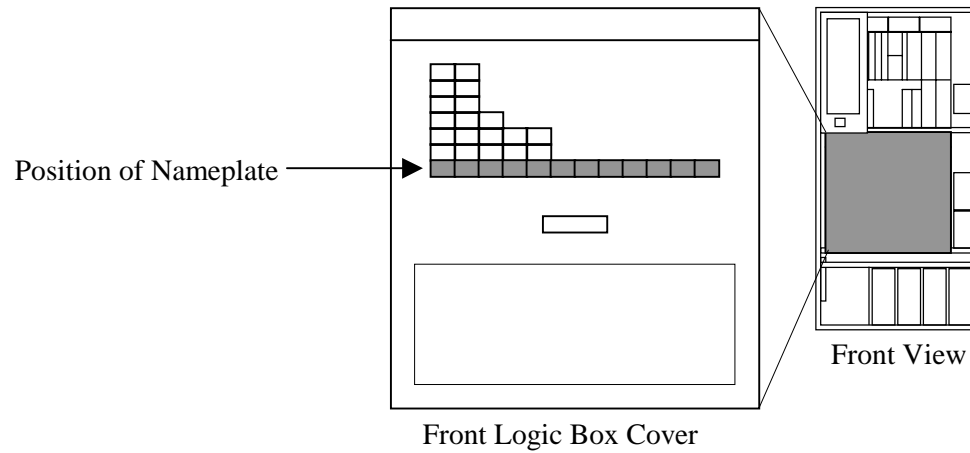


Fig. 3.11-12 Attachment of Nameplate

1-8 Overview


Change the following system option when the system operates.

- <1> PS Off Timer ----- Enters the Destage time. (25 [min])
- OFF : The Destage time is effectively.
 - ON : The Destage time is ineffectively, and change the Destage time.


1-9 SVP procedure

(1) Select (CL) [Install].


(2) Select (CL) the [Change Configuration] menu in the 'Install' window.

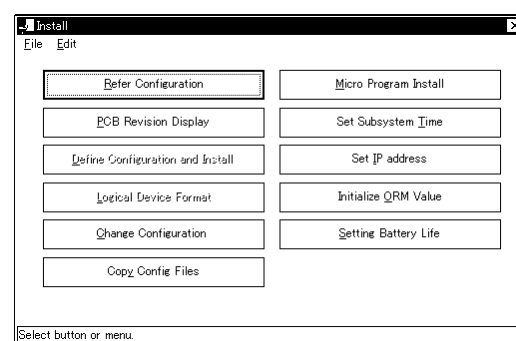

(3) Select (CL) the [System Option] menu in the 'Menu Dialog' window and select (CL) [OK].

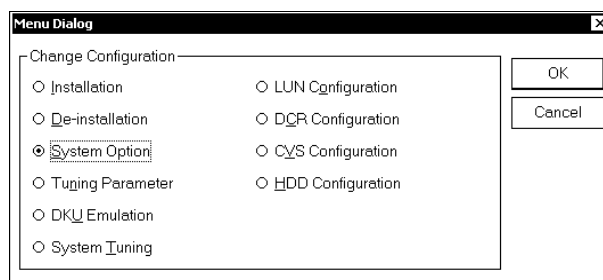


- (4) Select (CL) [Timer On] check box, and then enters the destage time (25 [min]) in the 'System Option' dialog box. And select (CL) [OK].

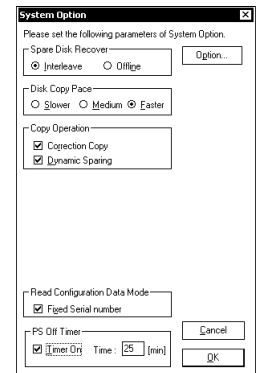


- (5) "Loading configuration..." is displayed.


- (6) "Change configuration was completed." is displayed. Select (CL) [OK].

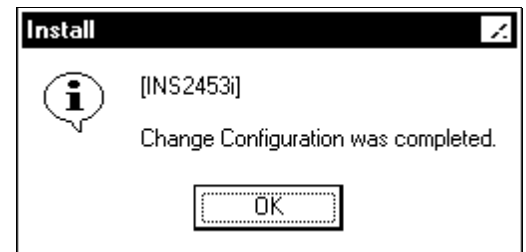

- (7) "Reading subsystem configuration data..." is displayed. "Please insert the Config FD in the FDD." is displayed. Insert the configuration FD into FDD, select (CL) [OK].

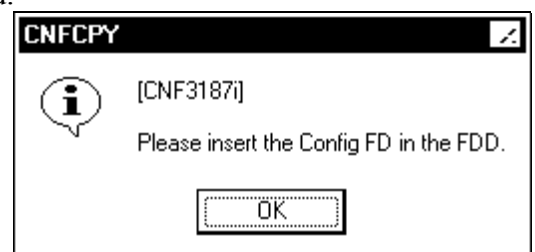

- (8) When this procedure is completed, the message “Please remove the Config FD.” is displayed. Remove the FD, select (CL) [OK].

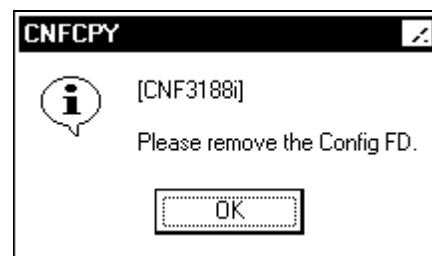

- (9) Close the 'Install' window.

3.12 Check and Testing

NOTICE:

Install all of the remaining optional parts.

3.12.1 Checking Input Voltage

**WARNING**

Do not touch the internal parts of the AC power cable the AC Box.
Line voltage is present even if the circuit breaker is off.

1. Check the AC input voltage using a voltmeter at the customer's AC power source (at the distribution board or receptacle for R & S connectors).

3.12.2 Checking Input Power Cable and Voltage Select Jumper Cable

Single Phase Model

Check the input power cable at the AC Boxes in the DKC. See table 3.12.2-1 and Fig. 3.12.2-1 for check items.

Table 3.12.2-1 AC Input Cable Conductors

UNIT	AC BOX	Input Voltage	AC Input Cable Conductors	Remarks
DKC	AC BOX (AC BOX-0, 1)	200-240Vac	3 conductors (U/L1, V/L2, FG)	

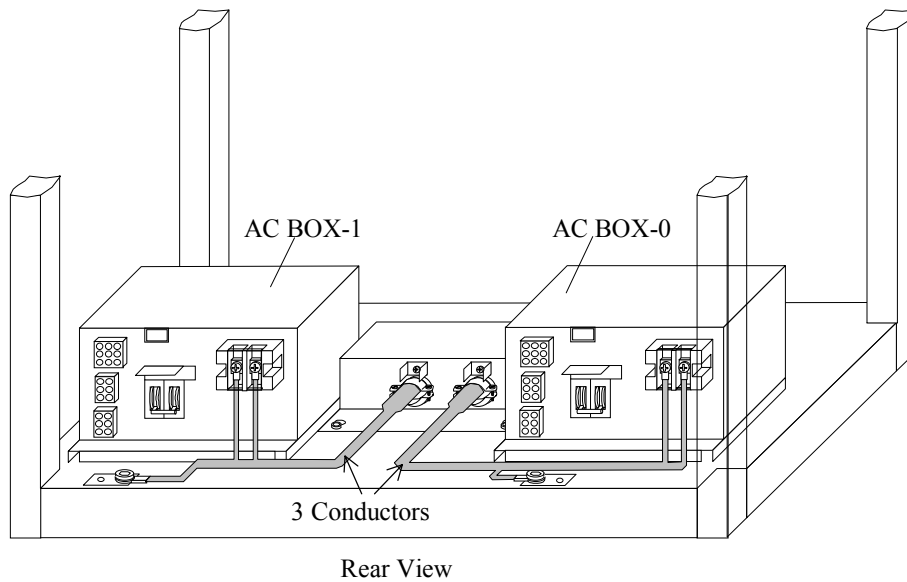


Fig. 3.12.2-1 AC Input Cable Conductors

3 Phase Model

Check the input power cable at the AC Boxes in the DKC. See table 3.12.2-2, Fig. 3.12.2-2 and Fig. 3.12.2-3 for check items.

Table 3.12.2-2 AC Input Cable Conductors

AC BOX	Input Voltage	AC Input Cable Conductors	Jumper Cable(P105) Position	Remarks
AC BOX (AC BOX-0, 1)	200-240Vac	4 conductors (L1, L2, ,L3, FG)	J105-1	J105-2 dummy connector
AC BOX (AC BOX-0, 1)	380-415Vac	5 conductors (L1, L2, ,L3, N, FG)	J105-2	J105-1 dummy connector

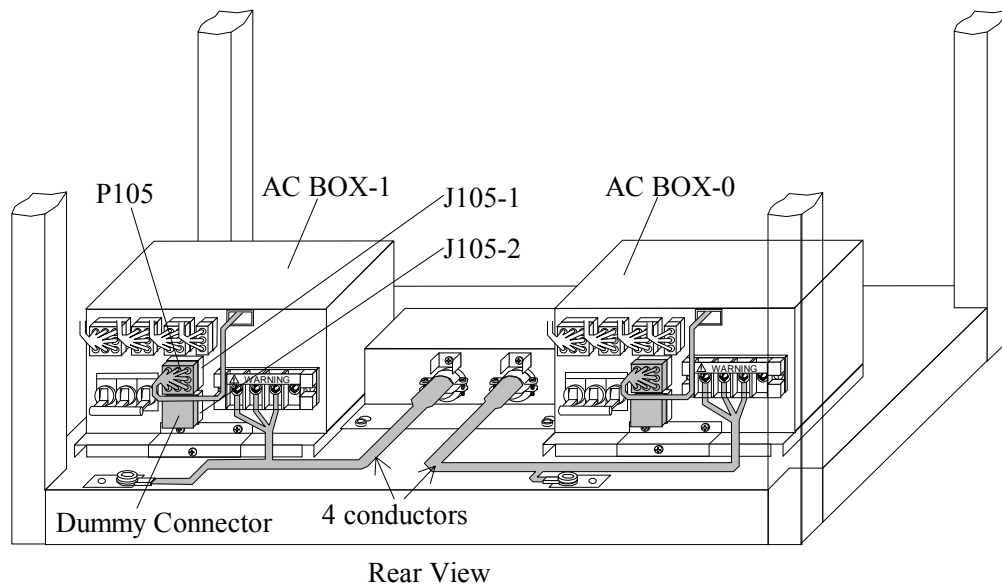


Fig. 3.12.2-2 AC Input Cable Conductors and Jumper Cable (P105) Positions 200–240V

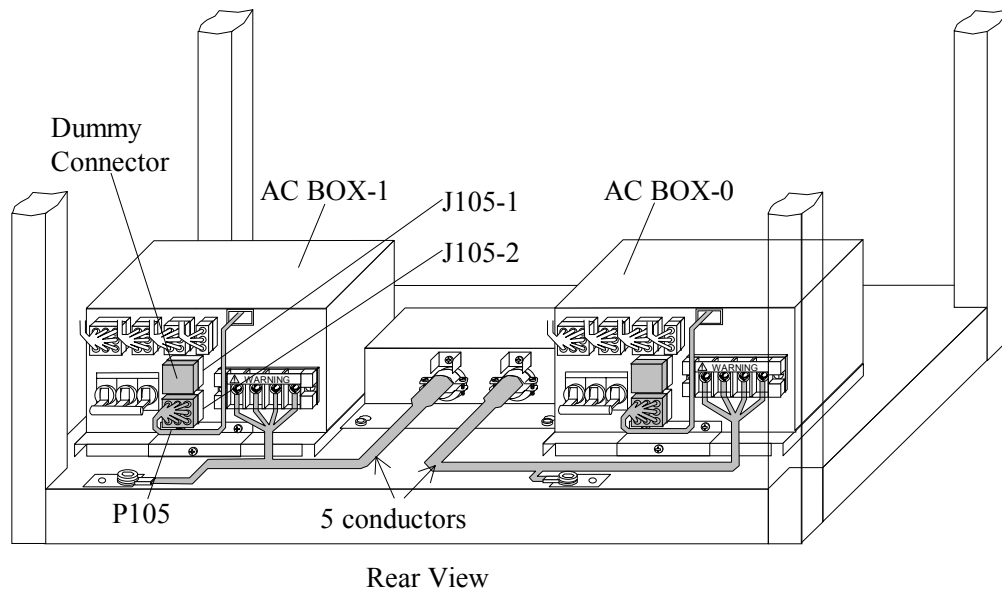


Fig. 3.12.2-3 AC Input Cable Conductors and Jumper Cable (P105) Positions 380–415V

3.12.3 Power On/Off Check

1. Install all the remaining optional parts.
2. Turn on the disk controller according to the procedure shown in SECTION 3.13 POWER ON/OFF PROCEDURE. Refer to [INST03-PWR-10 through 40](#).
3. Check the power supply output voltage to verify that it indicates the required level. Refer to PERIOD.
4. Turn off the Disk Subsystem according to the procedure shown in SECTION 3.13 POWER ON/OFF PROCEDURE. Refer to [INST03-PWR-50 through 60](#).

3.13 Power ON/OFF Procedure

3.13.1 Power ON Procedure

3.13.1.1 Power ON Procedure of Disk Subsystem

Power on procedures are shown below. Refer to the details and start the operation.

1. Turn on the main circuit breaker (CB101) at the AC Box.

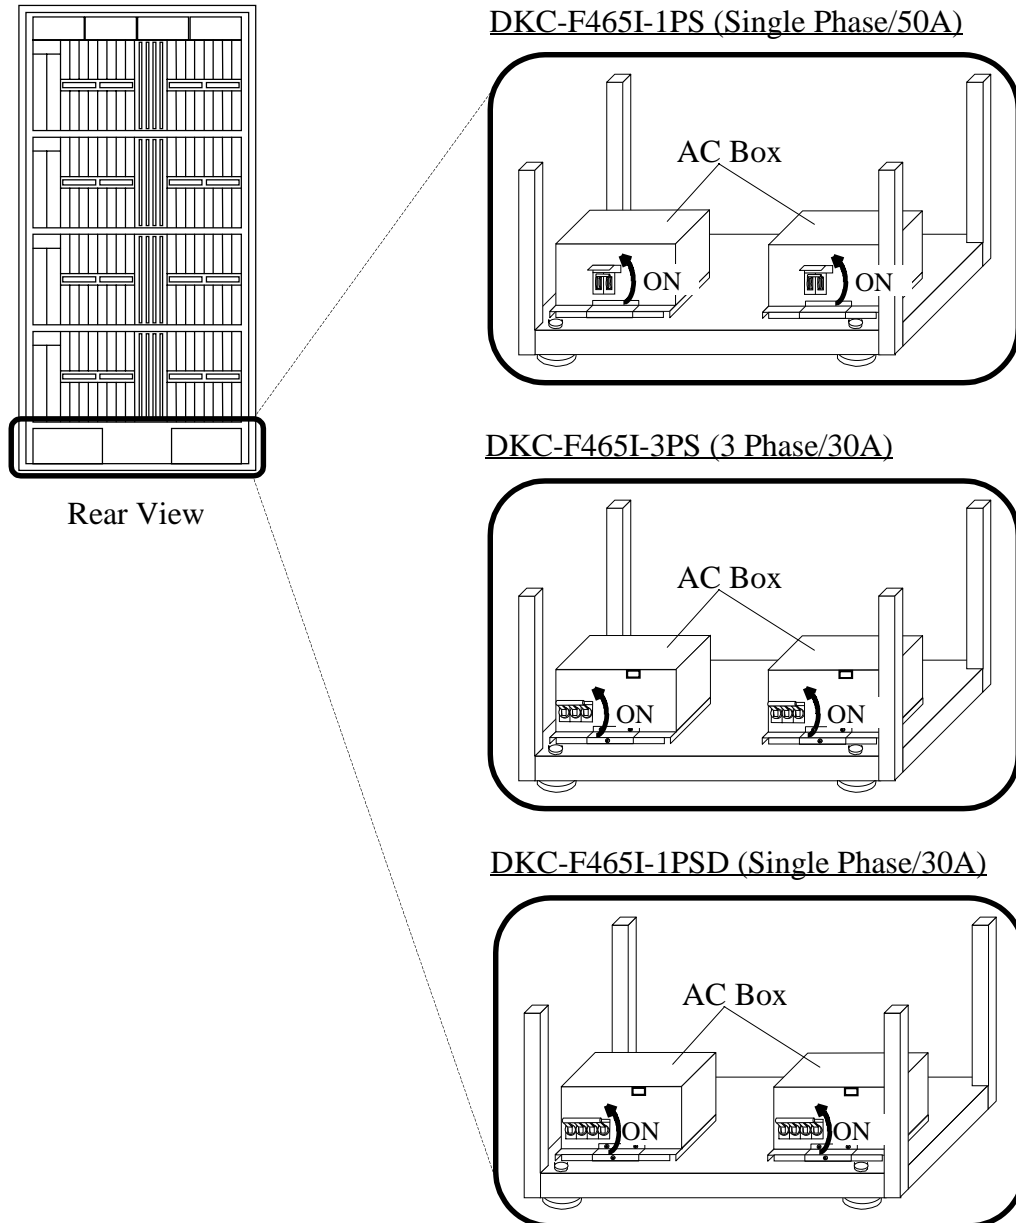


Fig. 3.13.1.1-1 Main Circuit Breaker on AC Box

2. Check battery charge voltage and fuse blow up on Battery Controller PCBs.
Check charge voltage on BATTERY 10 through 11 and BATTERY 20 through 21.
 - a. Disconnect the cables A and B.
 - b. Insert the pins of the digital voltmeter into the cables A and B removed from battery to make sure that battery charge voltage is within the allowable charge voltage.
If the battery charge voltage is not within the allowable charge voltage, replace the BATCTR PCB.
 - c. Connect the cables A and B.

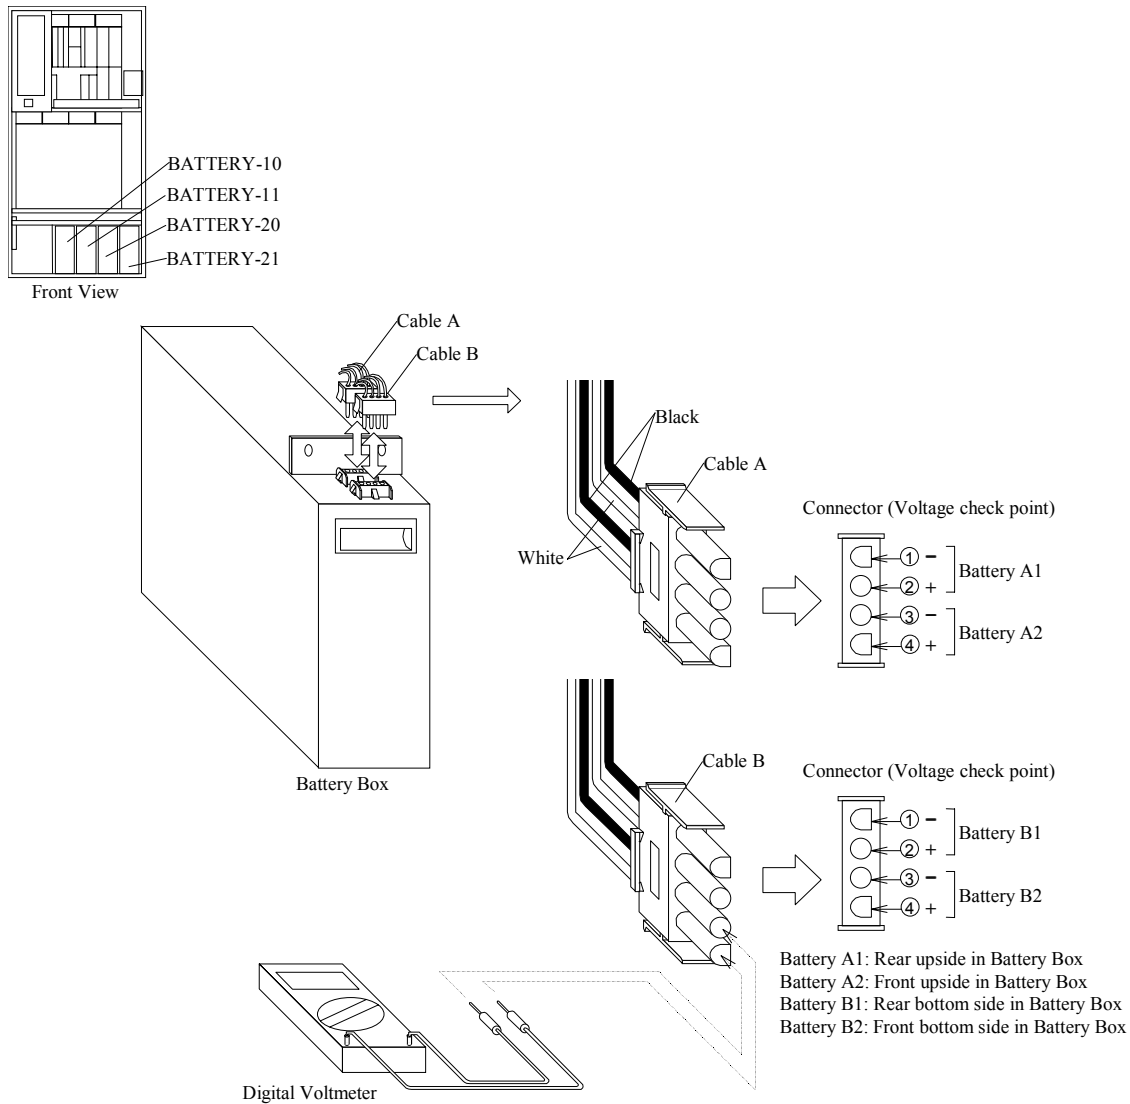


Fig. 3.13.1.1-2 Voltage Checkpoint

Table 3.13.1.1-1 Voltage Checkpoint and Allowable Voltage

No.	Pin No.		Allowable charge voltage
	+	-	
1	②	①	DC13V through DC13.8V
2	④	③	DC13V through DC13.8V

3. Check battery voltage.

Check battery voltage of the BATTERY 10 through 11 and BATTERY 20 through 21.

- Disconnect the cables.
- Insert the pins of the digital voltmeter into the connector on battery box to make sure that battery voltage is within the allowable battery voltage.
- If the battery voltage is not within the allowable battery voltage, replace the battery assembly.
- Connect the cables.

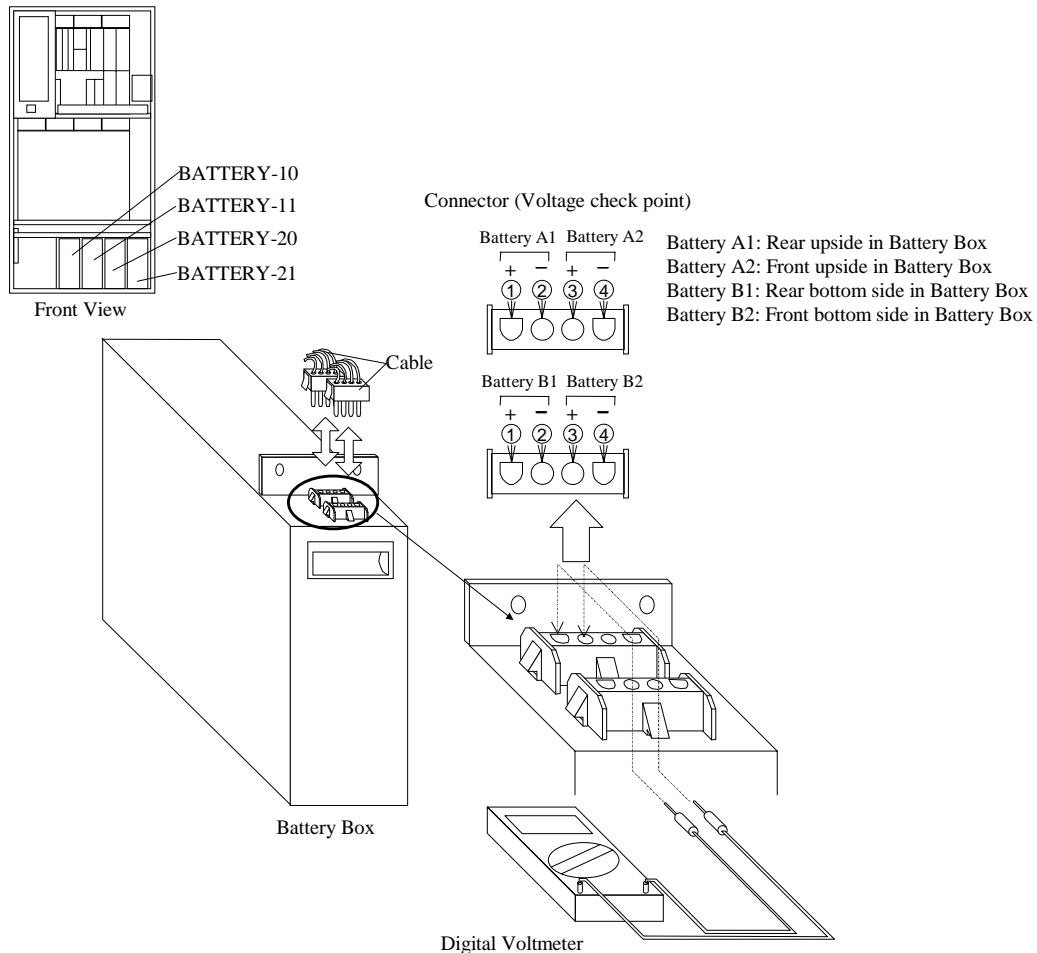


Fig. 3.13.1.1-3 Voltage Checkpoint

Table 3.13.1.1-2 Voltage Checkpoint and Allowable battery Voltage

No.	Pin No.		Allowable battery voltage
	+	-	
1	①	②	DC11.6V through DC13.8V
2	③	④	DC11.6V through DC13.8V

4. Return to General Flow.

Disruptive Installation: Go to Step “5”.

Disruptive De-installation: Go to Step “5”

5. [Case as custom engineer operates]

Turn the “REMOTE/LOCAL” switch to “LOCAL”.

Turn the “POWER ON/OFF” switch to “ON”, while turning the POWER ON/OFF ENABLE switch to the ENABLE position.

[Case as that operate from CPU]

Turn the “REMOTE/LOCAL” switch to “REMOTE”.

Turn on the power supply from CPU.

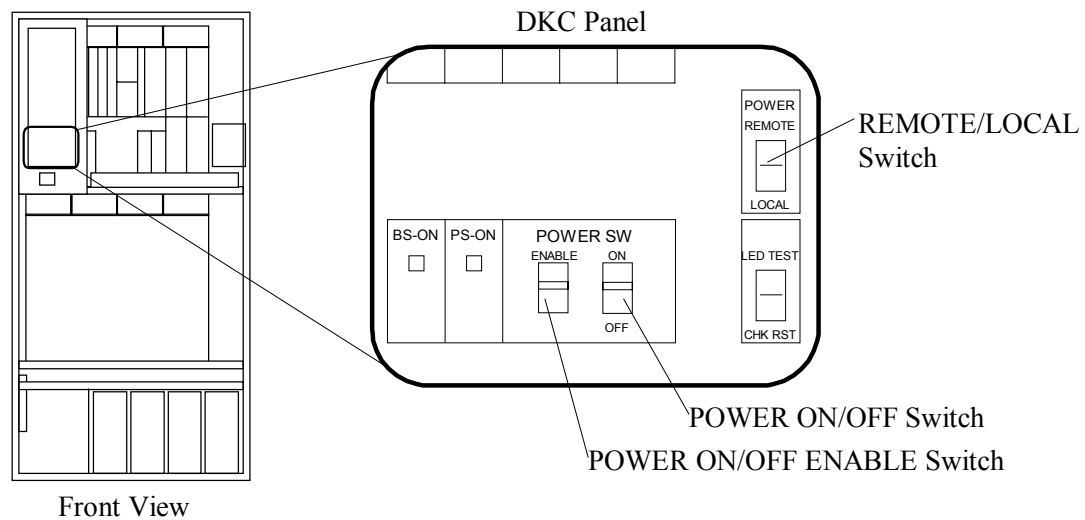


Fig. 3.13.1.1-4 DKC Panel PCB

3.13.2 Power OFF Procedure

3.13.2.1 Power OFF Procedure of Disk Subsystem

1. Power off procedures are shown below. Refer to the details and start the operation.
If the SVP is already shutdown, go to step b.
 - a. Stop the SVP.
 - b. [Case as custom engineer operates]
Turn the "REMOTE/LOCAL" switch to "LOCAL".
Turn the "POWER ON/OFF" switch to "OFF", while turning the POWER ON/OFF ENABLE switch to the ENABLE position.
[Case as that operate from CPU]
Turn the "REMOTE/LOCAL" switch to "REMOTE".
Turn off the power supply from CPU.

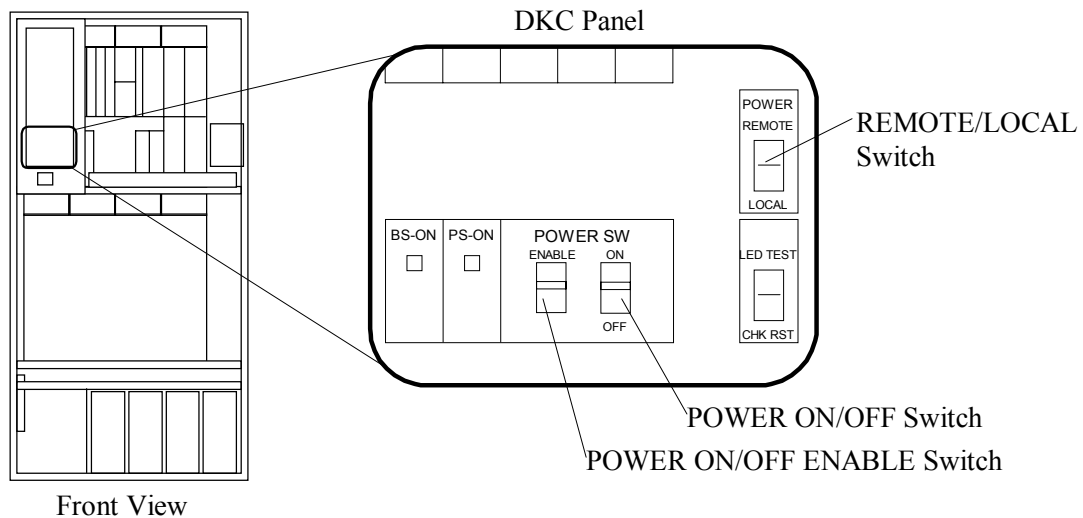


Fig. 3.13.2.1-1 DKC Panel PCB

- c. Turn off the main circuit breaker at the AC Box on the Disk Unit.

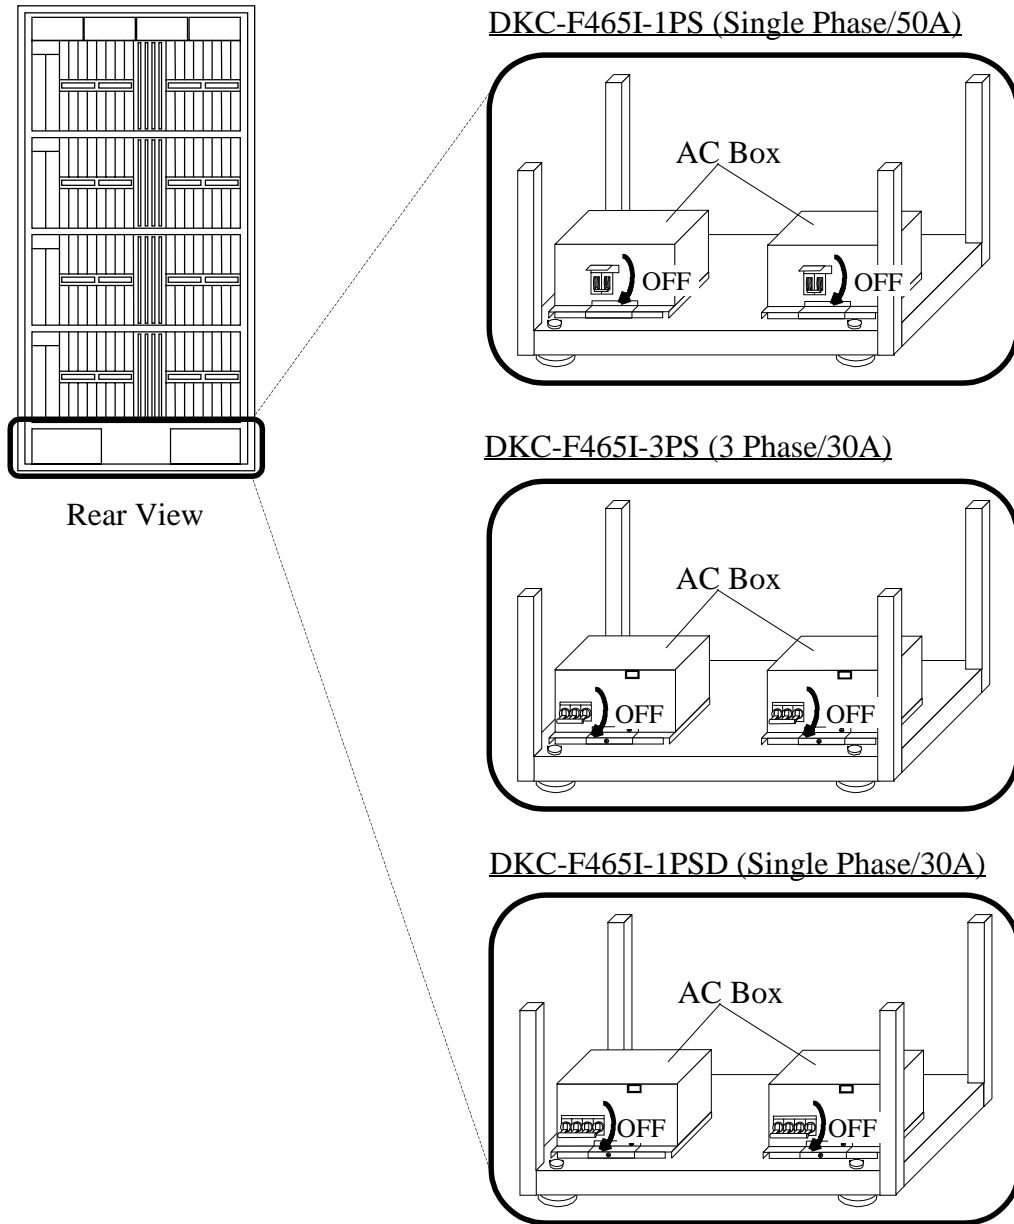


Fig. 3.13.2.1-3 Main Circuit Breaker on AC Box

3.14 Routing of External Connection Cable

1. Open the front door and then open the DKC panel.
2. Open the SVP frame.

SVP frame type 1

- a. Loosen the screw ① and open the SVP frame.

SVP frame type 2

- a. Loosen the screw ① and the SVP stopper is slide to the left.
- b. Open the SVP ASSY (Basic).
- c. Loosen the screw ② and open the SVP frame.

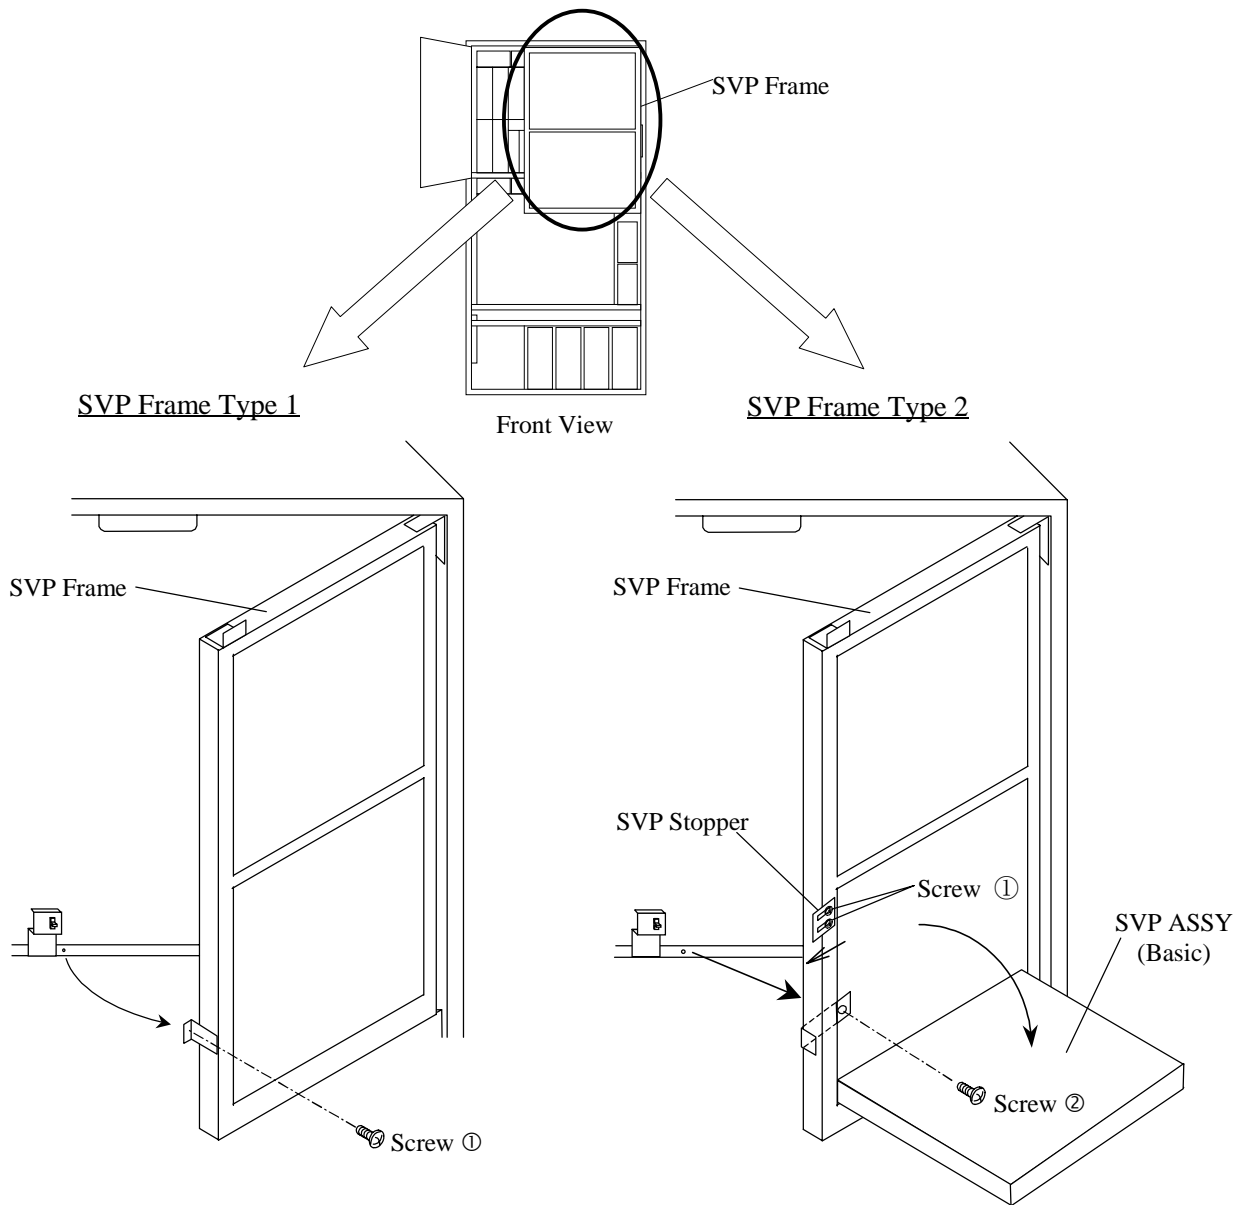


Fig. 3.14-1 Open the SVP Frame

3. Remove the Front Logic Box cover.
4. Loosen the six screws ① and remove the Cover (H/S-PS) ASSY.
5. Loosen the two screws ② and remove the cable cover ①.
6. Loosen the two screws ③ and remove the cable cover ②.
7. Loosen the two screws ④ and slide the plate.
8. Take in the external connection cable, that has been pulled in through the opening on the bottom plate, through the gap of the sheet steel parts.
9. Route the cable along the bottom of the Front Logic Box and have it go upward just this side of the Hub Box.
10. Reinstall the covers by reversing the Steps 1 to 7 of the removal procedure.

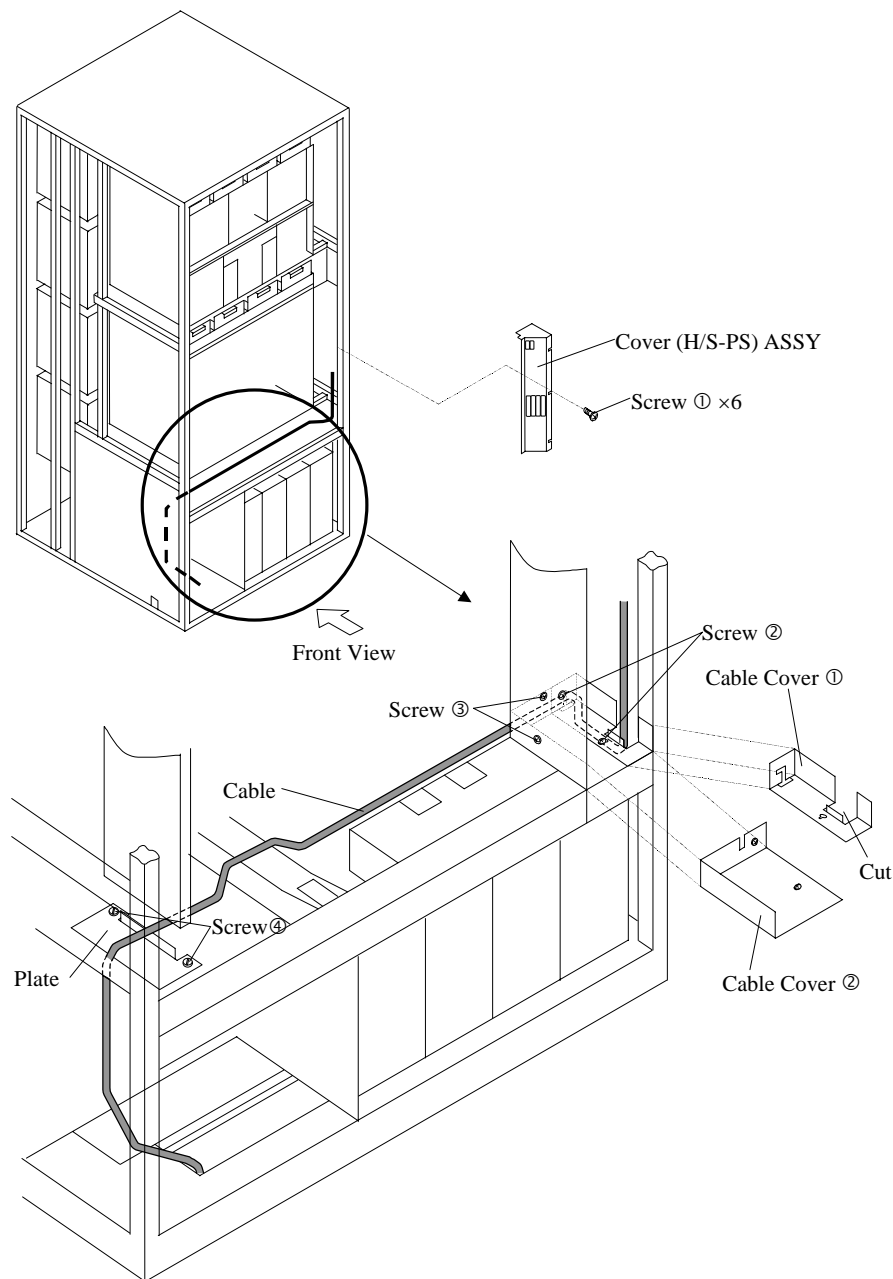


Fig. 3.14-2 Routing of External Connection Cable

3.15 Installation of 256MB Additional Memory for SVP (DKC-F460I-256M)

Table 3.15-1 Parts List

No.	Model Number	Part Name	Part No.	Quantity	Remarks
1	DKC-F460I-256M	Additional SVP Memory	5518055-A	1	
		LABEL		1	
		Nameplate(HP)	2105902-235	1	RSD
			2105903-335	1	HICAM
			2105903-435	1	HICEF

3.15.1 Installation Procedure of 256MB Additional Memory for SVP

1. Open the front door and then open the DKC panel.
2. Turn the SVP ASSY and turn off the power for the SVP.
3. Loosen the screw and open the SVP frame, and remove the lower SH box cover.

(1) Open the SVP frame.

SVP frame type1

- a. Remove the screw① and open the SVP frame.

SVP frame type2

- a. Loosen the screw② and the SVP stopper is slide to the left.
- b. Open the SVP ASSY (Basic).
- c. Remove the screw③ and open the SVP frame.

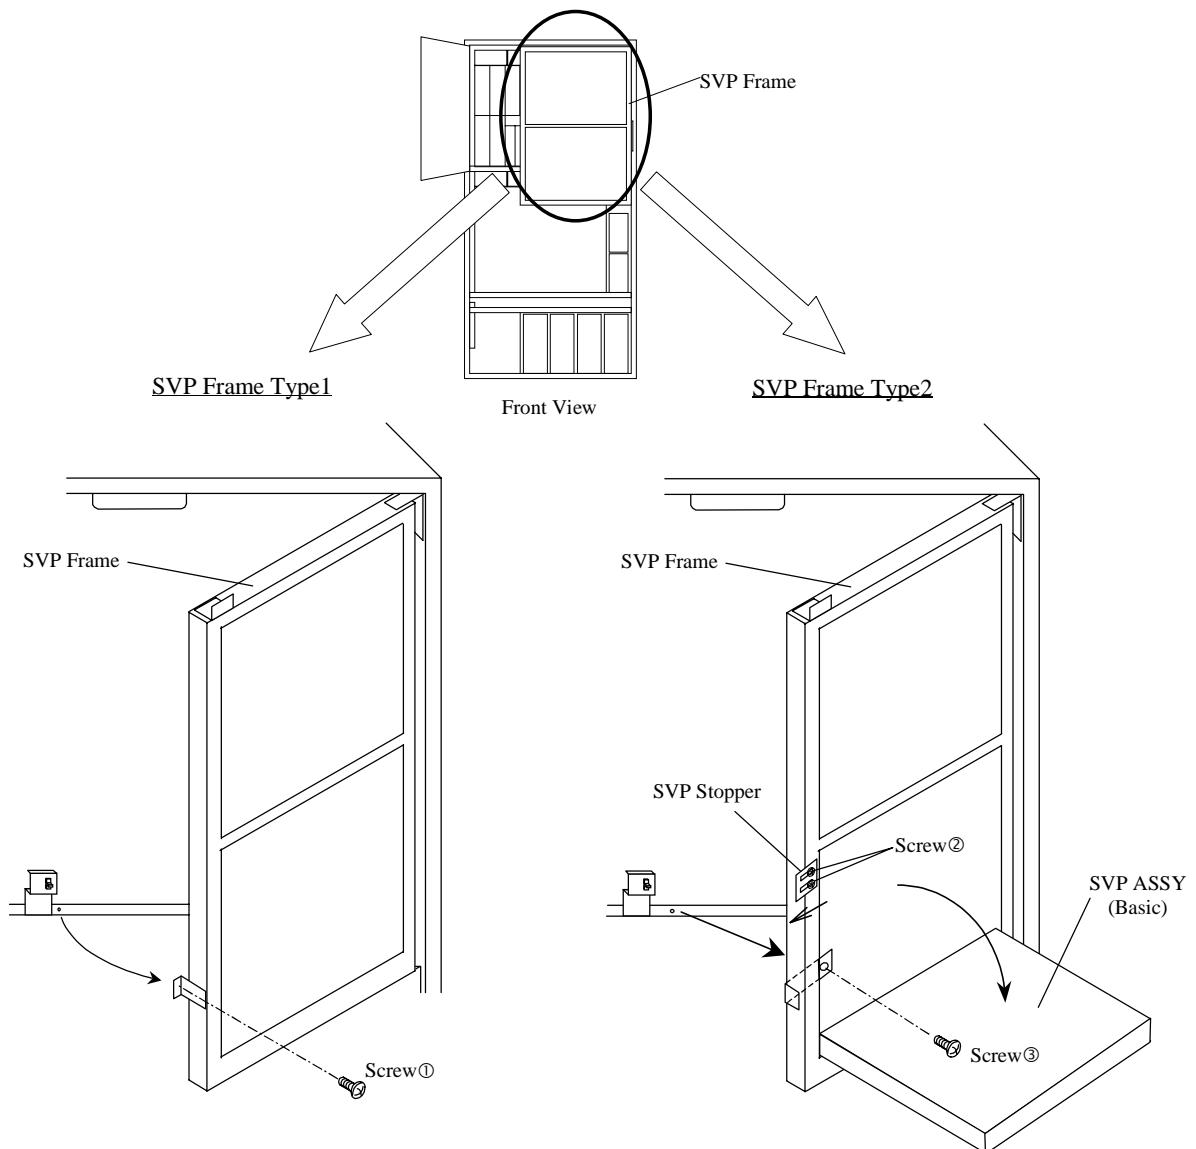


Fig. 3.15-1 Open the SVP Frame

4. Insert the Jumper.

Replacement of Basic SVP ASSY

- a. Insert the maintenance jumper into JP1 on the RS CON PCB.

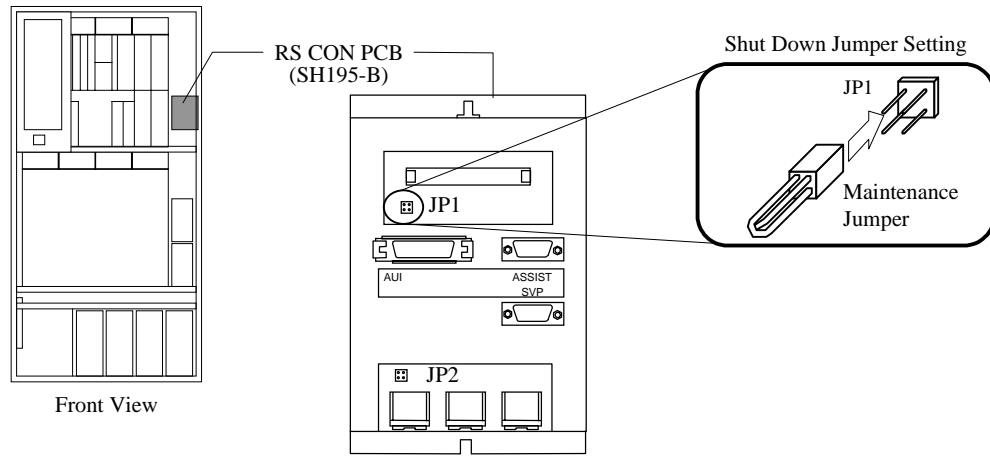


Fig. 3.15-2 Jumper settings of RS CON PCB

Replacement of Option SVP ASSY

- a. Insert the maintenance jumper into PS SD on the SVPPS BOX.

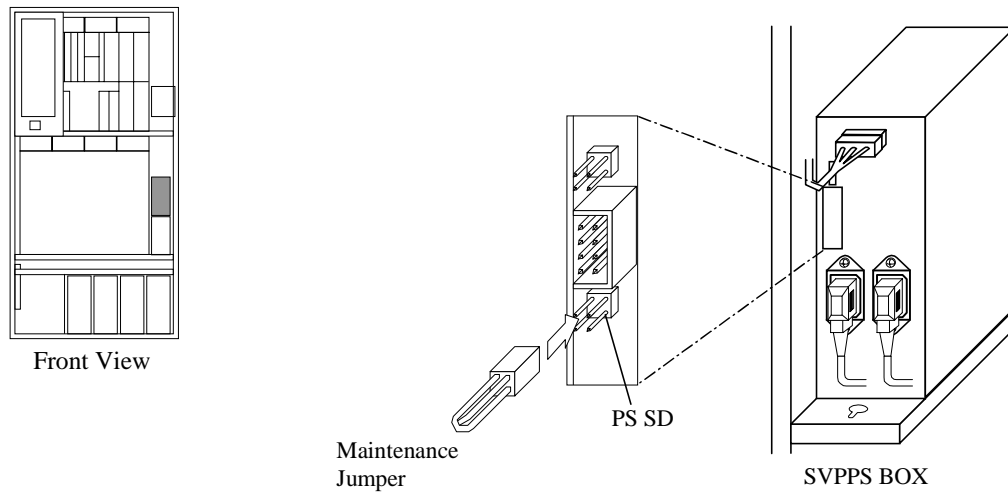


Fig. 3.15-3 Jumper settings of SVPPS BOX

5. Remove the cables.

Additional Memory of Basic SVP

- a. Disconnect the RS232C cable (RSVP-1) from the RS CON PCB.

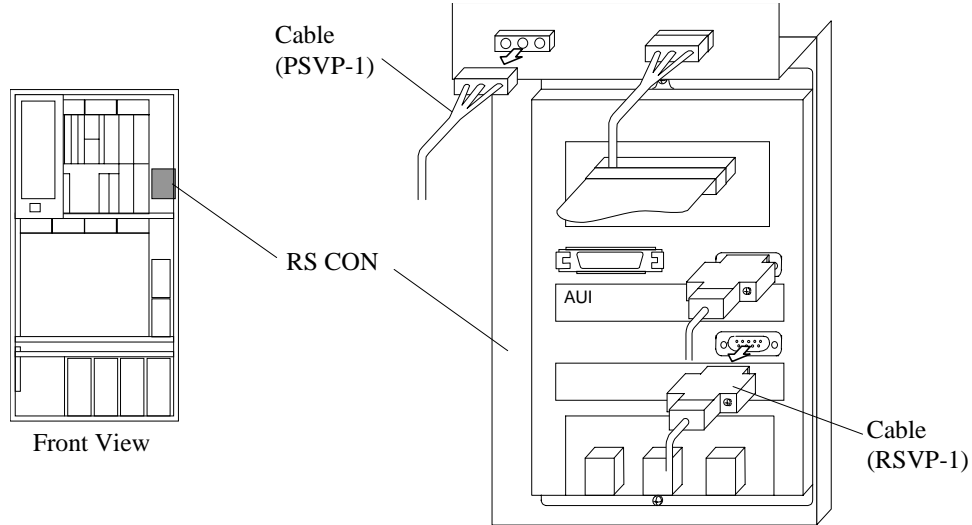


Fig. 3.15-4 Disconnection of RS232C Cable

- b. Disconnect the LAN cable (LSVP-1) from the HUB BOX.
Disconnect the SVP PS cable (PSVP-1) from the CON PLATE.

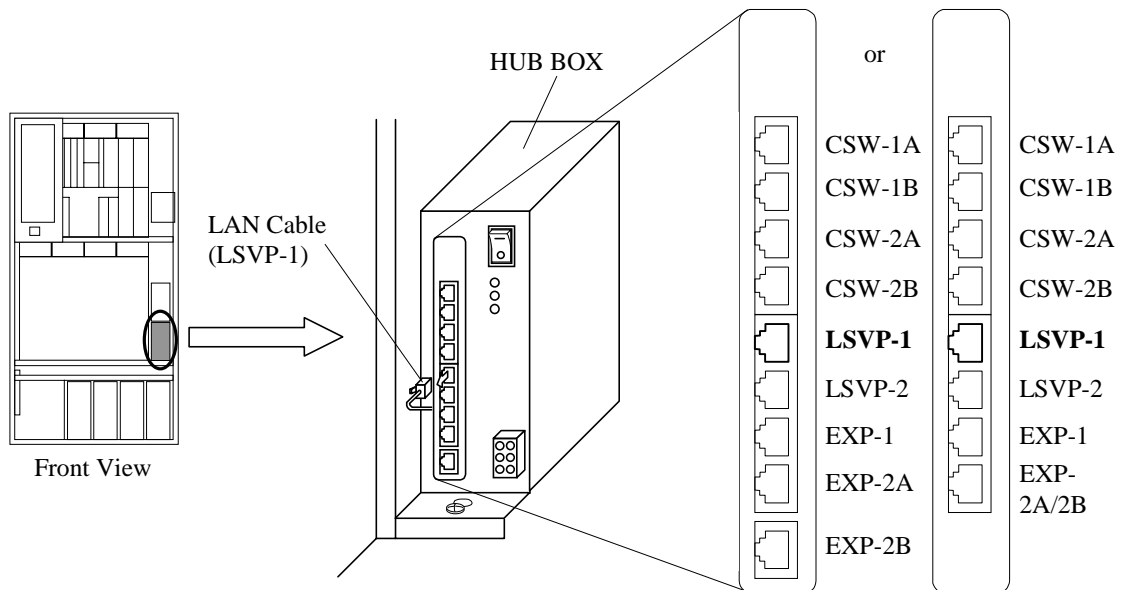


Fig. 3.15-5 Disconnection of LAN Cable and SVP-PS Cable

c. Open the locking clamps and remove the cables.

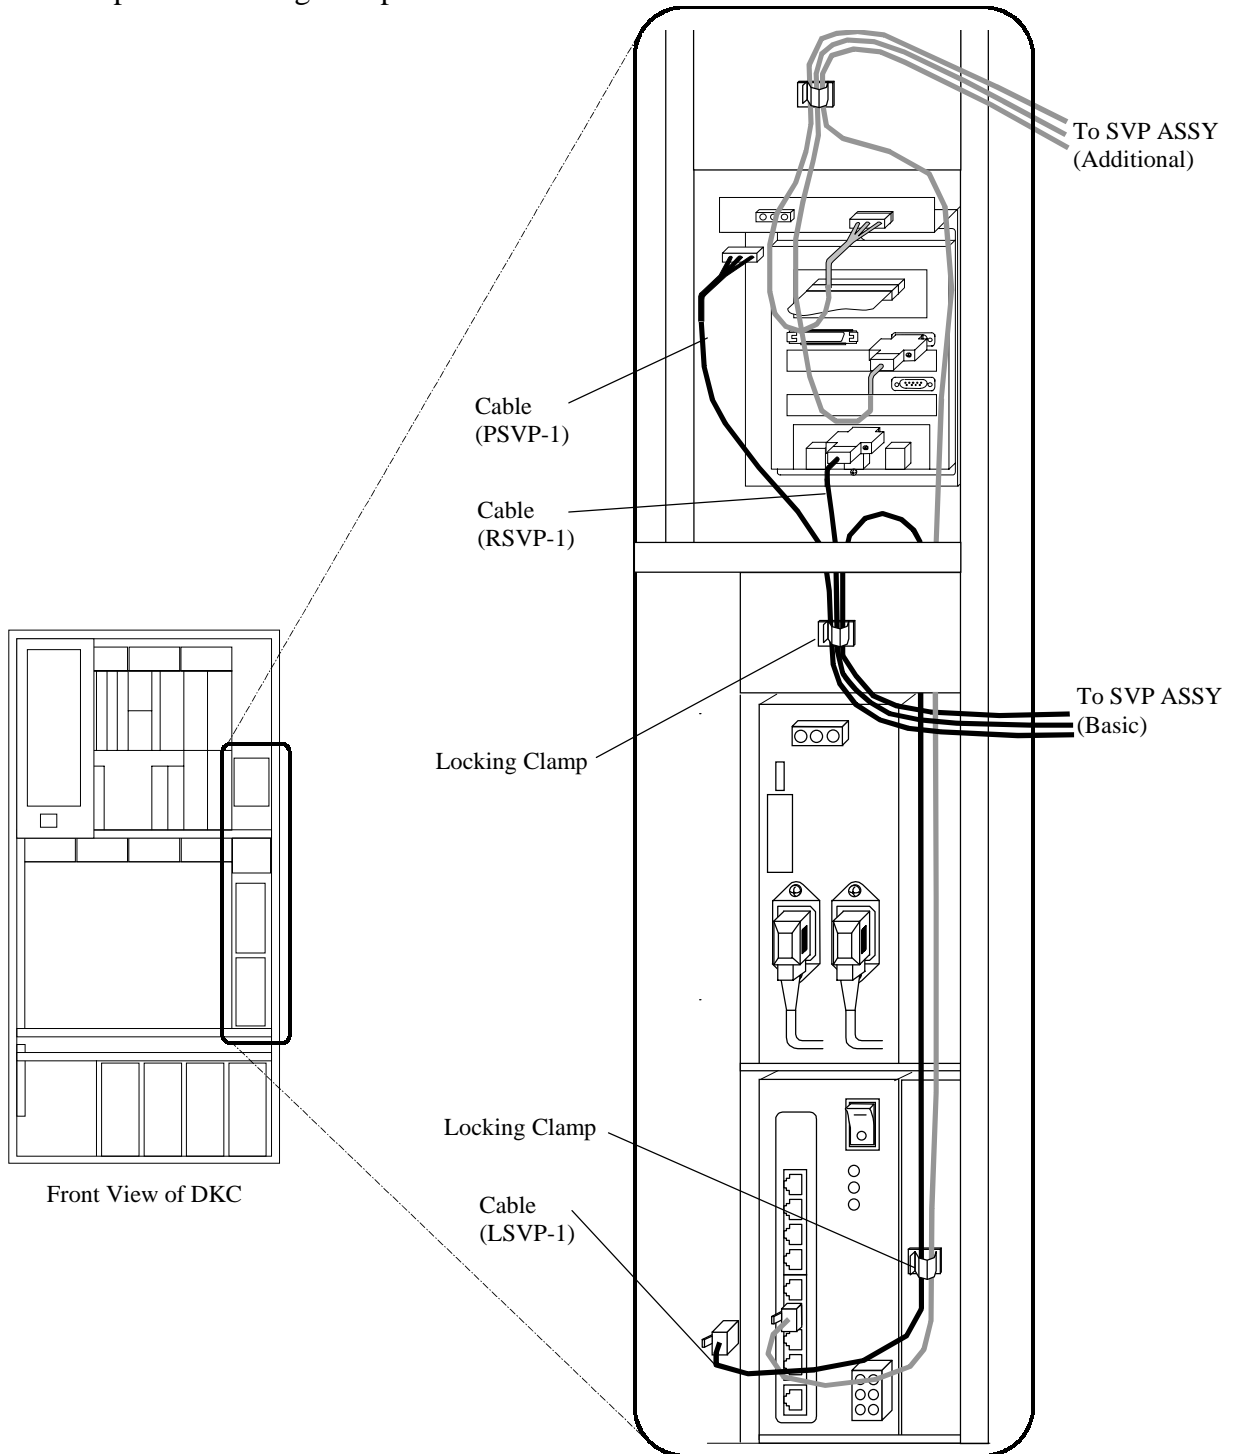


Fig. 3.15-6 Removal of Cables

Additional Memory of Option SVP ASSY

- a. Disconnect the RS232C cable (RSVP-2) from the RS CON PCB.

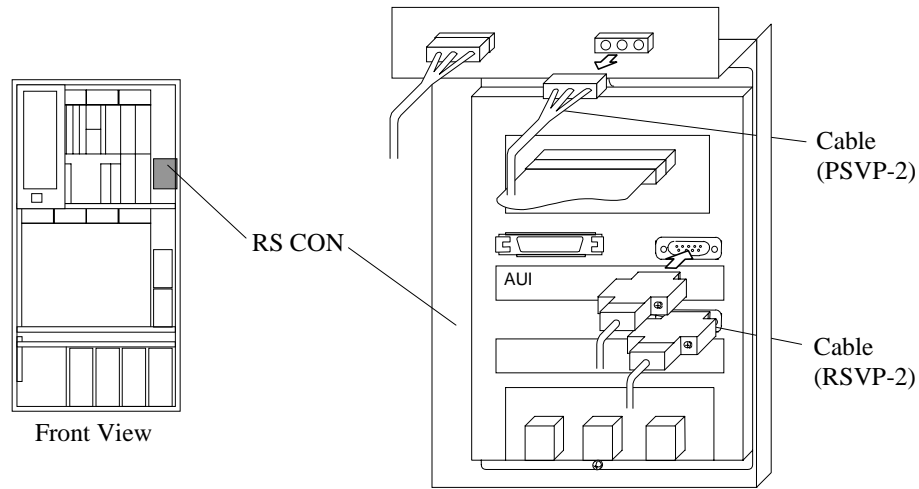


Fig. 3.15-7 Disconnection of RS232C Cable

- b. Disconnect the LAN cable (LSVP-2) from the HUB BOX.
Disconnect the SVP PS cable (PSVP-2) from the CON PLATE.

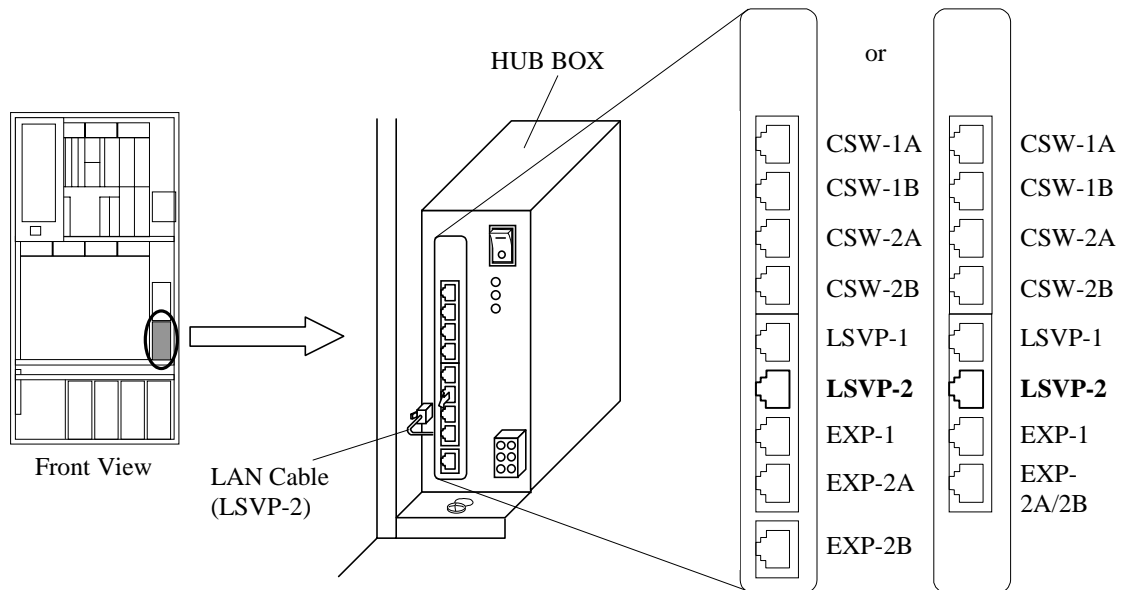


Fig. 3.15-8 Disconnection of LAN Cable and SVP PS Cable

c. Open the locking clamps and remove the cables.

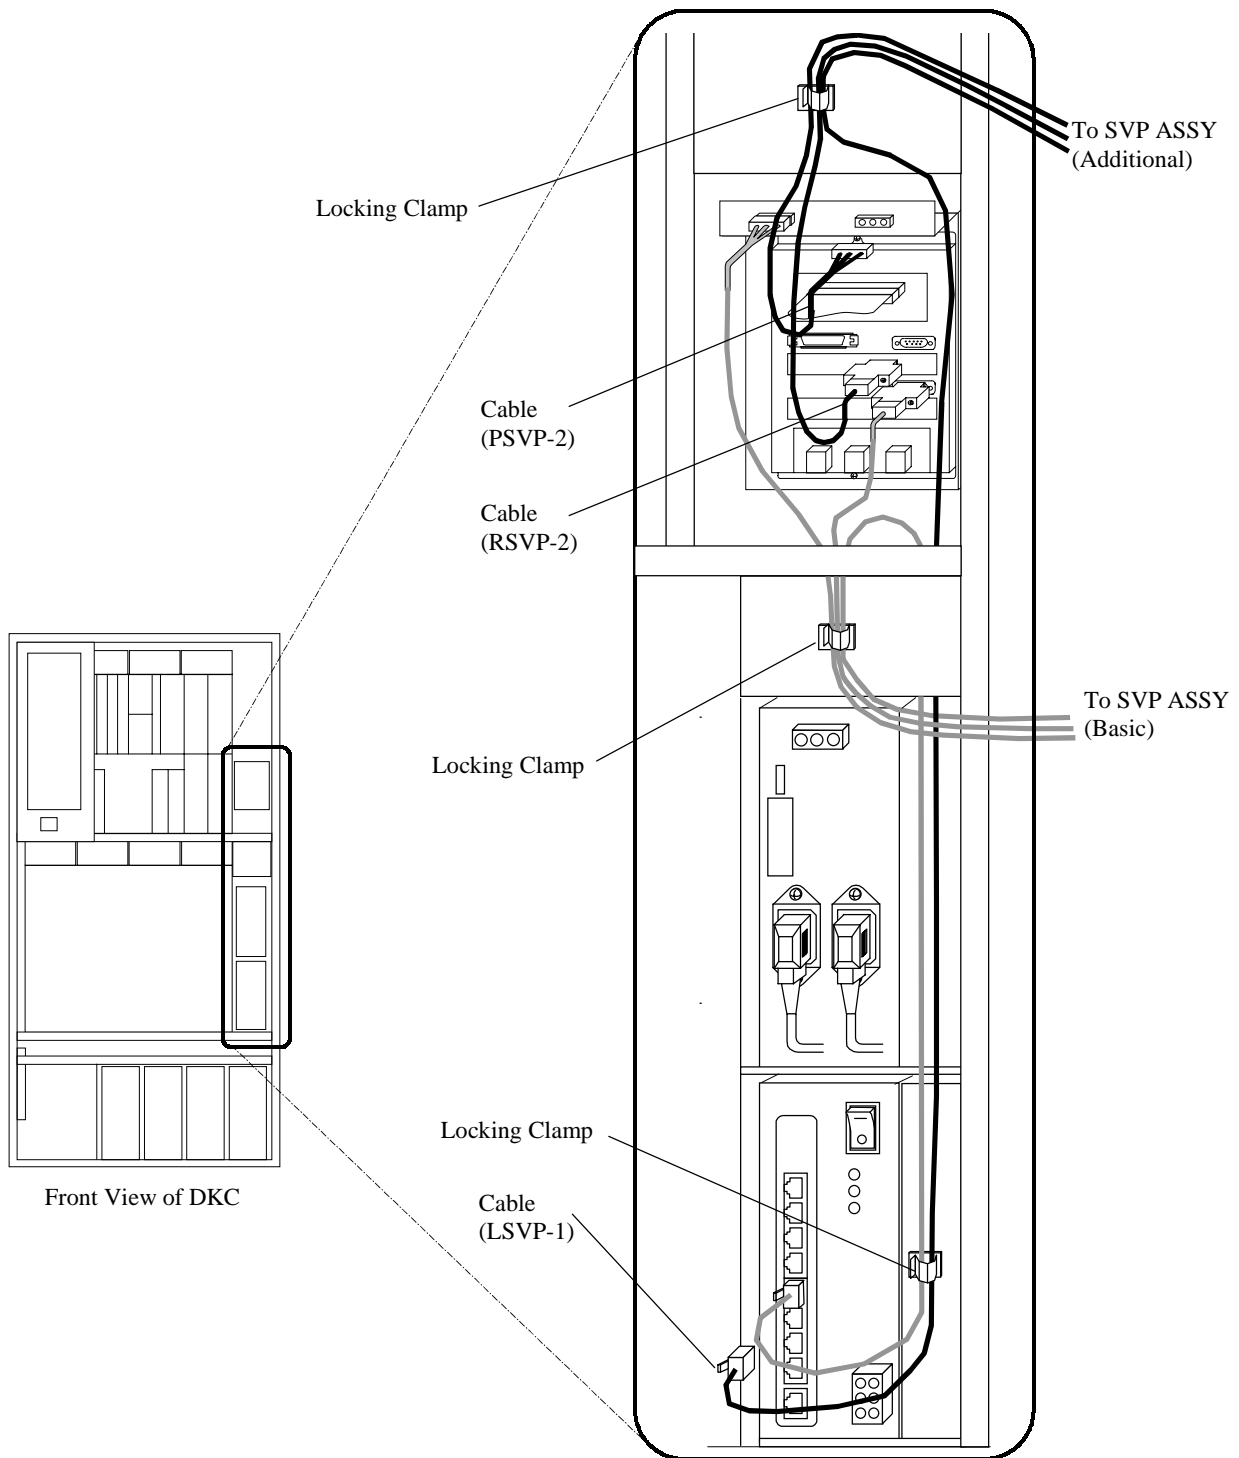


Fig. 3.15-9 Removal of Cables

6. Remove the SVP cover.
 - a. Close the SVP frame.
 - b. Loosen the screws and remove the SVP cover.

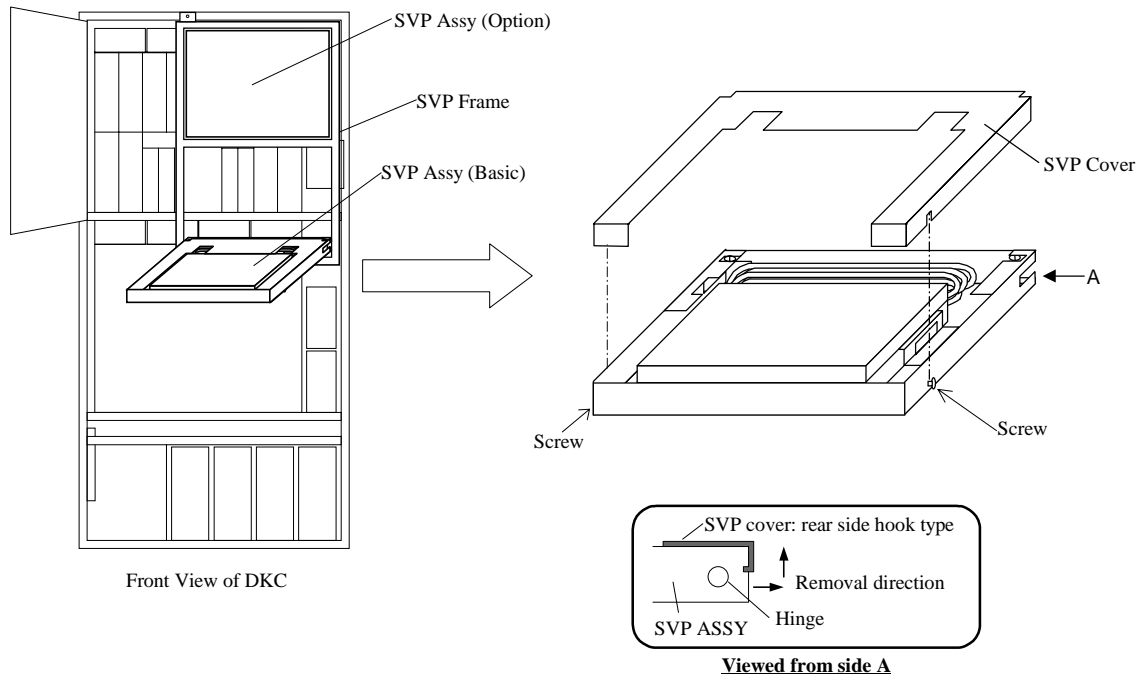


Fig. 3.15-10 Removing SVP cover

7. Loosen the screws and remove the stopper.
8. Pull out the SVP Assy.

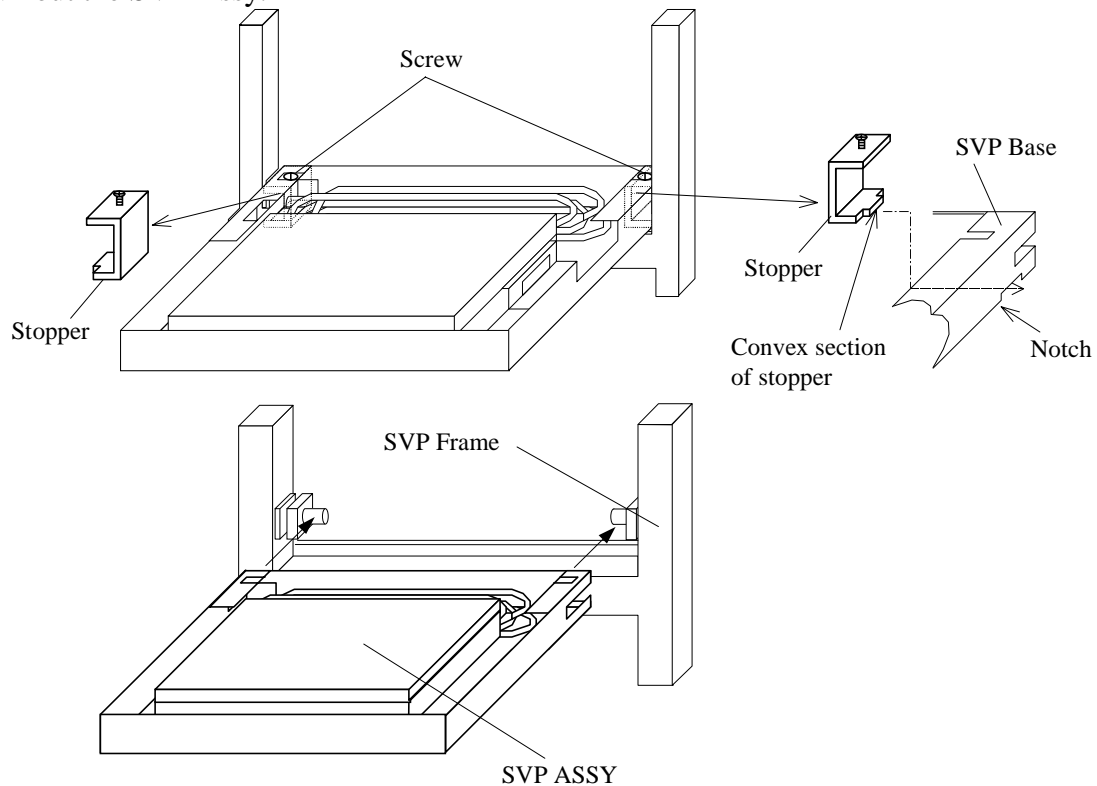


Fig. 3.15-11 Removing and installing the SVP ASSY

9. Remove the DC Cable and LAN Cable from the SVP.

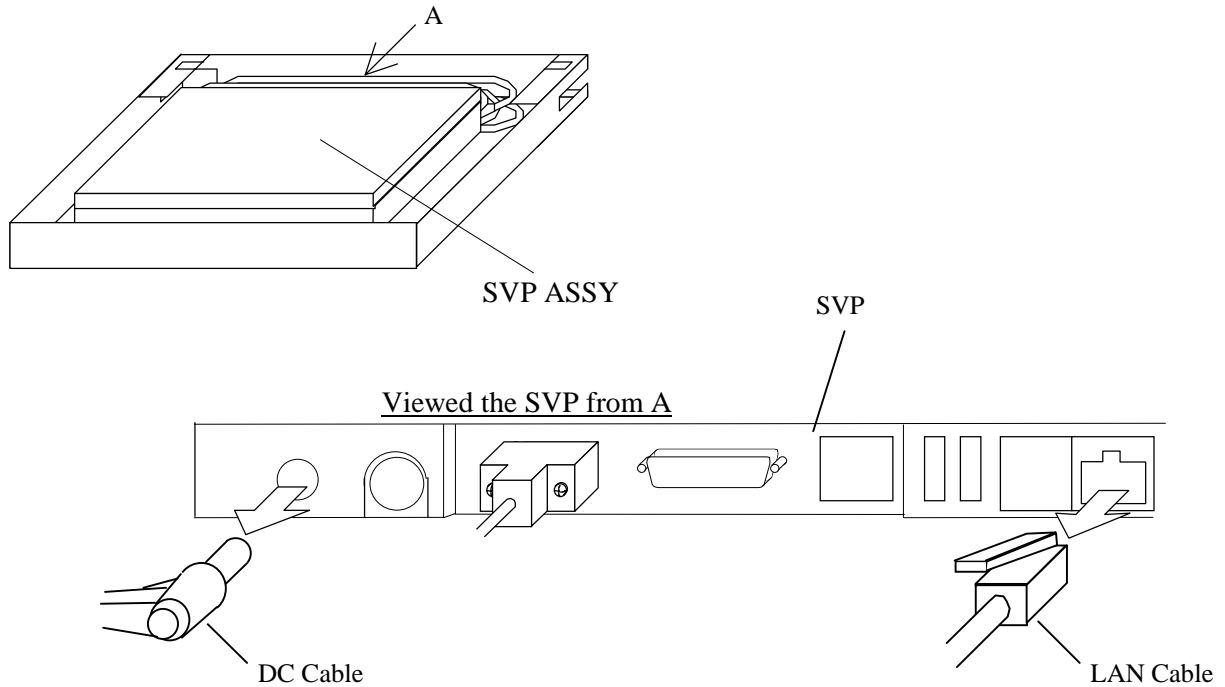


Fig. 3.15-12 Removing and installing Cables

10. Loosen the screws and remove the SVP stoppers.

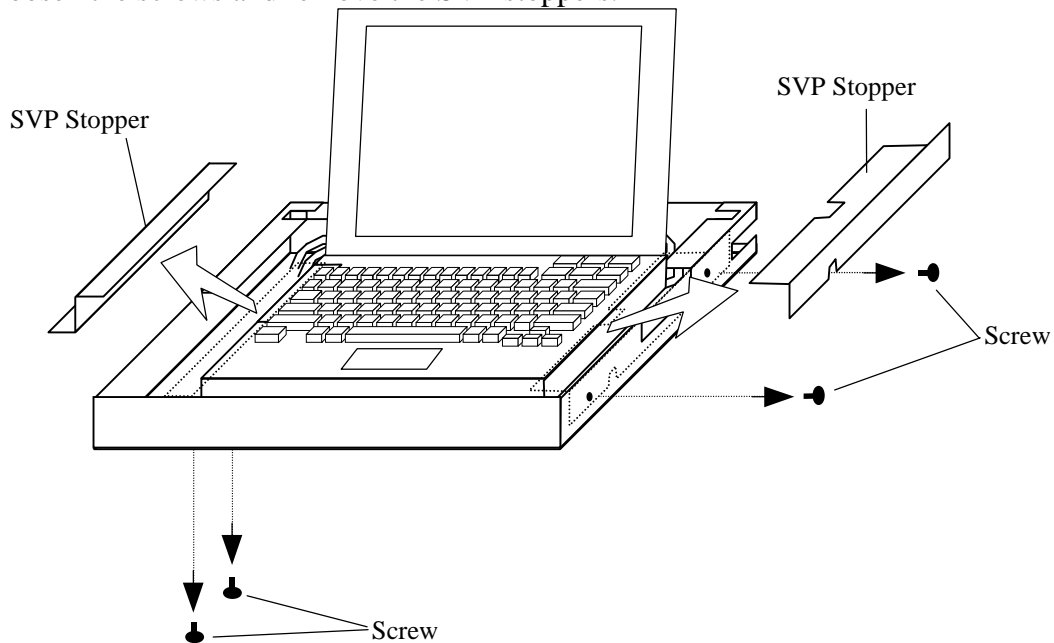


Fig. 3.15-13 Removing and installing the SVP Stoppers

11. Remove the SVP and RS232C Cable.

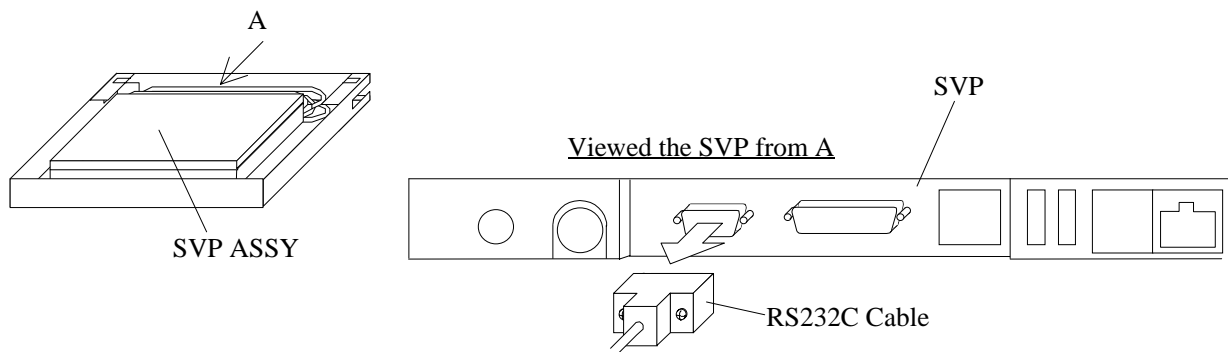


Fig. 3.15-14 Removing and installing RS232C Cable

12. Install the Memory module.

- a. Loosen the screw and remove the Memory cover.
- b. Insert the Memory module to the slot 2.
- c. Attach the Memory cover with screw.

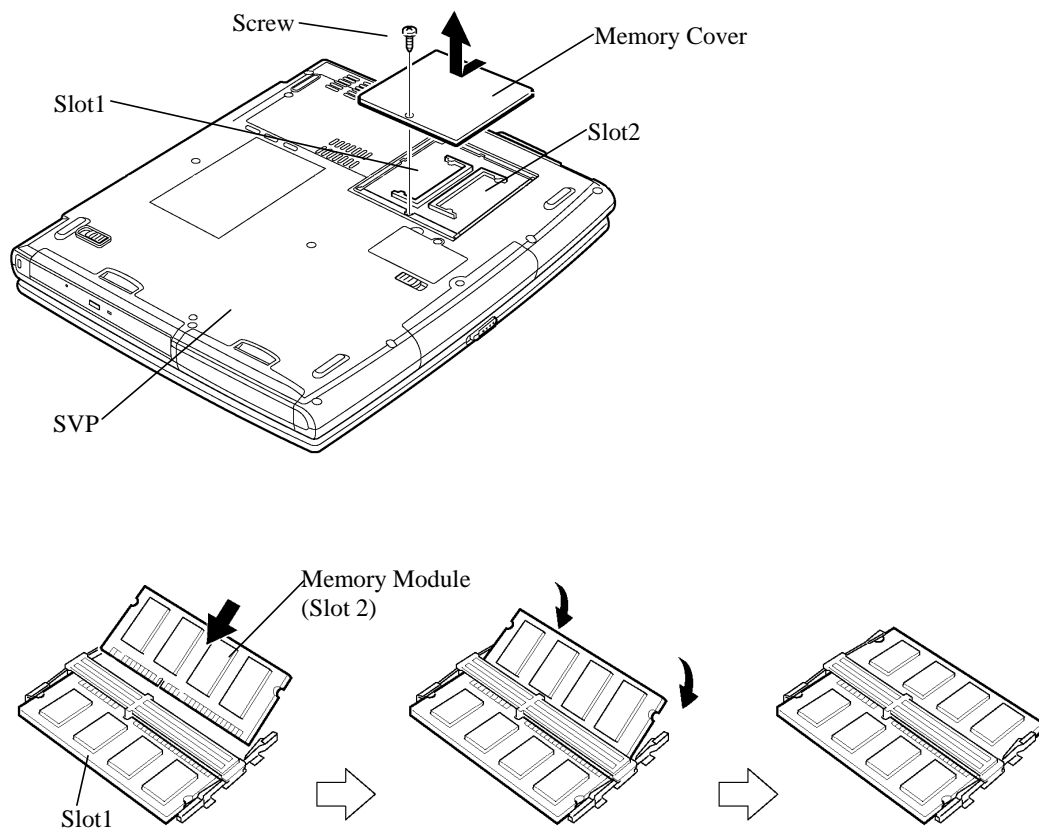


Fig. 3.15-15 Installing Memory Module

13. Attach the Label.

- a. Attach the Label of "256MB".

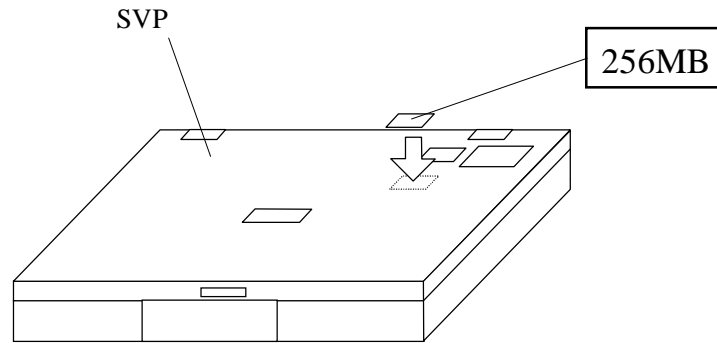


Fig. 3.15-16 Attachment of Label

14. Install a SVP.

- a. Attach the SVP and RS232C Cable. (See Fig. 3.15-14.)
- b. Install the SVP to the SVP ASSY and attach the SVP stoppers with screws. (See Fig. 3.15-13.)
- c. Connect the LAN cable and DC cable to the SVP. (See Fig. 3.15-12.)

15. Install a SVP Assy.

- a. Install the SVP to the SVP ASSY and attach the SVP stoppers with screws. (See Fig. 3.15-11.)
- b. Attach the SVP ASSY cables to the RS CON PCB, HUB BOX and CON PLATE. And then close the locking clamps. (See Fig. 3.15-6 and 3.15-9.)
- c. Attach the SVP cover. (See Fig. 3.15-10.)

16. Remove the Jumper.

Replacement of Basic SVP ASSY

- a. Remove the maintenance jumper of the JP1 on the RS CON PCB. (See Fig. 3.15-2.)

Replacement of Option SVP ASSY

- a. Remove the maintenance jumper of the PS SD on the SVPPS BOX. (See Fig. 3.15-3.)

17. Attach the nameplate.

- a. Attach the nameplate regardless of the model number from the left of the cover.

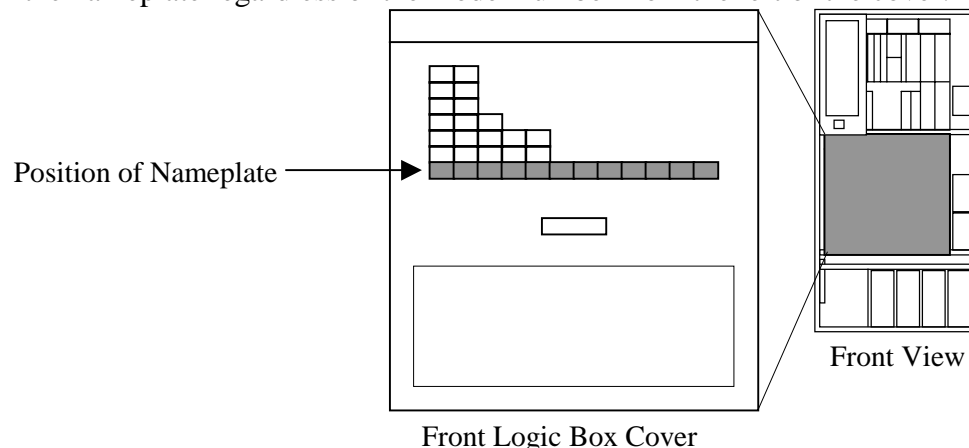


Fig. 3.15-17 Location of Nameplate

4. Hardware De-Installation

4.1 De-Installation of Additional Disk Adapter, Additional Disk Port Switch, Disk Path Expansion Kit and HDD Canister (DKC-F465I-FSW/FSW2, DKC-F460I-200, DKU-F455I-36K4/36K1/72J4/72J1)

Table 4.1-1 Parts List

No.	Model Number	Parts Name	Parts No.	Quantity	Remarks
1	DKC-F460I-200	Disk Adapter PCB	5513979-B	2	Color of PCB Lever: Blue
		Nameplate (HDS)	2105902-103	1	RSD
			2105903-103/203		HICAM/HICEF
		Nameplate (HP)	2105902-203	1	RSD
			2105903-303/403		HICAM/HICEF
2	DKC-F465I-FSW	FSW PCB	5513854-B	8	
		Nameplate (HDS)	2105894-8	1	RSD
			2105895-8/208		HICAM/HICEF
		Nameplate (HP)	2105894-108	1	RSD
			2105895-108/308		HICAM/HICEF
3	DKC-F465I-FSW2	FSW PCB	5513854-C	8	
		Nameplate (HDS)	2105894-9	1	RSD
			2105895-9/209		HICAM/HICEF
		Nameplate (HP)	2105894-109	1	RSD
			2105895-109/309		HICAM/HICEF
4	DKU-F455I-36K4	HDU450-36K1FC	5515544-A	4	
		Nameplate(HDS)	2105914-6/14/22	1	RSD/HICAM/HICEF
		Nameplate(HP)	2105914-50/54/58	1	RSD/HICAM/HICEF
5	DKU-F455I-36K1	HDU450-36K1FC	5515544-A	1	
		Nameplate(HDS)	2105914-5/13/21	1	RSD/HICAM/HICEF
		Nameplate(HP)	2105914-49/53/57	1	RSD/HICAM/HICEF
6	DKU-F455I-72J4	HDU450-72J1FC	5513873-A	4	
		Nameplate(HDS)	2105914-8/16/24	1	RSD/HICAM/HICEF
		Nameplate(HP)	2105914-52/56/60	1	RSD/HICAM/HICEF
7	DKU-F455I-72J1	HDU450-72J1FC	5513873-A	1	
		Nameplate(HDS)	2105914-7/15/23	1	RSD/HICAM/HICEF
		Nameplate(HP)	2105914-51/55/59	1	RSD/HICAM/HICEF

4.1.1 Flowchart

There are four cases (① to ③) of these removal works as shown in the following table because two or more options are to be removed at the same time. Perform the work referring to the flowchart of each work.

Case	Option De-Installation Procedure	Page
①	When only HDD Canister is to be de-installed (DKU-F455I-36K1/36K4/72J1/72J4)	INST04-DKA-30
②	When HDD Canister and FSW are to be de-installed at the same time (DKC-F465I-FSW, DKU-F455I-36K1/36K4/72J1/ 72J4)	INST04-DKA-30
③	When HDD Canister, DKA and FSW are to be de- installed at the same time (DKC-F460I-FSW2, DKC-F460I-200, DKU-F455I-36K1/36K4/72J1/72J4)	INST04-DKA-30

① When only HDD Canister is to be de-installed----- [INST04-DKA-40 through 150]

1. Setting up the New Device Structure Information



2. SVP pre procedure



3. De-Installation Procedure of HDD Canister



4. SVP post procedure

② When HDD Canister and FSW are to be de-installed at the same time

----- [INST04-DKA-160 through 290]

1. Setting up the New Device Structure Information



2. SVP pre procedure



3. De-Installation Procedure of HDD Canister



4. De-Installation Procedure of Disk Port Switch



5. SVP post procedure

③ When HDD Canister, DKA and FSW are to be de-installed at the same time

----- [INST04-DKA-300 through 470]

1. Setting up the New Device Structure Information



2. SVP pre procedure



3. De-Installation Procedure of HDD Canister



4. De-Installation Procedure of Disk Port Switch and Disk Path Expansion Kit



5. De-Installation Procedure of Disk Adapter




6. SVP post procedure

4.1.2 When only HDD Canister is to be de-installed (DKU-F455I-36K4/36K1/72J4/72J1)


1. Setting up the New Device Structure Information

1. <Mode Change>
Change the mode to Modify Mode.
Select (CL) [Install].


2. <Start the 'Menu Dialog' screen>
Select (CL) [Change Configuration].

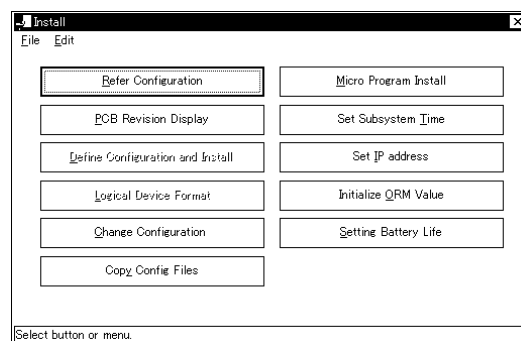

3. <Start Device Structure Setup screen>
Select (CL) [De-Installation] in the 'Menu Dialog' dialog box and select (CL) [OK].

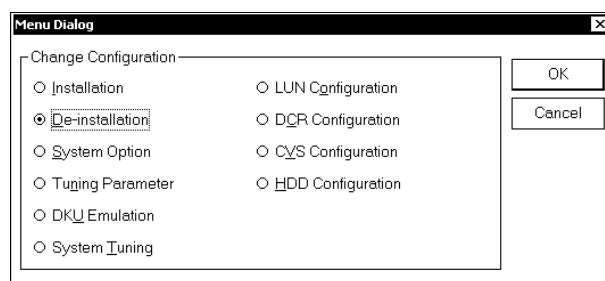


4. <Select a part to be changed>
Select (CL) [DKA + ECC group + LDEV], and select (CL) [OK].

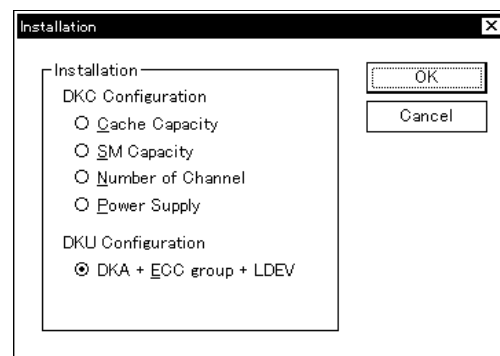


5.

Select (CL) [No] in response to “De-installation of features may cause fatal damage to subsystem. Check that any features be de-installed are not required by host operations. Data will be lost from any ECC group that are removed. Do you want to stop this process?”.

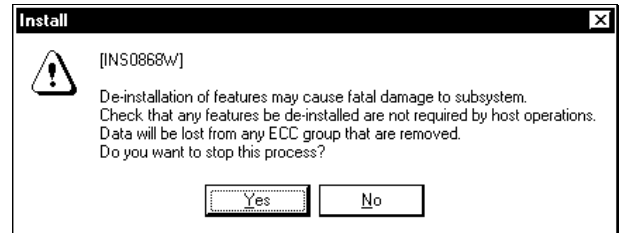

6. <Input password>

Enter the password and select (CL) [OK].

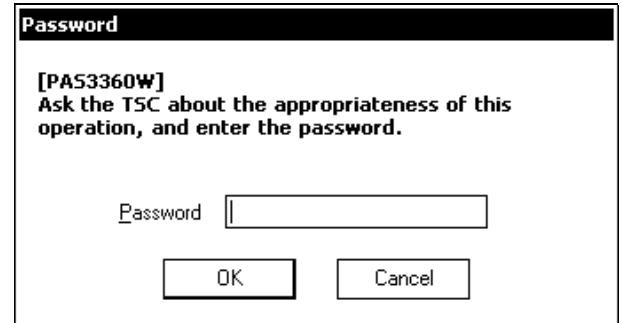**NOTICE**

This is a special (exceptional) operation that can cause a serious failure such as a system down or a data loss if a wrong part to be removed is selected, and requires an input of a password. Ask the technical support center about the appropriateness of the operation, and input the password after getting an approval of executing the operation.


7. <Update Configuration Information>

Set the item to be de-installed for DKC and DKA in the ‘DKC Configuration’ window.

When decreasing the CUs, change the “Number of CUs”.

Note: A part other than the CU and DKA cannot be removed at the same time.

Make sure that the entered item is correct and select (CL) [>>Next].

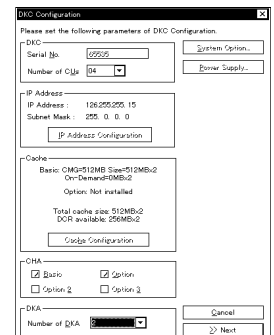

8. Change Drive Configuration Information>

Set drive configuration according to the 'Physical Device Configuration' screen displaying the mounted B4 based on the result of setting of DKU mount pattern.


Detailed procedure is shown below.

[Set...]: Defines the parity group or spare disk. The routine proceeds to Step 8-1.

[Clear...]: Cancels the setting of the B4.

After setting up all items, select (CL) [>>Next].

Selecting (CL) [Before<<] returns you to the previous screen.

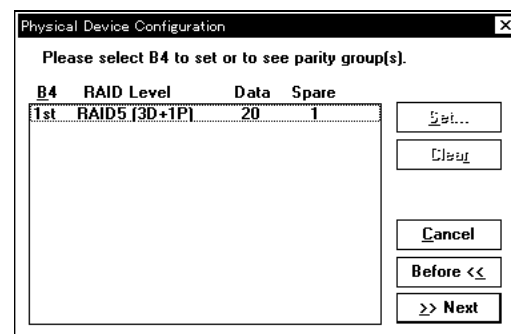

[For the case of the multi cabinet model]

B4	Location	B4	Location
1st	HDU-R10, 11, 12, 13	7th	HDU-L20, 21, 22, 23
2nd	HDU-R14, 15, 16, 17	8th	HDU-L24, 25, 26, 27
3rd	HDU-L10, 11, 12, 13	9th	HDU-R30, 31, 32, 33
4th	HDU-L14, 15, 16, 17	10th	HDU-R34, 35, 36, 37
5th	HDU-R20, 21, 22, 23	11th	HDU-L30, 31, 32, 33
6th	HDU-R24, 25, 26, 27	12th	HDU-L34, 35, 36, 37

Note: The 9th to 12th of the B4 are valid only when the DKUs for the RAID 400 are connected.


[For the case of the single cabinet model]

B4	Location	Remarks
1st	HDU-R0, 1, 2, 3	HDD-X00 ~ X0F
2nd	HDU-R0, 1, 2, 3	HDD-X10 ~ X1F

8-1. <Define Parity Group>

Select (CL) the group to be de-installed and select (CL) [Delete] in the 'Parity Group Configuration' dialog box.

After setting, select (CL) [OK]. Return to step 8.

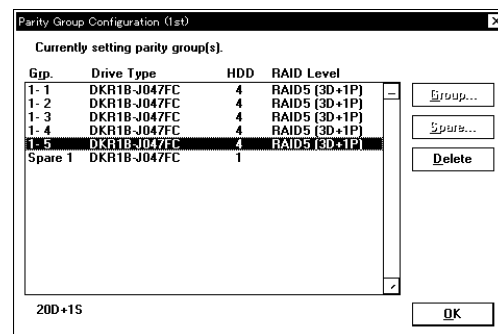


2. SVP pre procedure

1. <Start de-installation>

Select (CL) [Yes] in response to “Are you sure you want to renew subsystem?”.


When [No] is selected (CL), returns to [INST04-DKA-40](#) step 2.

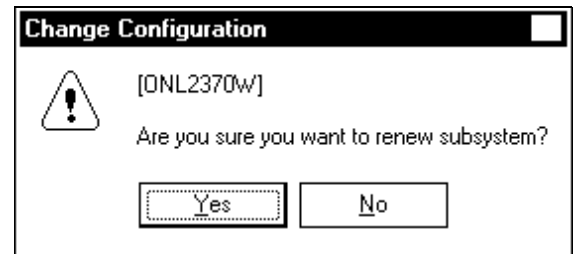

2.

At this point refrain from pressing the [OK] button.

“If de-installation of the DKA, the physical devices or the redundant power supply has been completed, press OK.” shown in the right figure.

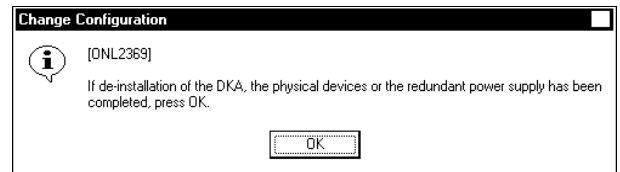

3. De-Installation Procedure of HDD Canister

3-1 Confirmation of position to de-install HDD canister

a. Confirm a position to de-install HDD canister.

No.	Model Number	Model Name	Data and Parity
1	DKU-F455I-36K4/72J4	4 HDD Canisters	Data and Parity Drive

(1) Entry Model or Full-spec Model (1 DKA Pair Model)

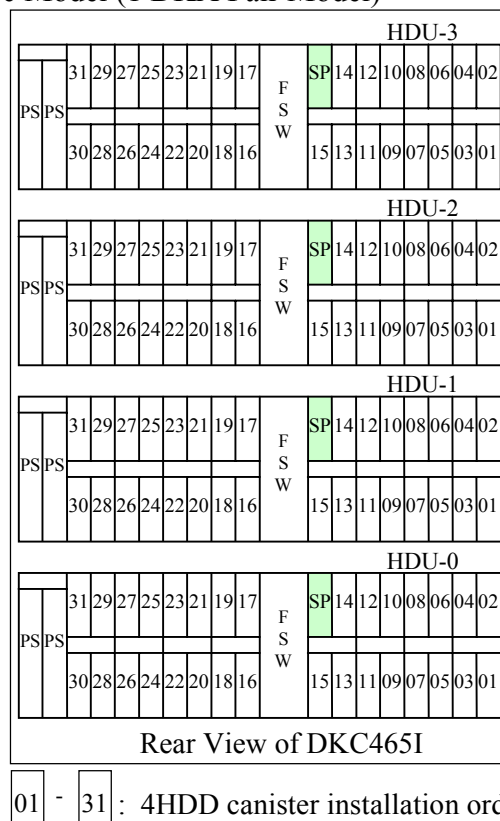


Fig. 4.1.2-1 Data Drive/Parity Drive Expansion Sequence (1 DKA Pair Model)

The relationship between HDDs installation order and RAID group number is shown in the following table.

Table 4.1.2-1 Relation between HDDs installation order and RAID group number (1 DKA Pair Model)

Group No.	Installation Order	Group No.	Installation Order	Group No.	Installation Order	Group No.	Installation Order
1-1	001	1-2	002	1-3	003	1-4	004
1-5	005	1-6	006	1-7	007	1-8	008
1-9	009	1-10	010	1-11	011	1-12	012
1-13	013	1-14	014	1-15	015	1-16	SP
1-17	016	1-18	017	1-19	018	1-20	019
1-21	020	1-22	021	1-23	022	1-24	023
1-25	024	1-26	025	1-27	026	1-28	027
1-29	028	1-30	029	1-31	030	1-32	031

(2) Full-spec Model (2 DKA Pairs Model)

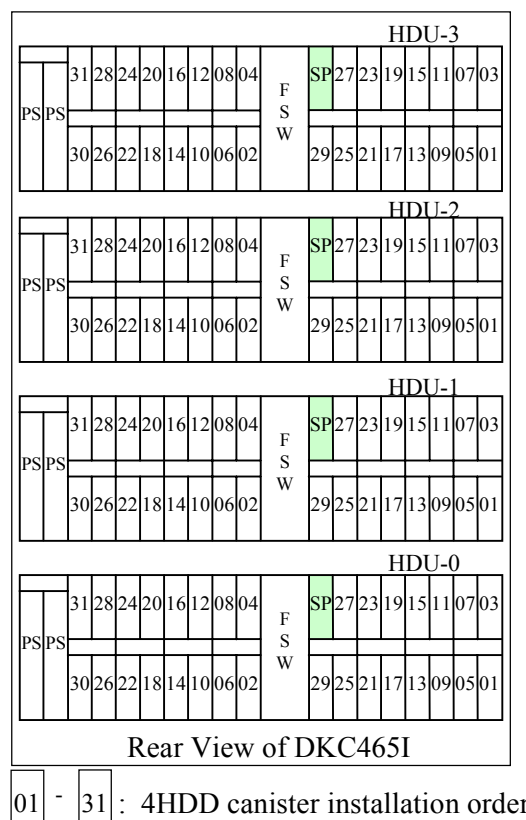


Fig. 4.1.2-2 Data Drive/Parity Drive Expansion Sequence


The relationship between HDDs installation order and RAID group number is shown in the following table.

Table 4.1.2-2 Relation between HDDs installation order and RAID group number (2 DKA Pairs Model)


Group No.	Installation Order	Group No.	Installation Order	Group No.	Installation Order	Group No.	Installation Order
1-1	001	1-2	003	1-3	005	1-4	007
1-5	009	1-6	011	1-7	013	1-8	015
1-9	017	1-10	019	1-11	021	1-12	023
1-13	025	1-14	027	1-15	029	1-16	SP
2-1	002	2-2	004	2-3	006	2-4	008
2-5	010	2-6	012	2-7	014	2-8	016
2-9	018	2-10	020	2-11	022	2-12	024
2-13	026	2-14	028	2-15	030	2-16	031

No.	Model Number	Model Name	Data and Parity
1	DKU-F455I-36K1/72J1	1 HDD Canister	Spare Drive

Entry Model or
Full-spec Model (1DKA Pair Model)

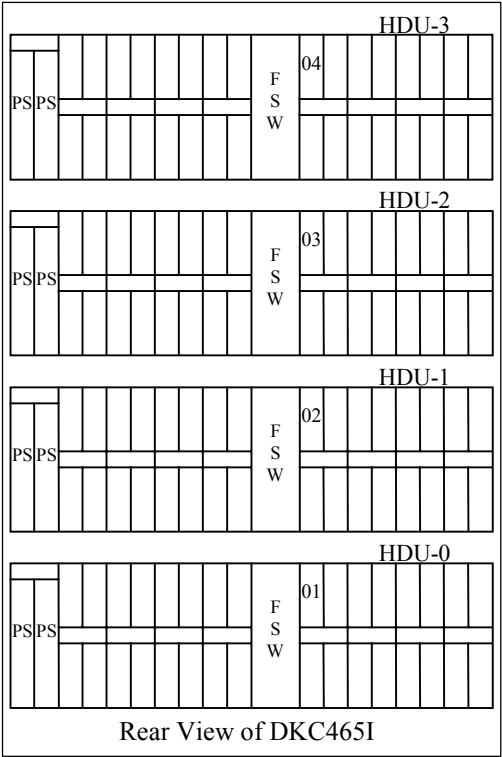

Full-spec Model (2DKA Pairs Model)

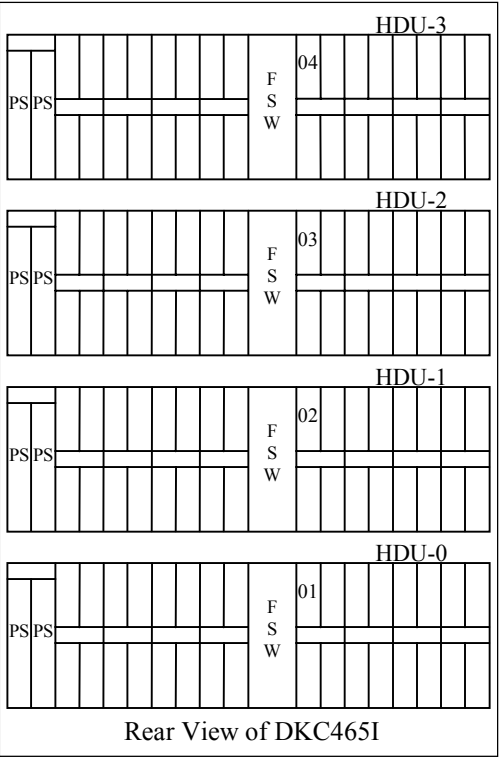

01 - 04 : Spare HDD canister installation order

Fig. 4.1.2-3 Spare Drive Expansion Sequence

3-2 Confirmation of Shut Down LED.

- a. Confirm the Shut Down LED on the JMP PCB. (It should be RED.)

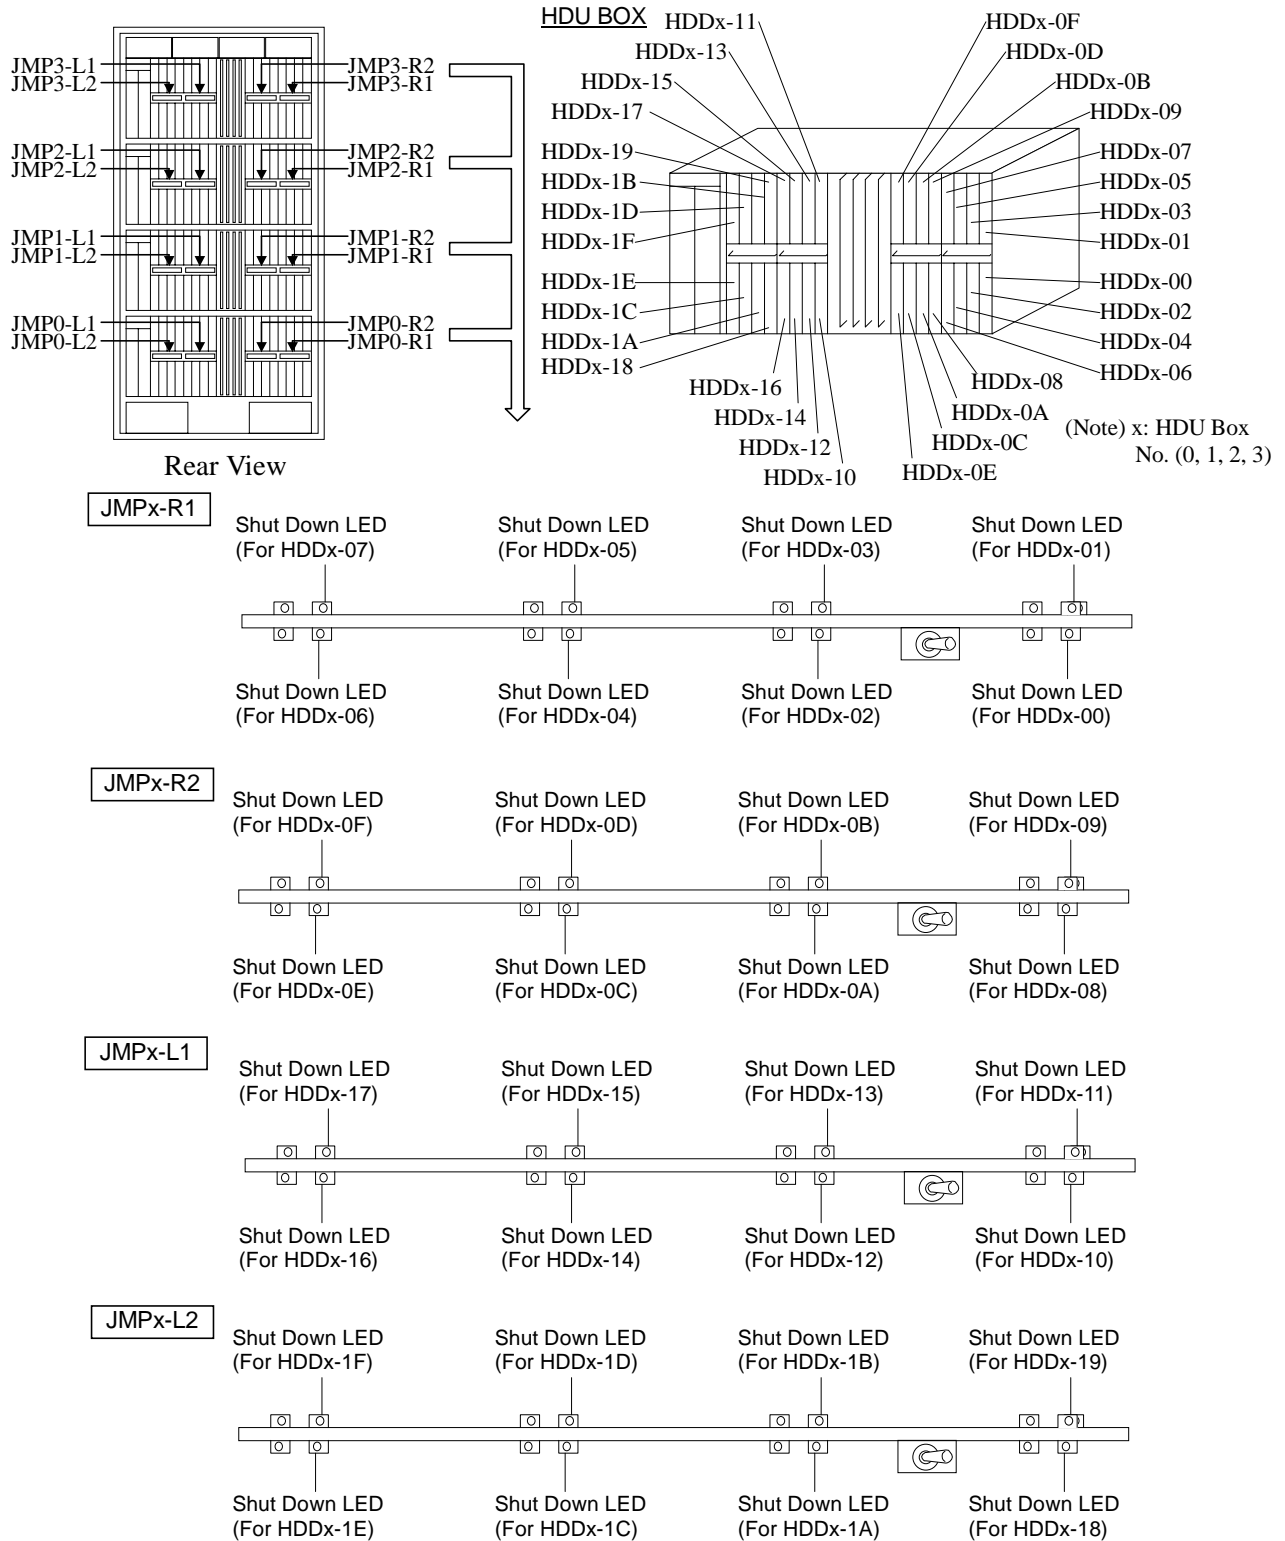


Fig. 4.1.2-4 Location of Shut Down LED

3-3 De-installation of the HDD canister.



CAUTION

A system down may be caused by a removal of an HDD canister other than that to be removed. Make sure that it is the HDD canister to be removed.

- a. After pushing up the stopper on the front side of the HDD canister, pull the handle toward you to remove the HDD canister.
- b. Insert the dummy canister to the HDU Box.


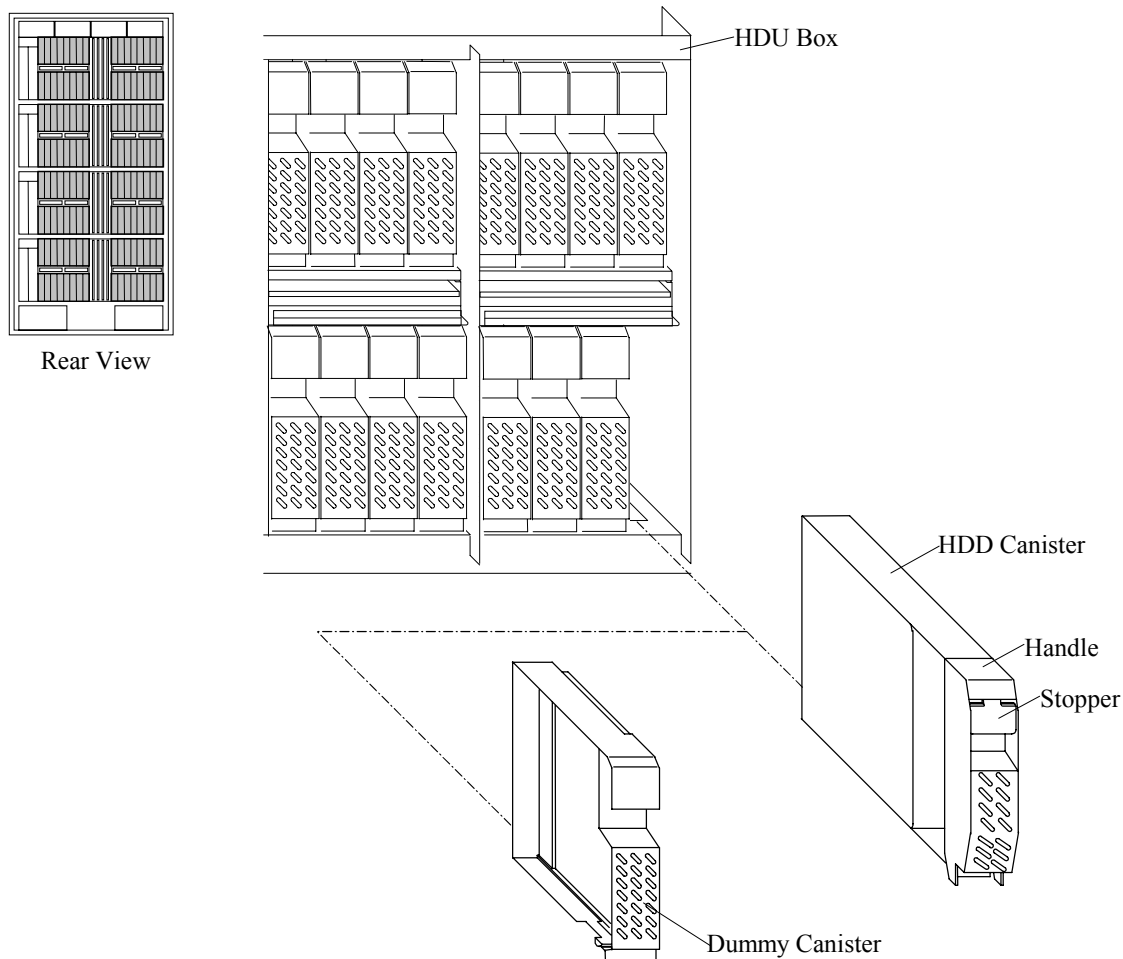


Fig. 4.1.2-5 De-Installation of HDD Canister

3-4 Removal of the Nameplate.

- a. Wipe off the unnecessary numbers on the corresponding nameplate.

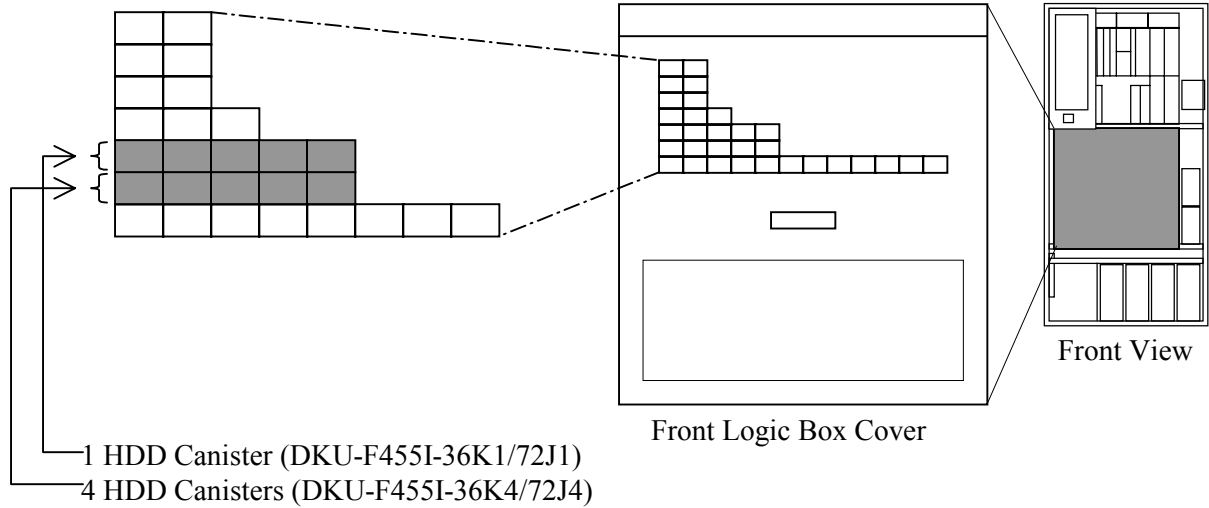

[Example]

When the 7 DKU-F455I-72J4 sets are installed


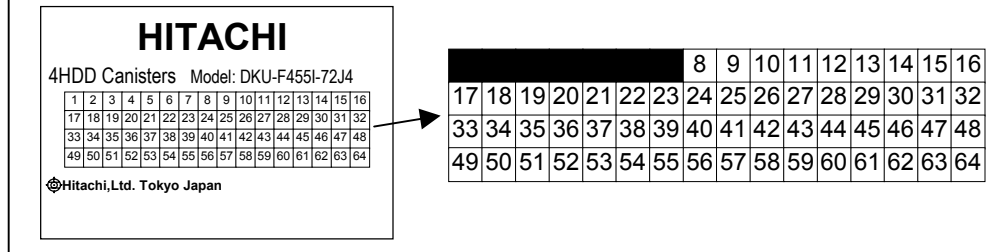


Fig. 4.1.2-6 Removal of Nameplate

4. SVP post procedure


1.

Select (CL) [OK] in response to “If de-installation of the DKA, the physical devices or the redundant power supply has been completed, press OK.” shown in the right figure.

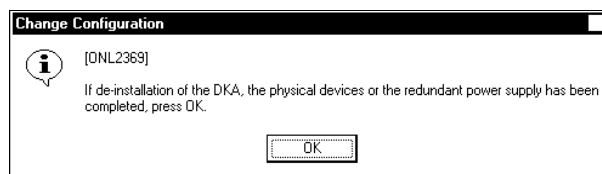


2. <Check the end of de-installation procedure>

“Renewal process has completed. Please check subsystem status.” shown in the right figure displayed. Select (CL) [OK] in response to this message.

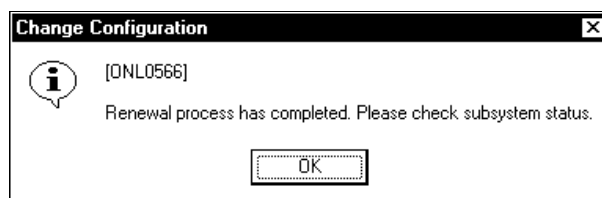


3.

“Reading subsystem configuration data...” is displayed.
 “Please insert the Config FD in the FDD.” is displayed.
 Insert the configuration FD into FDD, select (CL) [OK].

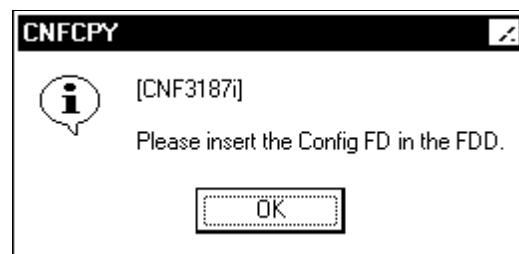


4.

When this procedure is completed, message “Please remove the Config FD.” is displayed.
 Remove the FD, select (CL) [OK].

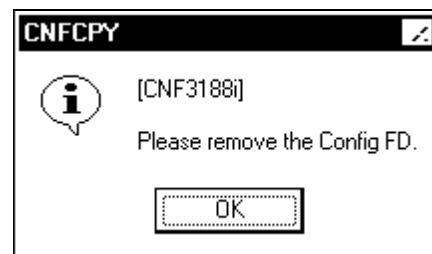

5. After the procedure is completed, return to 'Install'.
Select (CL) [File]-[Exit].

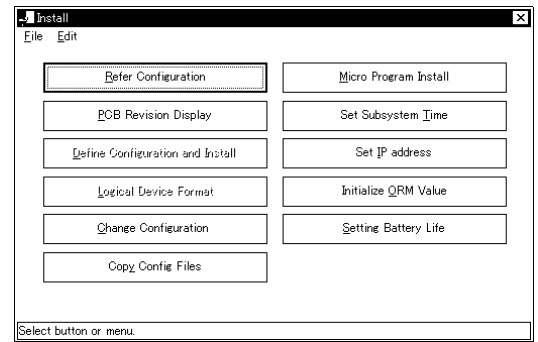


6. <Mode Change>
Change the mode to View Mode.

4.1.3 When HDD Canister and FSW are to be de-installed at the same time (DKC-F465I-FSW, DKU-F455I-36K4/36K1/72J4/72J1)


1. Setting up the New Device Structure Information

1. <Mode Change>
Change the mode to Modify Mode.
Select (CL) [Install].


2. <Start the 'Menu Dialog' screen>
Select (CL) [Change Configuration].

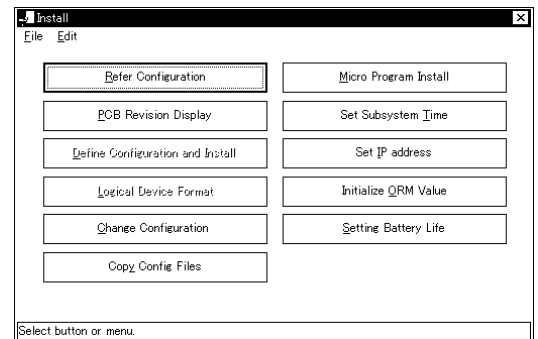


3. <Start Device Structure Setup screen>
Select (CL) [De-Installation] in the 'Menu Dialog' dialog box and select (CL) [OK].

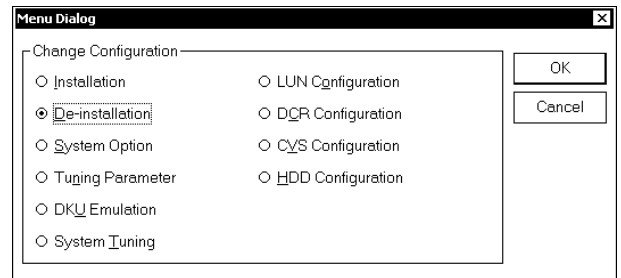

4. <Select a part to be changed>
Select (CL) [DKA + ECC group + LDEV], and select (CL) [OK].

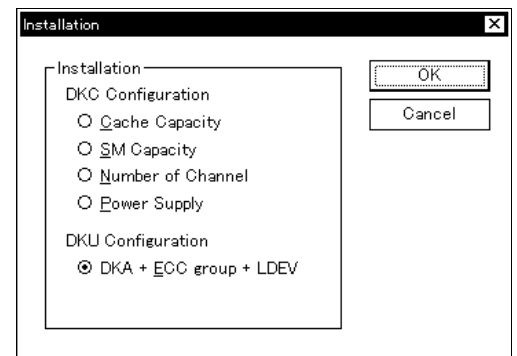

- 
- Install**
- [INS0868W]
- De-installation of features may cause fatal damage to subsystem.
Check that any features be de-installed are not required by host operations.
Data will be lost from any ECC group that are removed.
Do you want to stop this process?
-

- Password**

[PA53360W]

Ask the TSC about the appropriateness of this operation, and enter the password.

Password

This is a special (exceptional) operation that can cause a serious failure such as a system down or a data loss if a wrong part to be removed is selected, and requires an input of a password. Ask the technical support center about the appropriateness of the operation, and input the password after getting an approval of executing the operation.

-
- DAC Configuration**
- Please set the following parameters of DAC Configuration
- DfA
 Serial No:
 Number of DfA:
- System Option
 Remove Supply...
- I-P Address
 IP Address: 126.255.255.15
 Subnet Mask: 255.0.0.0
- Cache
 Basic: CMG512MB Size=512MB-D2
 On-Chip=512MB-D2
 Option Not installed
 Total cache size 512MB-D2
 DfA available 256MB-D2
- CMA
☒ Basic ☒ Option 1
☐ Option 2 ☐ Option 2
- DfA
 Number of DfA:

8. Change Drive Configuration Information>

Set drive configuration according to the 'Physical Device Configuration' screen displaying the mounted B4 based on the result of setting of DKU mount pattern.


Detailed procedure is shown below.

[Set...]: Defines the parity group or spare disk. The routine proceeds to Step 8-1.

[Clear...]: Cancels the setting of the B4.

After setting up all items, select (CL) [>>Next].

Selecting (CL) [Before<<] returns you to the previous screen.

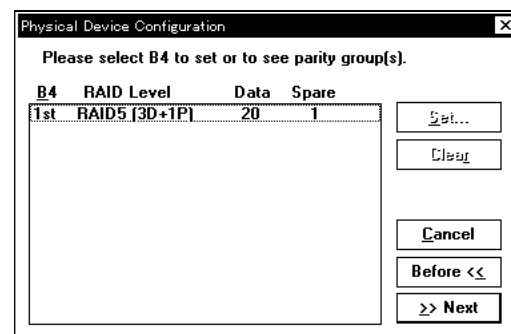

[For the case of the multi cabinet model]

B4	Location	B4	Location
1st	HDU-R10, 11, 12, 13	7th	HDU-L20, 21, 22, 23
2nd	HDU-R14, 15, 16, 17	8th	HDU-L24, 25, 26, 27
3rd	HDU-L10, 11, 12, 13	9th	HDU-R30, 31, 32, 33
4th	HDU-L14, 15, 16, 17	10th	HDU-R34, 35, 36, 37
5th	HDU-R20, 21, 22, 23	11th	HDU-L30, 31, 32, 33
6th	HDU-R24, 25, 26, 27	12th	HDU-L34, 35, 36, 37

Note: The 9th to 12th of the B4 are valid only when the DKUs for the RAID 400 are connected.


[For the case of the single cabinet model]

B4	Location	Remarks
1st	HDU-R0, 1, 2, 3	HDD-X00 ~ X0F
2nd	HDU-R0, 1, 2, 3	HDD-X10 ~ X1F

8-1. <Define Parity Group>

Select (CL) the group to be de-installed and select (CL) [Delete] in the 'Parity Group Configuration' dialog box.

After setting, select (CL) [OK]. Return to step 8.

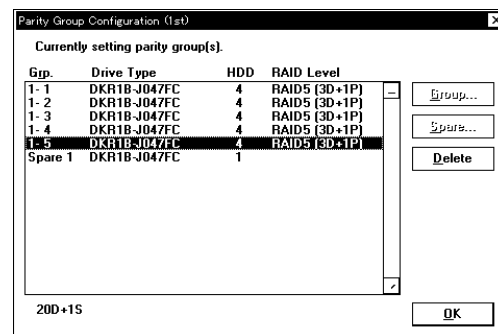


2. SVP pre procedure

1. <Start de-installation>

Select (CL) [Yes] in response to “Are you sure you want to renew subsystem?”.


When [No] is selected (CL), returns to [INST04-DKA-160](#) step 2.

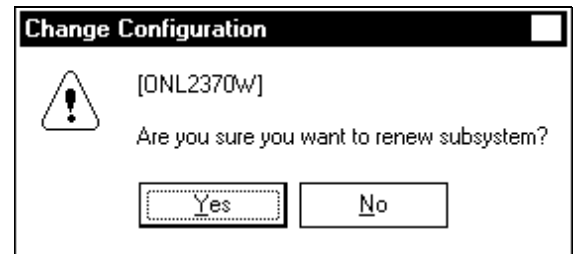

2.

At this point refrain from pressing the [OK] button.

“If de-installation of the DKA, the physical devices or the redundant power supply has been completed, press OK.” shown in the right figure.

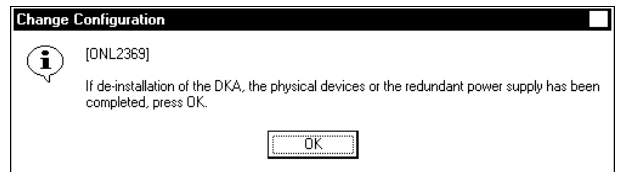

3. De-Installation Procedure of HDD Canister

3-1 Confirmation of position to de-install HDD canister

a. Confirm a position to de-install HDD canister.

No.	Model Number	Model Name	Data and Parity
1	DKU-F455I-36K4/72J4	4 HDD Canisters	Data and Parity Drive

(1) Entry Model or Full-spec Model (1 DKA Pair Model)

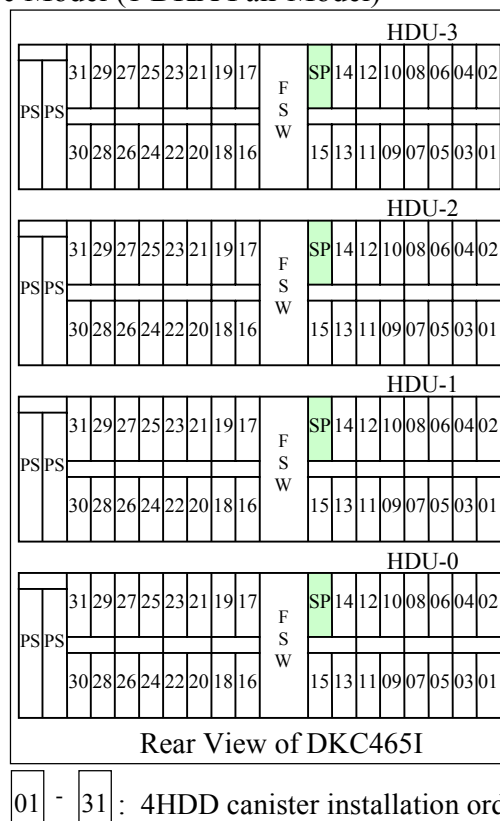


Fig. 4.1.3-1 Data Drive/Parity Drive Expansion Sequence (1 DKA Pair Model)


The relationship between HDDs installation order and RAID group number is shown in the following table.

Table 4.1.3-1 Relation between HDDs installation order and RAID group number (1 DKA Pair Model)

Group No.	Installation Order	Group No.	Installation Order	Group No.	Installation Order	Group No.	Installation Order
1-1	001	1-2	002	1-3	003	1-4	004
1-5	005	1-6	006	1-7	007	1-8	008
1-9	009	1-10	010	1-11	011	1-12	012
1-13	013	1-14	014	1-15	015	1-16	SP
1-17	016	1-18	017	1-19	018	1-20	019
1-21	020	1-22	021	1-23	022	1-24	023
1-25	024	1-26	025	1-27	026	1-28	027
1-29	028	1-30	029	1-31	030	1-32	031

No.	Model Number	Model Name	Data and Parity
1	DKU-F455I-36K1/72J1	1 HDD Canister	Spare Drive

Full-spec Model (2DKA Pairs Model)

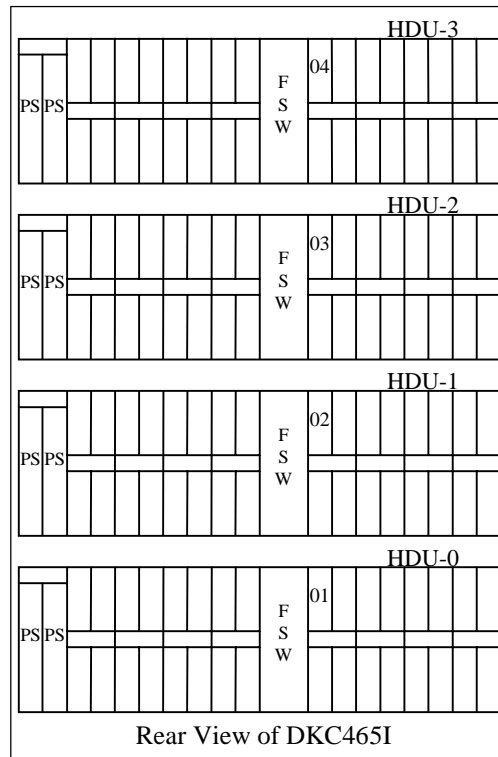

01 - 04 : Spare HDD canister installation order

Fig. 4.1.3-2 Spare Drive Expansion Sequence

Blank Sheet

3-2 Confirmation of Shut Down LED.

- a. Confirm the Shut Down LED on the JMP PCB. (It should be RED.)

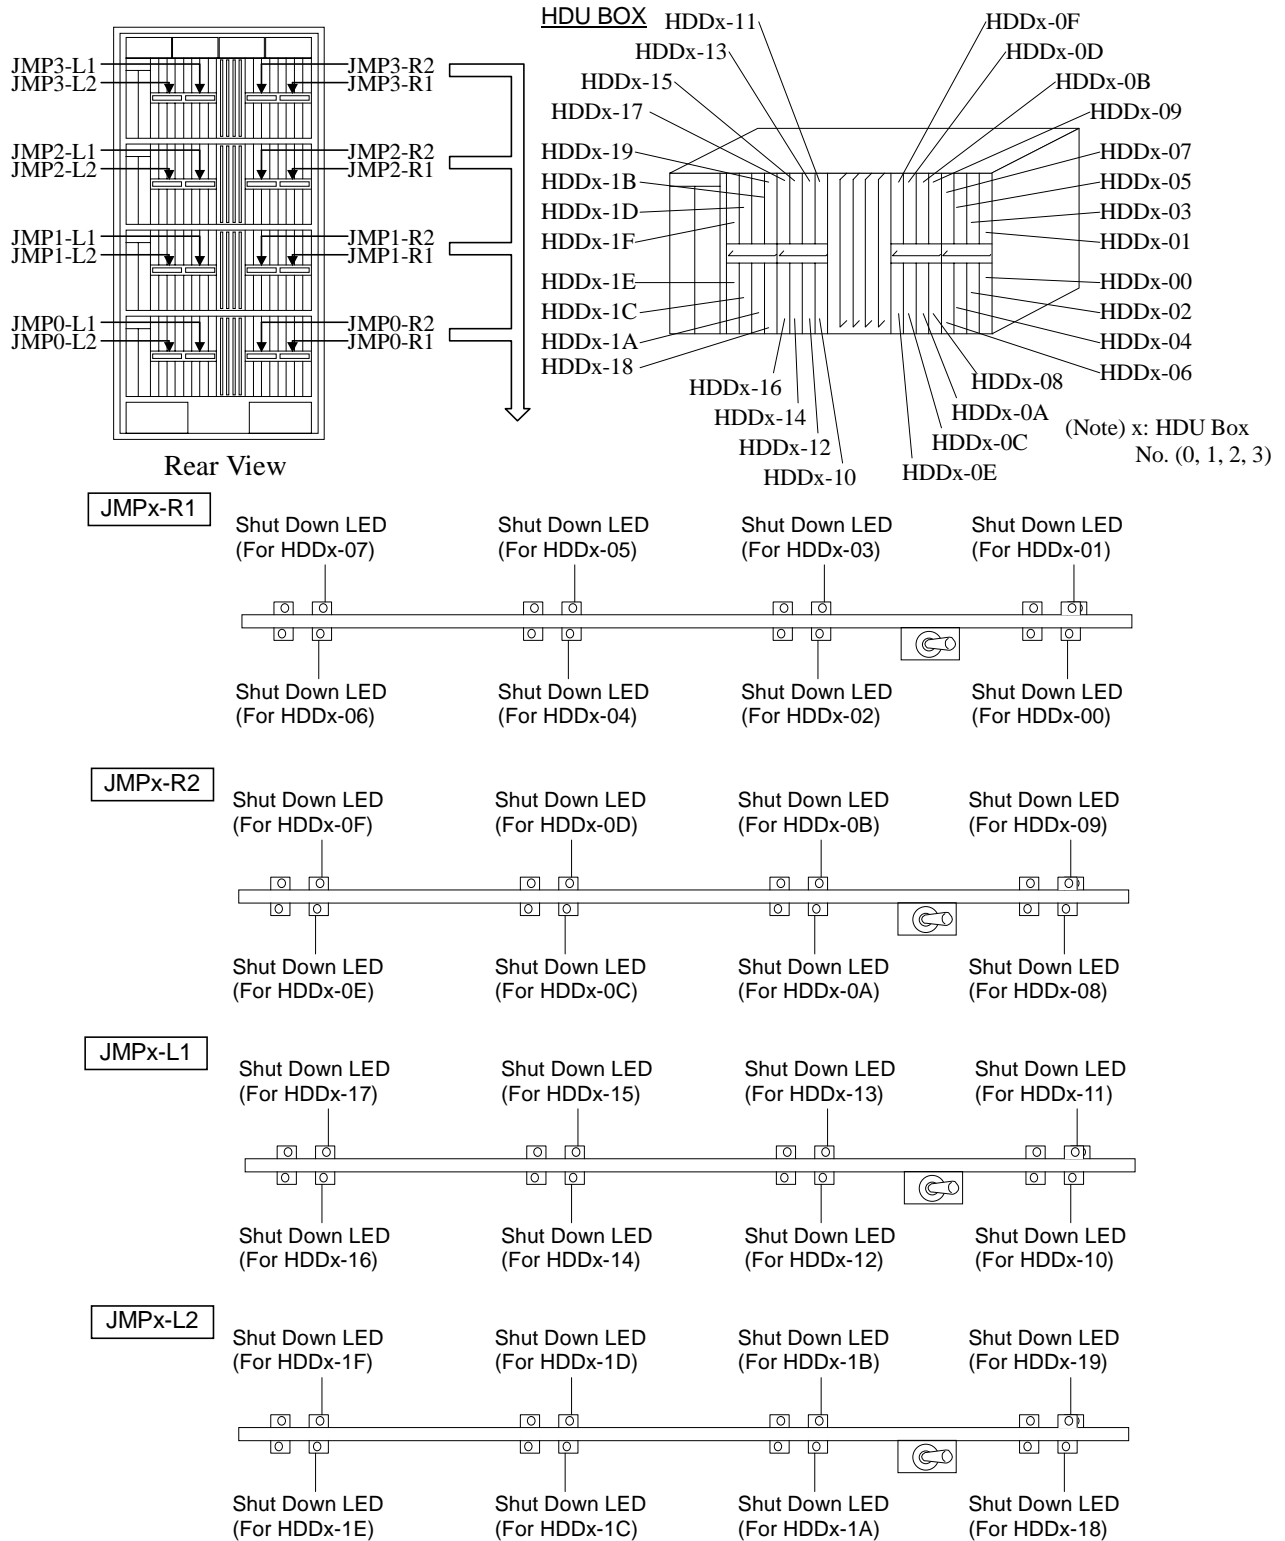


Fig. 4.1.3-3 Location of Shut Down LED

3-3 De-installation of the HDD canister.



CAUTION

A system down may be caused by a removal of an HDD canister other than that to be removed. Make sure that it is the HDD canister to be removed.

- a. After pushing up the stopper on the front side of the HDD canister, pull the handle toward you to remove the HDD canister.
- b. Insert the dummy canister to the HDU Box.


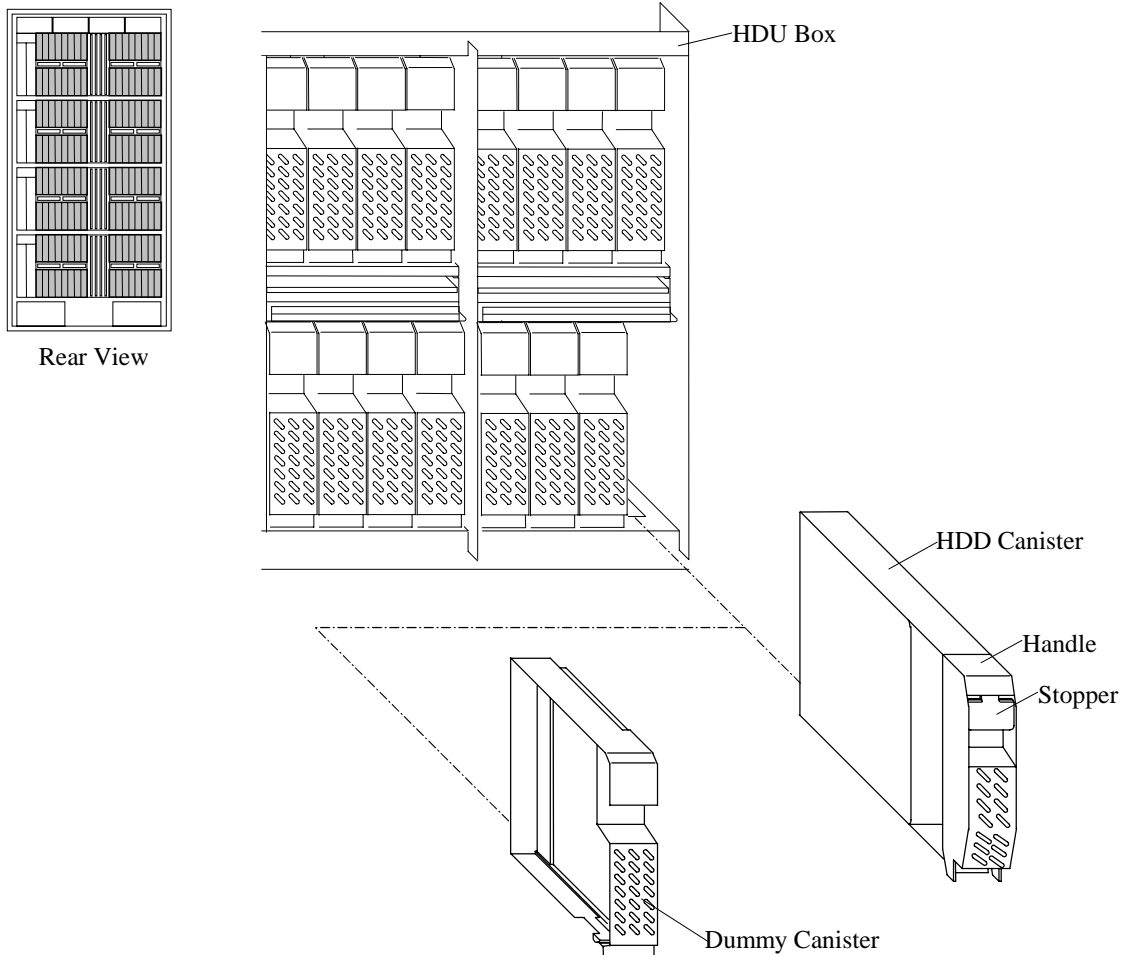


Fig. 4.1.3-4 De-Installation of HDD Canister

3-4 Removal of the Nameplate.

- a. Wipe off the unnecessary numbers on the corresponding nameplate.

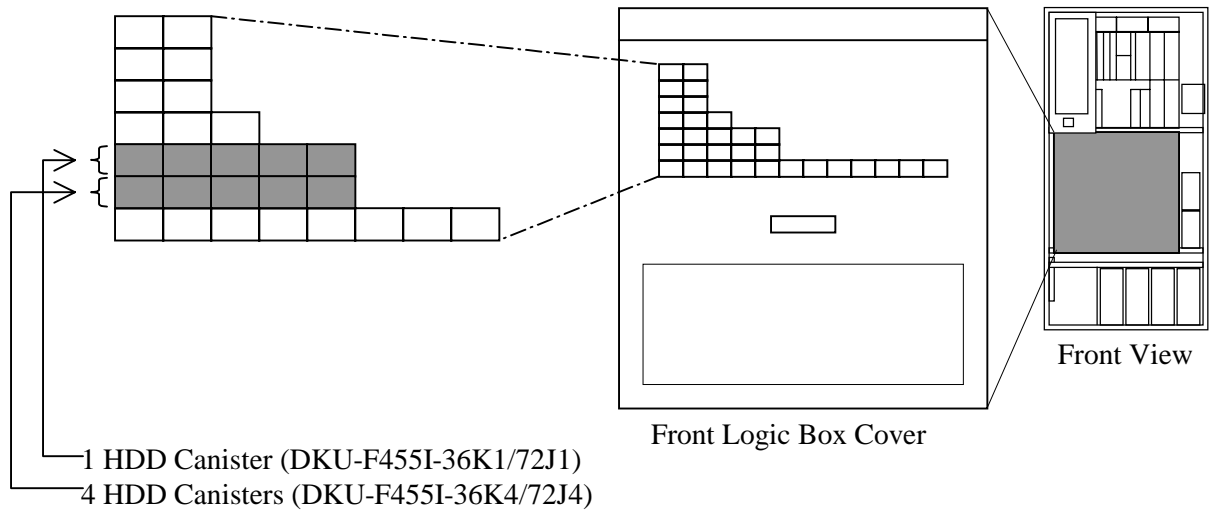

[Example]

When the 7 DKU-F455I-72J4 sets are installed


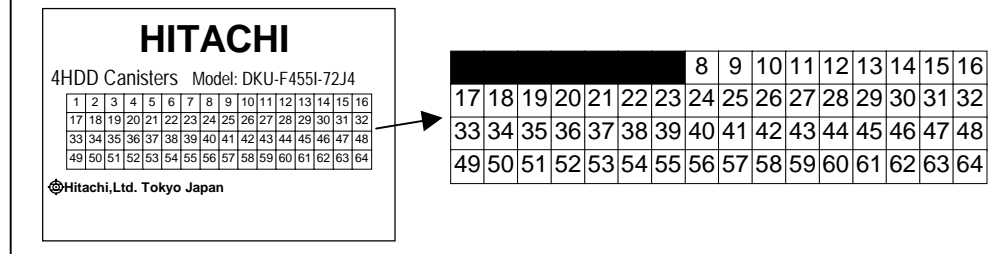


Fig. 4.1.3-5 Removal of Nameplate

4. De-Installation Procedure of Disk Port Switch

Note: Be sure to wear your wrist strap and attach to ground prior to performing the following work. This will ensure that the IC and LSI on the PCB are protected from static electricity.

4-1 Remove the PCBs.

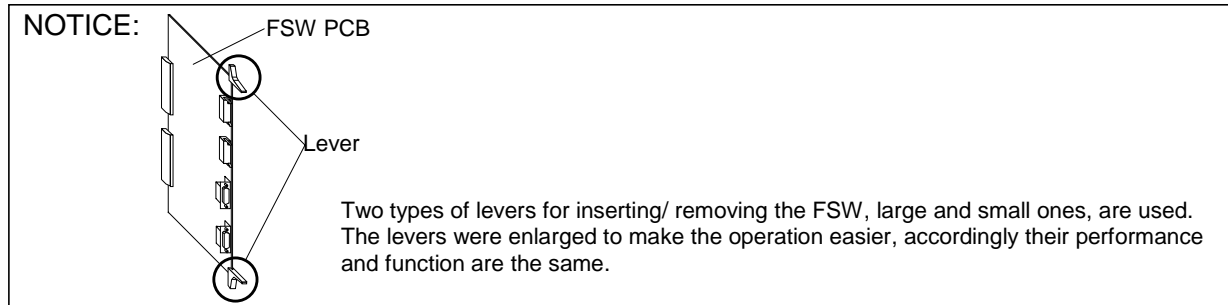

- Loosen the four screws① and remove the cable covers①.
- Loosen the two screws② and rotate the stoppers.
- Remove the FSW PCBs.
- Attach the cable covers① stored the cable covers② and fasten the four screws①.

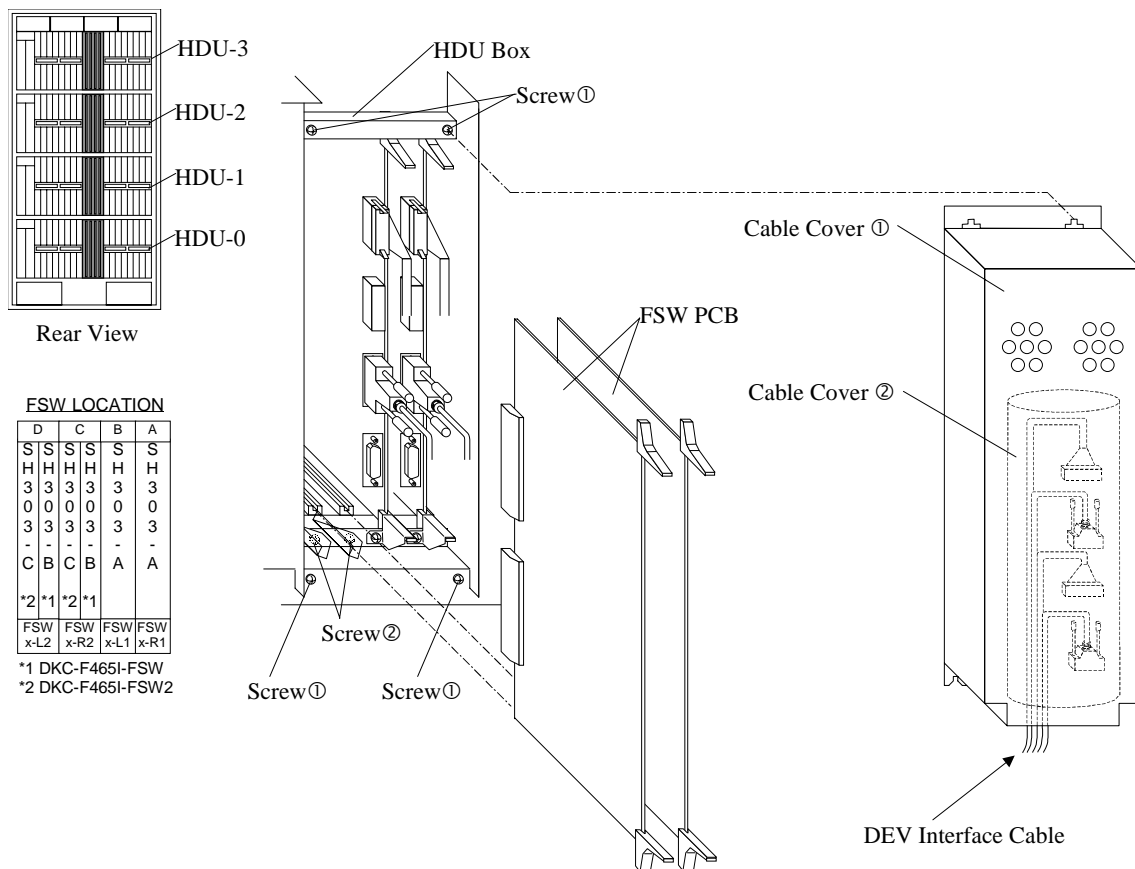


Fig. 4.1.3-6 Removal of FSW PCBs

4-2 Removal of the nameplate.

- a. Remove the nameplate from front Logic Box cover.


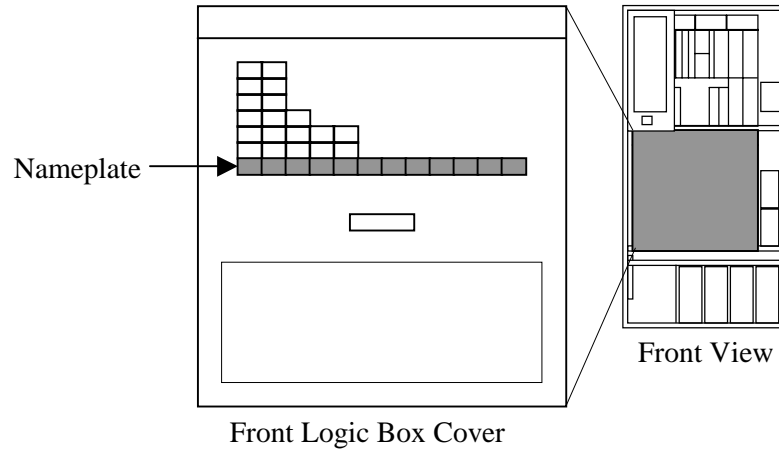


Fig. 4.1.3-7 Removal of Nameplate

5. SVP post procedure


1.

Select (CL) [OK] in response to “If de-installation of the DKA, the physical devices or the redundant power supply has been completed, press OK.” shown in the right figure.

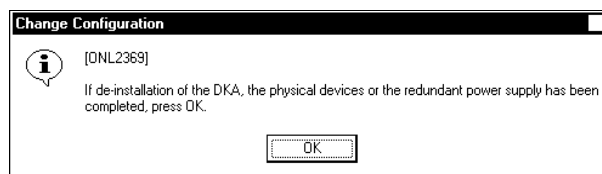


2. <Check the end of de-installation procedure>

“Renewal process has completed. Please check subsystem status.” shown in the right figure displayed. Select (CL) [OK] in response to this message.

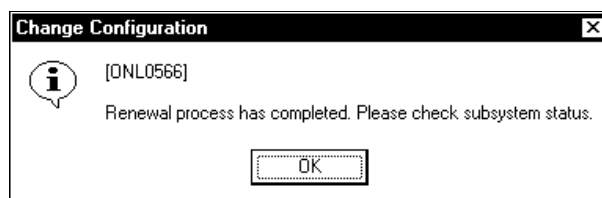


3.

“Reading subsystem configuration data...” is displayed.
 “Please insert the Config FD in the FDD.” is displayed.
 Insert the configuration FD into FDD, select (CL) [OK].

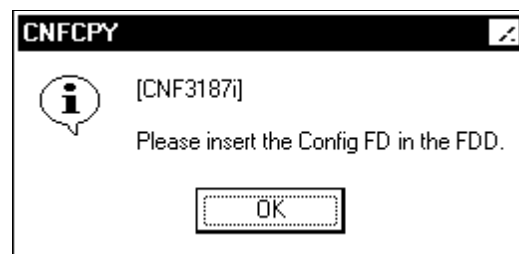


4.

When this procedure is completed, message “Please remove the Config FD.” is displayed.
 Remove the FD, select (CL) [OK].

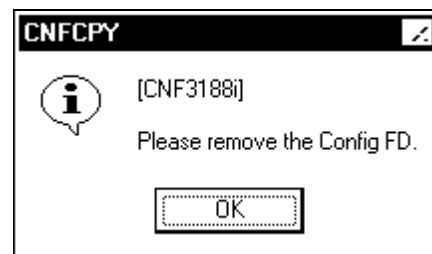

5. After the procedure is completed, return to 'Install'.
Select (CL) [File]-[Exit].

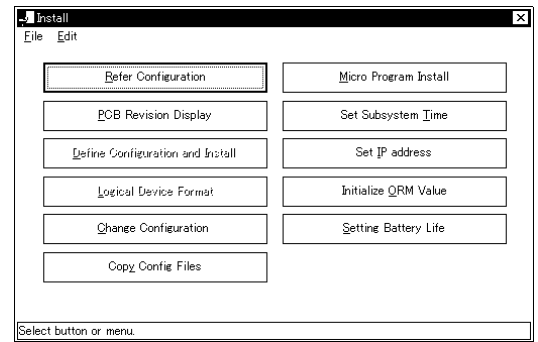


6. <Mode Change>
Change the mode to View Mode.

4.1.4 When HDD Canister, DKA and FSW are to be de-installed at the same time (DKC-F465I-FSW2, DKC-F460I-200, DKU-F455I-36K4/36K1/72J4/72J1)


1. Setting up the New Device Structure Information

1. <Mode Change>
Change the mode to Modify Mode.
Select (CL) [Install].


2. <Start the 'Menu Dialog' screen>
Select (CL) [Change Configuration].

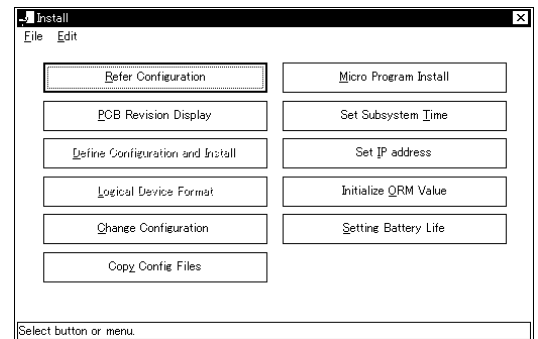

3. <Start Device Structure Setup screen>
Select (CL) [De-Installation] in the 'Menu Dialog' dialog box and select (CL) [OK].

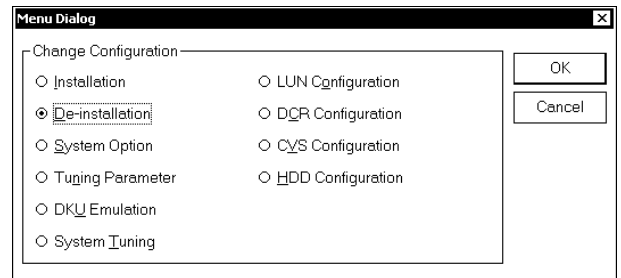


4. <Select a part to be changed>
Select (CL) [DKA + ECC group + LDEV], and select (CL) [OK].

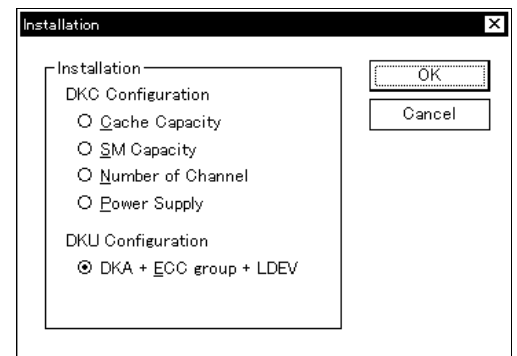


5.

Select (CL) [No] in response to “De-installation of features may cause fatal damage to subsystem. Check that any features be de-installed are not required by host operations. Data will be lost from any ECC group that are removed. Do you want to stop this process?”.

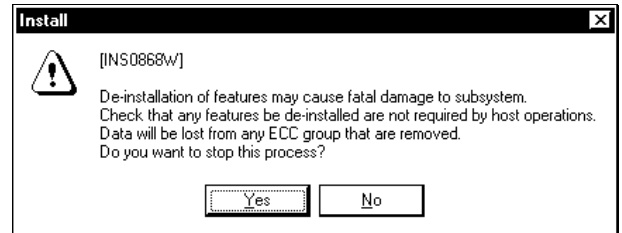

6. <Input password>

Enter the password and select (CL) [OK].

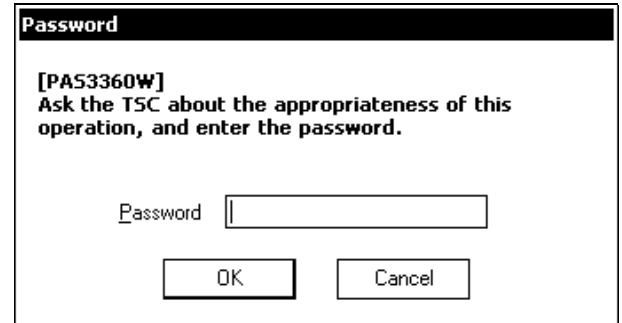**NOTICE**

This is a special (exceptional) operation that can cause a serious failure such as a system down or a data loss if a wrong part to be removed is selected, and requires an input of a password. Ask the technical support center about the appropriateness of the operation, and input the password after getting an approval of executing the operation.

7. <Update Configuration Information>


Set the item to be de-installed for DKC and DKA in the ‘DKC Configuration’ window.

When decreasing the CUs, change the “Number of CUs”.

When decreasing the DKAs, change the “Number of DKA”.

Note: A part other than the CU and DKA cannot be removed at the same time.

Make sure that the entered item is correct and select (CL) [>>Next].

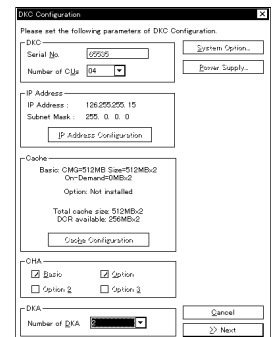

8. Change Drive Configuration Information>

Set drive configuration according to the 'Physical Device Configuration' screen displaying the mounted B4 based on the result of setting of DKU mount pattern.


Detailed procedure is shown below.

[Set...]: Defines the parity group or spare disk. The routine proceeds to Step 8-1.

[Clear...]: Cancels the setting of the B4.

After setting up all items, select (CL) [>>Next].

Selecting (CL) [Before<<] returns you to the previous screen.

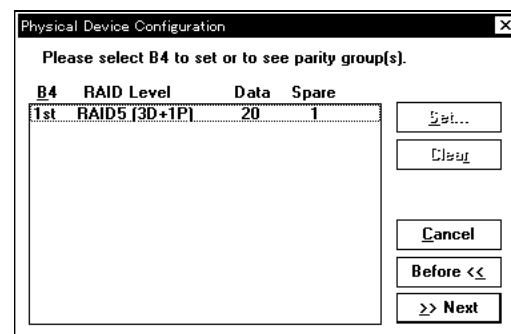

[For the case of the multi cabinet model]

B4	Location	B4	Location
1st	HDU-R10, 11, 12, 13	7th	HDU-L20, 21, 22, 23
2nd	HDU-R14, 15, 16, 17	8th	HDU-L24, 25, 26, 27
3rd	HDU-L10, 11, 12, 13	9th	HDU-R30, 31, 32, 33
4th	HDU-L14, 15, 16, 17	10th	HDU-R34, 35, 36, 37
5th	HDU-R20, 21, 22, 23	11th	HDU-L30, 31, 32, 33
6th	HDU-R24, 25, 26, 27	12th	HDU-L34, 35, 36, 37

Note: The 9th to 12th of the B4 are valid only when the DKUs for the RAID 400 are connected.


[For the case of the single cabinet model]

B4	Location	Remarks
1st	HDU-R0, 1, 2, 3	HDD-X00 ~ X0F
2nd	HDU-R0, 1, 2, 3	HDD-X10 ~ X1F

8-1. <Define Parity Group>

Select (CL) the group to be de-installed and select (CL) [Delete] in the 'Parity Group Configuration' dialog box.

After setting, select (CL) [OK]. Return to step 8.

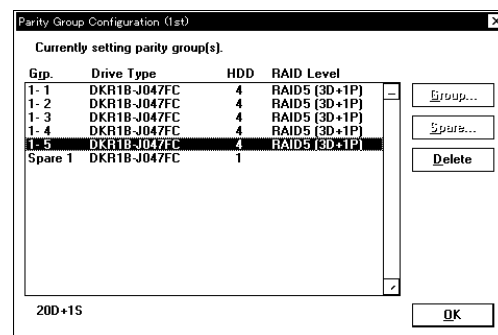


2. SVP pre procedure

1. <Start de-installation>

Select (CL) [Yes] in response to “Are you sure you want to renew subsystem?”.


When [No] is selected (CL), returns to [INST04-DKA-300](#) step 2.

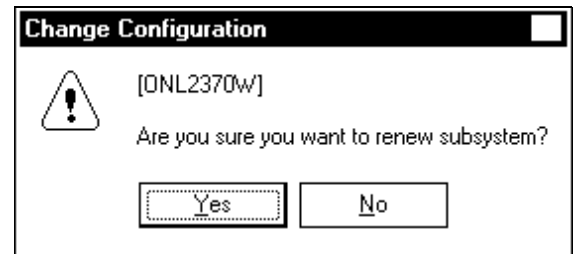

2.

At this point refrain from pressing the [OK] button.

“If de-installation of the DKA, the physical devices or the redundant power supply has been completed, press OK.” shown in the right figure.

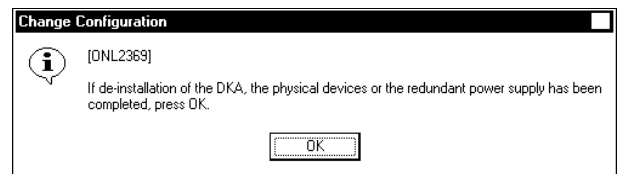

3. De-Installation Procedure of HDD Canister

3-1 Confirmation of position to de-install HDD canister

a. Confirm a position to de-install HDD canister.

No.	Model Number	Model Name	Data and Parity
1	DKU-F455I-36K4/72J4	4 HDD Canisters	Data and Parity Drive

(1) Full-spec Model (2 DKA Pairs Model)

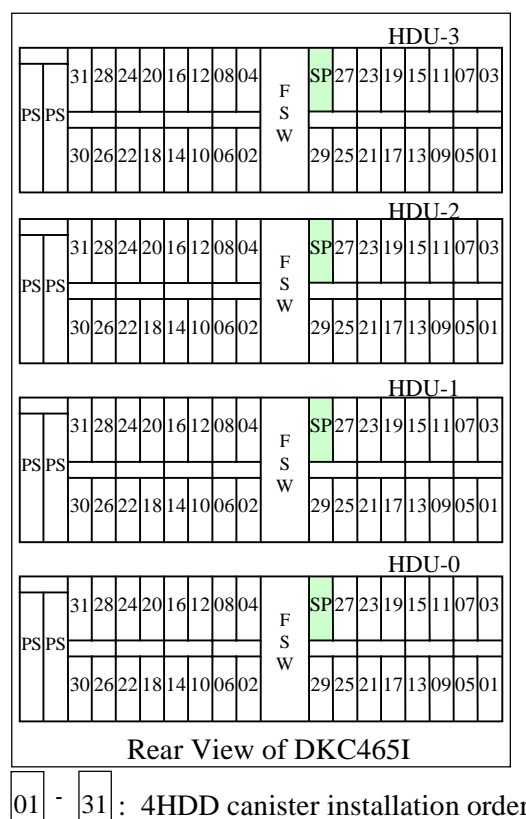


Fig. 4.1.4-1 Data Drive/Parity Drive Expansion Sequence


The relationship between HDDs installation order and RAID group number is shown in the following table.

Table 4.1.4-1 Relation between HDDs installation order and RAID group number (2 DKA Pairs Model)

Group No.	Installation Order	Group No.	Installation Order	Group No.	Installation Order	Group No.	Installation Order
1-1	001	1-2	003	1-3	005	1-4	007
1-5	009	1-6	011	1-7	013	1-8	015
1-9	017	1-10	019	1-11	021	1-12	023
1-13	025	1-14	027	1-15	029	1-16	SP
2-1	002	2-2	004	2-3	006	2-4	008
2-5	010	2-6	012	2-7	014	2-8	016
2-9	018	2-10	020	2-11	022	2-12	024
2-13	026	2-14	028	2-15	030	2-16	031

No.	Model Number	Model Name	Data and Parity
1	DKU-F455I-36K1/72J1	1 HDD Canister	Spare Drive

Full-spec Model (2DKA Pairs Model)

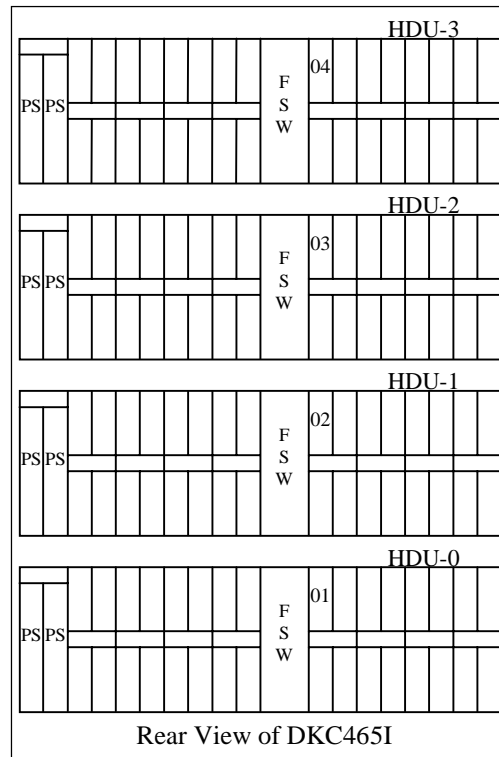

01 - 04 : Spare HDD canister installation order

Fig. 4.1.4-2 Spare Drive Expansion Sequence

Blank Sheet

3-2 Confirmation of Shut Down LED.

- a. Confirm the Shut Down LED on the JMP PCB. (It should be RED.)

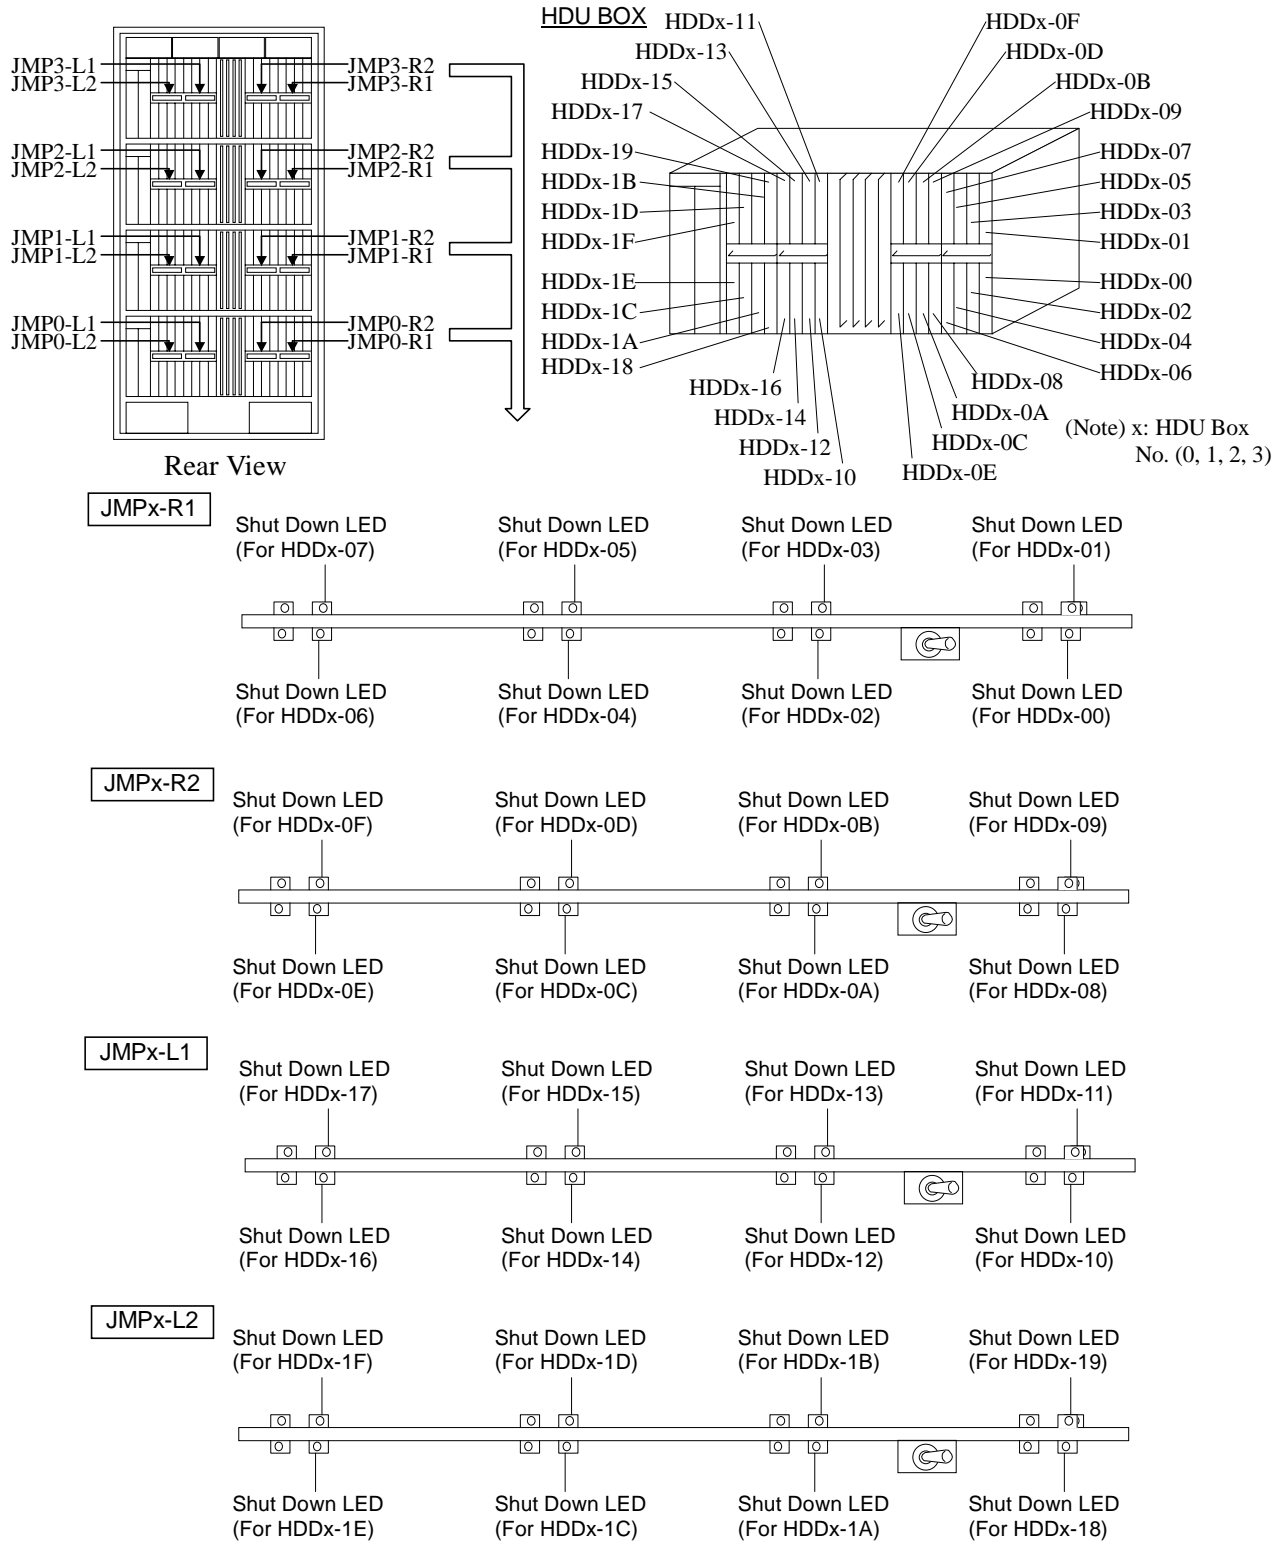


Fig. 4.1.4-3 Location of Shut Down LED

3-3 De-installation of the HDD canister.



CAUTION

A system down may be caused by a removal of an HDD canister other than that to be removed. Make sure that it is the HDD canister to be removed.

- a. After pushing up the stopper on the front side of the HDD canister, pull the handle toward you to remove the HDD canister.
- b. Insert the dummy canister to the HDU Box.


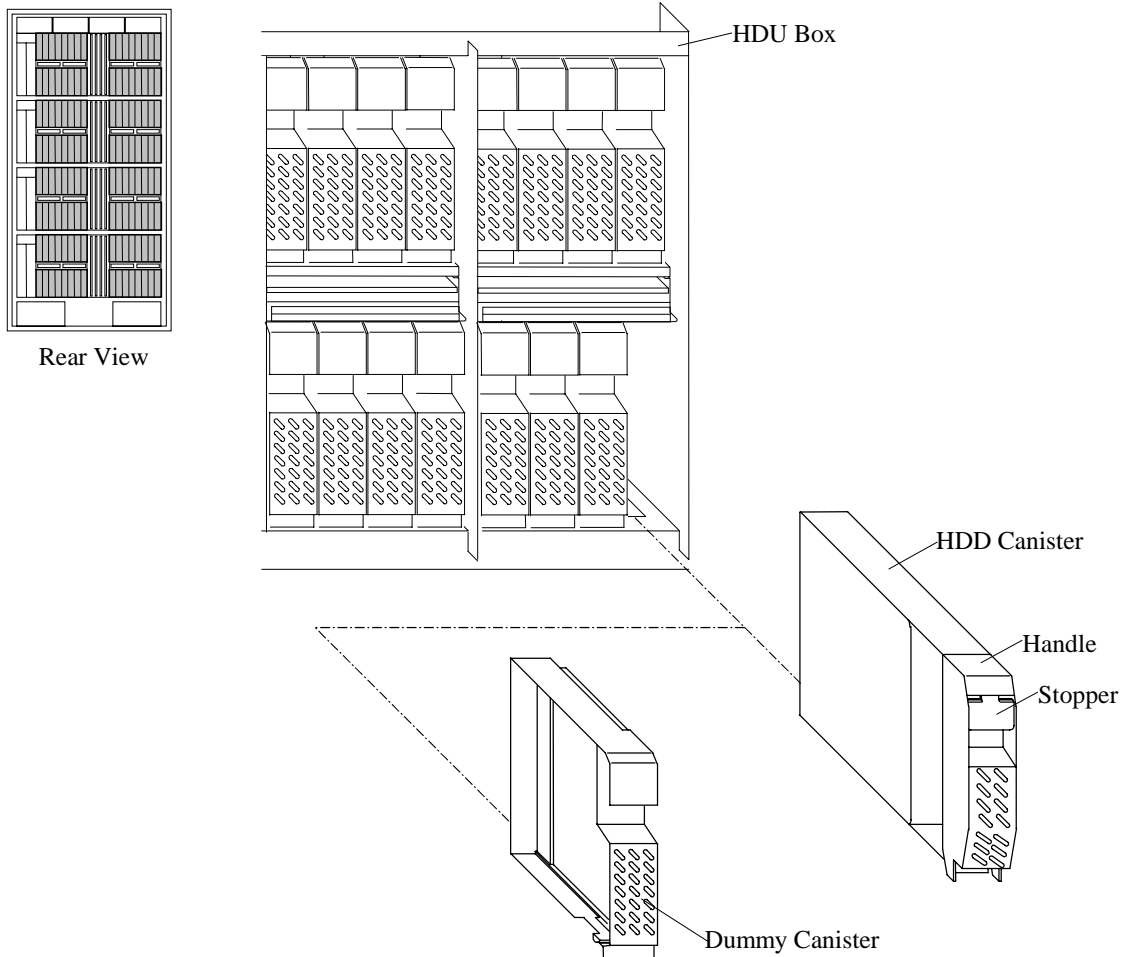


Fig. 4.1.4-4 De-Installation of HDD Canister

3-4 Removal of the Nameplate.

- a. Wipe off the unnecessary numbers on the corresponding nameplate.

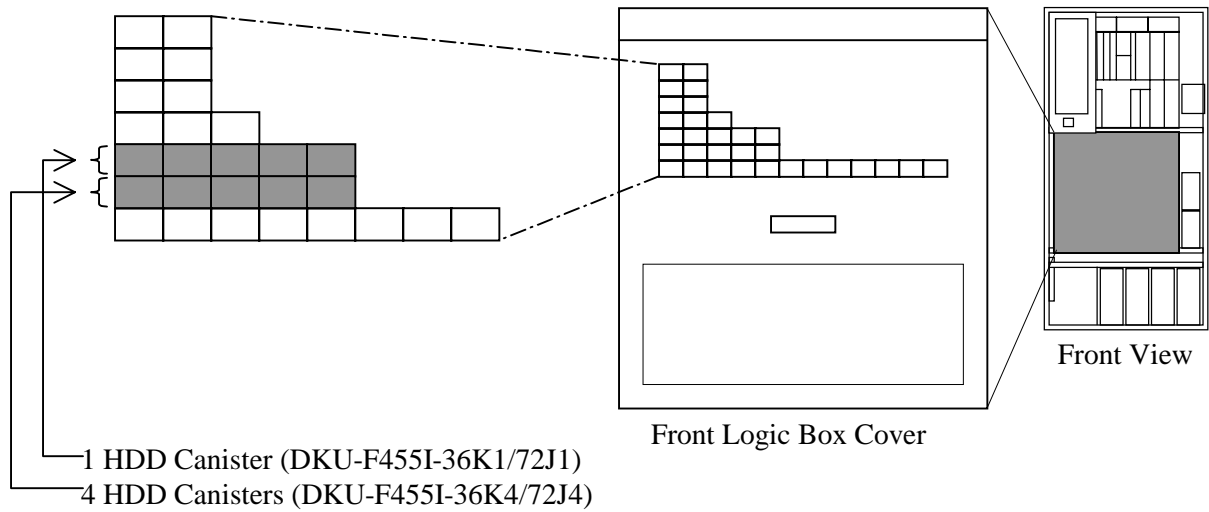

[Example]

When the 7 DKU-F455I-72J4 sets are installed


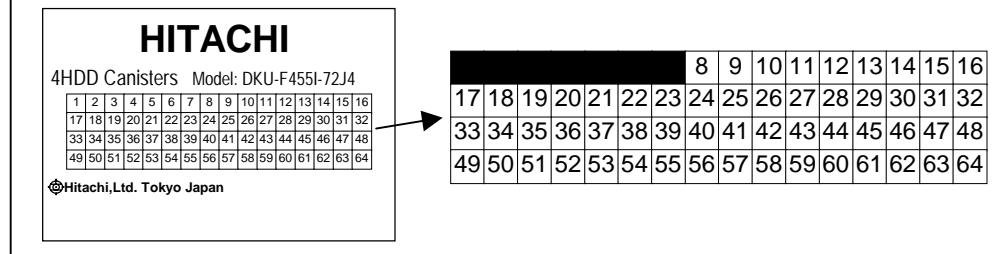


Fig. 4.1.4-5 Removal of Nameplate

4. De-Installation Procedure of Disk Path Expansion Kit

Note: Be sure to wear your wrist strap and attach to ground prior to performing the following work. This will ensure that the IC and LSI on the PCB are protected from static electricity.

4-1 Remove the PCBs.

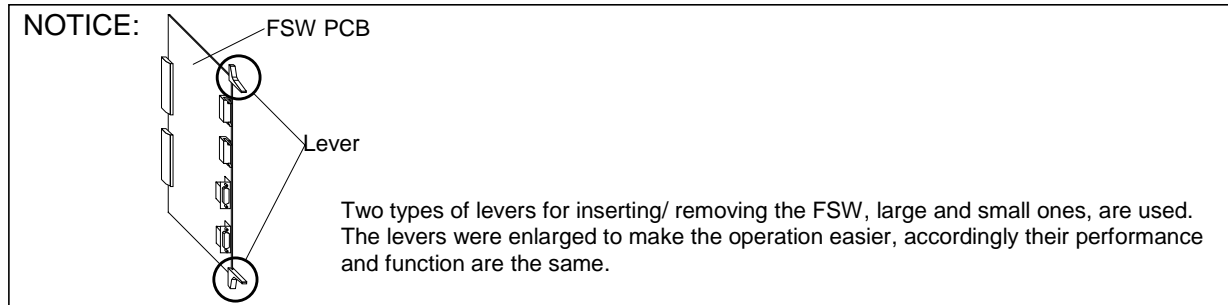

- Loosen the four screws① and remove the cable covers①.
- Disconnect the cables from FSW PCBs and insert the cables to the cable covers②.
- Loosen the two screws② and rotate the stoppers.
- Remove the FSW PCBs.
- Attach the cable covers① stored the cable covers② and fasten the four screws①.

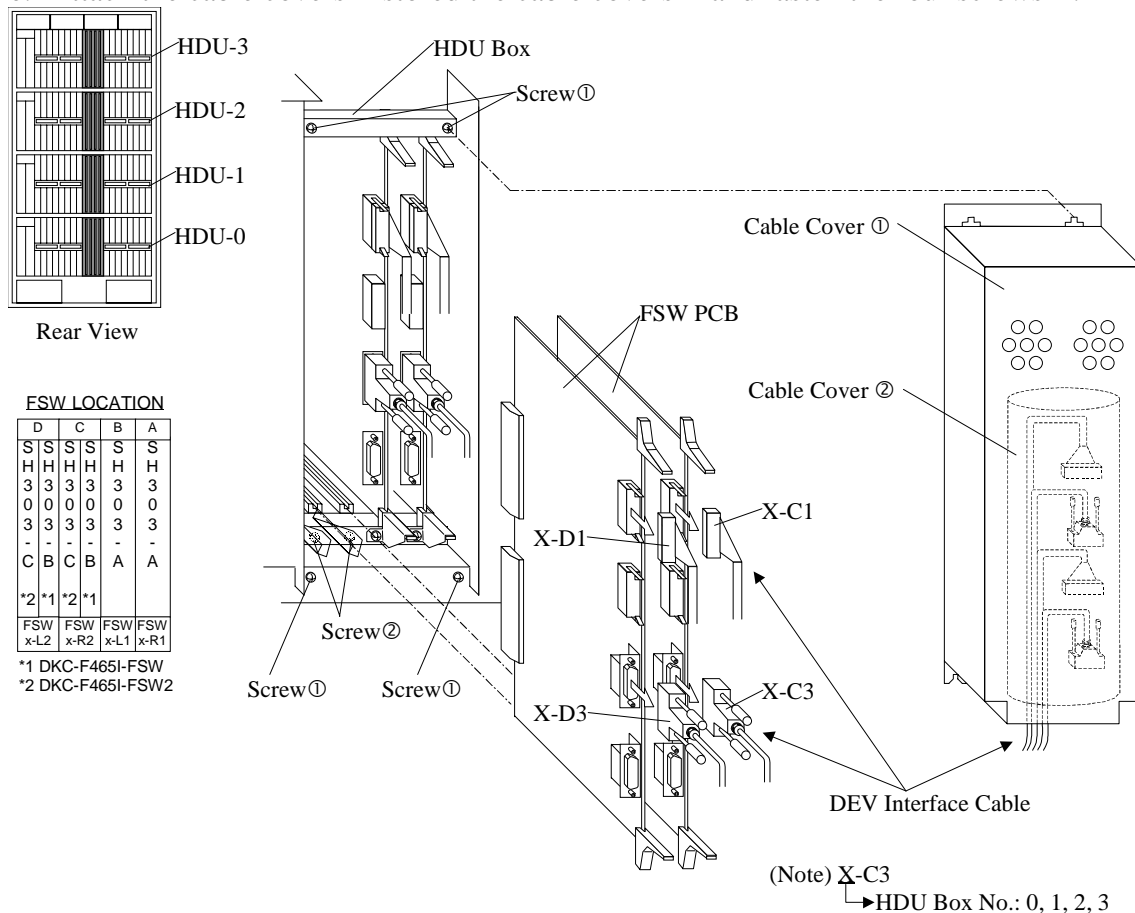


Fig. 4.1.4-6 Removal of FSW PCBs

4-2 Removal of the nameplate.

- a. Remove the nameplate from front Logic Box cover.

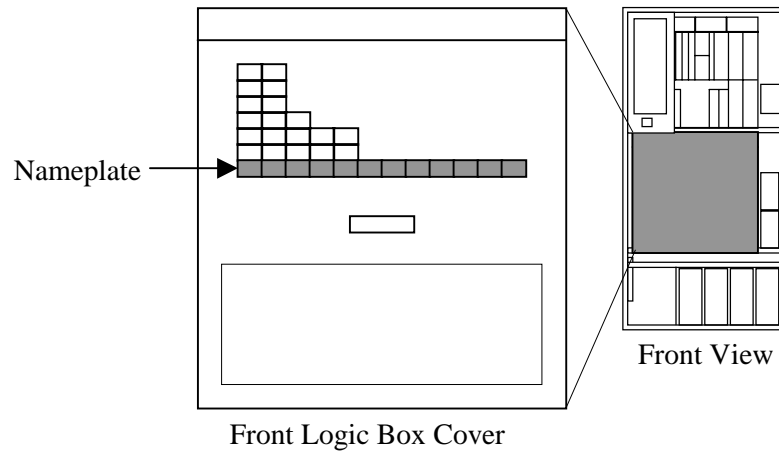


Fig. 4.1.4-7 Removal of Nameplate

5. De-Installation Procedure of Disk Adapter

Note: Be sure to wear your wrist strap and attach to ground prior to performing the following work. This will ensure that the IC and LSI on the PCB are protected from static electricity.

5-1 Confirmation of the Shut Down LED (Only Non-Disruptive Procedure)

- a. Confirm that Shut Down LED is on. (Fig. 4.1.4-8) If the LED is not on, connect the Maintenance Jumper to the Shut Down Connector.

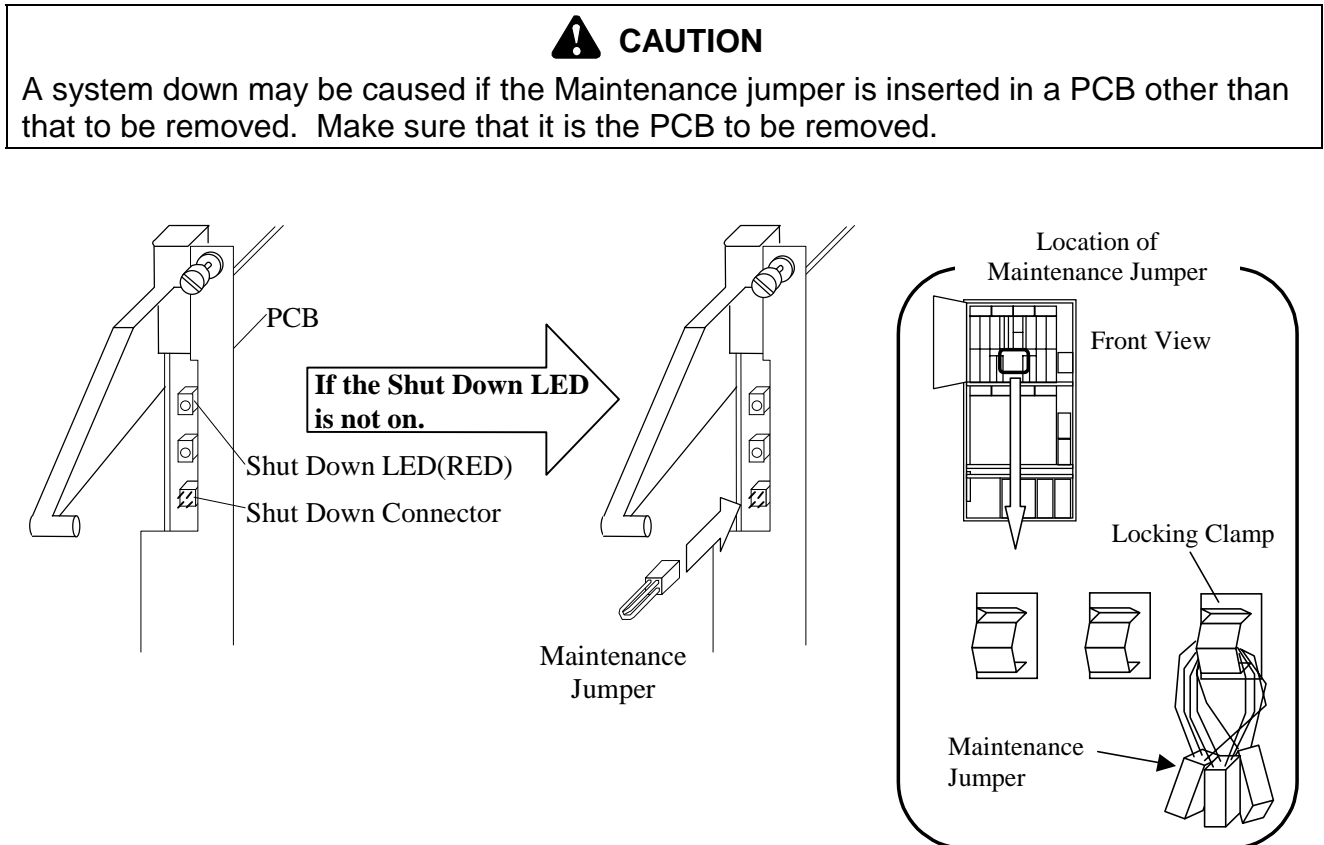


Fig. 4.1.4-8 Shut Down LED

Table 4.1.4-2 Removal Location (Front of the unit)

Cluster	CL1							CL2						
Slot No.	A	B	C	D	E	F	G	H	J	K	L	M		
Function	CSW	DKA	CHA	CHA	CACHE	CHA	DKA	CHA	CACHE	CHA	CHA	DKA	DKA	CSW
Location No.	CSW -1A	DKA -1B	CHA -1C	CHA -1D	CACHE -1E	CHA -1F	DKA -1F	CHA -2G	CACHE -2H	CHA -2J	CHA -2K	DKA -2K	DKA -2L	CSW -2M
Order of addition		Basic	Basic	Add.1		Add.2	Add.1	Basic		Add.1	Add.2	Add.1	Basic	

5-2 Disconnection of the DEV Interface cables

In case of Add.1

- a. Loosen the six screws and remove the cover(H/S-PS).

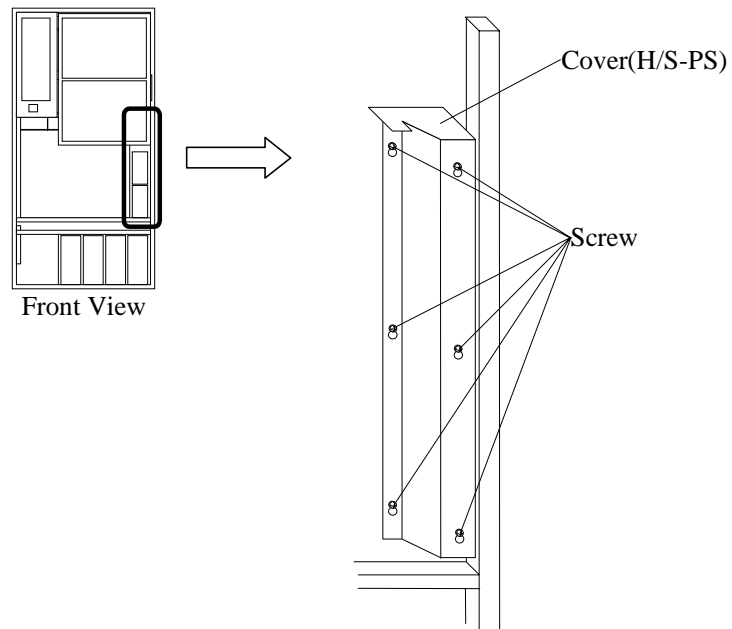


Fig. 4.1.4-9 Removal of Cover (Add.1)

- b. Remove the two screws ① and remove the cover ①.
- c. Loosen the two screws ② and remove the cover ②.
- d. Remove the three screws ③ and remove the cover ③.
- e. Remove the four screws ④ and remove the cover ④.
- f. Disconnect the cables from the PCB and store the cables under the cover ④.
- g. Attach the covers ④ through ① with the screws.

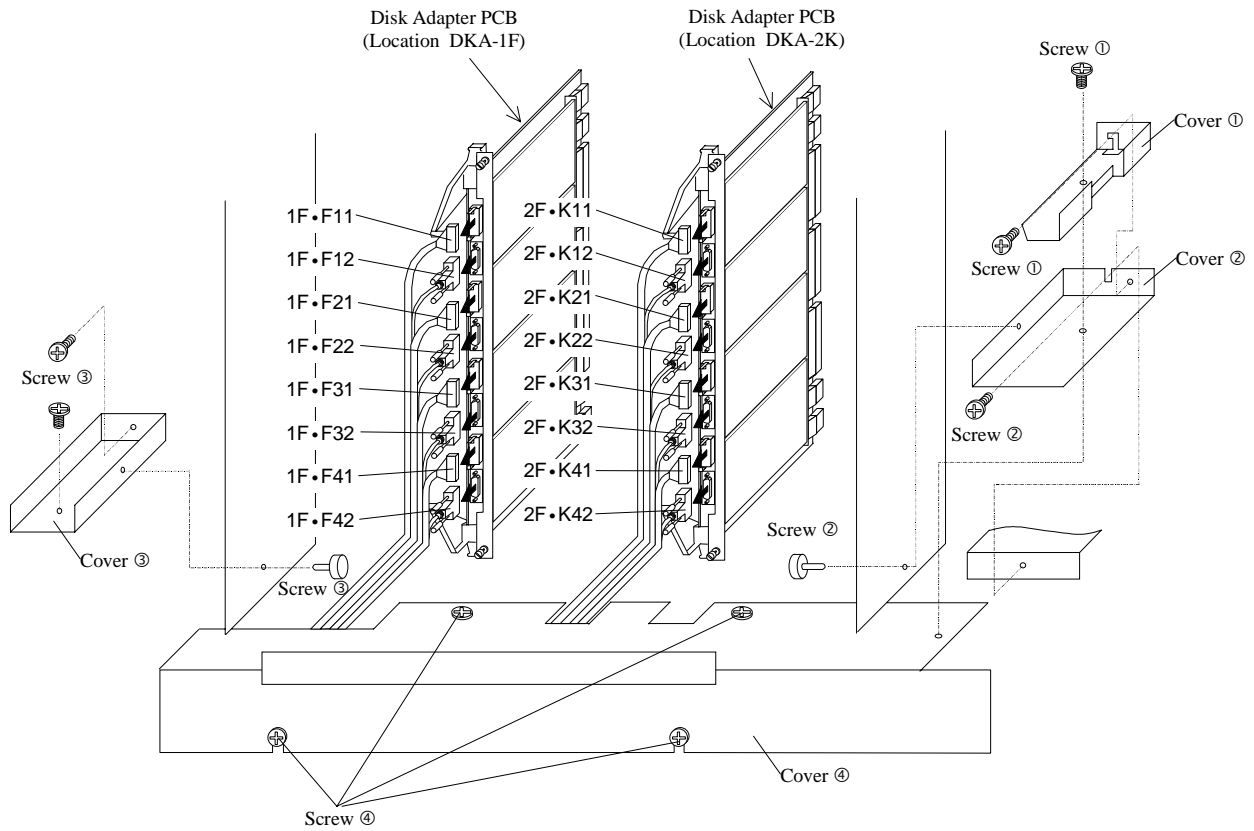


Fig.4.1.4-10 Connection of DEV Interface Cables (Add.1)

5-3 Removal of the PCBs

- a. Remove the two screws and remove the PCBs from the correct locations in the Front Logic Box referring to Fig. 4.1.4-11.
- b. Attach the dummy plates referring to Fig. 4.1.4-12.

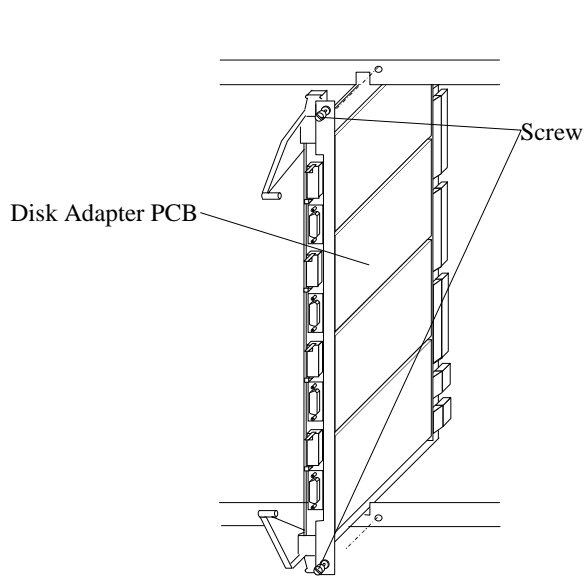


Fig. 4.1.4-11 Removal of PCB

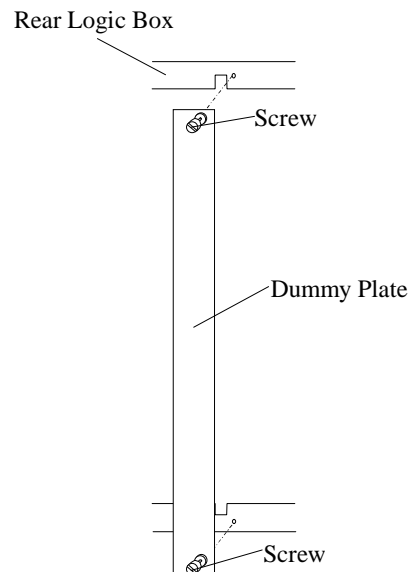


Fig. 4.1.4-12 Attachment of Dummy Plate

5-4 Removal of the Nameplate

- a. Remove the nameplate from the Front Logic Box cover.


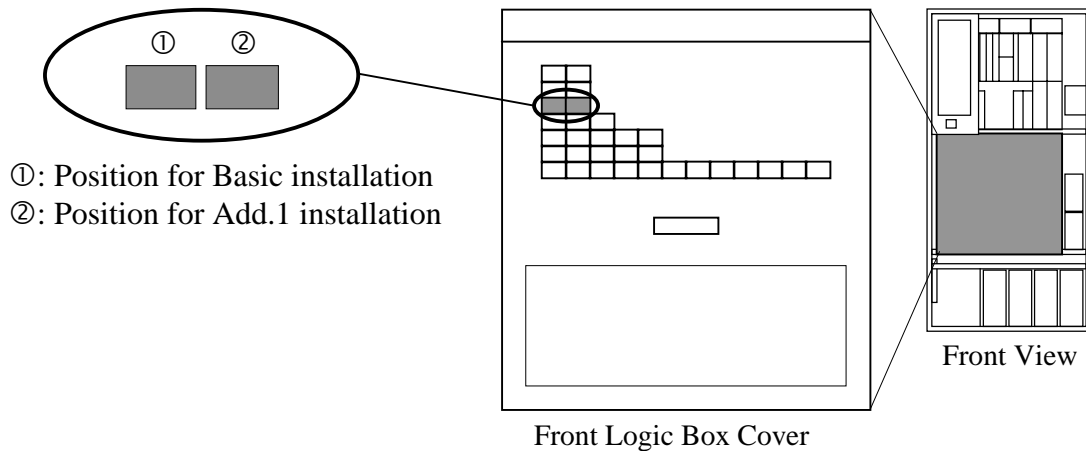


Fig. 4.1.4-13 Removal of Nameplate

6. SVP post procedure

1.

Select (CL) [OK] in response to “If de-installation of the DKA, the physical devices or the redundant power supply has been completed, press OK.” shown in the right figure.

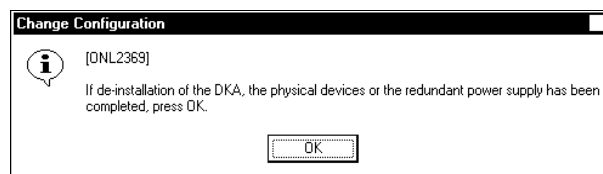


2. <Check the end of de-installation procedure>

“Renewal process has completed. Please check subsystem status.” shown in the right figure displayed. Select (CL) [OK] in response to this message.




3.

“Reading subsystem configuration data...” is displayed.
 “Please insert the Config FD in the FDD.” is displayed.
 Insert the configuration FD into FDD, select (CL) [OK].

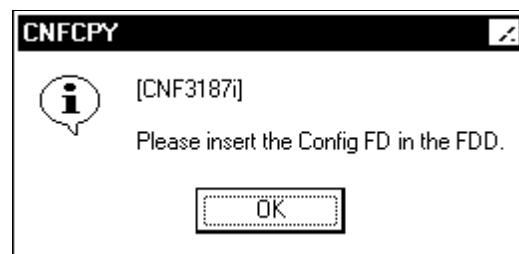


4.

When this procedure is completed, message “Please remove the Config FD.” is displayed.
 Remove the FD, select (CL) [OK].

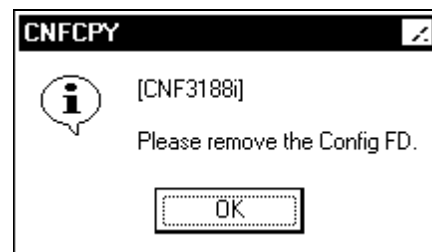

5. After the procedure is completed, return to 'Install'.
Select (CL) [File]-[Exit].

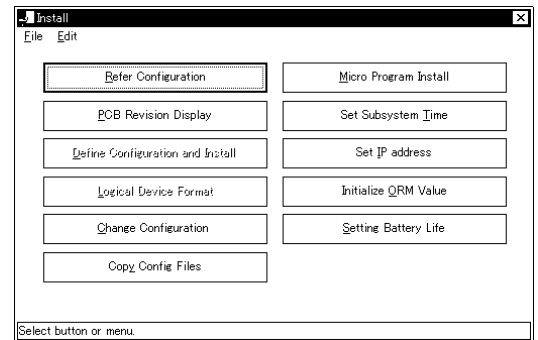

6. <Mode Change>
Change the mode to View Mode.

4.2 De-Installation of Shared Memory and Cache Memory

4.2.1 De-Installation of Additional Shared Memory (DKC-F460I-S512)


Table 4.2.1-1 Parts List

No.	Model Number	Part Name	Part No.	Quantity	Remarks
1	DKC-F460I-S512	SH287-B	5513978-B	2	Shared Memory Module (256MB)


1. Setting up the New Device Structure Information

1. <Mode Change>
Change the mode to Modify Mode.
Select (CL) [Install].


2. <Start the 'Menu Dialog' screen>
Select (CL) [Change Configuration].

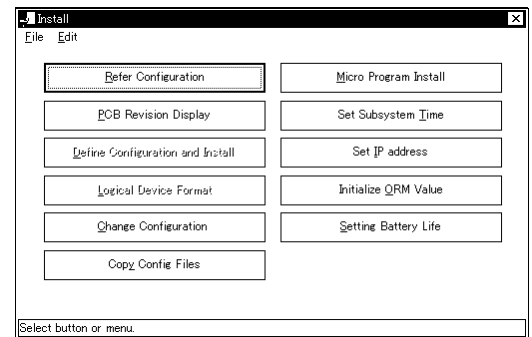

3. <Start Device Structure Setup screen>
Select (CL) [De-Installation] in the 'Menu Dialog' dialog box and select (CL) [OK].

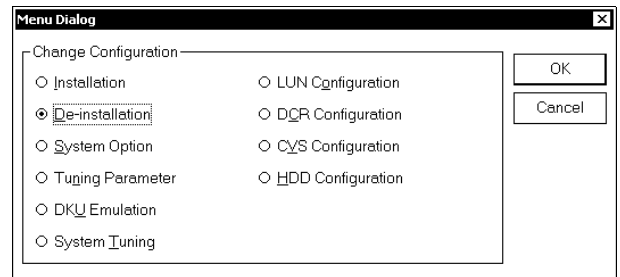


4. <Select a part to be changed>
Select (CL) [SM Capacity], and select (CL) [OK].

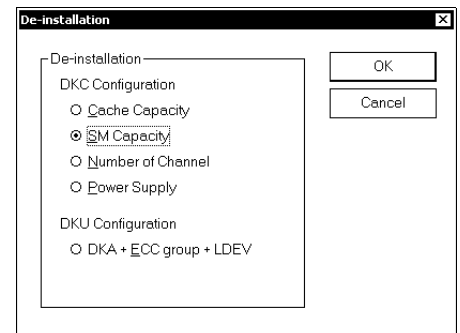


5.

Select (CL) [No] in response to “De-installation of features may cause fatal damage to subsystem. Check that any features be de-installed are not required by host operations. Data will be lost from any ECC group that are removed. Do you want to stop this process?”.

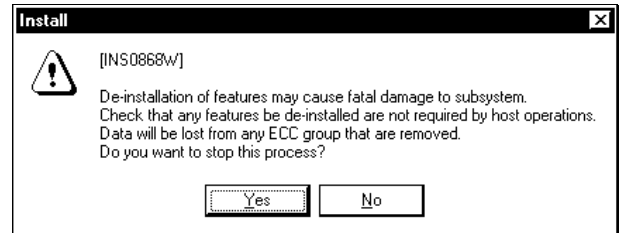

6. <Input password>

Enter the password and select (CL) [OK].

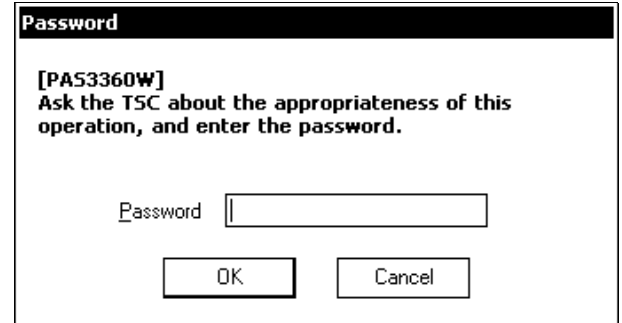**NOTICE**


This is a special (exceptional) operation that can cause a serious failure such as a system down or a data loss if a wrong part to be removed is selected, and requires an input of a password. Ask the technical support center about the appropriateness of the operation, and input the password after getting an approval of executing the operation.

7. <Define Shared Memory Size>

Define the shared memory size in the ‘Shared Memory Size Configuration’ dialog box.

When you want to reduce the SM for the HMRCF/HOMRCF/HRC/HORC/HIMSM function, remove the check mark that has been put to the “Install HMRCF/HOMRCF/HRC/HOMRCF/HIMSM Function.”. (There may be no change in SM capacity.)

If the installed SM after the reduction conforms to that shown in the “Cache PCB Image”, select (CL) the [>>Next] button.

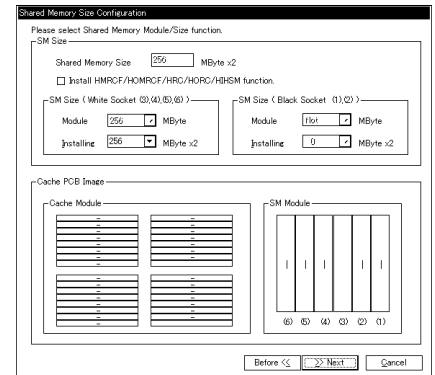


8.

Make sure if the desired configuration is in the valid extent.

In the valid extent : Select (CL) [OK].

Out of the valid extent : Select (CL) [Cancel].

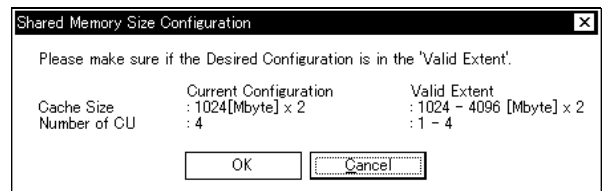


2. SVP pre procedure on the Cluster 1.

1. <Start de-installation>

Select (CL) [Yes] in response to “Are you sure you want to renew subsystem?”.

If there is change in SM capacity, go to INST04-SM-40 step 2.

If there is no change in SM capacity, go to [INST04-SM-160](#) step 3.

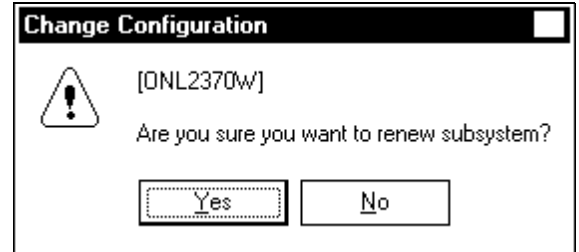

When [No] is selected (CL), returns to [INST04-SM-20](#) step 3.

2. <Memory blocking on one side>

When blocking of cluster 1 of shared memory is completed, “The Shared Memory PCB is being blocked...” is displayed.

3.

“Lighting LED of the PCB...” is displayed.

4. <Perform cache hardware de-installation>


At this point refrain from pressing the [OK] button.

When “Replace or pull out the Memory PCB(s) of cluster-1.

When completed, please press OK.” is displayed, perform the hardware de-installation steps according to the cache hardware de-installation procedure.

Make sure of the installation location of the module to be removed and remove the correct module.

(Uninstalled module is displayed as looks depressed; the PCB to be removed is displayed in gray.)

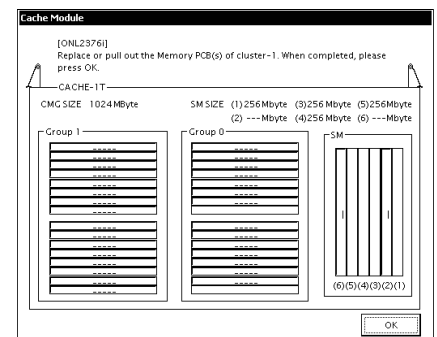

3. Remove the Shared Memory on the Cluster 1.

Be sure to wear your wrist strap and attach to ground prior to performing the following work. This will ensure that the IC and LSI on the PCB are protected from static electricity.

3-1. Remove the PCB.

- a. While referring to Fig. 4.2.1-1 and Table 4.2.1-2, check the Shut Down LED on the Cache Memory PCB in the Front Logic Box. Connect the Maintenance Jumper to the Shut Down Connector if the Shut Down LED is not on.

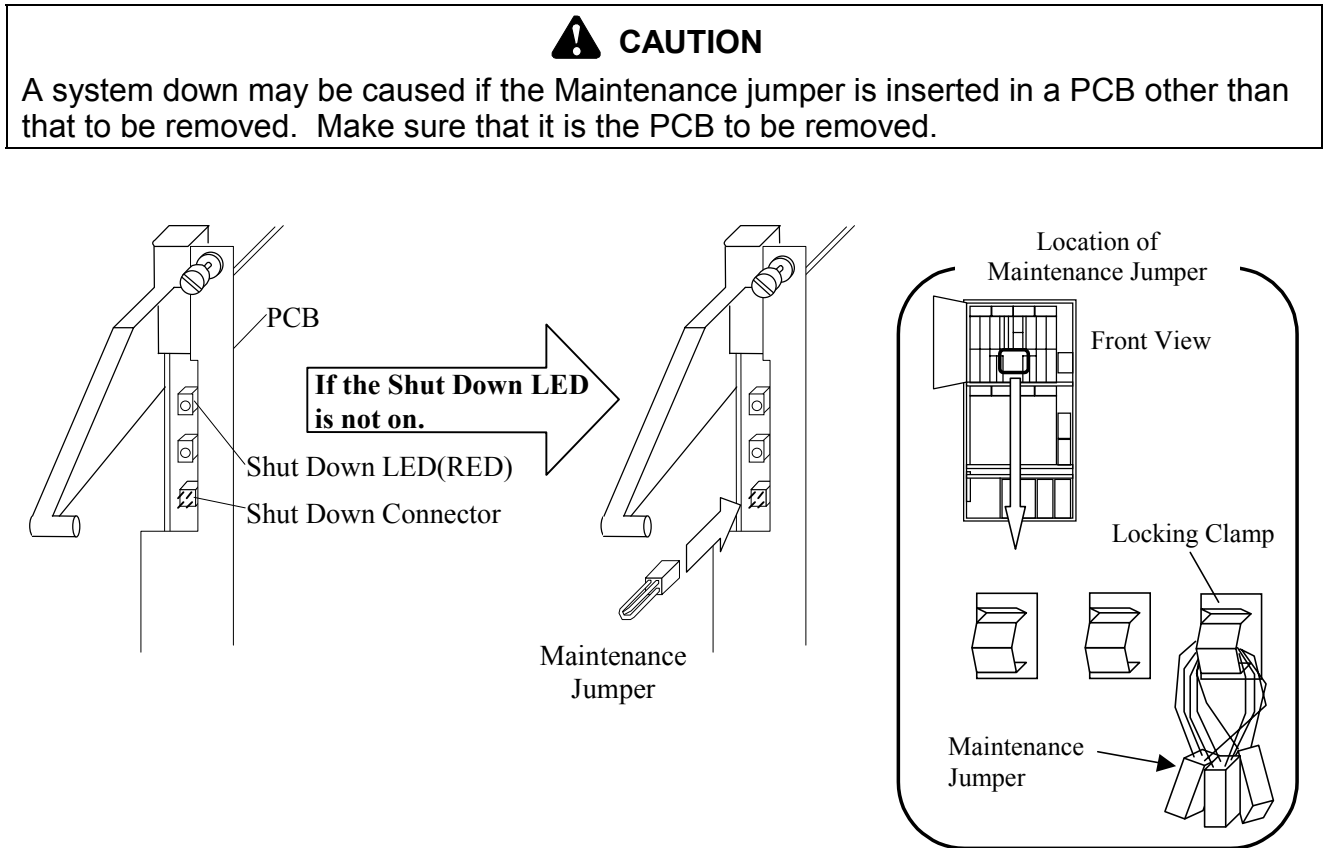


Fig. 4.2.1-1 Location of the Shut Down LED

Table 4.2.1-2 Location of the Cache PCB

Cluster	PCB Name	Box	Slot No.	Location No.	Remarks
1	WP490-A	Front Logic Box	E	CACHE-1E	Cache Memory PCB

- b. Remove the two screws and remove the Cache Memory PCB. Refer to Fig. 4.2.1-2 and Table 4.2.1-2.

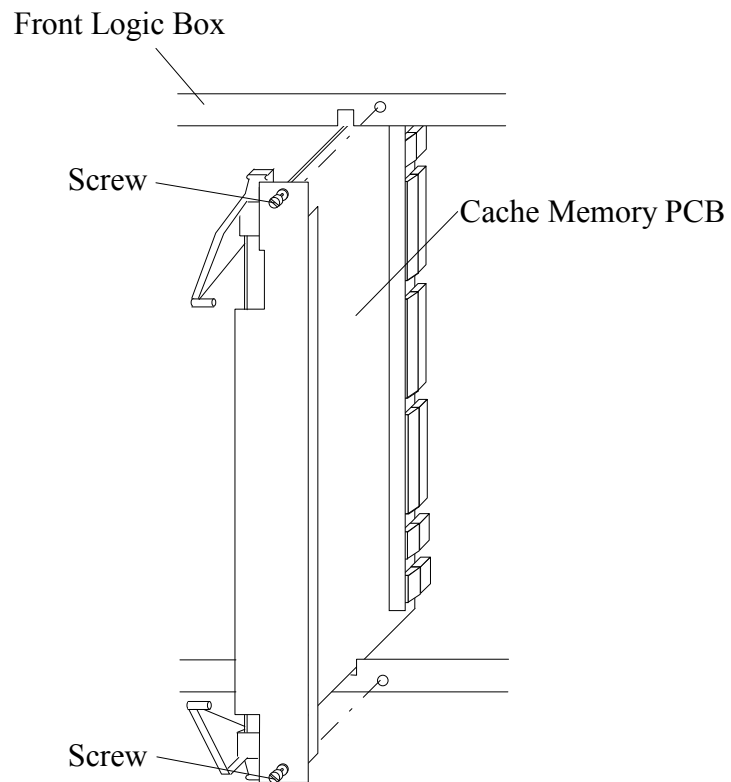


Fig. 4.2.1-2 Removal of the Cache Memory PCB

- c. Remove the Maintenance Jumper if it is mounted.

3-2. Remove the Shared Memory Modules.

Notice

The required capacity of the shared memory varies depending on whether the HRC/HORC/HMRCF/HOMRCF/HHSM function is supported or not.

Calculate the required shared memory capacity referring to Table 4.2.1-3 when none of the functions is supported (in the case of basic configuration) or Table 4.2.1-4 when at least one of the functions is supported.

- Remove the extra Shared Memory Modules according to the required Shared Memory capacity referring to Fig. 4.2.1-3, Table 4.2.1-3 and Table 4.2.1-4.
- Insert the dust covers into the vacant sockets.

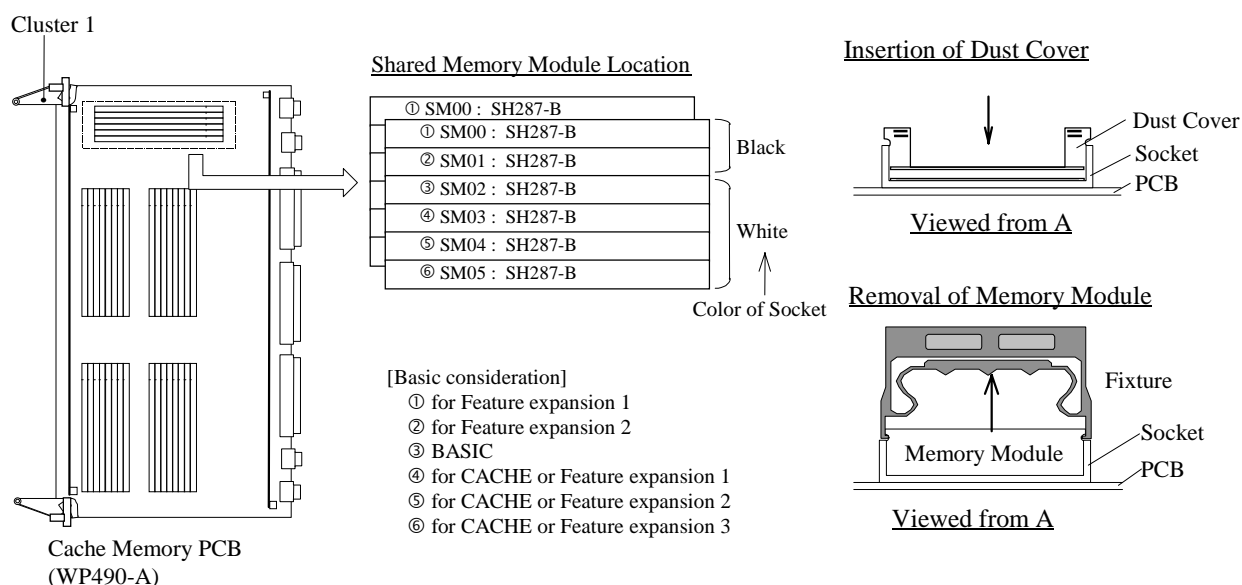


Fig. 4.2.1-3 Inserting Location of the Shared Memory Module

Table 4.2.1-3 Number of SMs and Corresponding Shared Memory Capacity (BASIC)

Cache Memory Capacity (GB)	Number of CU:1-4 (to 1024LDEV)			Number of CU:5-8 (to 2048LDEV)			Number of CU:9-16 (to 4096LDEV)			Number of CU:17-32 (to 8192LDEV)		
	SM (MB)	S512	Install loc. *1	SM (MB)	S512	Install loc. *1	SM (MB)	S512	Install loc. *1	SM (MB)	S512	Install loc. *1
2	512	1	③	1536	3	③①④	1536	3	③①④	2048	4	③①②④
4	512	1	③	1536	3	③①④	1536	3	③①④	2048	4	③①②④
6	512	1	③	1536	3	③①④	1536	3	③①④	2048	4	③①②④
8	512	1	③	1536	3	③①④	1536	3	③①④	2048	4	③①②④
10	1024	2	③④	1536	3	③①④	1536	3	③①④	2048	4	③①②④
12	1024	2	③④	1536	3	③①④	1536	3	③①④	2048	4	③①②④
14	1024	2	③④	1536	3	③①④	1536	3	③①④	2048	4	③①②④
16	1024	2	③④	1536	3	③①④	1536	3	③①④	2048	4	③①②④
18	1024	2	③④	1536	3	③①④	2048	4	③①④⑤	2560	5	③①②④⑤
20	1024	2	③④	1536	3	③①④	2048	4	③①④⑤	2560	5	③①②④⑤
22	1024	2	③④	1536	3	③①④	2048	4	③①④⑤	2560	5	③①②④⑤
24	1024	2	③④	1536	3	③①④	2048	4	③①④⑤	2560	5	③①②④⑤
26	1024	2	③④	1536	3	③①④	2048	4	③①④⑤	2560	5	③①②④⑤
28	1024	2	③④	1536	3	③①④	2048	4	③①④⑤	2560	5	③①②④⑤
30	1024	2	③④	1536	3	③①④	2048	4	③①④⑤	2560	5	③①②④⑤
32	1024	2	③④	1536	3	③①④	2048	4	③①④⑤	2560	5	③①②④⑤

Note. *1 : Location ① through ⑥ shows actual location of Shared Memory on Cache Memory PCB.

Table 4.2.1-4 Number of SMs and Corresponding Shared Memory Capacity
(HRC/HORC/HMRCF/HOMRCF/HHSM supported)

Cache Memory Capacity (GB)	Number of CU:1-4 (to 1024LDEV)			Number of CU:5-8 (to 2048LDEV)			Number of CU:9-16 (to 4096LDEV)			Number of CU:17-32&TPF (to 8192LDEV)		
	SM (MB)	S512	Install loc. *1	SM (MB)	S512	Install loc. *1	SM (MB)	S512	Install loc. *1	SM (MB)	S512	Install loc. *1
2	1024	2	③④	2048	4	③①④⑤	2048	4	③①④⑤	2560	5	③①②④⑤
4	1024	2	③④	2048	4	③①④⑤	2048	4	③①④⑤	2560	5	③①②④⑤
6	1024	2	③④	2048	4	③①④⑤	2048	4	③①④⑤	2560	5	③①②④⑤
8	1024	2	③④	2048	4	③①④⑤	2048	4	③①④⑤	2560	5	③①②④⑤
10	1536	3	③④⑤	2048	4	③①④⑤	2048	4	③①④⑤	2560	5	③①②④⑤
12	1536	3	③④⑤	2048	4	③①④⑤	2048	4	③①④⑤	2560	5	③①②④⑤
14	1536	3	③④⑤	2048	4	③①④⑤	2048	4	③①④⑤	2560	5	③①②④⑤
16	1536	3	③④⑤	2048	4	③①④⑤	2048	4	③①④⑤	2560	5	③①②④⑤
18	1536	3	③④⑤	2048	4	③①④⑤	2560	5	③①④⑤⑥	3072	6	③①②④⑤⑥
20	1536	3	③④⑤	2048	4	③①④⑤	2560	5	③①④⑤⑥	3072	6	③①②④⑤⑥
22	1536	3	③④⑤	2048	4	③①④⑤	2560	5	③①④⑤⑥	3072	6	③①②④⑤⑥
24	1536	3	③④⑤	2048	4	③①④⑤	2560	5	③①④⑤⑥	3072	6	③①②④⑤⑥
26	1536	3	③④⑤	2048	4	③①④⑤	2560	5	③①④⑤⑥	3072	6	③①②④⑤⑥
28	1536	3	③④⑤	2048	4	③①④⑤	2560	5	③①④⑤⑥	3072	6	③①②④⑤⑥
30	1536	3	③④⑤	2048	4	③①④⑤	2560	5	③①④⑤⑥	3072	6	③①②④⑤⑥
32	1536	3	③④⑤	2048	4	③①④⑤	2560	5	③①④⑤⑥	3072	6	③①②④⑤⑥

Note. *1 : Location ① through ⑥ shows actual location of Shared Memory on Cache Memory PCB.

3-3. Insert the PCB.

- Insert the Cache Memory PCB into the Front Logic Box referring to Table 4.2.1-5.
- Fasten the two screws.

Table 4.2.1-5 Location of the Cache PCB


Cluster	PCB Name	Box	Slot No.	Location No.	Remarks
1	WP490-A	Front Logic Box	E	CACHE-1E	Cache Memory PCB

4. SVP post procedure on the Cluster 1 and pre procedure on the Cluster 2.

1.

After the hardware procedure for one side of cache memory is completed, select (CL) [OK] in response to “Replace or pull out the Memory PCB(s) of cluster-1. When completed, please press OK.”.

“INLINE CUDG is running...” is displayed.

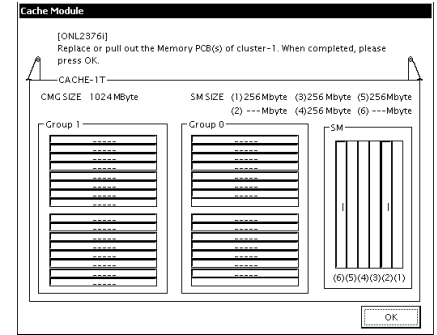

2.

When CUDG is completed, the recovery processing is automatically started with the messages.

“Restoring the Cache Memory PCB...”

“Restoring the Shared Memory PCB...”

3.

When the recovery processing is complete, processing proceeds to blocking of the cluster 2 of shared memory.

4. <Memory blocking on cluster 2>

When blocking of cluster 2 of shared memory is completed, “The Shared Memory PCB is being blocked...” is displayed.

5. “Lighting LED of the PCB...” is displayed.

6. <Perform cache hardware de-installation>


At this point refrain from pressing the [OK] button.

When “Replace or pull out the Memory PCB(s) of cluster-2.

When completed, please press OK.” is displayed, perform the hardware de-installation steps according to the cache hardware de-installation procedure.

Make sure of the installation location of the module to be removed and remove the correct module.

(Uninstalled module is displayed as looks depressed; the PCB to be removed is displayed in gray.)

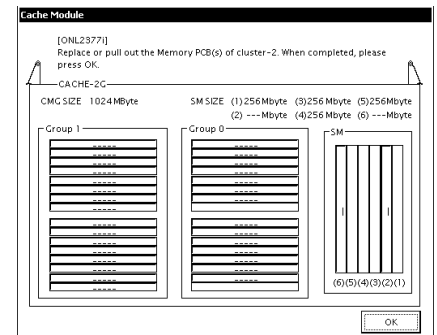

5. Remove the Shared Memory on the Cluster 2.

Be sure to wear your wrist strap and attach to ground prior to performing the following work. This will ensure that the IC and LSI on the PCB are protected from static electricity.

5-1. Remove the PCB.

- a. While referring to Fig. 4.2.1-4 and Table 4.2.1-6, check the Shut Down LED on the Cache Memory PCB in the Front Logic Box. Connect the Maintenance Jumper to the Shut Down Connector if the Shut Down LED is not on.

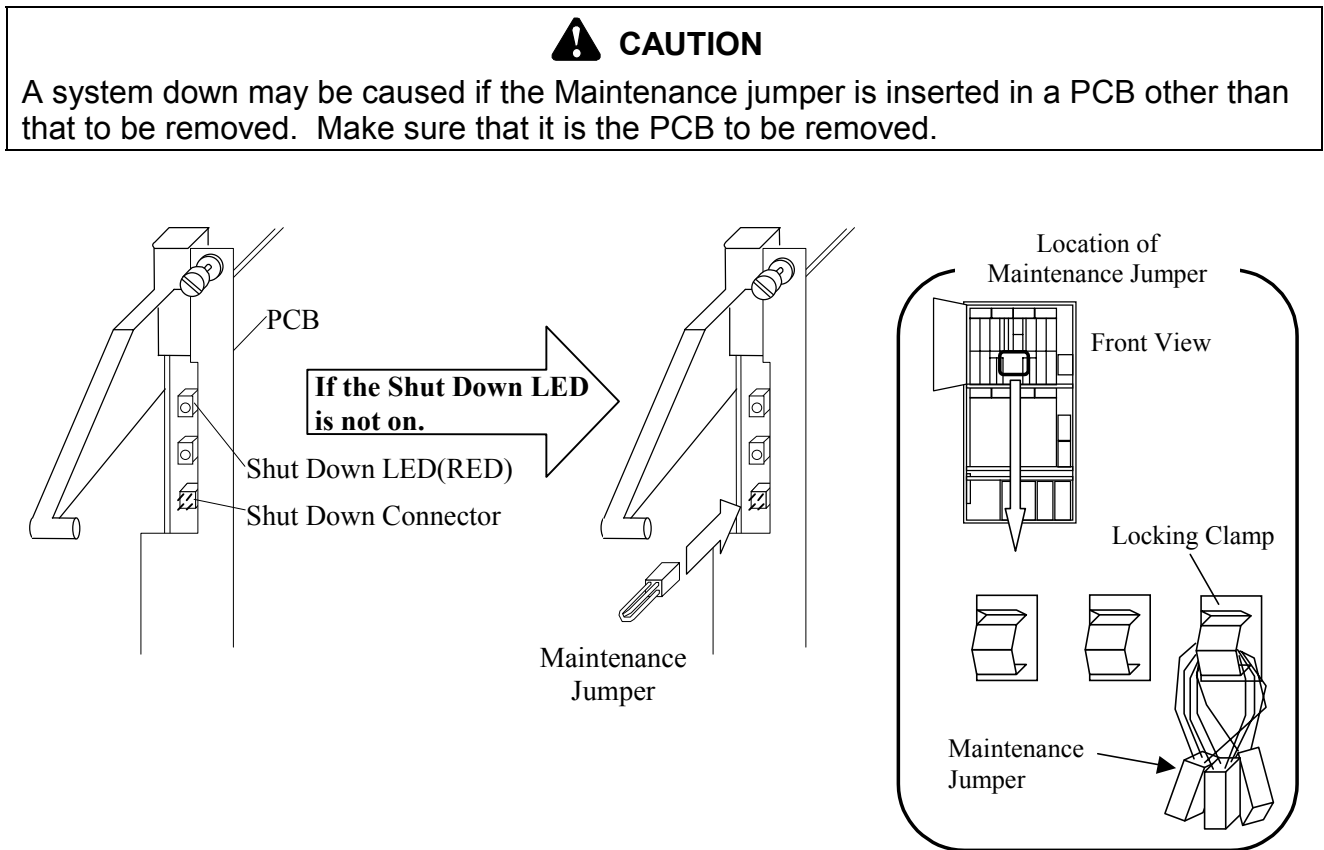


Fig. 4.2.1-4 Location of the Shut Down LED

Table 4.2.1-6 Location of the Cache PCB

Cluster	PCB Name	Box	Slot No.	Location No.	Remarks
2	WP490-A	Front Logic Box	H	CACHE-2H	Cache Memory PCB

- b. Remove the two screws and remove the Cache Memory PCB. Refer to Fig. 4.2.1-5 and Table 4.2.1-6.

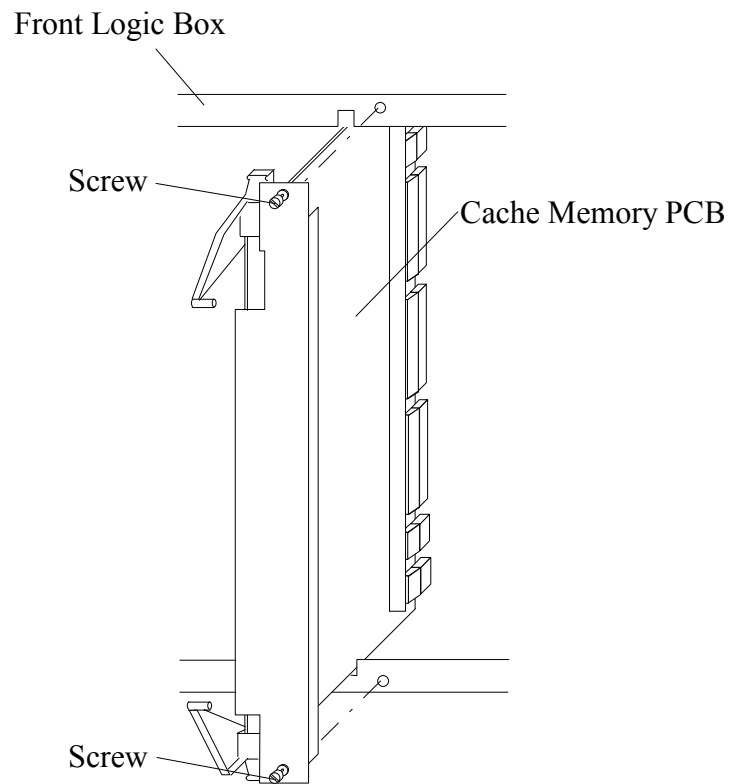


Fig. 4.2.1-5 Removal of the Cache Memory PCB

- c. Remove the Maintenance Jumper if it is mounted.

5-2. Remove the Shared Memory Modules.

Notice

The required capacity of the shared memory varies depending on whether the HRC/HORC/HMRCF/HOMRCF/HHSM function is supported or not.

Calculate the required shared memory capacity referring to Table 4.2.1-7 when none of the functions is supported (in the case of basic configuration) or Table 4.2.1-8 when at least one of the functions is supported.

- Remove the extra Shared Memory Modules according to the required Shared Memory capacity referring to Fig. 4.2.1-6, Table 4.2.1-7 and Table 4.2.1-8.
- Insert the dust covers into the vacant sockets.

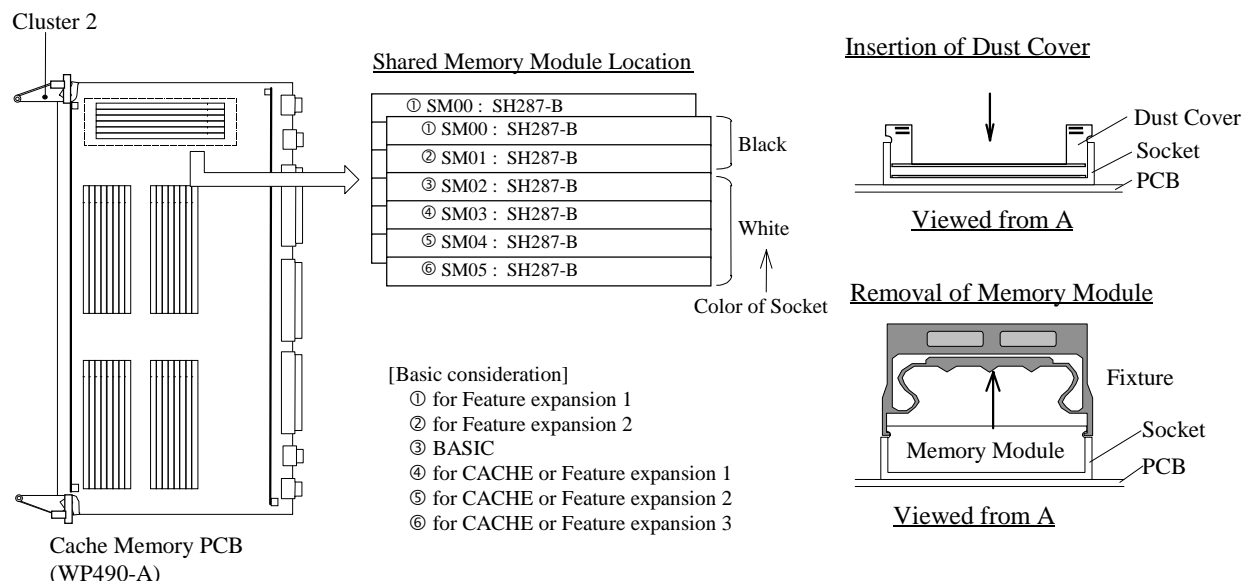


Fig. 4.2.1-6 Inserting Location of the Shared Memory Module

Table 4.2.1-7 Number of SMs and Corresponding Shared Memory Capacity (BASIC)

Cache Memory Capacity (GB)	Number of CU:1-4 (to 1024LDEV)			Number of CU:5-8 (to 2048LDEV)			Number of CU:9-16 (to 4096LDEV)			Number of CU:17-32 (to 8192LDEV)		
	SM (MB)	S512	Install loc. *1	SM (MB)	S512	Install loc. *1	SM (MB)	S512	Install loc. *1	SM (MB)	S512	Install loc. *1
2	512	1	③	1536	3	③①④	1536	3	③①④	2048	4	③①②④
4	512	1	③	1536	3	③①④	1536	3	③①④	2048	4	③①②④
6	512	1	③	1536	3	③①④	1536	3	③①④	2048	4	③①②④
8	512	1	③	1536	3	③①④	1536	3	③①④	2048	4	③①②④
10	1024	2	③④	1536	3	③①④	1536	3	③①④	2048	4	③①②④
12	1024	2	③④	1536	3	③①④	1536	3	③①④	2048	4	③①②④
14	1024	2	③④	1536	3	③①④	1536	3	③①④	2048	4	③①②④
16	1024	2	③④	1536	3	③①④	1536	3	③①④	2048	4	③①②④
18	1024	2	③④	1536	3	③①④	2048	4	③①④⑤	2560	5	③①②④⑤
20	1024	2	③④	1536	3	③①④	2048	4	③①④⑤	2560	5	③①②④⑤
22	1024	2	③④	1536	3	③①④	2048	4	③①④⑤	2560	5	③①②④⑤
24	1024	2	③④	1536	3	③①④	2048	4	③①④⑤	2560	5	③①②④⑤
26	1024	2	③④	1536	3	③①④	2048	4	③①④⑤	2560	5	③①②④⑤
28	1024	2	③④	1536	3	③①④	2048	4	③①④⑤	2560	5	③①②④⑤
30	1024	2	③④	1536	3	③①④	2048	4	③①④⑤	2560	5	③①②④⑤
32	1024	2	③④	1536	3	③①④	2048	4	③①④⑤	2560	5	③①②④⑤

Note. *1 : Location ① through ⑥ shows actual location of Shared Memory on Cache Memory PCB.

Table 4.2.1-8 Number of SMs and Corresponding Shared Memory Capacity
(HRC/HORC/HMRCF/HOMRCF/HHSM supported)

Cache Memory Capacity (GB)	Number of CU:1-4 (to 1024LDEV)			Number of CU:5-8 (to 2048LDEV)			Number of CU:9-16 (to 4096LDEV)			Number of CU:17-32&TPF (to 8192LDEV)		
	SM (MB)	S512	Install loc. *1	SM (MB)	S512	Install loc. *1	SM (MB)	S512	Install loc. *1	SM (MB)	S512	Install loc. *1
2	1024	2	③④	2048	4	③①④⑤	2048	4	③①④⑤	2560	5	③①②④⑤
4	1024	2	③④	2048	4	③①④⑤	2048	4	③①④⑤	2560	5	③①②④⑤
6	1024	2	③④	2048	4	③①④⑤	2048	4	③①④⑤	2560	5	③①②④⑤
8	1024	2	③④	2048	4	③①④⑤	2048	4	③①④⑤	2560	5	③①②④⑤
10	1536	3	③④⑤	2048	4	③①④⑤	2048	4	③①④⑤	2560	5	③①②④⑤
12	1536	3	③④⑤	2048	4	③①④⑤	2048	4	③①④⑤	2560	5	③①②④⑤
14	1536	3	③④⑤	2048	4	③①④⑤	2048	4	③①④⑤	2560	5	③①②④⑤
16	1536	3	③④⑤	2048	4	③①④⑤	2048	4	③①④⑤	2560	5	③①②④⑤
18	1536	3	③④⑤	2048	4	③①④⑤	2560	5	③①④⑤⑥	3072	6	③①②④⑤⑥
20	1536	3	③④⑤	2048	4	③①④⑤	2560	5	③①④⑤⑥	3072	6	③①②④⑤⑥
22	1536	3	③④⑤	2048	4	③①④⑤	2560	5	③①④⑤⑥	3072	6	③①②④⑤⑥
24	1536	3	③④⑤	2048	4	③①④⑤	2560	5	③①④⑤⑥	3072	6	③①②④⑤⑥
26	1536	3	③④⑤	2048	4	③①④⑤	2560	5	③①④⑤⑥	3072	6	③①②④⑤⑥
28	1536	3	③④⑤	2048	4	③①④⑤	2560	5	③①④⑤⑥	3072	6	③①②④⑤⑥
30	1536	3	③④⑤	2048	4	③①④⑤	2560	5	③①④⑤⑥	3072	6	③①②④⑤⑥
32	1536	3	③④⑤	2048	4	③①④⑤	2560	5	③①④⑤⑥	3072	6	③①②④⑤⑥

Note. *1 : Location ① through ⑥ shows actual location of Shared Memory on Cache Memory PCB.

5-3. Insert the PCB.

- Insert the Cache Memory PCB into the Front Logic Box referring to Table 4.2.1-9.
- Fasten the two screws.

Table 4.2.1-9 Location of the Cache PCB

Cluster	PCB Name	Box	Slot No.	Location No.	Remarks
2	WP490-A	Front Logic Box	H	CACHE-2H	Cache Memory PCB

5-4 Change the nameplate.

- a. Refer to Fig. 4.2.1-7 and Table 4.2.1-10 to wipe off unnecessary numbers on the nameplate.

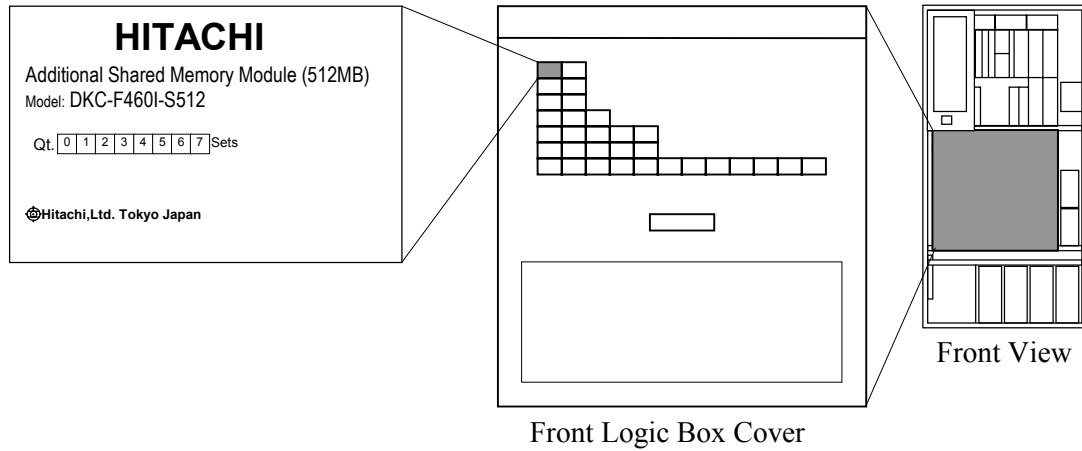
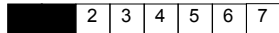
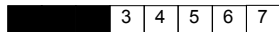






Fig. 4.2.1-7 Location of the Nameplate

Table 4.2.1-10 Quantity Marking


No.	Quantity Marking	
	Number of DKC-F460I-S512 sets	Qt.
1	1 set	 2 3 4 5 6 7
2	2 sets	 3 4 5 6 7
3	3 sets	 4 5 6 7
4	4 sets	 5 6 7
5	5 sets	 6 7
6	6 sets	 7

6. SVP post procedure on the Cluster2

1.

After the hardware procedure for cluster 2 of cache memory is completed, select (CL) [OK] in response to “Replace or pull out the Memory PCBs of cluster-2. When completed, please press [OK].”.

“INLINE CUDG is running...” is displayed.

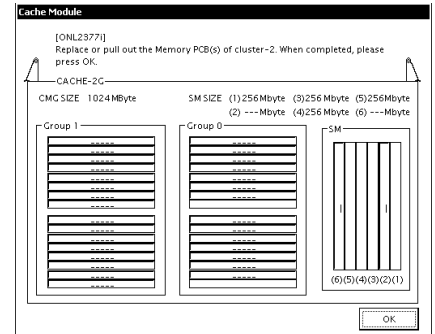

2.


When CUDG is completed, the recovery processing is automatically started with the messages.

“Restoring the Cache Memory PCB...”

“Restoring the Shared Memory PCB...”

3. <Check the end of de-installation procedure>

“Renewal process has completed. Please check subsystem status.” shown in the right figure displayed. Select (CL) [OK] in response to this message.

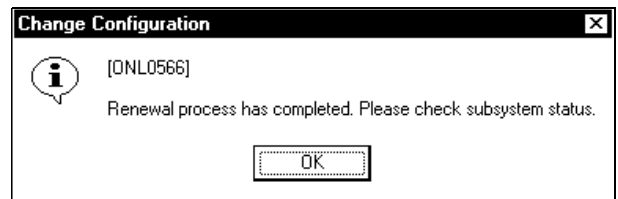


4.


“Reading subsystem configuration data...” is displayed.

“Please insert the Config FD in the FDD.” is displayed.


Insert the configuration FD into FDD, select (CL) [OK].

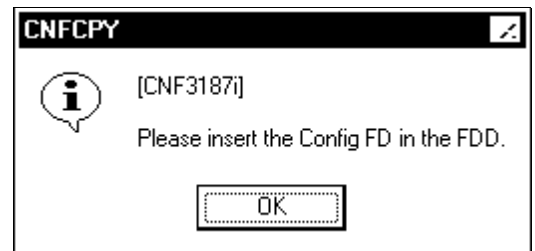

5. When this procedure is completed, the message “Please remove the Config FD.” is displayed. Remove the FD, and select (CL) [OK].

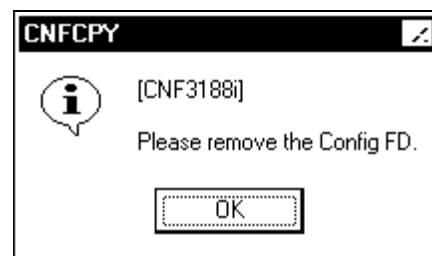

6. After the procedure is completed, return to “Install”. Select (CL) [File]-[Exit].

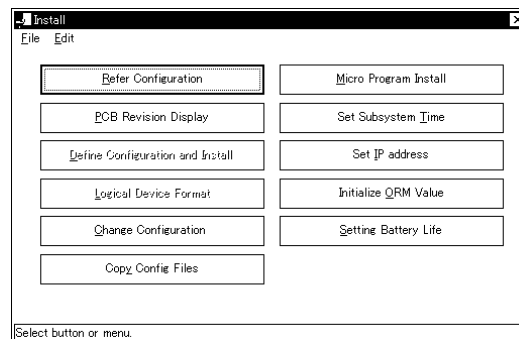

7. <Mode Change>
Change the mode to View Mode.

4.2.2 De-Installation of Additional Cache Memory (DKC-F460I-2048)


Table 4.2.2-1 Parts List

No.	Model Number	Part Name	Part No.	Quantity	Remarks
1	DKC-F460I-2048	SH288-B	5513977-B	4	Cache Memory Module (512 MB)


1. Setting up the New Device Structure Information

1. <Mode Change>
Change the mode to Modify Mode.
Select (CL) [Install].


2. <Start the 'Menu Dialog' screen>
Select (CL) [Change Configuration].

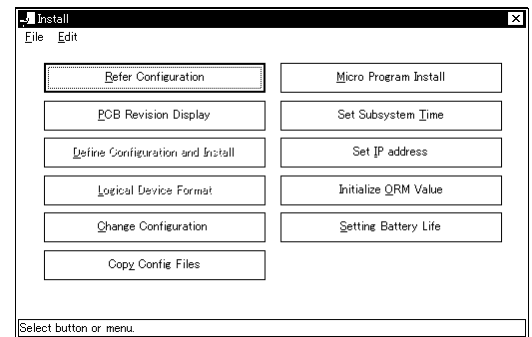

3. <Start Device Structure Setup screen>
Select (CL) [De-Installation] in the 'Menu Dialog' dialog box and select (CL) [OK].

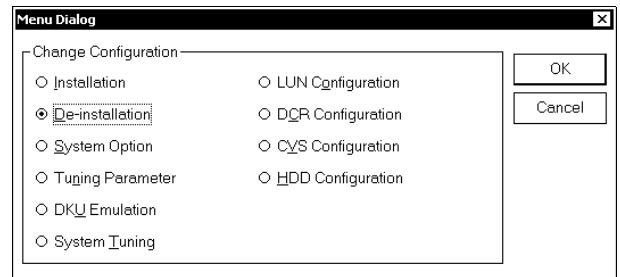


4. <Select a part to be changed>
Select (CL) [Cache Capacity], and select (CL) [OK].

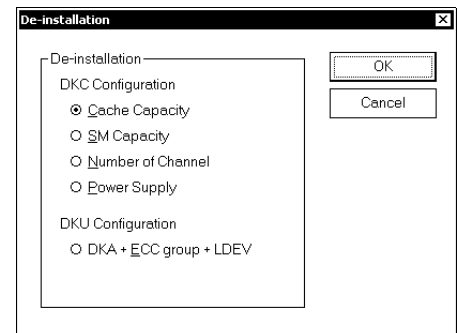


5.

Select (CL) [No] in response to “De-installation of features may cause fatal damage to subsystem. Check that any features be de-installed are not required by host operations. Data will be lost from any ECC group that are removed. Do you want to stop this process?”.

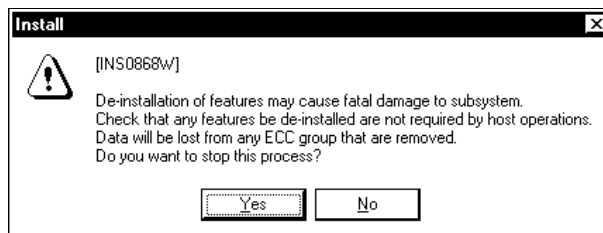

6. <Input password>

Enter the password and select (CL) [OK].

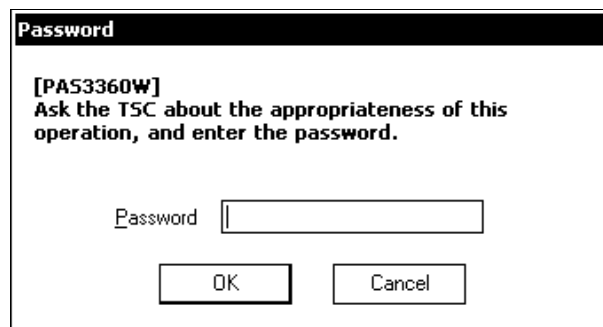**NOTICE**

This is a special (exceptional) operation that can cause a serious failure such as a system down or a data loss if a wrong part to be removed is selected, and requires an input of a password. Ask the technical support center about the appropriateness of the operation, and input the password after getting an approval of executing the operation.


7. <Update Configuration Information>

Select (CL) [Cache Configuration] in the ‘DKC Configuration’ window. (Go to step 7-1.)

Note: It is not possible to install or de-install plural parts at the same time.

Make sure that all entered items are correct and select (CL) [>>Next].


Go to step 8.

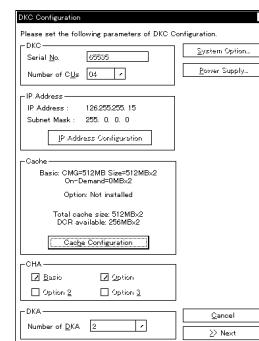

7-1. <Define Cache>

Define each item in the ‘Cache Configuration’ window.


If you want to change the DCR available size,
select (CL) [Change...] to change it.
(See SSD Optional Function Section)

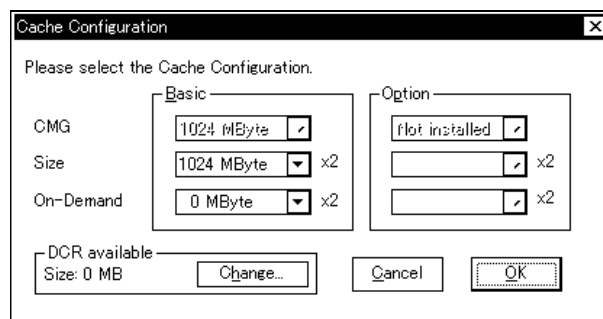

7-2. <Define DCR Available Size>


Define the DCR available size in the 'DCR Available Size' dialog box.
And select (CL) [OK].

Return to step 7-1.

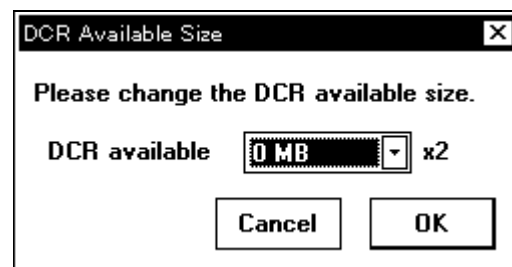

8. <Display SM size>


The 'Shared Memory size Configuration' dialog box is displayed.
Select (CL) [>>Next].

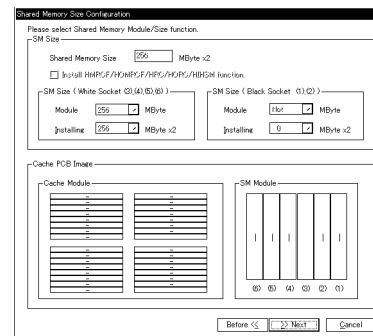

2. SVP pre procedure on the cluster 1.

1. <Start de-installation>
Select (CL) [Yes] in response to “Are you sure you want to renew subsystem?”.

When [No] is selected (CL), returns to
[INST04-CM-20](#) step 3.

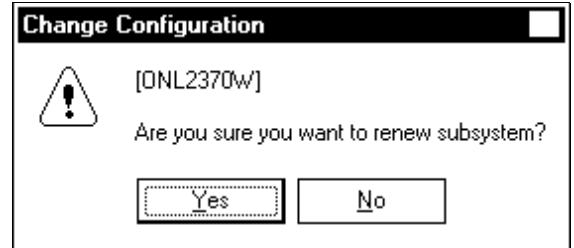

-
2. <Memory blocking on cluster 1>
When blocking of cluster 1 of shared memory and Cache memory is completed, “The Cache Memory PCB is being blocked...” and “The Shared Memory PCB is being blocked...” are displayed.

-
3.
“Lighting LED of the PCB...” is displayed.

4. <Perform cache hardware de-installation>

At this point refrain from pressing the [OK] button.


When “Replace or pull out the Memory PCB(s) of cluster-1.

When completed, select OK.” is displayed, perform the hardware de-installation steps according to the cache hardware de-installation procedure.


Make sure of the installation location of the module to be removed and remove the correct module.

(Uninstalled module is displayed as looks depressed; the PCB to be removed is displayed in gray.)

(A PCB to be added)

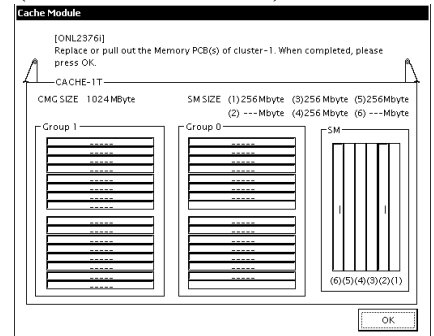

(Two PCBs to be added)

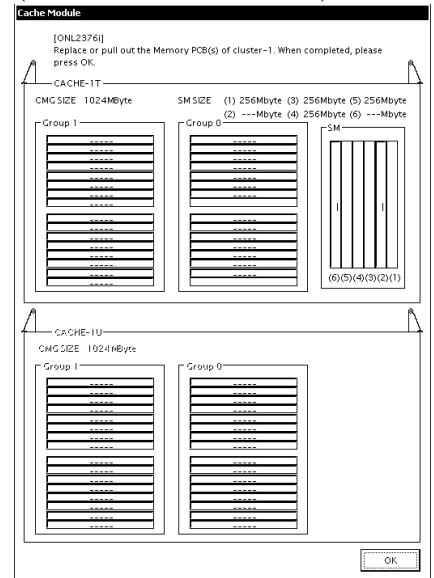

3. Remove the Cache Memory on the cluster 1.

Be sure to wear your wrist strap and attach to ground prior to performing the following work.
This will ensure that the IC and LSI on the PCB are protected from static electricity.

3-1. Remove the PCB.

- a. While referring to Fig. 4.2.2-1 and Table 4.2.2-2, check the Shut Down LED on the Cache Memory PCB. Connect the Maintenance Jumper to the Shut Down Connector if the Shut Down LED is not on.

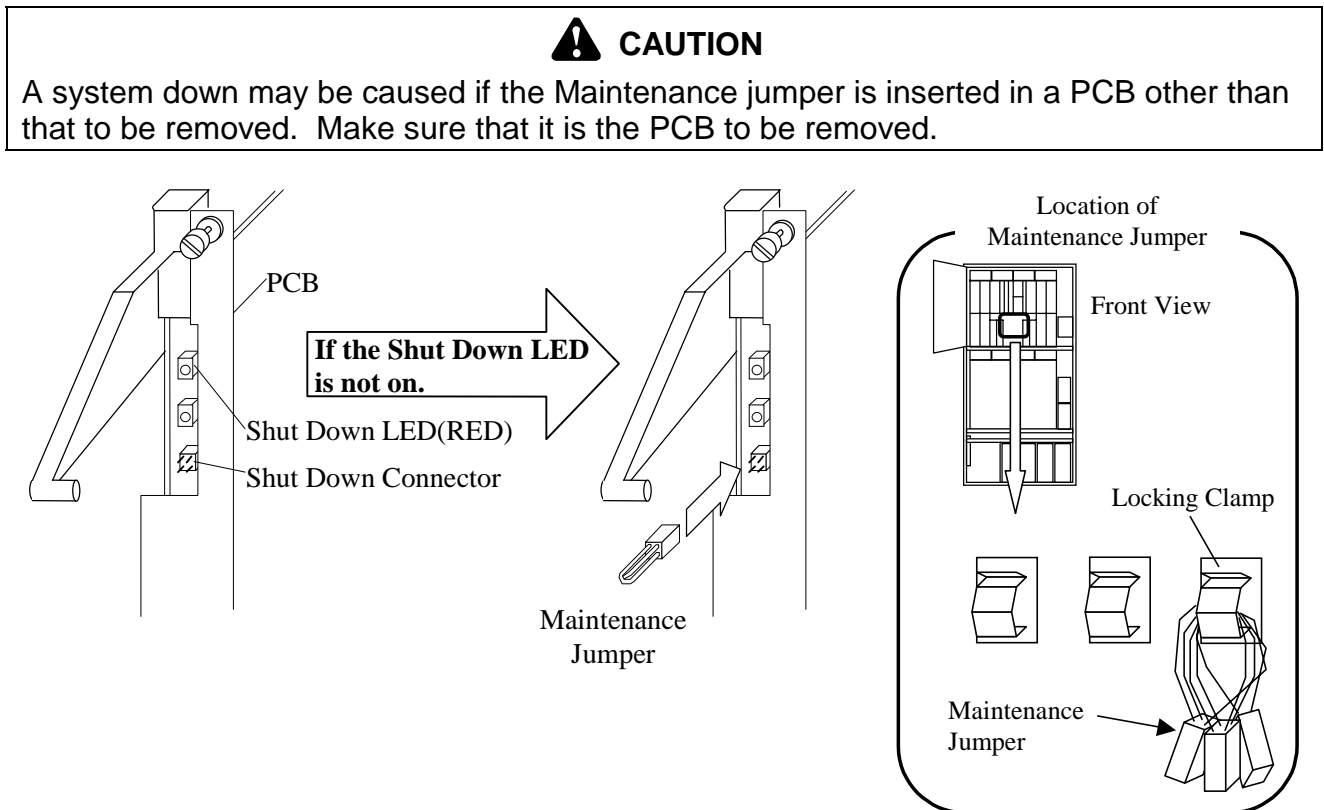


Fig. 4.2.2-1 Location of the Shut Down LED

Table 4.2.2-2 Location of the Cache Memory PCB

Cluster	PCB Name	Box	Slot No.	Location No.	Remarks
1	WP490-A	Front Logic Box	E	CACHE-1E	Cache Memory PCB

- b. Remove the two screws and remove the Cache Memory PCB. Refer to Fig. 4.2.2-2 and Table 4.2.2-2.

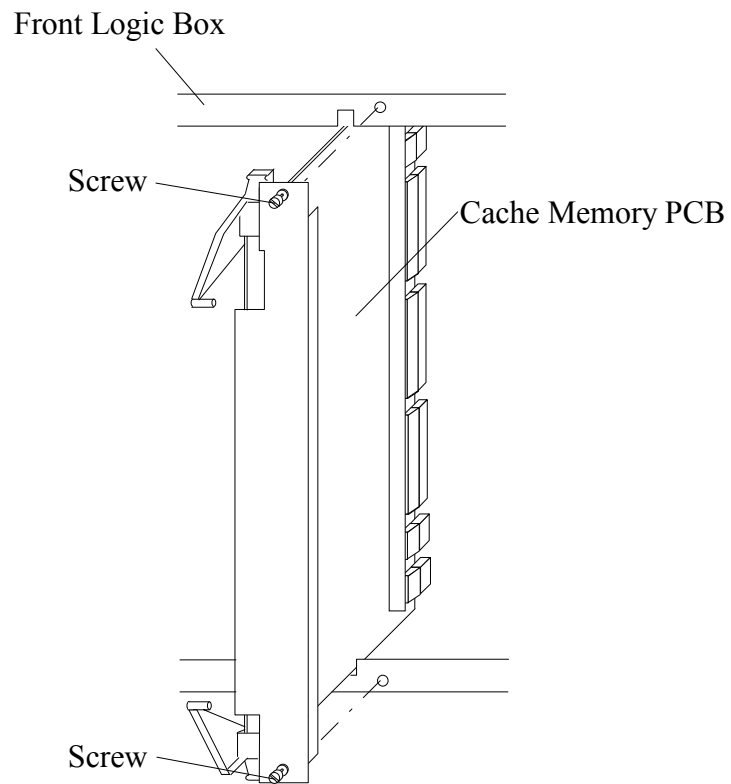


Fig. 4.2.2-2 Removal of the Cache Memory PCB

- c. Remove the Maintenance Jumper if it is mounted.

3-2. Remove the Cache Memory Modules.

- Remove the extra Cache Memory Modules according to the required Cache Memory capacity referring to Fig. 4.2.2-3 and Table 4.2.2-3.
- Insert the dust covers into the vacant sockets.

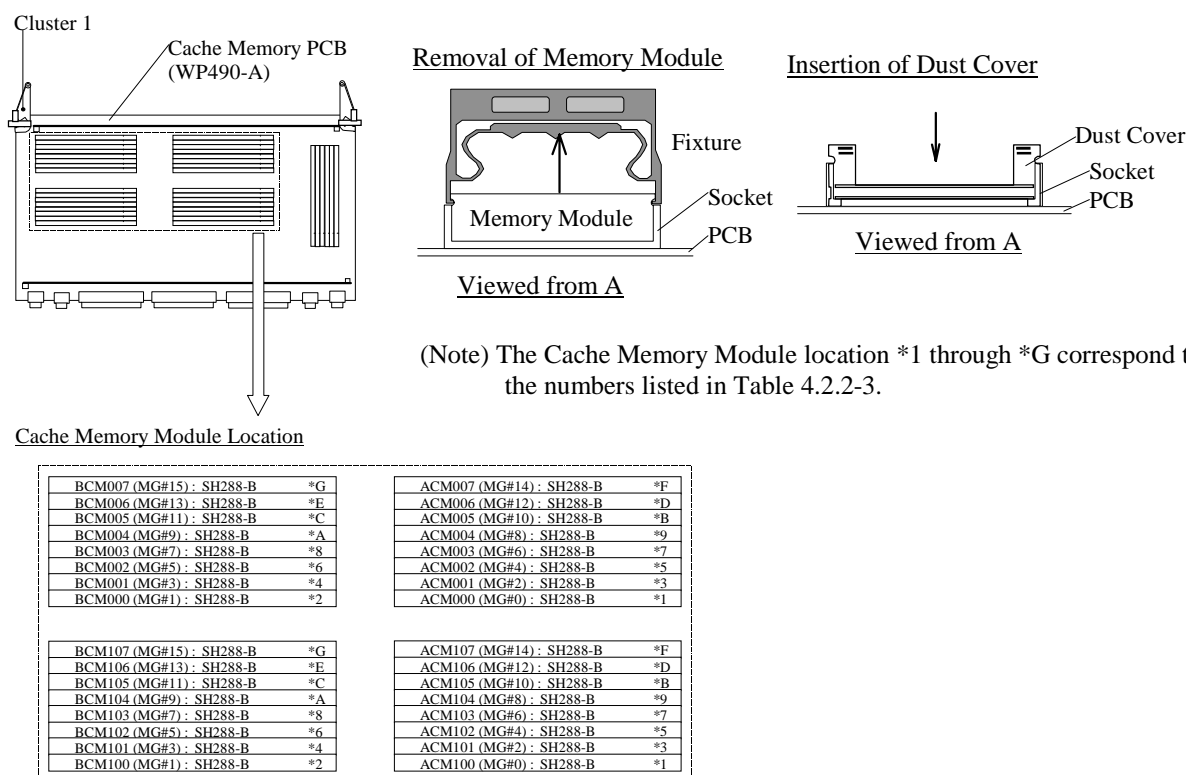


Fig. 4.2.2-3 Inserting Location of the Cache Memory Module

Table 4.2.2-3 Number of CMs and Corresponding Cache Memory Capacity
(When the Cache Memory was composed only of DKC-F460I-2048)

No. (Note 2)	Cache Memory capacity (×2)		Model No.	Cluster 1	
	From (Note 1)	To (Note 1)		Part name	Quantity
1	0 GB	1 GB	DKC-F460I-2048 1 set	SH288-B	2
2	1 GB	2 GB	DKC-F460I-2048 2 sets	SH288-B	2
3	2 GB	3 GB	DKC-F460I-2048 3 sets	SH288-B	2
4	3 GB	4 GB	DKC-F460I-2048 4 sets	SH288-B	2
5	4 GB	5 GB	DKC-F460I-2048 5 sets	SH288-B	2
6	5 GB	6 GB	DKC-F460I-2048 6 sets	SH288-B	2
7	6 GB	7 GB	DKC-F460I-2048 7 sets	SH288-B	2
8	7 GB	8 GB	DKC-F460I-2048 8 sets	SH288-B	2
9	8 GB	9 GB	DKC-F460I-2048 9 sets	SH288-B	2
A	9 GB	10 GB	DKC-F460I-2048 10 sets	SH288-B	2

(To be continued.)

(Continued from preceding sheet.)

No. (Note 2)	Cache Memory capacity (×2)		Model No.	Cluster 1	
	From (Note 1)	To (Note 1)		Part name	Quantity
B	10 GB	11 GB	DKC-F460I-2048 11 sets	SH288-B	2
C	11 GB	12 GB	DKC-F460I-2048 12 sets	SH288-B	2
D	12 GB	13 GB	DKC-F460I-2048 13 sets	SH288-B	2
E	13 GB	14 GB	DKC-F460I-2048 14 sets	SH288-B	2
F	14 GB	15 GB	DKC-F460I-2048 15 sets	SH288-B	2
G	15 GB	16 GB	DKC-F460I-2048 16 sets	SH288-B	2

Note 1: This value is a half value of whole capacity of cache memories. (the capacity of cache memories on the one side)

Note 2: The above numbers represent the Cache Memory Module locations shown in Fig. 4.2.2-3.

3-3. Insert the PCB.

- Insert the Cache Memory PCB referring to Table 4.2.2-4.
- Fasten the two screws.


Table 4.2.2-4 Location of the Cache Memory PCB

Cluster	PCB Name	Box	Slot No.	Location No.	Remarks
1	WP490-A	Front Logic Box	E	CACHE-1E	Cache Memory PCB

4. SVP post procedure on the cluster 1 and pre procedure on the cluster 2.

1.

After the hardware procedure for cluster 1 of cache memory is completed, select (CL) [OK] in response to “Replace or pull out the Memory PCBs of cluster-1. When completed, please press [OK].”.

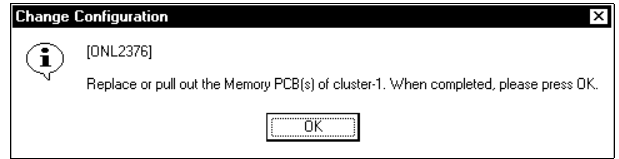

2. <Cache CUDG executes>

“INLINE CUDG is running...” is displayed.

3.

When CUDG is completed, the recovery processing is automatically started with the messages.

“Restoring the Cache Memory PCB...”

“Shared memory renewal is in progress...”

4.

When the recovery processing is complete, processing proceeds to blocking of cluster 2 of shared memory.

-
4. When the recovery processing is complete, processing proceeds to blocking of cluster 2 of shared memory.

-
5. <Memory blocking on cluster 2>
When blocking of cluster 2 of shared memory and Cache memory is completed, “The Cache Memory PCB is being blocked...” and “The Shared Memory PCB is being blocked...” are displayed.

-
6. “Lighting LED of the PCB...” is displayed.

7. <Perform cache hardware de-installation>

At this point refrain from pressing the [OK] button.


When “Replace or pull out the Memory PCB(s) of cluster-2.

When completed, select OK.” is displayed, perform the hardware de-installation steps according to the cache hardware de-installation procedure.


Make sure of the installation location of the module to be removed and remove the correct module.

(Uninstalled module is displayed as looks depressed; the PCB to be removed is displayed in gray.)

(A PCB to be added)

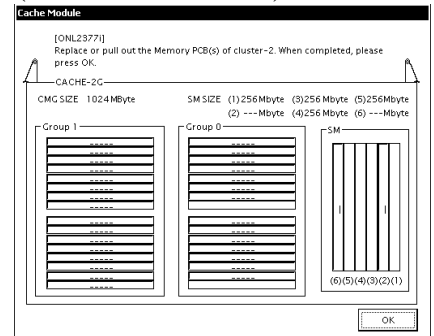

(Two PCBs to be added)

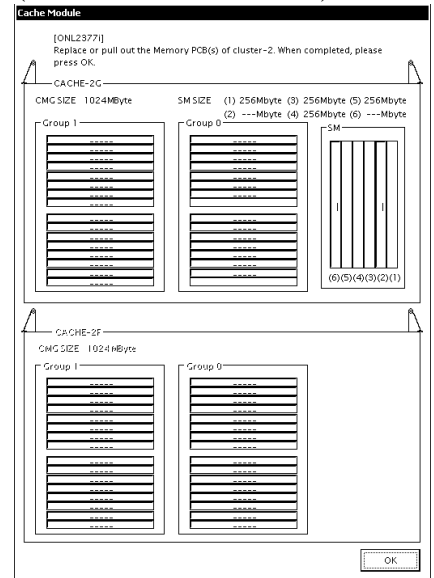

5. Remove the Cache Memory on the cluster 2.

Be sure to wear your wrist strap and attach to ground prior to performing the following work.
This will ensure that the IC and LSI on the PCB are protected from static electricity.

5-1. Remove the PCB.

- a. While referring to Fig. 4.2.2-4 and Table 4.2.2-5, check the Shut Down LED on the Cache Memory PCB. Connect the Maintenance Jumper to the Shut Down Connector if the Shut Down LED is not on.

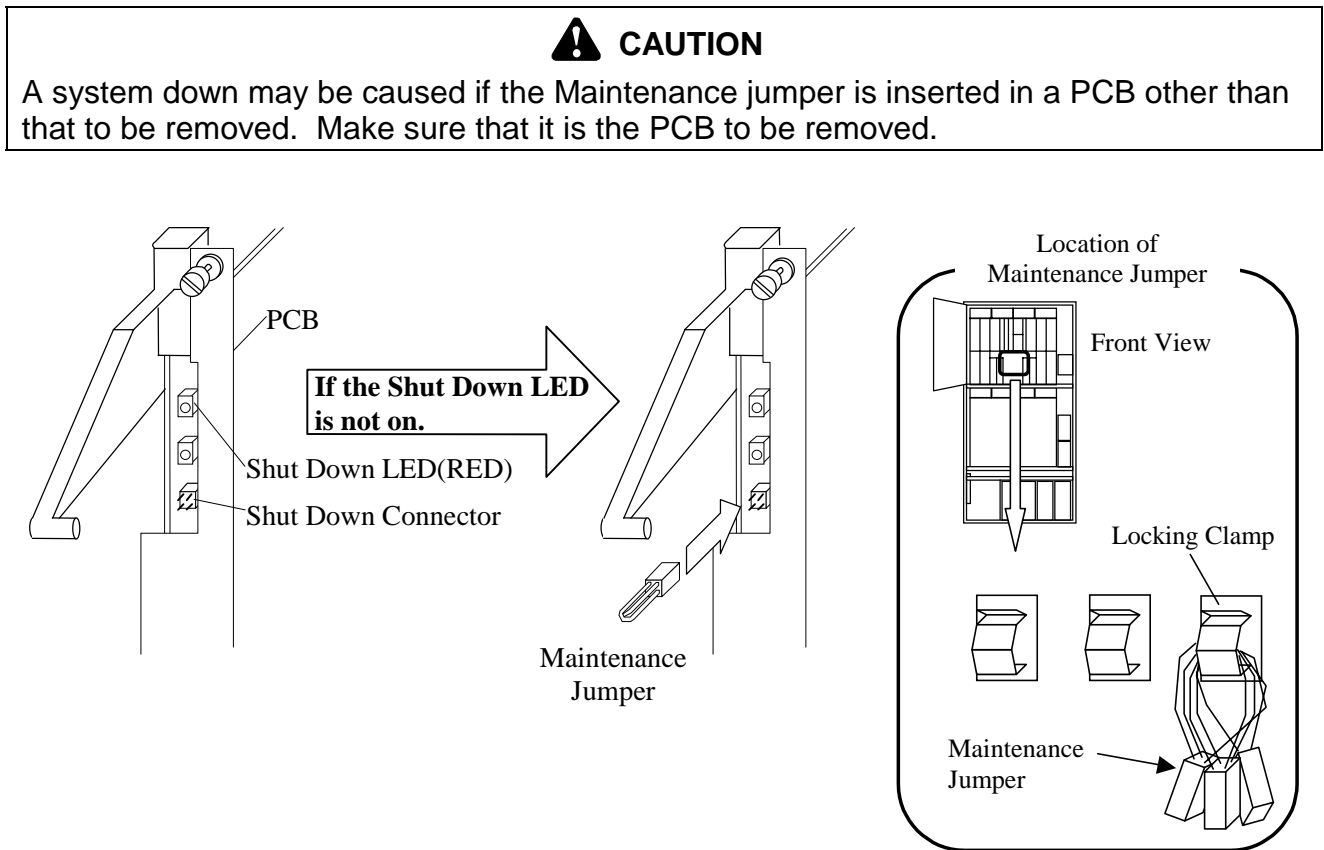


Fig. 4.2.2-4 Location of the Shut Down LED

Table 4.2.2-5 Location of the Cache Memory PCB

Cluster	PCB Name	Box	Slot No.	Location No.	Remarks
2	WP490-A	Front Logic Box	H	CACHE-2H	Cache Memory PCB

- b. Remove the two screws and remove the Cache Memory PCB. Refer to Fig. 4.2.2-5 and Table 4.2.2-5.

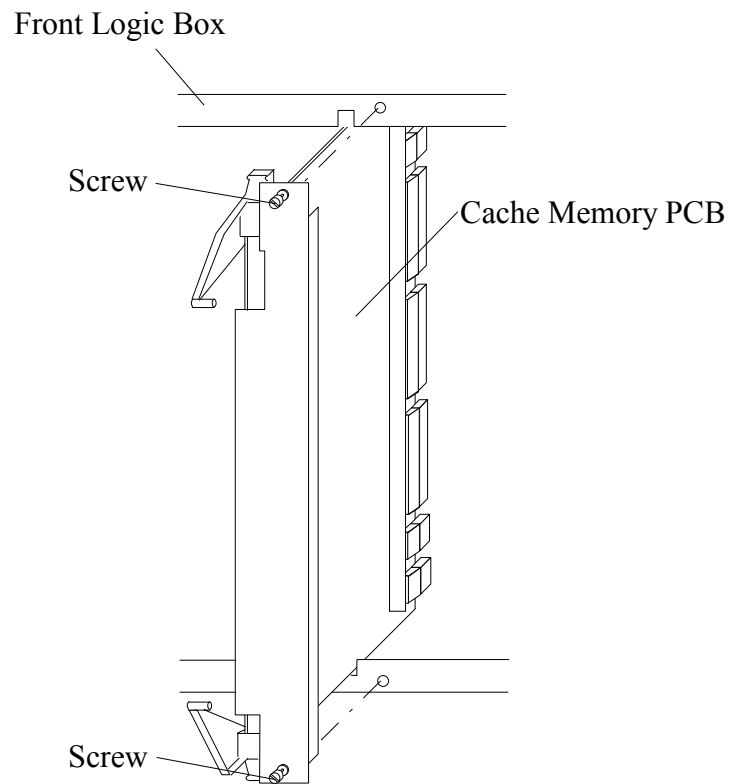


Fig. 4.2.2-5 Removal of the Cache Memory PCB

- c. Remove the Maintenance Jumper if it is mounted.

5-2. Remove the Cache Memory Modules.

- Remove the Cache Memory Modules according to the required Cache Memory capacity referring to Fig. 4.2.2-6 and Table 4.2.2-6.
- Insert the dust covers into the vacant sockets.

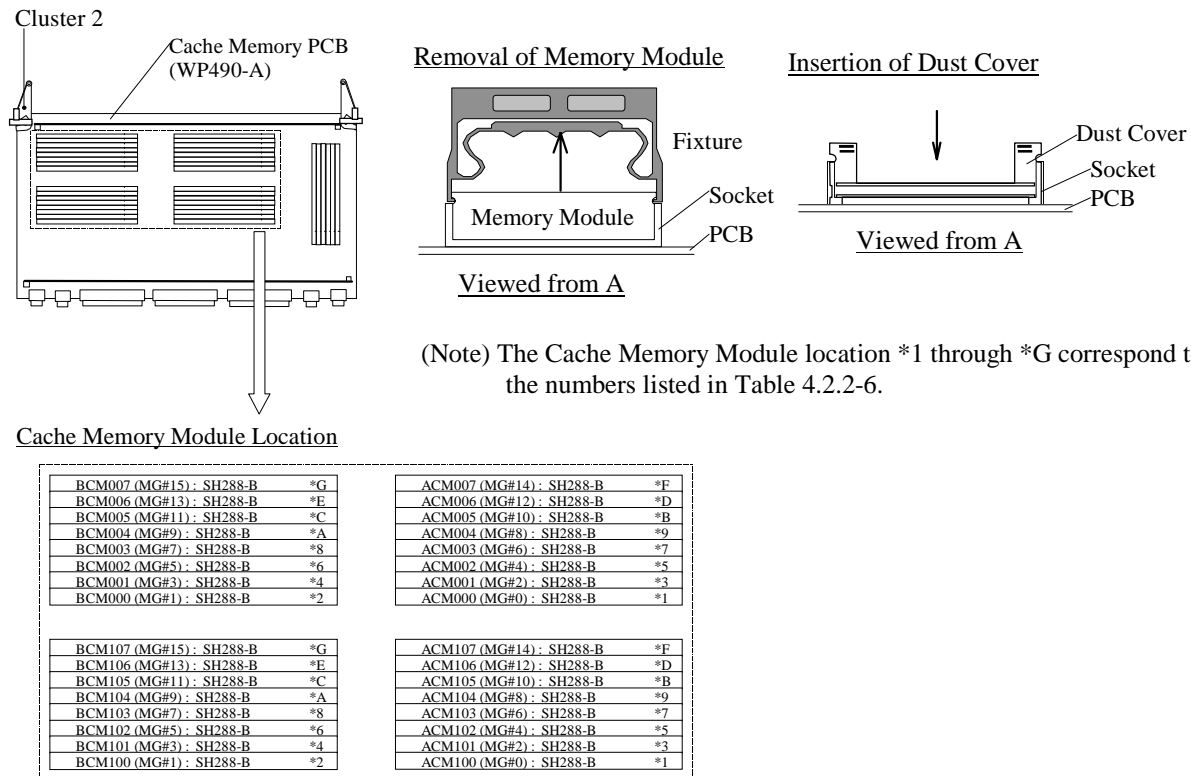


Fig. 4.2.2-6 Inserting Location of the Cache Memory Module

Table 4.2.2-6 Number of CMs and Corresponding Cache Memory Capacity
(When the Cache Memory was composed only of DKC-F460I-2048)

No. (Note 2)	Cache Memory capacity (×2)		Model No.	Cluster 2	
	From (Note 1)	To (Note 1)		Part name	Quantity
1	0 GB	1 GB	DKC-F460I-2048 1 set	SH288-B	2
2	1 GB	2 GB	DKC-F460I-2048 2 sets	SH288-B	2
3	2 GB	3 GB	DKC-F460I-2048 3 sets	SH288-B	2
4	3 GB	4 GB	DKC-F460I-2048 4 sets	SH288-B	2
5	4 GB	5 GB	DKC-F460I-2048 5 sets	SH288-B	2
6	5 GB	6 GB	DKC-F460I-2048 6 sets	SH288-B	2
7	6 GB	7 GB	DKC-F460I-2048 7 sets	SH288-B	2
8	7 GB	8 GB	DKC-F460I-2048 8 sets	SH288-B	2
9	8 GB	9 GB	DKC-F460I-2048 9 sets	SH288-B	2
A	9 GB	10 GB	DKC-F460I-2048 10 sets	SH288-B	2

(To be continued.)

(Continued from preceding sheet.)

No. (Note 2)	Cache Memory capacity (×2)		Model No.	Cluster 2	
	From (Note 1)	To (Note 1)		Part name	Quantity
B	10 GB	11 GB	DKC-F460I-2048 11 sets	SH288-B	2
C	11 GB	12 GB	DKC-F460I-2048 12 sets	SH288-B	2
D	12 GB	13 GB	DKC-F460I-2048 13 sets	SH288-B	2
E	13 GB	14 GB	DKC-F460I-2048 14 sets	SH288-B	2
F	14 GB	15 GB	DKC-F460I-2048 15 sets	SH288-B	2
G	15 GB	16 GB	DKC-F460I-2048 16 sets	SH288-B	2

Note 1: This value is a half value of whole capacity of cache memories. (the capacity of cache memories on the one side)

Note 2: The above numbers represent the Cache Memory Module locations shown in Fig. 4.2.2-6.

5-3. Insert the PCB.

- Insert the Cache Memory PCB referring to Table 4.2.2-7.
- Fasten the two screws.

Table 4.2.2-7 Location of the Cache Memory PCB

Cluster	PCB Name	Box	Slot No.	Location No.	Remarks
2	WP490-A	Front Logic Box	H	CACHE-2H	Cache Memory PCB

5-4 Change the nameplate.

- a. Refer to Fig. 4.2.2-7 wipe off to unnecessary numbers on the nameplate.

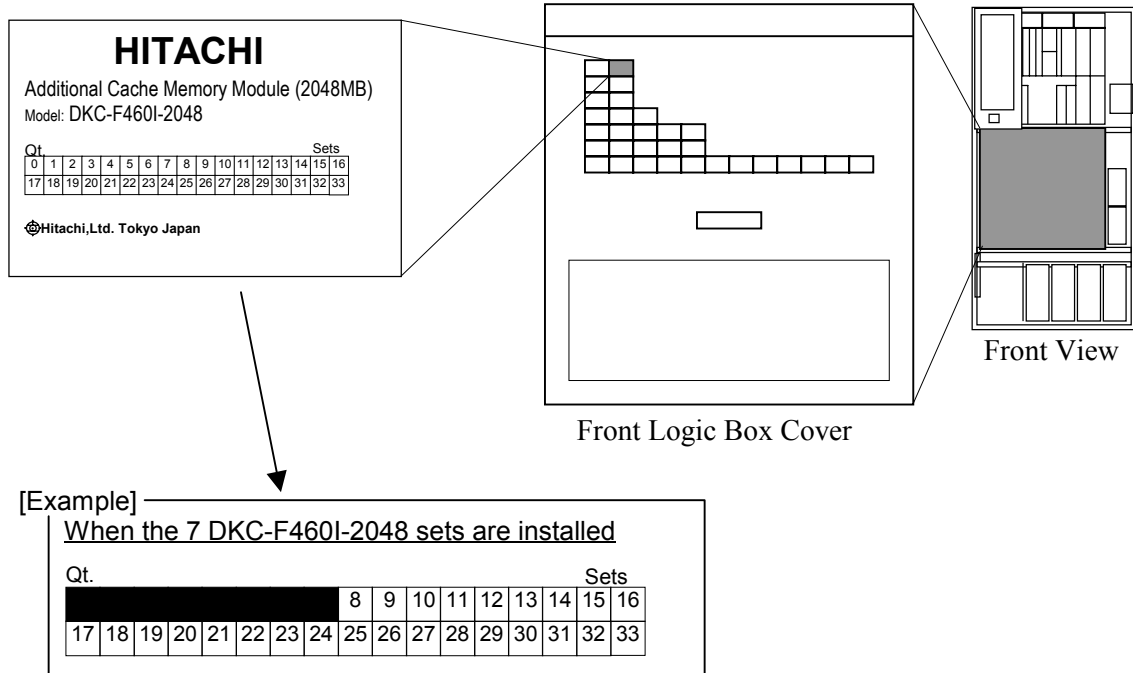


Fig. 4.2.2-7 Location of the Nameplate


6. SVP post procedure on the Cluster2

1.


After the hardware procedure for one side of cache memory is completed, select (CL) [OK] in response to “Replace or pull out the Memory PCBs of cluster-2. When completed, please press OK.”.

“INLINE CUDG is running...” is displayed.

(A PCB to be added)

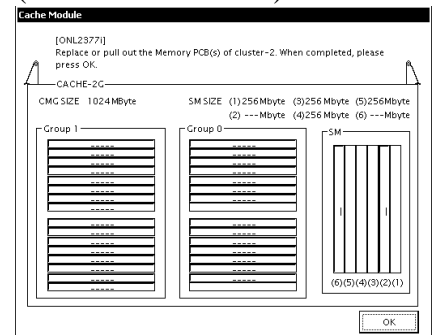

(Two PCBs to be added)

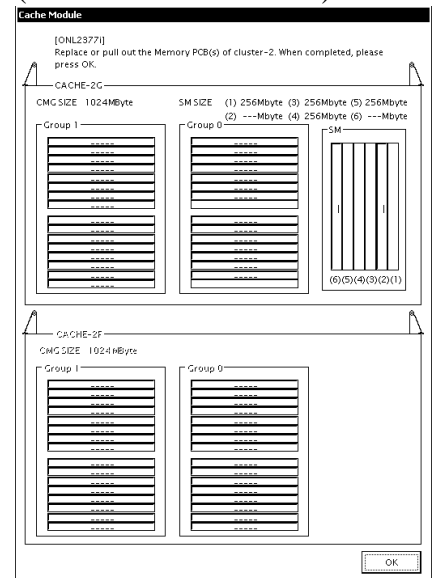

2.

When CUDG is completed, the recovery processing is automatically started with the messages.

“Restoring the Cache Memory PCB...”


“Restoring the Shared Memory PCB...”

3. <Check the end of de-installation procedure>


“Renewal process has completed. Please check subsystem status.” shown in the right figure displayed. Select (CL) [OK] in response to this message.




4. “Reading subsystem configuration data...” is displayed.
 “Please insert the Config FD in the FDD.” is displayed.
 Insert the configuration FD into FDD, select (CL) [OK].

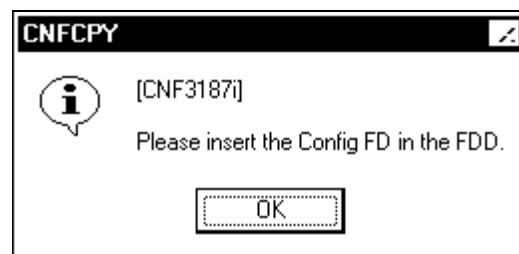

5. When this procedure is completed, the message “Please remove the Config FD.” is displayed.
 Remove the FD, and select (CL) [OK].

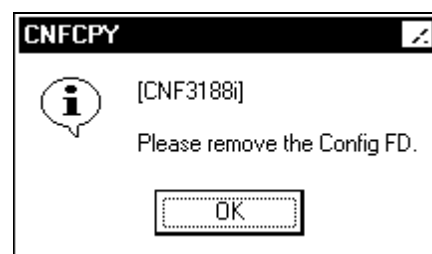

6. After the procedure is completed, return to “Install”.
 Select (CL) [File]-[Exit].

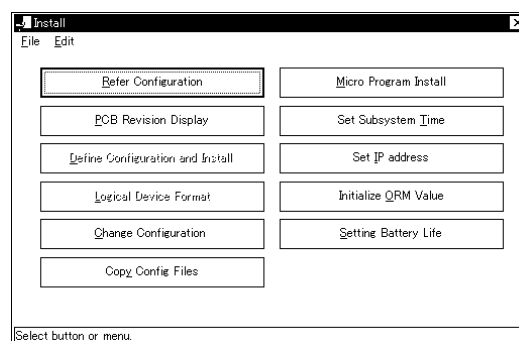

7. <Mode Change>
 Change the mode to View Mode.

4.3 De-installation of Channel Adapter

4.3.1 De-installation of Serial 8-port Adapter (DKC-F460I-8S)


Table 4.3.1-1 Parts List

No.	Model Number	Part Name	Part No.	Quantity	Remarks
1	DKC-F460I-8S	Serial 4-port Adapter PCB	5513983-A	2	
		Cable Clamp	2105506-1	2	
		Holder	2084816-1	8	
		Nameplate (HDS)	2105902-106	1	RSD
			2105903-106		HICAM
			2105903-206		HICEF
		Nameplate (HP)	2105902-206	1	RSD
			2105903-306		HICAM
			2105903-406		HICEF


1. Setting up the New Device Structure Information

1. <Mode Change>
Change the mode to Modify Mode.
Select (CL) [Install].


2. <Start the 'Menu Dialog' screen>
Select (CL) [Change Configuration].

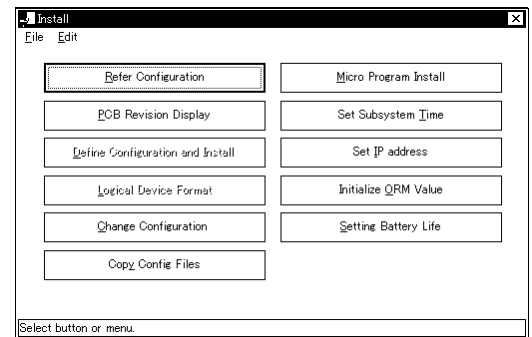

3. <Start Device Structure Setup screen>
Select (CL) [De-Installation] in the 'Menu Dialog' dialog box and select (CL) [OK].

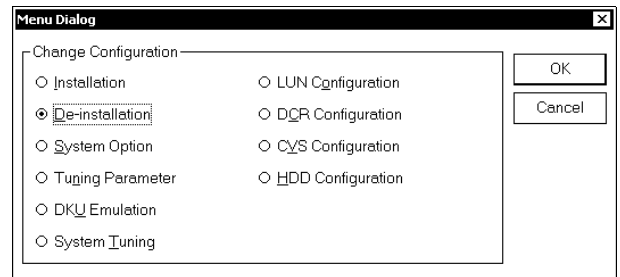


4. <Select a part to be changed>
Select (CL) [Number of Channel], and select (CL) [OK].

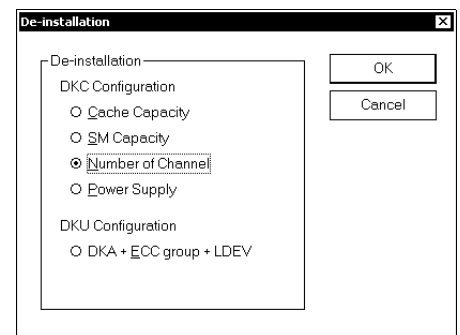


5.

Select (CL) [No] in response to “De-installation of features may cause fatal damage to subsystem. Check that any features be de-installed are not required by host operations. Data will be lost from any ECC group that are removed. Do you want to stop this process?”.

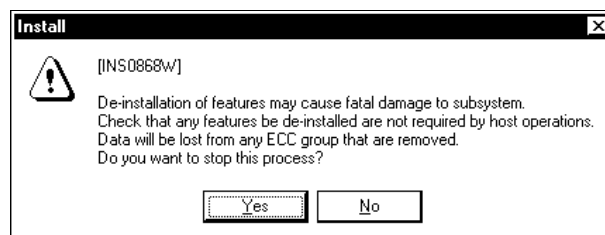

6. <Input password>

Enter the password and select (CL) [OK].

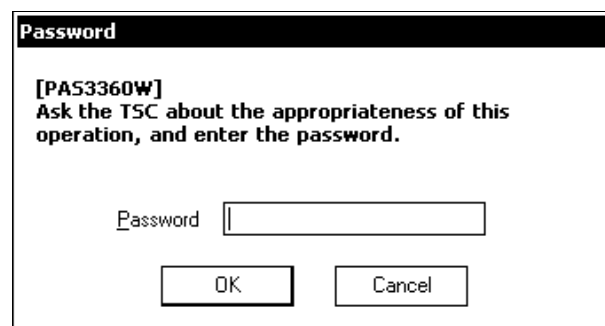**NOTICE**

This is a special (exceptional) operation that can cause a serious failure such as a system down or a data loss if a wrong part to be removed is selected, and requires an input of a password. Ask the technical support center about the appropriateness of the operation, and input the password after getting an approval of executing the operation.

7. <Update Configuration Information>


Define the item to CHA in the 'DKC Configuration' window.

Note 1: It is not possible to install or de-install plural parts at the same time.

Note 2: For Multiplatform configuration,

1. If you want to change Multiplatform into ALL SCSI, after de-installing mainframe volumes, then CHA must be de-installed.
2. If you want to change ALL SCSI into Multiplatform, after de-installing open volumes, then CHS/CHF/CHT must be de-installed.

Make sure that the entered item is correct and select (CL) [>>Next].

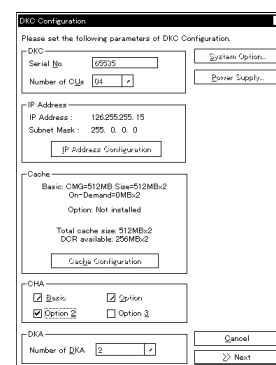


2. SVP pre procedure

1. <Start de-installation>

Select (CL) [Yes] in response to “Are you sure you want to renew subsystem?”.

When [No] is selected (CL), returns to [INST04-8S-20](#) step 3.

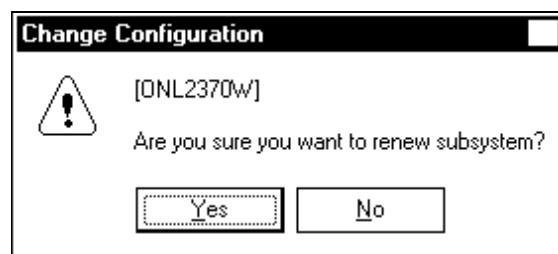

2. <Maintenance-block of PCBs other than cache or shared memory>

At this moment, maintenance blocking is performed on PCBs other than memory systems with message “The CHA is being blocked...” is displayed.

This processing is carried out on each component that is subject to de-installation.


3. <Update device structure information about PCBs other than cache or shared memory>

“The CHA is being blocked...” and “Lighting LED of the PCB...” are displayed and the device structure information update processing is performed on the current component. When the update processing is completed, the device structure information on the current component is set to [EMPTY] and the shut down LED on the PCB is lit.

When the update of device structure information on all PCBs other than those on the memory systems is completed, automatically one of the two following messages is displayed.

4.

“If de-installation of the CHA has been completed, press OK.” shown in the right figure.

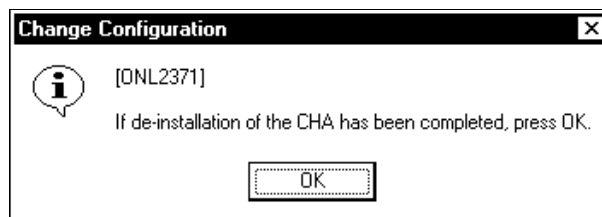

3 De-Installation Procedure of Serial 8-port Adapter

Note: Be sure to wear your wrist strap and attach to ground prior to performing the following work. This will ensure that the IC and LSI on the PCB are protected from static electricity.

3-1 Confirmation of the Shut Down LED (Only Non-Disruptive Procedure)

- a. Confirm that Shut Down LED is on (Fig. 4.3.1-1). If the LED is not on, connect the Maintenance Jumper to the Shut Down Connector.

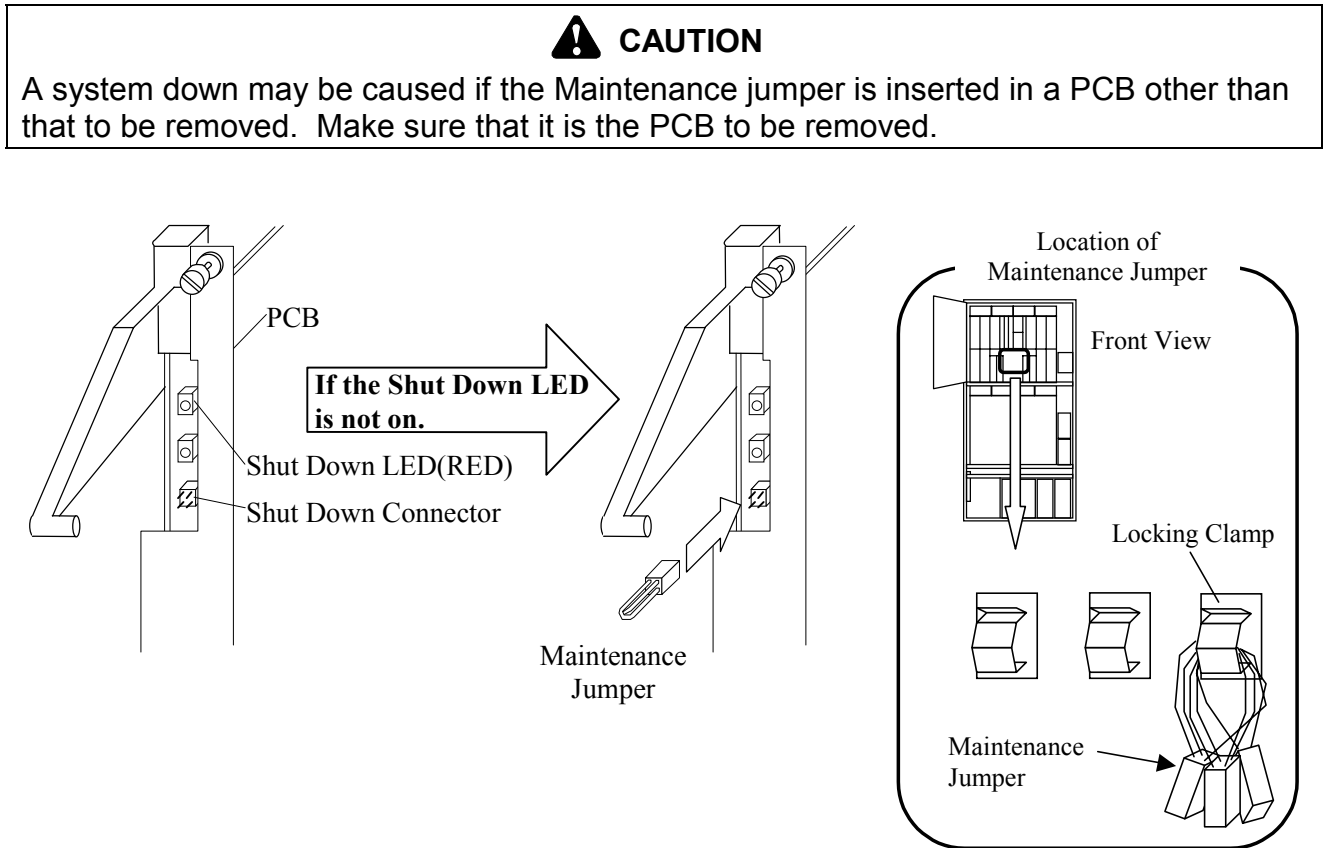


Fig. 4.3.1-1 Shut Down LED

3-2 Disconnection of the optical fibre cables

- Remove the bracket and cable clamp referring to Fig 4.3.1-2.
- Disconnect the optical fibre cables and remove the holder referring to Fig 4.3.1-3.
- Attach the brackets.

Table 4.3.1-2 Removal Location (Front of the unit)

Cluster	CL1							CL2						
Slot No.	A	B	C	D	E	F		G	H	J	K	L	M	
Function	CSW	DKA	CHA	CHA	CACHE	CHA	DKA	CHA	CACHE	CHA	CHA	DKA	DKA	CSW
Location No.	CSW	DKA	CHA	CHA	CACHE	CHA	DKA	CHA	CACHE	CHA	CHA	DKA	DKA	CSW
	-1A	-1B	-1C	-1D	-1E	-1F	-1F	-2G	-2H	-2J	-2K	-2K	-2L	-2M
Order of addition		Basic	Basic	Add.1		Add.2	Add.1	Basic		Add.1	Add.2	Add.1	Basic	

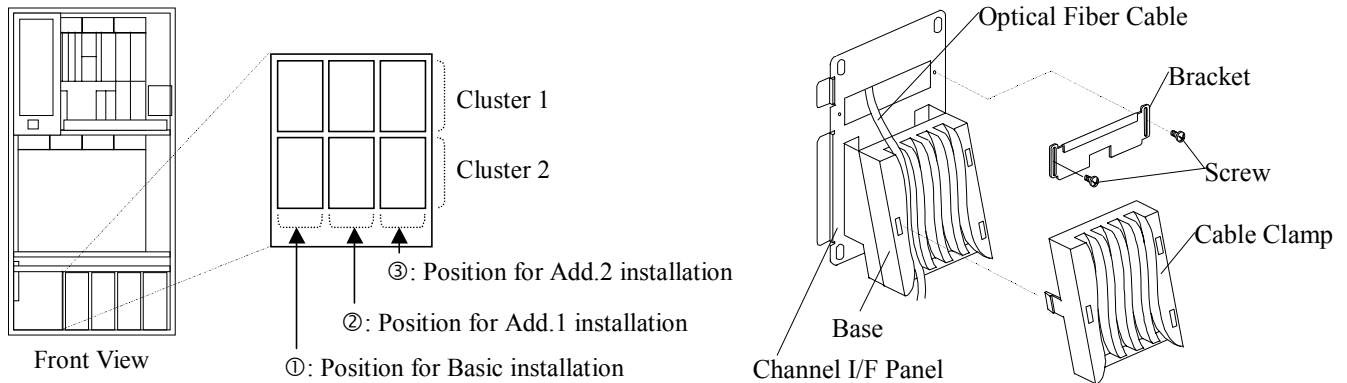


Fig 4.3.1-2 Removal of Bracket

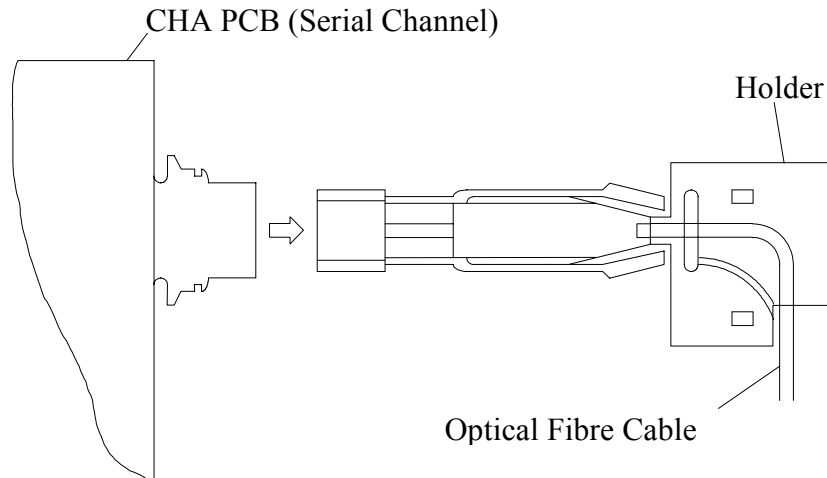


Fig. 4.3.1-3 Disconnection of Optical Fibre Cable

3-3 Removal of the PCBs

- a. Remove the two screws and remove the PCBs from the correct locations in the Front Logic Box referring to Fig. 4.3.1-4.
- b. Attach the dummy plates referring to Fig. 4.3.1-5.

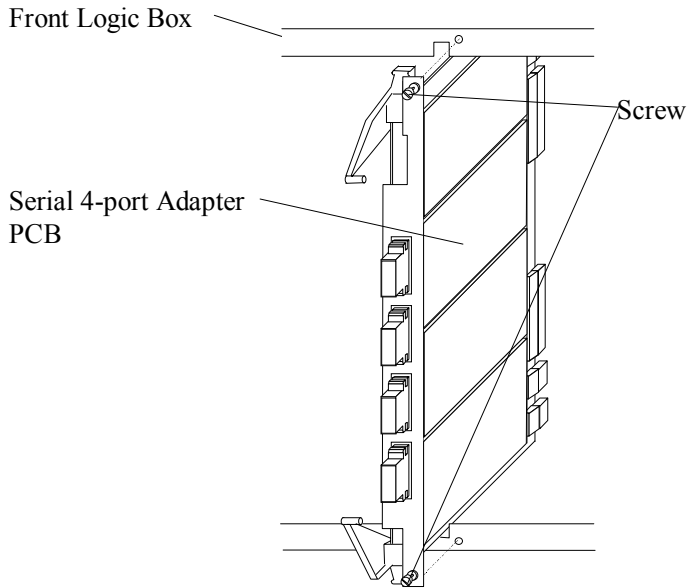


Fig. 4.3.1-4 Removal of PCB

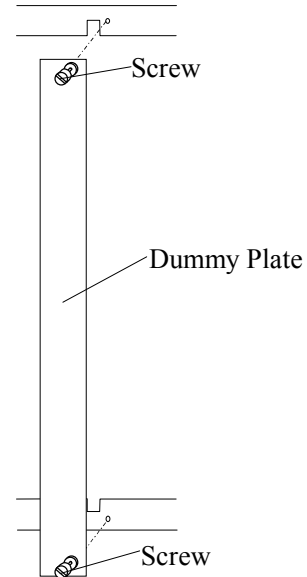


Fig. 4.3.1-5 Attachment of Dummy Plate

3-4 Removal of the Nameplate

- a. Remove the nameplate referring to Fig. 4.3.1-6.


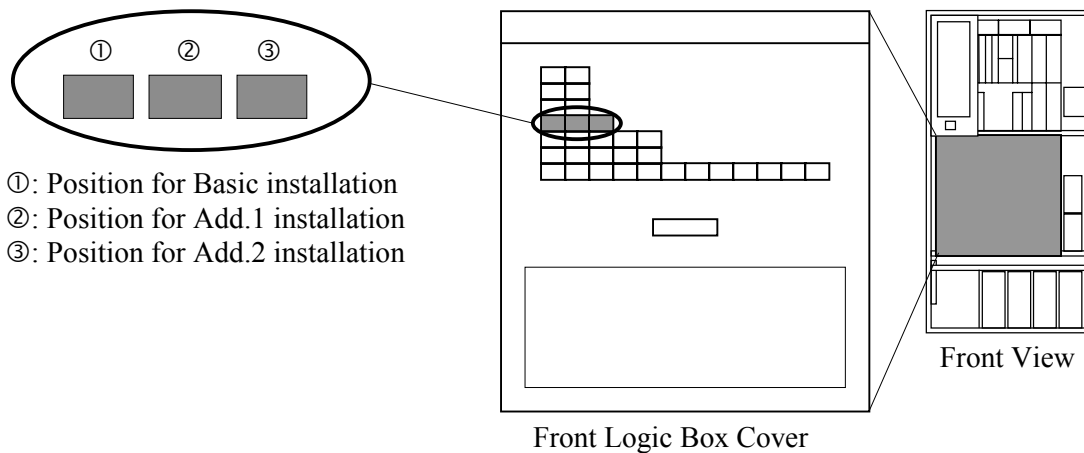


Fig. 4.3.1-6 Removal of Nameplate

4. SVP post procedure


1.

Select (CL) [OK] in response to “If de-installation of the CHA has been completed, press OK.” shown in the right figure.

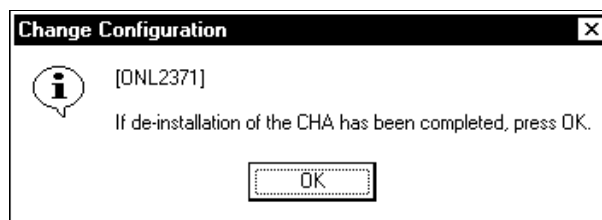

2. <Check the end of de-installation procedure>

“Renewal process has completed. Please check subsystem status.” shown in the right figure displayed. Select (CL) [OK] in response to this message.

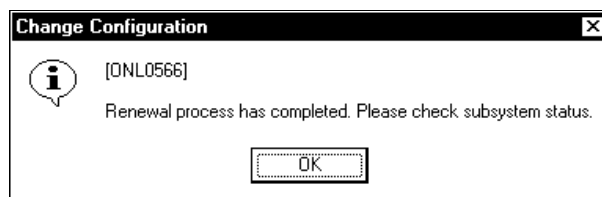


3.

“Reading subsystem configuration data...” is displayed.

“Please insert the Config FD in the FDD.” is displayed.


Insert the configuration FD into FDD, select (CL) [OK].

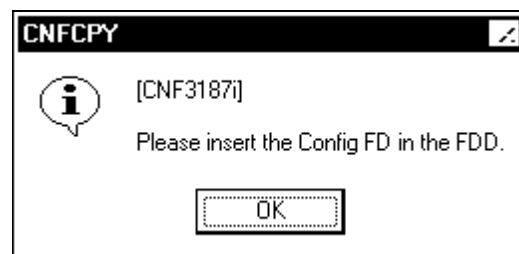


4.

When this procedure is completed, message “Please remove the Config FD.” is displayed.

Remove the FD, select (CL) [OK].

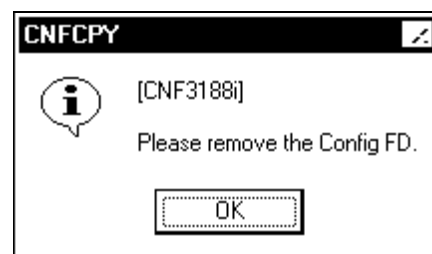

5. After the procedure is completed, return to “Install”.
Select (CL) [File]-[Exit].

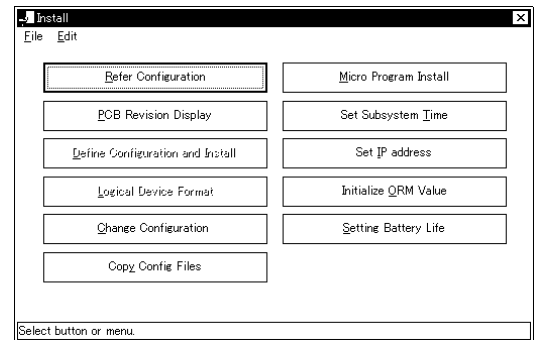

6. <Mode Change>
Change the mode to View Mode.

4.3.2 De-installation of Fibre 4/8-port Adapter (DKC-F460I-8GSE/4HSE/8HSE/8HLE/8GSF/4HSF/8HSF/8HLF)

Table 4.3.2-1 Parts List

No.	Model Number	Part Name	Part No.	Quantity	Remarks
1	DKC-F460I-8GSE	Fibre 4-port Adapter PCB	5513980-B	2	
		Cable Clamp	2105506-1	2	
		Nameplate (HDS)	2105902-107	1	RSD
			2105903-107		HICAM
			2105903-207		HICEF
		Nameplate (HP)	2105902-207	1	RSD
			2105903-307		HICAM
			2105903-407		HICEF
2	DKC-F460I-4HSE (Short Wavelength)	Fibre 2-port Adapter PCB	5513981-C	2	
		Cable Clamp	2105506-1	2	
		Nameplate (HDS)	2105902-108	1	RSD
			2105903-108		HICAM
			2105903-208		HICEF
		Nameplate (HP)	2105902-208	1	RSD
			2105903-308		HICAM
			2105903-408		HICEF
3	DKC-F460I-8HSE (Short Wavelength)	Fibre 4-port Adapter PCB	5513981-A	2	
		Cable Clamp	2105506-1	2	
		Nameplate (HDS)	2105902-109	1	RSD
			2105903-109		HICAM
			2105903-209		HICEF
		Nameplate (HP)	2105902-209	1	RSD
			2105903-309		HICAM
			2105903-409		HICEF
4	DKC-F460I-8HLE (Long Wavelength)	Fibre 4-port Adapter PCB	5513981-B	2	
		Cable Clamp	2105506-1	2	
		Nameplate (HDS)	2105902-110	1	RSD
			2105903-110		HICAM
			2105903-210		HICEF

(To be continued)


(Continued from the preceding page)

No.	Model Number	Part Name	Part No.	Quantity	Remarks
5	DKC-F460I-8GSF (Check data assist support)	Fibre 4-port Adapter PCB	5518079-C	2	Color of PCB lever : Blue
		Cable Clamp	2105506-1	2	
		Nameplate (HDS)	2105902-136	1	RSD
			2105903-136		HICAM
			2105903-236		HICEF
		Nameplate (HP)	2105902-236	1	RSD
			2105903-336		HICAM
			2105903-436		HICEF
6	DKC-F460I-4HSF (Short Wavelength, Check data assist support)	Fibre 2-port Adapter PCB	5518079-D	2	Color of PCB lever : Blue
		Cable Clamp	2105506-1	2	
		Nameplate (HDS)	2105902-137	1	RSD
			2105903-137		HICAM
			2105903-237		HICEF
		Nameplate (HP)	2105902-237	1	RSD
			2105903-337		HICAM
			2105903-437		HICEF
7	DKC-F460I-8HSF (Short Wavelength, Check data assist support)	Fibre 4-port Adapter PCB	5518079-A	2	Color of PCB lever : Blue
		Cable Clamp	2105506-1	2	
		Nameplate (HDS)	2105902-138	1	RSD
			2105903-138		HICAM
			2105903-238		HICEF
		Nameplate (HP)	2105902-238	1	RSD
			2105903-338		HICAM
			2105903-438		HICEF
8	DKC-F460I-8HLF (Long Wavelength, Check data assist support)	Fibre 4-port Adapter PCB	5518079-B	2	Color of PCB lever : Blue
		Cable Clamp	2105506-1	2	
		Nameplate (HDS)	2105902-139	1	RSD
			2105903-139		HICAM
			2105903-239		HICEF


1. Setting up the New Device Structure Information

1. <Mode Change>
Change the mode to Modify Mode.
Select (CL) [Install].


2. <Start the 'Menu Dialog' screen>
Select (CL) [Change Configuration].

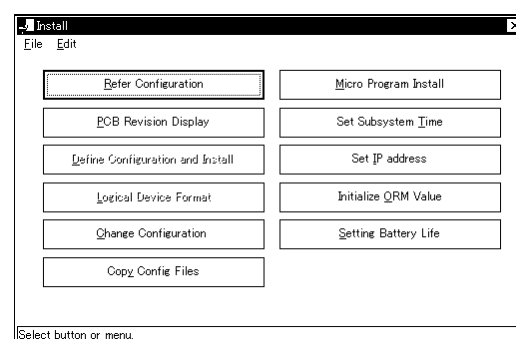

3. <Start Device Structure Setup screen>
Select (CL) [De-Installation] in the 'Menu Dialog' dialog box and select (CL) [OK].

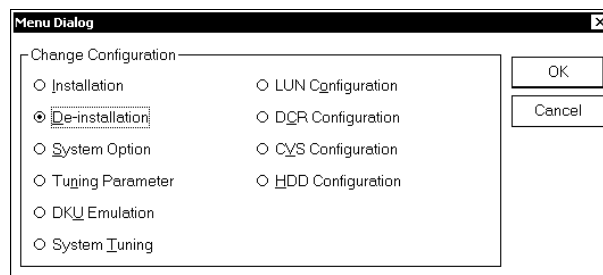


4. <Select a part to be changed>
Select (CL) [Number of Channel], and select (CL) [OK].

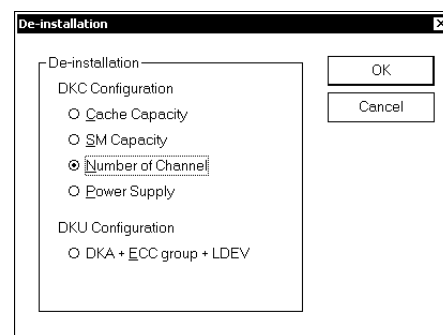


5.

Select (CL) [No] in response to “De-installation of features may cause fatal damage to subsystem. Check that any features be de-installed are not required by host operations. Data will be lost from any ECC group that are removed. Do you want to stop this process?”.

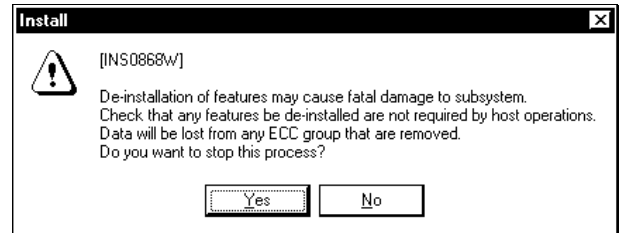

6. <Input password>

Enter the password and select (CL) [OK].

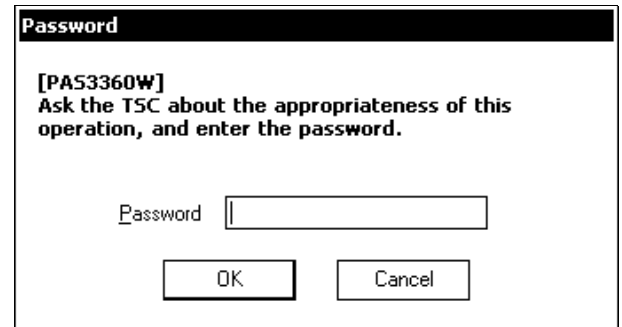**NOTICE**

This is a special (exceptional) operation that can cause a serious failure such as a system down or a data loss if a wrong part to be removed is selected, and requires an input of a password. Ask the technical support center about the appropriateness of the operation, and input the password after getting an approval of executing the operation.

7. <Update Configuration Information>


Define the item to CHA in the 'DKC Configuration' window.

Note 1: It is not possible to install or de-install plural parts at the same time.

Note 2: For Multiplatform configuration,

1. If you want to change Multiplatform into ALL SCSI, after de-installing mainframe volumes, then CHA must be de-installed.
2. If you want to change ALL SCSI into Multiplatform, after de-installing open volumes, then CHS/CHF/CHT must be de-installed.

Make sure that the entered item is correct and select (CL) [>>Next].

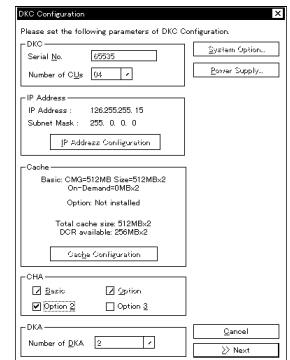


2. SVP pre procedure

1. <Start de-installation>

Select (CL) [Yes] in response to “Are you sure you want to renew subsystem?”.

When [No] is selected (CL), returns to [INST04-FIB-20](#) step 3.

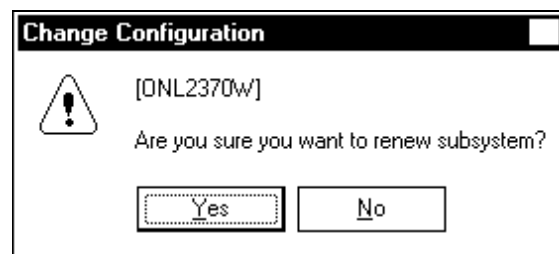

2. <Maintenance-block of PCBs other than cache or shared memory>

At this moment, maintenance blocking is performed on PCBs other than memory systems with message “The CHA is being blocked...” is displayed.

This processing is carried out on each component that is subject to de-installation.


3. <Update device structure information about PCBs other than cache or shared memory>

“The CHA is being blocked...” and “Lighting LED of the PCB...” are displayed and the device structure information update processing is performed on the current component. When the update processing is completed, the device structure information on the current component is set to [EMPTY] and the shut down LED on the PCB is lit.

When the update of device structure information on all PCBs other than those on the memory systems is completed, automatically one of the two following messages is displayed.

4.

“If de-installation of the CHA has been completed, press OK.” shown in the right figure.

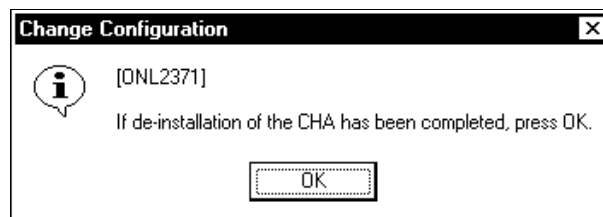

3 De-Installation Procedure of Fibre 4/8-port Adapter

Note: Be sure to wear your wrist strap and attach to ground prior to performing the following work. This will ensure that the IC and LSI on the PCB are protected from static electricity.

3-1 Confirmation of the Shut Down LED (Only Non-Disruptive Procedure)

- a. Confirm that Shut Down LED is on (Fig. 4.3.2-1). If the LED is not on, connect the Maintenance Jumper to the Shut Down Connector.

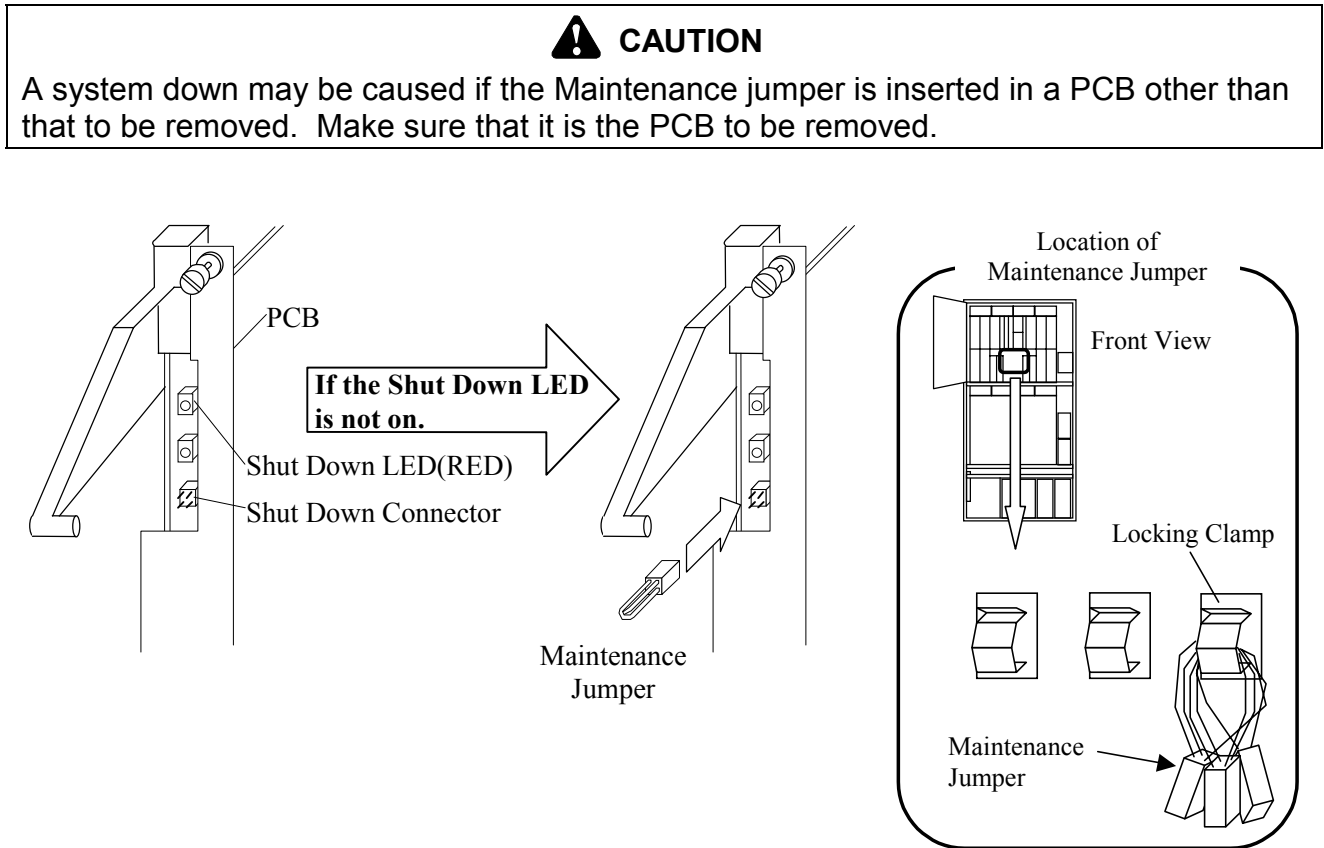


Fig. 4.3.2-1 Shut Down LED

3-2 Disconnection of the optical fibre cables

- a. Remove the bracket and cable clamp referring to Fig 4.3.2-2.
- b. Disconnect the optical fibre cables referring to Fig 4.3.2-3.
- c. Attach the brackets.

Table 4.3.2-2 Removal Location (Front of the unit)

Cluster	CL1							CL2						
Slot No.	A	B	C	D	E	F		G	H	J	K		L	M
Function	CSW	DKA	CHA	CHA	CACHE	CHA	DKA	CHA	CACHE	CHA	CHA	DKA	DKA	CSW
Location No.	CSW	DKA	CHA	CHA	CACHE	CHA	DKA	CHA	CACHE	CHA	CHA	DKA	DKA	CSW
	-1A	-1B	-1C	-1D	-1E	-1F	-1F	-2G	-2H	-2J	-2K	-2K	-2L	-2M
Order of addition		Basic	Basic	Add.1		Add.2	Add.1	Basic		Add.1	Add.2	Add.1	Basic	

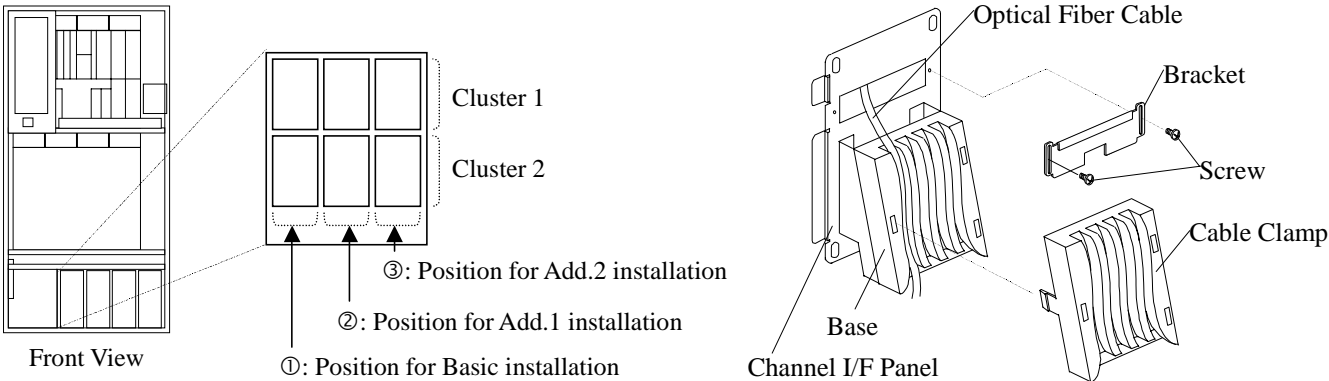


Fig 4.3.2-2 Removal of Bracket

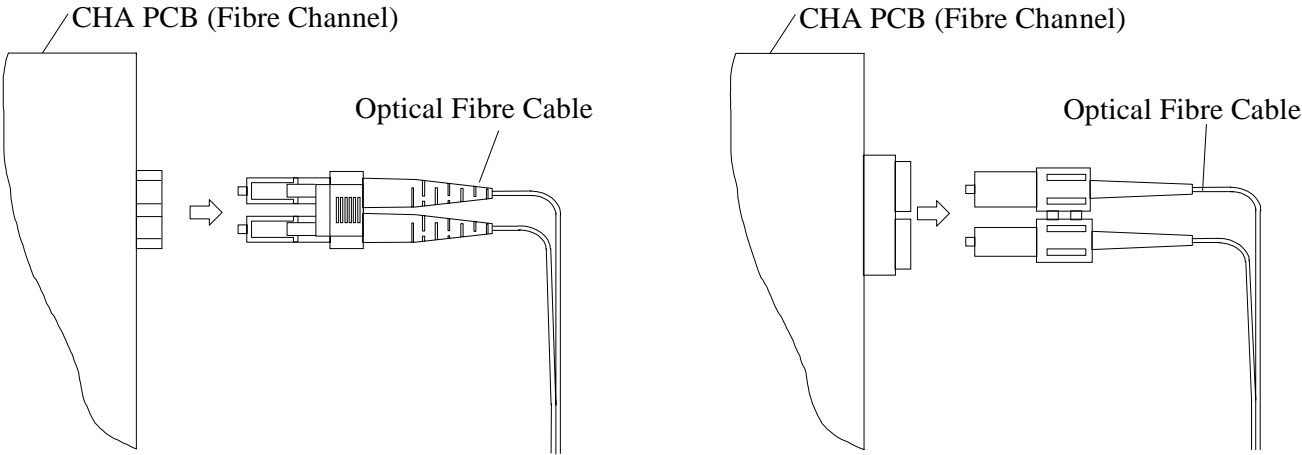


Fig. 4.3.2-3 Disconnection of Optical Fibre Cable

3-3 Removal of the PCBs

- Remove the two screws and remove the PCBs from the correct locations in the Front Logic Box referring to Fig. 4.3.2-4.
- Attach the dummy plates referring to Fig. 4.3.2-5.

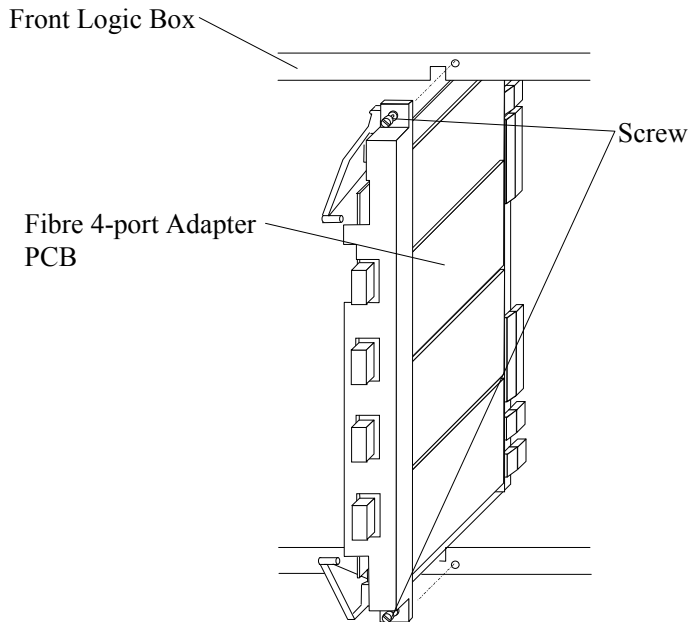


Fig. 4.3.2-4 Removal of PCB

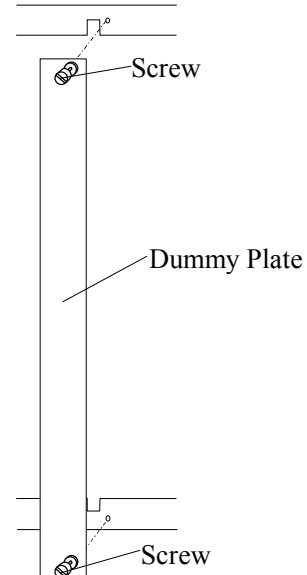


Fig. 4.3.2-5 Attachment of Dummy Plate

3-4 Removal of the Nameplate

- Remove the nameplate referring to Fig. 4.3.2-6.


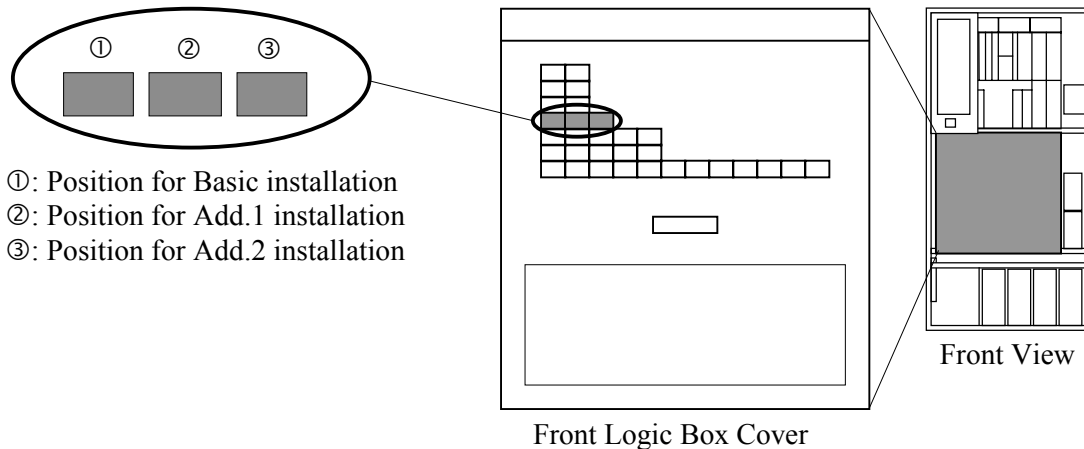


Fig. 4.3.2-6 Removal of Nameplate

4. SVP post procedure


1.

Select (CL) [OK] in response to “If de-installation of the CHA has been completed, press OK.” shown in the right figure.

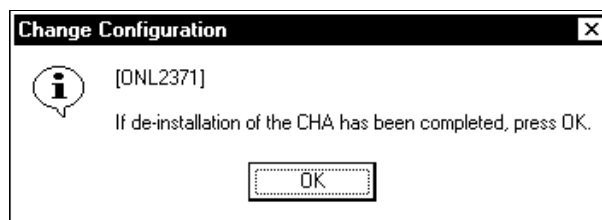

2. <Check the end of de-installation procedure>

“Renewal process has completed. Please check subsystem status.” shown in the right figure displayed. Select (CL) [OK] in response to this message.

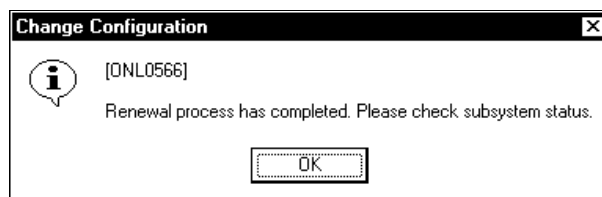


3.

“Reading subsystem configuration data...” is displayed.

“Please insert the Config FD in the FDD.” is displayed.


Insert the configuration FD into FDD, select (CL) [OK].

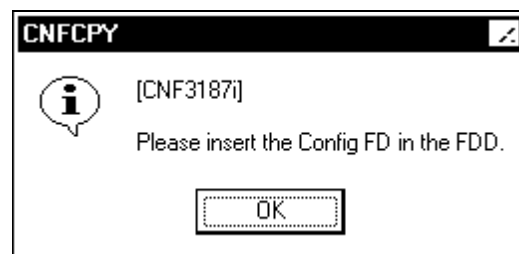

4.


When this procedure is completed, message “Please remove the Config FD.” is displayed.

Remove the FD, select (CL) [OK].

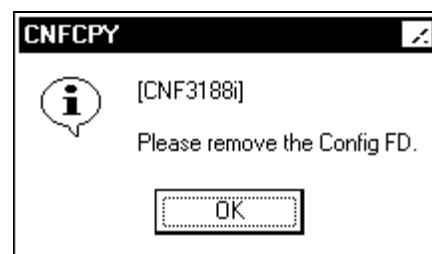

5.

After the procedure is completed, return to “Install”.
Select (CL) [File]-[Exit].

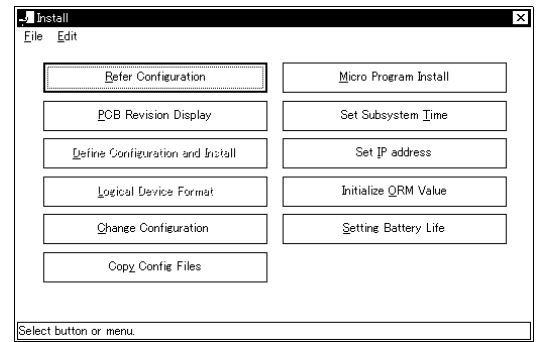

6. <Mode Change>

Change the mode to View Mode.

4.3.3 De-installation of Mainframe Fibre 8-port Adapter (DKC-F460I-8MS/8ML)


Table 4.3.3-1 Parts List

No.	Model Number	Part Name	Part No.	Quantity	Remarks
1	DKC-F460I-8MS (Short Wavelength)	Fibre 4-port Adapter PCB	5513984-A	2	
		Cable Clamp	2105506-1	2	
		Nameplate (HDS)	2105902-112	1	RSD
			2105903-112		HICAM
			2105903-212		HICEF
2	DKC-F460I-8ML (Long Wavelength)	Fibre 4-port Adapter PCB	5513984-B	2	
		Cable Clamp	2105506-1	2	
		Nameplate (HDS)	2105902-113	1	RSD
			2105903-113		HICAM
			2105903-213		HICEF


1. Setting up the New Device Structure Information

1. <Mode Change>
Change the mode to Modify Mode.
Select (CL) [Install].


2. <Start the 'Menu Dialog' screen>
Select (CL) [Change Configuration].

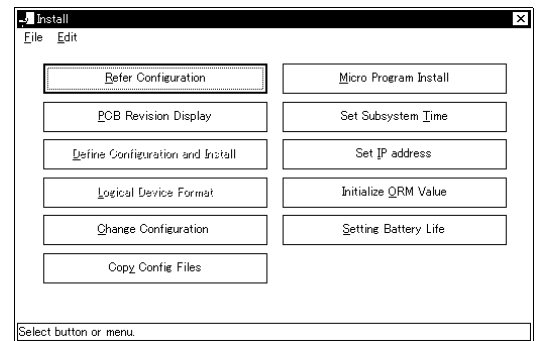

3. <Start Device Structure Setup screen>
Select (CL) [De-Installation] in the 'Menu Dialog' dialog box and select (CL) [OK].

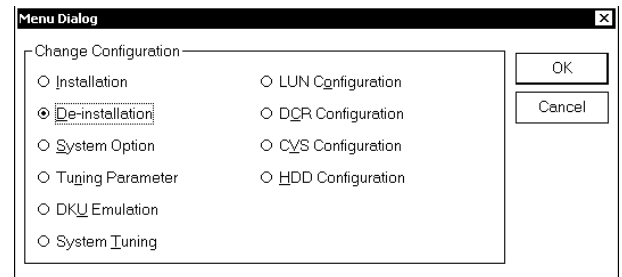


4. <Select a part to be changed>
Select (CL) [Number of Channel], and select (CL) [OK].

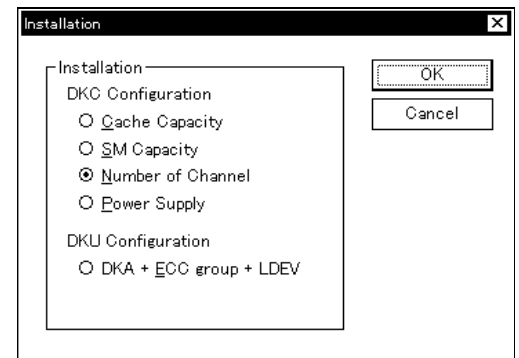


5.

Select (CL) [No] in response to “De-installation of features may cause fatal damage to subsystem. Check that any features be de-installed are not required by host operations. Data will be lost from any ECC group that are removed. Do you want to stop this process?”.

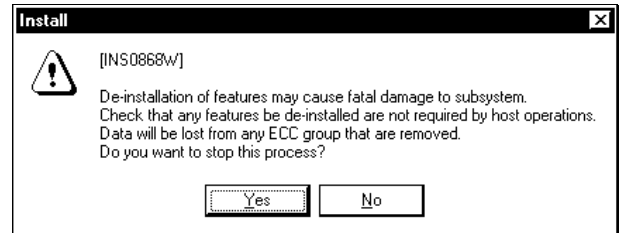

6. <Input password>

Enter the password and select (CL) [OK].

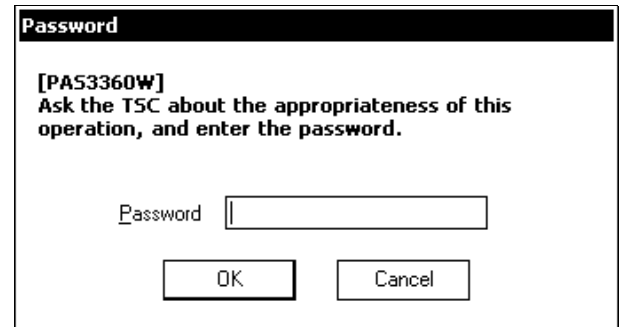**NOTICE**

This is a special (exceptional) operation that can cause a serious failure such as a system down or a data loss if a wrong part to be removed is selected, and requires an input of a password. Ask the technical support center about the appropriateness of the operation, and input the password after getting an approval of executing the operation.

7. <Update Configuration Information>


Define the item to CHA in the 'DKC Configuration' window.

Note 1: It is not possible to install or de-install plural parts at the same time.

Note 2: For Multiplatform configuration,

1. If you want to change Multiplatform into ALL SCSI, after de-installing mainframe volumes, then CHA must be de-installed.
2. If you want to change ALL SCSI into Multiplatform, after de-installing open volumes, then CHS/CHF/CHT must be de-installed.

Make sure that the entered item is correct and select (CL) [>>Next].

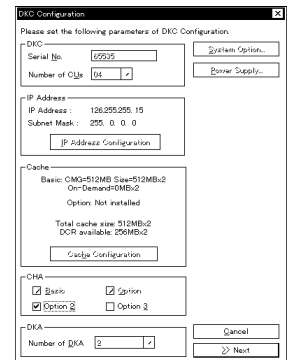


2. SVP pre procedure

1. <Start de-installation>

Select (CL) [Yes] in response to “Are you sure you want to renew subsystem?”.

When [No] is selected (CL), returns to [INST04-MF-20](#) step 3.

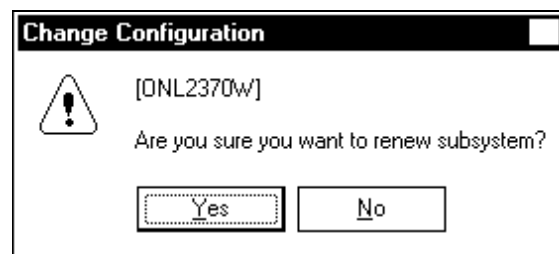

2. <Maintenance-block of PCBs other than cache or shared memory>

At this moment, maintenance blocking is performed on PCBs other than memory systems with message “The CHA is being blocked...” is displayed.

This processing is carried out on each component that is subject to de-installation.


3. <Update device structure information about PCBs other than cache or shared memory>

“The CHA is being blocked...” and “Lighting LED of the PCB...” are displayed and the device structure information update processing is performed on the current component. When the update processing is completed, the device structure information on the current component is set to [EMPTY] and the shut down LED on the PCB is lit.

When the update of device structure information on all PCBs other than those on the memory systems is completed, automatically one of the two following messages is displayed.

4.

“If de-installation of the CHA has been completed, press OK.” shown in the right figure.

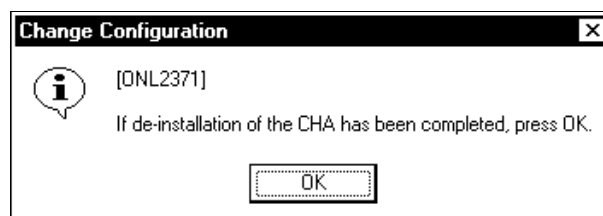

3 De-Installation Procedure of Mainframe Fibre 8-port Adapter

Note: Be sure to wear your wrist strap and attach to ground prior to performing the following work. This will ensure that the IC and LSI on the PCB are protected from static electricity.

3-1 Confirmation of the Shut Down LED (Only Non-Disruptive Procedure)

- a. Confirm that Shut Down LED is on (Fig. 4.3.3-1). If the LED is not on, connect the Maintenance Jumper to the Shut Down Connector.

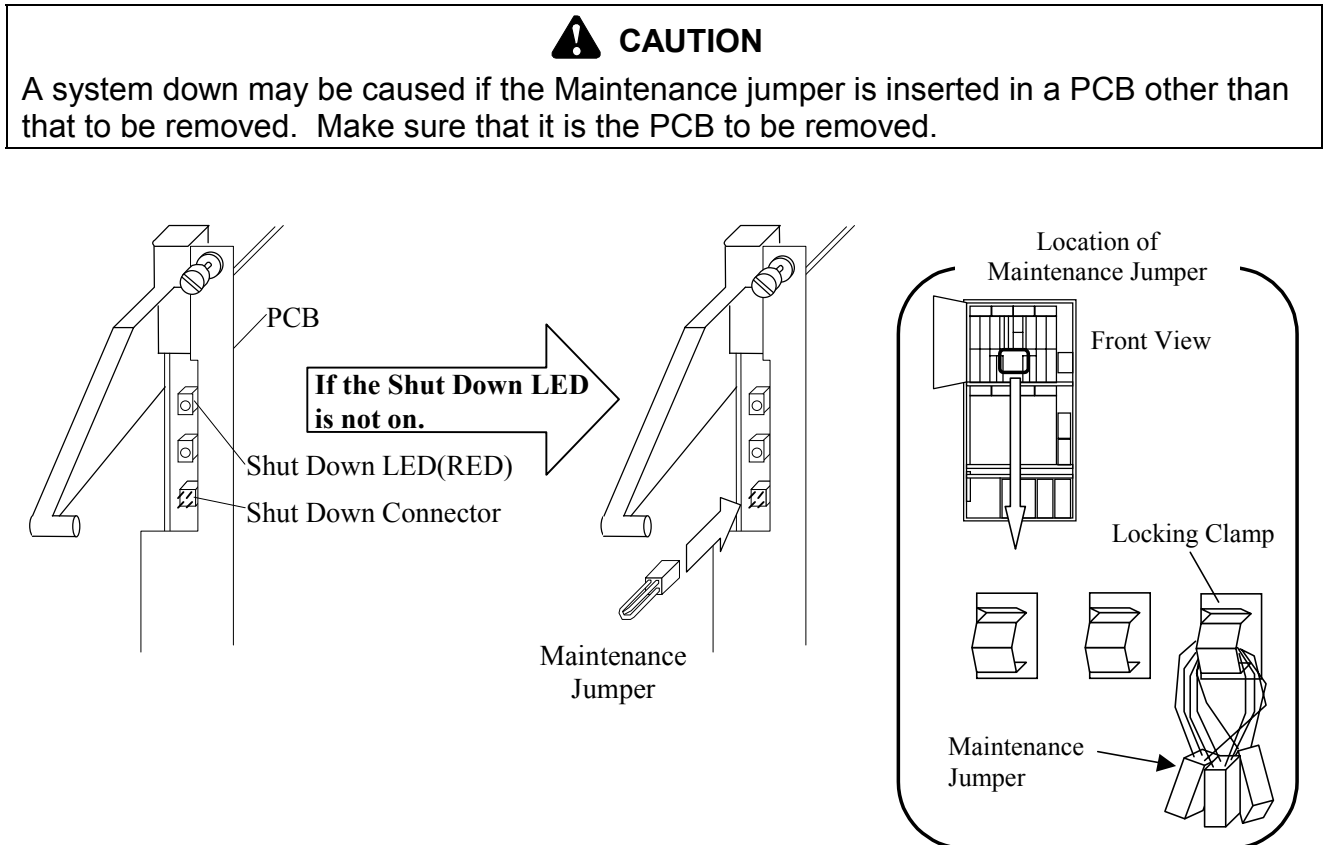


Fig. 4.3.3-1 Shut Down LED

3-2 Disconnection of the optical fibre cables

- Remove the bracket and cable clamp referring to Fig 4.3.3-2.
- Disconnect the optical fibre cables referring to Fig 4.3.3-3.
- Attach the brackets.

Table 4.3.3-2 Removal Location (Front of the unit)

Cluster	CL1							CL2						
Slot No.	A	B	C	D	E	F		G	H	J	K	L	M	
Function	CSW	DKA	CHA	CHA	CACHE	CHA	DKA	CHA	CACHE	CHA	CHA	DKA	DKA	CSW
Location No.	CSW	DKA	CHA	CHA	CACHE	CHA	DKA	CHA	CACHE	CHA	CHA	DKA	DKA	CSW
	-1A	-1B	-1C	-1D	-1E	-1F	-1F	-2G	-2H	-2J	-2K	-2K	-2L	-2M
Order of addition		Basic	Basic	Add.1		Add.2	Add.1	Basic		Add.1	Add.2	Add.1	Basic	

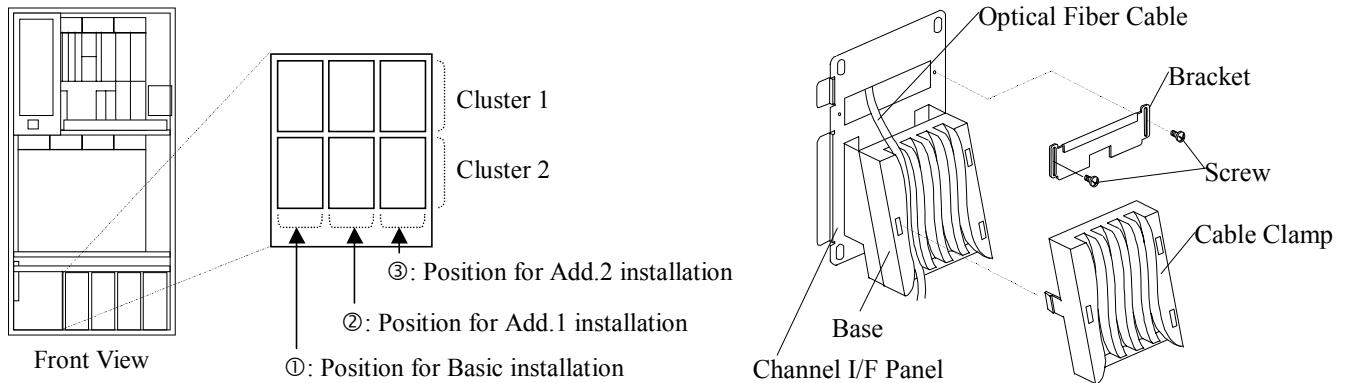


Fig 4.3.3-2 Removal of Bracket

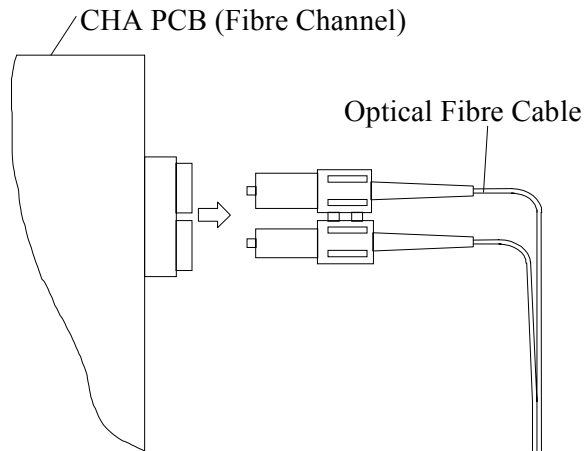


Fig. 4.3.3-3 Disconnection of Optical Fibre Cable

3-3 Removal of the PCBs

- a. Remove the two screws and remove the PCBs from the correct locations in the Front Logic Box referring to Fig. 4.3.3-4.
- b. Attach the dummy plates referring to Fig. 4.3.3-5.

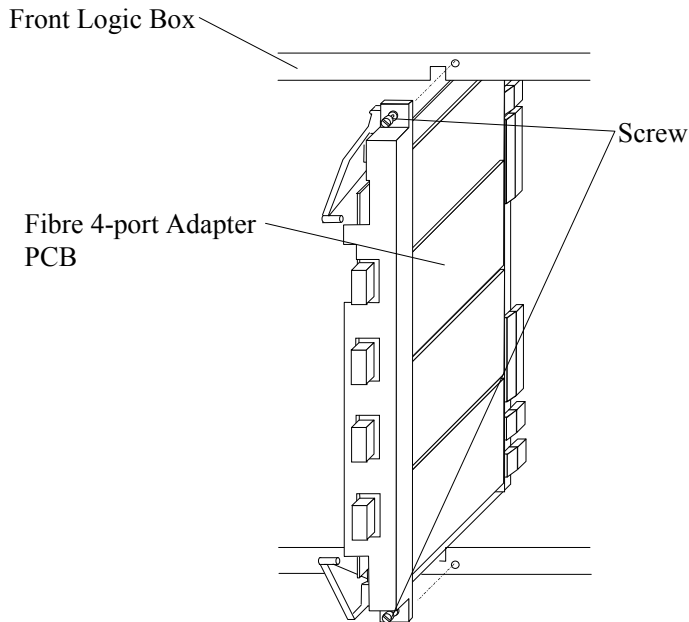


Fig. 4.3.3-4 Removal of PCB

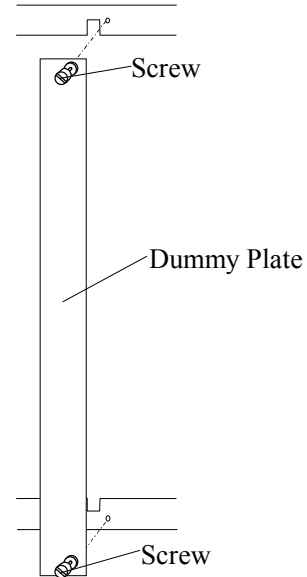


Fig. 4.3.3-5 Attachment of Dummy Plate

3-4 Removal of the Nameplate

- a. Remove the nameplate referring to Fig. 4.3.3-6.


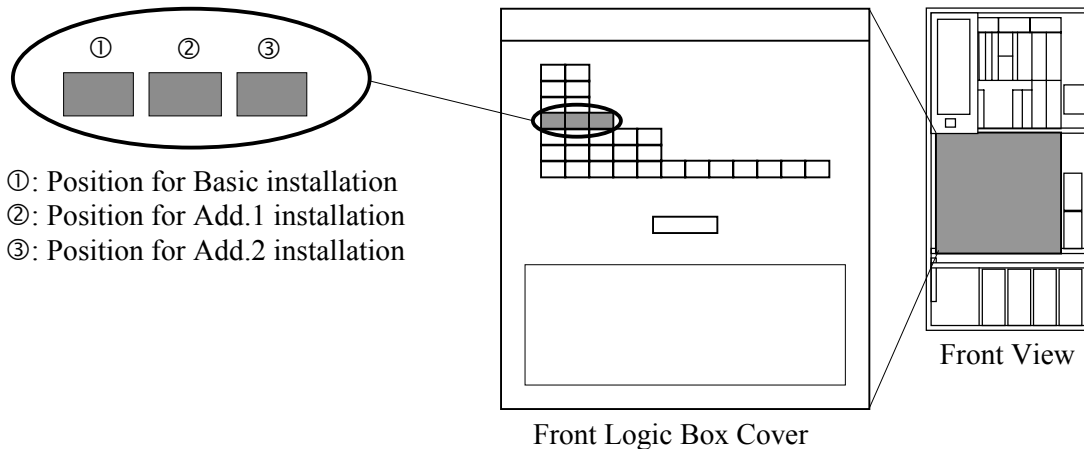


Fig. 4.3.3-6 Removal of Nameplate

4. SVP post procedure


1.

Select (CL) [OK] in response to “If de-installation of the CHA has been completed, press OK.” shown in the right figure.

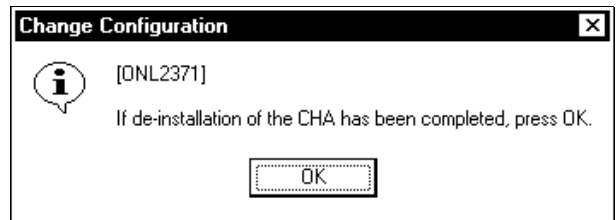

2. <Check the end of de-installation procedure>

“Renewal process has completed. Please check subsystem status.” shown in the right figure displayed. Select (CL) [OK] in response to this message.

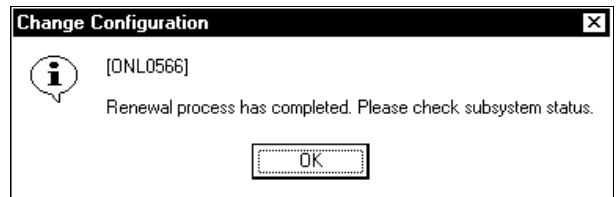


3.

“Reading subsystem configuration data...” is displayed.

“Please insert the Config FD in the FDD.” is displayed.


Insert the configuration FD into FDD, select (CL) [OK].

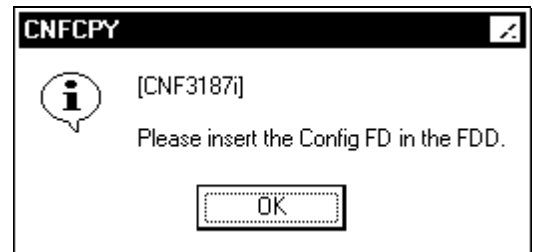


4.

When this procedure is completed, message “Please remove the Config FD.” is displayed.

Remove the FD, select (CL) [OK].

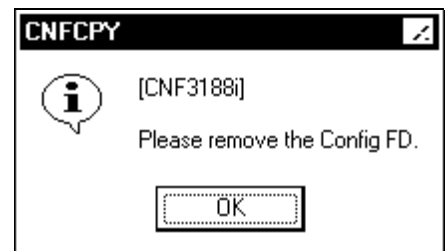

5. After the procedure is completed, return to “Install”.
Select (CL) [File]-[Exit].

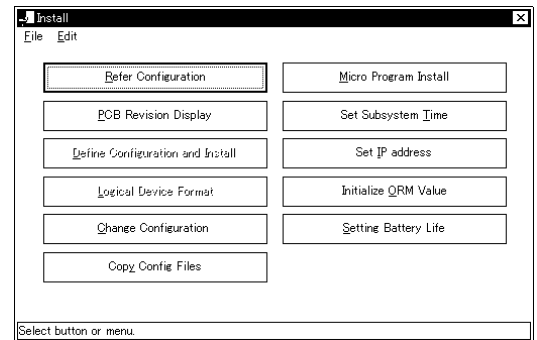

6. <Mode Change>
Change the mode to View Mode.

4.4 De-Installation of SVP High Reliability Kit (DKC-F460I-SVP)

Table 4.4-1 Parts List

No.	Model Number	Part Name	Part No.	Quantity	Remarks
1	DKC-F460I-SVP	SVP ASSY	2105598-B	1	
		SVPPS BOX	5513997-A	1	
		Stopper (SVP-WR)	5515587-1	1	
		Rubber (SVP-WR)	5515588-1	1	
		Stopper (SVP-WF)	5515586-1	1	
		Screw	BS306N	4	
		Screw	SB408N	3	
		Screw (Stopper)	5513661-408	2	
		Hinge (SVP)	3254970-1	2	
		Nameplate (HDS)	2105902-105	1	RSD
			2105903-105		HICAM
			2105903-205		HICEF
		Nameplate (HP)	2105902-205	1	RSD
			2105903-305		HICAM
			2105903-405		HICEF

1. Operating the Additional SVP

When the basic SVP and Additional SVP are operating as a Master SVP and Standby SVP respectively, it is not required to operate the additional SVP. You may start from Item 2, "Operating the Basic SVP".



CAUTION

It is not a problem if a SIM (SIMRC = 7410ff, 7ff200, or 7ff201) occurs during execution of this procedure. Erase the SIM immediately.

1-1 <Procedure of SVP switching>

(1) <Change the mode>

Change the [Modify Mode].

(2) <Open the [Maintenance]>


(Multi Cabinet Model)

In the 'Maintenance' window, check and select (CL) [DKC] to be replaced.


(Single Cabinet Model)

In the 'Maintenance' window, check and select (CL) [Controller] to be replaced.

(Multi Cabinet Model)

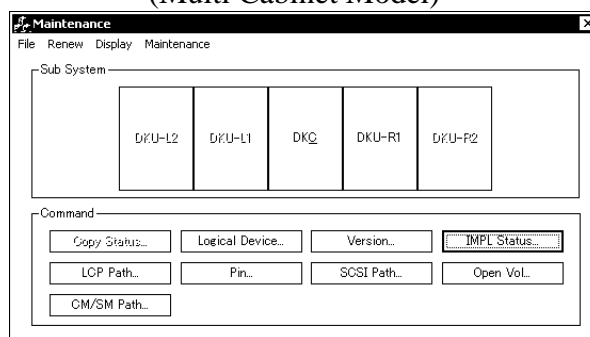

(Single Cabinet Model)

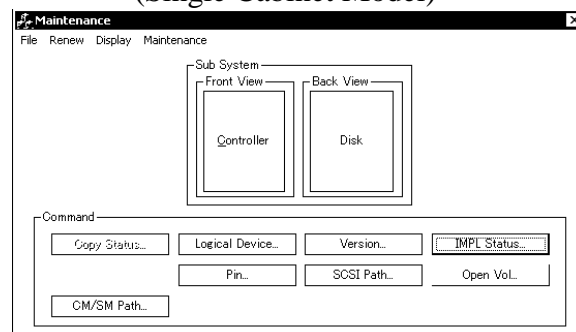

(3) <Open the [SVP] screen>

(Multi Cabinet Model)


Select (CL) the [SVP] from 'DKC' screen.

(Single Cabinet Model)


Select (CL) the [SVP] from 'Controller' screen.

Valid [XXXXXX] values are listed below.

(Multi Cabinet Model)

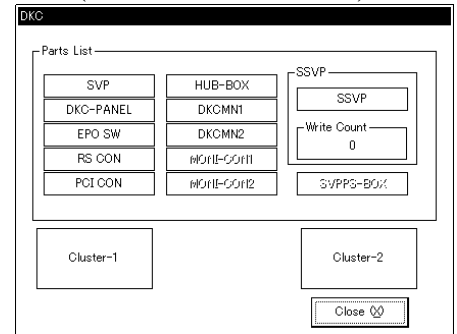


(Single Cabinet Model)

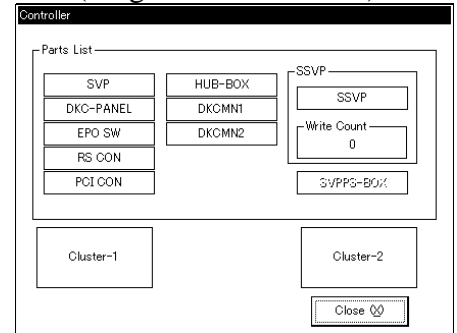


(4) <Select the [Switch SVP]>

Select (CL) the [Switch SVP], and select (CL) the [Excute].

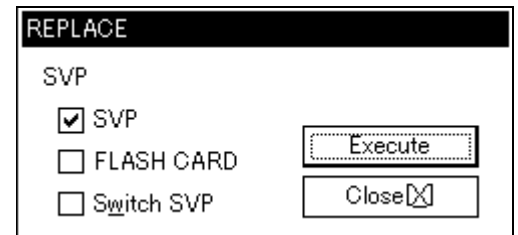

(5) <Checking beginning of the SVP switching>

A message, "SVP switching has started," is displayed. Make sure that the Additional SVP is powered off automatically.

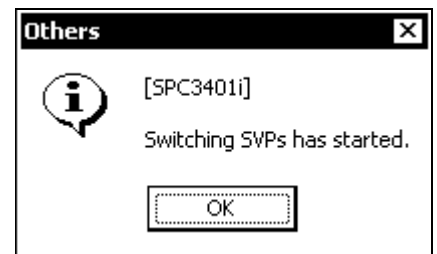

(6) <Checking the SVP switching>

Make sure that the Basic SVP is powered on automatically. Also make sure that the SVP is rebooted automatically after it is powered on.

2. Operating the Basic SVP

2-1 Canceling the setting duplication of the Basic SVP

(1) <Changing the mode>


Change the mode by selecting [Modify Mode].

(2) <Opening the Install window>


Select (CL) [Install] from the [SVP] menu.

(3) <Selecting [Set SVP IP Address]>

Select (CL) [Set IP Address] in the Install window.

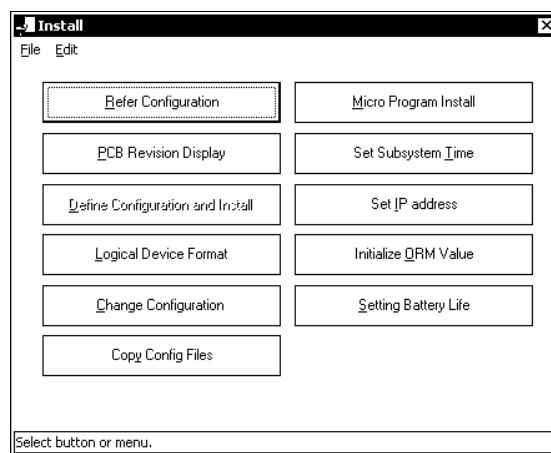

- (4) <Canceling the setting of SVP duplication>
 (a) Select Cancel (CL) the selection of the [Use Duplex SVP] in the External IP Address box.

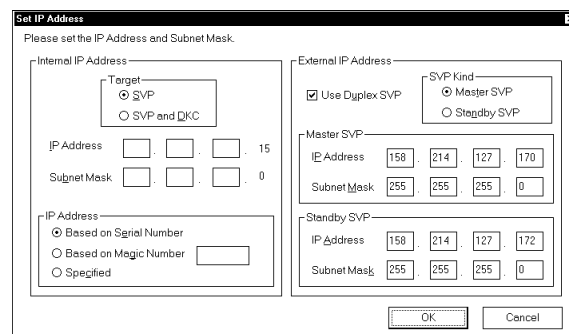


The 'Set IP Address' dialog box is shown. It has a title bar 'Set IP Address' and a subtitle 'Please set the IP Address and Subnet Mask.' The dialog is divided into several sections:


- Internal IP Address:** Contains a 'Target' section with radio buttons for 'SVP' (selected) and 'SVP and D/C'. Below are input fields for 'IP Address' (158.214.127.15) and 'Subnet Mask' (255.255.255.0).
- External IP Address:** Contains a 'Use Duplex SVP' checkbox (checked). To its right is the 'SVP Kind' section with radio buttons for 'Master SVP' (selected) and 'Standby SVP'.
- Master SVP:** Contains input fields for 'IP Address' (158.214.127.170) and 'Subnet Mask' (255.255.255.0).
- Standby SVP:** Contains input fields for 'IP Address' (158.214.127.172) and 'Subnet Mask' (255.255.255.0).
- IP Address:** A section with radio buttons for 'Based on Serial Number' (selected), 'Based on Magic Number', and 'Specified'.

At the bottom right are 'OK' and 'Cancel' buttons.

- (5) <Inserting the Config FD>
 Insert the Config FD into the FDD and select (CL) [OK].

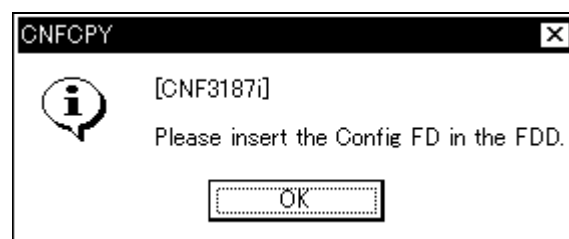

- (6) <Removing the Config FD>
 When the copying of the Config is completed, a message, "Please remove the Config FD." is displayed. Remove the FD and select (CL) [OK].

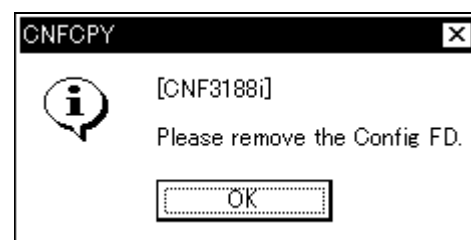

- (7) <Confirming rebooting of the SVP>
 Select (CL) [OK].



3. De-Installation Procedure of SVP High Reliability Kit

3-1 Disconnect the cables.

a. Disconnect the cables from the SVPPS BOX.

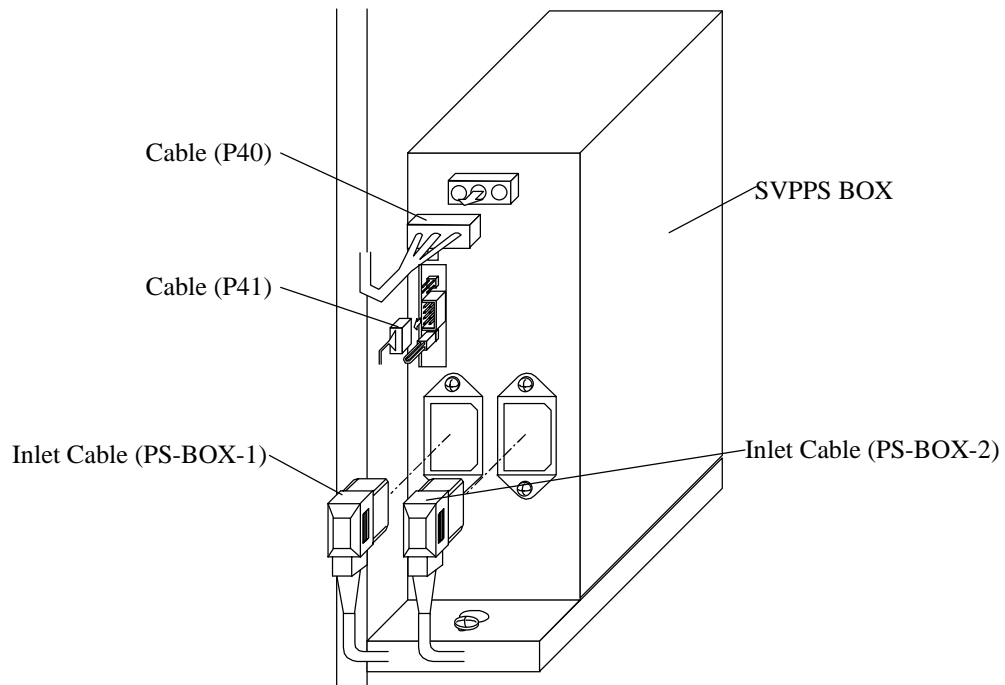


Fig. 4.4-1 Disconnection of Cables

b. Disconnect the cables from the RS CON.

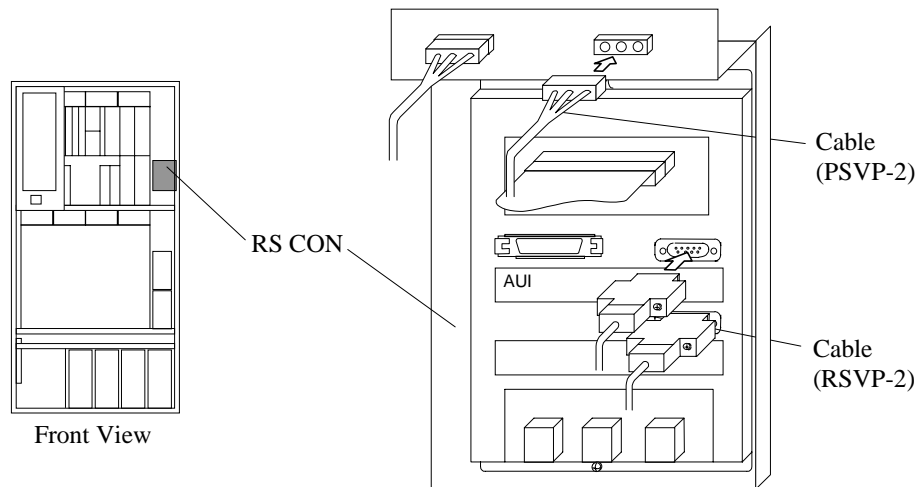


Fig. 4.4-2 Disconnection of Cables

c. Disconnect the cables from the HUB BOX.

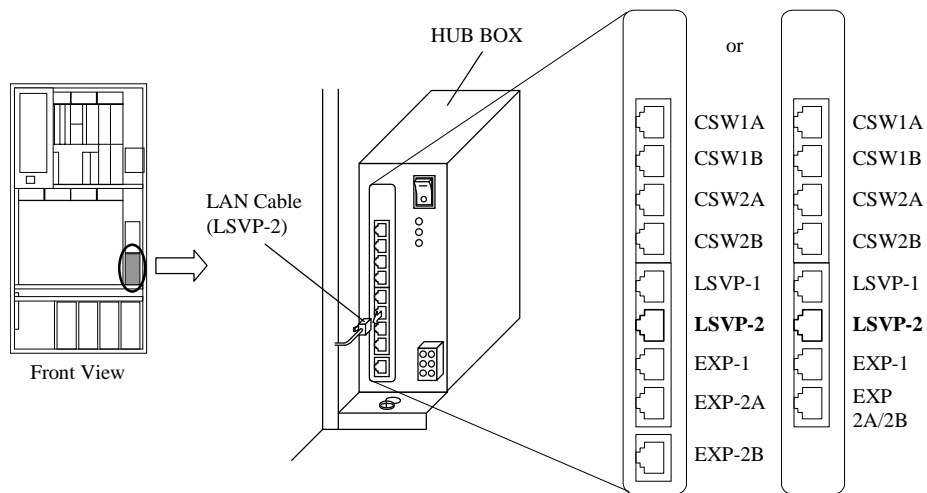


Fig. 4.4-3 Disconnection of Cables

3-2 Remove the cables.

a. Open the locking clamps and remove the cables.

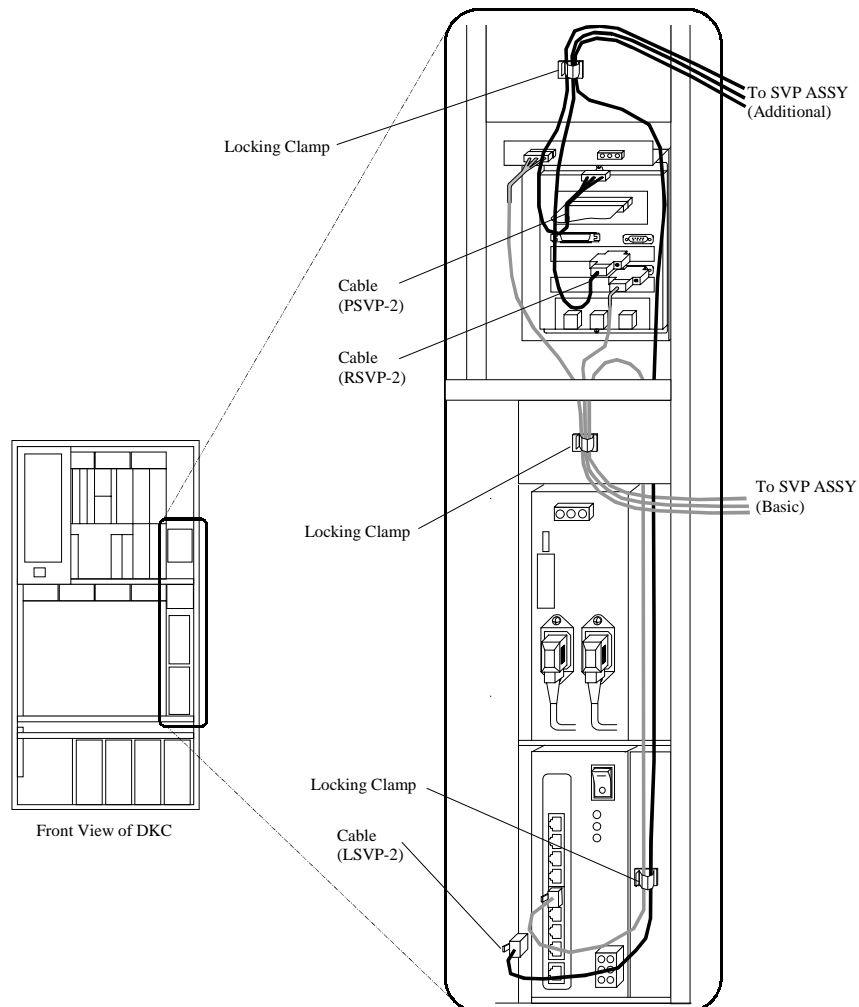


Fig. 4.4-4 Removal of Cables

3-3 Remove the SVPPS BOX.

- a. Loosen the screw and remove the SVPPS BOX.

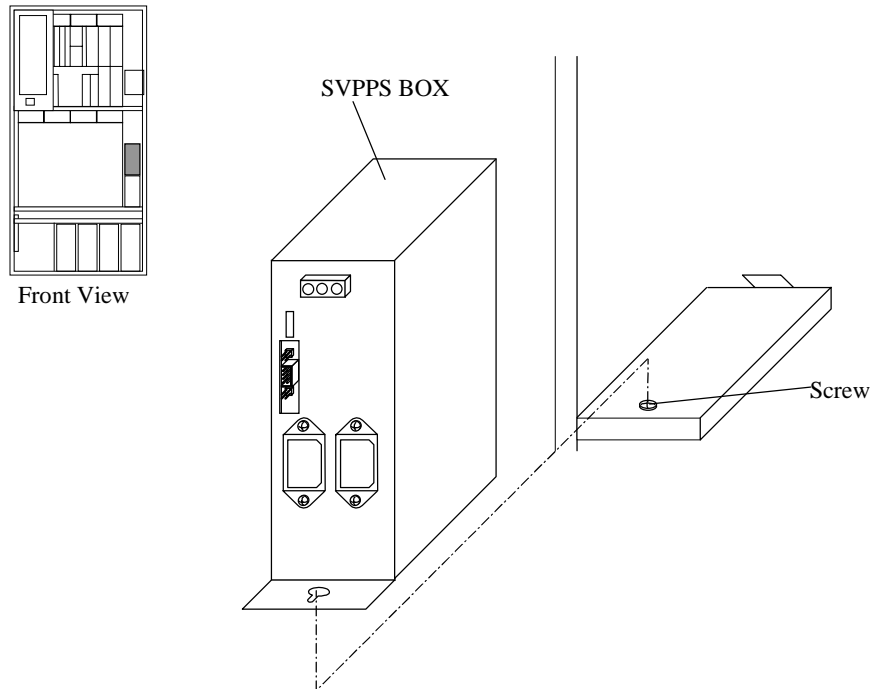


Fig. 4.4-5 Removal of SVPPS BOX

3-4 Remove the SVP Assy.

- Loosen the two screws and remove the SVP cover.
- Loosen the screws and remove the stoppers
- Pull out the SVP Assy from the cabinet.
- Attach the SVP cover with the screws.

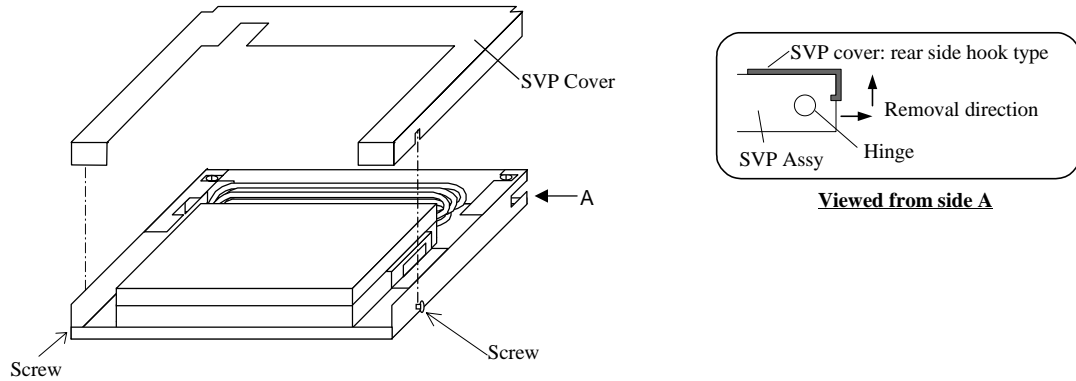


Fig. 4.4-6 Removal of SVP Cover

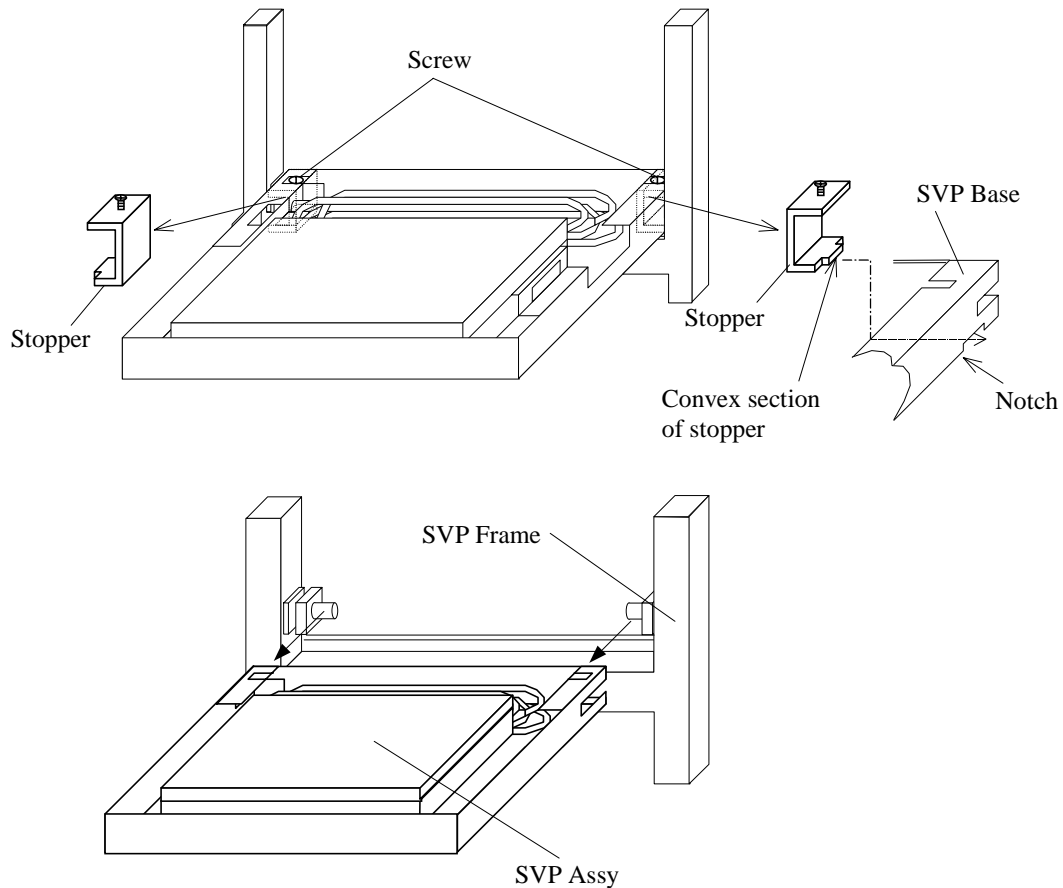


Fig. 4.4-7 Removal of SVP ASSY

3-5 Remove the stopper.

- a. Remove the two screws and remove the Stopper (SVP-WF).

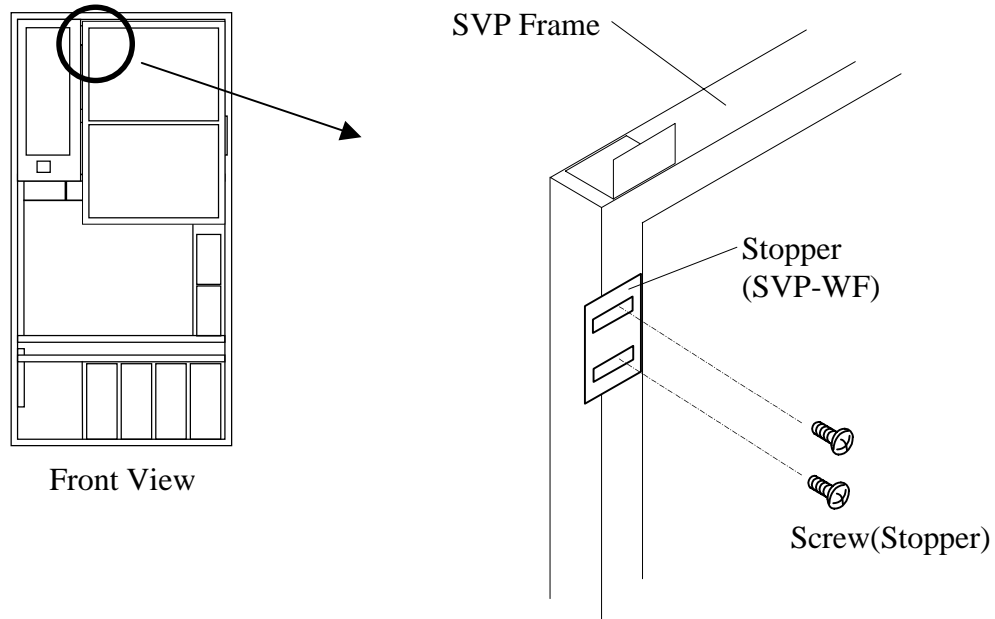


Fig. 4.4-8 Removal of Stopper

- b. Remove the two screws and remove the Stopper (SVP-WR).

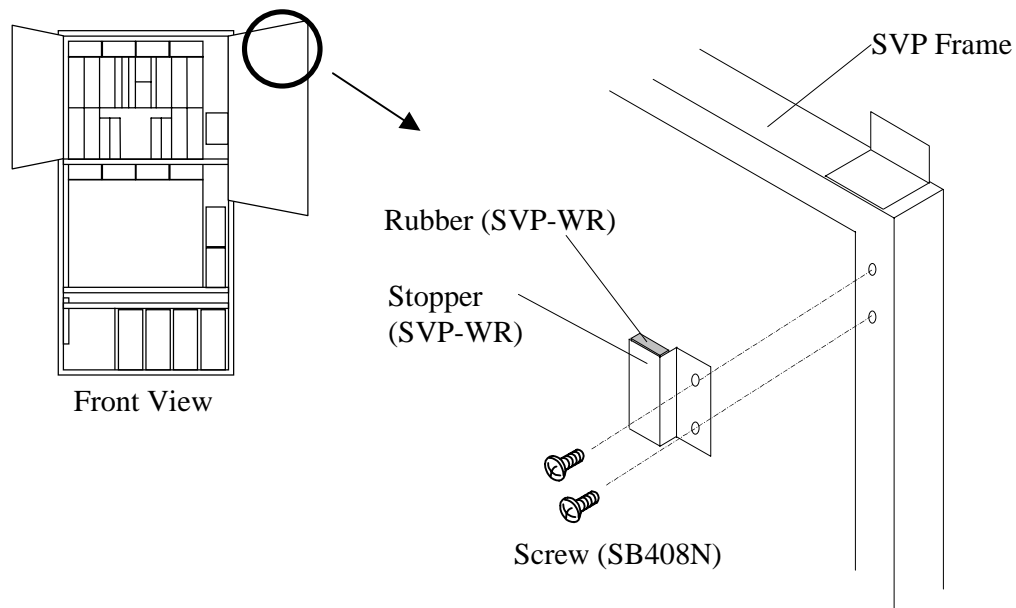


Fig. 4.4-9 Removal of Stopper

c. Remove the four screws and remove the Hinges (SVP).

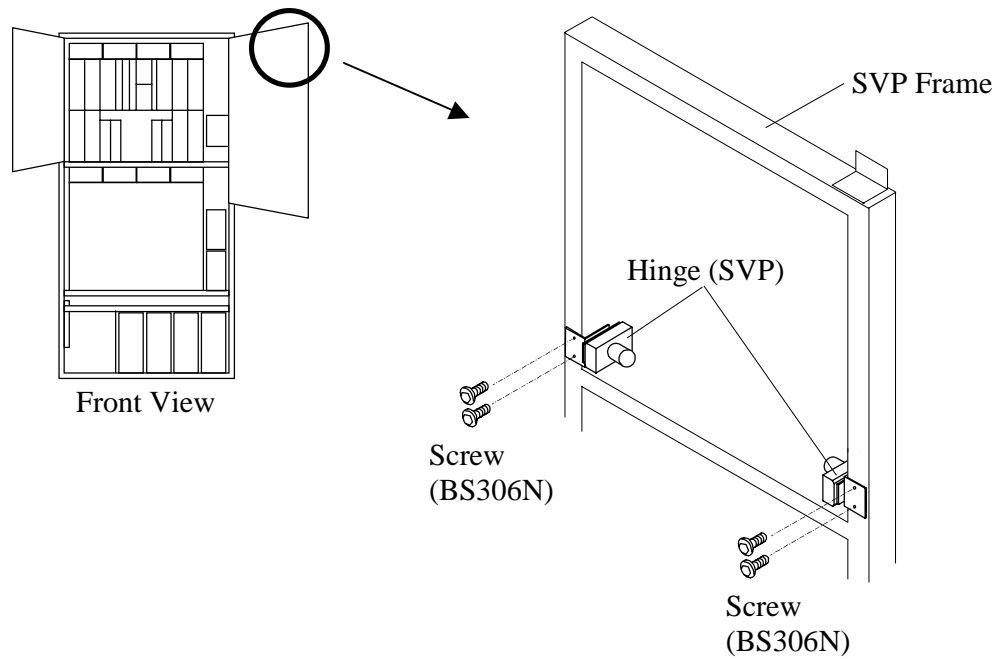


Fig. 4.4-10 Removal of Hinges

3-6 Remove the Nameplate.

a. Remove the nameplate from the Front Logic Box cover.


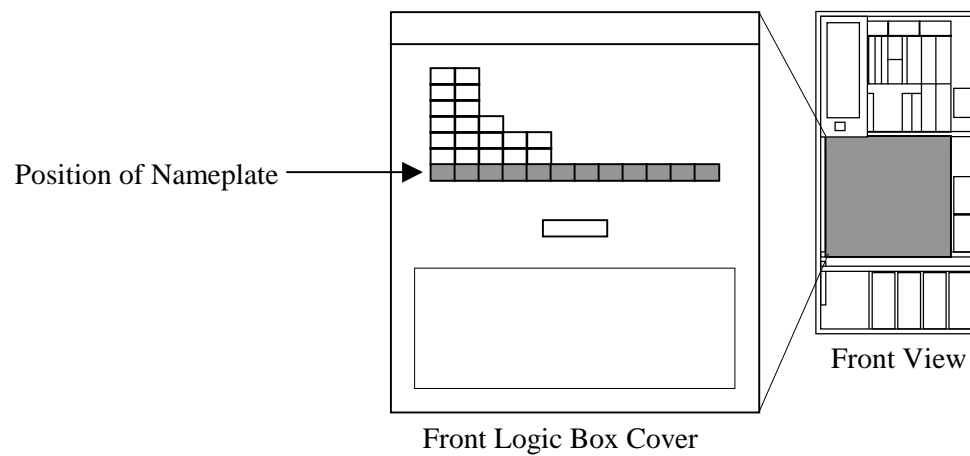


Fig. 4.4-11 Removal of Nameplate

4. Executing SSVP Reset

4-1 Execute the SSVP reset by pressing the SSVP ALARM RESET switch.

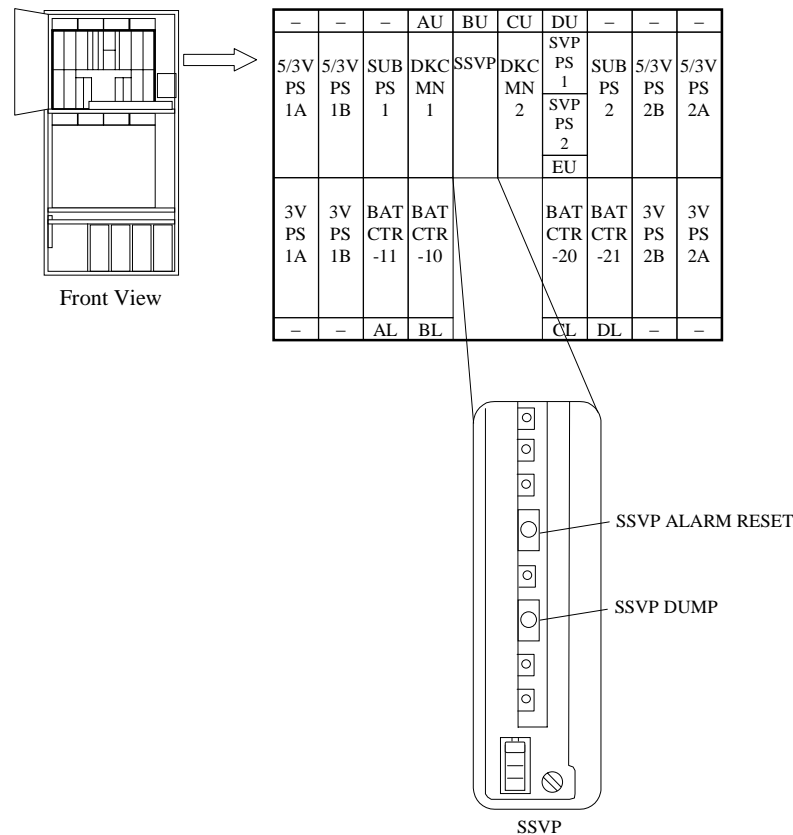

4.5 De-Installation of PCI I/F Connector (DKC-F460I-18)

Table 4.5-1 Parts List

No.	Model Number	Part Name	Part No.	Quantity	Remarks
1	DKC-F460I-18	PCI CON	3257397-A	1	
		Bracket (460)	5517954-1	1	for DKC460I
		Bracket (465)	5513818-1	1	for DKC465I
		Nameplate (HDS)	2105902-104	1	RSD
			2105903-104		HICAM
			2105903-204		HICEF

1. De-Installation Procedure of PCI I/F Connector

Be sure to wear your wrist strap and attach to ground prior to performing the following work. This will ensure that the IC and LSI on the PCB are protected from static electricity.

1-1 Confirm that the REMOTE/LOCAL Switch of DKC Panel is set to LOCAL. If not, set the REMOTE/LOCAL Switch to LOCAL.

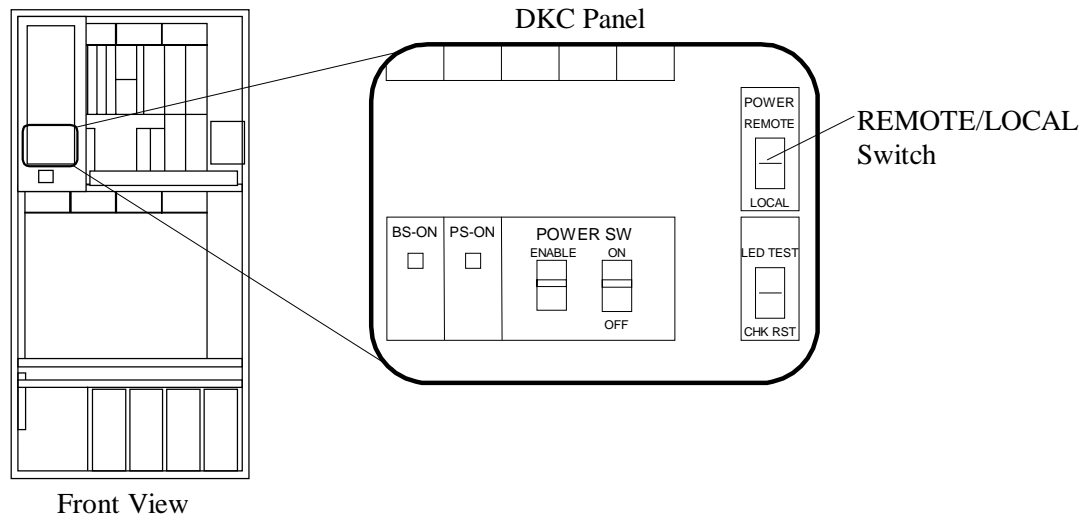


Fig. 4.5-1 Setting of REMOTE/LOCAL Switch

1-2 Connect the Maintenance jumper to the socket on the DKCMN1 and DKCMN2.

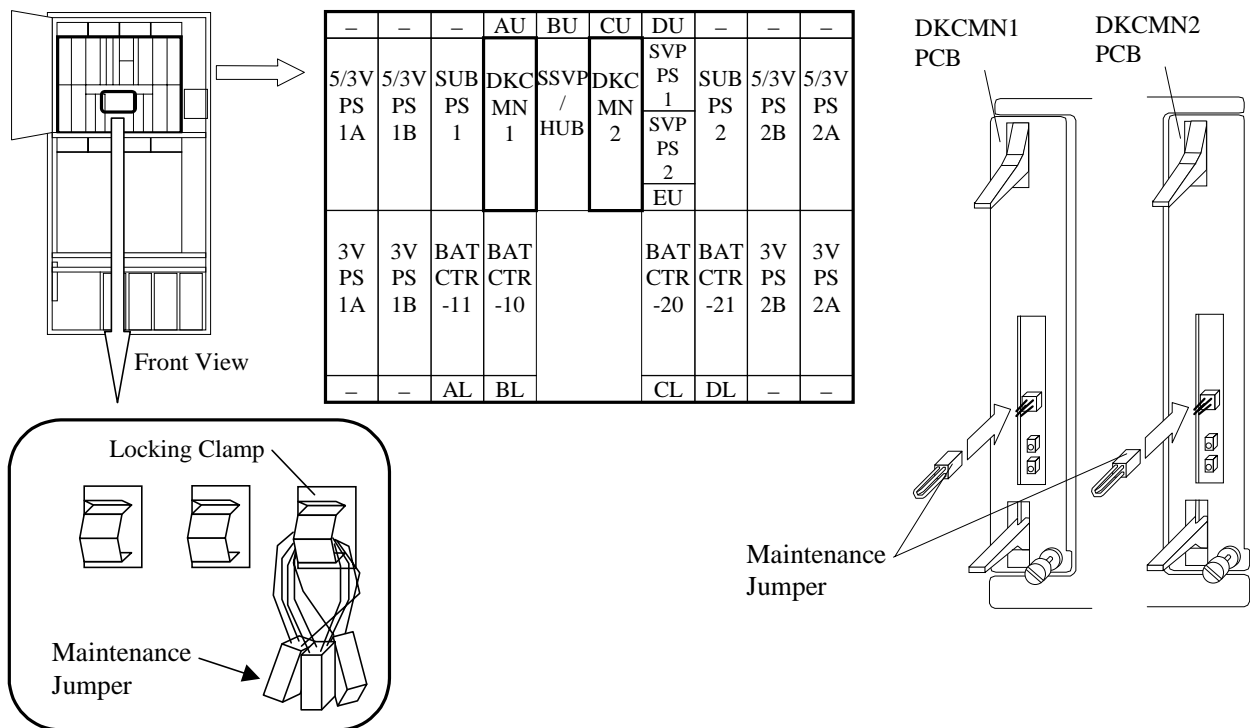


Fig. 4.5-2 Connection of Jumper Plug

1-3 Set the jumper connectors (JP1 and JP2) of the PCI CON.

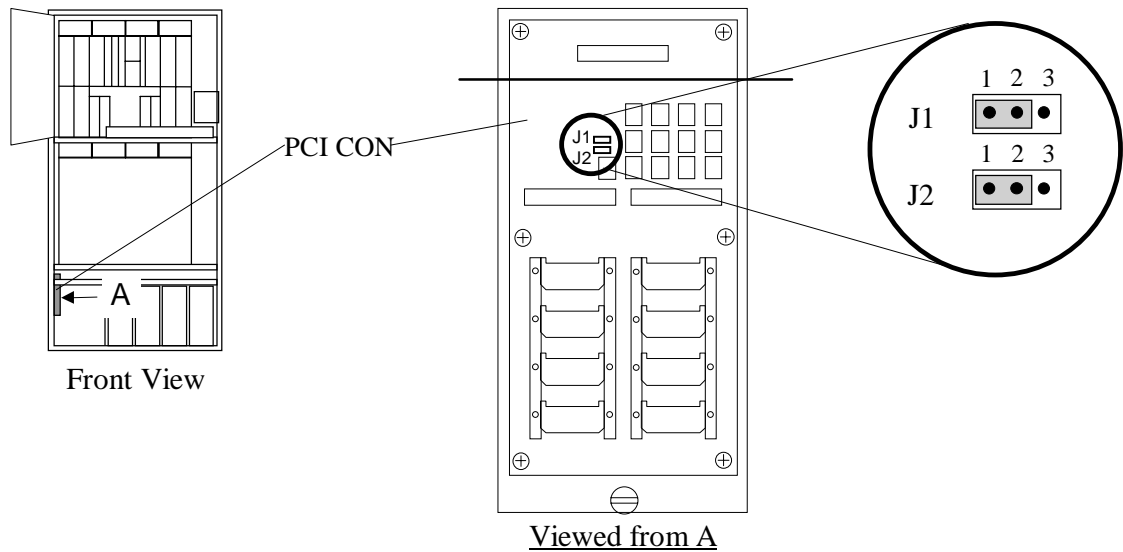


Fig. 4.5-3 Setting of Jumper Plug

1-4 Remove the PCI CON PCB.

- Loosen the screw ① and remove the screw ② from the base plate.
- Slide the plate and turn it using the screw ① as an axis.
- Remove the PCI CON panel from the cable.
- Loosen the screw ③ and remove the PCI CON panel in the lower left position of the DKC.
- Return the plate as it was and tighten the screws ① and ②.

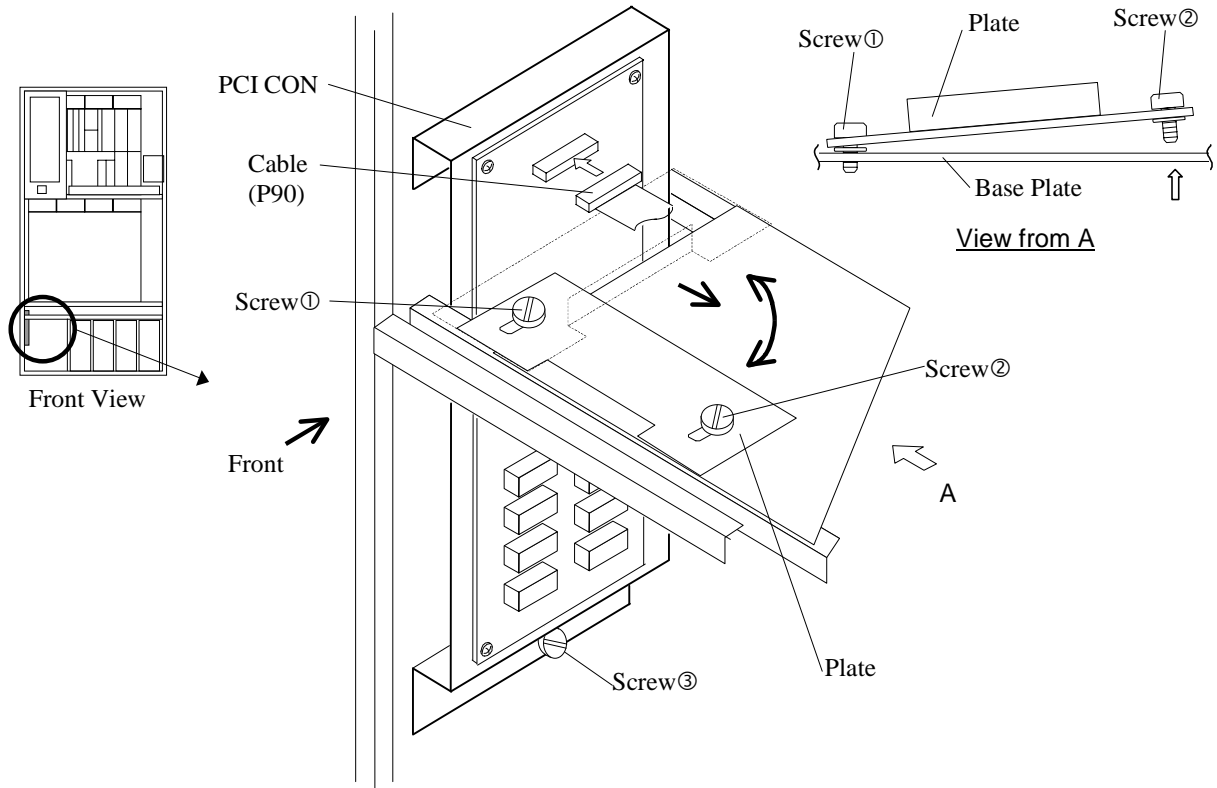


Fig. 4.5-4 Removal of PCI CON PCB

- f. Remove the screw and remove the bracket (465).
- g. Attach the screw.

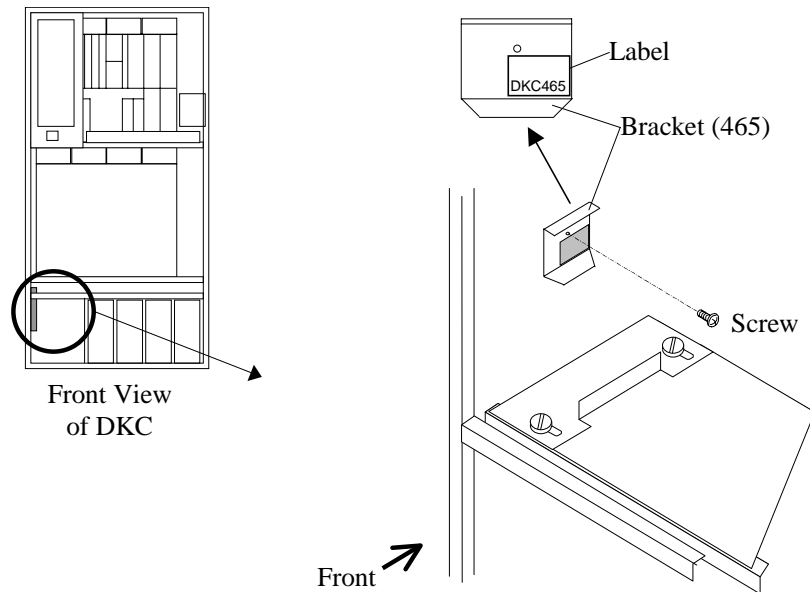


Fig. 4.5-5 Removal of Bracket

1-5 Disconnect the Maintenance jumper plug from the socket on the DKCMN.

1-6 Remove the nameplate.

- a. Remove the nameplate.

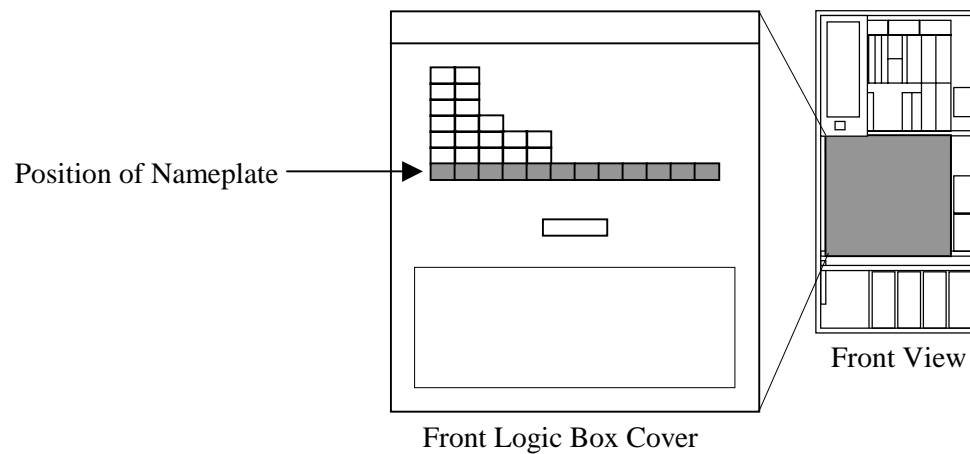


Fig. 4.5-6 Removal of Nameplate

4.6 De-Installation of UPS Connection Kit (DKC-F460I-UPS)

Table 4.6-1 Parts List

No.	Model Number	Part Name	Part No.	Quantity	Remarks
1	DKC-F460I-UPS	SH307-B	5513986-B	2	DKCMN
		SH298-A	5513547-A	1	UPS CON
		SH302-C	5513988-C	1	DKC Panel
		DSUB Cable	5485510-15	4	
		Cable	3261826-D	1	Label: PA-1 – P5
		Repeat Binder	5409042-2	2	
		Bracket (460)	5517954-1	1	for DKC460I
		Bracket (465)	5513818-1	1	for DKC465I
		Nameplate (HDS)	2105902-114	1	RSD
			2105903-114		HICAM
			2105903-214		HICEF
		Nameplate (HP)	2105902-214	1	RSD
			2105903-314		HICAM
			2105903-414		HICEF

1. De-Installation Procedure of UPS Connection Kit

Note: Be sure to wear your wrist strap and attach to ground prior to performing the following work. This will ensure that the IC and LSI on the PCB are protected from static electricity.

1. Replace the DKC Panel.
 - a. Loosen the screw. Pull the plate forward, then lift up and remove it.

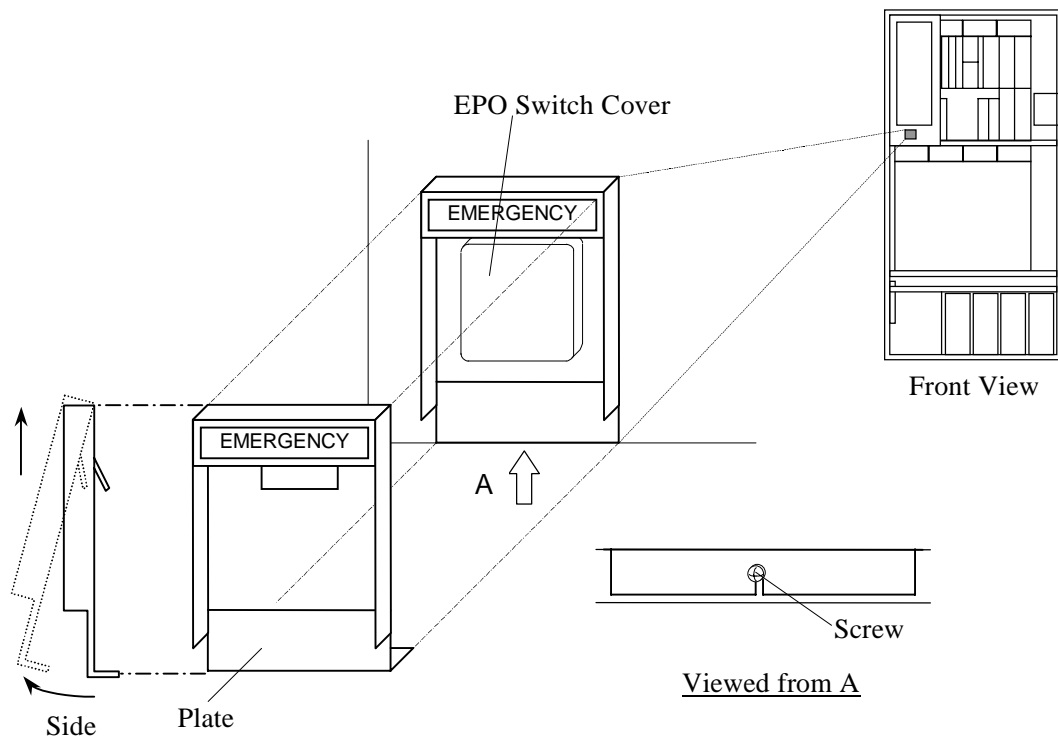


Fig. 4.6-1 Removal of Plate

- b. Remove the EPO Switch cover.

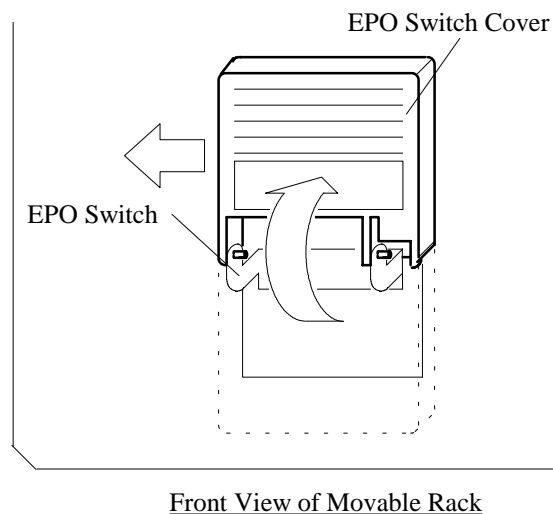


Fig. 4.6-2 Removal of EPO Switch Cover

- c. Loosen the three screws and remove the plate.

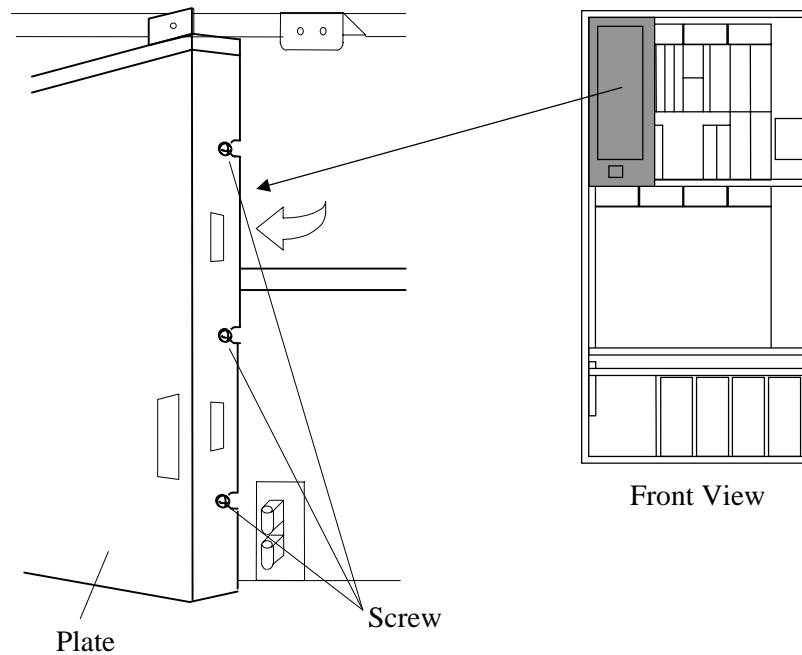


Fig. 4.6-3 Removal of Plate

- d. Disconnect the cables from the DKC Panel PCB.
 e. Loosen six screws and remove the DKC Panel PCB for UPS.
 f. Install the DKC Panel PCB, which is a basic component, by fastening it with the screws.
 g. Connect the cables to the PCB.

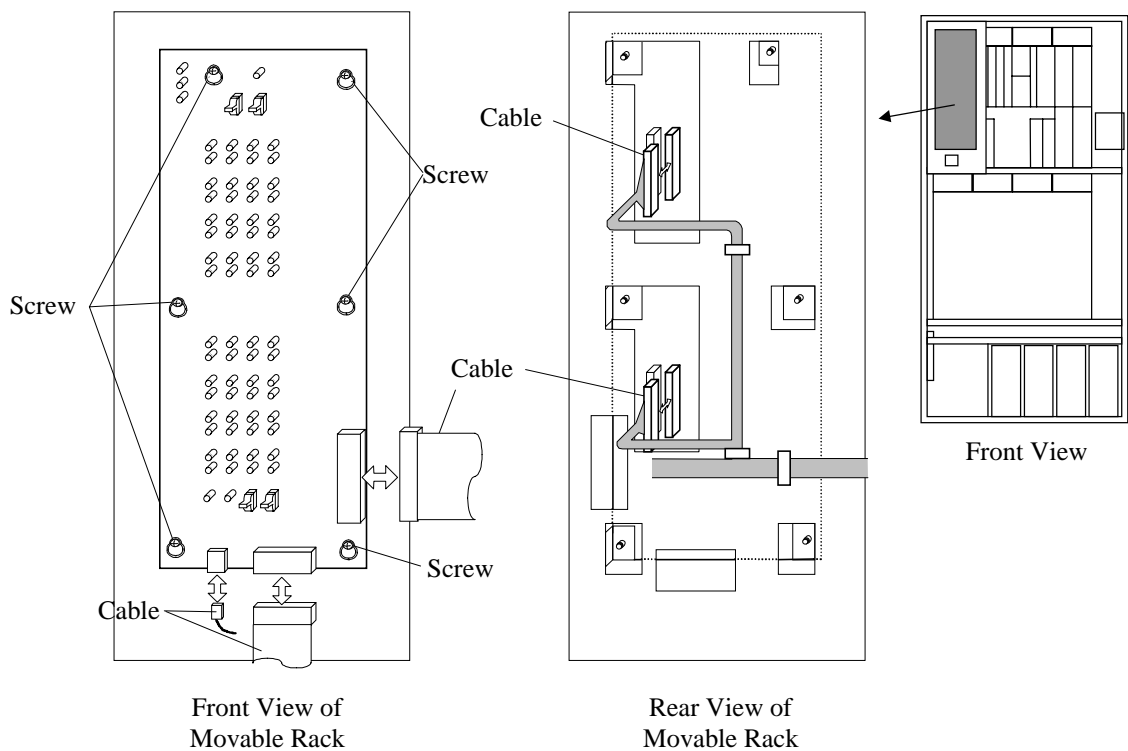


Fig. 4.6-4 Removal of PCB

- h. Attach the plate to the Movable rack and fasten the three screws. Refer to Fig. 4.6-3.
 - i. Attach the EPO Switch cover. Refer to Fig. 4.6-2.
 - j. Attach the plate and fasten the screw. Refer to Fig. 4.6-1.
2. Replace the DKCMN.
- a. Disconnect the cables from the DKCMN PCBs.
 - b. Loosen the screw and remove the DKCMN PCB for UPS.

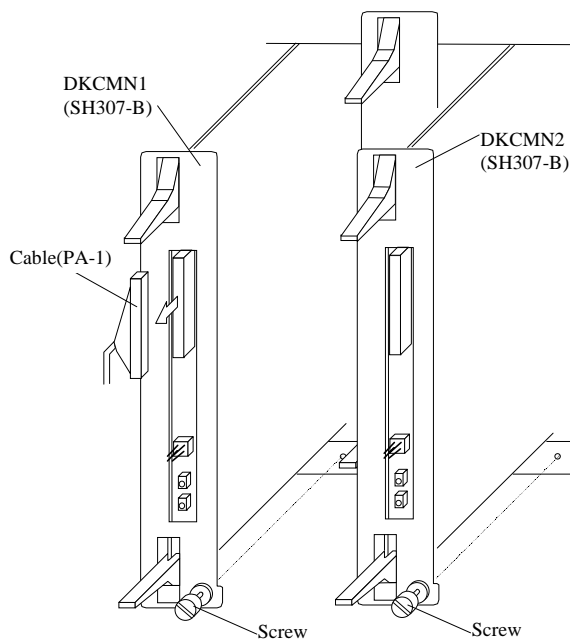


Fig. 4.6-5 Removal of DKCMN for UPS

- c. Install the DKCMN PCB, which is a basic component, by fastening it with the screw.

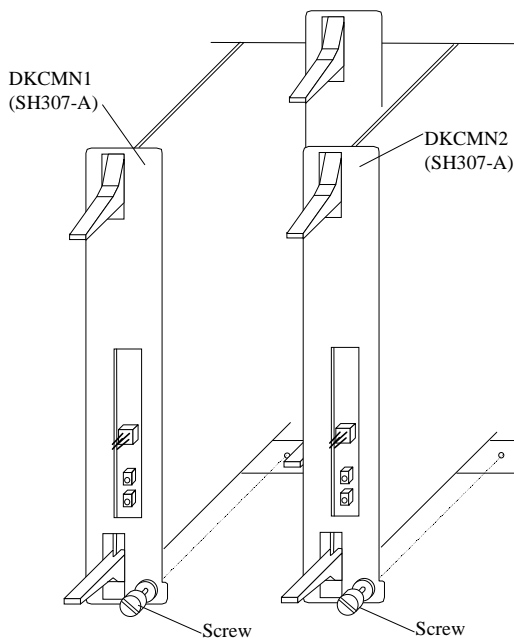


Fig. 4.6-6 Installation of DKCMN (Basic Component)

3. Disconnect the DSUB Cables.
 - a. Disconnect the DSUB cables from the UPS CON.

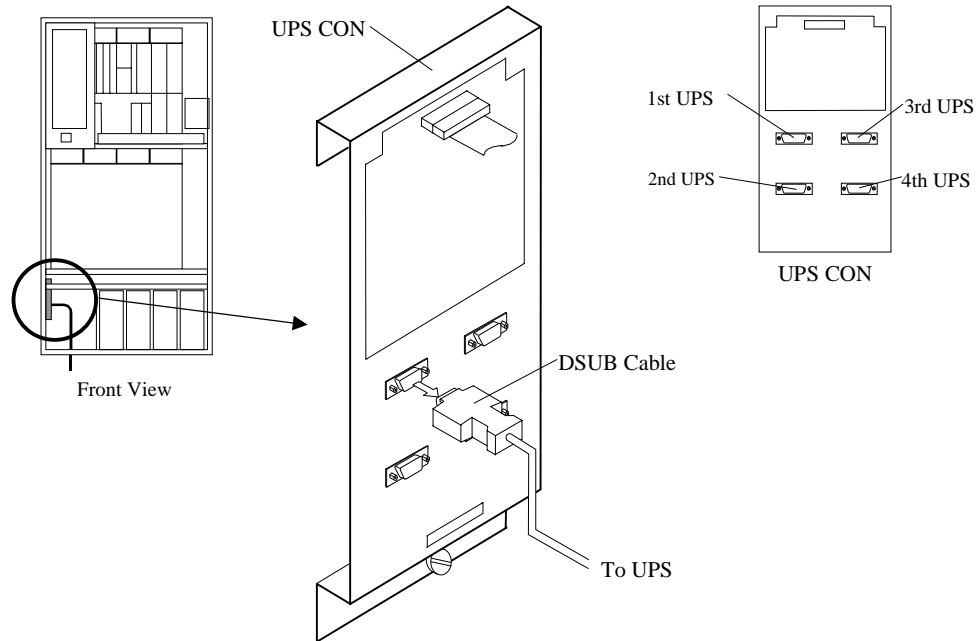


Fig. 4.6-7 Disconnection of DSUB Cables

4. Remove the UPS CON.
 - a. Loosen the screw① and remove the screw② from the base plate.
 - b. Slide the plate and turn it using the screw① as an axis.
 - c. Remove the cable(P5) from the UPS CON.
 - d. Remove the UPS CON by loosening the screw③.
 - e. Return the plate as it was and tighten the screws① and ②.

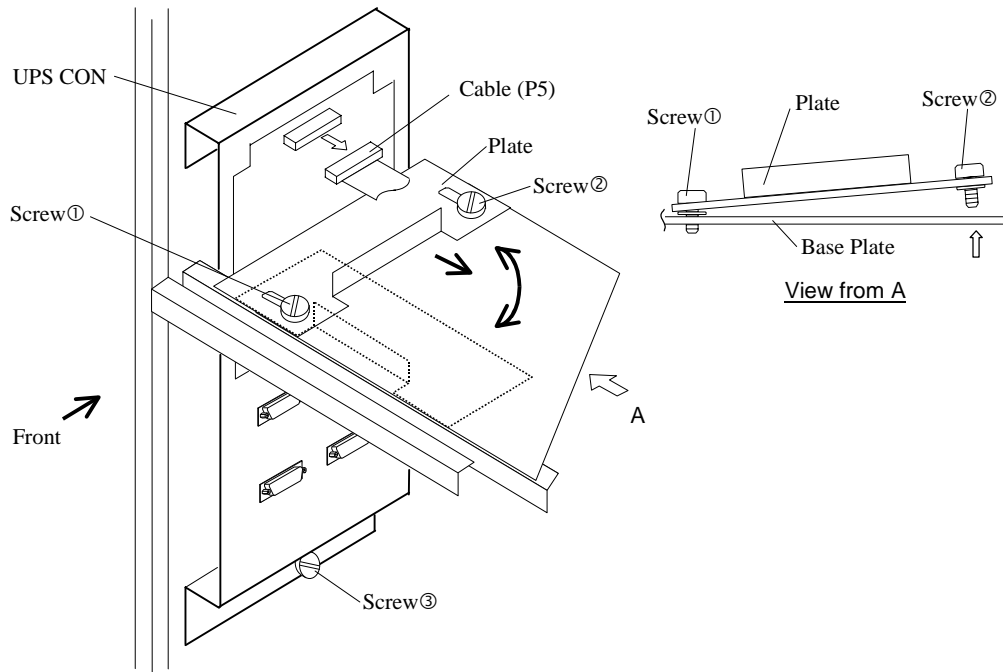


Fig. 4.6-8 Removal of UPS CON

- f. Remove the screw and remove the bracket (465).
- g. Attach the screw.

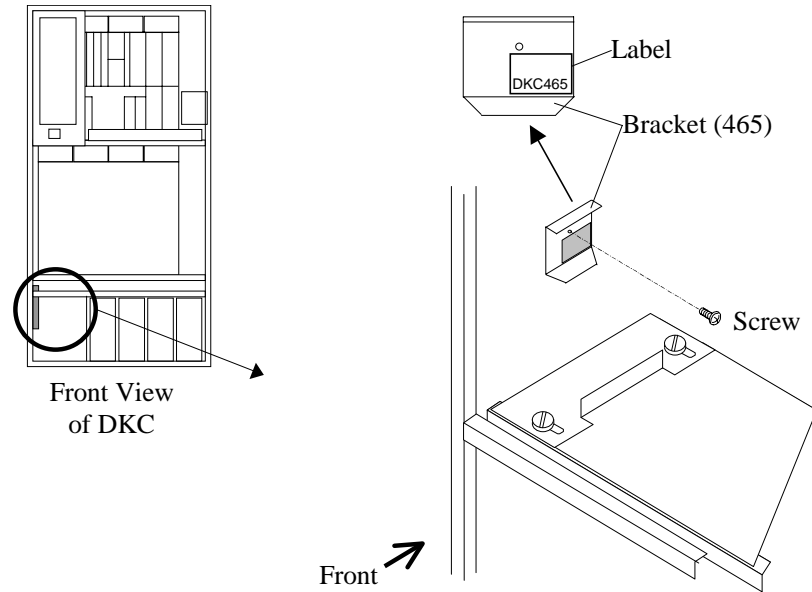


Fig. 4.6-8A Removal of Bracket

5. Remove the Cable.
 - a. Loosen the six screws③ and remove the Cover (HUB/SVP-PS) ASSY.
 - b. Loosen the two screws② and remove the cable cover②.
 - c. Loosen the two screws① and remove the cable cover①.
 - d. Remove the two Repeat Binders from the cable.
 - e. Remove the cable from the DKC frame.
 - f. Install the cable covers① and ② by fastening them with the screws.
 - g. Install the Cover (HUB/ SVP-PS) ASSY by fastening it with the screws.

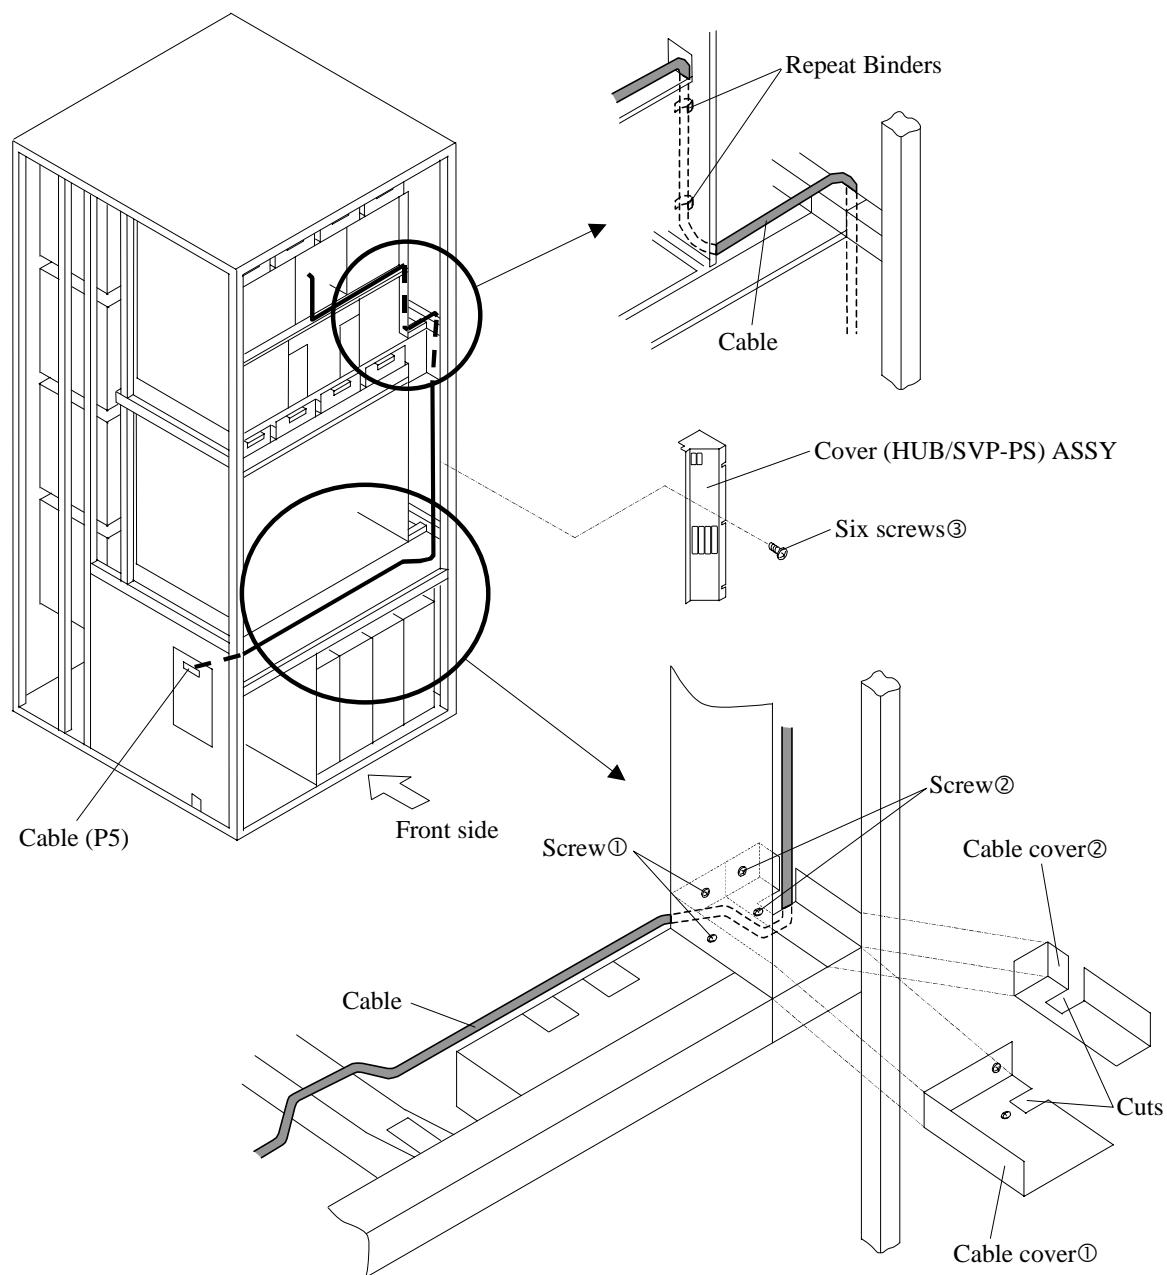


Fig. 4.6-9 Removal of Cable

6. Connect the AC Power Cables.

CAUTION

Perform the UPS Connection Kit with care
 Perform this procedure before connecting the AC Power Cable.
 (Turn off the circuit breakers on the power distribution panel)
 Turn off the main circuit breakers (CB101) located in the AC Boxes.

- a. Disconnect the AC power cables from the branch distribution box.



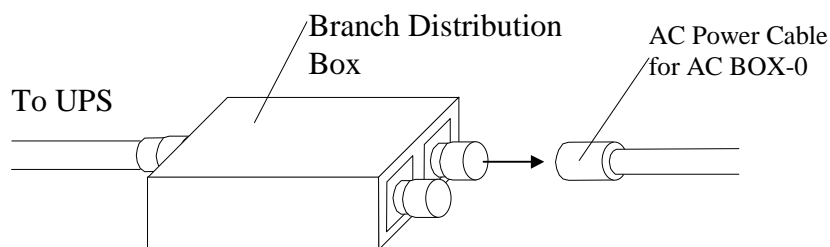


Fig. 4.6-10 Disconnection of AC Power Cables

- b. Connect the AC power cables to the distribution board.

3 Phase Model

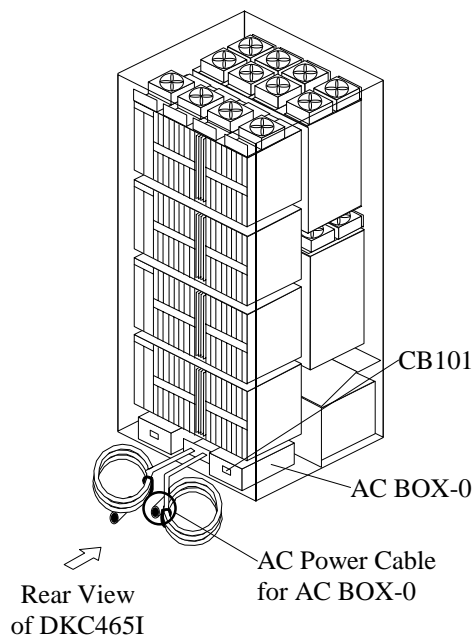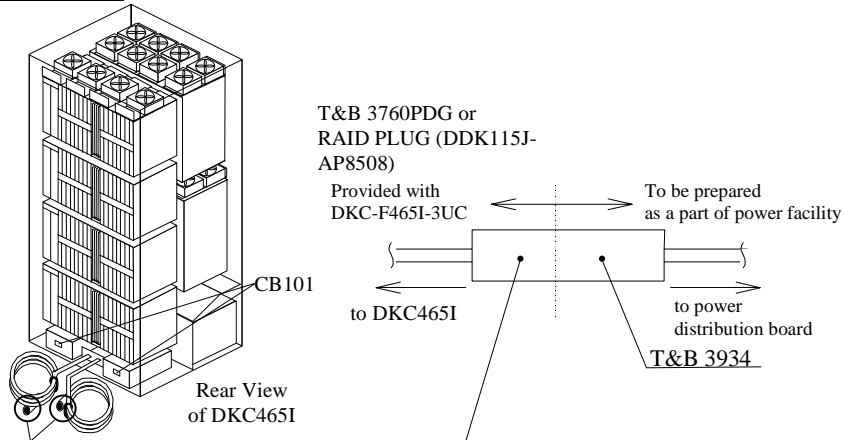

Single Phase Model

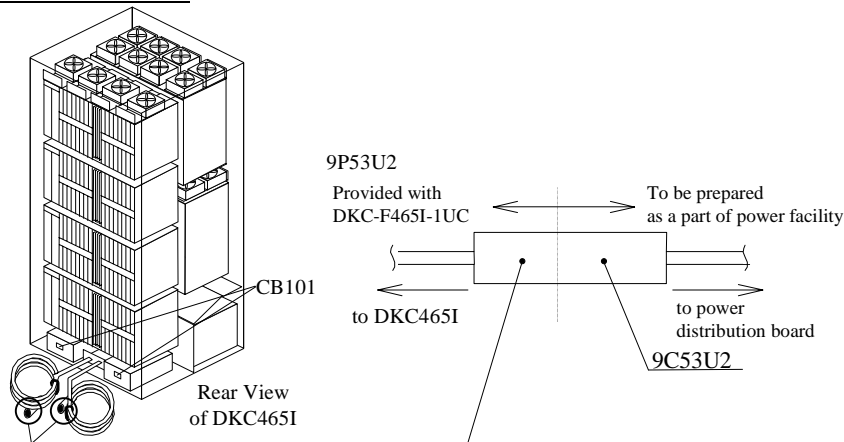


Fig. 4.6-11 Connection of AC Power Cables

7. Remove the Nameplate

- a. Remove the nameplate referring to Fig. 4.6-12.

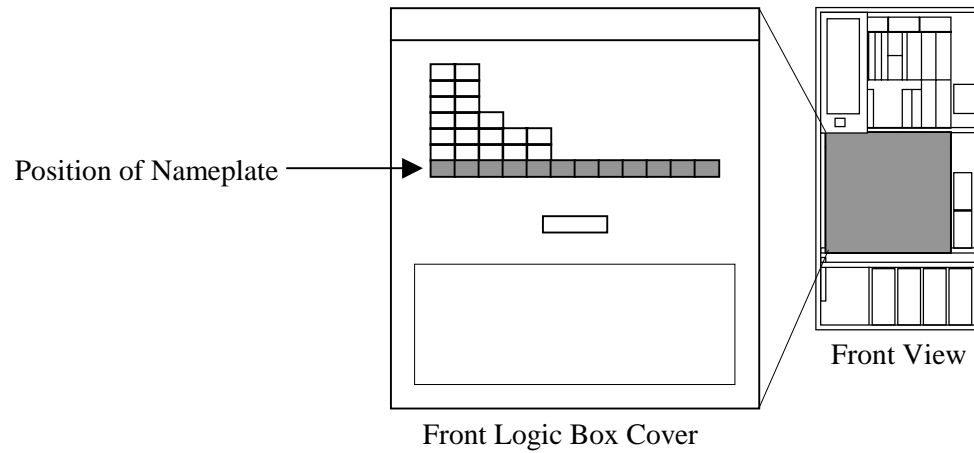


Fig. 4.6-12 Removal of Nameplate

1-8 Overview

Change the following system option when the system operates.


<1> PS Off Timer ----- The Destage time is effectively.

- OFF : The Destage time is effectively.
- ON : The Destage time is ineffectively, and change the Destage time.


1-9 SVP procedure

(1) Select (CL) [Install].


(2) Select (CL) the [Change Configuration] menu in the 'Install' window.

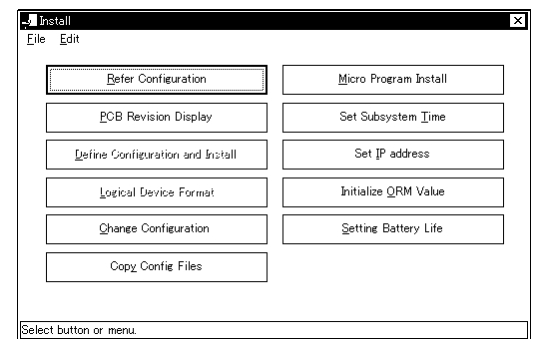

(3) Select (CL) the [System Option] menu in the 'Menu Dialog' window and select (CL) [OK].

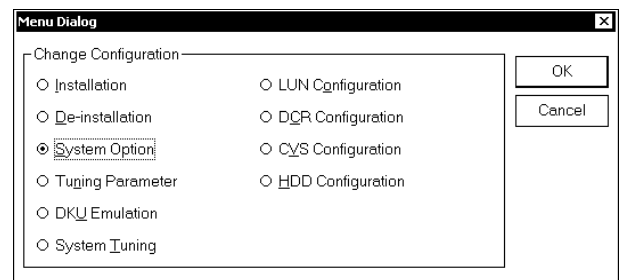


- (4) Release [Timer On] check box in the column 'PS Off Timer', and then select (CL) [OK].

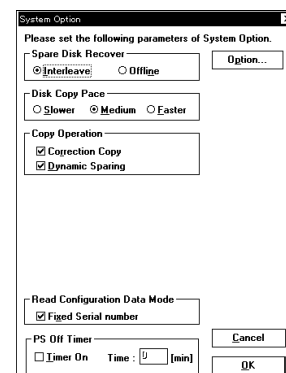


- (5) "Loading configuration..." is displayed.


- (6) "Change configuration was completed." is displayed.
Select (CL) [OK].

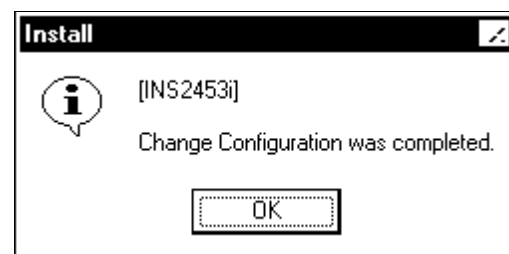

- (7) "Reading subsystem configuration data..." is displayed.
"Please insert the Config FD in the FDD." is displayed.
Insert the configuration FD into FDD, select (CL) [OK].

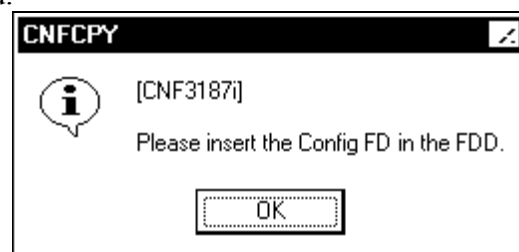

- (8) When this procedure is completed, the message “Please remove the Config FD.” is displayed. Remove the FD, select (CL) [OK].

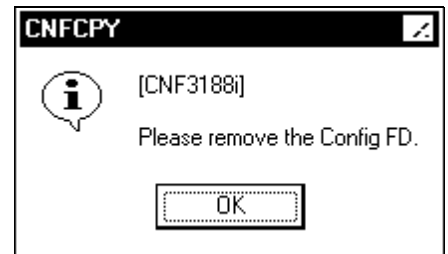

- (9) Close the 'Install' window.

4.7 De-Installation of Power Cable Kit (DKC-F465I-1EC/1UC/3EC/3UC, DKC-F460I-1ECD/1UCD)

CAUTION

Perform The Power Cable Kit with care.
This Power Cable Kit is concerned with Primary Circuit.
Perform this procedure before connecting the Power Cable.
(Turn off the circuit breakers on the power distribution panel)
Turn off the main circuit breaker CB101 located in the AC Box.

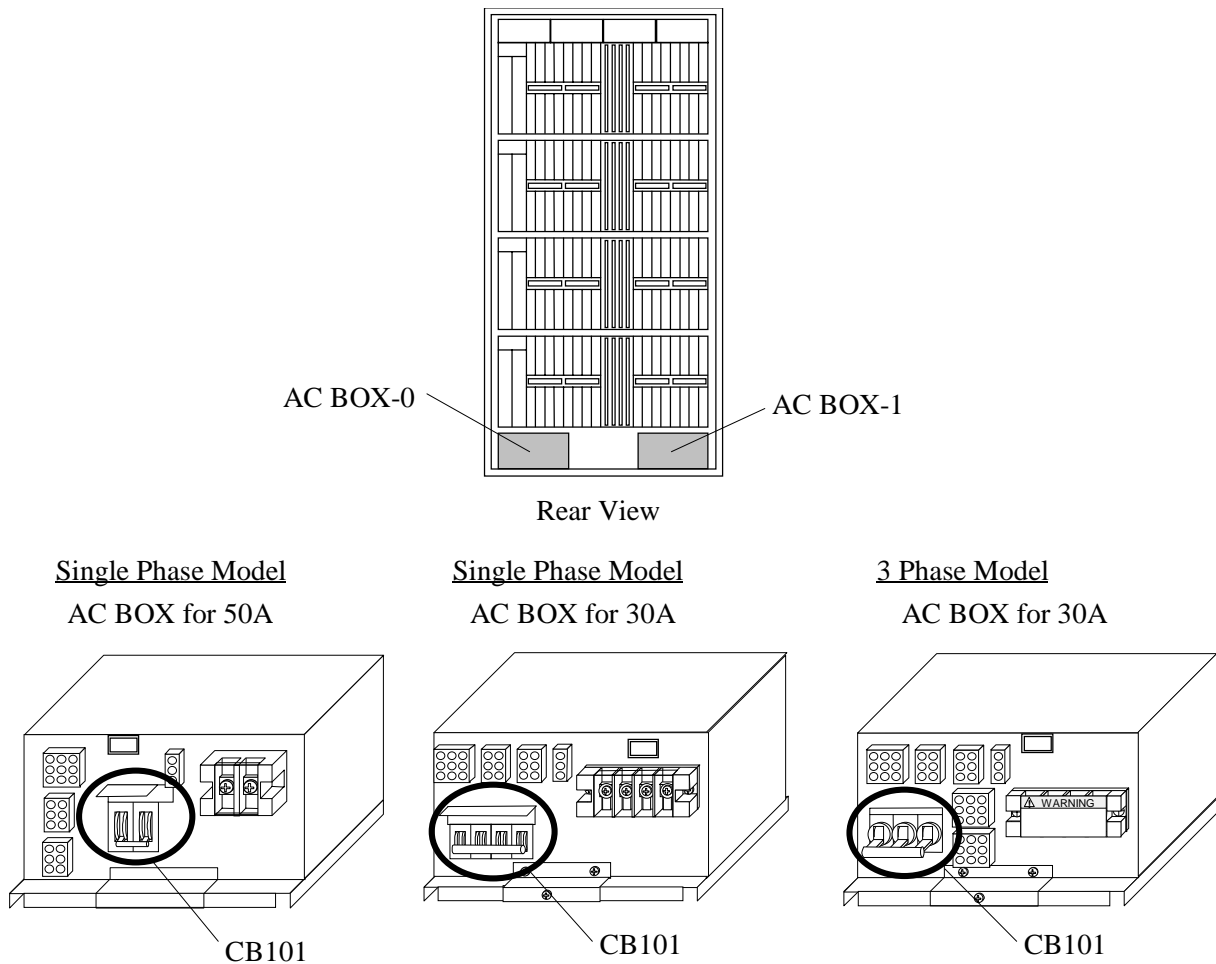


Fig. 4.7-1 Location of the Circuit Breakers

Table 4.7-1 Circuit Breakers

No.	Location No.	Breaker No.	Remarks
1	AC BOX-0	CB101	
2	AC BOX-1	CB101	

4.7.1 De-Installation of Power Cable Kit for Single Phase/50A or 3 Phase/30A

Table 4.7.1-1 Parts List

No.	Model Number	Part Name	Part No.	Quantity	Remarks
1	DKC-F465I-1UC	Power Cable	3263436-A	1	
		Cover	5513750-1	1	
		Nameplate (HDS)	2105894-3	1	RSD
		Nameplate (HP)	2105894-103	1	RSD
2	DKC-F465I-1EC	Power Cable	3263438-A	1	
		Cover	5513750-1	1	
		Nameplate (HDS)	2105894-5	1	RSD
		Nameplate (HP)	2105894-105	1	RSD
3	DKC-F465I-3UC	Power Cable	3263437-A	1	
		Cover	5513750-1	1	
		Nameplate (HDS)	2105894-4	1	RSD
		Nameplate (HP)	2105894-104	1	RSD
4	DKC-F465I-3EC	Power Cable	3263439-A	1	
		Cover	5513750-1	1	
		Nameplate (HDS)	2105894-6	1	RSD
		Nameplate (HP)	2105894-106	1	RSD

1. Disconnect the Power Cable.
 - a. Remove the terminal block covers. Remove the screws from the terminal blocks.

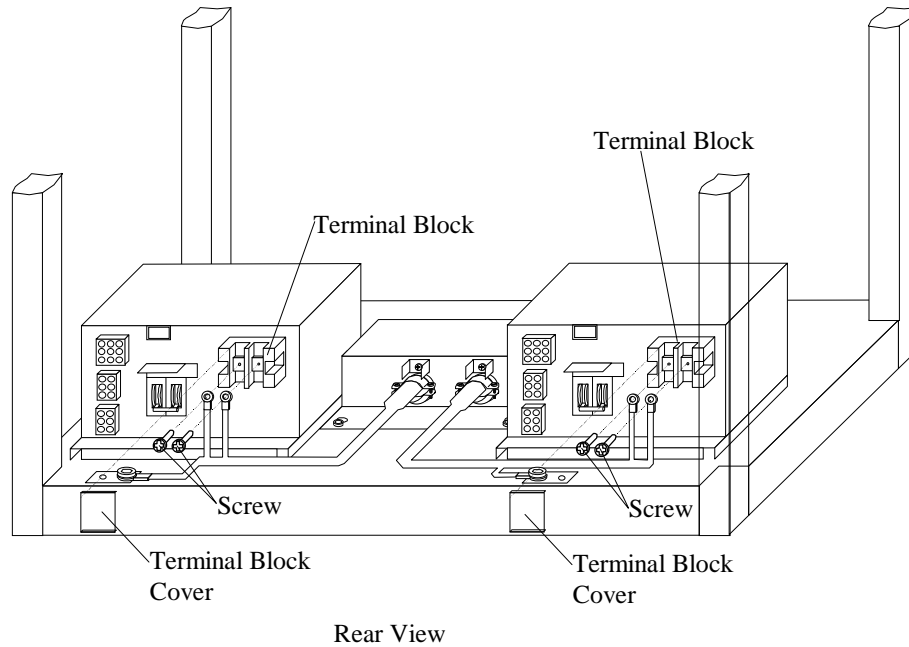


Fig. 4.7.1-1 Removal of Screws

- b. Remove the frame ground cable for each AC power cable from the frame.

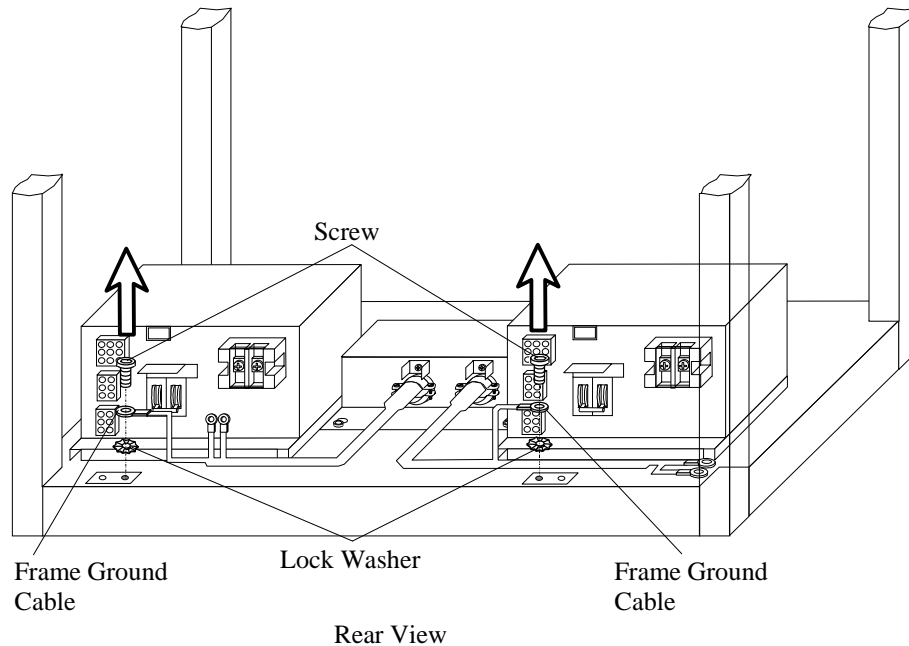


Fig. 4.7.1-2 Removal of Frame Ground Cable

- c. Loosen the screws① and remove the cover.
- d. Loosen the screws② and remove the Power Cable.

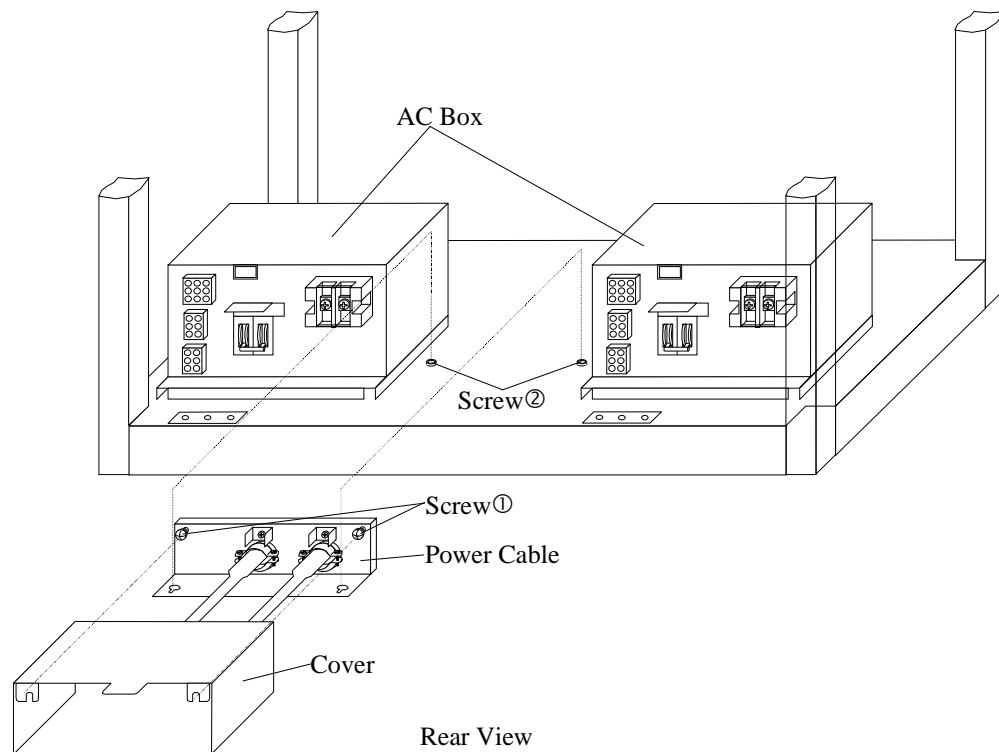


Fig. 4.7.1-3 Removal of Power Cable

- 2. Remove the Nameplate.
 - a. Remove the nameplate from the Front Logic Box Cover.

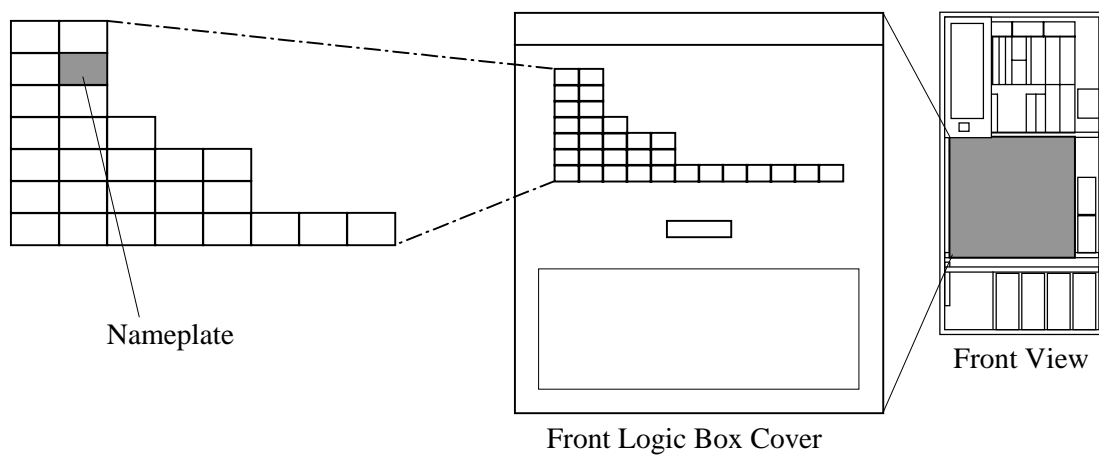


Fig. 4.7.1-4 Removal of Nameplate

4.7.2 De-Installation of Power Cable Kit for Single Phase/30A

Table 4.7.2-1 Parts List

No.	Model Number	Part Name	Part No.	Quantity	Remarks
1	DKC-F460I-1UCD	Power Cable Unit	3265665-A	1	
		Screw	SB408N	2	
		Screw	SB510N	4	
		Toothed Washer	WT005N	4	
		Nameplate (HDS)	2105902-131	1	RSD
			2105903-131/231		HICAM/HICEF
		Nameplate (HP)	—	1	RSD
			—		HICAM/HICEF
2	DKC-F460I-1ECD	Power Cable Unit	3265664-A	1	
		Screw	SB408N	2	
		Screw	SB510N	4	
		Toothed Washer	WT005N	4	
		Nameplate (HDS)	2105902-130	1	RSD
			2105903-130/230		HICAM/HICEF
		Nameplate (HP)	—	1	RSD
			—		HICAM/HICEF

1. Remove the Bracket.
 - a. Remove the terminal block covers. Remove the screws from the terminal blocks.

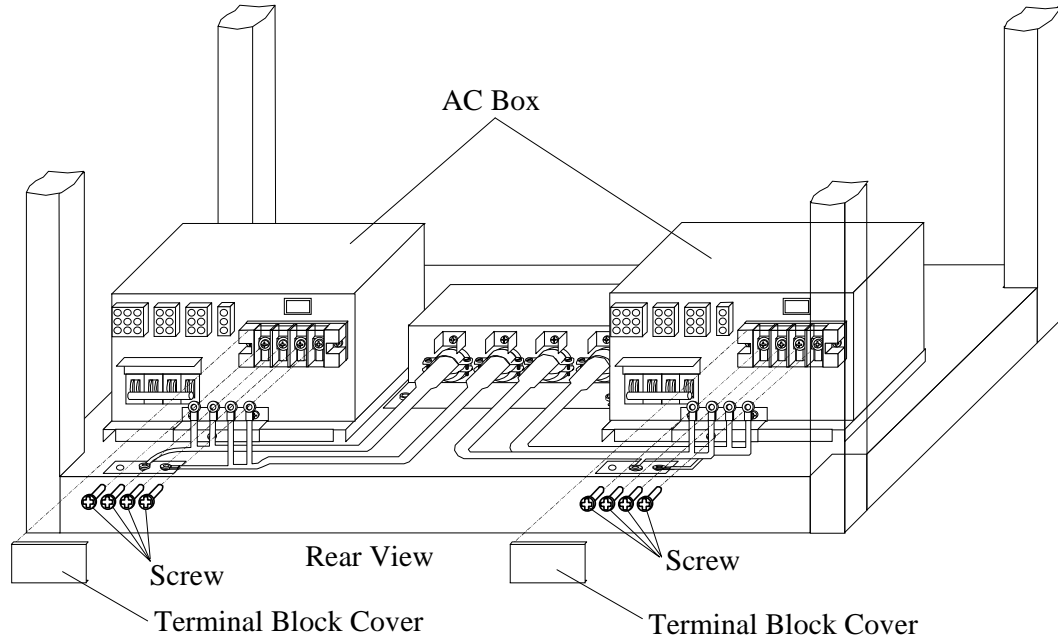


Fig. 4.7.2-1 Removal of Screws

- b. Remove the frame ground cable for each AC power cable from the frame.

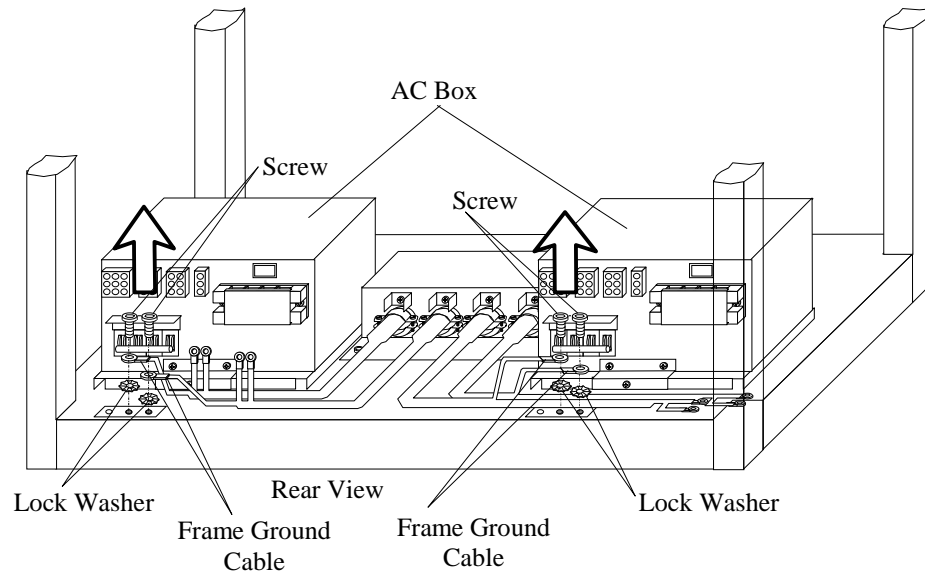


Fig. 4.7.2-2 Removal of Frame Ground Cable

- c. Loosen the screws ① and remove the cover.
- d. Loosen the screws ② and remove the bracket.

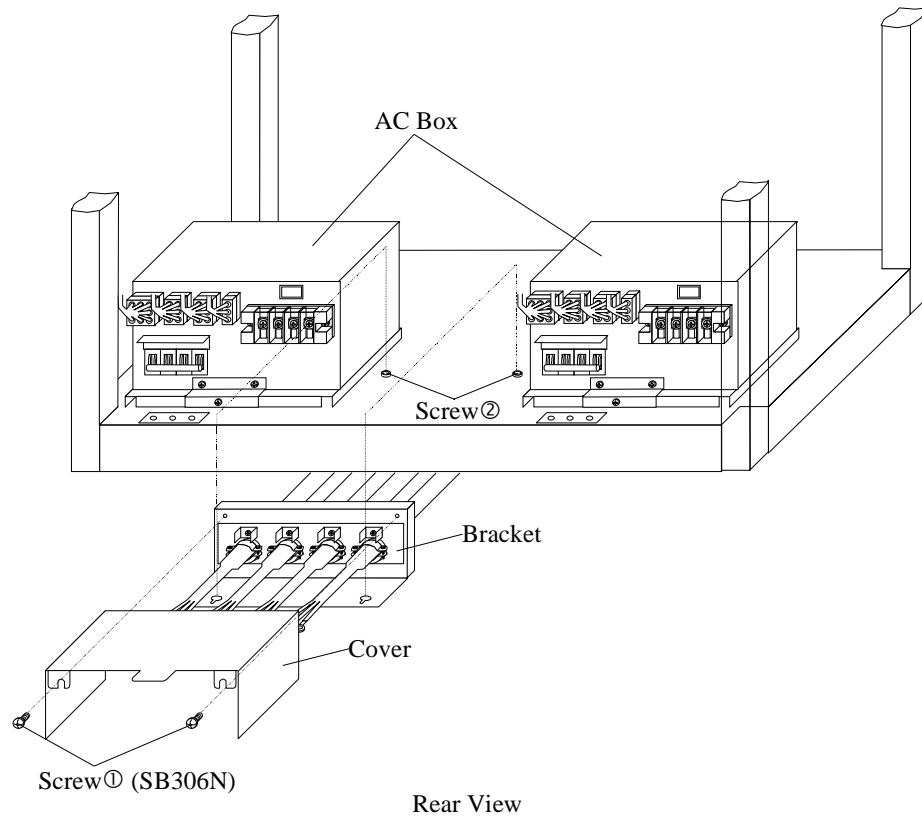


Fig. 4.7.2-3 Removal of Power Cable ASSY

- e. Remove the six screws and remove the Bracket.

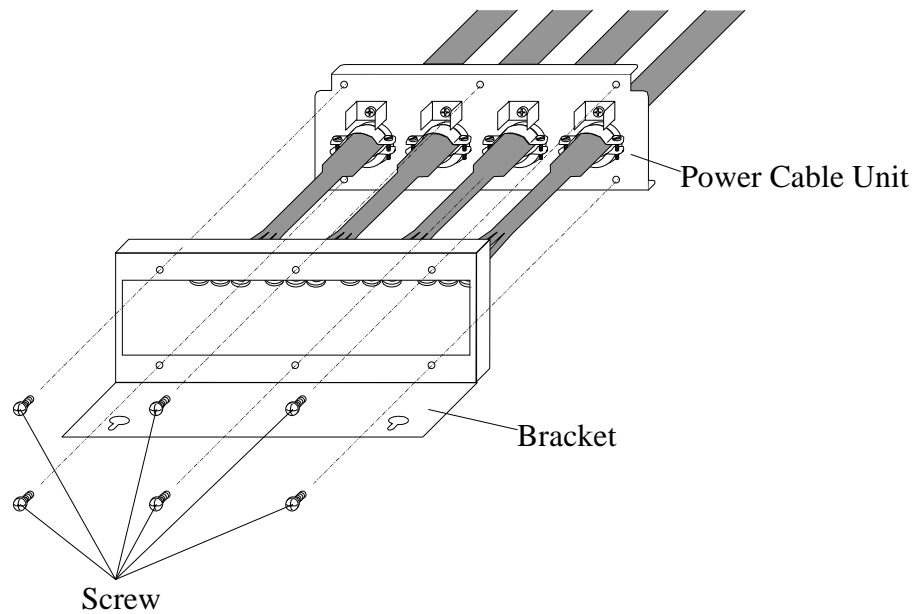


Fig. 4.7.2-4 Removal of Bracket

2. Remove the Nameplate.
 - a. Remove the nameplate from the Front Logic Box Cover.

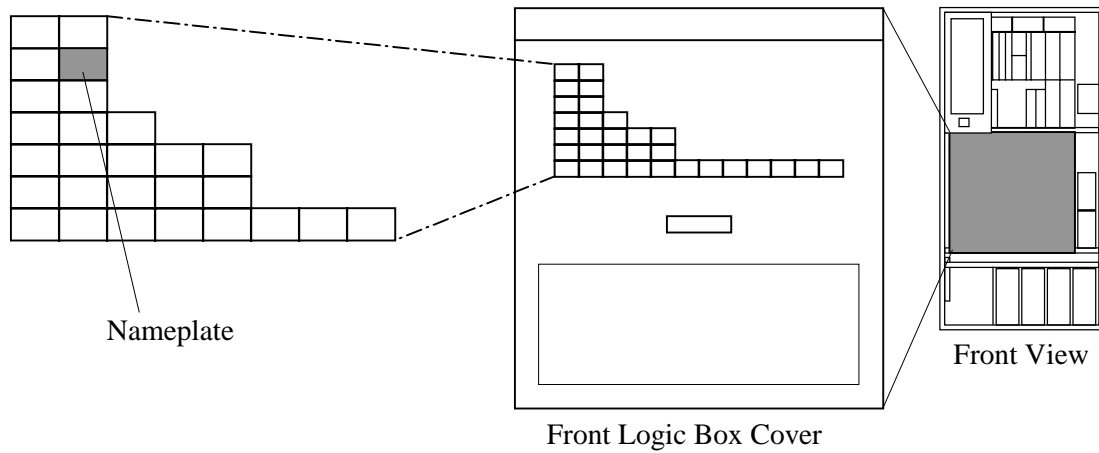


Fig. 4.7.2-5 Removal of Nameplate

4.8 De-Installation of AC Box Kit

4.8.1 De-Installation of AC Box Kit for Single Phase/50A or 3 Phase/30A (DKC-F465I-1PS/3PS)


Table 4.8.1-1 Parts List

No.	Model Number	Part Name	Part No.	Quantity	Remarks
1	DKC-F465I-1PS	AC Box	5513939-A	2	
		Screw	SB306N	4	
		Nameplate (HDS)	2105894-1	1	RSD
		Nameplate (HP)	2105894-101	1	RSD
2	DKC-F465I-3PS	AC Box	5513938-A	2	
		Screw	SB306N	4	
		Nameplate (HDS)	2105894-2	1	RSD
		Nameplate (HP)	2105894-102	1	RSD

1. Disconnect the cables.

DKC-F465I-1PS

- a. Disconnect the cables from the AC Boxes.

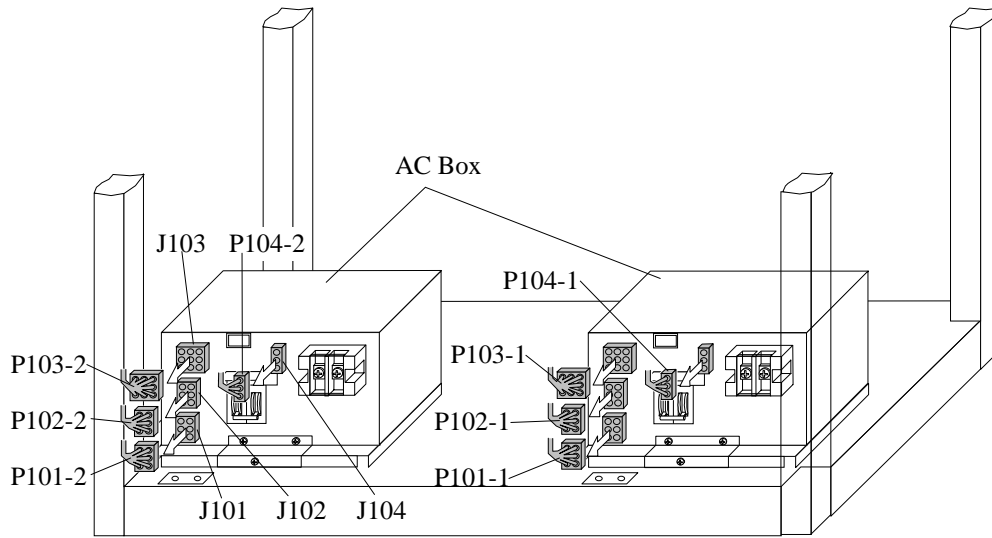


Rear View

Fig. 4.8.1-1 Disconnection of Cables

DKC-F465I-3PS

- a. Disconnect the cables from the AC Boxes.

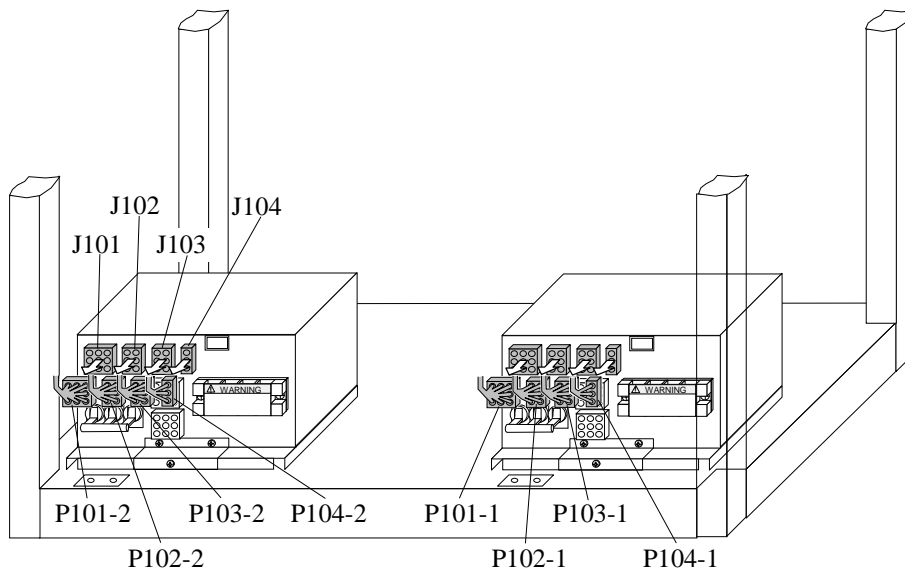

Rear View

Fig. 4.8.1-2 Disconnection of Cables

2. Remove the AC Boxes.

- a. Loosen the screw and remove frame ground cable and lock washer.

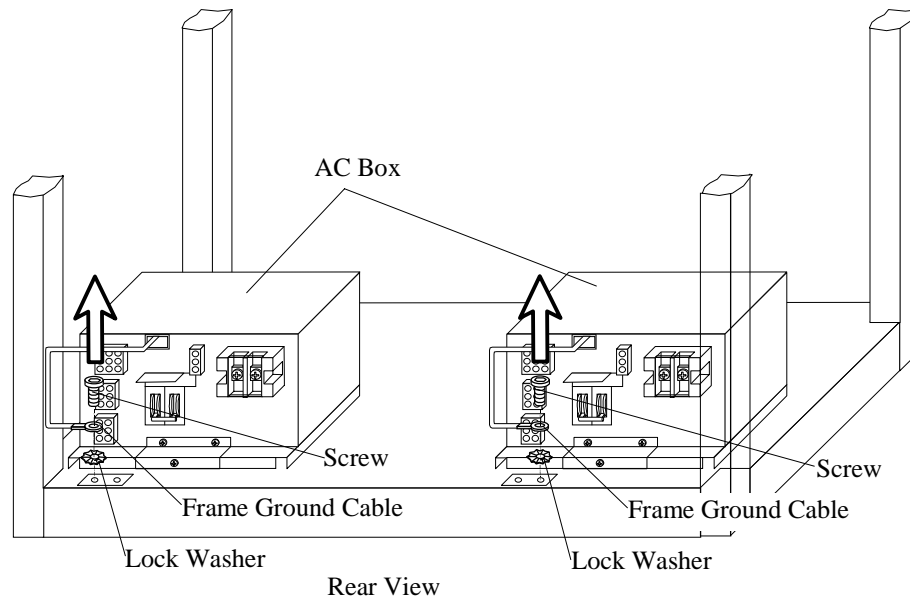


Fig. 4.8.1-3 Removal of Ground Cables

- b. Loosen the screws and remove the plates.

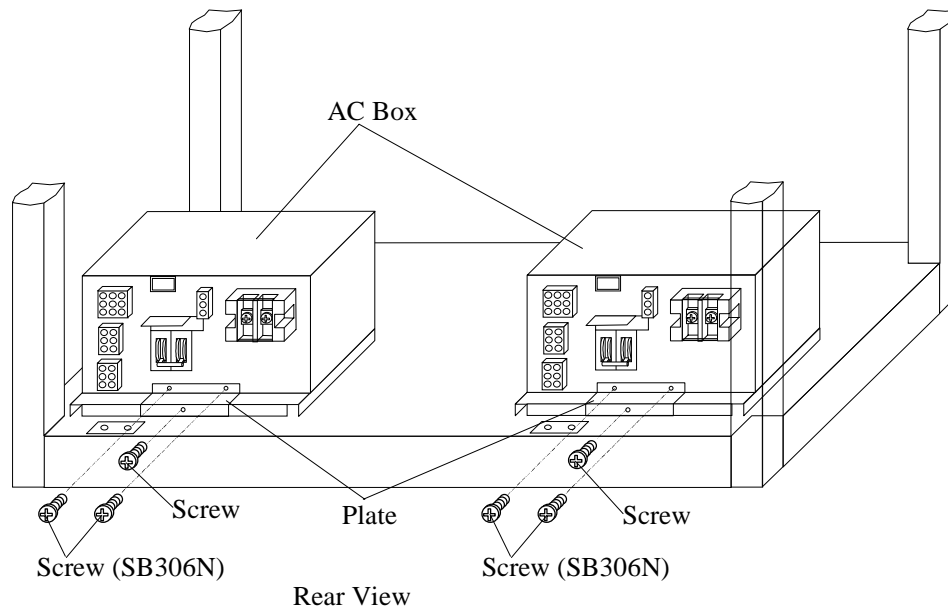


Fig. 4.8.1-4 Removal of Plates

- c. Remove the AC Boxes from the bases.

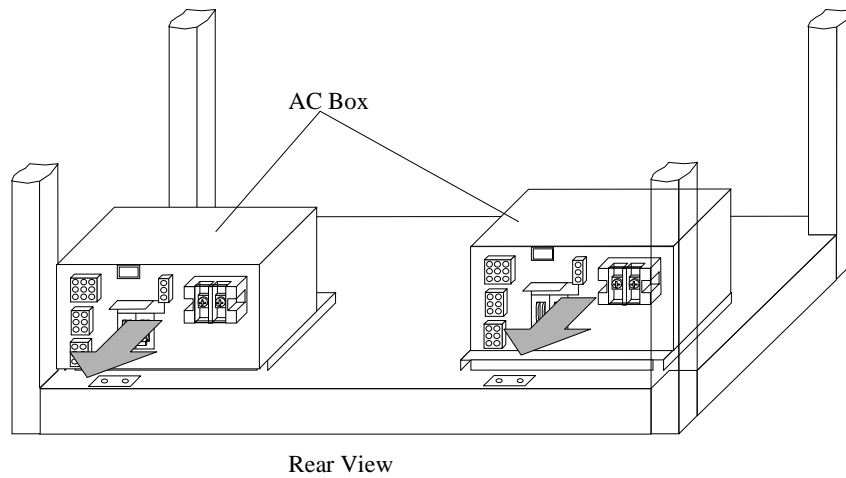


Fig. 4.8.1-5 Removal of AC Boxes

- d. Attach the plates with the screws.

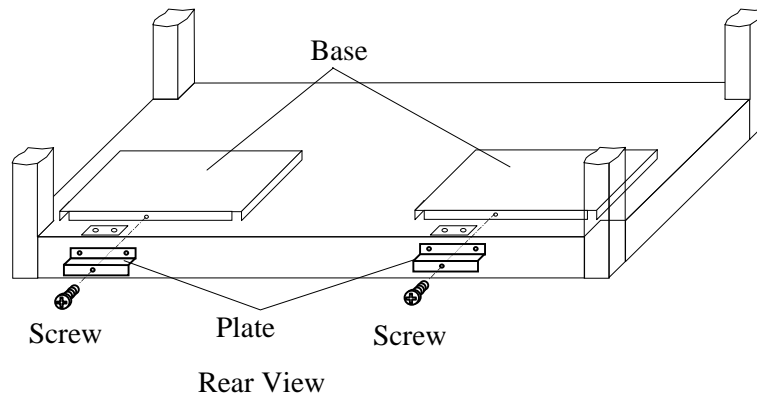


Fig. 4.8.1-6 Attachment of Plates

3. Remove the Nameplate.
- a. Remove the nameplate from the Front Logic Box cover.

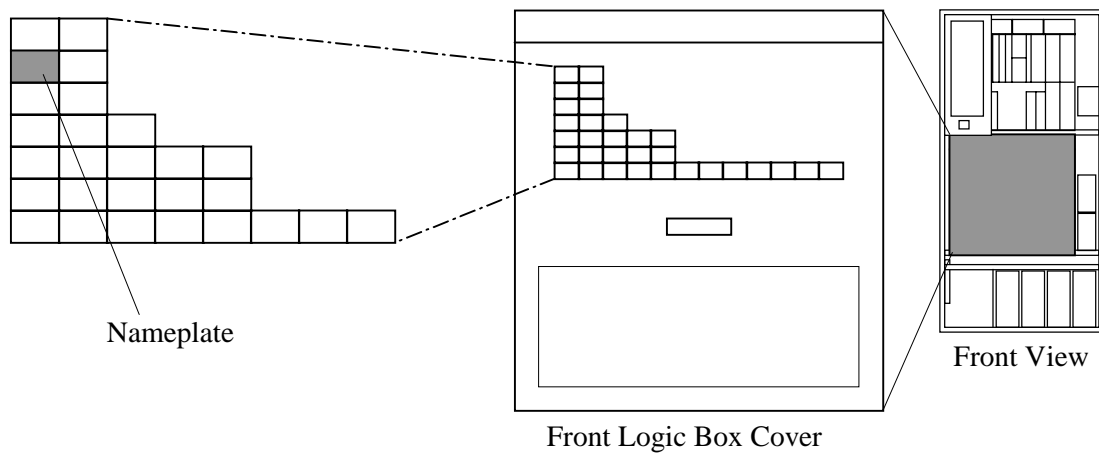


Fig. 4.8.1-7 Location of Nameplate

4.8.2 De-Installation of AC Box Kit for Single Phase/30A (DKC-F465I-1PSD)

Table 4.8.2-1 Parts List

No.	Model Number	Part Name	Part No.	Quantity	Remarks
1	DKC-F465I-1PSD	AC Box	5518053-A	2	For 30A
		Bracket	3265678-1	1	
		Cover	5513750-1	1	
		Screw	SB306N	6	
		Label (V.Hz.PH.A.W)	3265705-1	1	
		Nameplate (HDS)	2105894-13	1	RSD
		Nameplate (HP)	2105894-110	1	RSD

1. Remove the Bracket.
 - a. Loosen the screws ① and remove the cover.
 - b. Loosen the screws ② and remove the bracket.

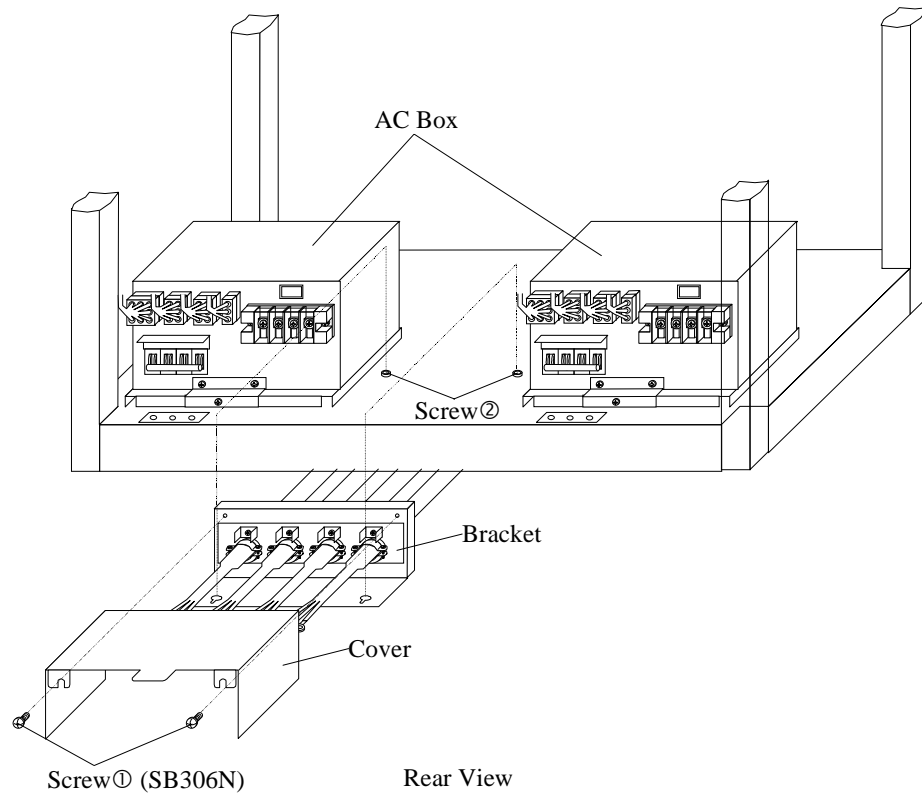


Fig. 4.8.2-1 Removal of Bracket

- c. Remove the six screws and remove the bracket.

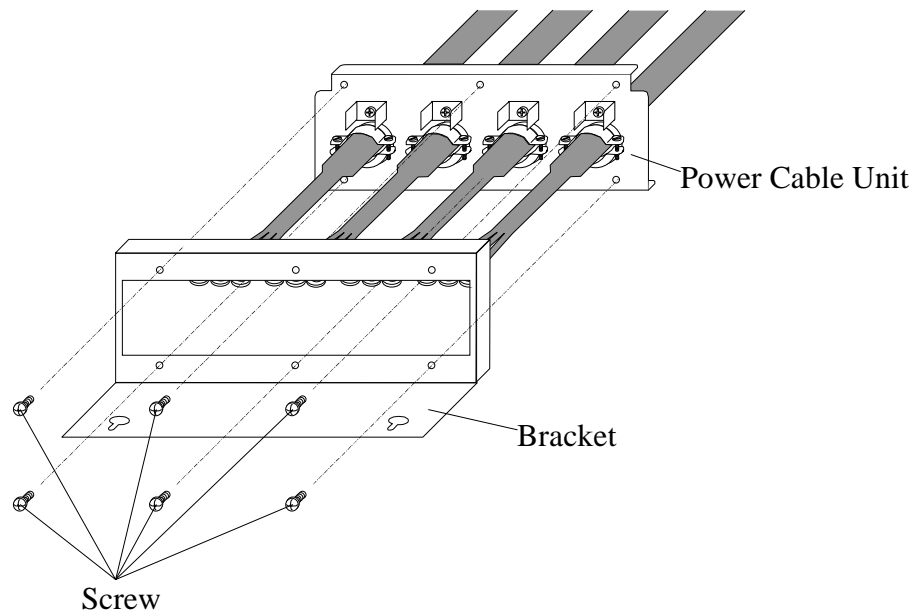


Fig. 4.8.2-2 Removal of Bracket

2. Disconnect the cables.
 - a. Disconnect the cables (P101-1, P102-1, P103-1, P104-1, P101-2, P102-2, P103-2 and P104-2) from the AC Boxes.

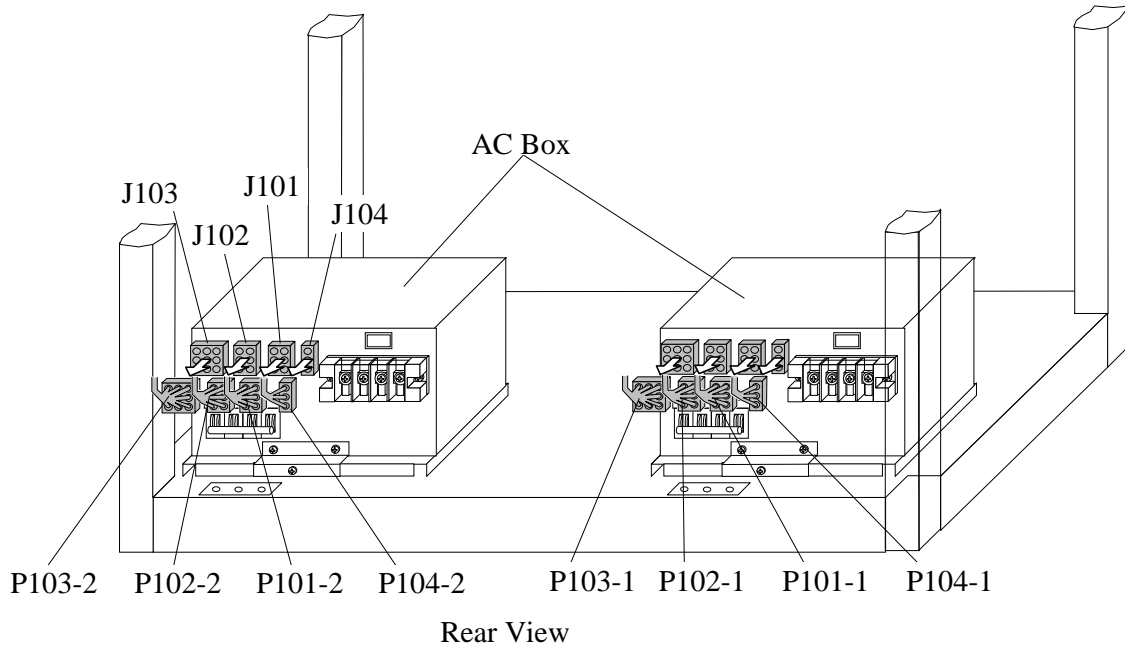


Fig. 4.8.2-3 Disconnection of Cables

3. Remove the AC Boxes.
 - a. Loosen the screw and remove frame ground cable and lock washer.

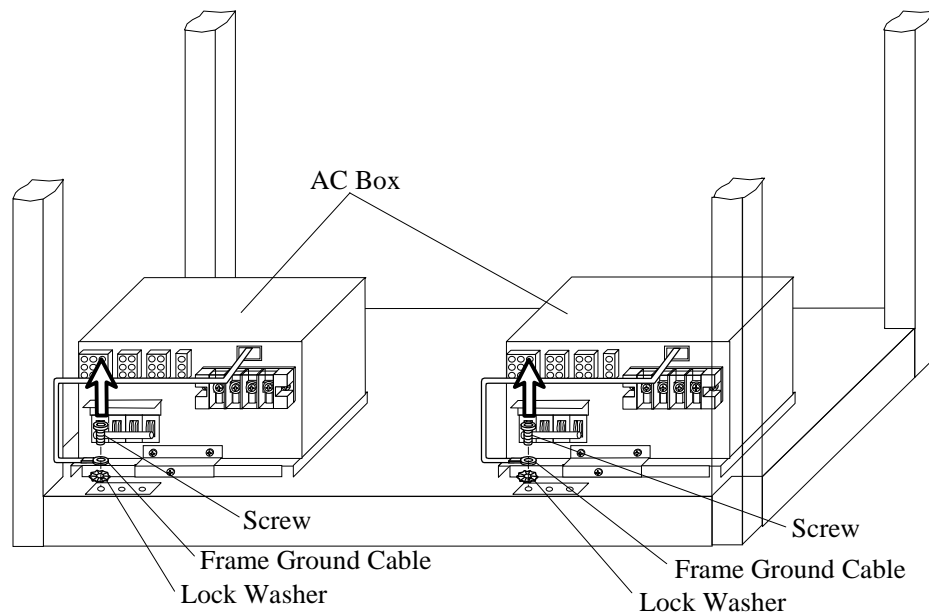


Fig. 4.8.2-4 Removal of Ground Cables

- b. Loosen the screws and remove the plates.

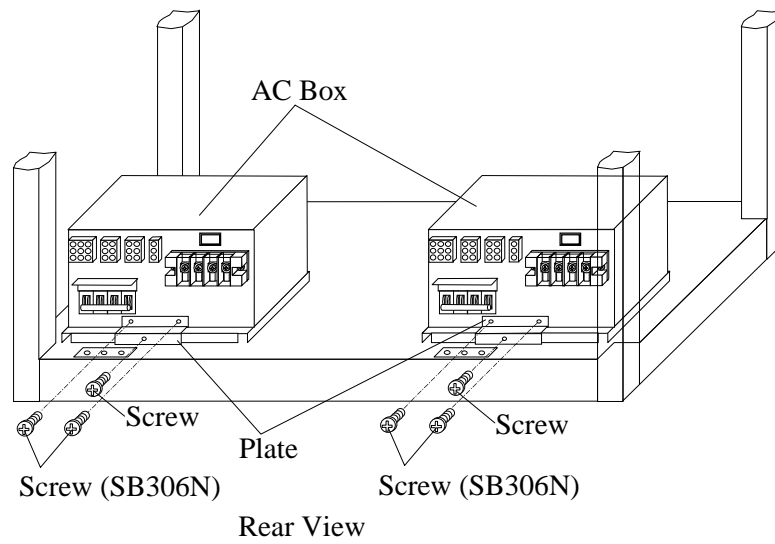


Fig. 4.8.2-5 Removal of Plates

- c. Remove the AC Boxes from the bases.

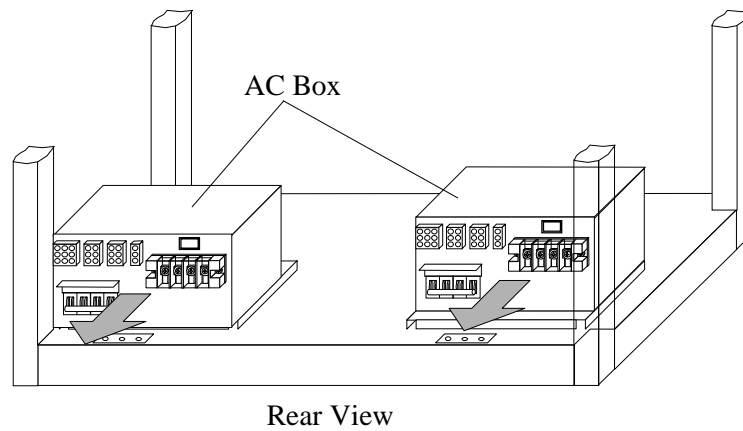


Fig. 4.8.2-6 Removal of AC Boxes

- d. Attach the plates with the screws.

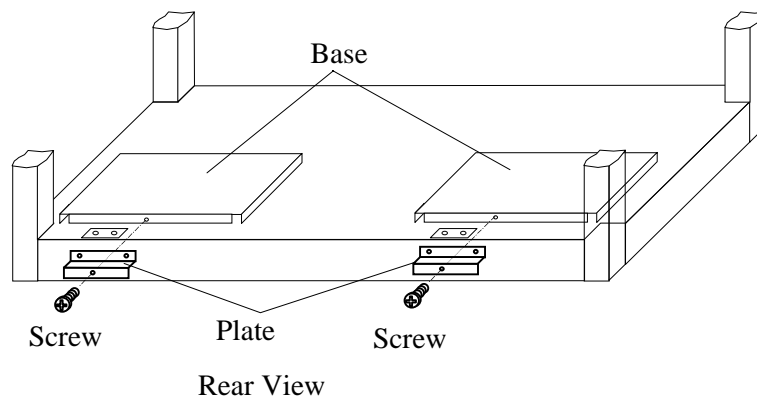


Fig. 4.8.2-7 Attachment of Plates

4. Remove the Nameplate and Label.
 - a. Remove the nameplate from the Front Logic Box cover.

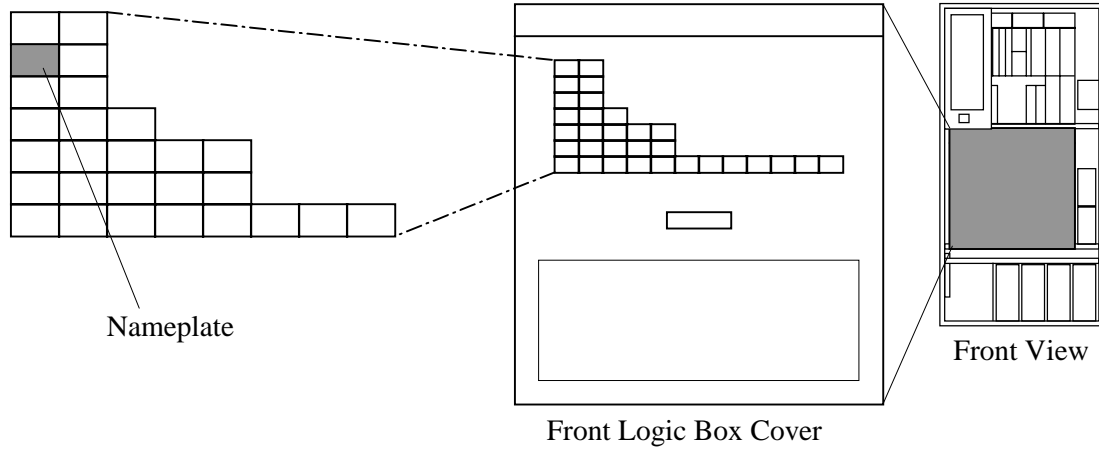


Fig. 4.8.2-8 Location of Nameplate

- b. Remove the label (V/Hz/PH.) and label (V.Hz.PH.A.W) from the frame.

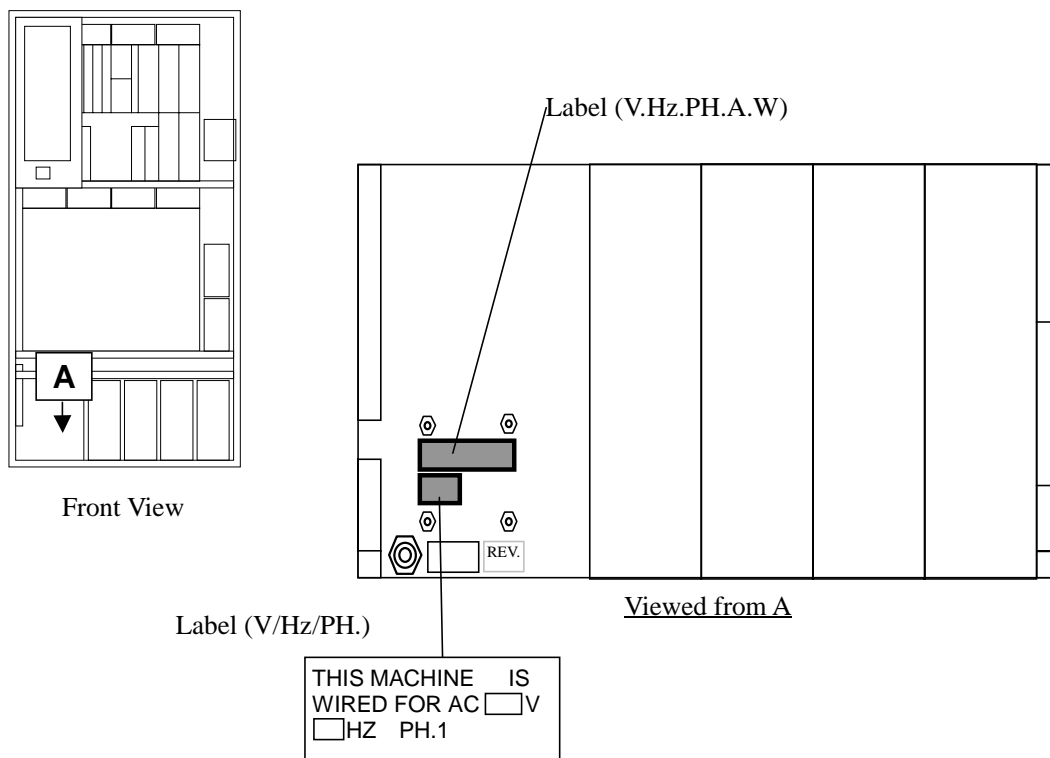


Fig. 4.8.2-9 Remove of Labels

4.9 De-Installation of 256MB Additional Memory for SVP (DKC-F460I-256M)

Table 4.9-1 Parts List

No.	Model Number	Part Name	Part No.	Quantity	Remarks
1	DKC-F460I-256M	Additional SVP Memory	5518055-A	1	
		LABEL		1	
		Nameplate(HP)	2105902-235	1	RSD
			2105903-335	1	HICAM
			2105903-435	1	HICEF

4.9.1 De-Installation Procedure of 256MB Additional Memory for SVP

1. Open the front door and then open the DKC panel.
2. Turn the SVP ASSY and turn off the power for the SVP.
3. Loosen the screw and open the SVP frame, and remove the lower SH box cover.

(1) Open the SVP frame.

SVP frame type1

- a. Remove the screw① and open the SVP frame.

SVP frame type2

- a. Loosen the screw② and the SVP stopper is slide to the left.
- b. Open the SVP ASSY (Basic).
- c. Remove the screw③ and open the SVP frame.

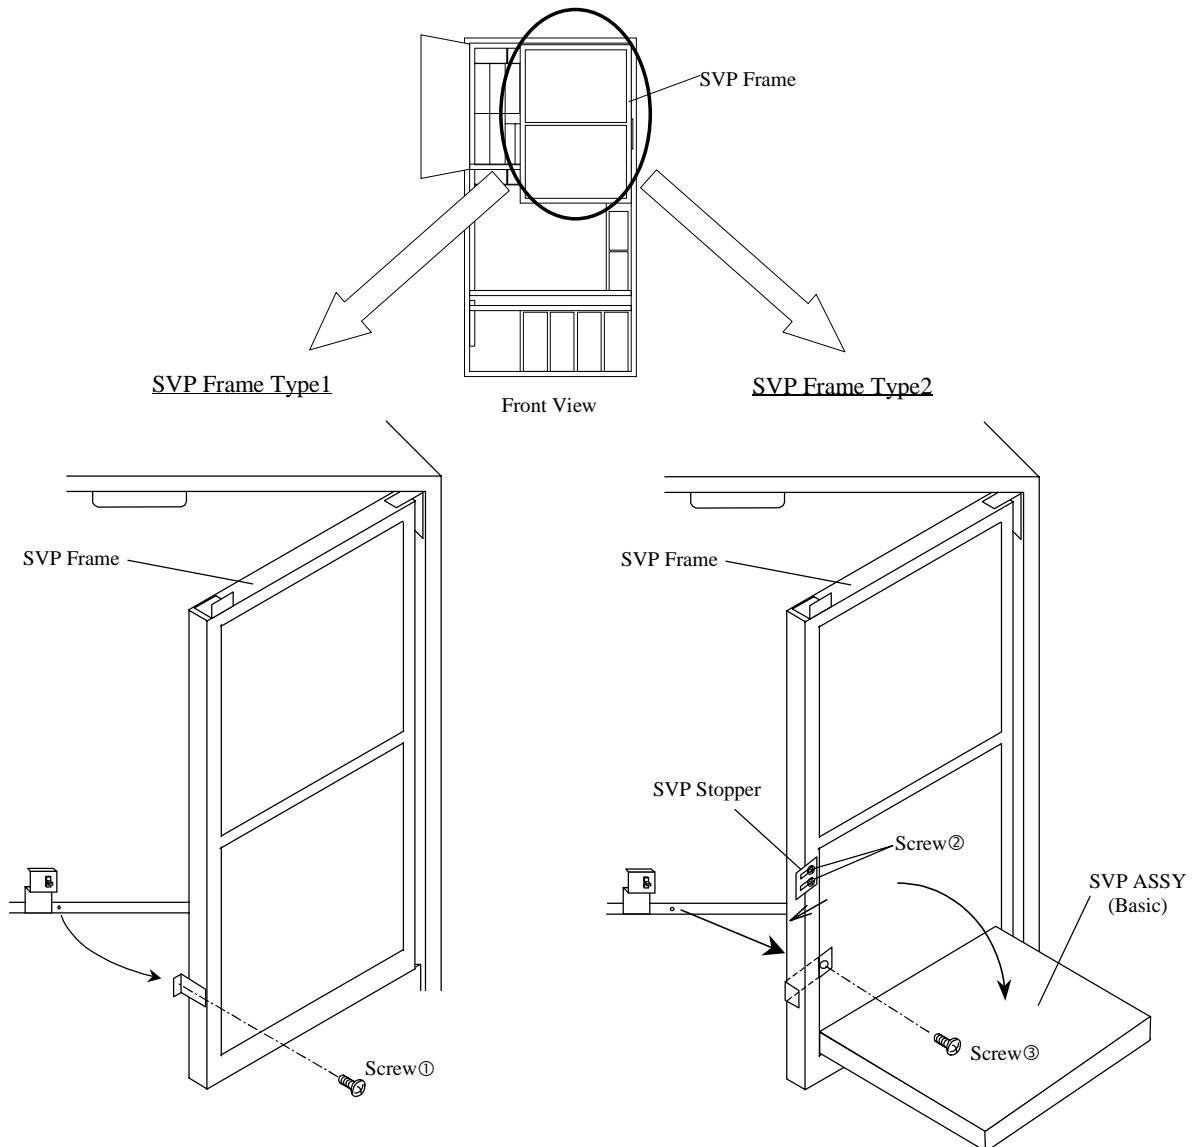


Fig. 4.9-1 Open the SVP Frame

4. Insert the Jumper.

Replacement of Basic SVP ASSY

- a. Insert the maintenance jumper into JP1 on the RS CON PCB.

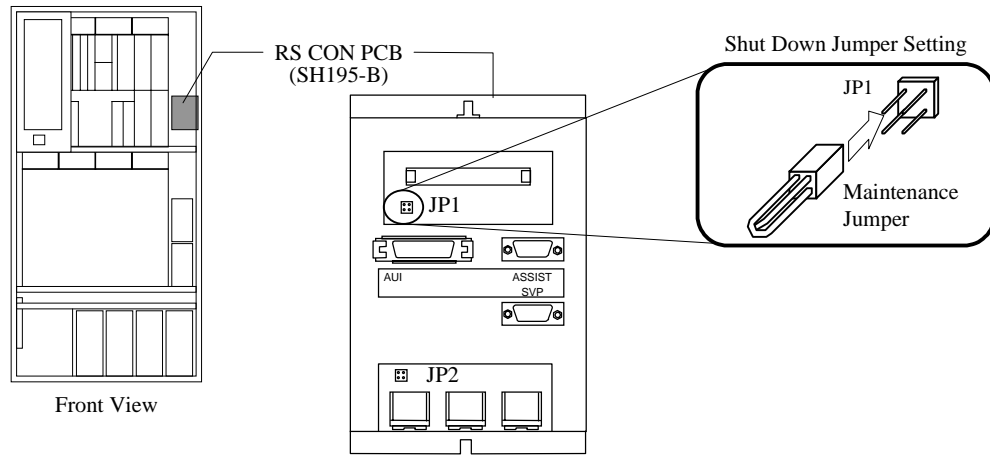


Fig. 4.9-2 Jumper settings of RS CON PCB

Replacement of Option SVP ASSY

- a. Insert the maintenance jumper into PS SD on the SVPPS BOX.

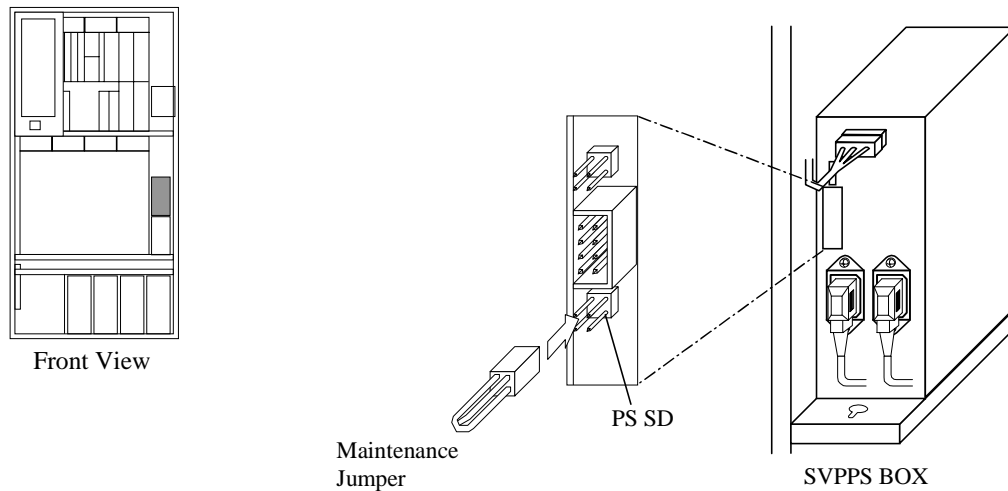


Fig. 4.9-3 Jumper settings of SVPPS BOX

5. Remove the cables.

Additional Memory of Basic SVP

- a. Disconnect the RS232C cable (RSVP-1) from the RS CON PCB.

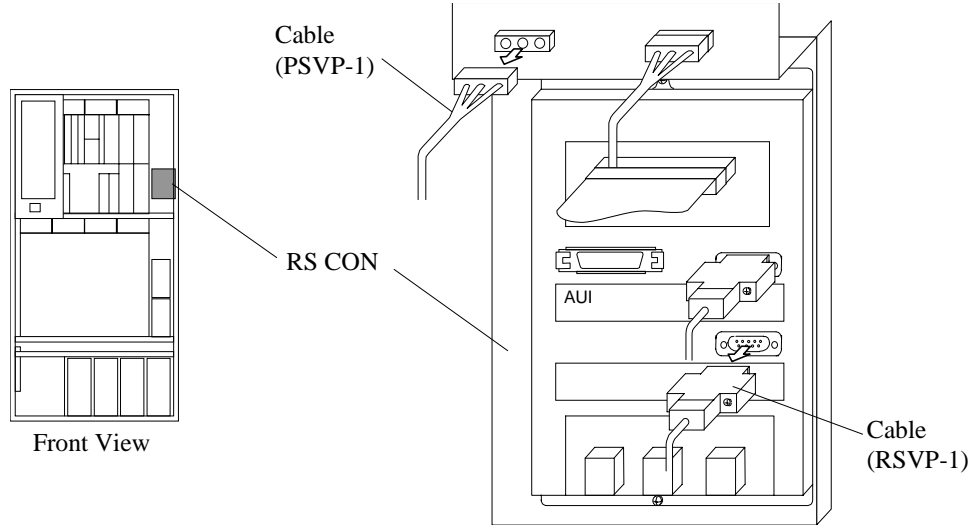


Fig. 4.9-4 Disconnection of RS232C Cable

- b. Disconnect the LAN cable (LSVP-1) from the HUB BOX.
Disconnect the SVP PS cable (PSVP-1) from the CON PLATE.

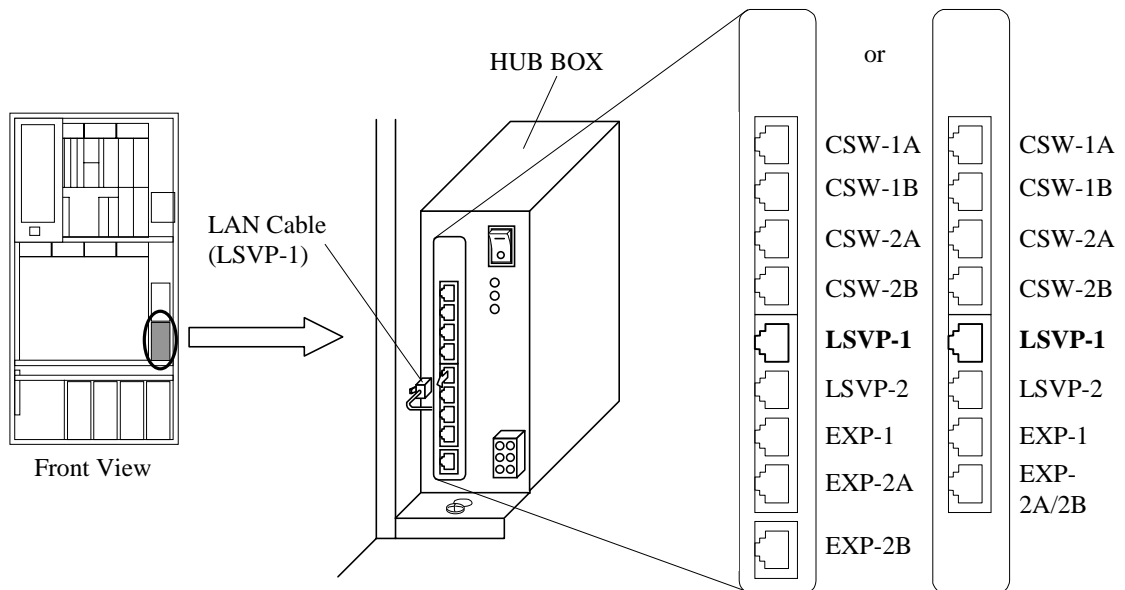


Fig. 4.9-5 Disconnection of LAN Cable and SVP-PS Cable

c. Open the locking clamps and remove the cables.

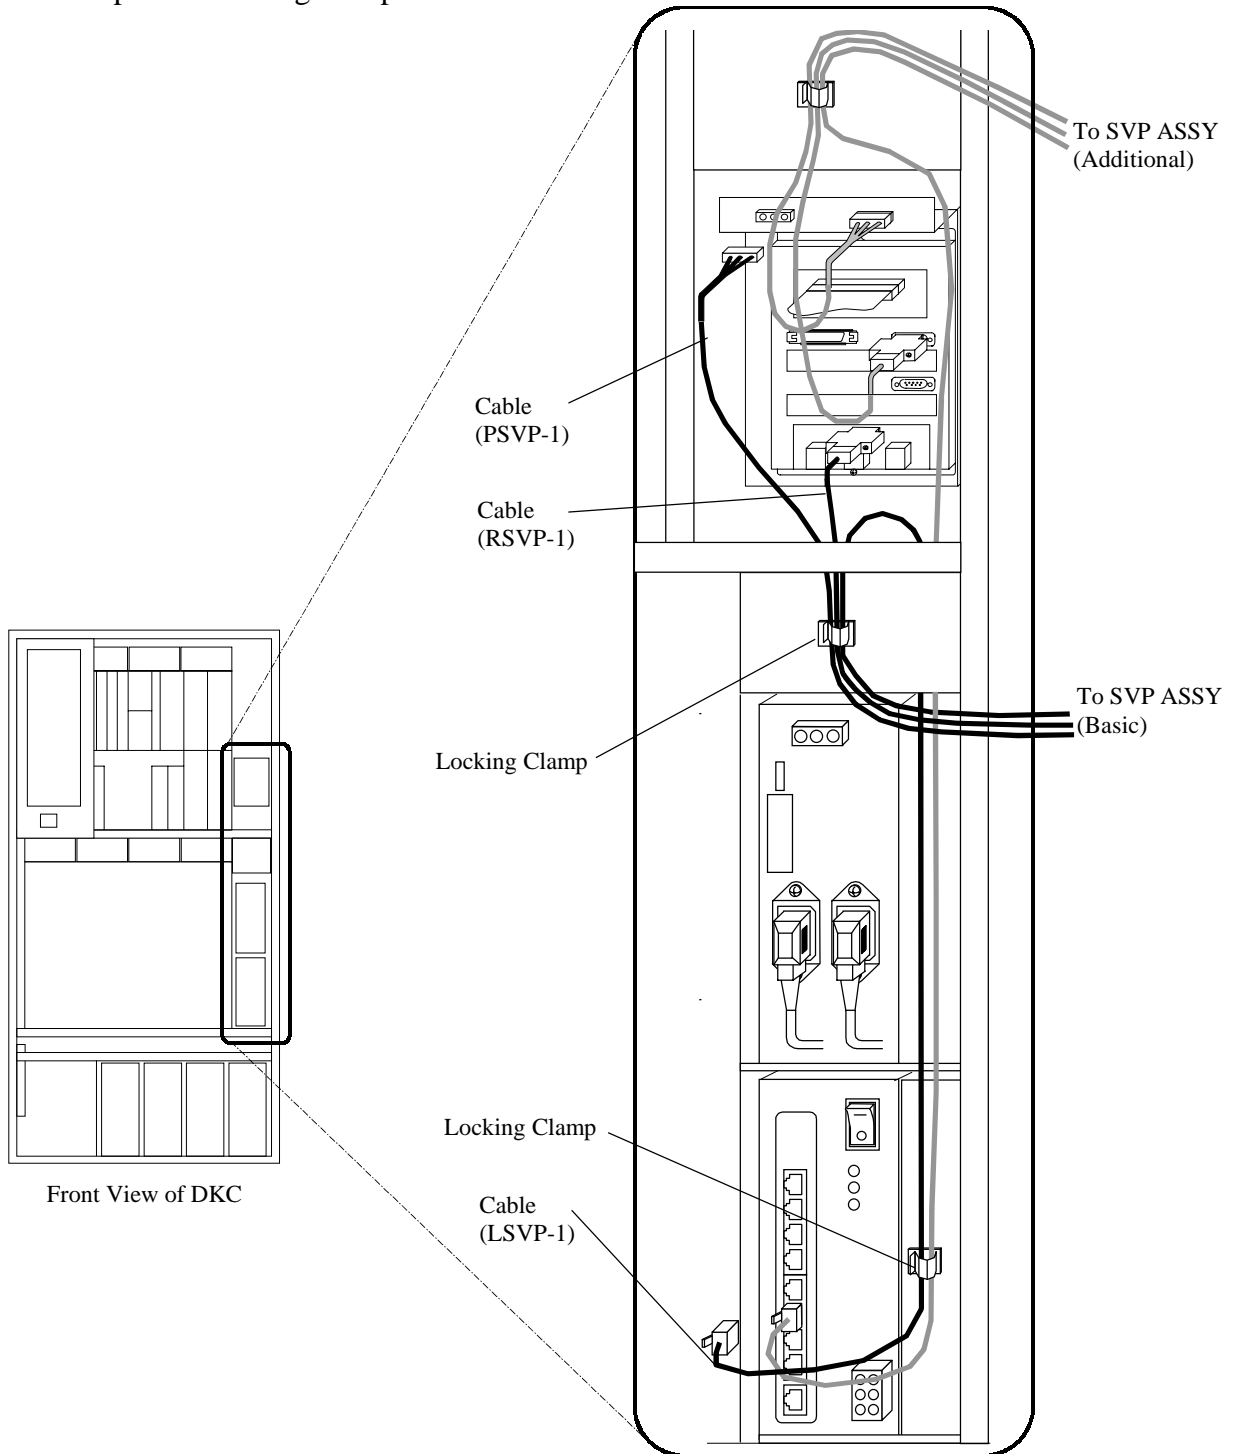


Fig. 4.9-6 Removal of Cables

Additional Memory of Option SVP ASSY

- a. Disconnect the RS232C cable (RSVP-2) from the RS CON PCB.

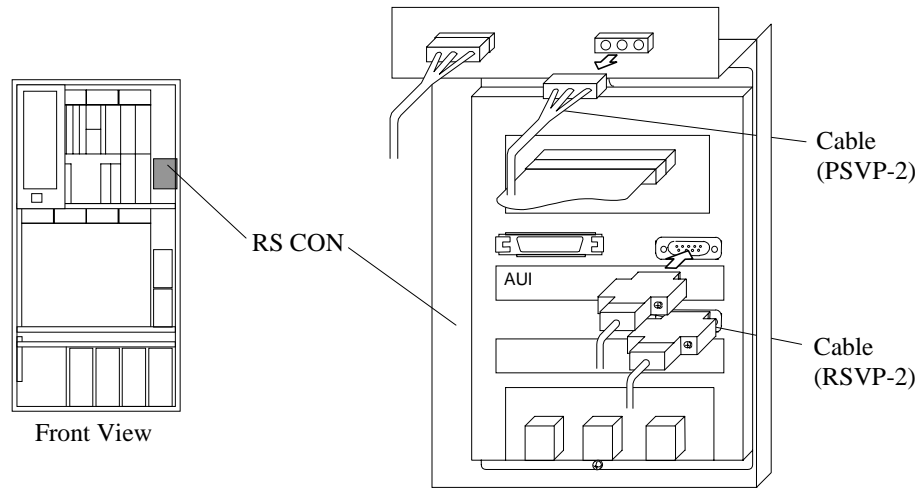


Fig. 4.9-7 Disconnection of RS232C Cable

- b. Disconnect the LAN cable (LSVP-2) from the HUB BOX.
Disconnect the SVP PS cable (PSVP-2) from the CON PLATE.

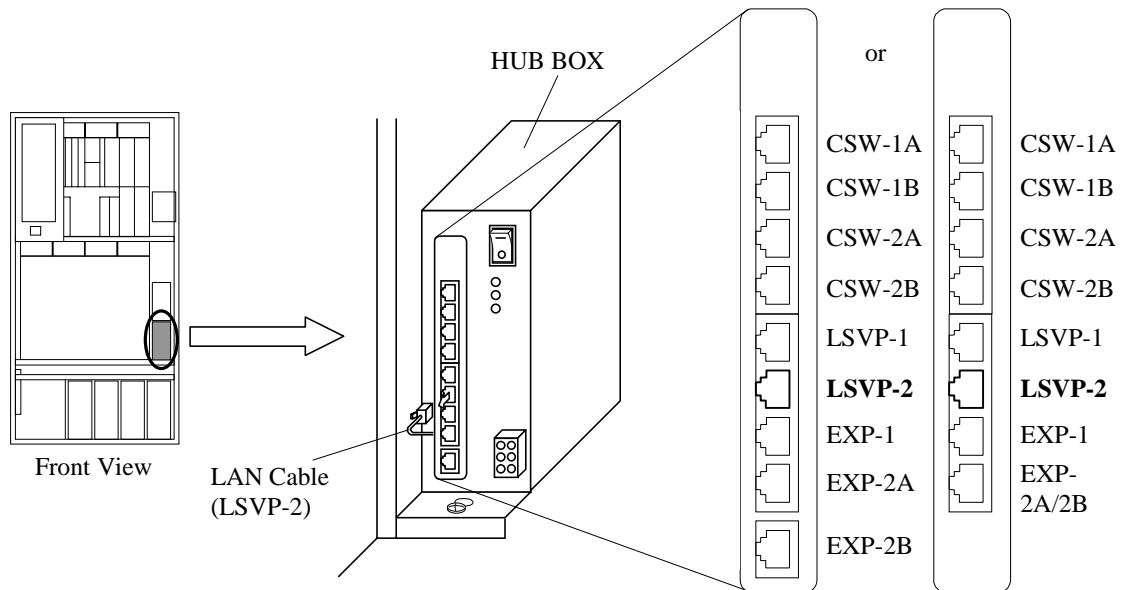


Fig. 4.9-8 Disconnection of LAN Cable and SVP PS Cable

c. Open the locking clamps and remove the cables.

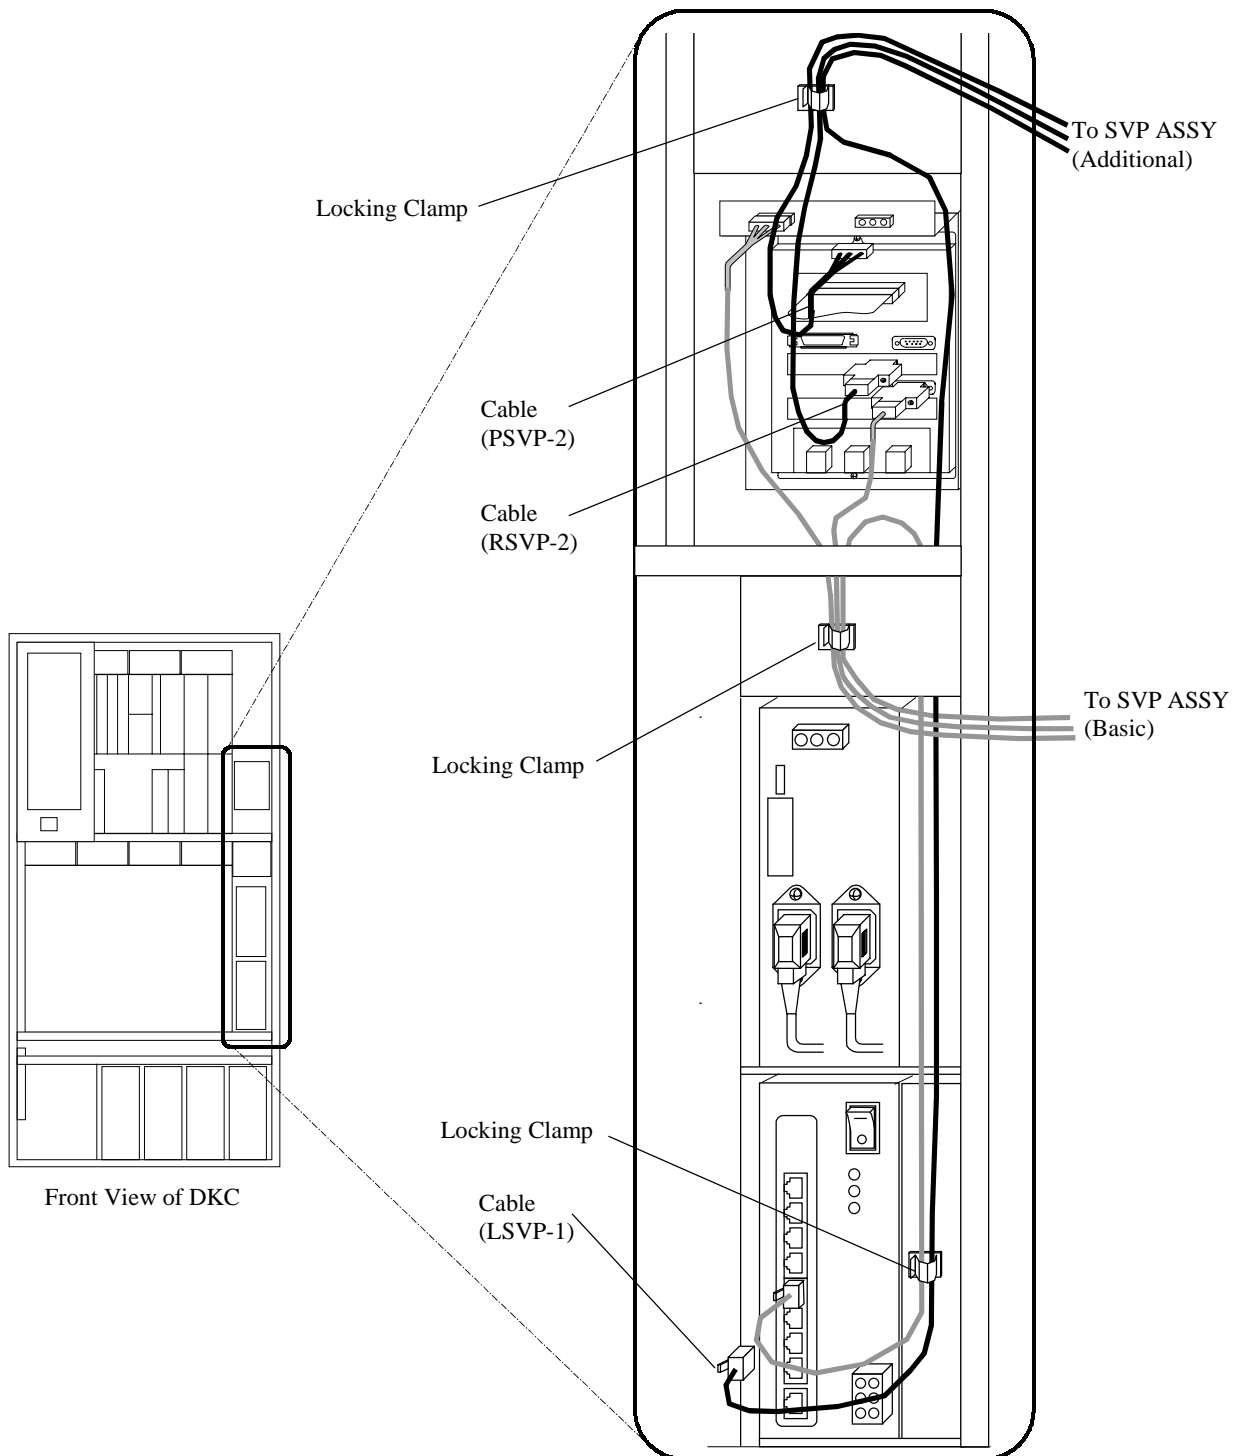


Fig. 4.9-9 Removal of Cables

6. Remove the SVP cover.
 - a. Close the SVP frame.
 - b. Loosen the screws and remove the SVP cover.

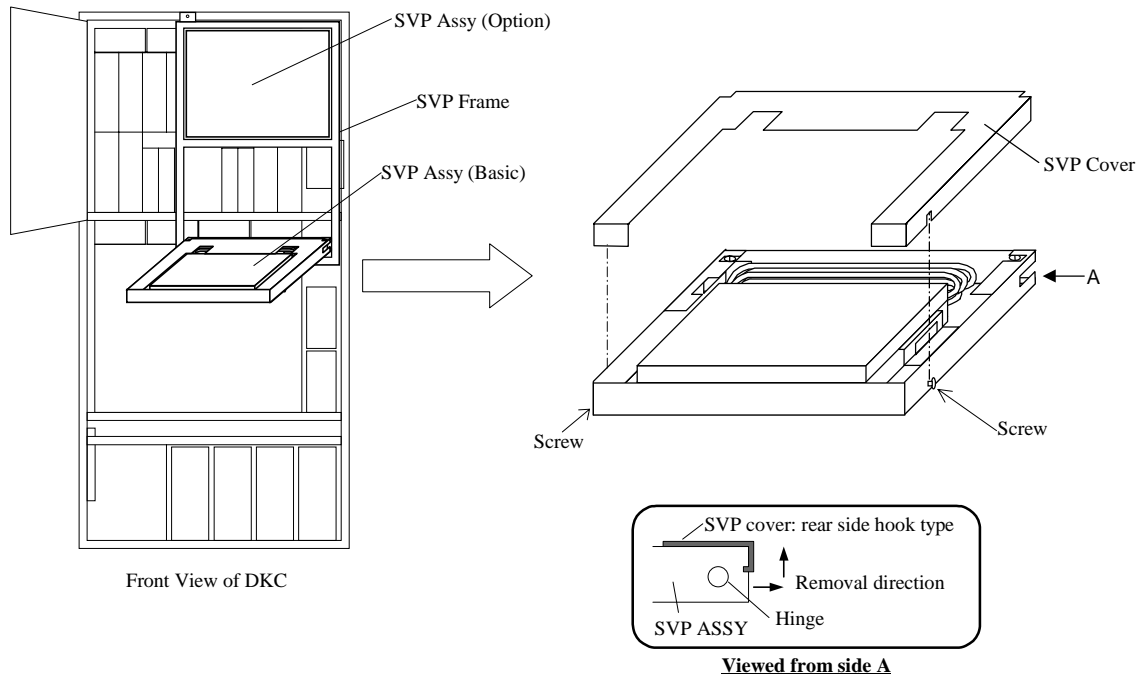


Fig. 4.9-10 Removing SVP cover

7. Loosen the screws and remove the stopper.
8. Pull out the SVP Assy.

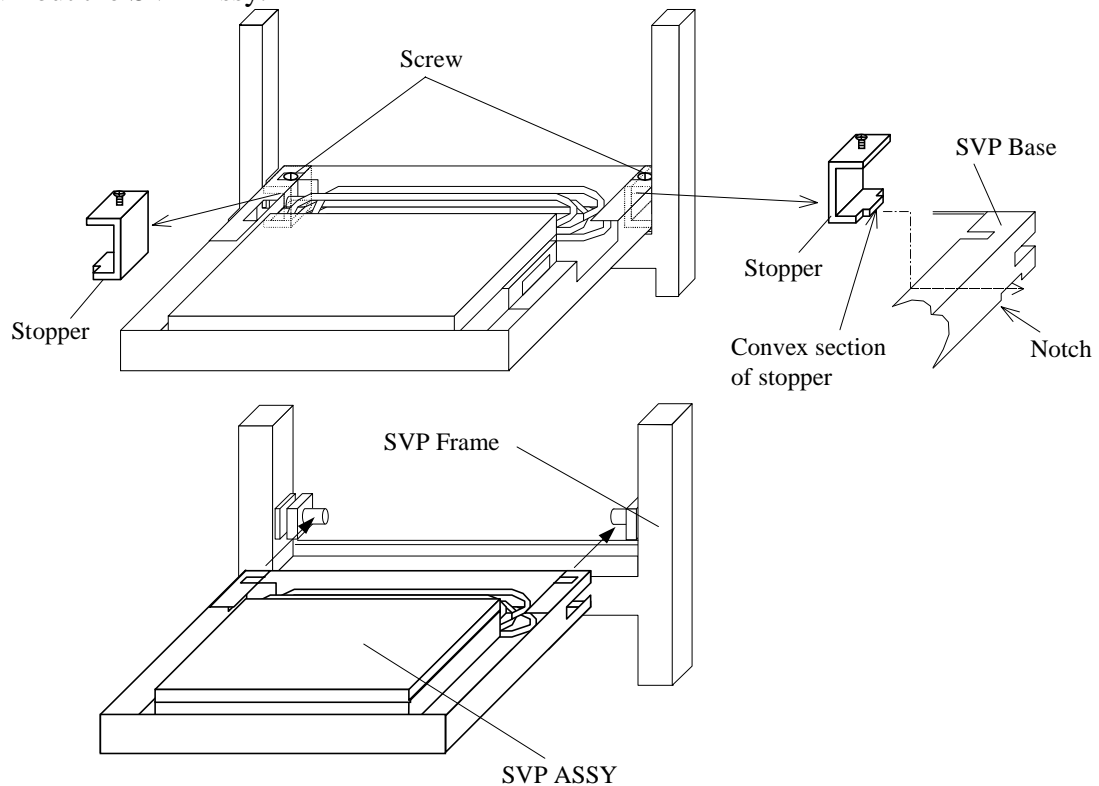


Fig. 4.9-11 Removing and installing the SVP ASSY

9. Remove the DC Cable and LAN Cable from the SVP.

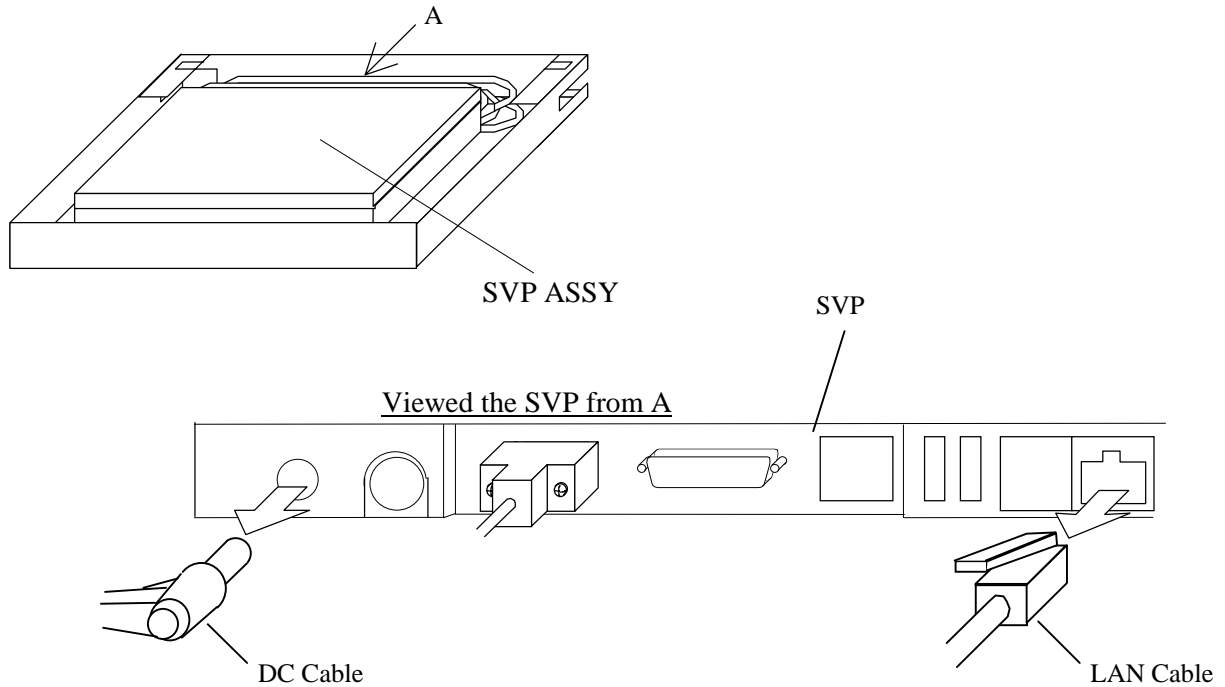


Fig. 4.9-12 Removing and installing Cables

10. Loosen the screws and remove the SVP stoppers.

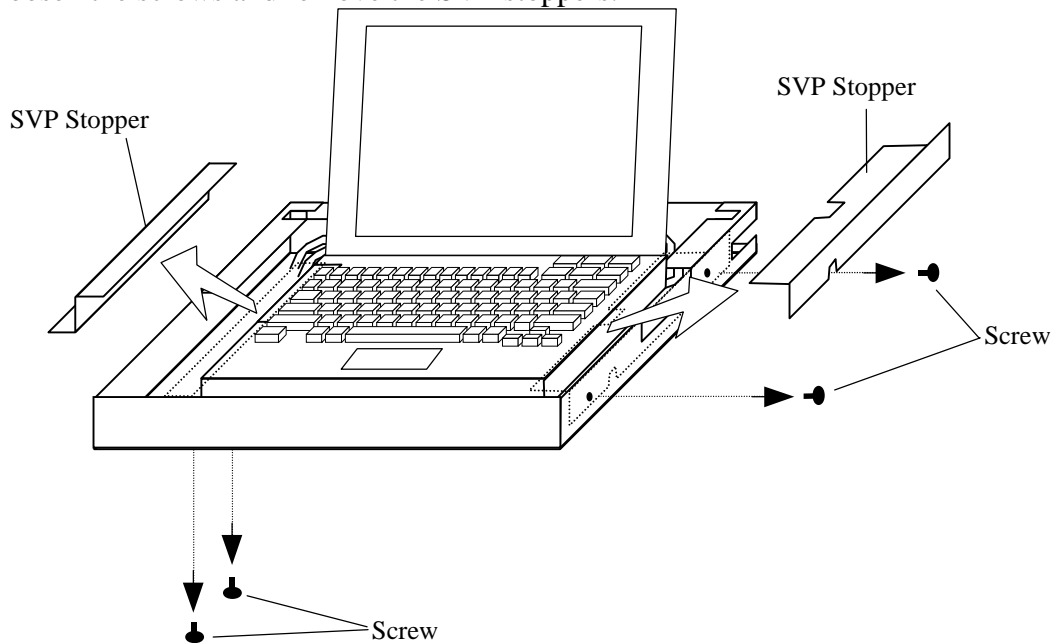


Fig. 4.9-13 Removing and installing the SVP Stoppers

11. Remove the SVP and RS232C Cable.

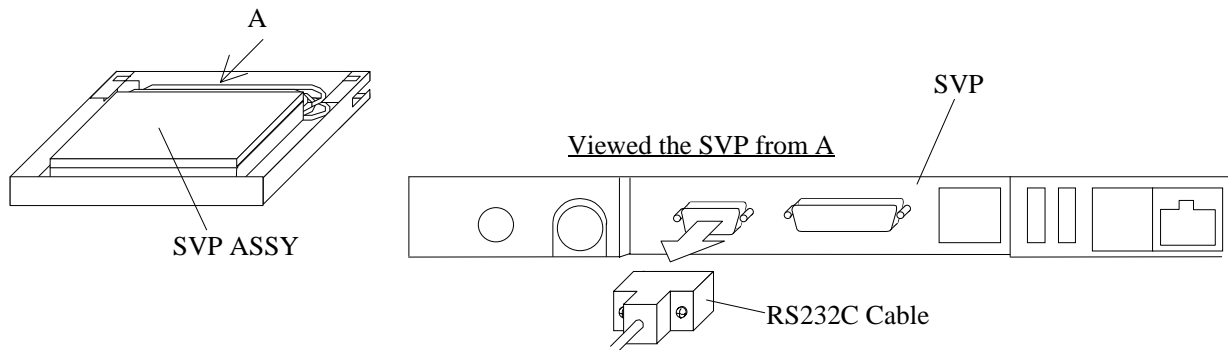


Fig. 4.9-14 Removing and installing RS232C Cable

12. Remove the Memory module.

- a. Loosen the screw and remove the Memory cover.
- b. Remove the Memory module from the slot 2.
- c. Attach the Memory cover with screw.

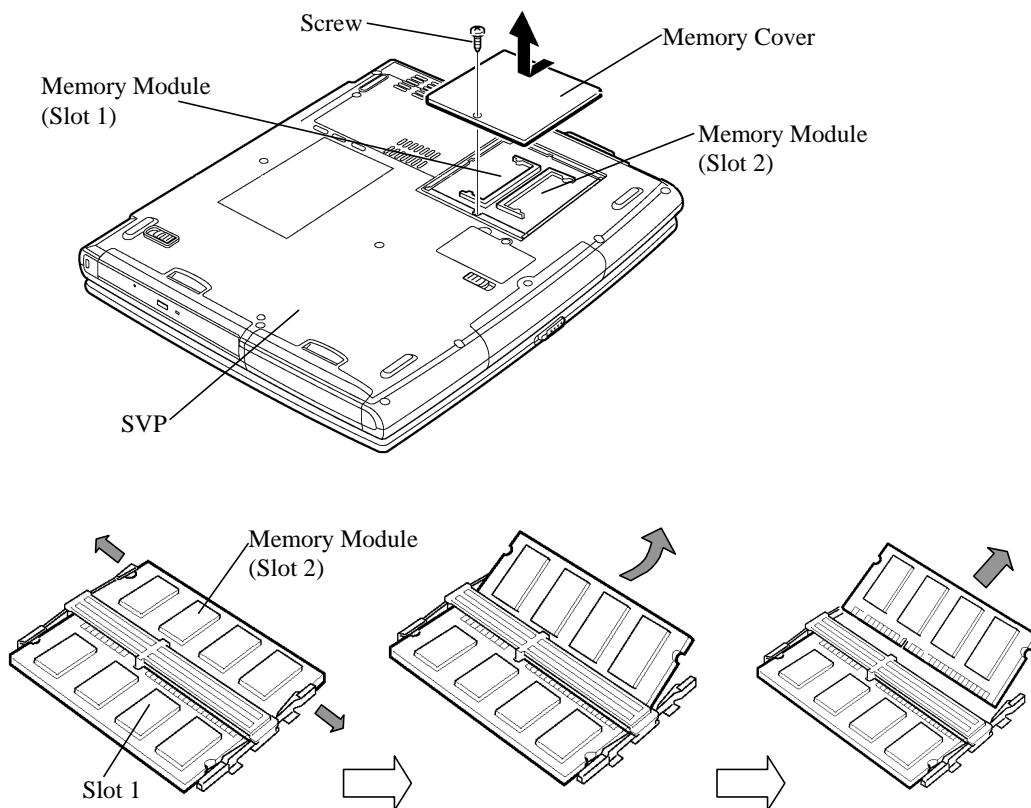


Fig. 4.9-15 Removal of Memory Module

13. Detach the Label.

- a. Detach the Label of "256MB".

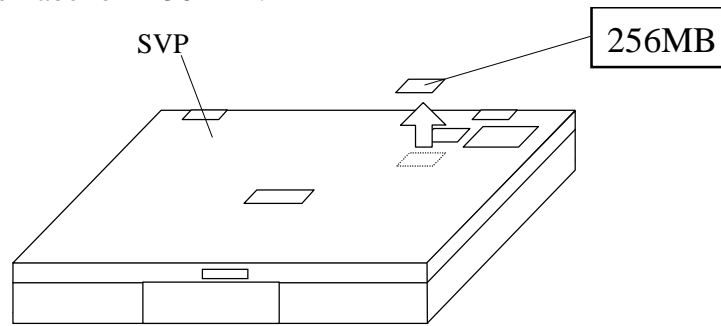


Fig. 4.9-16 Detachment of Label

14. Install a SVP.

- a. Attach the SVP and RS232C Cable. (See Fig. 4.9-14.)
- b. Install the SVP to the SVP ASSY and attach the SVP stoppers with screws. (See Fig. 4.9-13.)
- c. Connect the LAN cable and DC cable to the SVP. (See Fig. 4.9-12.)

15. Install a SVP Assy.

- a. Install the SVP to the SVP ASSY and attach the SVP stoppers with screws. (See Fig. 4.9-11.)
- b. Attach the SVP ASSY cables to the RS CON PCB, HUB BOX and CON PLATE. And then close the locking clamps. (See Fig. 4.9-6 and 4.9-9.)
- c. Attach the SVP cover. (See Fig. 4.9-10.)

16. Remove the Jumper.

Replacement of Basic SVP ASSY

- a. Remove the maintenance jumper of the JP1 on the RS CON PCB. (See Fig. 4.9-2.)

Replacement of Option SVP ASSY

- a. Remove the maintenance jumper of the PS SD on the SVPPS BOX. (See Fig. 4.9-3.)

17. Remove the nameplate.

- a. Remove the nameplate from the Rear Logic Box cover.

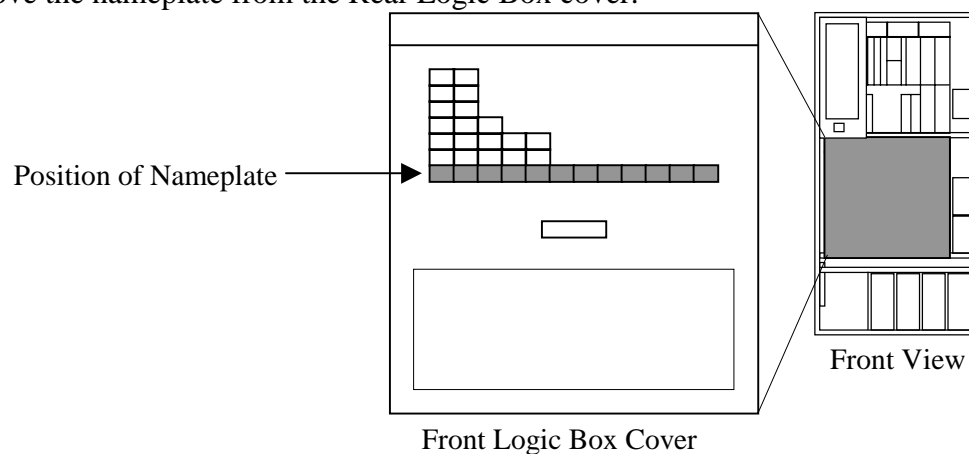


Fig. 4.9-17 Removal of Nameplate

5 SVP procedure

5.1 INDEX

5.2 New Installation SVP Procedure.....	INST05-20
5.2.1 TOD Setting and Set IP Address.....	INST05-20
5.2.2 Configuration Information Definition	INST05-80
5.2.3 Check Procedure.....	INST05-320
5.2.4 Refer Configuration	INST05-360
5.3.2 Setting up the New Device Structure Information.....	INST05-440
5.3.2.1 System Option	INST05-460
5.3.2.2 DCR Configuration	INST05-470
5.3.2.3 CVS Configuration.....	INST05-510
5.3.2.4 LUN Management	INST05-610
5.3.4 Emulation Type Change	INST05-1350
5.4 System Tuning SVP Procedure	INST05-1420
5.4.1 System Tuning.....	INST05-1420


5.2 New Installation SVP Procedure

5.2.1 TOD Setting and Set IP Address

[1] TOD Setting (Turn on subsystem power before TOD Setting)

1. <Open [Control Panel]>

Select (DR) [Settings] and then [Control Panel] from [Start].

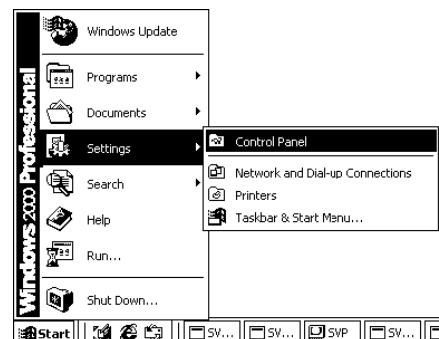


2. <Open [Date/Time]>


Select (DC) [Date/Time] from [Control Panel].




3. <Select [Time Zone]>
Select (CL) [Time Zone].

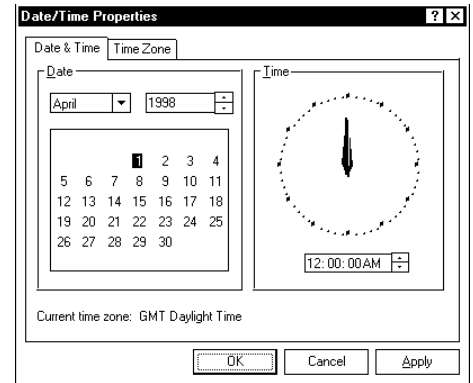

4. <Check the setting of [Time Zone]>
Make sure that the setting of [Time Zone] is “[GMT] Greenwich Mean Time; Dublin, Edinburgh, Lisbon, London”. Also, make sure that a check box on the left of “Automatically adjust clock for daylight saving changes” is ☐ (without a check mark). Then, press [OK] (CL).

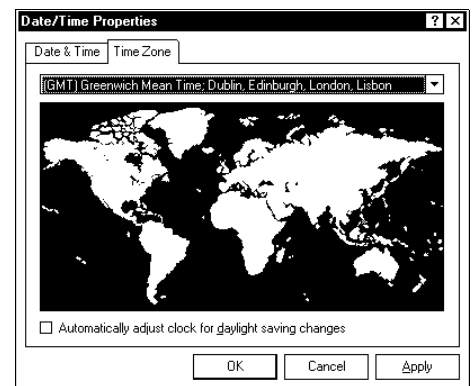


5. <Close [Control Panel]>
Select (DR) [File] and then [Close] from [Control Panel].

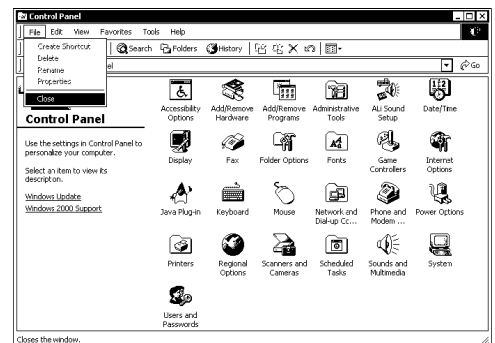

6. Change the mode to [Modify Mode] from [View Mode] (CL).

7. Select (CL) [Install].

8. Select (CL) [Set Subsystem Time] in the 'Install' window.

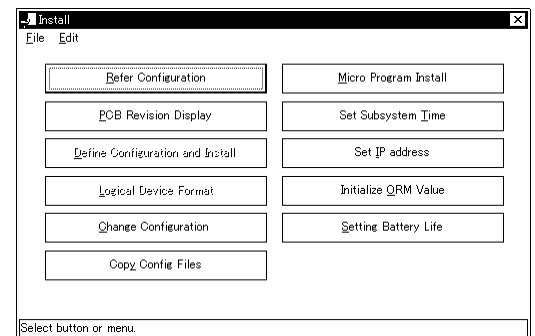

9.

Specify the date (year, month and day) and time (hour, minute and second) and select (CL) [OK].

TOD change

YYYY / MM / DD
2001 / 10 / 19

hh : mm : ss
21 : 51 : 3

OK
Cancel

10.

Close the 'Install' window.

In case of New Installation, go to [INST02-530](#) step (5).

[2] Set IP Address

NOTICE


When the SVP High Reliability kit is set up, from Standby SVP.
Please change the IP Address and change the IP Address of Master SVP after completion.

Although "RC = 7ff200" may occur, there is no problem.
Please complete SIM before operation.

1.
Change the mode to [Modify Mode] from [View Mode] (CL).

2.
Select (CL) [Install].

3.
Select (CL) [Set IP address] in the 'Install' window.

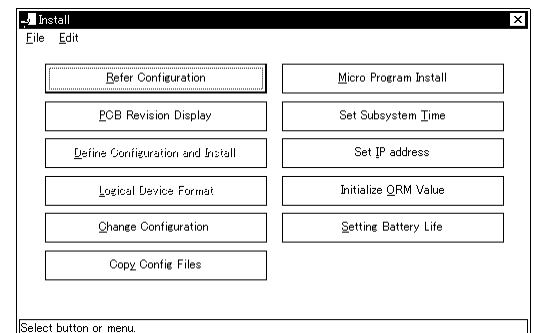

4. <Change the IP Address>

- (i) Select (CL) [SVP] and then select (CL) [OK] after entering IP Address and Subnet Mask of an Internal IP Address.

The SVP High Reliability kit un-setting up

The SVP High Reliability kit setting up
(Master SVP)

The SVP High Reliability kit setting up
(Standby SVP)

- (ii) In response to the message “This will reboot SVP.”, select (CL) [OK].

In case of New Installation, go to [INST02-540](#) step (7).
Change the IP Address is abnormally terminated
if the message “Failed to change the IP address.” is displayed.
Identify the error cause according to the procedure shown in
“TROUBLE SHOOTING SECTION”.

5.2.2 Configuration Information Definition

NOTICE

This operation is necessary only when a subsystem is newly installed. It is not performed afterward. If it is performed by mistake, a system down or a data loss may be caused.

1. <Mode Change>

Change the mode to [INITIAL SETUP Mode].

Select “Shift” + “Ctrl” + “I”.

Enter the password and select (CL) [OK].


Select (CL) [OK] in response to the confirmation message

“<Important CAUTION>

This MODE is INITIAL SETUP MODE.

You must not execute NON-DISRUPTIVE

INSTALL and NON-DISRUPTIVE DE-INSTALL!”

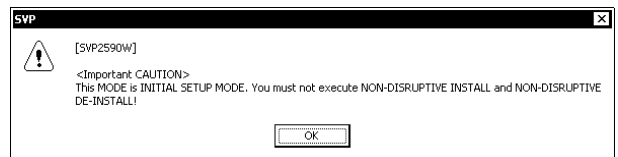


Please call Technical Support Center for asking the password.

Select (CL) [Install].

2.

Select (CL) [Define Configuration and Install...].

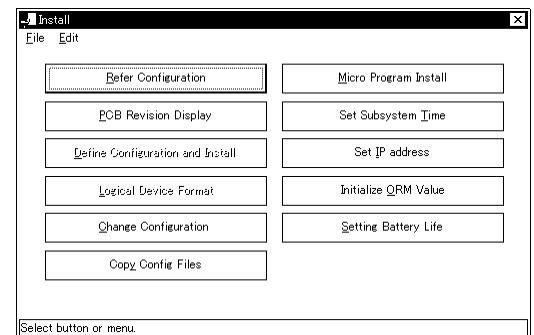

NOTICE


This is a special (exceptional) operation that can cause a serious failure such as a system down or a data loss if executed in an occasion other than the new subsystem installation, and requires an input of a password. Ask the technical support center about the appropriateness of the operation, and input the password after getting an approval of executing the operation.

3.

- (1) Select (CL) [OK] in response to the confirmation message

“<Important CAUTION>


This Operation is new installation. If you want to Non-disruptive Install or Non-disruptive de-install, terminate this procedure by [CANCEL] button and select INSTALL-CHANGE CONFIGURATION menu.”.

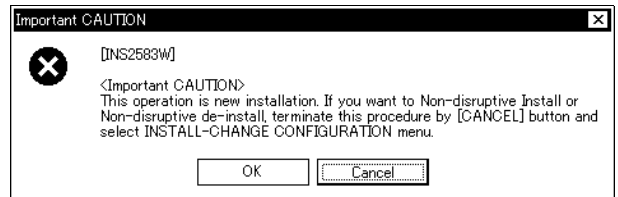

- (2) Select (CL) [OK] in response to the confirmation message

“<Important CAUTION>


When you continue this operation, finally you need DKC PS OFF. Are you sure you want to continue this operation?”.

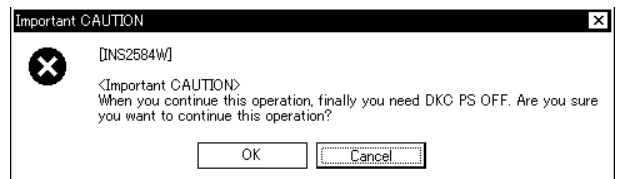

- (3) Select (CL) [OK] in response to the confirmation message

“<Important CAUTION>


When you continue this operation, customer's DATA is LOST. Are you sure you want to continue this operation?”.

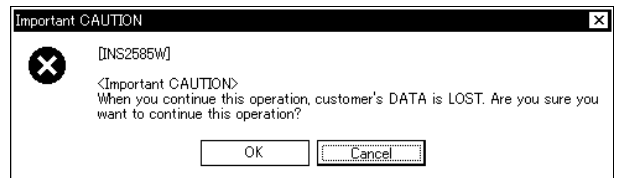


- (4) Enter the password and select (CL) [OK].

Entering the password is required in this operation.

Please call Technical Support Center for asking it.

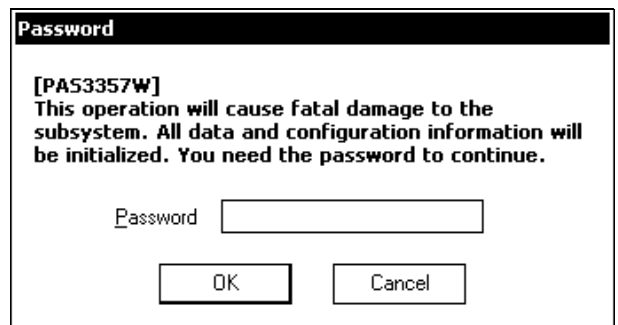

- (5) Select (CL) [OK] in response to the confirmation message “Installation data of option product in the Configuration table will be initialized by this operation. After finishing this procedure, please set the product installation again.”.

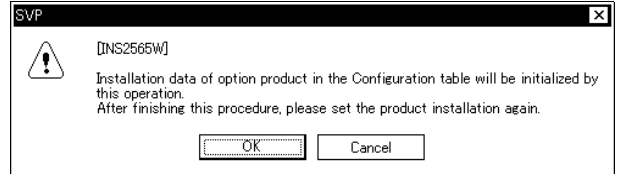

4. <Define configuration information>

Define the device configuration information from ‘DKC Configuration’ according to the device configuration worksheet.


After defining all input items is completed, select (CL) [>>Next].

If [Cache Configuration] is selected, the ‘Cache Configuration’ dialog box is displayed. (See step 4-2.)

If [System Option] is selected, the ‘System Option’ dialog box is displayed. (See step 4-3.)

If [Power Supply] is selected, the ‘Redundant Power Supply’ dialog box is displayed. (See step 4-4.)

If [Cancel] is selected, this procedure is terminated.

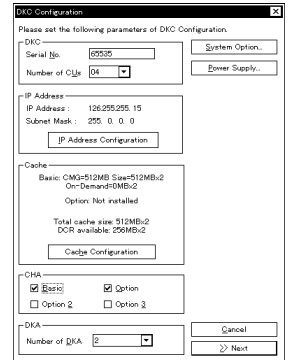


4-1. <Setting IP Address>

Set the IP Address and Subnet Mask in the ‘Set IP Address Configuration’ dialog box.

After setting up all items, select (CL) [OK].

Go to step 4.

Selecting (CL) [Cancel] returns you to step 4.

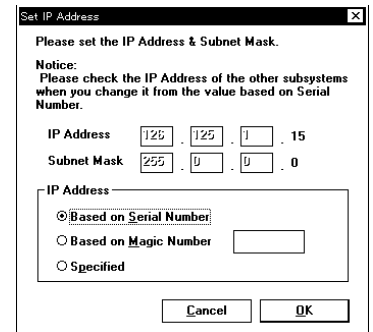


4-2. <Define Cache Capacity>

Define the cache capacity in the ‘Cache Configuration’ dialog box.

When the [Change...] is selected (CL), the ‘DCR Available Size’ dialog box is displayed. (Refer to Step 4-2-1.)


(See SSD Optional Function Section)

Note: For Single Cabinet Model, Option is not displayed.

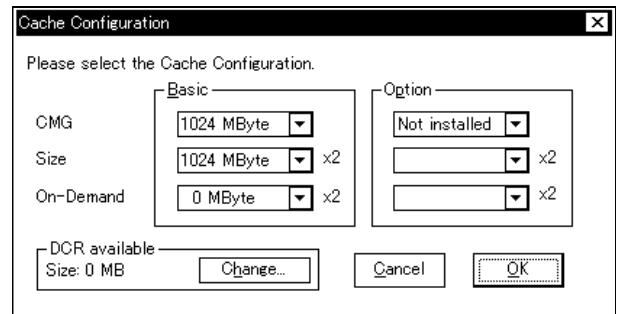


4-2-1. <Setting DCR size>

Set the DCR Available size in the 'DCR Available Size' window and select (CL) the [OK] button.
Return to Step 4-2.

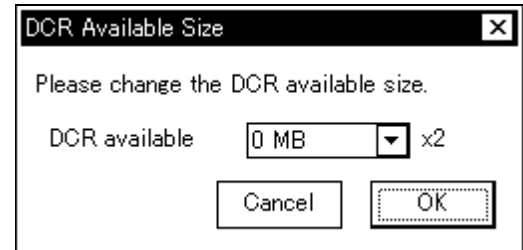


4-3. <Define System Options>

Define the device configuration information from 'System Option Setup' according to the device configuration worksheet.
After setting up all items, select (CL) [OK].
Go to step 4.
Selecting (CL) [Cancel] returns you to step 4.

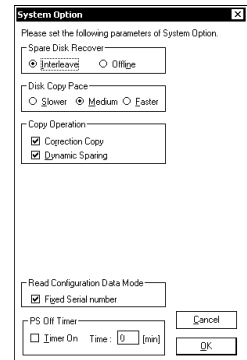

4-4. <Set Power Supply>

Set the power supply information in the 'Redundant Power Supply' dialog box.
After setting up all items, select (CL) [OK].
Go to step 4.
Selecting (CL) [Cancel] returns you to step 4.

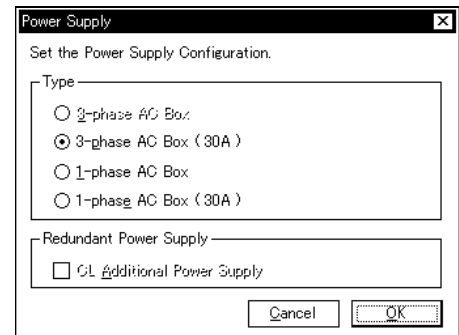

5. <Setting channel type>

Set the subsystem configuration information in the 'Host Interface Configuration' window according to the subsystem configuration information work sheet.

When [Fibre *] is selected to set the HRC/HORC or to change the Fibre PCB Mode, select (CL) [Mode Set...] and go to step 5-1.



Select (CL) [Next>>]. Go to step 5-6.

When [Serial 4 ch] is selected to set the HRC/HORC, select (CL) [RCP Set...] and go to step 5-2.

(Execute the operation above for all the channels installed.)

After all the items are set, select (CL) [>>Next]. Go to step 7.

When [Before<<] is selected (CL), the screen is returned to the previous one.

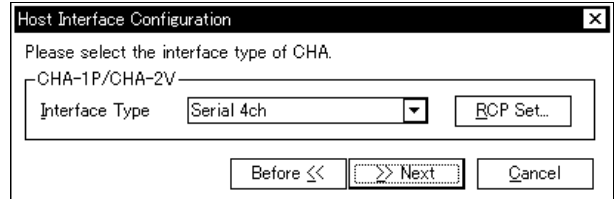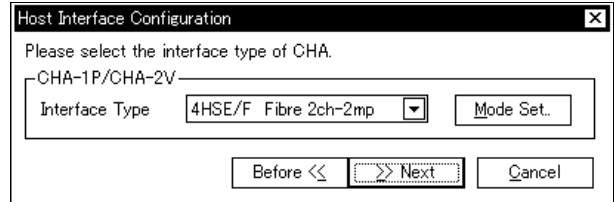


5-1. <Setting Fibre Mode>

Set the 'Target/ Initiator' in the 'Fibre Mode Configuration' dialog box only when setting the Fibre PCB Mode or HRC/HORC.

After setting up all items, select (CL) [OK].

Go to step 5.

Selecting (CL) [Cancel] returns you to step 5.

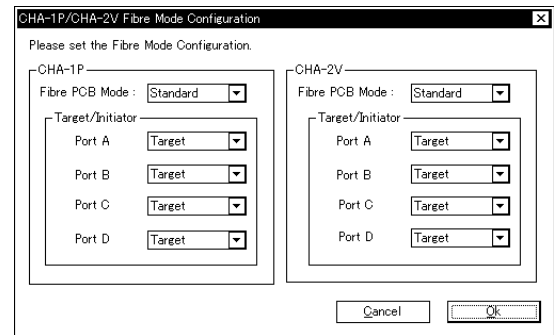


5-2. <Setting RCP port>

When setting the HRC/HORC, select (CL) the port defined as the RCP port and select (CL) [OK].

Go to step 5-3.

When [Cancel] is selected (CL), the routine returns to step 5.

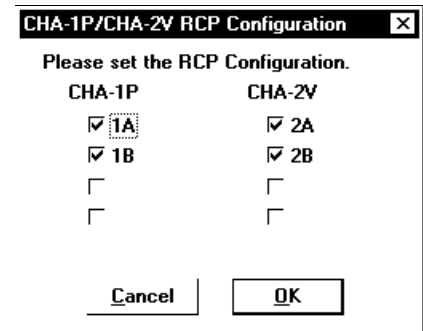


5-3. <Setting DKC emulation type>

Set the subsystem configuration information in the 'DKC Emulation Configuration' window according to the subsystem configuration information work sheet.

After the setting is completed, select (CL) [>>>Next]. Go to step 5.

When [Before<<] is selected (CL), the routine returns to step 5.

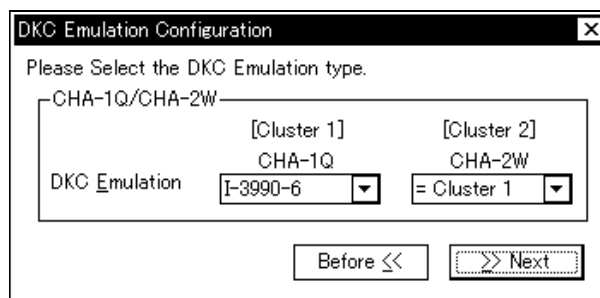

DKC Emulation Configuration

Please Select the DKC Emulation type.

CHA-1Q/CHA-2W

[Cluster 1] [Cluster 2]

CHA-1Q CHA-2W

DKC Emulation I-3990-6 = Cluster 1


Before << >> Next

5-4. <Setting CU number>

CU number is displayed.

After the setting is completed, select (CL) [>>>Next]. Go to step 5-5.

When [Before<<] is selected (CL), the routine returns to step 5-3.

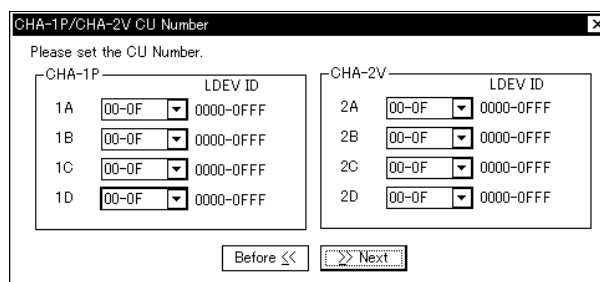

CHA-1P/CHA-2V CU Number

Please set the CU Number.

CHA-1P LDEV ID

1A 00-0F 0000-0FFF

1B 00-0F 0000-0FFF

1C 00-0F 0000-0FFF

1D 00-0F 0000-0FFF

CHA-2V LDEV ID

2A 00-0F 0000-0FFF

2B 00-0F 0000-0FFF

2C 00-0F 0000-0FFF


2D 00-0F 0000-0FFF

Before << >> Next

5-5. <SVP message>

Select (CL) [OK] in response to the confirmation message "xxxxx".

Returns to step 5.

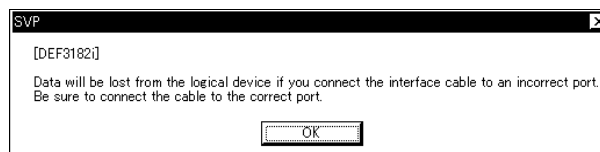

SVP

[DEF31821]

Data will be lost from the logical device if you connect the interface cable to an incorrect port.
Be sure to connect the cable to the correct port.

OK


5-6. <Setting Channel>

Set the 'Channel Speed'.

After setting up, select (CL) [>>>Next].

Go to step 6.

When [Before<<] is selected (CL), the routine returns to step 5.

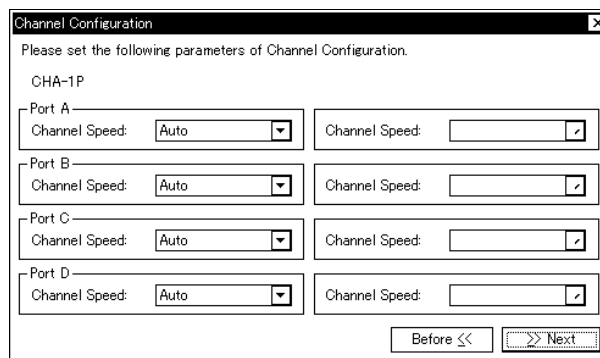

Channel Configuration

Please set the following parameters of Channel Configuration.

CHA-1P

Port A Channel Speed: Auto Channel Speed: []

Port B Channel Speed: Auto Channel Speed: []

Port C Channel Speed: Auto Channel Speed: []

Port D Channel Speed: Auto Channel Speed: []

Before << >> Next


6. <Set DKF type>

Set the 'DKF Type'.

After setting up, select (CL) [>>Next].

Go to step 6-1.

When [Before<<] is selected (CL), the routine returns to step 5.

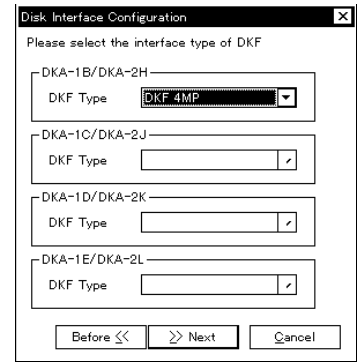

6-1. <Set DKU Equipment>


Define the DKU equipment pattern in the 'DKU Equipment' and DKU type.

After setting up, select (CL) [>>Next].

Selecting (CL) [Before<<] returns you to the previous screen.

This procedure is terminated by selecting (CL)

[Cancel].

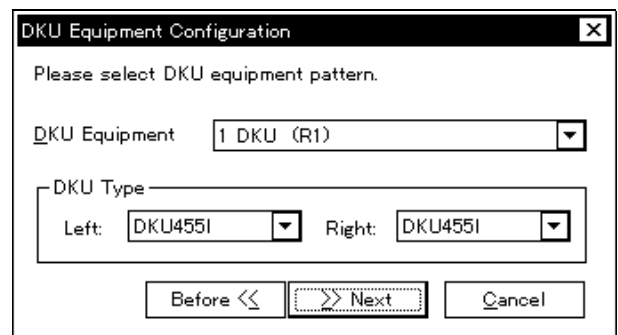

Note: For Single Cabinet Model,
the 'DKU Equipment Configuration' dialog box is not displayed.

7. <Install Drive Configuration Information>

Define drive configuration according to the 'Physical Device Configuration' screen.

Detailed procedure is shown below.


[Set...]: Defines the parity group or spare disk. The routine proceeds to Step 7-1.

[Clear...]: Cancels the setting of the B4.

After setting up all items, select (CL) [>>Next].

Selecting (CL) [Before<<] returns you to the previous screen.

This procedure is terminated by selecting (CL) [Cancel].

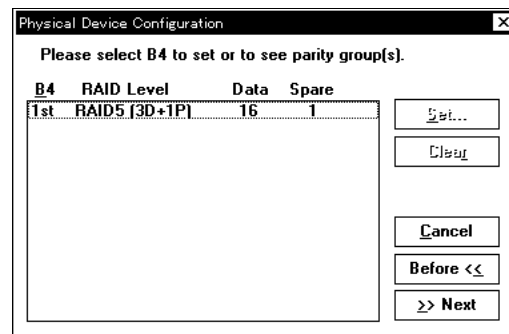

[Multi Cabinet Model]

B4	Location	B4	Location
1st	HDU-R10, 11, 12, 13	7th	HDU-L20, 21, 22, 23
2nd	HDU-R14, 15, 16, 17	8th	HDU-L24, 25, 26, 27
3rd	HDU-L10, 11, 12, 13	9th	HDU-R30, 31, 32, 33
4th	HDU-L14, 15, 16, 17	10th	HDU-R34, 35, 36, 37
5th	HDU-R20, 21, 22, 23	11th	HDU-L30, 31, 32, 33
6th	HDU-R24, 25, 26, 27	12th	HDU-L34, 35, 36, 37


Note: The 9th to 12th of the B4 are valid only when the DKUs for the RAID 400 are connected.

[Single Cabinet Model]

B4	Location	Comment
1st	HDU-0, 1, 2, 3	HDD-X00 ~ X0F
2nd	HDU-0, 1, 2, 3	HDD-X10 ~ X1F

7-1.


- To define Parity Group, select the drive to be defined and select (CL) [Group...] in the 'Parity Group Configuration' dialog box. See step 7-1-1.
- To define Spare, select the drive to be defined and select (CL) [Spare...] in the 'Parity Group Configuration' dialog box. See step 7-1-2.
- To delete an item, select an item to be deleted and select (CL) [Delete] in the 'Parity Group Configuration' dialog box.

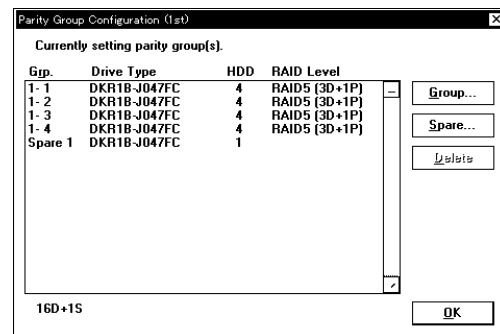

Note: If you want to set any Spare Drive in B4, please define the Spare Drive first.
After setting up all items, select (CL) [OK]. Return to step 7.


7-1-1.

Define the RAID Level and the drive capacity and the number of parity groups in the 'Parity Group' dialog box. Then select (CL) [OK]. Return to step 7-1.

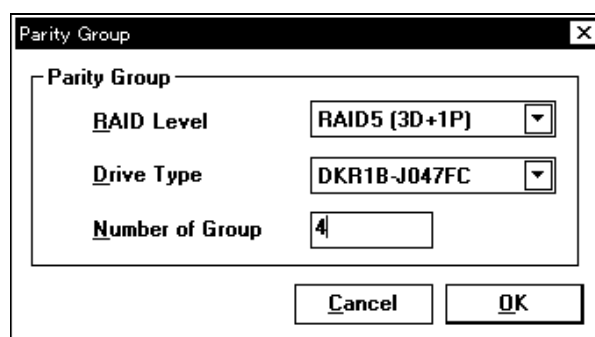

7-1-2.

Define the RAID Level and the drive capacity and the number of spare drives in the 'Spare' dialog box. Then select (CL) [OK]. Return to step 7-1.

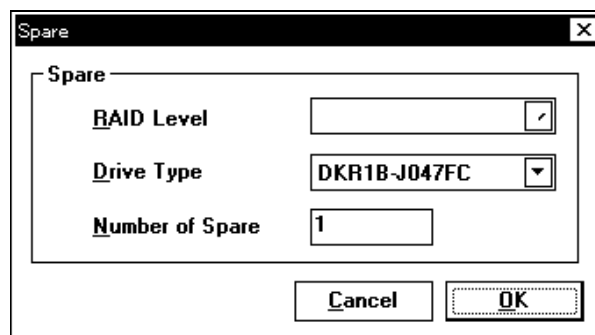


8. <Define Device Emulation>

After setting up all items for definition of Device Emulation, select (CL) [>>Next].
Selecting (CL) [Before<<] returns you to the previous screen.


8-1.

In the case of defining Device Emulation:
Select (CL) a device and select (CL) [Set...].
This procedure is terminated by selecting
(CL) [Cancel].

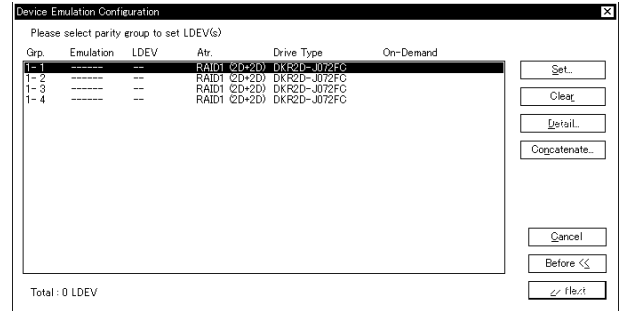

8-1-1.


After setting up all items in the 'Logical Device Emulation Type' dialog box, select (CL) [OK].
Go to step 8-1.
Selecting (CL) [Cancel] returns you to step 8-1.

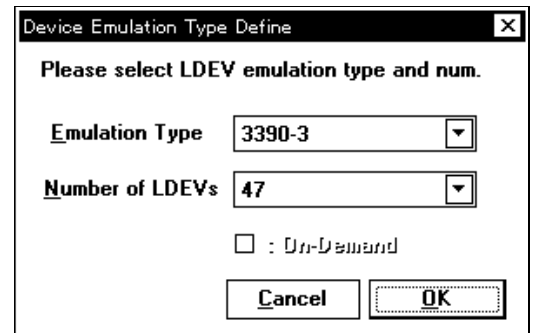

8-1-2. <Setting RAID concatenation>


- (1) After setting the LDEV emulation type and a number of LDEVs, select (CL) the [Concatenate...].

This operation is terminated when the [Cancel] is selected (CL).

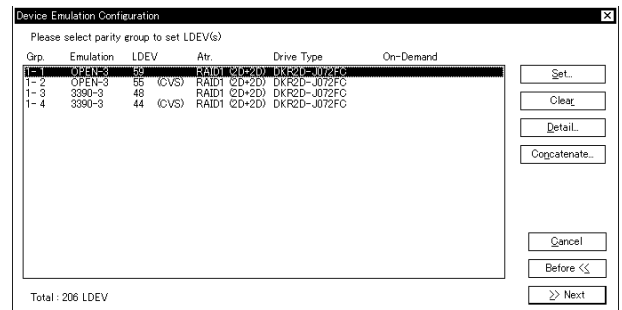


- (2) Parity groups to which the RAID concatenation can be applied are displayed in the Parity group List.

Select (CL) parity groups to which you want to apply the RAID concatenation and press (CL) the [>>] button.

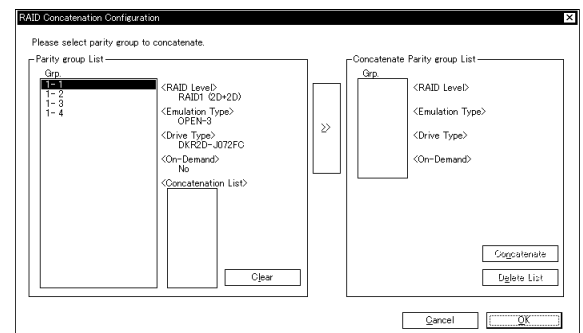


- (3) The selected parity groups are registered in the Concatenate Parity group List. Then press (CL) the [Concatenate] button.

Note: The [Concatenate] button cannot be pressed if the concatenation does not meet a condition of the RAID concatenation. Adjust the number of the parity groups in the Concatenate Parity group List.

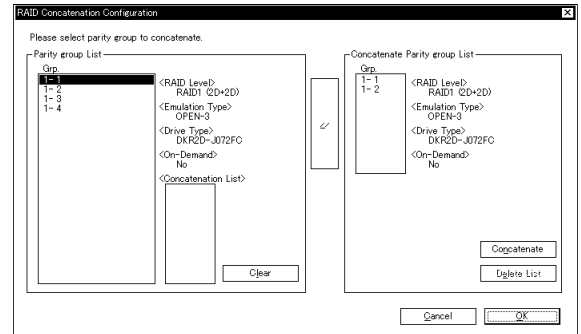


- (4) When the RAID concatenation is completed, “(Concatenation)” is displayed in the Parity group List. Selecting the “(Concatenation)” displays the concatenated parity groups in the Concatenation List. Pressing the [Clear] button cancels the RAID concatenation.

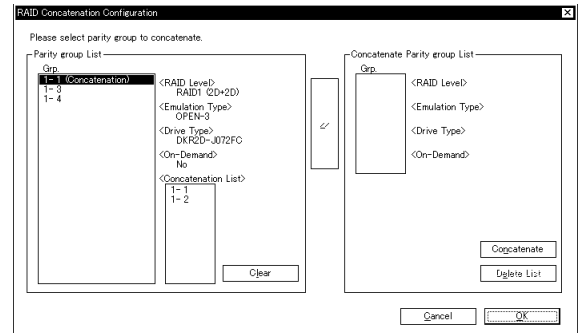

- (5) When all the settings of the RAID concatenation are completed, press (CL) the [OK] button. Pressing (CL) the [Cancel] button returns the routine to Step 8-1-2 (1).

8-2. <Defining of Customized Volume Size (CVS)>

- (1) Select (CL) a parity group for which the LDEV emulation type and the number of LDEVs have been set on the “Device Emulation Configuration” screen and select (CL) [Detail...]. This procedure is terminated by selecting (CL) [Cancel].

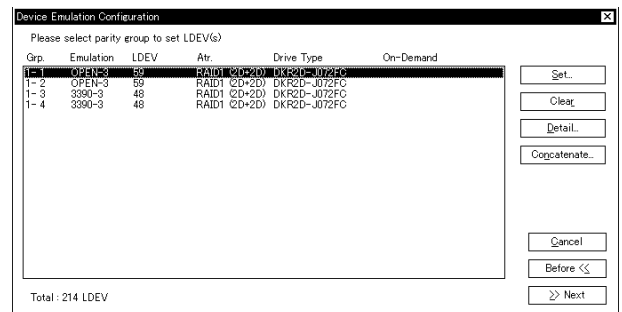

-
- Customized Volume Size Define
- | ID | Emulation | User | Total |
|-------|-----------|---------|-----------|
| | OPEN-3 | 2347.03 | (2353.35) |
| | OPEN-3 | 2347.03 | (2353.35) |
| | OPEN-3 | 2347.03 | (2353.35) |
| | OPEN-3 | 2347.03 | (2353.35) |
| | OPEN-3 | 2347.03 | (2353.35) |
| | OPEN-3 | 2347.03 | (2353.35) |
| | OPEN-3 | 2347.03 | (2353.35) |
| | OPEN-3 | 2347.03 | (2353.35) |
| | OPEN-3 | 2347.03 | (2353.35) |
| | OPEN-3 | 2347.03 | (2353.35) |
| | OPEN-3 | 2347.03 | (2353.35) |
| | OPEN-3 | 2347.03 | (2353.35) |
| | OPEN-3 | 2347.03 | (2353.35) |
| | OPEN-3 | 2347.03 | (2353.35) |
| | OPEN-3 | 2347.03 | (2353.35) |
| | OPEN-3 | 2347.03 | (2353.35) |
| | OPEN-3 | 2347.03 | (2353.35) |
| | OPEN-3 | 2347.03 | (2353.35) |
- Customized Volume Size
- Emulation: **EMUL-3**
- Size (MByte): **2347.03 MByte**
-
- 57 LDEVs (134149.21 MByte)
864.14 MByte remain
- 57 LDEV in this parity group.
-

Customized Volume Size Define

ID	Emulation	User	Total
.....	OPEN-3	2347.03	(2353.35)
.....	OPEN-3	2347.03	(2353.35)
.....	empty	9413.43	MByte
.....	OPEN-3	2347.03	(2353.35)
.....	OPEN-3	2347.03	(2353.35)
.....	OPEN-3	2347.03	(2353.35)
.....	OPEN-3	2347.03	(2353.35)
.....	empty	14120.85	MByte
.....	OPEN-3	2347.03	(2353.35)
.....	OPEN-3	2347.03	(2353.35)
.....	OPEN-3	2347.03	(2353.35)
.....	empty	16474.21	MByte
.....	OPEN-3	2347.03	(2353.35)
.....	OPEN-3	2347.03	(2353.35)
.....	OPEN-3	2347.03	(2353.35)
.....	empty	7060.07	MByte
.....	OPEN-3	2347.03	(2353.35)
.....	OPEN-3	2347.03	(2353.35)
.....	OPEN-3	2347.03	(2353.35)

37 LDEVs (87079.21 MByte)
47934.14 MByte remain

37 LDEV in this parity group.

Customized Volume Size

Emulation: **OPEN-3**

Size: 2347.03 MByte

Size (MByte):

-
- Customized Volume Size Define**
- | ID | Emulation | User | Total |
|-------|-----------|---------|-----------------|
| | OPEN-9 | 2347.03 | (2353.35) |
| | OPEN-9 | 2347.03 | (2353.35) |
| | OPEN-9 | 1000.54 | (1020.93) [CVS] |
| | OPEN-9 | 1000.54 | (1020.93) [CVS] |
| | OPEN-9 | 1000.54 | (1020.93) [CVS] |
| | OPEN-9 | 1000.54 | (1020.93) [CVS] |
| | OPEN-9 | 1000.54 | (1020.93) [CVS] |
| | OPEN-9 | 1000.54 | (1020.93) [CVS] |
| | OPEN-9 | 1000.54 | (1020.93) [CVS] |
| | OPEN-9 | 1000.54 | (1020.93) [CVS] |
| | empty | 1000.54 | (1020.93) [CVS] |
| | | | 220.07 MByte |
| | OPEN-3 | 2347.03 | (2353.35) |
| | OPEN-3 | 2347.03 | (2353.35) |
| | OPEN-3 | 2347.03 | (2353.35) |
| | OPEN-3 | 2347.03 | (2353.35) |
| | OPEN-9 | 1000.54 | (1020.93) [CVS] |
| | OPEN-9 | 1000.54 | (1020.93) [CVS] |
| | OPEN-9 | 1000.54 | (1020.93) [CVS] |
- Customized Volume Size Define**
- Emulation: **OPEN-9**
- Size: **7042.50 MByte**
- Size (MByte): **1000**
- Add**
- 81 LDEVs (132025.07 MByte)
2988.28 MByte remain
- 81 LDEV in this parity group.
- Cancel**
- OK**

-
- The screenshot shows a window titled "Customized Volume Size Define". It features a table with four columns: ID, Emulation, User, and Total. The table lists various partitions, some of which are highlighted in blue. To the right of the table is a section labeled "Customized Volume Size" containing two dropdown menus: "Emulation" set to "OPEN-9" and "Size" set to "7042.50 MByte". Below these are labels for "Size [MByte]" showing "1000" and two buttons, "[Update]" and "+Add". At the bottom left, status information reads "81 LDEVs (132025.07 MByte)" and "2988.28 MByte remain". A note at the very bottom states "81 LDEV in this parity group.". On the bottom right are "Cancel" and "OK" buttons.
- | ID | Emulation | User | Total |
|--------------|-----------|-----------------|-------|
| OPEN-3 | 2347.03 | (2353.35) | |
| OPEN-9 | 2347.03 | (2353.35) | |
| OPEN-9 | 1000.54 | (1020.93) [CVS] | |
| OPEN-9 | 1000.54 | (1020.93) [CVS] | |
| OPEN-9 | 1000.54 | (1020.93) [CVS] | |
| OPEN-9 | 1000.54 | (1020.93) [CVS] | |
| OPEN-9 | 1000.54 | (1020.93) [CVS] | |
| OPEN-9 | 1000.54 | (1020.93) [CVS] | |
| OPEN-9 | 1000.54 | (1020.93) [CVS] | |
| OPEN-9 | 1000.54 | (1020.93) [CVS] | |
| OPEN-3 | 2347.03 | (2353.35) | |
| OPEN-3 | 2347.03 | (2353.35) | |
| OPEN-3 | 2347.03 | (2353.35) | |
| OPEN-9 | 1000.54 | (1020.93) [CVS] | |
| OPEN-9 | 1000.54 | (1020.93) [CVS] | |
| OPEN-9 | 1000.54 | (1020.93) [CVS] | |
| OPEN-9 | 1000.54 | (1020.93) [CVS] | |
- Customized Volume Size

Emulation: OPEN-9

Size: 7042.50 MByte

Size [MByte]: 1000

[Update] + Add

81 LDEVs (132025.07 MByte)
2988.28 MByte remain

81 LDEV in this parity group.


Cancel OK

8-3.

In the case of deletion:

Select (CL) a device and select (CL) [Clear].

This procedure is terminated by selecting (CL) [Cancel].

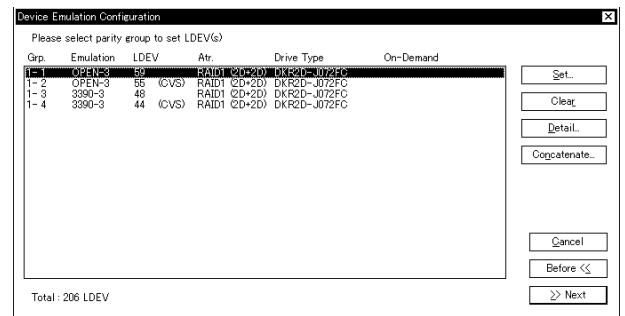

9. <Define LDEV ID>

After setting up all items, select (CL) [>>Next]. Selecting (CL) [Before<<] returns you to the previous screen.

9-1. <Definition Screen for LDEV ID>


Select (CL) the parity group to be defined and select (CL) a function from the [LDEV ID] list box.

[Linear...]: LDEV ID is assigned to LDEV in the order of parity group. See step 9-3.

[Disperse...]: LDEV is assigned discretely in the order of parity group. See step 9-3.

[Detail...]: A screen to define LDEV in detail is displayed. See step 9-2.

- '-----' is displayed in CU area and ID area for the parity group to which LDEV ID is not assigned.
 - 'xxxxx' is displayed in ID area for the parity group to which any LDEV ID is not assigned.
- This procedure is terminated by selecting (CL) [Cancel].

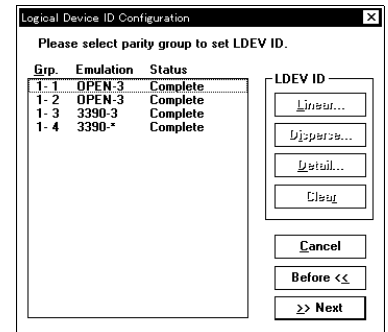


9-2. <Detailed Definition Screen for LDEV ID>

LDEV ID is defined in detail for each LDEV in the parity group.

Select (CL) [LDEV] from the list box and select (CL) [Change...].

The screen for LDEV ID input is displayed.

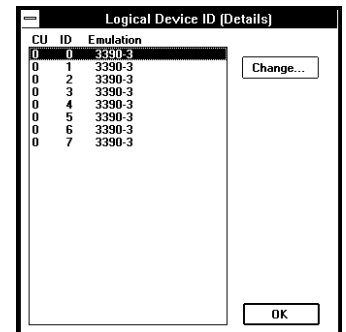

9-3. <Input LDEV ID>

Select CU ID in the CU combo box.


The status of usage of ID in the CU is displayed in the LDEV ID panel.

White disk of panel: not used

Black disk of panel: using

Input LDEV ID you want to set or head LDEV ID in the ID Edit box.

After setting, select (CL) [OK]. Return to step 9.

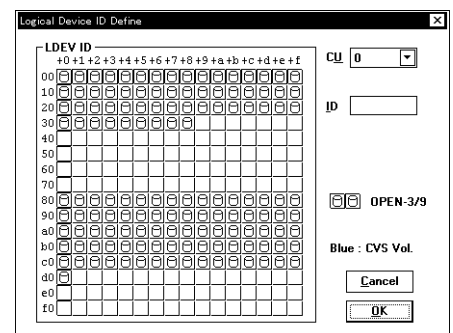


10. <Define Subsystem ID Boundary>

Set the Subsystem ID Boundary in the 'Set SSID Boundary' dialog box.

After setting up all items, select (CL) [OK].

Go to step 5.

This procedure is terminated by selecting (CL) [Cancel].

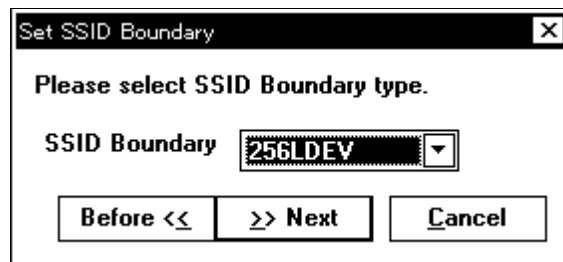


10-1. <Define Subsystem ID>

To define Subsystem ID, select (CL) [SSID].

After setting, select (CL) [>>Next].


This procedure is terminated by selecting (CL) [Cancel].

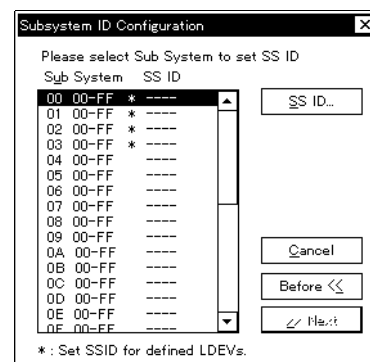

10-2.

Define Subsystem ID and select (CL) [OK].

Return to step 10-1.

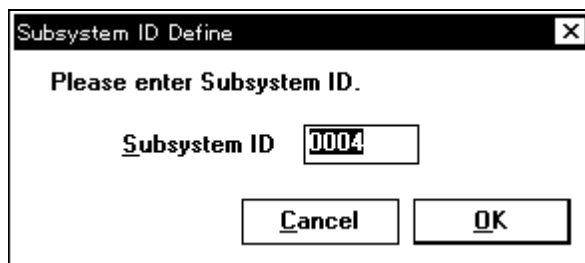

11. <Defining DCR>



- (1) Select (CL) a parity group having LDEV(s) for which the DCR is to be set on the “DCR Configuration” screen and press (CL) the [Detail...] button.

Total cache memory size which DCR area use is displayed.


If the selected parity group has a DCR area, the BIND size and to PRIO size are displayed under the “DCR Configuration” screen.

After setting above, select (CL) [>>Next].

This procedure is terminated by selecting (CL) [Cancel].

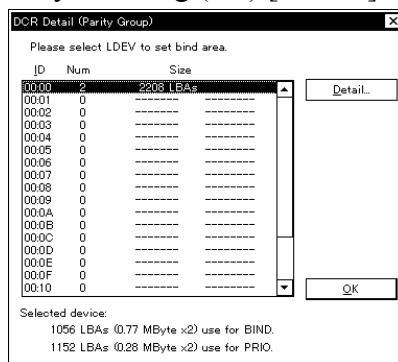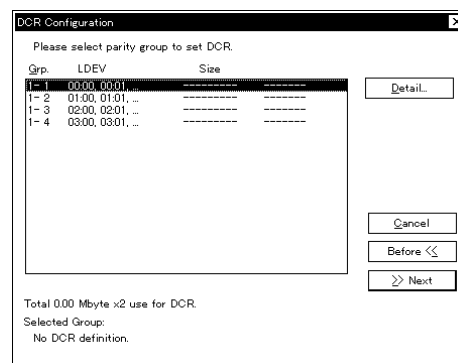


(For open system)

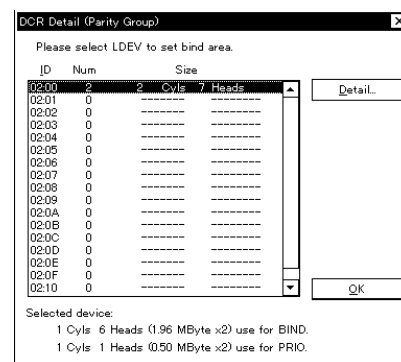


(For Mainframe system)

- (2) Select (CL) an LDEV where the DCR is to be set on the “DCR Detail (Parity Group)” screen and press (CL) the [Detail...] button.

If the selected LDEV has a DCR area, the BIND size and the PRIO size are displayed under the “DCR Detail (Parity Group)” screen.

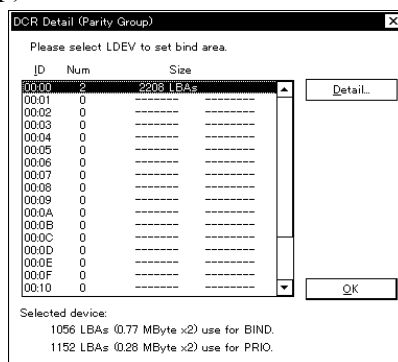

(For open system)

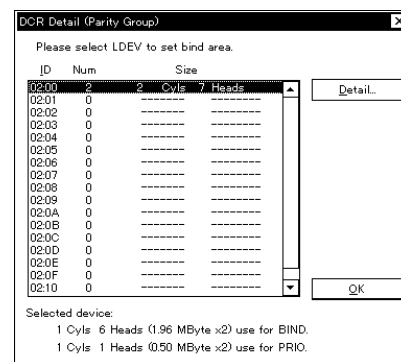

(For Mainframe system)

- (3) Confirm the LDEV size and the number of slots allowed to be set for each type on the “DCR Detail (Logical Device)” screen. Press (CL) the [Set...] button to set the DCR area.

- (4) Enter the type, starting cylinder number, starting head number, ending cylinder number, and ending head number (for Mainframe system. Refer to the screen on the right.) or the type, starting LBA, and ending LBA (for open system. Refer to the screen on the left.) on the “DCR Define” screen and select (CL) [OK].
For open system, all items are allowed to be set.

- (5) When the screen is returned to the “DCR Detail (Logical Device)” screen, the entrance result is displayed.

DCR Detail (Logical Device)

Please enter BIND/PRIO area.

from LBA	to LBA	Type	Size
0	1055	BIND+	1056 LBAs
1920	3071	PRIO+	1152 LBAs

Set...
Delete

OK

Device : 00:00 (4806720 LBAs) RAID5
348000 LBAs remain for BIND
1044192 LBAs remain for PRIO
+Prestaging area

(For open system)

DCR Detail (Logical Device)

Please enter BIND/PRIO area.

from CC HH	to CC HH	Type	Size
0 00	1 05	BIND+	1 Cyls 6 Heads
2 00	3 00	PRIO+	1 Cyls 1 Heads

Set...
Delete

OK

Device : 02:00 (3339 Cylinders) RAID5
179 Cyls 8 Heads remain for BIND
538 Cyls 9 Heads remain for PRIO
+Prestaging area

(For Mainframe system)

- (6) When an item in the list box is selected (CL) and the [Delete] button is pressed (CL) on the “DCR Detail (Logical Device)” screen, the DCR setting is deleted. When the setting is completed, press (CL) [OK].

DCR Detail (Logical Device)

Please enter BIND/PRIO area.

from CC HH	to CC HH	Type	Size
0 00	1 05	BIND+	1 Cyls 6 Heads
2 00	3 00	PRIO+	1 Cyls 1 Heads

Set...
Delete

OK

Device : 02:00 (3339 Cylinders) RAID5
179 Cyls 8 Heads remain for BIND
538 Cyls 9 Heads remain for PRIO
+Prestaging area

- (7) If you want to set other LDEV(s) in the parity group which you selected, repeat steps (2) to (6) for the LDEV(s).

- (8) If you want to set other LDEV(s) in other parity group, repeat steps (1) to (6) for the LDEV(s).


12. <Define Shared Memory Size>

Define the shared memory module size in the 'Shared Memory Size Configuration' dialog box.

Select (CL) [>>Next].

This procedure is terminated by selecting (CL) [Cancel].

Go to [INST05-610](#).

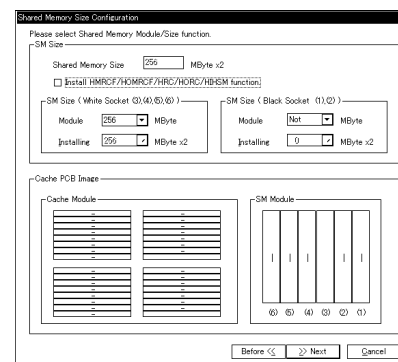


13. <Include configuration information>

- (1) Select (CL) [Yes] in response to the confirmation message "Are you sure you want to install the defined configuration?".

"Wait..." is displayed, then "Turn off DKC subsystem" is displayed.


Selecting (CL) [No] suppresses the configuration inclusion processing and terminates the installation procedure.

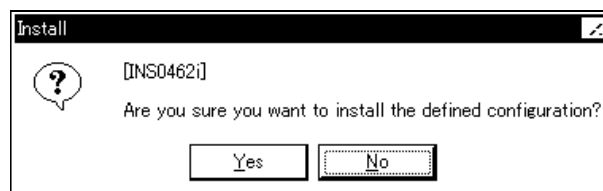

- (2) Select (CL) [OK] in response to the confirmation message

"<Important CAUTION>


When you continue this operation, finally you need DKC PS OFF. Are you sure you want to continue this operation?".

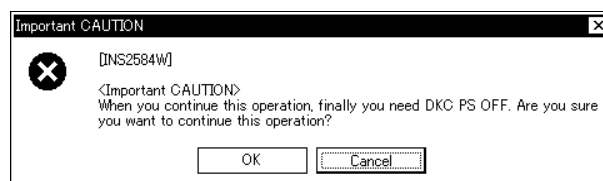

- (3) Select (CL) [OK] in response to the confirmation message

"<Important CAUTION>


When you continue this operation, customer's DATA is LOST. Are you sure you want to continue this operation?".

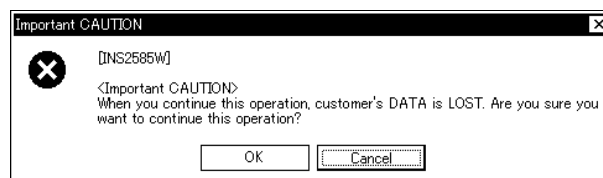

- (4) Select (CL) [OK] in response to the confirmation message

“<Important CAUTION>

When you continue this operation, configuration data will be changed. Are you sure you want to continue this operation?”.

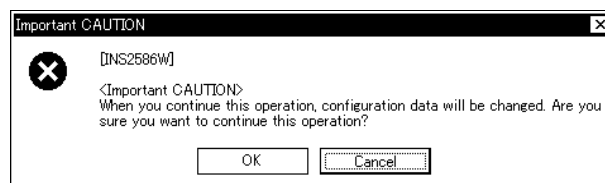


- (5) Select (CL) [OK] in response to the confirmation message

“<Important CAUTION>

When you select [OK] button, you can't cancel this operation. Are you sure you want to continue this operation?


If you terminate this operation by some forcible method, the subsystem be in UNRECOVERABLE SERIOUSLY DAMAGE.”.

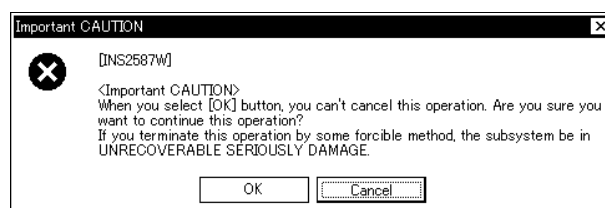

- (6) Select (CL) [OK] in response to the confirmation message

“<Important CAUTION>

You must not RE-BOOT SVP(PC).”.

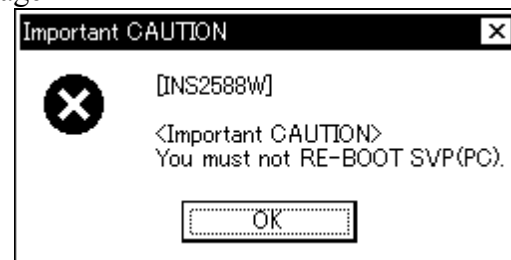

14. <Power off DKC P/S>

Make sure that “Turn off DKC, and wait.” is displayed and perform the power-off procedure from the DKC maintenance panel.

After a while, “Wait...” will be displayed.


Turn off DKC, and wait.

15.

This step allows the contents of the SVP HD to be loaded into SM and FM.
When this procedure is completed, "Battery Life Warning SIM" is displayed.


16.

Select [Set...] applying the check to 'Battery Life Warning SIM'.

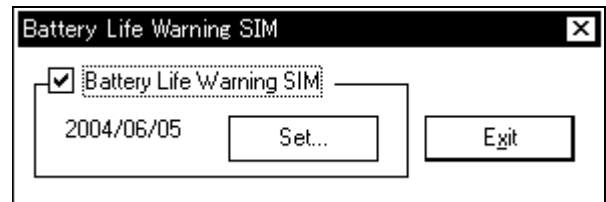


17.

Select (CL) [OK] after inputting the remainder days by reporting on warning SIM.

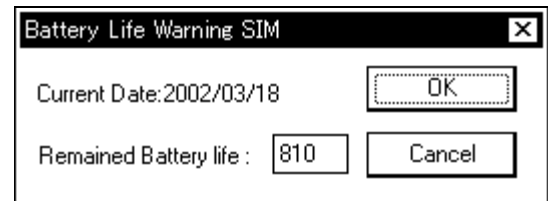


18.

Insert the configuration FD into FDD, and select (CL) [OK].

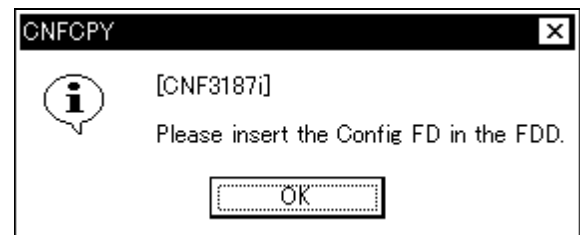

19.

When this procedure is completed, the message “Please remove the Config FD.” is displayed. Remove the FD, and then select (CL) [OK].

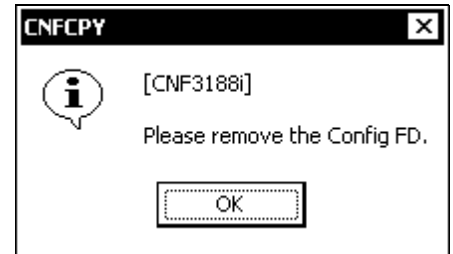

20.

After making sure that the DKC power is turned off, select (CL) [OK] in response to “Installation was finished.”.

Select (CL) [OK] in response to “This will reboot SVP.”.

Go to [INST02-550 step \(31\)](#).

Note: SVP power will not turn off or reboot even when DKC is powered off.




5.2.2.1 LDEV ID setting procedure when the emulation types of different systems coexist

5.2.2.1.1 Coexistence in units of parity group

The LDEV ID setting procedure is explained using an example of a case in which both the 3390 system LDEV and OPEN system LDEV are set in the same subsystem. This example shows the ID setting procedure when the B4-1/B4-2 is fully equipped with RAID5 (3D+1P), and the B4-1 and the B4-2 are defined as the 3390-3/OPEN-3 and the 3390-9/OPEN-3 respectively. Since systems other than the 3390 system and the 3390-3R cannot coexist in the parity group, the ID can be defined in this procedure.


1.

Select only the parity group for which the 3390 system emulation type has been defined.

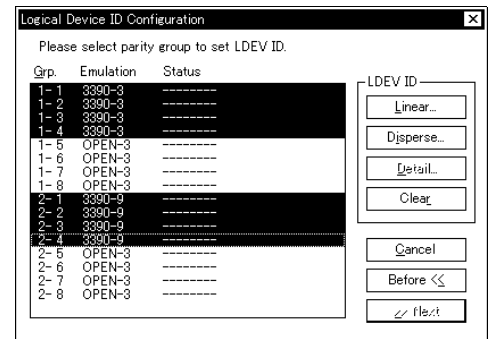


2.

Press the Linear or Disperse button to open the LDEV ID input screen and input the LDEV ID. (In the example, the Disperse button is pressed.)

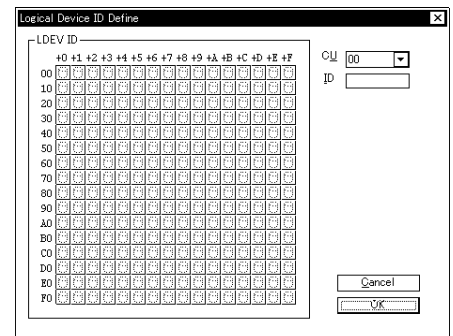


3.

Next, select only the parity group for which the OPEN system emulation type has been set.

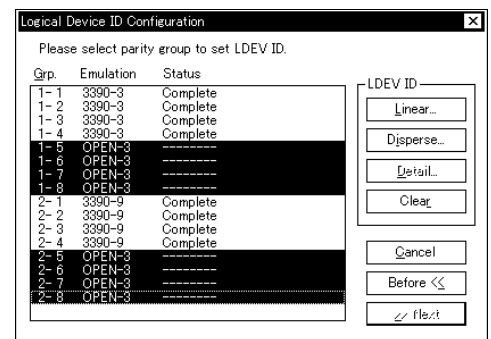


4.

Press the Linear or Disperse button to open the LDEV ID input screen and input the LDEV ID. In this case, take care not to make a coexistence occur in the block. In the example, 0:a0 and the subsequent are unused blocks. Therefore, input a0.

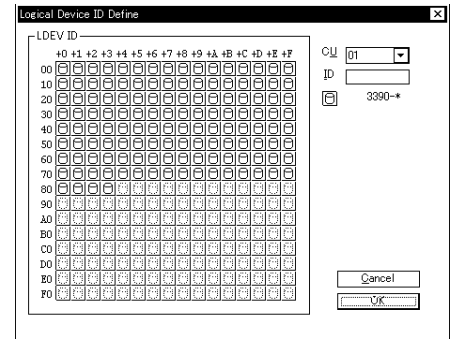

5.

Setting is completed.

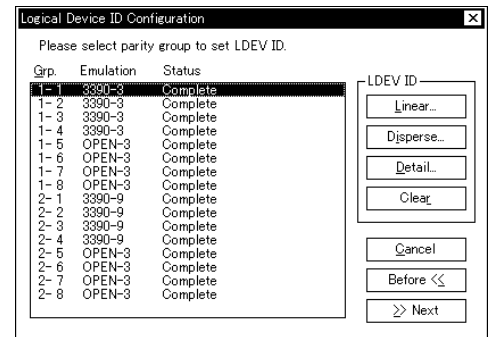

Needless to say, the setting sequence of steps (1) and (3) may reversed.


If emulation types of different systems are selected at the same time, the guarding function works to prevent the setting by making the Linear and Dispense buttons unselectable.

5.2.2.1.2 Coexistence in a parity group

The 3390-3R can be set as a CV in the 3390 system parity group. The 3390 system LDEV can also be set as a CV in the 3390-3R parity group. If the ID is set in the procedure explained in Section 3.1 when this emulation setting has been performed, an intra-block coexistence setting violation occurs. To prevent the coexistence violation, set the ID following the procedure below.


1.

For the parity group for which definitions of the 3390 system and 3390-3R coexist, the emulation type is displayed as “3390-*”. Select one parity group defining the 3390-3R as the CV and press the Detail button to open the screen displaying the LDEV definition detail in the parity group.

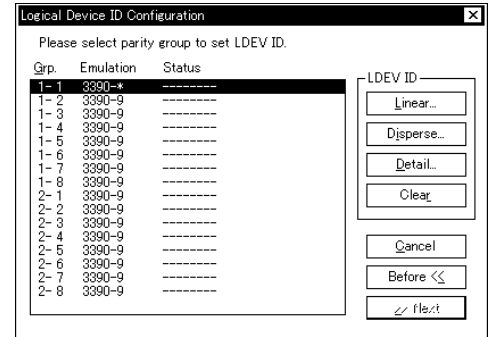

2.

Select the 3390-3R on the detail screen and define the LDEV ID.

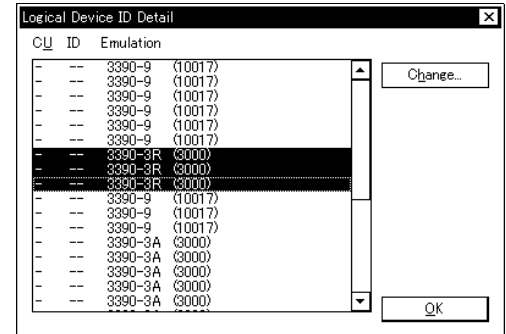


3.

Repeat (1) and (2) until the definition of the 3390-3R LDEV ID is finished. In the example, the 3390-3R is assigned to IDs starting from ID 0:80.

4.

When the definition of the 3390-3R is completed, select the parity group defining emulation type of the same system and define the LDEV ID in the same way as that Section 3.1.

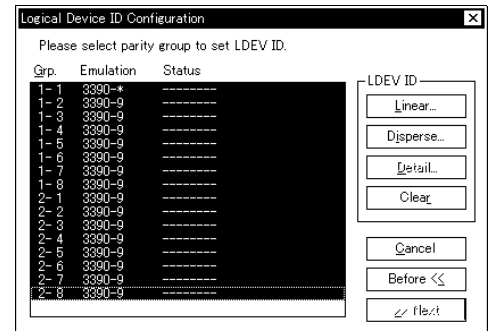

5.2.3 Check Procedure

NOTICE

This operation is necessary only when a subsystem is newly installed. It is not performed afterward. If it is performed by mistake, a system down or a data loss may be caused.

1. <Execute Power-on CUDG>

Perform the power-on procedure from the DKC-PANEL.

(See [INST03-PWR-10](#))

Power-on CUDG is automatically executed on the DKC logic circuitry.

If an error occurs, SIM Log, SSB Log has logging.

(See [SVP02-30](#))

2. <Execute DKU Path inline test>

Perform DKU Path inline tests on all DKAs installed during the new installation procedure to check the validity of the drives.

See DIAGNOSIS SECTION for the test procedure. ([DIAG04-150](#))

Note: Before carrying out the DKU Path inline test, switch the current application to the program manager and have the SVP initial screen (which is shown in the right figure) displayed.

3. <Check subsystem status and all MPs micro-version>

Check the subsystem Status and all MPs micro-version.

(See [SVP03-10](#) and [SVP03-180](#))

NOTICE

This is a special (exceptional) operation that can cause a serious failure such as a system down or a data loss if executed in an occasion other the new subsystem installation, and requires an input of a password. Ask the technical support center about the appropriateness of the operation, and input the password after getting an approval of executing the operation.

4. <Format L-DEV>

(1) Change the mode to[INITIAL SETUP Mode].

Select “Shift” + “Ctrl” + “I”.

Enter the password and select (CL) [OK].



Please call Technical Support Center for asking the password.

Select (CL) [OK] in response to the confirmation message “<Important CAUTION>

This MODE is INITIAL SETUP MODE.

You must not execute NON-DISRUPTIVE INSTALL and NON-DISRUPTIVE DE-INSTALL!”

Select (CL) [Install].

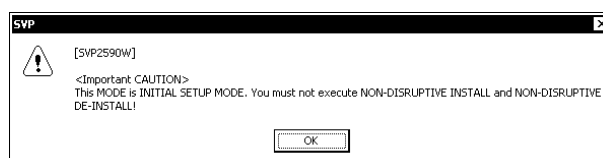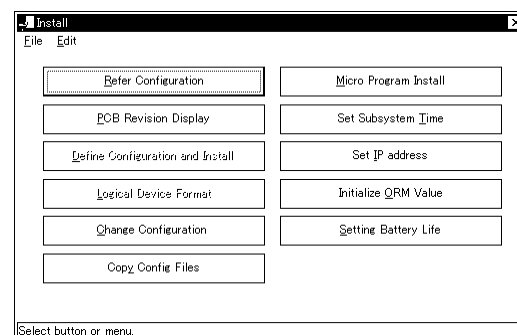


(2) Select (CL) [Logical Device Format].

Note: Execute Format Logical Device after confirming all Logical Device is blocked.


4.1.

Select (CL) [Yes] in response to “This process will format all logical devices. Are you sure you want to continue this process?”.

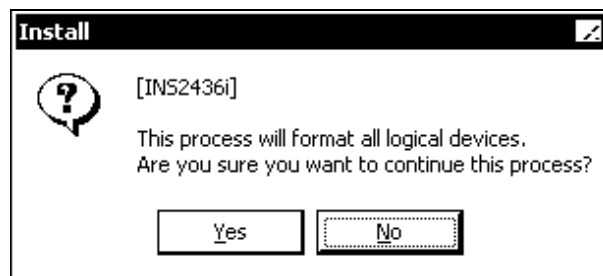


4.2.

Enter the password and select [OK] (CL).
 Password is needed for this operation.
 Please call Technical Support Center to obtain
 a password and authorization.

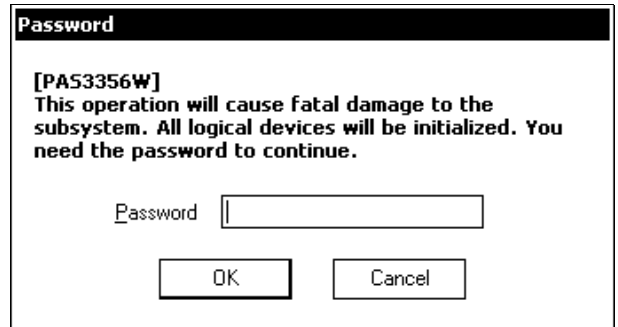

4.3.


When L-DEV Formatting is complete, 'Formatting logical devices...' shown in the right figure disappears and "Formatting was finished." is displayed.

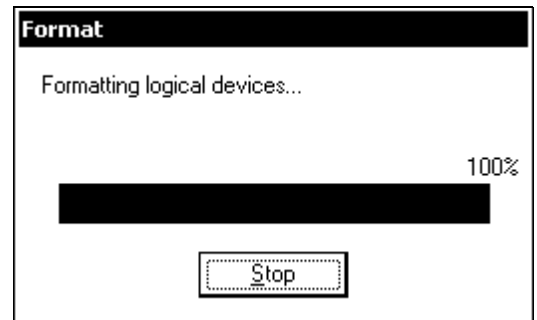

4.4.

Select (CL) [OK] in response to "Formatting was finished."

L-DEV formatting is abnormally terminated if the message
 "Formatting logical devices rejected by DKC." or
 "Formatting the logical device is failed." is displayed.
 Identify the error cause according to the procedure shown in
 "TROUBLE SHOOTING SECTION".

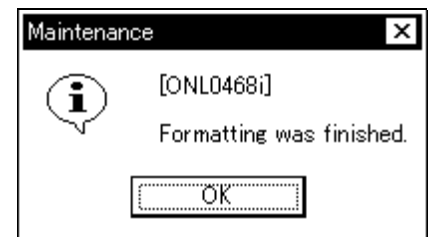

4.5. <Check logical device status>

Check if Logical Devices are normal by with referring to the 'Logical Device Status' display.

5. <Check subsystem status>

Check if all parts are normal by referring to 'Maintenance'.

6. <Check system interlock operation>

Start the test program from the host to check for normal subsystem's interlocked operation with the host.

7. <Delete error log>

Power ON/OFF the subsystem to make sure that the subsystem starts normally (neither ALARM nor MESSAGE indicators should light).


Delete all error log information from the SVP and transfer the subsystem to the user. See [SVP02-170](#).

Go to [INST02-560](#) step (END).


5.2.4 Refer Configuration

1. <Start [Install]>
Select (CL) [Install] from 'SVP'.


2. Select (CL) [Refer Configuration].

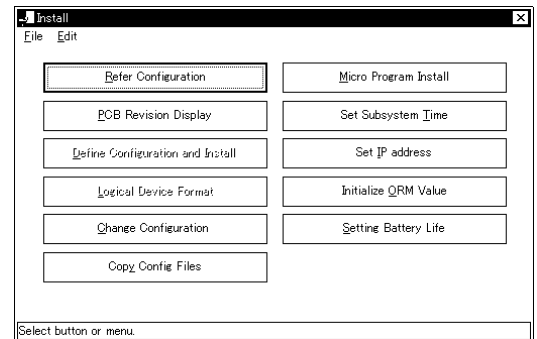

3. <DKC configuration information>
If [System Options...] is selected (CL), 'System Option' is automatically displayed.
If [Power Supply...] is selected (CL), 'Redundant Power Supply' is automatically displayed.
When you select (CL) [>>Next], 'Host Interface Configuration' is automatically displayed.
This procedure finishes when you select (CL) [Cancel].

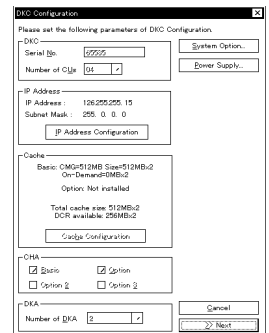


4. <System Option information>
When the [Option...] is selected (CL), the 'Option Product' dialog box is displayed. (Refer to Step 4-1.)
Selecting (CL) [OK] returns the screen to step 3.

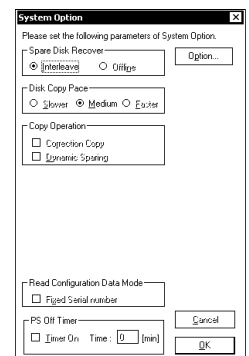


4-1. <Setting Program Product>

Select (CL) the [Close] button.
Return to Step 4.

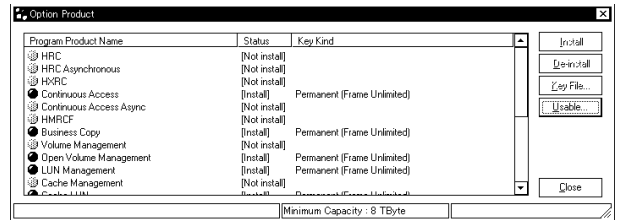

5. <Setting Power Supply>

Selecting (CL) [OK] returns the screen to step 3.

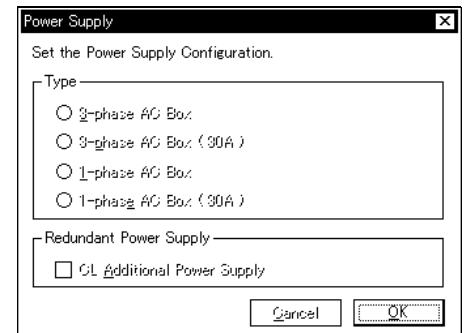

6. <Setting Channel type>

When you select (CL) [Fibre *], [Mode set] is enabled, selecting (CL) [Mode set] processing skip to step 8.



Select (CL) [>>Next] processing skip to step 9-2.

When you select (CL) [Serial 4ch] or [Serial 2ch].

The [RCP Set...] button is enabled. Selecting (CL) [RCP Set...] skip the screen to step 9.

Processing skip to step 10 if you selecting (CL) [>>Next].

Selecting (CL) [Before <<] returns the screen to step 6.

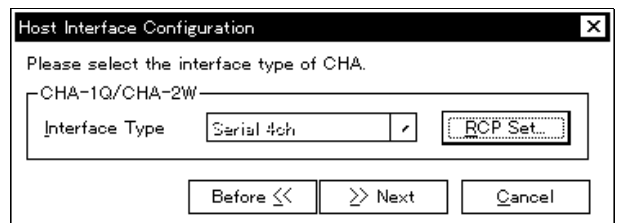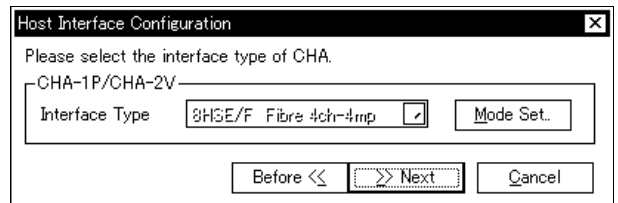

7. <Set Fibre Mode>

'Fibre Mode Configuration' is displayed.
Selecting (CL) [OK] returns the screen to step 7.

CHA-1P/CHA-2V Fibre Mode Configuration

Please set the Fibre Mode Configuration.

CHA-1P

Fibre PCB Mode: Standard

Target/Initiator

Port A Target

Port B Target

Port C Target

Port D Target

CHA-2V

Fibre PCB Mode: Standard

Target/Initiator

Port A Target

Port B Target

Port C Target

Port D Target

Cancel OK

8. <Set RCP port>

RCP Configuration is displayed.
Then, by selecting (CL) [OK] returns the screen to step 7.

CHA-1P/CHA-2V RCP Configuration

Please set the RCP Configuration.

CHA-1P

☒ 1A

☒ 1B

☐

☐

CHA-2V

☒ 2A

☒ 2B

☐

☐

Cancel OK

9. <Set DKC Emulation>

DKC Emulation type is displayed.
Select (CL) [>>Next]. Go to step 9-1.
When [Before<<] is selected (CL), the routine
return to step 9.

DKC Emulation Configuration

Please Select the DKC Emulation type.

CHA-1Q/CHA-2W

[Cluster 1] [Cluster 2]

CHA-1Q CHA-2W

DKC Emulation [1-3333-3] [= Cluster 1]

Before << >> Next

9-1. <Setting CU number>

CU number is displayed.
After the setting is completed, select (CL)
[>>Next]. Go to step 6.
When [Before<<] is selected (CL), the routine
returns to step 9.

CHA-1P/CHA-2V CU Number

Please set the CU Number.

CHA-1P

LDEV ID

1A 00-0F 0000-0FFF

1B 00-0F 0000-0FFF

1C 00-0F 0000-0FFF

1D 00-0F 0000-0FFF

CHA-2V

LDEV ID

2A 00-0F 0000-0FFF

2B 00-0F 0000-0FFF

2C 00-0F 0000-0FFF

2D 00-0F 0000-0FFF

Before << >> Next


9-2. <Setting Channel>

Set the 'Channel Speed'.

After setting up, select (CL) [>>Next].

Go to step 6.

When [Before<<] is selected (CL), the routine returns to step 5.

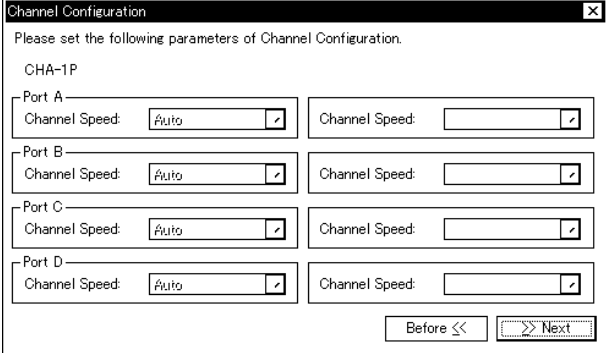

Channel Configuration

Please set the following parameters of Channel Configuration.

CHA-1P

Port A Channel Speed: <input type="text" value="Auto"/>	Channel Speed: <input type="text"/>
Port B Channel Speed: <input type="text" value="Auto"/>	Channel Speed: <input type="text"/>
Port C Channel Speed: <input type="text" value="Auto"/>	Channel Speed: <input type="text"/>
Port D Channel Speed: <input type="text" value="Auto"/>	Channel Speed: <input type="text"/>


Before << >> Next

10. <Set DKF type >

DKF type is displayed.

Select (CL) [>> Next]. Go the screen to step 10-1.

Select (CL) [Before<<]. Go the screen to step 6.

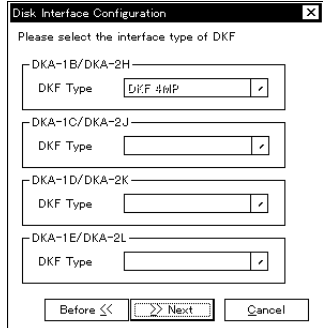

Disk Interface Configuration

Please select the interface type of DKF

DKA-1B/DKA-2H DKF Type: <input type="text" value="DKF 4MB"/>
DKA-1C/DKA-2J DKF Type: <input type="text"/>
DKA-1D/DKA-2K DKF Type: <input type="text"/>
DKA-1E/DKA-2L DKF Type: <input type="text"/>

Before << >> Next Cancel


10-1. <Set DKU Equipment>

DKU Equipment pattern and DKU type is displayed.

Select (CL) [>> Next].

This procedure is terminated by selecting (CL) [Cancel].

Note: For Single Cabinet Model, the 'DKU Equipment Configuration' dialog box is not displayed.

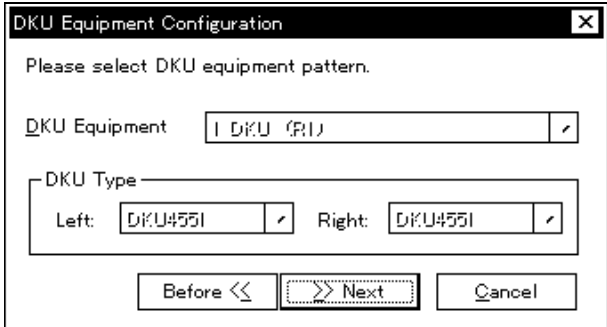

DKU Equipment Configuration

Please select DKU equipment pattern.

DKU Equipment:

DKU Type:

Left: <input type="text" value="DKU4551"/>	Right: <input type="text" value="DKU4551"/>
--	---

Before << >> Next Cancel


11. <Set Physical Device>

Physical device configuration is displayed.

[Detail...]: Refers to the details of the parity group or spare drive in the B4. The routine proceeds to Step 11-1.

Select (CL) [>> Next].

This procedure is terminated by selecting (CL) [Cancel].

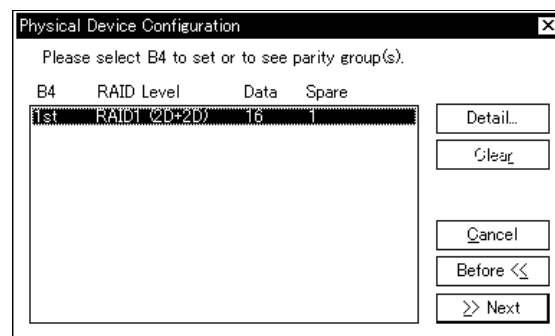

[Multi Cabinet Model]

B4	Location	B4	Location
1st	HDU-R10, 11, 12, 13	7th	HDU-L20, 21, 22, 23
2nd	HDU-R14, 15, 16, 17	8th	HDU-L24, 25, 26, 27
3rd	HDU-L10, 11, 12, 13	9th	HDU-R30, 31, 32, 33
4th	HDU-L14, 15, 16, 17	10th	HDU-R34, 35, 36, 37
5th	HDU-R20, 21, 22, 23	11th	HDU-L30, 31, 32, 33
6th	HDU-R24, 25, 26, 27	12th	HDU-L34, 35, 36, 37

Note: The 9th to 12th of the B4 are valid only when the DKUs for the RAID 400 are connected.


[Single Cabinet Model]

B4	Location	Comment
1st	HDU-0, 1, 2, 3	HDD-X00 ~ X0F
2nd	HDU-0, 1, 2, 3	HDD-X10 ~ X1F

11-1.

Parity Group Configuration is displayed.

Select (CL) [OK]. Return to step 11

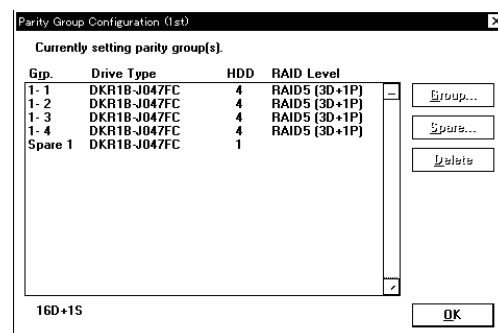

12. <Set Device Emulation>


Device Emulation Configuration is displayed.

Select (CL) parity group and select (CL) [Detail...].

Select (CL) [>> Next]. Go to 12-1.


This procedure is terminated by selecting (CL) [Cancel].

(CVS): A parity group where CVS is installed.

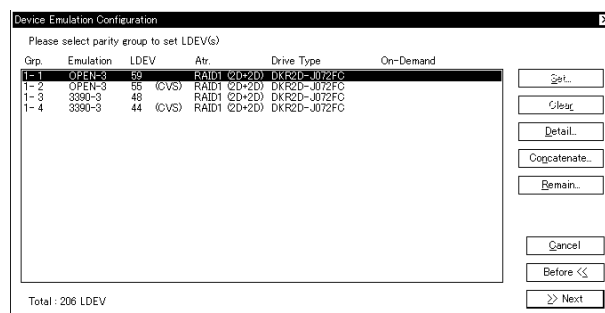


12-1.

Customized Volume Size Define is displayed.
Select (CL) [OK]. Return to step 12.

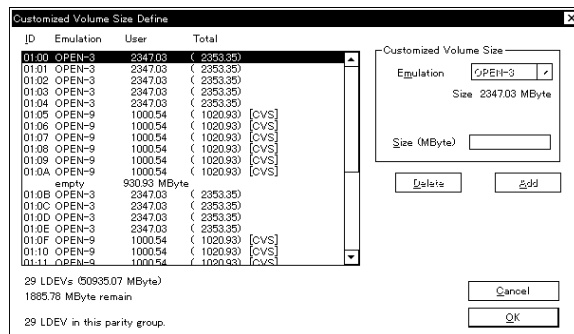


13. <Set Logical Device ID>

Logical Device ID Configuration is displayed.
Select (CL) a parity group and select (CL) [Detail...].
Select (CL) [>> Next]. Go to 13-1.
This procedure is terminated by selecting (CL) [Cancel].

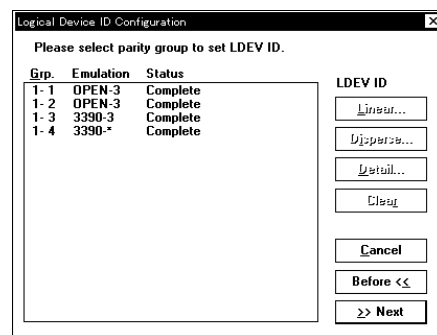


13-1.

Logical Device ID Detail is displayed.
Select (CL) [ID...].
Select (CL) [OK]. Return to step 13.

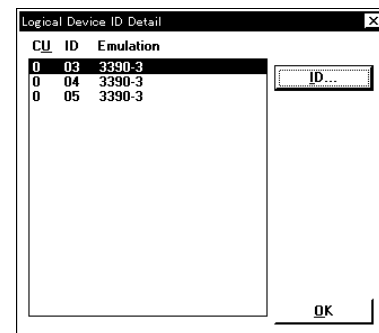

13-2.

Logical Device ID allocation is displayed.
Select (CL) [OK] or [Cancel]. Return to step 13-1.

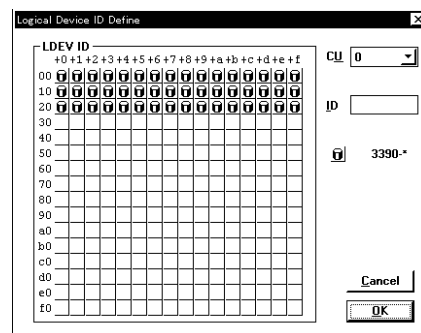


13. <Set Logical Device ID>

Logical Device ID Configuration is displayed.

Select (CL) a parity group and select (CL) [Detail...].

Select (CL) [>> Next]. Go to 13-1.

This procedure is terminated by selecting (CL) [Cancel].

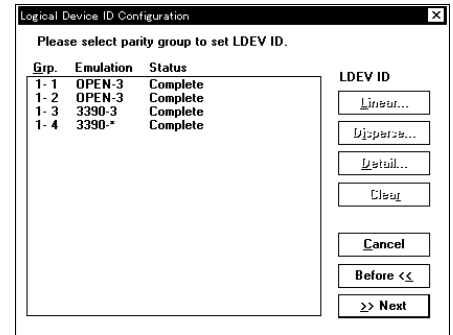


13-1.

Logical Device ID Detail is displayed.

Select (CL) [ID...].


Select (CL) [OK]. Return to step 13.

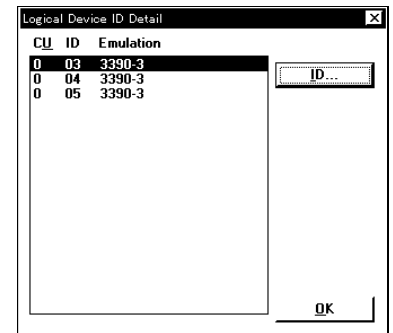

13-2.

Logical Device ID allocation is displayed.

Select (CL) [OK] or [Cancel]. Return to step 13-1.

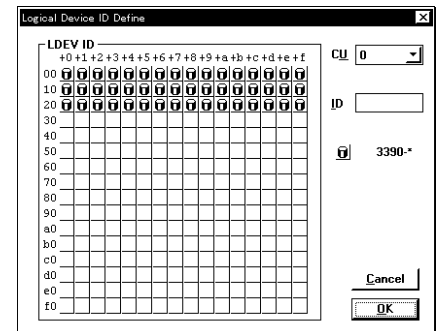


14. <Define Subsystem ID Boundary>

Set the Subsystem ID Boundary in the 'Set SSID Boundary' dialog box.

After setting up all items, select (CL) [>>>Next].

Go to step 5.

This procedure is terminated by selecting (CL) [Cancel].

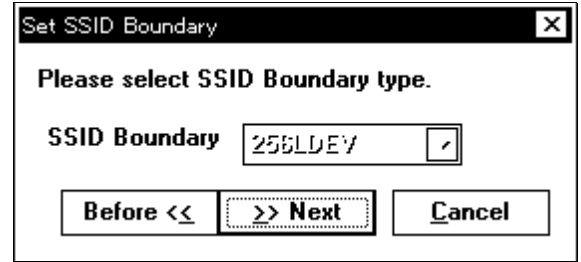


14-1. <Set Subsystem ID>

Subsystem ID Configuration is displayed.

Select (CL) [>>> Next].

This procedure is terminated by selecting (CL) [Cancel].

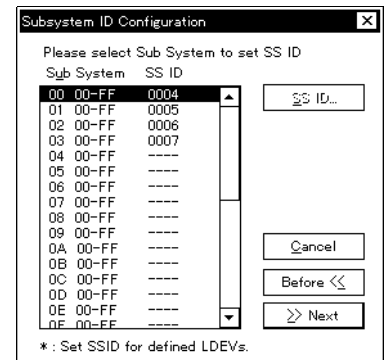


15. <Set DCR>

DCR Configuration is displayed.

Select (CL) a parity group and select (CL) [Detail...]. Go to step 15-1.

Select (CL) [>>> Next].

This procedure is terminated by selecting (CL) [Cancel].

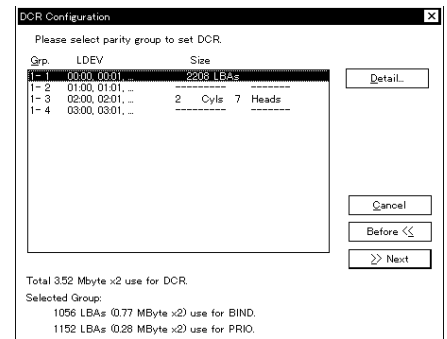


15-1.

DCR detail (Parity group) is displayed.


Select (CL) an LDEV and select [Detail...]. Go to step 15-2

Select (CL) [OK] . Return to step 15.

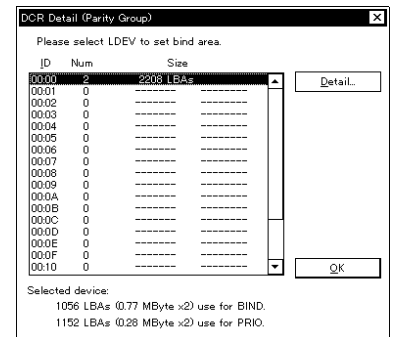

15-2.

DCR detail (Logical device) is displayed.
Select (CL) [OK]. Return to step 15-1.

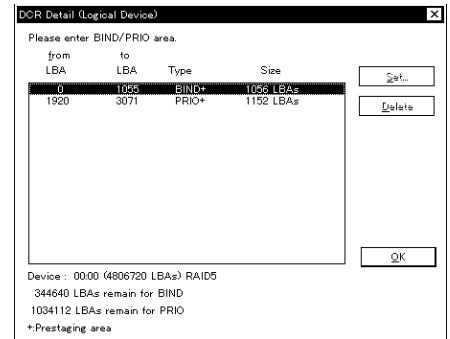


16. <Set Shared Memory Size >

Shared Memory Size Configuration is displayed.
Select (CL) [>> Next].

This procedure is terminated by selecting (CL) [Cancel].

Go to [INST05-610](#).

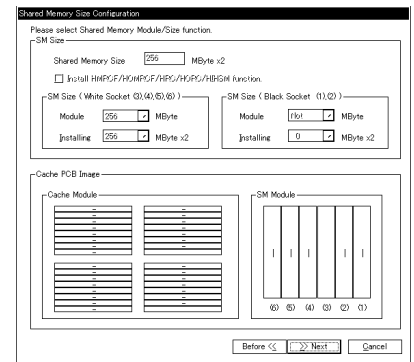

17.


Select (CL) [OK].
Close the 'Install' window.




5.3.2 Setting up the New Device Structure Information

1. <Mode Change>
Change the mode to Modify Mode.
Select (CL) [Install].

2. <Start the 'Menu Dialog' screen>
Select (CL) [Change Configuration].

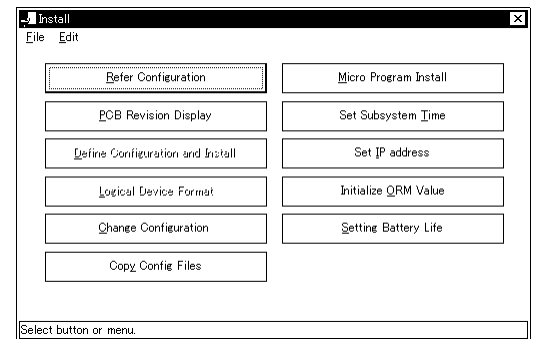

3. <Start Device Structure Setup screen>
Select (CL) the item in the 'Menu Dialog' dialog box and select (CL) [OK].

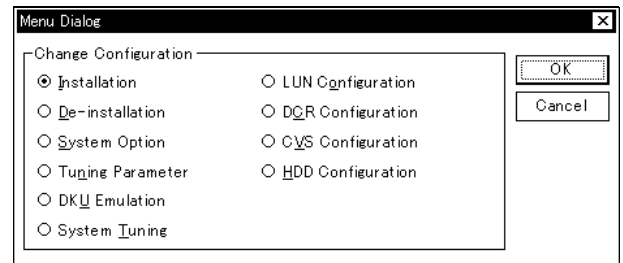

Blank Sheet

5.3.2.1 System Option

1. <System Option Definition>
Define system option information in the 'System Option'.
After setting up all items, select (CL) [OK].

System Option

Please set the following parameters of System Option.

Spare Disk Recover
☒ Interleave ☐ Offline Option...

Disk Copy Pace
☐ Slower ☒ Medium ☐ Faster

Copy Operation
☒ Correction Copy
☒ Dynamic Sparing

Read Configuration Data Mode
☒ Fixed Serial number

PS Timer
☐ Timer On Time : 0 [min]

Cancel OK

5.3.2.2 DCR Configuration

- (1) The “DCR Change” screen appears and the contents of the entered setting are displayed. When the CU is selected (DR) in the combo box, installed LDEV(s) and contents of the DCR definition are updated. Select (CL) LDEV to change the setting, then press (CL) the [Define...] button.

Total cache memory size occupied by the DCR area is displayed.

If the selected LDEV has a DCR area, the BIND size and the PRIO size are displayed under the “DCR Change” screen.

DCR Change

Please select LDEV to set bind area.

ID	Num	Size	CU
00:00	4	35 Cyls 0 Heads	00
00:01	1	10 Cyls 1 Heads	
00:02	1	100 Cyls 1 Heads	
00:03	1	50 Cyls 1 Heads	
00:04	0	-----	
00:05	0	-----	
00:06	1	100 Cyls 1 Heads	
00:07	0	-----	
00:08	0	-----	
00:09	0	-----	
00:0a	0	-----	
00:0b	0	-----	
00:0c	0	-----	
00:0d	0	-----	
00:0e	0	-----	
00:0f	0	-----	
00:10	0	-----	
00:11	0	-----	

301.81 Mbyte x2 use for DCR.

Selected device:
No DCR definition.

Buttons: Define..., PreStaging, Exit

DCR Change

Please select LDEV to set bind area.

ID	Num	Size	CU
00:00	4	35 Cyls 0 Heads	00
00:01	1	10 Cyls 1 Heads	
00:02	1	100 Cyls 1 Heads	
00:03	1	50 Cyls 1 Heads	
00:04	0	-----	
00:05	0	-----	
00:06	1	100 Cyls 1 Heads	
00:07	0	-----	
00:08	0	-----	
00:09	0	-----	
00:0a	0	-----	
00:0b	0	-----	
00:0c	0	-----	
00:0d	0	-----	
00:0e	0	-----	
00:0f	0	-----	
00:10	0	-----	
00:11	0	-----	

301.81 Mbyte x2 use for DCR.

Selected device:
6 Cyls 1 Heads (11.37 MByte x2) use for BIND.
28 Cyls 14 Heads (13.56 MByte x2) use for PRIO.

Buttons: Define..., PreStaging, Exit

NOTICE

To use DCR function, you should install DCR program product (P-242R-J6641) for mainframe volumes or Open DCR program product (P-242R-J6642) for open volumes into the DKC.

- (2) The “DCR Detail (Logical Device)” screen appears and the setting of the DCR in the LDEV is displayed.
To add a new setting, press (CL) the [Set...] button.

DCR Detail (Logical Device)

Please enter BIND/PRIO area.

from	to	Type	Size
CC HH	CC HH		

(No DCR definition)

Buttons: Set..., Delete, OK

Device : 0:20 (3339 Cylinders) RAID5
1 Cyls 13 Heads remain for BIND.
5 Cyls 9 Heads remain for PRIO.
*-Prestaging area

- (3) When the [Set...] button is pressed (CL) on the “DCR Detail (Logical Device)” screen, the “DCR Define” screen appears. To register new data in the DCR area, enter the type, starting cylinder number, starting head number, ending cylinder number, and ending head number (In the case of Mainframe, refer to the screen on the right) or the type, starting LBA, and ending LBA (In the case of the open system, refer to the screen on the left).
If you want to stage the data on the cache, check the Prestaging Request box.
When the entry is completed, return the screen to the “DCR Detail (Logical Device)” screen by pressing (CL) the [OK] button.

DCR Define

Please enter BIND/PRIO area.

Type: ☒ BIND ☐ PRIO ☐ ALL of Dev. ☒ Prestaging Request

from LBA []

To LBA []

Enter with decimal number.

Cancel OK

DCR Define

Please enter BIND/PRIO area.

Type: ☒ BIND ☐ PRIO ☒ Prestaging Request

from CC H [] []

To CC H [] []

Enter with decimal number.

Cancel OK

- (4) Contents of the entered setting are displayed in the list box on the “DCR Detail (Logical Device)” screen.

DCR Detail (Logical Device)

Please enter BIND/PRIO area.

from LBA	to LBA	Type	Size
0	2015	BIND	2016 LBAs
2976	3167	PRIO	192 LBAs
3936	4127	BIND+	192 LBAs
4992	5183	PRIO+	192 LBAs

Device : 0:20 (4806720 LBAs) RAID1
150624 LBAs remain for BIND
301344 LBAs remain for PRIO
+Prestaging area

Set... Delete OK

(In the case of open system)

DCR Detail (Logical Device)

Please enter BIND/PRIO area.

from CC HH	to CC HH	Type	Size
0 00	10 00	BIND	10 Cyls 1 Heads
50 00	100 14	PRIO	51 Cyls 0 Heads
128 00	160 08	PRIO+	32 Cyls 9 Heads
1000 00	1009 14	BIND+	10 Cyls 0 Heads

Device : 0:00 (3339 Cylinders) RAID5
43 Cyls 1 Heads remain for BIND
129 Cyls 4 Heads remain for PRIO
+Prestaging area

Set... Delete OK

(In the case of Mainframe system)

- (5) To delete a set item, select (CL) the DCR setting to be deleted and press (CL) the [Delete] button on the “DCR Detail (Logical Device)” screen.

DCR Detail (Logical Device)

Please enter BIND/PRIO area.

from CC HH	to CC HH	Type	Size
0 00	10 00	BIND	10 Cyls 1 Heads
50 00	100 14	PRIO	51 Cyls 0 Heads
128 00	160 08	PRIO+	32 Cyls 9 Heads
1000 00	1009 14	BIND+	10 Cyls 0 Heads

Device : 0:00 (3339 Cylinders) RAID5
43 Cyls 1 Heads remain for BIND
129 Cyls 4 Heads remain for PRIO
+Prestaging area

Set... Delete OK

- (6) By pressing (CL) the [OK] button on the “DCR Detail (Logical Device)” screen after the new setting is entered, a process to change the setting for the LDEV is executed. When no change is required, press (CL) the [Cancel] button.

from		to		Type	Size
CC	HH	CC	HH		
50	00	100	14	PRIO	51 Cyls 0 Heads
128	00	160	08	PRIO+	32 Cyls 9 Heads
1000	00	1009	14	BIND+	10 Cyls 0 Heads

Device : 0:00 (3339 Cylinders) RAID5
53 Cyls 2 Heads remain for BIND.
159 Cyls 7 Heads remain for PRIO.
*Prestaging area

- (7) The screen returns to the “DCR Change” screen after the processing is completed. The changed setting is displayed in the list box.

ID	Num	Size
00:1b	1	4806720 LBAs
00:1c	0	-----
00:1d	0	-----
00:1e	0	-----
00:1f	1	4806720 LBAs
00:20	1	200064 LBAs
00:21	0	-----
00:22	1	4806720 LBAs
00:23	0	-----
00:24	0	-----
00:25	0	-----
00:26	0	-----
00:27	0	-----
00:28	0	-----
00:29	0	-----
00:2a	0	-----
00:2b	0	-----
00:2c	0	-----

5916.42 Mbyte x2 use for DCR.
Selected device:
4806720 LBAs (3520.54 MByte x2) use for BIND.

(In the case of open system)

ID	Num	Size
00:00	4	35 Cyls 0 Heads
00:01	1	10 Cyls 1 Heads
00:02	1	100 Cyls 1 Heads
00:03	1	50 Cyls 1 Heads
00:04	0	-----
00:05	0	-----
00:06	1	100 Cyls 1 Heads
00:07	0	-----
00:08	0	-----
00:09	0	-----
00:0a	3	93 Cyls 9 Heads
00:0b	0	-----
00:0c	0	-----
00:0d	0	-----
00:0e	0	-----
00:0f	0	-----
00:10	0	-----
00:11	0	-----

359.75 Mbyte x2 use for DCR.
Selected device:
100 Cyls 1 Head

(In the case of Mainframe system)

- (8) Repeat steps (1) through (7) for the LDEV(s) of which you want to change the setting.

(9) The [PreStaging] button begins the Pre-staging processing.

(10) When the changing operation is completed, quit the “DCR Change” screen by pressing (CL) the [Exit] button.

5.3.2.3 CVS Configuration

1. <Volume to Space>

NOTICE

When you set HMDE volumes to customized volumes and reset them to the normal volume again, these volumes could not be set as HMDE volumes. Please refer to the following table.


Emulation Types for HMDE volumes	Emulation types after changing from Customized volume to normal volume
3390-3A	3390-3
3390-3B	
3390-3C	

If you want to reset these volumes as HMDE, please call technical support center to set them to HMDE volumes by SVP.

- (1) Select (CL) [Volume to Space] and press (CL) [OK].

NOTICE


To use CVS function, you should install CVS program product (P-242R-J6541) for mainframe volumes or Open CVS program product (P-242R-J6542) for open volumes into the DKC.

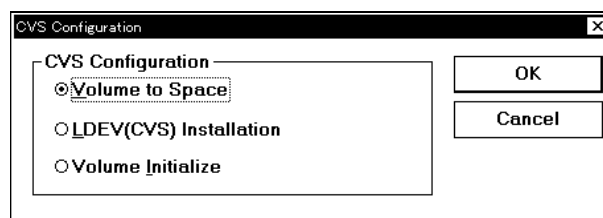

Enter the password and select (CL) [OK].

NOTICE

This is a special (exceptional) operation that can cause a serious failure such as a system down or a data loss and requires an input of a password. Ask the technical support center about the appropriateness of the operation, and input the password after getting an approval of executing the operation.

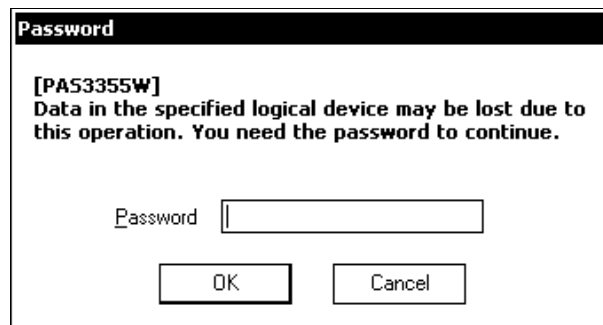

(1-1) Define the number of CU in DKC in the 'DKC Configuration' window.

Make sure that the entered item is correct and select (CL) [>>Next].

DKC Configuration

Please set the following parameters of DKC Configuration.

DVC
Serial No. 0255
Number of CU 1

System Option...
Power Supply...

IP Address 126.255.255.15
Subnet Mask 255.0.0.0
IP Address Configuration

Cache
Basic: 512MB (512MB) On-Demand: 512MB
Option: Not installed
Total cache size: 512MB
DCR available: 256MB
Cache Configuration

CHA
☒ Basic ☒ Option 1
☐ Option 2 ☐ Option 3

DEA
Number of DEA 2
Cancel
> Next

(2) Select (CL) a parity group with Volume(s) to be changed on the "Device Emulation Configuration" screen and press (CL) the [Detail...] button.

(CVS): A parity group where CVS is installed.

Device Emulation Configuration

Please select parity group to set LDEV(s)

Grp.	Emulation	LDEV	Attr.	Drive Type	On-Demand
1-1	OPEN-3	22	RAID5 (GD+1P)	DKR2C-J018FC	
1-2	OPEN-3	22	RAID5 (GD+1P)	DKR2C-J018FC	
1-3	3390-3	18	RAID5 (GD+1P)	DKR2C-J018FC	
1-4	3390-3	18	RAID5 (GD+1P)	DKR2C-J018FC	

Initialize
Clear
Detail...
Cancel
Before <<
>> Next

Total : 80 LDEV

(3) When the Volume(s) to be deleted is selected (CL) on the "Customized Volume Size Define" screen and the [Delete] button is pressed (CL), the Volume(s) is deleted. When the operation fails, the screen can be returned to the preceding one by pressing (CL) the [Cancel] button.

Note: In the following case, the [Delete CV] button is not available.

- 1) The last CV is selected.
- 2) All CVs in base volume are selected.
- 3) Volume with SCSI path(s) ("+" indicated) is selected.

Customized Volume Size Define

ID	Emulation	User	Total
02:00	3390-3	3339	(3347)
02:01	3390-3	3339	(3347)
02:02	3390-3	3339	(3347)
	empty	13389 cylinder(s)	
02:07	3390-3	3339	(3347)
02:08	3390-3	3339	(3347)
02:09	3390-3	3339	(3347)
02:0A	3390-3	3339	(3347)
02:0B	3390-3	3339	(3347)
	empty	6694 cylinder(s)	
02:0E	3390-3	3339	(3347)
02:0F	3390-3	3339	(3347)
02:10	3390-3	3339	(3347)
02:11	3390-3	3339	(3347)

Customized Volume Size
Emulation 3390-3
Size 3339 Cylinders
Cylinder
Delete Add
Cancel
OK

12 LDEVs (40166 Cylinders)
22004 Cylinders remain
12 LDEV in this parity group.


Customized Volume Size Define

ID	Emulation	User	Total
00:00	OPEN-3	2347.03	(2353.35)
00:01	OPEN-3	2347.03	(2353.35)
00:02	OPEN-3	2347.03	(2353.35)
	empty	7060.07 MByte	
00:06	OPEN-3	2347.03	(2353.35)
00:07	OPEN-3	2347.03	(2353.35)
00:08	OPEN-3	2347.03	(2353.35)
00:09	OPEN-3	2347.03	(2353.35)
00:0A	OPEN-3	2347.03	(2353.35)
00:0B	OPEN-3	2347.03	(2353.35)
	empty	9413.43 MByte	
00:10	OPEN-3	2347.03	(2353.35)
00:11	OPEN-3	2347.03	(2353.35)
00:12	OPEN-3	2347.03	(2353.35)
00:13	OPEN-3	2347.03	(2353.35)
00:14	OPEN-3	2347.03	(2353.35)
00:15	OPEN-3	2347.03	(2353.35)

Customized Volume Size
Emulation
Size 2347.03 MByte
Size (MByte)
Delete Add
Cancel
OK


15 LDEVs (36302.50 MByte)
17519.06 MByte remain
15 LDEV in this parity group.

- (4) When the screen is returned to the “Device Emulation Configuration” screen by pressing (CL) the [OK] button and the[>>Next] button is pressed (CL), the definition of reduction is decided.

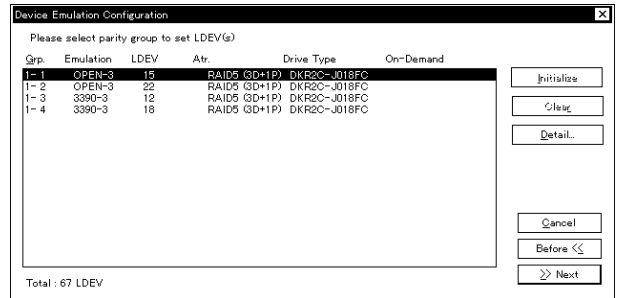

- (5) Select (CL) [Yes] in response to “Are you sure you want to renew subsystem?”.


When [No] is selected (CL), returns to [INST05-440](#) step 2.

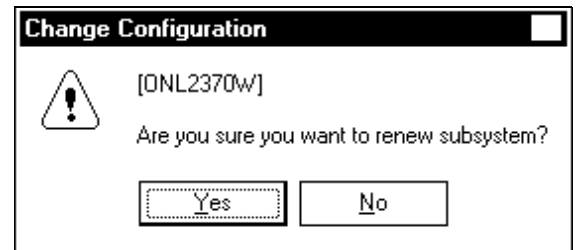

- (6) “Renewal process has completed. Please check the subsystem status.” is displayed when recovery processing on all installed components is completed. Select (CL) [OK] in response to this message.




- (7) “Reading subsystem configuration data...” is displayed.
 “Please insert the Config FD in the FDD.” is displayed.
 Insert the configuration FD into FDD, and select (CL) [OK].

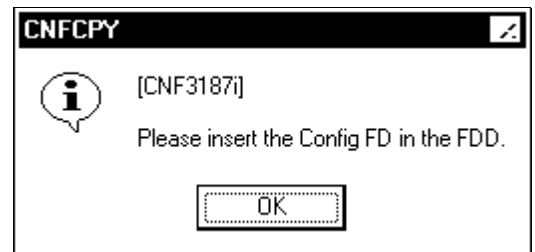


(8)

When this procedure is completed, the message “Please remove the Config FD.” is displayed.
Remove the FD, select (CL) [OK].

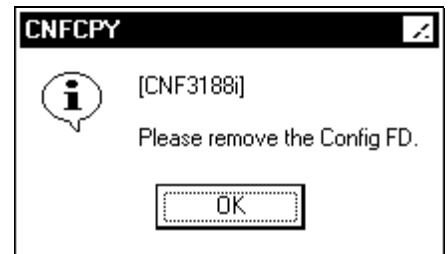

(9)

After the procedure is completed, return to 'Install'.
Select (CL) [File]-[Exit].

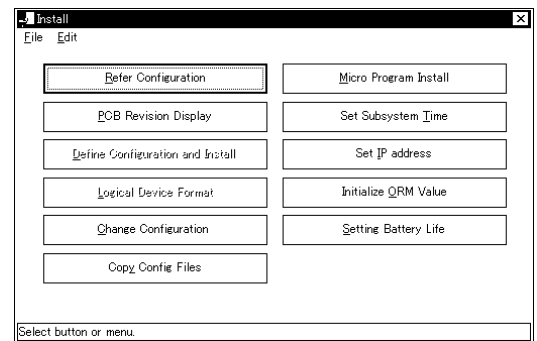


(10)

Change the mode to View Mode.

2. <LDEV(CVS) Installation>


- (1) Select (CL) [LDEV(CVS) Installation] and press (CL) [OK].

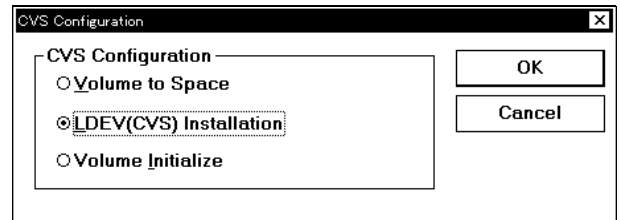

- (1-1) Define the number of CUs in DKC in the 'DKC Configuration' window.


When no alteration was made on the number of CUs owing to the addition of the LDEV (CVS), select (CL) [>>Next].

Make sure that the entered item is correct and select (CL) [>>Next].

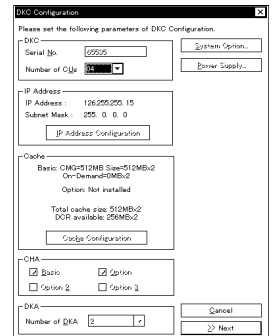

- (2) Select (CL) a parity group to which the CV(s) is to be added on the "Device Emulation Configuration" screen and press (CL) the [Detail] button.

(CVS): A parity group where CVS is installed.

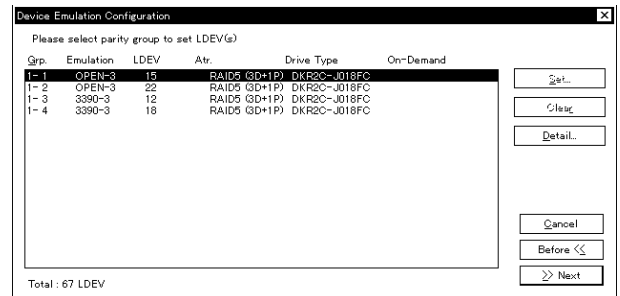

-
- Customized Volume Size Define
- | ID | Emulation | User | Total |
|-------|-----------|-------------------|---------|
| 02:00 | 3390-3 | 3339 | (3347) |
| 02:01 | 3390-3 | 3339 | (3347) |
| 02:02 | 3390-3 | 3339 | (3347) |
| 02:07 | empty | 13086 cylinder(s) | (3347) |
| 02:08 | 3390-3 | 3339 | (3347) |
| 02:09 | 3390-3 | 3339 | (3347) |
| 02:0A | 3390-3 | 3339 | (3347) |
| 02:0B | 3390-3 | 3339 | (3347) |
| 02:0E | empty | 6694 cylinder(s) | (3347) |
| 02:0F | 3390-3 | 3339 | (3347) |
| 02:10 | 3390-3 | 3339 | (3347) |
| 02:11 | 3390-3 | 3339 | (3347) |
- 12 LDEVs (40166 Cylinders)
22004 Cylinders remain
- 12 LDEV in this parity group.
- Customized Volume Size
- Emulation: 3390-3
- Size: 3339 Cylinders
- Cylinder:
- Cancel OK

Customized Volume Size Define

ID	Emulation	User	Total
00.00	OPEN-3	2347.03	(2353.35)
00.01	OPEN-3	2347.03	(2353.35)
00.02	OPEN-3	2347.03	(2353.35)
	empty	7060.07 MByte	
00.06	OPEN-3	2347.03	(2353.35)
00.07	OPEN-3	2347.03	(2353.35)
00.08	OPEN-3	2347.03	(2353.35)
00.09	OPEN-3	2347.03	(2353.35)
00.0A	OPEN-3	2347.03	(2353.35)
00.0B	OPEN-3	2347.03	(2353.35)
	empty	9413.45 MByte	
00.10	OPEN-3	2347.03	(2353.35)
00.11	OPEN-3	2347.03	(2353.35)
00.12	OPEN-3	2347.03	(2353.35)
00.13	OPEN-3	2347.03	(2353.35)
00.14	OPEN-3	2347.03	(2353.35)
00.15	OPEN-3	2347.03	(2353.35)

Customized Volume Size

Emulation **OPEN-3**

Size 2347.03 MByte

Size (MByte)

15 LDEVs (35302.50 MByte)

17519.06 MByte remain

15 LDEV in this parity group.

- The deletion can be made only for the added CV(s). When the addition is made incorrectly, select (CL) [Cancel] to make the setting invalid and perform the setting again. When CV for open host is selected, the size is displayed ([M byte]).

The screenshot shows the "Customized Volume Size Define" window. It contains a table with columns ID, Emulation, User, and Total. The table lists several entries for emulation type "3390-9". To the right of the table is a section titled "Customized Volume Size" which includes a dropdown menu set to "Emulation 3390-9", a label "Size 10017 Cylinders", a text input field containing "1000", and two buttons labeled "Delete" and "Add". At the bottom of the window are three summary lines and two more buttons, "Cancel" and "OK".

ID	Emulation	User	Total
0200	3390-3	3339	(3347)
0201	3390-3	3339	(3347)
0202	3390-3	3339	(3347)
-----	3390-9	1000	(1027) [CVS]
-----	3390-9	1000	(1027) [CVS]
-----	3390-9	1000	(1027) [CVS]
-----	3390-9	1000	(1027) [CVS]
-----	3390-9	1000	(1027) [CVS]
-----	3390-9	1000	(1027) [CVS]
-----	3390-9	1000	(1027) [CVS]
-----	3390-9	1000	(1027) [CVS]
-----	3390-9	1000	(1027) [CVS]
-----	3390-9	1000	(1027) [CVS]
-----	3390-9	1000	(1027) [CVS]
-----	3390-9	1000	(1027) [CVS]
-----	3390-9	1000	(1027) [CVS]
-----	empty	35 cylinder(s)	
0207	3390-3	3339	(3347)
0208	3390-3	3339	(3347)

Customized Volume Size

Emulation 3390-9

Size 10017 Cylinders

Cylinder 1000

Delete Add

32 LDEV's (60710 Cylinders)
 1480 Cylinders remain
 32 LDEV in this parity group.


Cancel

OK

[illegible]

- (5) When the screen is returned to the “Device Emulation Configuration” screen by a pressing (CL) of the [OK] button, the setting result is displayed.

The LDEV status is displayed as [CVS] for the parity group for which the CV was set.

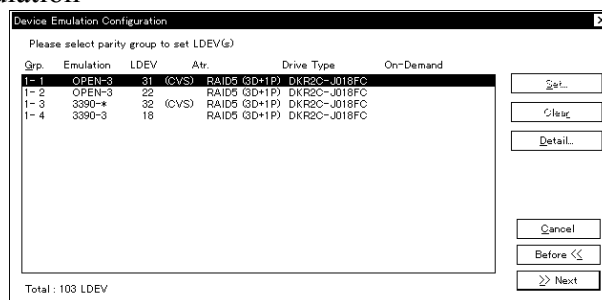


- (6) When the [>>Next] button is pressed (CL), the LDEV ID setting screen appears.


Set LDEV ID(s) for the added CV(s). For the parity group having the added CV(s), the status which shows the ID allocation is indicated as “-----”. Therefore, select (CL) such a parity group.

When [Linear...] or [Disperse...] was selected (CL), the routine proceeds to Step (7).

When [Detail...] is selected (CL), the routine proceeds to Step (7)-1.

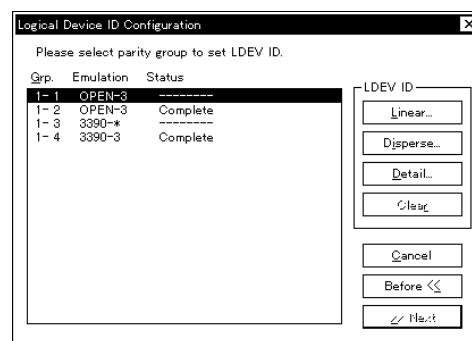


- (7) Press (CL) the [Linear...] button and enter an LDEV ID you want to allocate on the “Logical Device ID Define” screen.

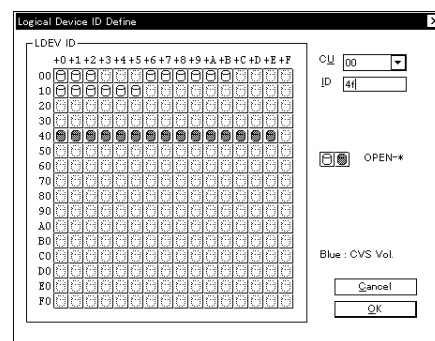


- (7)-1 When the [Detail...] is pressed (CL), the [Logical Device ID Detail] screen is displayed. Select an emulation type for which the CU and ID status are displayed as “- --” and select (CL) [Change...].


When you want to register successive IDs, you can select the two or more emulation types.

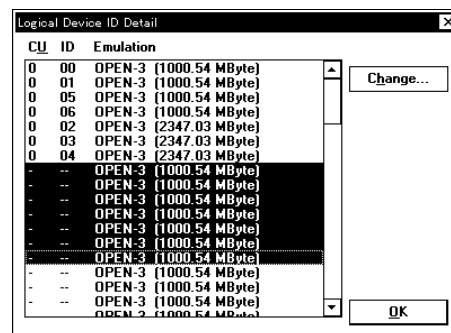


- (7)-2 Enter a CU and LDEV ID you want to allocate on the “Logical Device ID Define” screen. Then, select (CL) [OK].
Go to Step (7)-3.

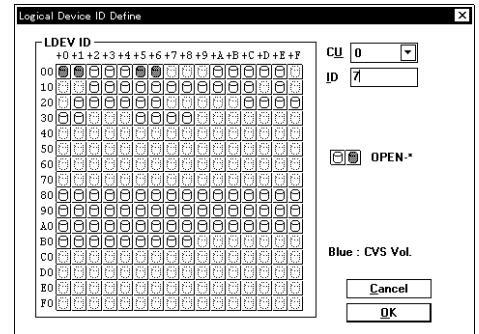

- (7)-3 Make sure that the CU(s) and ID(s) have been registered.
If there is any emulation type for which the CU and ID status are displayed as “- --”, return to Step (7)-1.
If all the settings have been made, select (CL) [OK].
Go to Step (8).

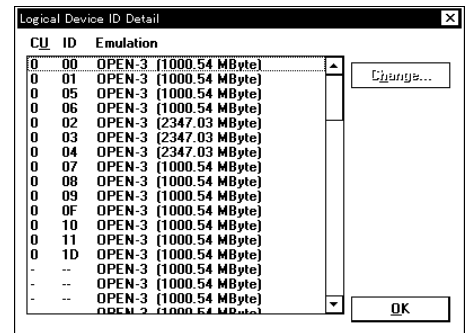


- (8) When the screen is returned to the “Logical Device ID Configuration” screen by pressing (CL) the [OK] button, the setting result is displayed.

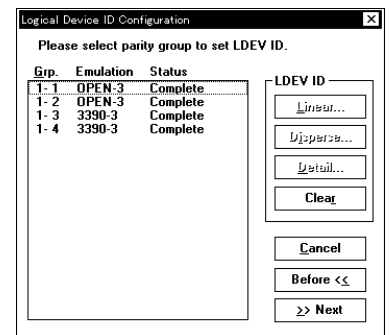

(9)

Press (CL) the [>>Next] button to change the screen to the “Set SSID Boundary” screen.

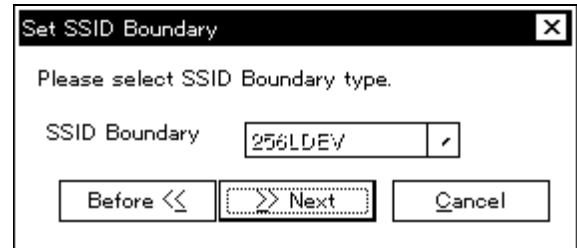


Set SSID Boundary

Please select SSID Boundary type.

SSID Boundary

Before << **>> Next** Cancel

- (10) When the [>>Next] button is pressed (CL), the “Subsystem ID Configuration” screen is opened. If a new SS ID is required as a result of defining an LDEV ID, define the new SS ID. Select (CL) a subsystem where the SS ID is to be newly defined and press (CL) the [SS ID...] button. When no subsystem ID is to be defined, go to Step (13) by selecting [>>Next].

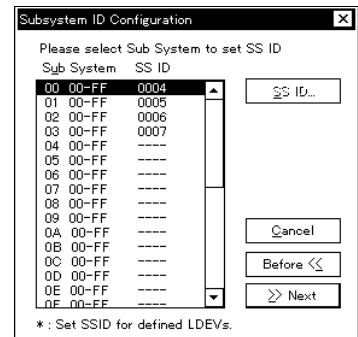

Subsystem ID Configuration

Please select Sub System to set SS ID

Sub System	SS ID
00 00-FF	0004
01 00-FF	0005
02 00-FF	0006
03 00-FF	0007
04 00-FF	----
05 00-FF	----
06 00-FF	----
07 00-FF	----
08 00-FF	----
09 00-FF	----
0A 00-FF	----
0B 00-FF	----
0C 00-FF	----
0D 00-FF	----
0E 00-FF	----
0F 00-FF	----


SS ID...

Cancel

Before << >> Next

* : Set SSID for defined LDEVs.

- (11) Enter the SS ID on the “Subsystem ID Define” screen and select (CL) [OK].

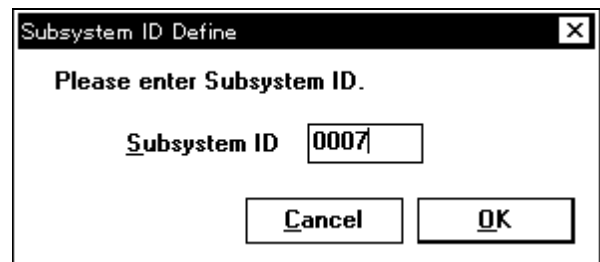


Subsystem ID Define

Please enter Subsystem ID.

Subsystem ID

Cancel OK

- (12) When the screen is returned to the “Subsystem ID Configuration” screen by pressing (CL) the [OK] button, the set contents are displayed.

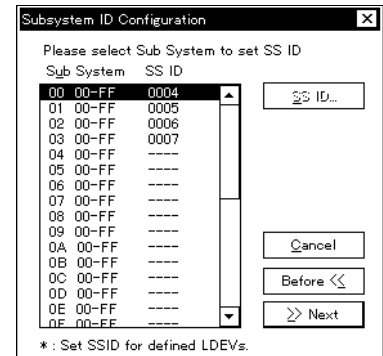

Subsystem ID Configuration

Please select Sub System to set SS ID

Sub System	SS ID
00 00-FF	0004
01 00-FF	0005
02 00-FF	0006
03 00-FF	0007
04 00-FF	----
05 00-FF	----
06 00-FF	----
07 00-FF	----
08 00-FF	----
09 00-FF	----
0A 00-FF	----
0B 00-FF	----
0C 00-FF	----
0D 00-FF	----
0E 00-FF	----
0F 00-FF	----

SS ID...

Cancel

Before << >> Next


* : Set SSID for defined LDEVs.

- (13) When [>>Next] is selected (CL), the definition of the addition ends. (Additional process starts.)

(14)


Select (CL) [Yes] in response to “Are you sure you want to renew subsystem?”.

When [No] is selected (CL), returns to [INST05-440](#) step 2.

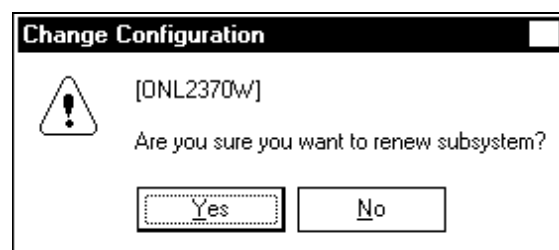

(15)

“Formatting the logical device...” is displayed.

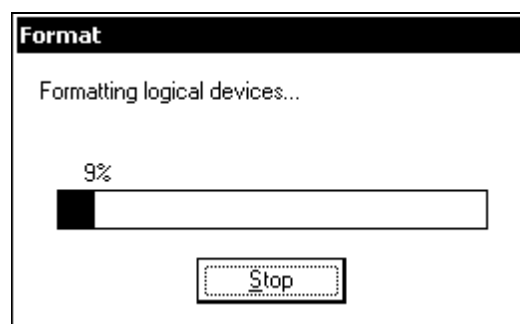

(16)

“Renewal process has completed. Please check the subsystem status.” is displayed when recovery processing on all installed components is completed. Select (CL) [OK] in response to this message.




(17)

“Reading subsystem configuration data...” is displayed.

“Please insert the Config FD in the FDD.” is displayed.


Insert the configuration FD into FDD, and select (CL) [OK].

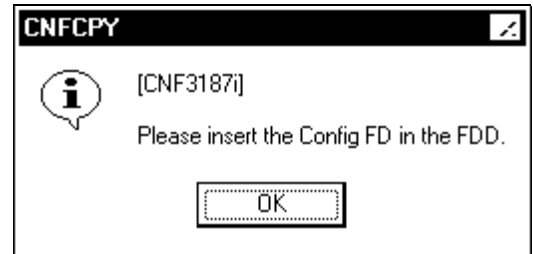

(18)


When this procedure is completed, the message “Please remove the Config FD.” is displayed.

Remove the FD, select (CL) [OK].

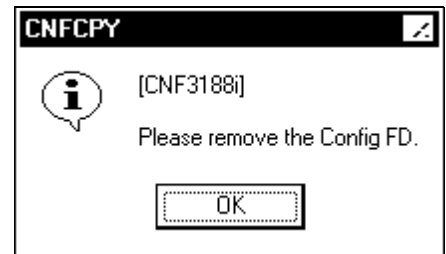

(19)

After the procedure is completed, return to ‘Install’.
Select (CL) [File]-[Exit].

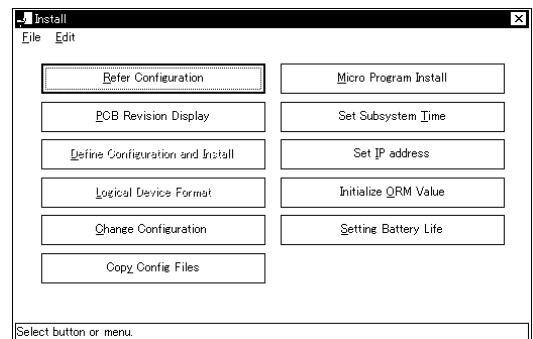

(20)

Change the mode to View Mode.

3. <Volume Initialize>


NOTICE

When you set HMDE volumes to customized volumes and reset them to the normal volume again, these volumes could not be set as HMDE volumes. Please refer to the following table.

Emulation Types for HMDE volumes	Emulation types after changing from Customized volume to normal volume
3390-3A	3390-3
3390-3B	
3390-3C	

If you want to reset these volumes as HMDE, please call technical support center to set them to HMDE volumes by SVP.


- (1) Select (CL) [Volume Initialize], then select (CL) [OK].

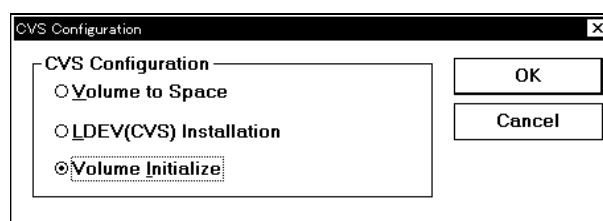

Enter the password and select (CL) [OK].

NOTICE

This is a special (exceptional) operation that can cause a serious failure such as a system down or a data loss and requires an input of a password. Ask the technical support center about the appropriateness of the operation, and input the password after getting an approval of executing the operation.

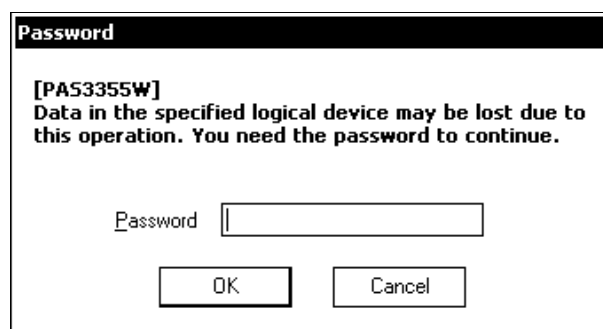

- (1-1) Define the number of CU in DKC in the 'DKC Configuration' window.

Make sure that the entered item is correct and select (CL) [>>Next].

DKC Configuration

Please set the following parameters of DKC Configuration.

DVC
Serial No. : 00000
Number of CU : 01
System Option :
Power Supply :

IP Address : 126.255.255.15
Subnet Mask : 255.0.0.0
IP Address Configuration :

Cache
Basic : 512MB (512MB) Smart512MBx2
On-Demand : 512MBx2
Option : Not installed
Total cache size : 512MBx2
DCR available : 256MBx2
Cache Configuration :

CHA
☒ Basic ☒ Option
☐ Option 2 ☐ Option 3

DEK
Number of DEK : 0
Cancel
>> Next

- (2) Select (CL) a parity group having volume(s) to be changed on the "Device Emulation Configuration" screen.

(CVS): A parity group where CVS is installed.

Device Emulation Configuration

Please select parity group to set LDEV(s)

Grp.	Emulation	LDEV	Atr.	Drive Type	On-Demand
1-1	OPEN-3	31	(CVS)	RAID5 (3D+1P)	DKR2C-J018FC
1-2	OPEN-3	22		RAID5 (3D+1P)	DKR2C-J018FC
1-3	3390-3	32	(CVS)	RAID5 (3D+1P)	DKR2C-J018FC
1-4	3390-3	18		RAID5 (3D+1P)	DKR2C-J018FC

Initialize
Clear
Detail...
Cancel
Before <<
>> Next

Total : 103 LDEV

- (3) Select (CL) a CV from the list box on the "Customized Volume Size Define" screen, press (CL) the [Initialize] button to delete the CV, and return it to a normal volume. When the operation fails, the screen can be returned to the preceding one by pressing (CL) the [Cancel] button.

Device Emulation Configuration

Please select parity group to set LDEV(s)

Grp.	Emulation	LDEV	Atr.	Drive Type	On-Demand
1-1	OPEN-3	22		RAID5 (3D+1P)	DKR2C-J018FC
1-2	OPEN-3	22		RAID5 (3D+1P)	DKR2C-J018FC
1-3	3390-3	18		RAID5 (3D+1P)	DKR2C-J018FC
1-4	3390-3	18		RAID5 (3D+1P)	DKR2C-J018FC

Initialize
Clear
Detail...
Cancel
Before <<
>> Next


Total : 80 LDEV

Note: In the following case, the [Initialize] button is not available.


- 1) Volume with SCSI path(s) is selected.

- (4) To return the volume(s) in other parity group(s) to the normal LDEV(s), repeat steps (3).


- (5) Press (CL) the [>>>Next] button to change the screen to the “Logical Device ID Configuration” screen. Since the normal LDEV returned from the base volume is a newly defined LDEV, define the ID. Select (CL) the parity group having the LDEV(s) for which the ID(s) has not been set, then select (CL) [Linear...]. Two or more parity groups can be selected.

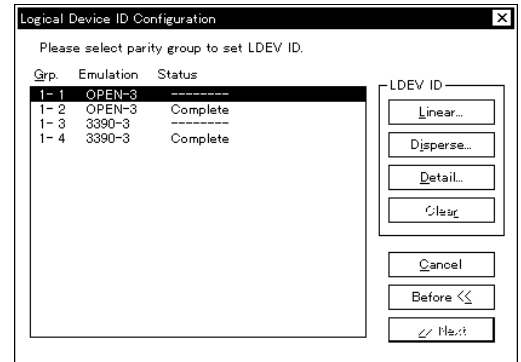


- (6) Select CU ID in the CU combo box.
Input LDEV ID you want to set in the ID edit box.
After setting, select (CL) [OK].

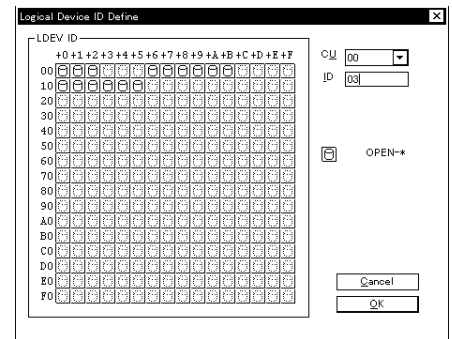


- (7) Status of the parity group whose setting is completed changes to “Complete”.
Press (CL) the [>>>Next] button.

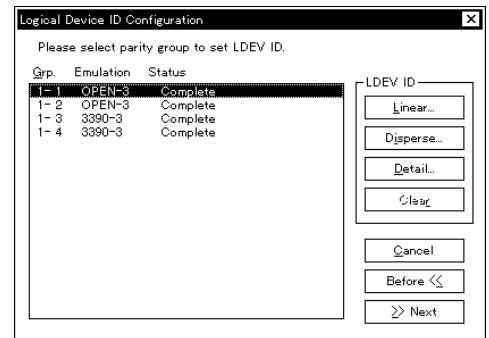


- (8) Press (CL) the [>>>Next] button to change the screen to the “Subsystem ID Configuration] screen.

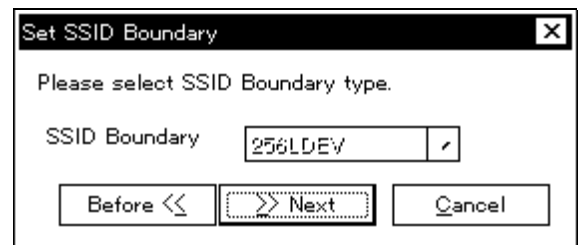


- (9) When it is necessary to set a new SS ID, define the SS ID.
Select (CL) a subsystem whose SS ID is not defined, then select (CL) [SS ID...].

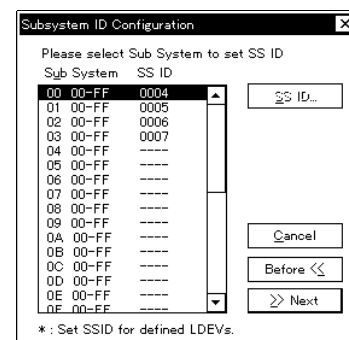

- (10) Enter an SS ID on the “Subsystem ID Define” screen and select (CL) [OK].

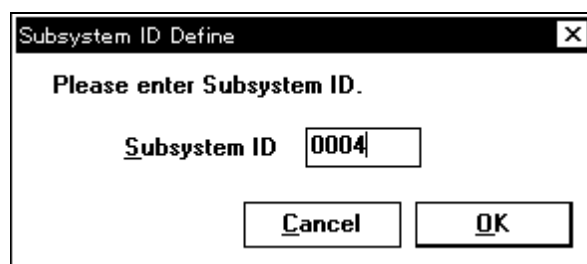


- (11) When the screen is returned to the “Subsystem ID Configuration” screen, the registered SS ID is displayed.
Press (CL) the [>>Next] button to quit the definition screen.

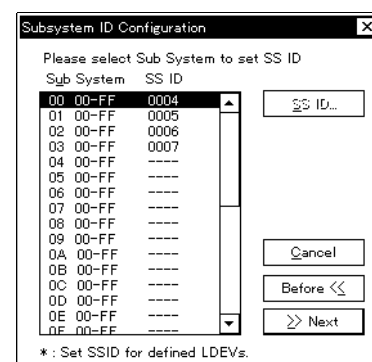

(12)


Select (CL) [Yes] in response to “Are you sure you want to renew subsystem?”.

When [No] is selected (CL), returns to [INST05-440](#) step 2.

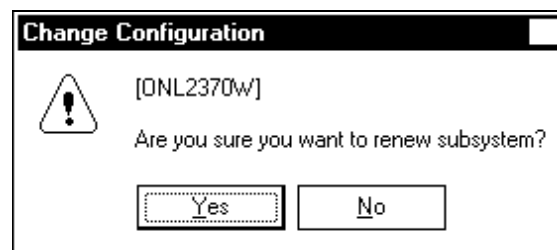

(13)

“Formatting the logical device...” is displayed when LDEV Format is necessary.

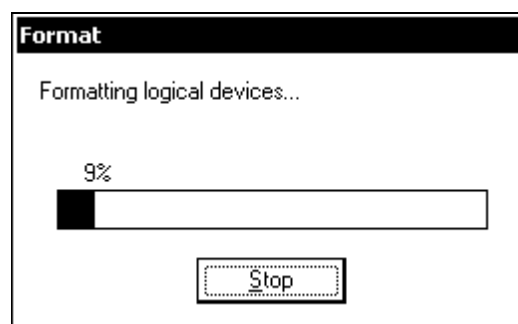

(14)

“Renewal process has completed. Please check the subsystem status.” is displayed when recovery processing on all installed components is completed. Select (CL) [OK] in response to this message.




(15)

“Reading subsystem configuration data...” is displayed.


“Please insert the Config FD in the FDD.” is displayed.

Insert the configuration FD into FDD, and select (CL) [OK].

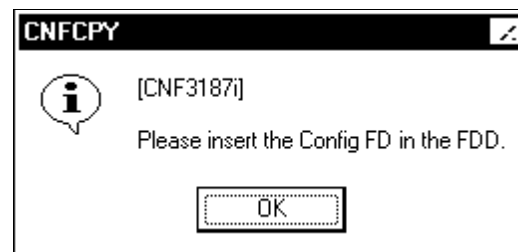


(16)

When this procedure is completed, the message “Please remove the Config FD.” is displayed.
Remove the FD, select (CL) [OK].

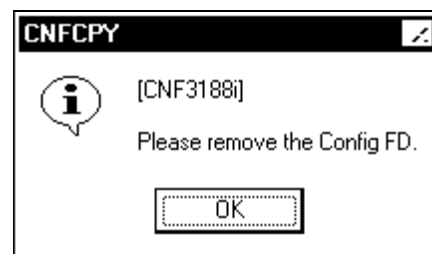

(17)

After the procedure is completed, return to 'Install'.
Select (CL) [File]-[Exit].

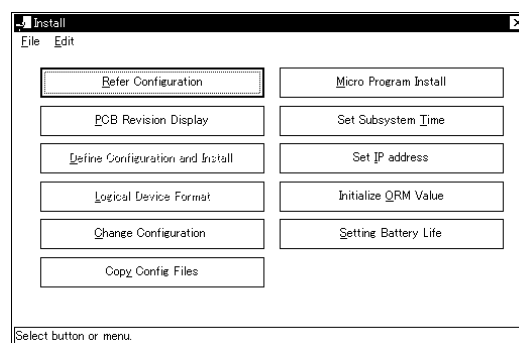

(18)

Change the mode to View Mode.

5.3.2.4 LUN Management

(1) Outline

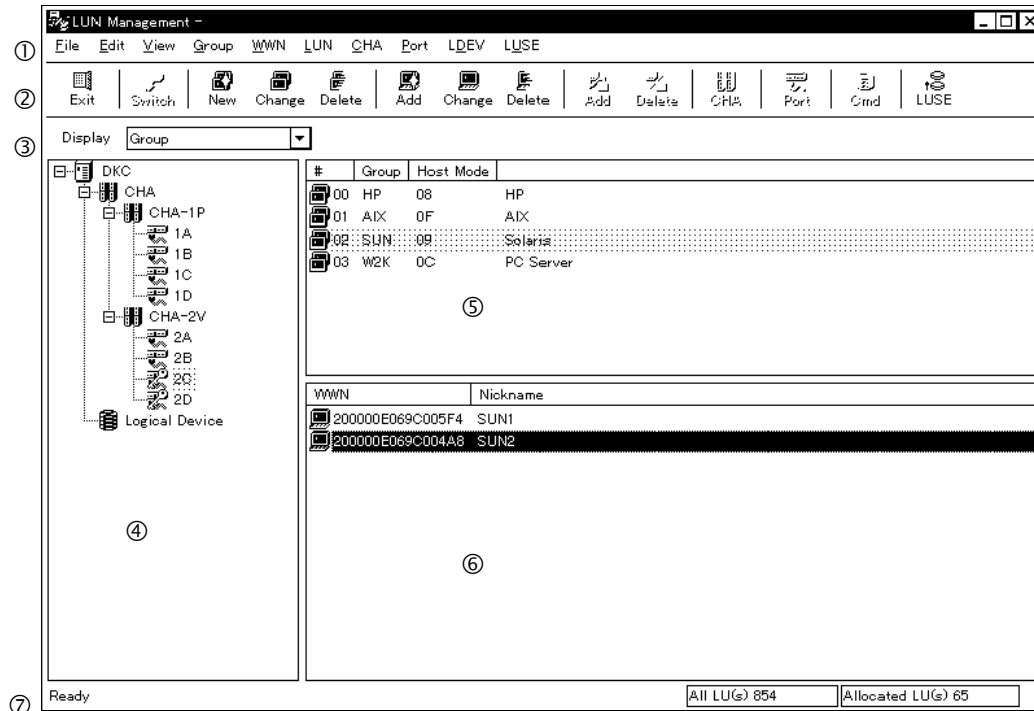


Figure 1.1 Main Window















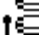
The Main window consists of the following elements.

Table 1.1 Outline of Main Window Elements

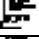No.	Item	Description
①	Menu	Menu of items operable by this function
②	Tool bar	Part of the menu enabled to be operable by buttons
③	Switch	When "Switch" displayed in the tree view is selected(Port), the status of the switch is selectable. The setting of the groups or LUN is selectable.
④	Tree	The structure that it is conscious of the hardware construction
⑤	Upper right list	Displays the details of an item selected from the tree.
⑥	Lower right list	Displays the details of an item selected from the upper list, if any.
⑦	Status bar	Displays outlined function of each item on the menu and tool bar when the mouse is positioned on it. Also it displays the all of the LU figures and the LU figures with the pass definition.

Menu items and their details are shown below.

Table 1.2 List of Menu Items

Menu	Submenu		Description	Tool bar
File	Exit		• Closes the window.	 "Exit"
	Backup		Creates a backup of the LUN configuration.	None
	Restore	Refer	Displays the stored backup of the LUN configuration in the window.	None
		Execute	Reflects the configuration displayed when the menu items [Restore] and [Refer] are selected.	None
		Cancel	Cancels the state induced by the selection of the menu items [Restore] and [Refer].	None
Edit	Copy		• Copies group / WWN / LUN to the clip board.	None
	Paste		• Pastes the information of the clip board.	None
View	Toolbar		• Makes the tool bar displayed or not.	None
	Status Bar		• Makes the status bar displayed or not.	None
Group	New		• Creates a new group.	 "New"
	Change		• Changes a group name or adds a member.	 "Change"
	Delete		• Deletes a group.	 "Delete"
WWN	Add		• Adds a WWN and its nickname.	 "Add"
	Change...		• Changes a WWN and its nickname.	 "Change"
	Delete		• Deletes a WWN.	 "Delete"
LUN	Add		• Adds a LUN.	 "Add"
	Delete		• Deletes a LUN.	 "Delete"
	Command Device		• Changes command device and command device security information.	 "Cmd"
CHA	Change...		• Changes a CHA option.	 "CHA"
Port	Parameter		• Changes a port parameter.	 "Port"
	Security Switch		• Sets whether to use the security function or not.	 "Switch"
LDEV	Command Device		• Changes command device and command device security information.	 "Cmd"
	Property		• Refers to LUN information from LDEV.	None
LUSE	LU Size Expansion		• Activates the LU Size Expansion window.	 "LUSE"

Displays the status shift to group / LUN definition from the declaration of the use of Security Switch function.

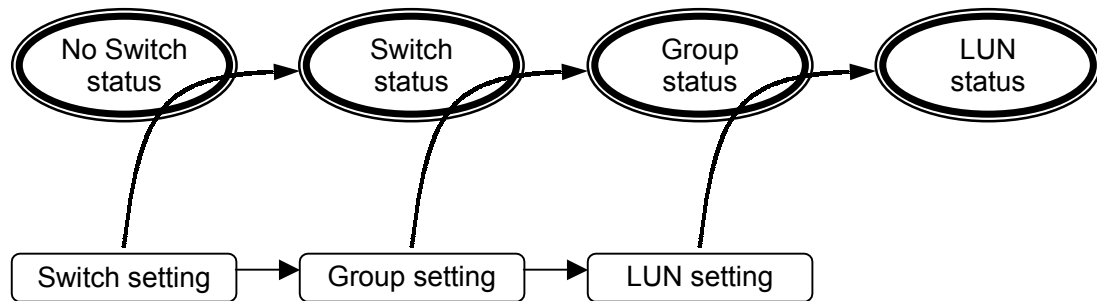


Figure1.1.2. Status shift to LUN definition

(2) Setting Security Switch

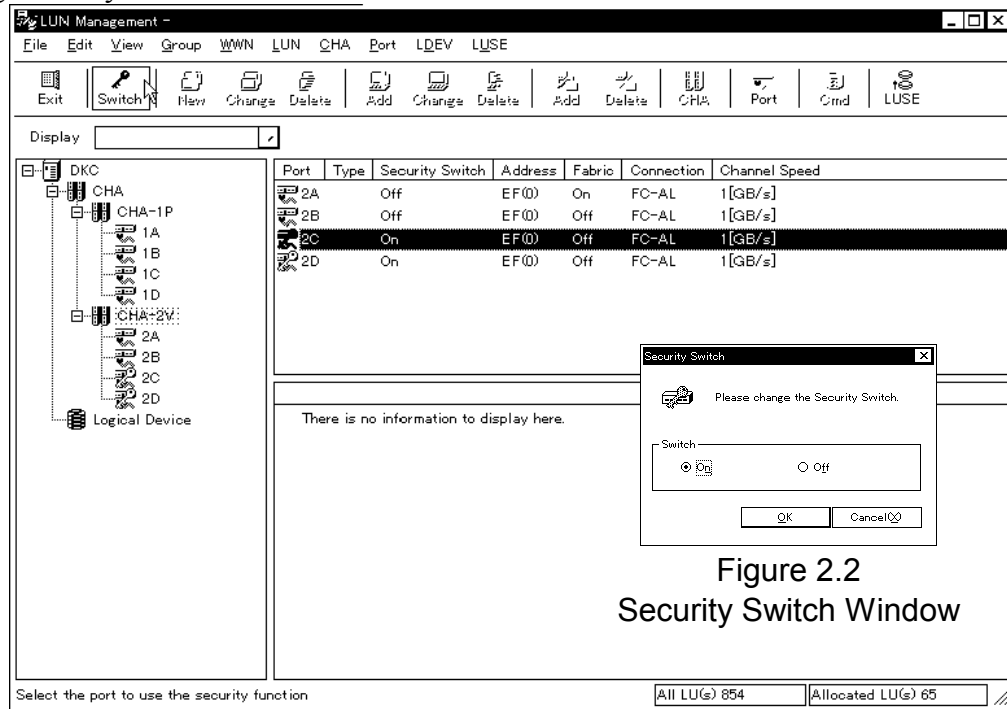


Figure 2.1 Main Window

When each CHA location in the tree view is selected (CL), installed ports information supported by this function are displayed in the upper right list.

Setting of a Security Switch is made in the following procedure.

- ① Select (CL) a port for which you want to set the security switch from the upper right list.
- ② Select (DR) [Security Switch...] from the [Port] menu.
- ③ Since the Security Switch window (Figure 2.2) is displayed, check On or Off box and select (CL) the [OK] button.
- ④ The status of the security switch that has been set is reflected in the Main window (Figure 2.1).

Details of the Main window (Figure 2.1) and the Security Switch window (Figure 2.2) are shown below.

Table 2.1 Details and Operation of Main Window (Switch)


Item	Description
Upper list	Displays statuses of the security switches that have been set. Provided with a sorting function.
Lower list	Displays nothing.
"Port – Security Switch..." menu	Selectable when an item has been selected from the upper list. Displays the Security Switch window.
Pop-up menu	Enables a clicking of the right mouse button to select "Security Switch" provided that an item has been selected from the upper list.

Table 2.2 Details and Operation of Security Switch Window

Item	Description
On/Off radio button	Displays a status setting of the Security Switch that has been selected in the Main window. (If On and Off of the switch have been selected in the Main window, the radio buttons of ON and OFF are not selected in this window, and [OK] button cannot be selected.)
OK button	Closes the window after reflecting the setting that has been made. Not selectable when neither of the statuses has been selected.
Cancel button	Closes the window without reflecting the setting that has been made.

(3) Setting Group

(3-1) Adding Group

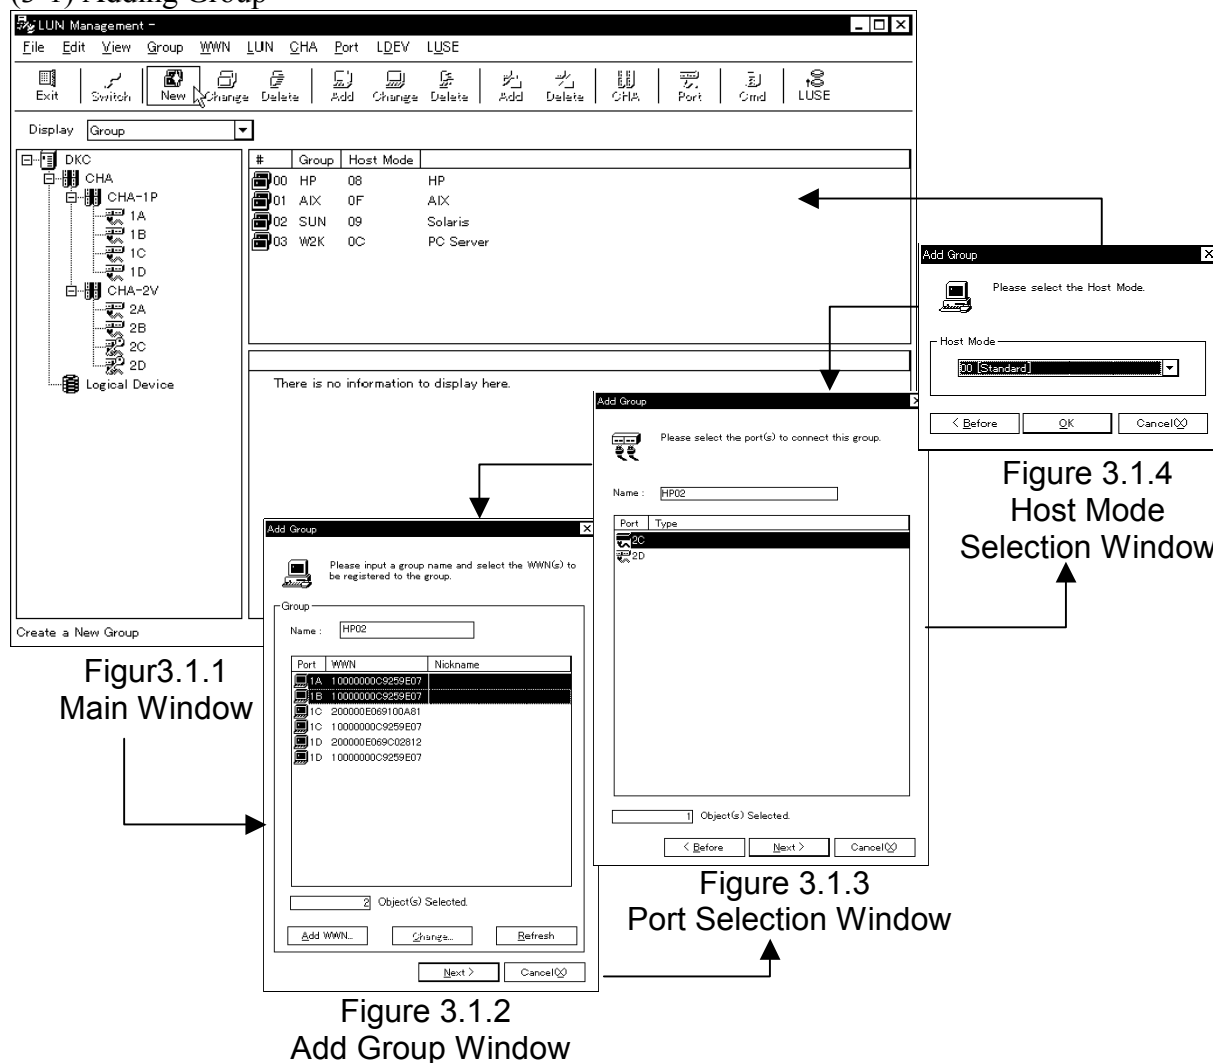

When “Port” in the tree view is selected, “Group” is set on the Display. Displays the group setting in the port that has been selected in the upper right list.

Addition of a group is done in the following procedure.

- ① Select (DR) [New...] from the [Group] menu in the Main window (Figure 3.1.1).
- ② Since the Add Group window (Figure 3.1.2) is displayed, enter a group name, register a WWN, and select (CL) the [Next] button.
- ③ Since the Port Selection window (Figure 3.1.3) is displayed, select (CL) a port for connecting a new group and select (CL) the [Next] button.
- ④ Set a host mode for the new group in the Host Mode Selection window (Figure 3.1.4) and select (CL) the [OK] button.
- ⑤ Information on the group that has been newly registered is reflected in the Main window (Figure 3.1.1).

Details of the Main window (Figure 3.1.1) and the other windows are shown on the following page.

Table 3.1.1 Details and Operation of Main Window (Group)

Item	Description
Upper list	Displays groups connected with the port that has been selected from the tree. Provided with a sorting function.
"Group - New..." menu	Selectable when "Port" has been selected from the tree. Displays the Add Group window.
Pop-up menu	Makes the "New" menu selectable when the right mouse button is clicked in the upper list.

Table 3.1.2 Details and Operation of Add Group Window

Item	Description
Name	To be used for entering a name (up to eight characters) of a group to be added.
List	Displays a WWN list. Selects WWN that wants to be set.
Add WWN button	Activates a window for manually registering a WWN when no applicable WWN exists in the list.
Change button	Changes a selected WWN and its nickname. (Only one WWN is selectable.)
Refresh button	Redraws the list
Next button	Closes the window and activates a window for selecting a port for connecting the group concerned.
Cancel button	Returns you to the Main window without doing anything.

Table 3.1.3 Details and Operation of Port Selection Window

Item	Description
Name	Displays the group name that has been entered in the preceding window.
List	To be used for selecting a port to be connected.
Before button	Returns you to the preceding window.
Next button	Closes the window and activates a window for selecting a host mode for the group concerned.
Cancel button	Returns you to the Main window without doing anything.

Table 3.1.4 Details and Operation of Host Mode Window

Item	Description
Host Mode	Displays host modes that can be set.
Before button	Returns you to the preceding window.
OK button	Closes the window after registering the group and returns you to the Main window.
Cancel button	Returns you to the Main window without doing anything.

(3-2) Changing Group

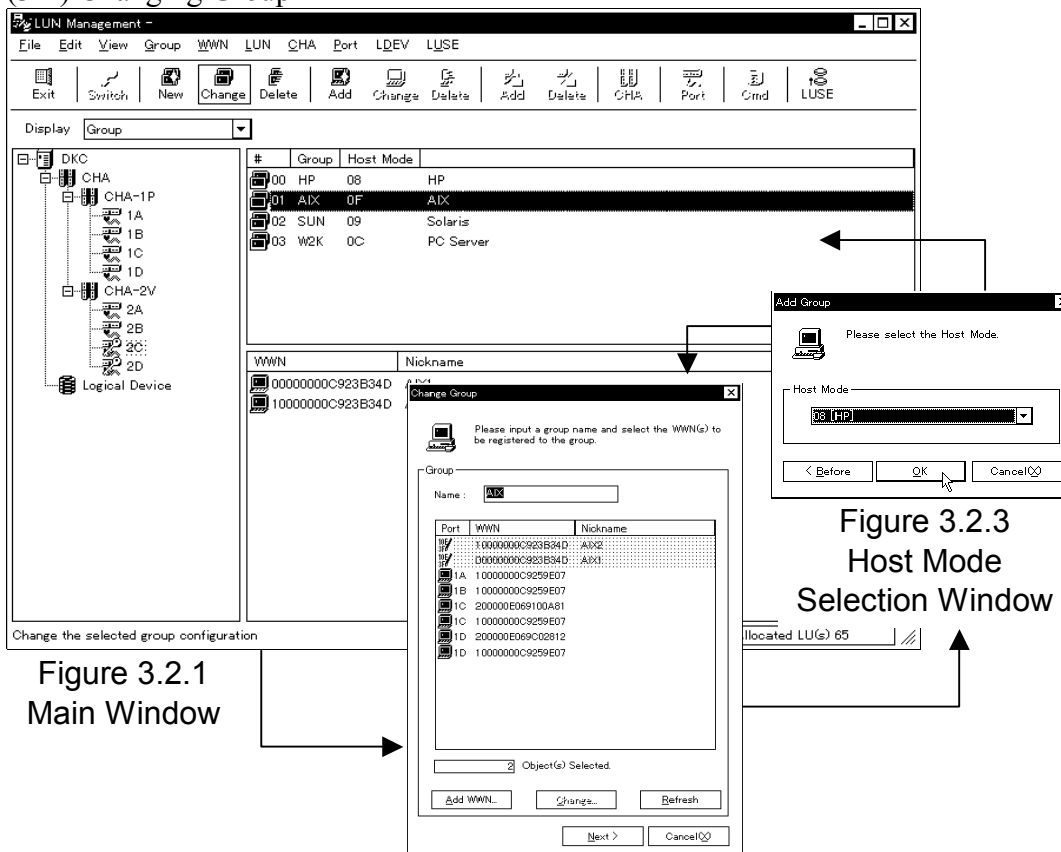


Figure 3.2.2
Change Group Window

Figure 3.2.3
Host Mode
Selection Window

When “Port” in the tree view is selected, “Group” is set on the Display. Displays the group setting in the port that has been selected in the upper right list. In the lower right list, details of a group that has been selected from the upper right list are displayed.

A change of a group is made in the following procedure.

- ① Select (CL) one group you want to change from the upper right list.
- ② Select (DR) [Change...] from the [Group] menu in the Main window (Figure 3.2.1).
- ③ Since the Change Group window (Figure 3.2.2) is displayed, change the group name and select (CL) the [Next] button.
- ④ Set a host mode for the group to be changed in the Host Mode Selection window (Figure 3.2.3) and select (CL) the [OK] button.
- ⑤ Information on the group that has been changed is reflected in the Main window (Figure 3.2.1).

In case of changing the group against the port of the Security Switch off, the Change Group window (Figure 3.2.2) is not displayed.

Details of the Main window (Figure 3.2.1) and the other windows are shown on the following page.

Table 3.2.1 Details and Operation of Main Window (Group)

Item	Description
Upper list	Displays groups connected with the port that has been selected from the tree. Provided with a sorting function.
Lower list	Displays details of a group that has been selected from the upper list. (Displays nothing when no item to be selected exists in the upper list or more than one item has been selected.) Provided with a sorting function.
"Group-Change..." menu	Selectable when a single group has been selected from the upper list. Displays the Change Group window.
Pop-up menu	Makes the "Change" menu selectable when a single group is selected from the upper list and the right mouse button is clicked there.

Table 3.2.2 Details and Operation of Change Group Window

Item	Description
Name	To be used for entering a name (up to eight characters) of a group to be changed.
List	Displays a WWN list. Selects WWN that wants to be set.
Add WWN button	Activates a window for manually registering a WWN when no applicable WWN exists in the list.
Change button	Changes a selected WWN and its nickname. (Only one WWN is selectable.)
Refresh button	Redraws the list.
Next button	Closes the window and activates a window for selecting a host mode to be registered for the group concerned.
Cancel button	Returns you to the Main window without doing anything.

Table 3.2.3 Details and Operation of Host Mode Selection Window

Item	Description
Host Mode	Displays host modes that can be set.
Before button	Returns you to the preceding window.
OK button	Closes the window after changing the group and returns you to the Main window.
Cancel button	Returns you to the Main window without doing anything.

(3-3) Deleting Group

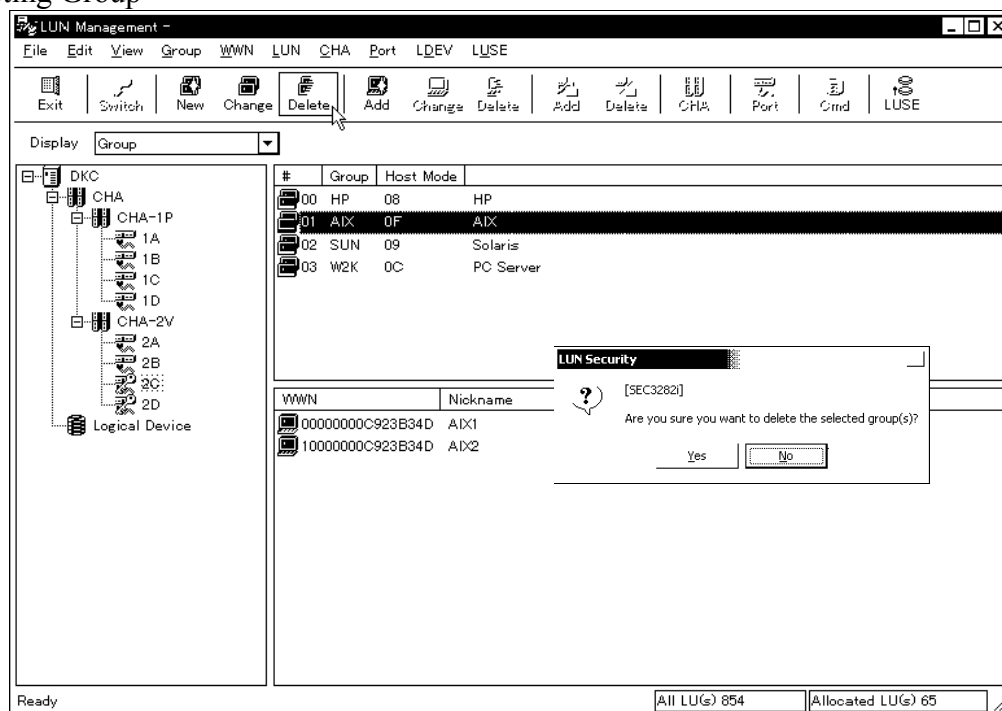


Figure 3.3.1 Main Window

When “Port” in the tree view is selected, “Group” is set on the Display. Displays the group setting in the port that has been selected in the upper right list. In the lower right list, details of a group that has been selected from the upper right list are displayed.

Deletion of a group is done in the following procedure.

- ① Select (CL) a group you want to delete from the upper right list.
- ② Select (DR) [Delete] from the [Group] menu in the Main window (Figure 3.3.1).
- ③ Since a message asking for a confirmation is displayed, select (CL) the [OK] button.
- ④ Information on the group that has been selected from the upper right list is deleted. Moreover, the details of the group information (WWN/LUN) is also deleted.

Table 3.3.1 Details and Operation of Main Window (Group)

Item	Description
Upper list	Displays groups connected with the port that has been selected from the tree.
	Provided with a sorting function.
Lower list	Displays details of a group that has been selected from the upper list. (Displays nothing when no item to be selected exists in the upper list or more than one item has been selected.)
	Provided with a sorting function.
"Group-Delete" tool bar	Selectable when a group has been selected from the upper list.
	Displays a message asking for a confirmation.
Pop-up menu	Displays "Delete" menu when the right mouse button is clicked on the item in the upper list.

(4) Setting WWN

(4-1) Adding WWN

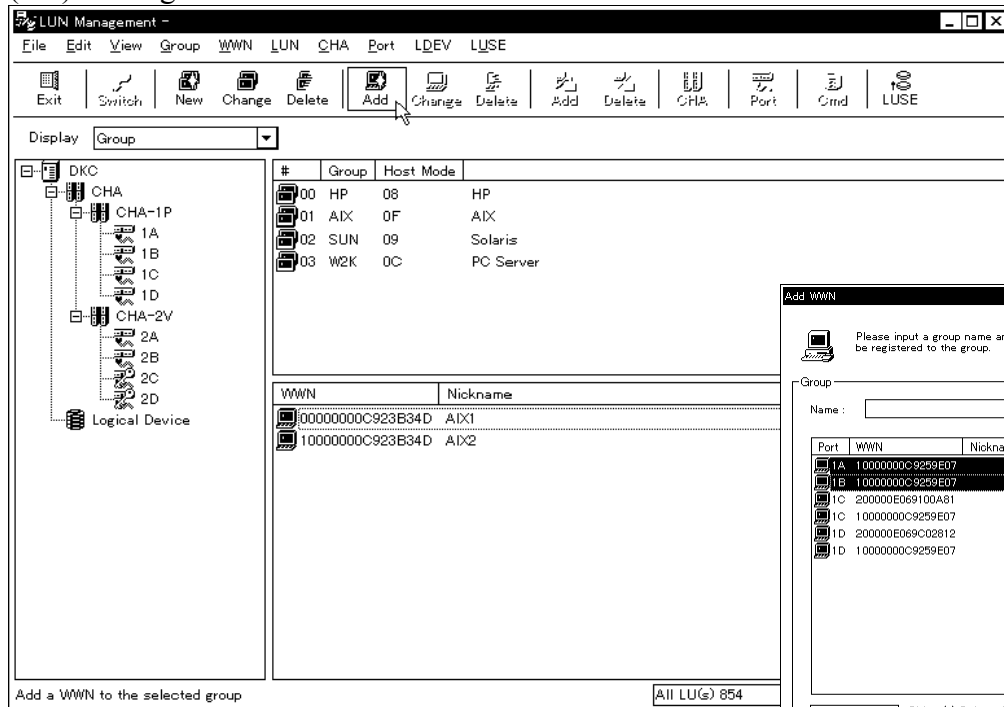


Figure 4.1.1 Main window

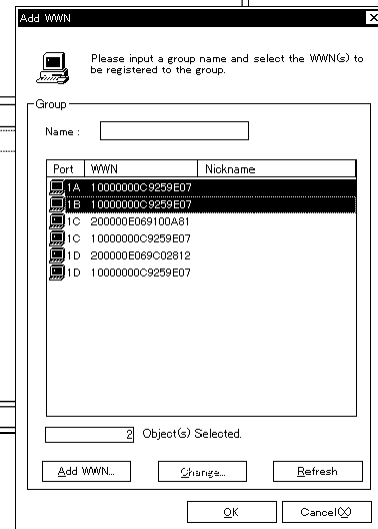


Figure 4.1.2
Add WWN Window

When “Port” in the tree view is selected, “Group” is set on the Display. Displays the group setting in the port that has been selected in the upper right list. In the lower right list, details of a group that has been selected from the upper right list are displayed.

Addition of a WWN is made in the following procedure.

- ① Select (CL) a group to which you want to add a WWN from the upper right list.
- ② Select (DR) [Add] from the [WWN] menu in the Main window (Figure 4.1.1).
- ③ Since the Add WWN window (Figure 4.1.2) is displayed, select (CL) “WWN” registering from the list, and select (CL) the [OK] button.
- ④ The WWN that has been newly added is reflected in the lower right list.

Details of the Main Window(Figure 4.1.1) and the other windows are shown on the following page.

Table 4.1.1 Details and Operation of Main Window (WWN)

Item	Description
Upper list	Displays groups connected with the port that has been selected from the tree. Provided with a sorting function.
Lower list	Displays details of a group that has been selected from the upper list. (Displays nothing when no item to be selected exists in the upper list or more than one item has been selected.) Provided with a sorting function.
"WWN - Add" menu	Selectable when a single group has been selected from the upper list. Displays the Add WWN window.
Pop-up menu	Displays the "Add" menu when the right mouse button is clicked in the lower list.

Table 4.1.2 Details and Operation of Add WWN Window

Item	Description
Name	Displays the group name. (Unchangeable)
List	Displays a WWN list. Select the registration WWN.
Add WWN button	Activates a window for manually registering a WWN when no applicable WWN exists in the list.
Change button	Changes a selected WWN and its nickname. (Only one WWN is selectable.)
Refresh button	Redraws the list.
OK button	Closes the window after registering the WWN, and returns you to the Main window.
Cancel button	Returns you to the Main window without doing anything.

(4-2) Changing WWN

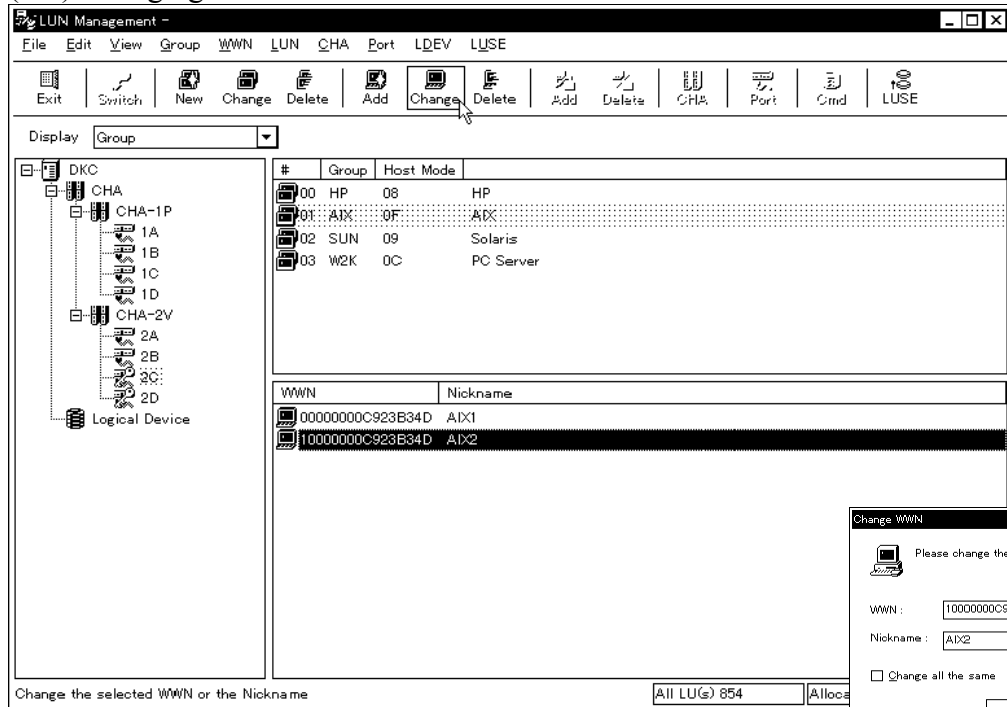
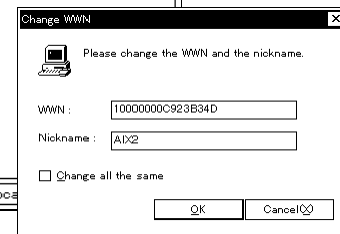


Figure 4.2.1 Main Window

Figure 4.2.2
Change WWN Window

When "Port" in the tree view is selected, "Group" is set on the Display. Displays the group setting in the port that has been selected in the upper right list. In the lower right list, details of a group that has been selected from the upper right list are displayed.

A change of a WWN is made in the following procedure.

- ① Select (CL) one WWN you want to change from the lower right list.
- ② Select (DR) [Change...] from the [WWN] menu in the Main window (Figure 4.2.1).
- ③ Since the Change WWN window (Figure 4.2.2) is displayed, change the "WWN" and its "Nickname", and select (CL) the [OK] button.
- ④ The WWN that has been changed is reflected in the lower right list.

Details of the Main Window(Figure 4.2.1) and the other windows are shown on the following page.

Table 4.2.1 Details and Operation of Main Window (WWN)

Item	Description
Upper list	Displays groups connected with the port that has been selected from the tree. Provided with a sorting function.
Lower list	Displays details of a group that has been selected from the upper list. (Displays nothing when no item to be selected exists in the upper list or more than one item has been selected.) Provided with a sorting function.
"WWN - Change" menu	Selectable when a single group has been selected from the lower list. Displays the Change WWN window.
Pop-up menu	Displays the "Change" menu when the right mouse button is clicked on the item in the lower list.

Table 4.2.2 Details and Operation of Change WWN Window

Item	Description
WWN	To be used for entering a WWN (16 hexadecimal digits).
Nick name	Used for entering a nickname (up to eight characters).
Change all the same button	In case of checking it, the change should be executed for the same WWN including in the group of the other ports.
OK button	Selectable only when the WWN has been entered correctly. Closes the window after registering the WWN and nickname, and returns you to the Main window.
Cancel button	Returns you to the Main window without doing anything.

(4-3) Deleting WWN

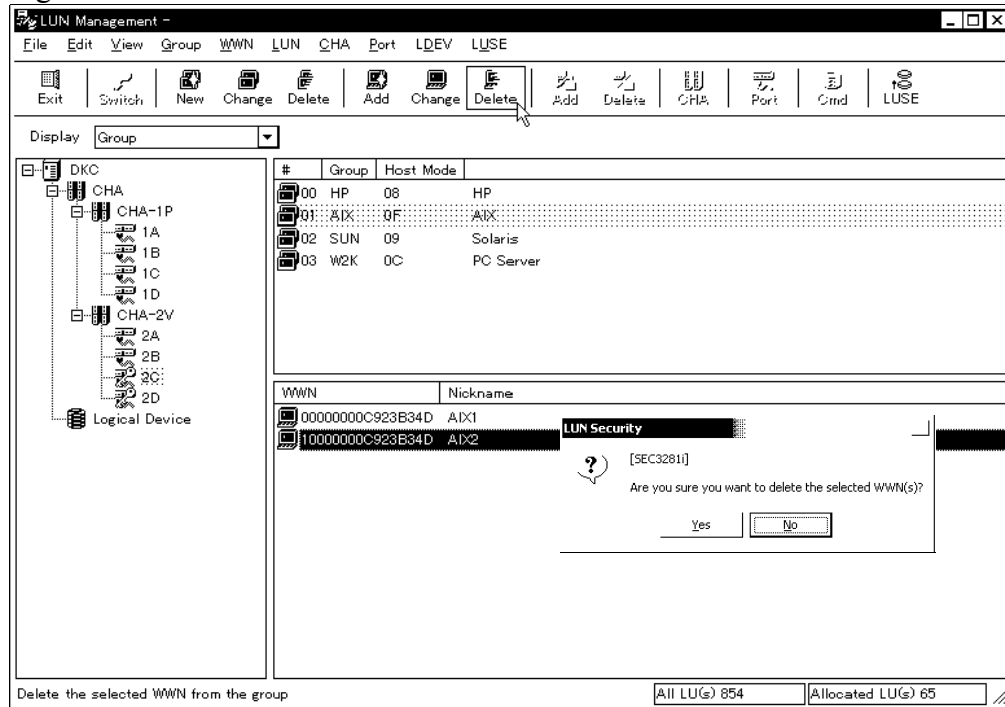


Figure 4.3.1 Main Window

When “Port” in the tree view is selected, “Group” is set on the Display. Displays the group setting in the port that has been selected in the upper right list. In the lower right list, details of a group that has been selected from the upper right list are displayed.

Deletion of a WWN is done in the following procedure.

- ① Select (CL) a WWN you want to delete from the lower right list.
- ② Select (DR) [Delete] from the [WWN] menu in the Main window (Figure 4.3.1).
- ③ Since a message asking for a confirmation is displayed, select (CL) the [OK] button.
- ④ The WWN that has been selected from the lower right list is deleted.

Table 4.3.1 Details and Operation of Main Window (Group)

Item	Description
Upper list	Displays groups connected with the port that has been selected from the tree.
	Provided with a sorting function.
Lower list	Displays details of a group that has been selected from the upper list. (Displays nothing when no item to be selected exists in the upper list or more than one item has been selected.)
	Provided with a sorting function.
"WWN – Delete" menu	Selectable when a WWN has been selected from the lower list.
	Displays a message asking for a confirmation.
Pop-up menu	Displays "Delete" menu when the right mouse button is clicked on the item in the upper list.

(5) Setting LUN

(5-1) Adding LUN

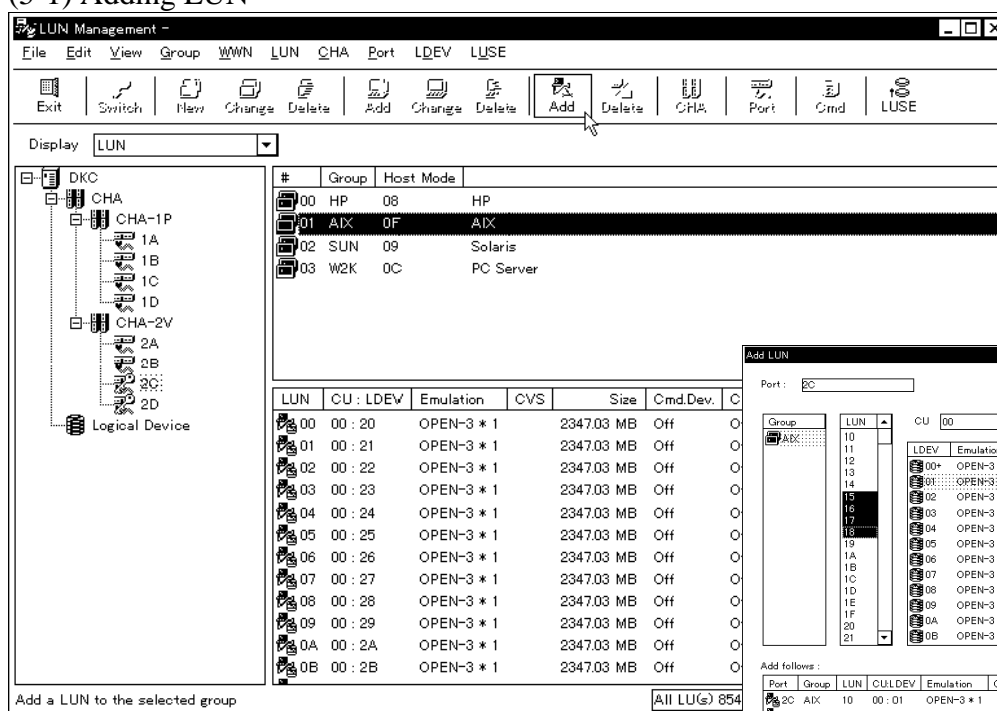


Figure 5.1.1 Main Window

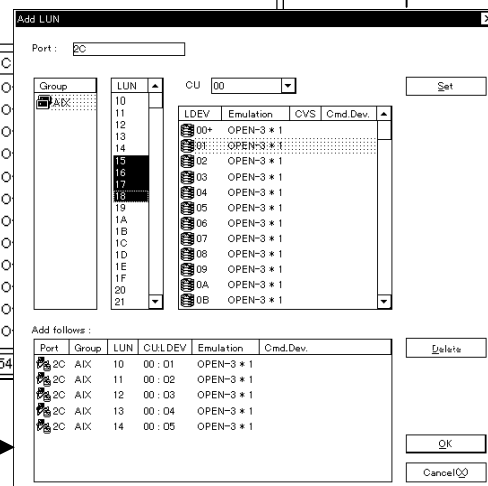


Figure 5.1.2 Add LUN Window

When “Port” in the tree view is selected, “LUN” is set on the Display. Displays the group setting in the port that has been selected in the upper right list. In the lower right list, details of a group that has been selected from the upper right list are displayed.

Addition of a LUN is done in the following procedure.

- ① Select (CL) a group from the upper right list.
- ② Select (DR) [Add] from the [LUN] menu in the Main window (Figure 5.1.1).
- ③ Since the Add LUN window (Figure 5.1.2) is displayed, after select LUN and CU:LDEV, select (CL) the [Set] button, make the “Add follows” list and select (CL) the [OK] button.
- ④ Information on the LUN that has been newly registered is reflected in the Main window (Figure 5.1.1).

Details of the Main Window(Figure 5.1.1) and the other windows are shown on the following page.

Table 5.1.1 Details and Operation of Main Window (LUN)

Item	Description
Upper list	Displays groups connected with the port that has been selected from the tree.
	Provided with a sorting function.
Lower list	Displays LUN's defined as being contained in the group that has been selected from the upper list. (Displays nothing when no item to be selected exists in the upper list or more than one item has been selected.)
	Provided with a sorting function.
"LUN - Add..." menu	Selectable when a port subordinate to the LUN has been selected from the tree.
	Displays the Add LUN window.
Pop-up menu	Displays the "Add" menu when the right mouse button is clicked on the item in the upper list.

Table 5.1.2 Details and Operation of Add LUN Window

Item	Description
Port	Displays a name of a port that has been selected from the tree in the Main window.
Group list	Displays all groups registered as being connected with the port concerned.
LUN list	Displays unused LUN's in the group concerned according to the group selection that has been made.
CU list	Displays CU numbers of all mounted LDEV's supported by this function.
LDEV list	Displays unused LDEV's in the group concerned according to the group selection that has been made.
Add follows list	Displays a LUN (path) to be added.
Set button	Selectable only when the group, LUN, and CU:LDEV have been selected.
	The LUN that has been added is displayed in the "Add follows" list.
Delete button	Excludes a LUN from LUNs to be added.
OK button	Selectable only when the LUN'(s) is/are in the "Add follows" list.
	Closes the window after adding the LUN and returns you to the Main window.
Cancel button	Closes the window without doing anything and returns you to the Main window.

(5-2) Deleting LUN

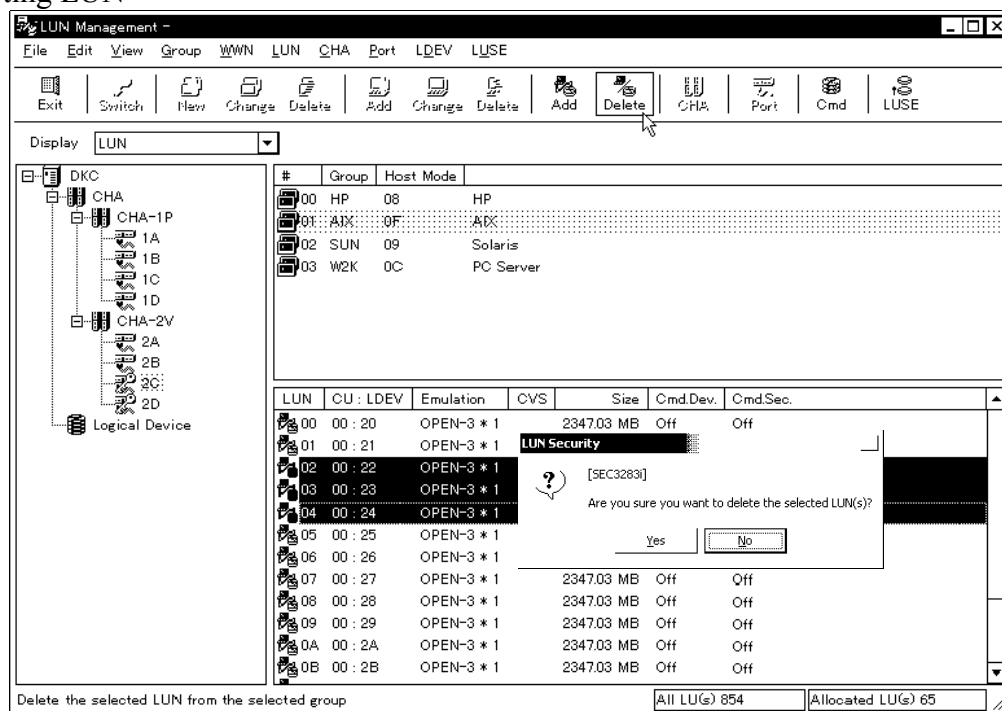


Figure 5.2.1 Main Window

When “Port” in the tree view is selected, groups connected with the port that has been selected from the tree are displayed in the upper right list. In the lower right list, details of a group that has been selected from the upper right list are displayed.

Deletion of a LUN is done in the following procedure.

- ① Select (CL) a LUN from the upper right list.
- ② Select (DR) [Delete] from the [LUN] menu in the Main window (Figure 5.2.1).
- ③ Since a message asking for a confirmation is displayed, select (CL) the [Yes] button.
- ④ Information on the LUN that has been selected from the lower right list is deleted.

Table 5.2.1 Details and Operation of Main Window (LUN)

Item	Description
Upper list	Displays groups connected with the port that has been selected from the tree.
	Provided with a sorting function.
Lower list	Displays LUNs defined for a group selected from the upper list. (Displays nothing when no item to be selected exists in the upper list or more than one item has been selected.)
	Provided with a sorting function.
"LUN – Delete..." menu	Selectable when a LUN has been selected from the lower list.
	Displays a message asking for a confirmation.
Pop-up menu	Displays "Delete" menu when the right mouse button is clicked on the item in the lower list.

(5-3) Changing Command Device from the LUN list

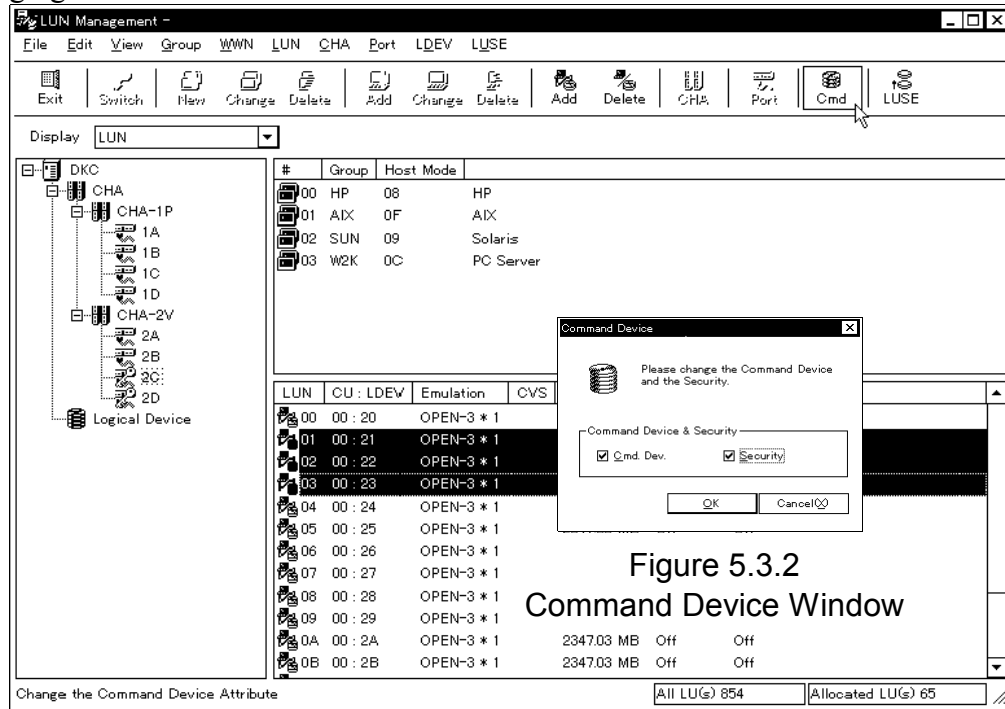


Figure 5.3.2
Command Device Window

Figure 5.3.1 Main Window

When “Port” in the tree view is selected, groups connected with the port that has been selected from the tree are displayed in the upper right list. In the lower right list, details of a group that has been selected from the upper right list are displayed.

Setting of a Command Device from the LUN list is made in the following procedure.

- ① Select (CL) LUN from the lower right list.
- ② Select (DR) [Command Device] from the [LUN] menu in the Main window (Figure 5.3.1).
- ③ Change “Command Device” in the Command Device Window (Figure 5.3.2), and select (CL) the [OK] button.
- ④ Information on the LUN that has been selected from the lower right list is reflected.

Table 5.3.1 Details and Operation of Main Window (LUN)

Item	Description
Upper list	Displays groups connected with the port that has been selected from the tree.
	Provided with a sorting function.
Lower list	Displays LUN's defined as being contained in the group that has been selected from the upper list. (Displays nothing when no item to be selected exists in the upper list or more than one item has been selected.)
	Provided with a sorting function.
"LUN – Command Device..." menu	Selectable when a LUN has been selected from the lower list.
	Displays the Command Device window.
Pop-up menu	Displays the "Command Device" menu when the right mouse button is clicked on the item in the lower list.

Table 5.3.2 Details and Operation of Add LUN Window

Item	Description
Cmd.Dev.	Displays the command device of LUN selection.
	When it is checked, the command device is on.
Security	Displays a status of command device security of the LUN that has been selected.
	Enables a command device to be checked provided that the Cmd. Dev. has been set for it.
	When it is checked, the security of the command device is on.
OK button	Closes the window after changing the parameter and returns you to the Main window.
Cancel button	Closes the window without doing anything and returns you to the Main window.

(6) Changing CHA

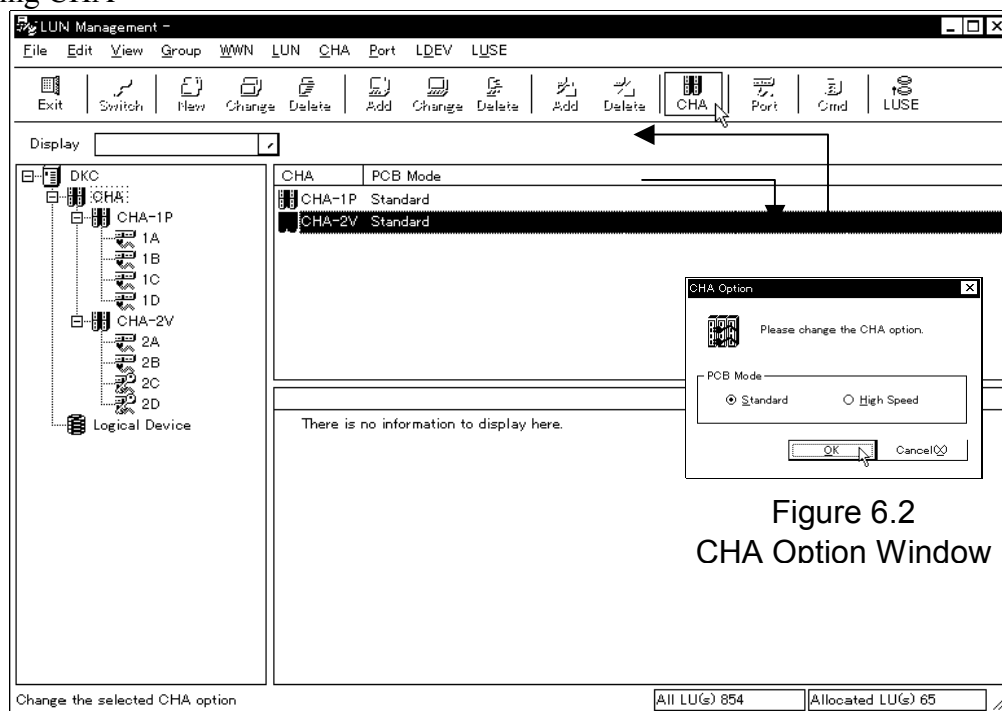


Figure 6.2
CHA Option Window

Figure 6.1 Main Window

When “CHA” in the tree view is selected (CL), installed CHA PCB’s supported by this function are displayed in the upper right list.

A change of a CHA PCB Mode is made in the following procedure.

- ① Select (CL) a CHA from the upper right list.
- ② Select (DR) [Change...] from the [CHA] menu in the Main window (Figure 6.1).
- ③ Since the CHA Option window (Figure 6.2) is displayed, select (CL) a "PCB Mode" and select (CL) the [OK] button.
- ④ An operational mode of a PCB of the CHA that has been set in the upper right list is changed.

Table 6.1 Details and Operation of Main Window (CHA)

Item	Description
Upper list	Displays installed CHA PCB's supported by this function.
	Provided with a sorting function.
Lower list	Displays no item.
"CHA - Change" menu	Selectable when a CHA has been selected from the upper list.
	Displays the CHA Option window.
Pop-up menu	Displays the "Change" menu when the right mouse button is clicked on the item in the upper list.

Table 6.2 Details and Operation of Main Window (WWN)

Item	Description
PCB Mode	Displays a set operational mode of a CHA PCB in a form that it has been selected.
OK button	Selectable only when the PCB Mode has been selected.
	Closes the window after changing the parameter, and returns you to the Main window.
Cancel button	Returns you to the Main window without doing anything.

(7) Changing Port

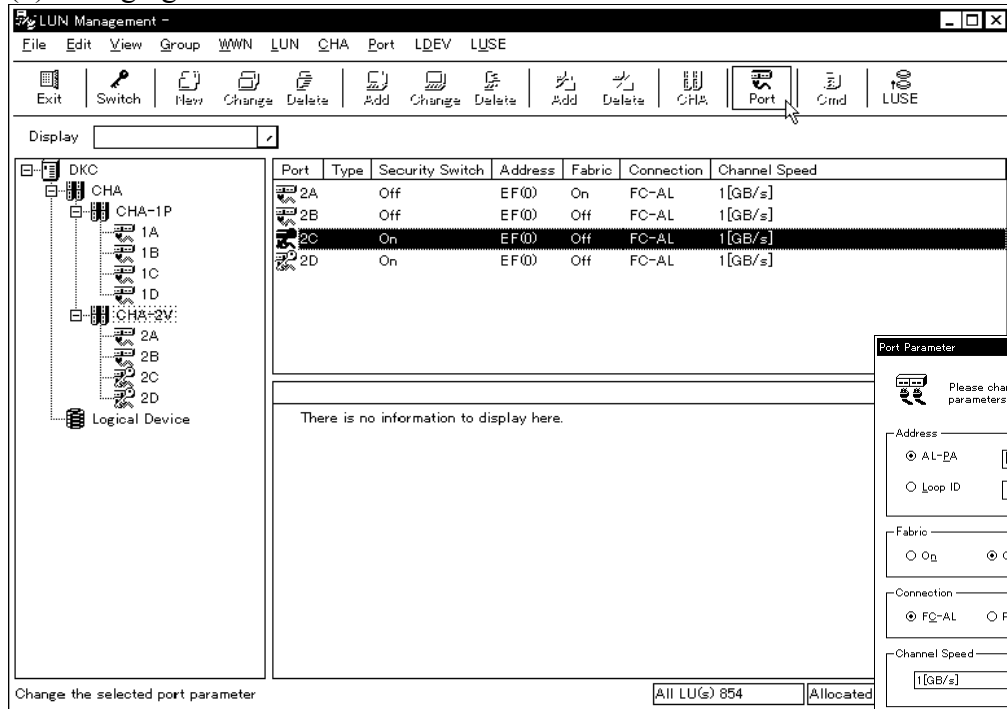
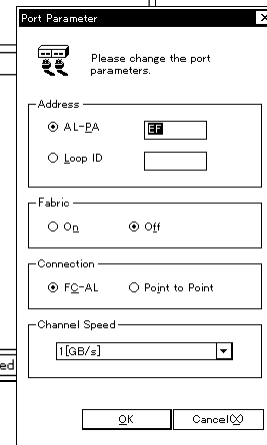


Figure 7.1 Main Window

Figure 7.2
Port Parameter Window

When “Port” in the tree view is selected (CL), installed ports supported by this function are displayed in the upper right list.

A change of a Port Parameter is made in the following procedure.

- ① Select (CL) a port from the upper right list.
- ② Select (DR) [Parameter...] from the [Port] menu in the Main window (Figure 7.1).
- ③ Since the Port Parameter window (Figure 7.2) is displayed, set each item and select (CL) the [OK] button.
- ④ You can change information on the port that has been selected from the upper right list.

Table 7.1 Details and Operation of Main Window (Port)

Item	Description
Upper list	Displays installed ports supported by this function.
	Provided with a sorting function.
Lower list	Displays no item.
"Port - Change" menu	Selectable when a port has been selected from the upper list.
	Displays the Port Parameter window.
Pop-up menu	Displays the "Change" menu when the right mouse button is clicked on the item in the upper list.

Table 7.2 Details and Operation of Port Parameter Window

Item	Description
AL-PA	Displays an AL-PA value of a fibre port address.
Loop ID	Displays a loop ID value of a fibre port address.
Fabric	Displays whether to use (On) or not to use (Off) the fabric
Connection	Displays which is to be used: FC-AL or Point to Point.
Channel Speed	Displays 1 GB/s, 2 GB/s, or Auto.
OK button	Closes the window after changing the parameter(s), and returns you to the Main window.
Cancel button	Returns you to the Main window without doing anything.

Fibre port addresses (AL-PA's and loop ID's) are shown below.

Table 7.3 Fibre Port Addresses (AL-PA's and Loop ID's)

AL AP	Loop ID	AL AP	Loop ID	AL AP	Loop ID	AL AP	Loop ID	AL AP	Loop ID	AL AP	Loop ID	AL AP	Loop ID	AL AP	Loop ID
EF	0	CD	16	B2	32	98	48	72	64	55	80	3A	96	25	112
E8	1	CC	17	B1	33	97	49	71	65	54	81	39	97	23	113
E4	2	CB	18	AE	34	90	50	6E	66	53	82	36	98	1F	114
E2	3	CA	19	AD	35	8F	51	6D	67	52	83	35	99	1E	115
E1	4	C9	20	AC	36	88	52	6C	68	51	84	34	100	1D	116
E0	5	C7	21	AB	37	84	53	6B	69	4E	85	33	101	1B	117
DC	6	C6	22	AA	38	82	54	6A	70	4D	86	32	102	18	118
DA	7	C5	23	A9	39	81	55	69	71	4C	87	31	103	17	119
D9	8	C3	24	A7	40	80	56	67	72	4B	88	2E	104	10	120
D6	9	BC	25	A6	41	7C	57	66	73	4A	89	2D	105	0F	121
D5	10	BA	26	A5	42	7A	58	65	74	49	90	2C	106	08	122
D4	11	B9	27	A3	43	79	59	63	75	47	91	2B	107	04	123
D3	12	B6	28	9F	44	76	60	5C	76	46	92	2A	108	02	124
D2	13	B5	29	9E	45	75	61	5A	77	45	93	29	109	01	125
D1	14	B4	30	9D	46	74	62	59	78	43	94	27	110		
CE	15	B3	31	9B	47	73	63	56	79	3C	95	26	111		

(8) Changing Command Device from LDEV list

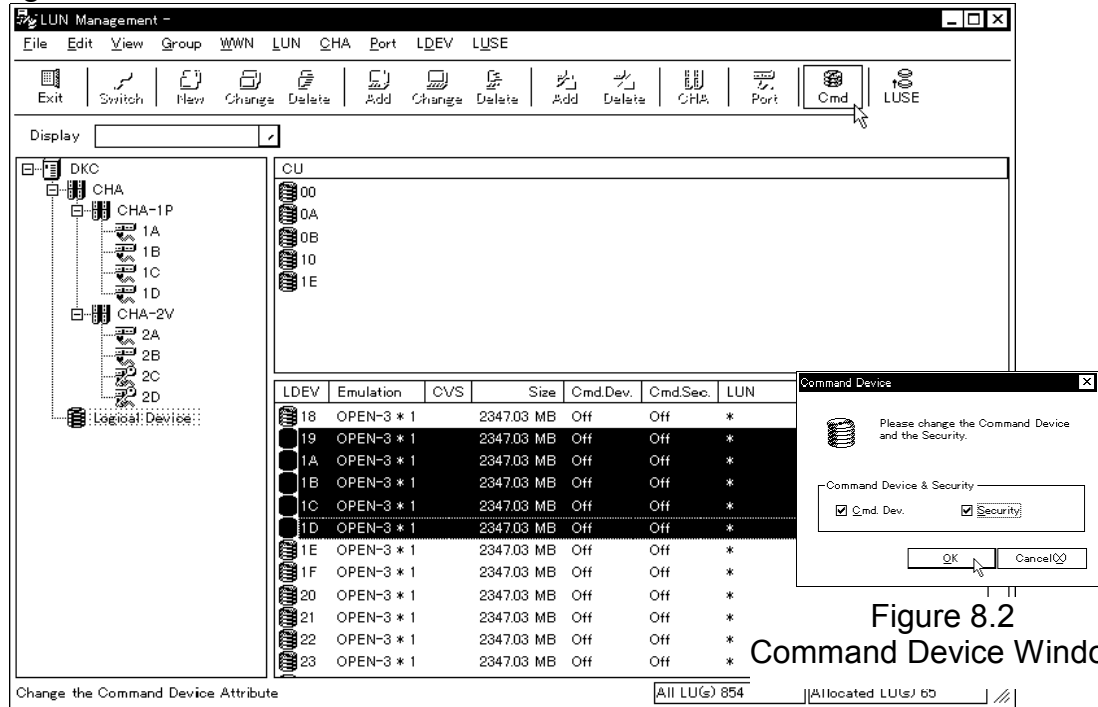
Figure 8.2
Command Device Window

Figure 8.1 Main Window

When “Command Device” in the tree view is selected (CL), CU numbers of installed LDEV’s supported by this function are displayed in the upper right list. In the lower right list, details of a CU selected from the upper right list are displayed.

A change of a command device is made in the following procedure.

- ① Select (CL) an LDEV you want to change from the lower right list.
- ② Select (DR) [Change...] from the [Device] menu in the Main window (Figure 8.1).
- ③ Since the Command Device window (Figure 8.2) is displayed, change the “Command Device” and select (CL) the [OK] button.
- ④ Information that has been set is reflected in the LDEV that has been selected from the lower right list.

Table 8.1 Details and Operation of Main Window (Command Device)

Item	Description
Upper list	Displays CU numbers of installed LDEV's supported by this function.
	Provided with a sorting function.
Lower list	Displays details of a CU selected from the upper list. (Displays nothing when no item to be selected exists in the upper list or more than one item has been selected.)
	Provided with a sorting function.
"Device - Change" menu	Selectable only when an LDEV that is given a definition of LUN has been selected from the lower list.
	Displays the Command Device window.
Pop-up menu	Displays the "Change" menu when the right mouse button is clicked on the item in the lower list.

Table 8.2 Details and Operation of Command Device Window

Item	Description
Cmd.Dev.	Displays a status of a command device of the LUN that has been elected.
	When it is checked, the command device is on.
Security	Displays a status of command device security of the LUN that has been selected.
	Enables a command device to be checked provided that the Cmd. Dev. has been set for it.
	When it is checked, the command device security is on.
OK Button	Closes the window after changing the parameters, and returns you to the Main window.
Cancel Button	Returns you to the Main window without doing anything.

(9) Setting LUSE

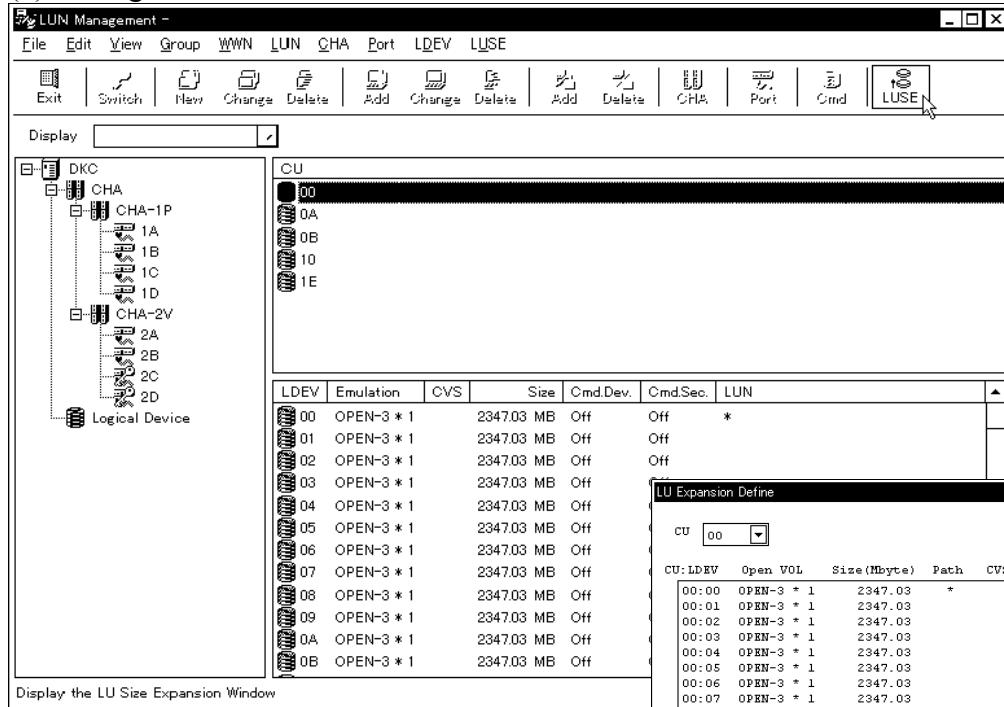


Figure 9.1 Main Window

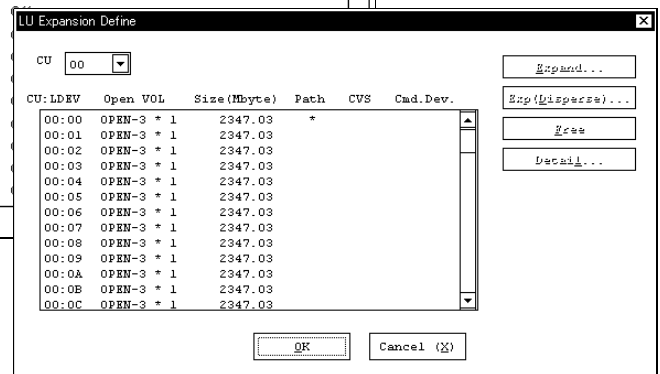


Figure 9.2
LU Expansion Define
Window


A change of a LUSE is made in the following procedure.

- ① Select (DR) [LU Size Expansion...] from the [LUSE] menu in the Main window (Figure 9.1).
- ② Since the LU Expansion Define window (Figure 9.2) is displayed, set each item and select (CL) the [OK] button.
- ③ Selected information is defined to the Main Window (Figure 9.1).

LU Expansion Define window

Detail of the list

- The list is displayed line by line in CU (The selection can be done on CU list).
- The number of LDEVs connected sequentially together which formalize LU Expansion (Open VOL)
ex.) The first line on the right figure indicates that 10 LDEVs whose emulation type is OPEN-3 are connected together sequentially.
- The existence of LUN definition to the Open VOL.
ex.) In the first line, '*' shows that CU:LDEV=00:00 and 00:10 have a LUN definition.
- The existence of CVS definition to the Open VOL.
ex.) In the seventh line '*' shows that CU:LDEV=00:0F has a CVS definition.
- The existence of Command Device (Cmd. Dev.) definition of the Open VOL.
ex.) In the fourth line '*' shows that CU:LDEV=00:0C has a Command Device definition.

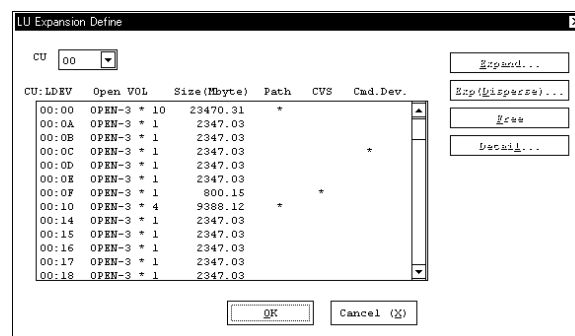

Detail of the buttons

- [OK] button : To register the setting information
- [Cancel] button : Not to register the setting information (It is disabled when 'Change Configuration')
- [Expand...] button : To display 'LU Expansion' window (go to (9-1))
- [Exp(Disperse)...] button : To display 'LU Expansion (Disperse)' window (go to (9-2))
- [Free] button : To dissolve LU Expansion consisted of two or more LDEVs (go to (9-3))
- [Detail...] button : To display 'Open VOL Detail' window (go to (9-4))

(9-1) The setting of LU Expansion ('LU Expansion' window)

Select (CL) [Expand...] button in 'LU Expansion Define' window. [Expand...] button comes to be available at the time of selecting connectable CU:LDEV from the list.

Connectable CU:LDEV denotes the following LDEVs.

- Unconnected CU:LDEVs
- CU:LDEV without SCSI path definition
- CU:LDEV without Command Device definition
- CU:LDEV with same emulation type
- CU:LDEV with same capacity
- CU:LDEV with has no CVS definition, if you select CU:LDEV which has no CVS definition.
- CU:LDEV with has CVS definition, if you select CU:LDEV which has CVS definition.

The selected CU:LDEV comes to be the head of Open VOL and also CU:LDEV# comes to be Open VOL#.

'LU Expansion' window is displayed.

Detail of displayed information



OPEN-XXX : Emulation type

OPEN VOL : Open VOL# (Selected CU:LDEV#)


Valid VOL count : Total number of LDEVs connectable together (maximum: 36)

Enter VOL count : The input field of connection number

Size [Mbyte] : The capacity of Open VOL

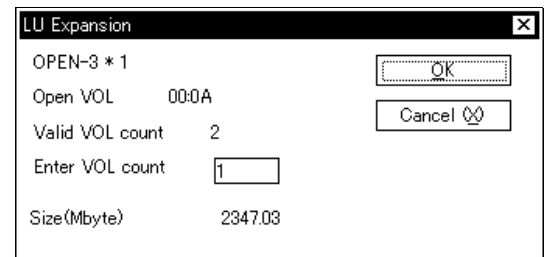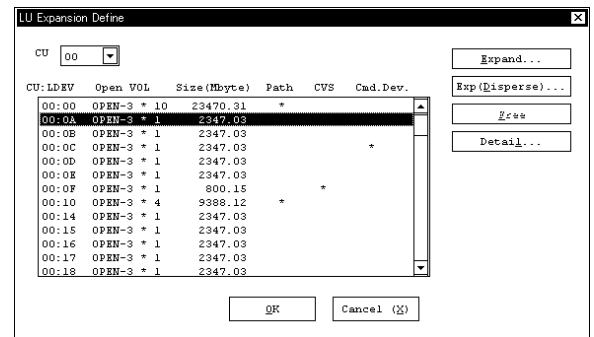


After the input of connection number, select (CL) [OK] button.

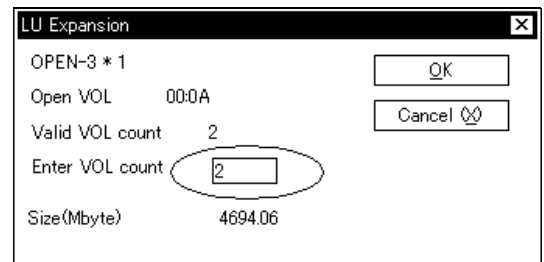

LU Expansion dialog box showing configuration for OPEN-3 * 1. The 'Enter VOL count' field is set to 2 and is circled. The 'Size(Mbyte)' is 4694.06. Buttons for OK and Cancel are present.

OPEN-3 * 1	
Open VOL	00:0A
Valid VOL count	2
Enter VOL count	2
Size(Mbyte)	4694.06

Update the list of 'LU Expansion Define' window. (The right figure shows the case that 2 LDEVs starting at CU:LDEV=00:0A are connected together.)

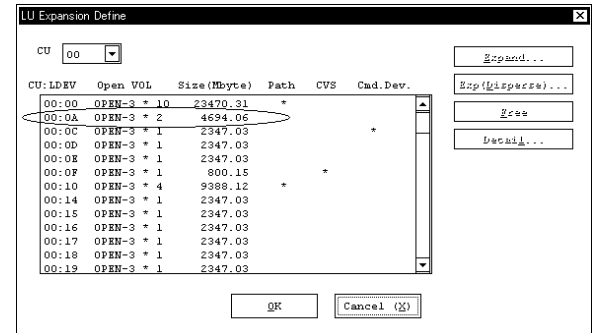


LU Expansion Define dialog box showing a list of LDEVs. The 'CU' dropdown is set to 00. The list shows two LDEVs (00:0A and 00:0C) connected to the same OPEN-3 * 2 volume. Buttons for Expand, Import, Exit, and Detach are on the right.

CU	LDEV	Open VOL	Size(Mbyte)	Path	CVS	Cnd.Dev.
00	00:00	OPEN-3 * 10	23470.31	*		
00	00:0A	OPEN-3 * 2	4694.06			
00	00:0C	OPEN-3 * 1	2347.03		*	
00	00:0D	OPEN-3 * 1	2347.03			
00	00:0E	OPEN-3 * 1	2347.03			
00	00:0F	OPEN-3 * 1	800.15		*	
00	00:10	OPEN-3 * 4	9388.12	*		
00	00:14	OPEN-3 * 1	2347.03			
00	00:15	OPEN-3 * 1	2347.03			
00	00:16	OPEN-3 * 1	2347.03			
00	00:17	OPEN-3 * 1	2347.03			
00	00:18	OPEN-3 * 1	2347.03			
00	00:19	OPEN-3 * 1	2347.03			

Selecting (CL) [OK] button brings you back to 'LUN Management' window, and the contents of the window automatically updated.

(9-2) The setting of LU Expansion by dispersive LDEV ('LU Expansion (Disperse)' window)

Select (CL) [Exp(Disperse)...] button in 'LU Expansion Define' window. [Exp(Disperse)...] button comes to be available at the time of selecting connectable CU:LDEV from the list.

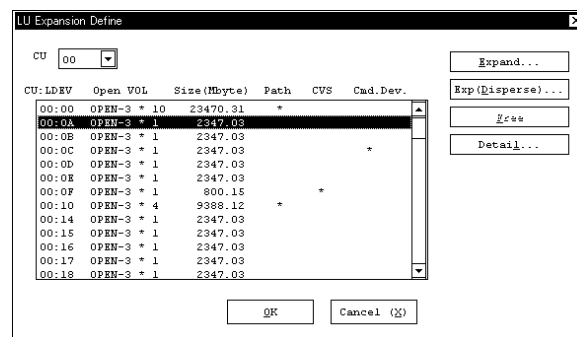

Connectable CU:LDEV denotes the following LDEVs.

- Unconnected CU:LDEVs
- CU:LDEV without SCSI path definition
- CU:LDEV without Command Device definition
- CU:LDEV with same emulation type
- CU:LDEV with same capacity
- CU:LDEV with has no CVS definition, if you select CU:LDEV which has no CVS definition.
- CU:LDEV with has CVS definition, if you select CU:LDEV which has CVS definition.



The selected CU:LDEV comes to be the head of Open VOL and also CU:LDEV# comes to be Open VOL#.

'LU Expansion (Disperse)' window is displayed.


Detail of displayed information

OPEN-XXX : Emulation type
 Open VOL : Open VOL# (Selected CU:LDEV#)
 Size/VOL(Mbyte) : The capacity per one CU:LDEV
 Total(Mbyte) : The capacity of Open VOL
 CU:LDEV list : Connectable CU:LDEV#

After the selection (CL) of connection CU:LDEV from the list, select (CL) [OK] button. (You can connect 36 CU:LDEVs include the head at a maximum.)

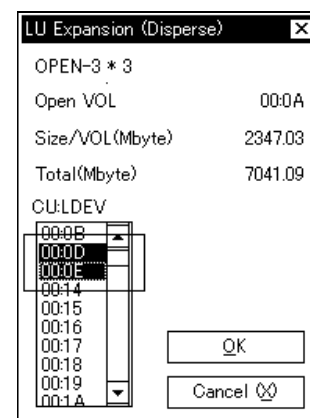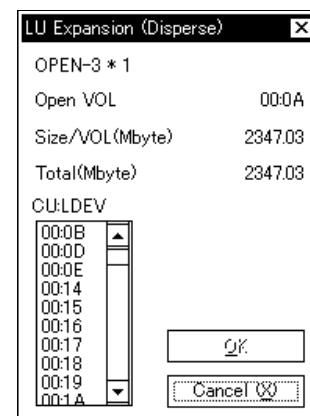

Update the list of 'LU Expansion Define' window. (The right figure shows the case that CU:LDEV=00:0A, 00:0D, 00:0E are connected together.)

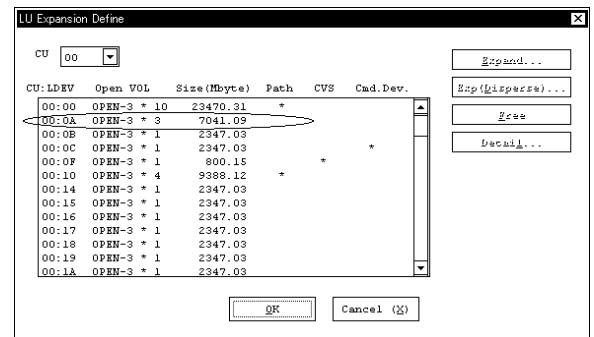

Selecting (CL) [OK] button brings you back to 'LUN Management' window, and the contents of the window automatically updated.


(9-3) Dissolution of Open VOL ('LU Expansion Define' window)

Select (CL) [Free] button on 'LU Expansion Define' window.


[Free] button comes to be available at the time that the "Dissolvable" Open VOL is selected in the list.

"Dissolvable" Open VOL denotes the Open VOL which satisfies the following conditions:

- Open VOL which has two or more LDEVs connected
- Open VOL which has no SCSI path definition
- Open VOL which has no Command Device definition

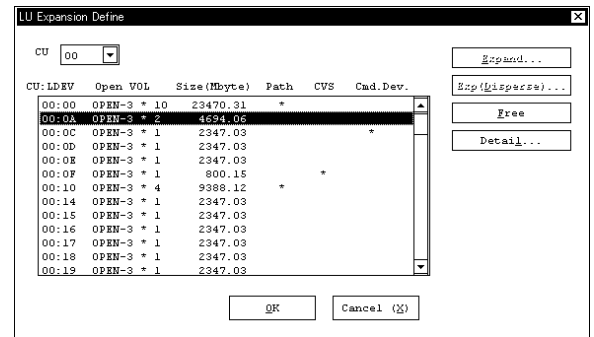


Update the list in 'LU Expansion Define' window. (The right figure shows the case that Open VOL#=00:0A which consisted of 2 LDEVs has been dissolved.)

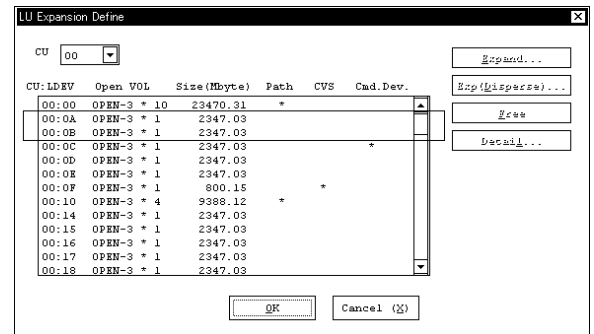

Selecting (CL) [OK] button brings you back to 'LUN Management' window, and the contents of the window automatically updated.

(9-4) Display detail information of Open VOL ('Open VOL Detail' window)


After the selection (CL) of LDEV at 'LU Expansion Define' window, select (CL) [Detail...] button.

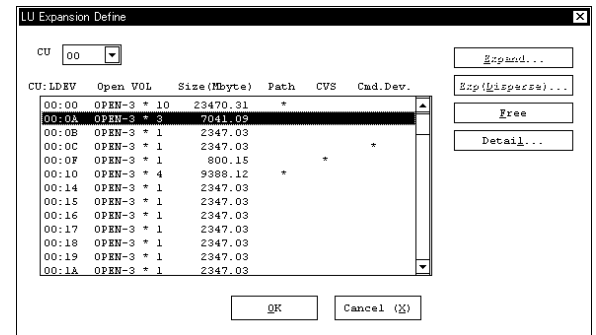

'Open VOL Detail' window is displayed.

Detail of displayed information

CU:LDEV : CU:LDEV# of LDEV compose Open VOL

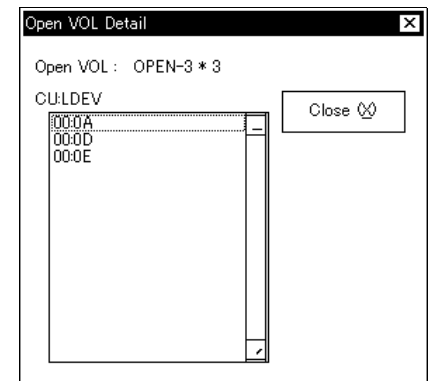

(10) Backup/Restore

(10-1) Backup

A backup can be created only when the configuration allows the system operation.

The backup cannot be created in the following cases where the configuration information is contradictory.

- When the PCB is in the high-speed mode and addresses are duplicate (This is a state that can be temporarily induced while the configuration is changed.).
- When the PCB is in the high-speed mode and the topology is different (This is a state that cannot be induced actually.).
- When the PCB is in the high-speed mode and the channel speed is different (This is a state that cannot be induced actually.).

The backup of the configuration information is executed when [Backup] is selected from the [File] menu.

(10-2) Restore

Restoration can be done only for a CHA whose all ports have no LUN defined.

Items to be restored are the following.

- LUN information
- Group information (including information on the WWN, security switch, and host mode)
- Address/topology information
- Channel speed information
- CHA PCB operation mode information

How to operate each menu of the [Restore] is explained below.

- Refer

Selecting [Restore] and [Refer] from the [File] menu in this order reflects the configuration information, which is stored as a backup, in the window. While the [Refer] is selected, any configuration change cannot be made.

- Execute

Selecting [Restore] and [Execute] from the [File] menu in this order while the [Refer] is selected applies the configuration information displayed in the window.

These menu items cannot be selected unless the [Refer] has been selected.

- Cancel

Selecting [Restore] and [Cancel] from the [File] menu in this order while the [Refer] is selected cancels the state induced by the selection of the [Refer] is selected.

These menu items cannot be selected unless the [Refer] has been selected.

Blank Sheet

Blank Sheet

REV.1	Jun.2001	Feb.2002				
-------	----------	----------	--	--	--	--

Blank Sheet

Blank Sheet

REV.1	Jun.2001	Feb.2002				
-------	----------	----------	--	--	--	--

Blank Sheet

Blank Sheet

Blank Sheet

Blank Sheet

REV.1	Jun.2001	Feb.2002				
-------	----------	----------	--	--	--	--

Blank Sheet

Blank Sheet

Blank Sheet

Blank Sheet

Blank Sheet

Blank Sheet

Blank Sheet

Blank Sheet

Blank Sheet

Blank Sheet

REV.1	Jun.2001	Feb.2002				
-------	----------	----------	--	--	--	--

Blank Sheet

Blank Sheet

Blank Sheet

Blank Sheet

Blank Sheet

Blank Sheet

Blank Sheet

Blank Sheet

REV.1	Jun.2001	Feb.2002				
-------	----------	----------	--	--	--	--

Blank Sheet

Blank Sheet

Blank Sheet

REV.1	Jun.2001	Feb.2002				
-------	----------	----------	--	--	--	--

Blank Sheet

Blank Sheet

REV.1	Jun.2001	Feb.2002				
-------	----------	----------	--	--	--	--

Blank Sheet

Blank Sheet

Blank Sheet

Blank Sheet

Blank Sheet

REV.1	Jun.2001	Feb.2002				
-------	----------	----------	--	--	--	--

Blank Sheet


Blank Sheet

Blank Sheet


5.3.4 Emulation Type Change

1. <Mode Change>
Change the mode to Modify Mode.
Select (CL) [Install].

2. <Start the 'Menu Dialog' screen>
Select (CL) [Change Configuration].

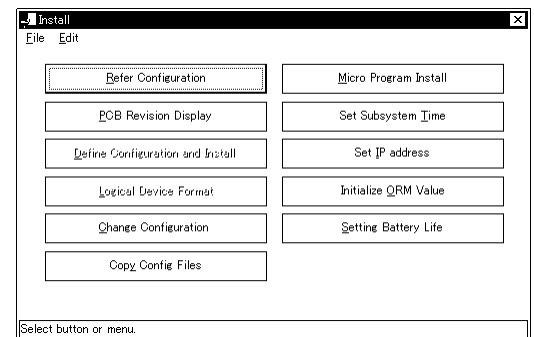

3. <Start Device Structure Setup screen>
Select (CL) [DKU Emulation] in the 'Menu Dialog' dialog box and select (CL) [OK].

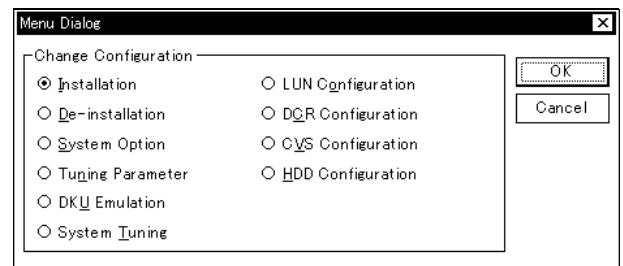


4. <Input password>

NOTICE

This is a special (exceptional) operation that can cause a serious failure such as a system down or a data loss if a wrong drive for which the emulation type is to be changed is selected, and requires an input of a password. Ask the technical support center about the appropriateness of the operation, and input the password after getting an approval of executing the operation.

Enter the password and select (CL) [OK].

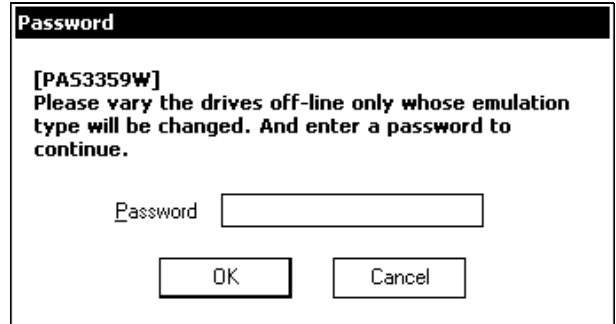

Password


[PA53359W]
Please vary the drives off-line only whose emulation type will be changed. And enter a password to continue.

Password

5. Emulation Change Procedure

5.1 Emulation Type Change for Single Block


- (1) Select (CL) a block including an LDEV of which you want to change the emulation type in the LDEV Emulation (32 ID Block) list box.

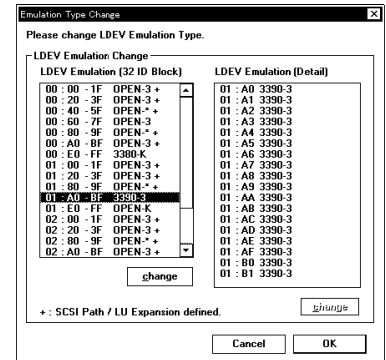

- (2) Select (CL) [Change] beneath the LDEV Emulation (32 ID Block) list box to open the dialog box for (choosing) the emulation type to be changed, and select (CL) the changed emulation type.


In the following case, the [Change] button is not available. (It's concerned with a "+" indicated LDEV.)

- a) A block including volumes with SCSI path is selected.
- b) A block including LU Expanded volumes is selected.

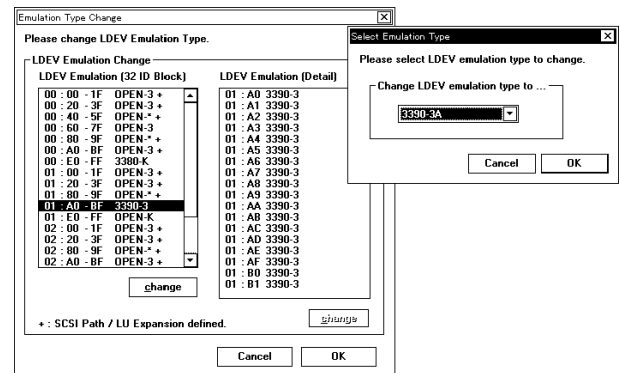


- (3) Select (CL) [OK] to set the changed emulation type.

Then, the LDEV (selected in step (1)) having the emulation type to be changed varies to the one specified in step (2). When selecting the same LDEV block after setting the change, you can check details of the changes in the LDEV Emulation (Detail) list box.

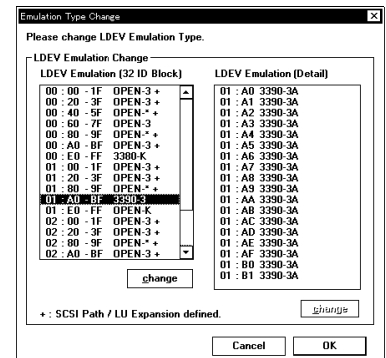

5.2 Emulation Type Change for Single LDEV

- (1) Select (CL) a block including an LDEV of which you want to change the emulation type in the LDEV Emulation (32 ID Block) list box.

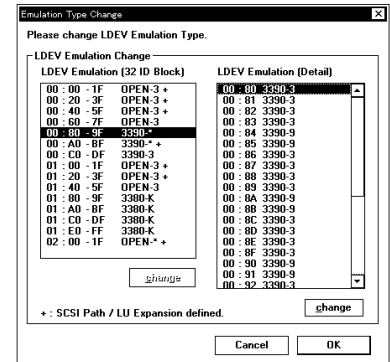


- (2) In the LDEV Emulation (Detail) list box, select (CL) an LDEV whose emulation type to be changed.


- (3) Select (CL) [Change] beneath the LDEV Emulation (Detail) list box to open the dialog box for (choosing) the emulation type to be changed, and select (CL) the changed emulation type.

In the following case, the [Change] button is not available. (It's concerned with a "+" indicated LDEV.)

- a) A volume with SCSI path is selected.
- b) An LU expanded volume is selected.

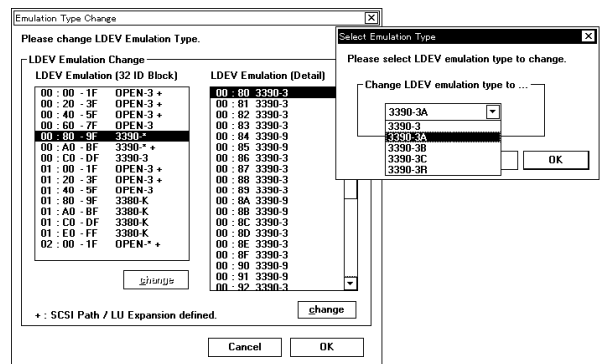


- (4) Select (CL) [OK] to set the changed emulation type. Then, the LDEV (selected in step (2)) varies to the one specified in step (3).

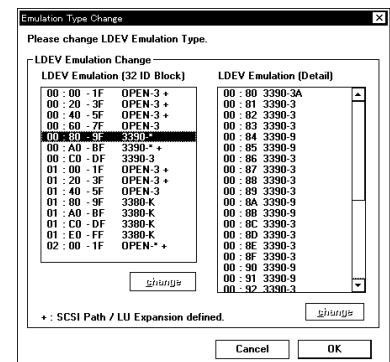

5.3 Emulation Type Change for Multiple Blocks


- (1) Select (CL) blocks including an LDEV of which you want to change the emulation type in the LDEV Emulation (32 ID Block) list box.

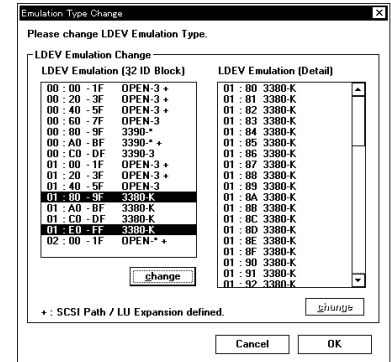


- (2) Select (CL) [Change] beneath the LDEV Emulation (32 ID Block) list box to open the dialog box for (choosing) the emulation type to be changed, and select (CL) the changed emulation type.

In the following case, the [Change] button is not available. (It's concerned with a "+" indicated LDEV.)

- a) Blocks including volumes with SCSI path are selected.
- b) Blocks including LU expanded volumes are selected.

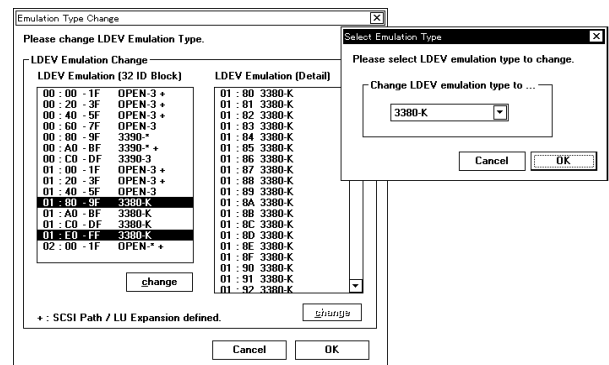


- (3) Select (CL) [OK] to set the changed emulation type. Then, the LDEV (selected in step (1)) having the emulation type to be changed varies to the one specified in step (2). When selecting the same LDEV block after setting the change, you can check details of the changes in the emulation LDEV Emulation (Detail) list box.

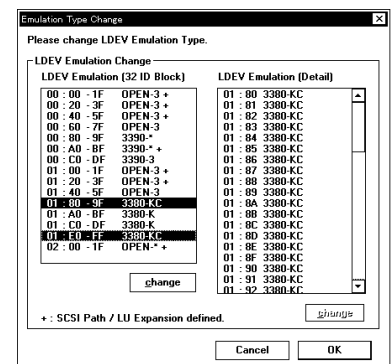


5.4 Individual Emulation Type Change for Multiple LDEVs

- (1) Select (CL) a block including LDEVs of which you want to change the emulation type in the LDEV Emulation (32 ID Block) list box.

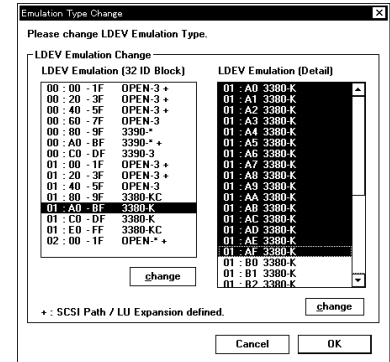

- (2) In the LDEV Emulation (Detail) list box, select (CL) LDEVs whose emulation types are to be changed.


- (3) Select (CL) [Change] beneath the LDEV Emulation (Detail) list box to open the dialog box for (choosing) the emulation type to be changed, and select (CL) the changed emulation type.

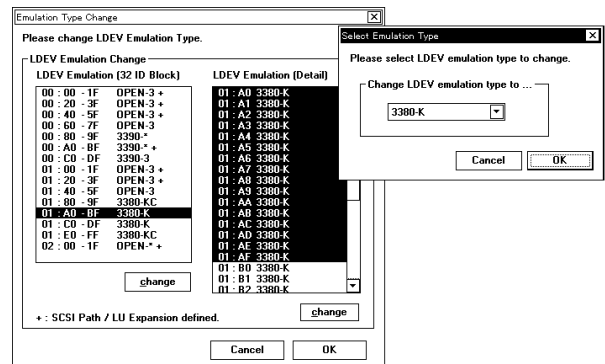

In the following case, the [Change] button is not available. (It's concerned with a "+" indicated LDEV.)

- a) Volumes with SCSI path are selected.
- b) LU expanded volumes are selected.

- (4) Select (CL) [OK] to set the changed emulation type. Then, the LDEV (selected in step (2)) varies to the one specified in step (3).

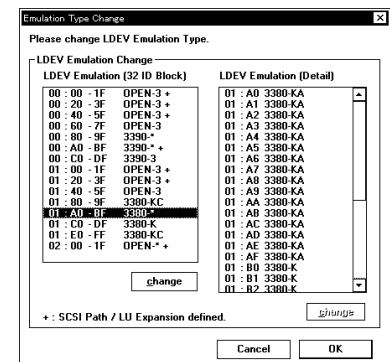


6.

Select (CL) [OK] to fix the emulation type change.
Select (CL) [Cancel] to cancel the operation.

7.

Before changing the emulation type, make sure that the drive has already been set to Vary Off-line and that the SCSI host concerned has been shut down, and then select (CL) [OK].

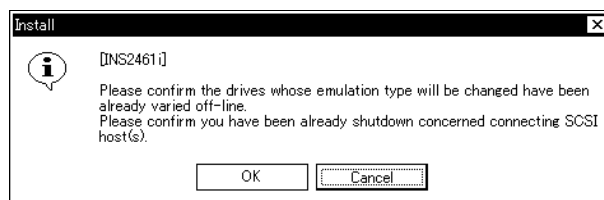


When [Cancel] is selected (CL), the processing is aborted.

8.

“Changing DKU Emulation” is displayed.

9. <Drive Vary On-line>

When the emulation type change processing terminates normally, the message “Changing emulation type is normal end. Please vary the drives on-line.” is displayed.
Vary the drive on-line and select (CL) [OK].

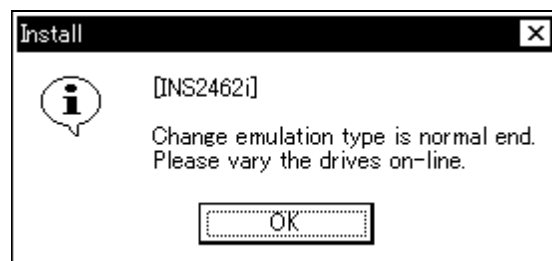

5.4 System Tuning SVP Procedure

5.4.1 System Tuning

NOTICE

Powering off/on is required owing to the performance of this operation.

Overview

This function modifies the part of established subsystem configuration data.

The data to be modified is control data closely related to a host device, so the data can not be modified on on-line.


After modification of the data, power DKC off and on.

The data to be modified is listed below.


‘DKC Configuration’ ---- DKC Serial Number/Sub System ID/DKC Emulation Type/
IP address/AC box/CU number of each channel port

1. <Start [Install]>
Select [Install] from ‘SVP’ (CL).

2. Select [Change Configuration] (CL) from ‘Install’.

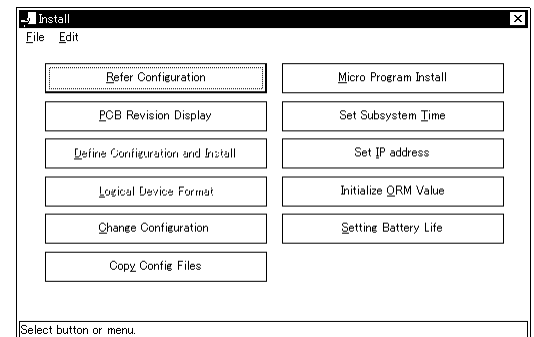

3. <Specify the beginning of installation>
Select [System Tuning] from 'Menu Dialog' (CL), and select [OK] (CL).

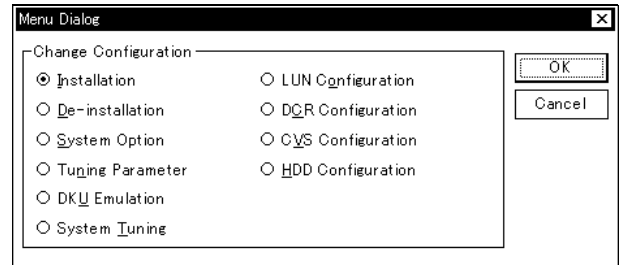


4.

NOTICE

Powering off/on is required owing to the performance of this operation.
Ask the technical support center about the appropriateness of the operation, and input a password after getting an approval of executing the operation.


- (1) Enter the password and select [OK] (CL).
Password is needed for this operation.
Please call Technical Support Center to obtain a password and authorization.

If [Cancel] is selected (CL), terminate the installation procedure.
'DKC Configuration' is automatically displayed next.

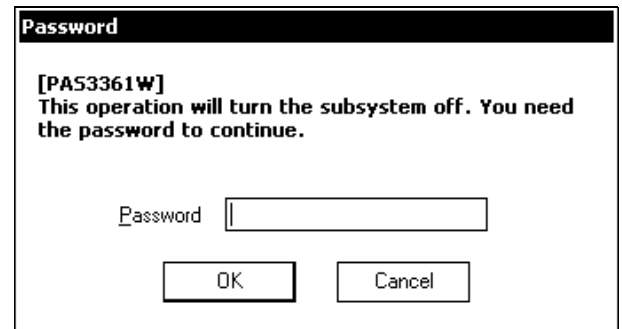

- (2) Select (CL) [OK] in response to the confirmation message
“<Important CAUTION>

When you continue this operation, finally you need DKC PS OFF, so customer can not use the volume in this subsystem continuously.”.

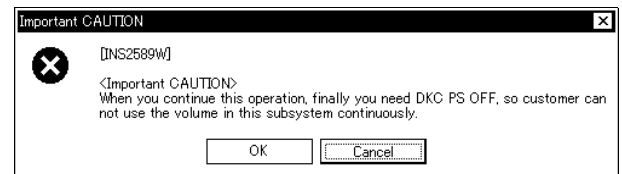

5. <Define configuration information>

Define the device configuration information from 'DKC Configuration' according to the device configuration worksheet. When you select [>>Next] (CL), 'DKC Emulation Configuration' is automatically displayed.

This procedure finishes when you select [Cancel] (CL).

If [System Options...] is selected (CL), 'System Option' is automatically displayed. Go to step 6.

If [Power Supply...] is selected (CL), 'Power Supply' is displayed. Go to step 7.

If [IP Address...] is selected (CL), 'Set IP Address' is displayed. Go to step 8.

6. <System option setup>

Define the device configuration information from 'System Option' according to the device configuration worksheet.

After setting up all items, select [OK] (CL).

The next message screen is displayed.

When you select [Cancel] (CL), 'System Option' is closed and 'DKC Configuration' appears again.

Return to step 5.

7. <Set Power Supply>

Set the power supply information in the 'Power Supply' dialog box, and select (CL) [OK].

Return to step 5.

8. <Set IP Address>

Set the IP Address and Subnet Mask in the 'Set IP Address' dialog box, and select (CL) [OK].


Return to step 5.

9. <Setting DKC Emulation type>

Set the subsystem configuration information in the 'DKC Emulation Configuration' window according to the subsystem configuration information work sheet.

After the setting is completed, select (CL) [>>>Next]. Go to step 9-1.

When [Before<<] is selected (CL), the routine returns to step 5.

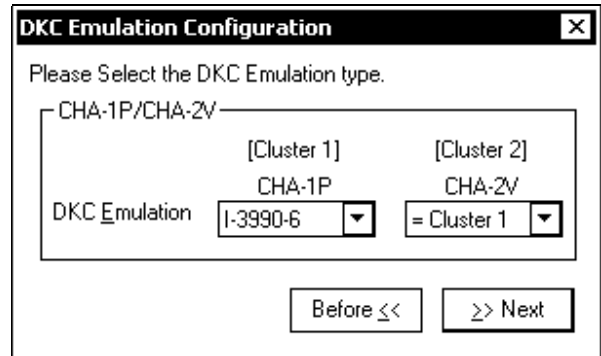

DKC Emulation Configuration

Please Select the DKC Emulation type.

	[Cluster 1]	[Cluster 2]
CHA-1P	CHA-1P	CHA-2V
DKC Emulation	I-3990-6	= Cluster 1


Before << >> Next

9-1. <Setting CU number>

CU number is displayed.

After the setting is completed, select (CL) [>>>Next]. Go to step 9-2.

When [Before<<] is selected (CL), the routine returns to step 9.

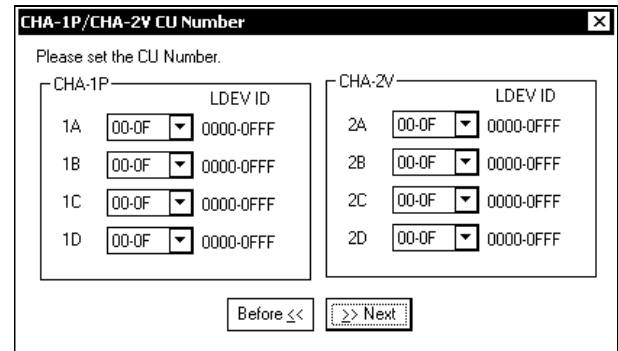

CHA-1P/CHA-2V CU Number

Please set the CU Number.


CHA-1P		CHA-2V	
	LDEV ID		LDEV ID
1A	00-0F 0000-0FFF	2A	00-0F 0000-0FFF
1B	00-0F 0000-0FFF	2B	00-0F 0000-0FFF
1C	00-0F 0000-0FFF	2C	00-0F 0000-0FFF
1D	00-0F 0000-0FFF	2D	00-0F 0000-0FFF

Before << >> Next

9-2. <SVP message>

Select (CL) [OK] in response to the confirmation message "Data will be lost from the logical device if you connect the interface cable to an incorrect port. Be sure to connect the cable to the correct port."

Returns to step 9.

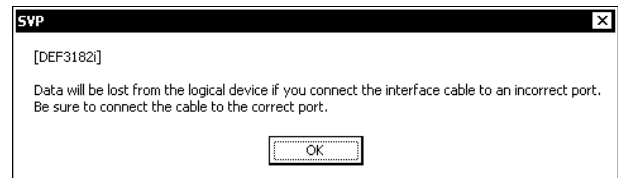

SVP


[DEF3182]

Data will be lost from the logical device if you connect the interface cable to an incorrect port. Be sure to connect the cable to the correct port.

OK


10. <Define Subsystem ID Boundary>

Set the Subsystem ID Boundary in the “Set SSID Boundary” dialog box.
Select (CL) [>>Next].

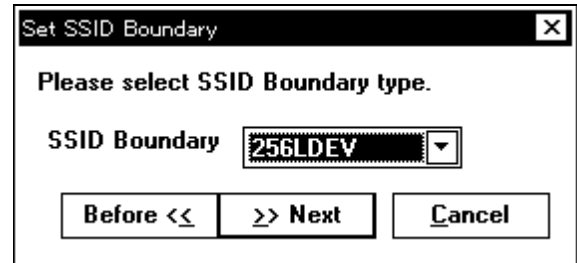

10-1. <Define Subsystem ID>


To define Subsystem ID, select (CL) [SSID]. Go to step 11.
After setting, select (CL) [>>Next].
This procedure is terminated by selecting (CL) [Cancel].

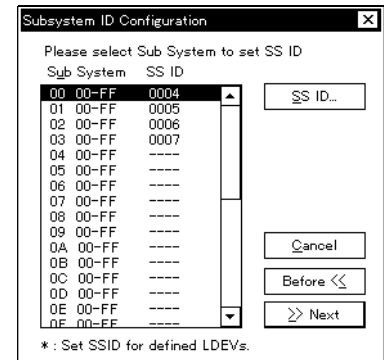

11.

Define Subsystem ID and select (CL) [OK].
Return to step 10.

“Checking subsystem configuration...” is displayed.

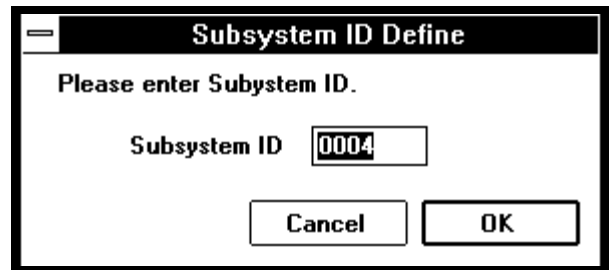


12. <Include configuration information>

- (1) Select (CL) [Yes] in response to the confirmation message “Are you sure you want to install the defined configuration?”.


“Wait...” is displayed, then “Turn off the subsystem” is displayed.

Selecting (CL) [No] suppresses the configuration inclusion processing and terminates the installation procedure.

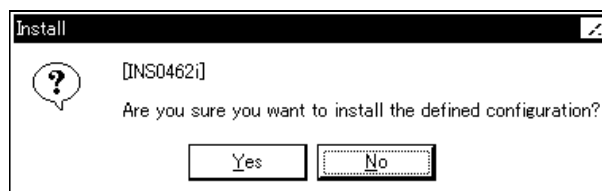

- (2) Select (CL) [OK] in response to the confirmation message “<Important CAUTION>

When you continue this operation, finally you need DKC PS OFF. Are you sure you want to continue this operation?”.

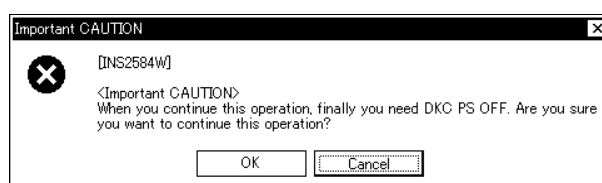

- (3) Select (CL) [OK] in response to the confirmation message “<Important CAUTION>


When you select [OK] button, you can't cancel this operation. Are you sure you want to continue this operation?

If you terminate this operation by some forcible method, the subsystem be in UNRECOVERABLE SERIOUSLY DAMAGE.”.



- (4) Select (CL) [OK] in response to the confirmation message “<Important CAUTION>

You must not RE-BOOT SVP(PC).”.

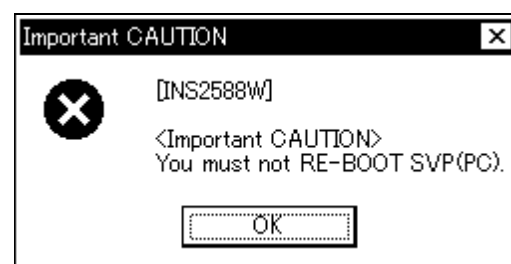

13.

Make sure that “Turn off DKC, and wait.” is displayed and perform the power-off procedure from the DKC maintenance panel.
After a while, “Wait...” will be displayed.


Turn off DKC, and wait.

14.

This step allows the contents of the SVP HD to be loaded into SM and FM.
When this procedure is completed, the message “Please insert config FD in FDD.” is displayed.


15.

Insert the configuration FD into FDD, and select [OK].

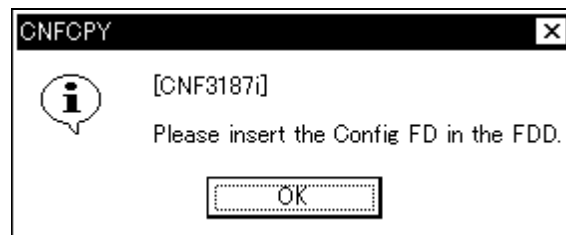

16.


When this procedure is completed, the message “Please remove the Config FD.” is displayed.
Remove the FD, and then select [OK].

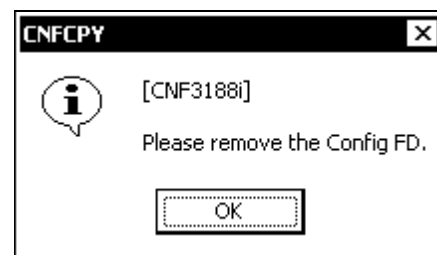

17.


After making sure that the DKC power is turned off, select [OK] (CL) in response to “System Tuning has finished.”

Note : SVP power will not turn off even when DKC is powered off.

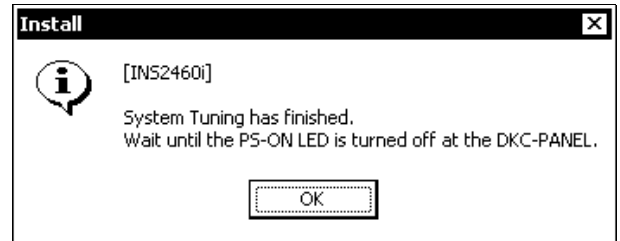

18.

“This will reboot SVP.” is displayed. Select [OK] (CL).

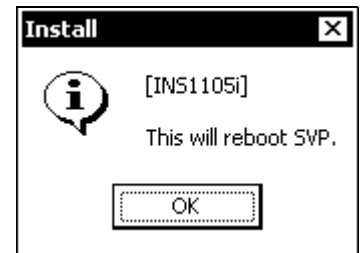

7 TPF installation procedures

7.1 Preparations

- (a) Get additional SM parts by the number you need according to [INST01-70](#).
- (b) Get the “Configuration” floppy disk which supports the MPLF/RC (or TPF) function from T.S.C.

7.2 Operations

- (a) Exchanging Micro-programs of the latest version.
 - Exchange all Micro-programs which are different from currently installed version.
(Refer to MICRO-FC SECTION.)
- (b) Executing Config Version Up.
 - Set the “Configuration” floppy disk.
 - Execute Config Version Up.
(Refer to [MICRO-FC08-10](#) (Config Exchange Procedure ((3-1) ‘Config Version UP’)).)
- (c) Switching “TPF-mode” on.
 - Execute “Define Configuration and install”.
(Refer to [INST05-80](#) (Configuration information Definition).)
- (d) Attaching additional SM parts.
 - Turn off the DKC power switch.
 - With reference to [INST01-70](#), install the required number of additional SM parts.
 - Remove Jumper connectors (BTJP) from BAT CTR. And wait for 5 minutes.
(volatile CACHE, SM)
 - Reconnect Jumper connectors.
- (e) Starting TPF Micro-program.
 - Turn on the DKC power switch.
- (f) Confirming the TPF MODE.
 - Select (CL) [DUMP] in the “SVP” window.
 - Confirm that “TPF” is shown in the “DUMP” dialog box.

8 Storage Capacity and Cache Capacity Upgrade Table

8.1 Standard Configuration for RAID5

- (1) 36GB 15K rpm HDD, RAID5 [INST08-20](#)
- (2) 73GB 10K rpm HDD, RAID5 [INST08-30](#)

8.2 Standard Configuration for RAID1

- (1) 36GB 15K rpm HDD, RAID1 [INST08-80](#)
- (2) 73GB 10K rpm HDD, RAID1 [INST08-90](#)

8.1 Standard Configuration for RAID5

(1) 36GB 15K rpm HDD, RAID5

RAID group	Cache (GB)	Storage Capacity (GB)										Number of necessary options			
		Open System						Mainframe System				DKC-F460I-2048	DKC-F460I-S512	DKC-F465I-FSW	DKU-F455I-36K4
		OPEN-3 (2.461GB)		OPEN-9 (7.384GB)		OPEN-E (14.568GB)		3390-3/3R (2.838GB)		3390-9 (8.510GB)					
		VOL	Cap	VOL	Cap	VOL	Cap	VOL	Cap	VOL	Cap				
1	2	43	106	14	103	7	102	35	99	11	94	1	⌈*1⌋		1
2	4	86	212	28	207	14	204	70	199	22	187	2			2
3	4	129	317	42	310	21	306	105	298	33	281	2			3
4	4	172	423	56	414	28	408	140	397	44	374	2			4
5	4	215	529	70	517	35	510	175	497	55	468	2			5
6	4	258	635	84	620	42	612	210	596	66	562	2			6
7	6	301	741	98	724	49	714	245	695	77	655	3			7
8	6	344	847	112	827	56	816	280	795	88	749	3			8
9	6	387	952	126	930	63	918	315	894	99	842	3			9
10	6	430	1,058	140	1,034	70	1,020	350	993	110	936	3			10
11	6	473	1,164	154	1,137	77	1,122	385	1,093	121	1,030	3			11
12	6	516	1,270	168	1,241	84	1,224	420	1,192	132	1,123	3			12
13	6	559	1,376	182	1,344	91	1,326	455	1,291	143	1,217	3			13
14	8	602	1,482	196	1,447	98	1,428	490	1,391	154	1,311	4			14
15	8	645	1,587	210	1,551	105	1,530	525	1,490	165	1,404	4			15
16	8	688	1,693	224	1,654	112	1,632	560	1,589	176	1,498	4	⌈1⌋	1	16
17	8	731	1,799	238	1,757	119	1,734	595	1,689	187	1,591	4		1	17
18	8	774	1,905	252	1,861	126	1,836	630	1,788	198	1,685	4		1	18
19	8	817	2,011	266	1,964	133	1,938	665	1,887	209	1,779	4		1	19
20	8	860	2,116	280	2,068	140	2,040	700	1,987	220	1,872	4		1	20
21	8	903	2,222	294	2,171	147	2,141	735	2,086	231	1,966	4		1	21
22	8	946	2,328	308	2,274	154	2,243	770	2,185	242	2,059	4		1	22
23	8	989	2,434	322	2,378	161	2,345	805	2,285	253	2,153	4		1	23
24	8	1,032	2,540	336	2,481	168	2,447	840	2,384	264	2,247	4		1	24
25	8	1,075	2,646	350	2,584	175	2,549	875	2,483	275	2,340	4		1	25
26	8	1,118	2,751	364	2,688	182	2,651	910	2,583	286	2,434	4		1	26
27	10	1,161	2,857	378	2,791	189	2,753	945	2,682	297	2,527	5		1	27
28	10	1,204	2,963	392	2,895	196	2,855	980	2,781	308	2,621	5		1	28
29	10	1,247	3,069	406	2,998	203	2,957	1,015	2,881	319	2,715	5		1	29
30	10	1,290	3,175	420	3,101	210	3,059	1,050	2,980	330	2,808	5		1	30
31	10	1,333	3,281	434	3,205	217	3,161	1,085	3,079	341	2,902	5	⌊1⌋	1	31

*1: The number of the Shard Memory option (DKC-F460I-S512) necessary is refer to table 1.1.2-3 in [INST01-60](#) and table 1.1.2-4 in [INST01-70](#). Please note that location of shared memory varies according to the purpose such as additional cache installation or additional LDEV installation.

Note: In addition to the Options listed in above table as necessary parts, the Power Cable Kit option, the AC Box Kit option, DKA option and the Channel options are required.

(2) 73GB 10K rpm HDD, RAID5

RAID group	Cache (GB)	Storage Capacity (GB)												Number of necessary options			
		Open System								Mainframe System				DKC-F460I -2048	DKC-F460I -S512	DKC-F465I -FSW	DKU-F455I -72J4
		OPEN-3 (2.461GB)		OPEN-9 (7.384GB)		OPEN-E (14.568GB)		OPEN-L (36.450GB)		3390-3/3R (2.838GB)		3390-9 (8.510GB)					
		VOL	Cap	VOL	Cap	VOL	Cap	VOL	Cap	VOL	Cap	VOL	Cap				
1	4	88	217	29	214	15	219	6	219	73	207	24	204	2	*1		1
2	4	176	433	58	428	30	437	12	437	146	414	48	408	2			2
3	4	264	650	87	642	45	656	18	656	219	622	72	613	2			3
4	6	352	866	116	857	60	874	24	875	292	829	96	817	3			4
5	6	440	1,083	145	1,071	75	1,093	30	1,094	365	1,036	120	1,021	3			5
6	6	528	1,299	174	1,285	90	1,311	36	1,312	438	1,243	144	1,225	3			6
7	8	616	1,516	203	1,499	105	1,530	42	1,531	511	1,450	168	1,430	4			7
8	8	704	1,733	232	1,713	120	1,748	48	1,750	584	1,657	192	1,634	4			8
9	8	792	1,949	261	1,927	135	1,967	54	1,968	657	1,865	216	1,838	4			9
10	8	880	2,166	290	2,141	150	2,185	60	2,187	730	2,072	240	2,042	4			10
11	8	968	2,382	319	2,355	165	2,404	66	2,406	803	2,279	264	2,247	4			11
12	8	1,056	2,599	348	2,570	180	2,622	72	2,624	876	2,486	288	2,451	4			12
13	8	1,144	2,815	377	2,784	195	2,841	78	2,843	949	2,693	312	2,655	4			13
14	10	1,232	3,032	406	2,998	210	3,059	84	3,062	1,022	2,900	336	2,859	5			14
15	10	1,320	3,249	435	3,212	225	3,278	90	3,281	1,095	3,108	360	3,064	5			15
16	10	1,408	3,465	464	3,426	240	3,496	96	3,499	1,168	3,315	384	3,268	5		1	16
17	10	1,496	3,682	493	3,640	255	3,715	102	3,718	1,241	3,522	408	3,472	5		1	17
18	10	1,584	3,898	522	3,854	270	3,933	108	3,937	1,314	3,729	432	3,676	5		1	18
19	10	1,672	4,115	551	4,069	285	4,152	114	4,155	1,387	3,936	456	3,881	5		1	19
20	10	1,760	4,331	580	4,283	300	4,370	120	4,374	1,460	4,143	480	4,085	5		1	20
21	10	1,848	4,548	609	4,497	315	4,589	126	4,593	1,533	4,351	504	4,289	5		1	21
22	10	1,936	4,764	638	4,711	330	4,807	132	4,811	1,606	4,558	528	4,493	5		1	22
23	10	2,024	4,981	667	4,925	345	5,026	138	5,030	1,679	4,765	552	4,698	5		1	23
24	10	2,112	5,198	696	5,139	360	5,244	144	5,249	1,752	4,972	576	4,902	5		1	24
25	10	2,200	5,414	725	5,353	375	5,463	150	5,468	1,825	5,179	600	5,106	5		1	25
26	10	2,288	5,631	754	5,568	390	5,682	156	5,686	1,898	5,387	624	5,310	5		1	26
27	10	2,376	5,847	783	5,782	405	5,900	162	5,905	1,971	5,594	648	5,514	5		1	27
28	12	2,464	6,064	812	5,996	420	6,119	168	6,124	2,044	5,801	672	5,719	6		1	28
29	12	2,552	6,280	841	6,210	435	6,337	174	6,342	2,117	6,008	696	5,923	6		1	29
30	12	2,640	6,497	870	6,424	450	6,556	180	6,561	2,190	6,215	720	6,127	6		1	30
31	12	2,728	6,714	899	6,638	465	6,774	186	6,780	2,263	6,422	744	6,331	6		1	31

*1: The number of the Shard Memory option (DKC-F460I-S512) necessary is refer to table 1.1.2-3 in [INST01-60](#) and table 1.1.2-4 in [INST01-70](#). Please note that location of shared memory varies according to the purpose such as additional cache installation or additional LDEV installation.

Note: In addition to the Options listed in above table as necessary parts, the Power Cable Kit option, the AC Box Kit option, DKA option and the Channel options are required.

Blank Sheet

REV.1	Jun.2001	Feb.2002				
-------	----------	----------	--	--	--	--

Blank Sheet

Blank Sheet

Blank Sheet

REV.0	Jun.2001					
-------	----------	--	--	--	--	--

8.2 Standard Configuration for RAID1

(1) 36GB 15K rpm HDD, RAID1

RAID group	Cache (GB)	Storage Capacity (GB)										Number of necessary options			
		Open System						Mainframe System				DKC-F460I-2048	DKC-F460I-S512	DKC-F465I-FSW	DKU-F455I-36K4
		OPEN-3 (2.461GB)		OPEN-9 (7.384GB)		OPEN-E (14.568GB)		3390-3/3R (2.838GB)		3390-9 (8.510GB)					
		VOL	Cap	VOL	Cap	VOL	Cap	VOL	Cap	VOL	Cap				
1	2	28	69	9	66	4	58	23	65	7	60	1	⌈*1⌋		1
2	2	56	138	18	133	8	117	46	131	14	119	1			2
3	4	84	207	27	199	12	175	69	196	21	179	2			3
4	4	112	276	36	266	16	233	92	261	28	238	2			4
5	4	140	345	45	332	20	291	115	326	35	298	2			5
6	4	168	413	54	399	24	350	138	392	42	357	2			6
7	4	196	482	63	465	28	408	161	457	49	417	2			7
8	4	224	551	72	532	32	466	184	522	56	477	2			8
9	4	252	620	81	598	36	524	207	587	63	536	2			9
10	4	280	689	90	665	40	583	230	653	70	596	2			10
11	6	308	758	99	731	44	641	253	718	77	655	3			11
12	6	336	827	108	797	48	699	276	783	84	715	3			12
13	6	364	896	117	864	52	758	299	849	91	774	3			13
14	6	392	965	126	930	56	816	322	914	98	834	3			14
15	6	420	1,034	135	997	60	874	345	979	105	894	3			15
16	6	448	1,103	144	1,063	64	932	368	1,044	112	953	3		1	16
17	6	476	1,171	153	1,130	68	991	391	1,110	119	1,013	3		1	17
18	6	504	1,240	162	1,196	72	1,049	414	1,175	126	1,072	3		1	18
19	6	532	1,309	171	1,263	76	1,107	437	1,240	133	1,132	3		1	19
20	6	560	1,378	180	1,329	80	1,165	460	1,305	140	1,191	3		1	20
21	8	588	1,447	189	1,396	84	1,224	483	1,371	147	1,251	4		1	21
22	8	616	1,516	198	1,462	88	1,282	506	1,436	154	1,311	4		1	22
23	8	644	1,585	207	1,528	92	1,340	529	1,501	161	1,370	4		1	23
24	8	672	1,654	216	1,595	96	1,399	552	1,567	168	1,430	4		1	24
25	8	700	1,723	225	1,661	100	1,457	575	1,632	175	1,489	4		1	25
26	8	728	1,792	234	1,728	104	1,515	598	1,697	182	1,549	4		1	26
27	8	756	1,861	243	1,794	108	1,573	621	1,762	189	1,608	4		1	27
28	8	784	1,929	252	1,861	112	1,632	644	1,828	196	1,668	4		1	28
29	8	812	1,998	261	1,927	116	1,690	667	1,893	203	1,728	4		1	29
30	8	840	2,067	270	1,994	120	1,748	690	1,958	210	1,787	4		1	30
31	8	868	2,136	279	2,060	124	1,806	713	2,023	217	1,847	4	⌋	1	31

*1: The number of the Shard Memory option (DKC-F460I-S512) necessary is refer to table 1.1.2-3 in [INST01-60](#) and table 1.1.2-4 in [INST01-70](#). Please note that location of shared memory varies according to the purpose such as additional cache installation or additional LDEV installation.

Note: In addition to the Options listed in above table as necessary parts, the Power Cable Kit option, the AC Box Kit option, DKA option and the Channel options are required.

(2) 73GB 10K rpm HDD, RAID1

RAID group	Cache (GB)	Storage Capacity (GB)												Number of necessary options			
		Open System								Mainframe System				DKC-F460I -2048	DKC-F460I -S512	DKC-F465I -FSW	DKU-F455I -72J4
		OPEN-3 (2.461GB)		OPEN-9 (7.384GB)		OPEN-E (14.568GB)		OPEN-L (36.450GB)		3390-3/3R (2.838GB)		3390-9 (8.510GB)					
		VOL	Cap	VOL	Cap	VOL	Cap	VOL	Cap	VOL	Cap	VOL	Cap				
1	2	59	145	19	140	10	146	4	146	48	136	16	136	1	*1		1
2	4	118	290	38	281	20	291	8	292	96	272	32	272	2			2
3	4	177	436	57	421	30	437	12	437	144	409	48	408	2			3
4	4	236	581	76	561	40	583	16	583	192	545	64	545	2			4
5	6	295	726	95	701	50	728	20	729	240	681	80	681	3			5
6	6	354	871	114	842	60	874	24	875	288	817	96	817	3			6
7	6	413	1,016	133	982	70	1,020	28	1,021	336	954	112	953	3			7
8	6	472	1,162	152	1,122	80	1,165	32	1,166	384	1,090	128	1,089	3			8
9	6	531	1,307	171	1,263	90	1,311	36	1,312	432	1,226	144	1,225	3			9
10	8	590	1,452	190	1,403	100	1,457	40	1,458	480	1,362	160	1,362	4			10
11	8	649	1,597	209	1,543	110	1,602	44	1,604	528	1,498	176	1,498	4			11
12	8	708	1,742	228	1,684	120	1,748	48	1,750	576	1,635	192	1,634	4			12
13	8	767	1,888	247	1,824	130	1,894	52	1,895	624	1,771	208	1,770	4			13
14	8	826	2,033	266	1,964	140	2,040	56	2,041	672	1,907	224	1,906	4			14
15	8	885	2,178	285	2,104	150	2,185	60	2,187	720	2,043	240	2,042	4			15
16	8	944	2,323	304	2,245	160	2,331	64	2,333	768	2,180	256	2,179	4		1	16
17	8	1,003	2,468	323	2,385	170	2,477	68	2,479	816	2,316	272	2,315	4		1	17
18	8	1,062	2,614	342	2,525	180	2,622	72	2,624	864	2,452	288	2,451	4		1	18
19	10	1,121	2,759	361	2,666	190	2,768	76	2,770	912	2,588	304	2,587	5		1	19
20	10	1,180	2,904	380	2,806	200	2,914	80	2,916	960	2,724	320	2,723	5		1	20
21	10	1,239	3,049	399	2,946	210	3,059	84	3,062	1,008	2,861	336	2,859	5		1	21
22	10	1,298	3,194	418	3,087	220	3,205	88	3,208	1,056	2,997	352	2,996	5		1	22
23	10	1,357	3,340	437	3,227	230	3,351	92	3,353	1,104	3,133	368	3,132	5		1	23
24	10	1,416	3,485	456	3,367	240	3,496	96	3,499	1,152	3,269	384	3,268	5		1	24
25	10	1,475	3,630	475	3,507	250	3,642	100	3,645	1,200	3,406	400	3,404	5		1	25
26	10	1,534	3,775	494	3,648	260	3,788	104	3,791	1,248	3,542	416	3,540	5		1	26
27	10	1,593	3,920	513	3,788	270	3,933	108	3,937	1,296	3,678	432	3,676	5		1	27
28	10	1,652	4,066	532	3,928	280	4,079	112	4,082	1,344	3,814	448	3,812	5		1	28
29	10	1,711	4,211	551	4,069	290	4,225	116	4,228	1,392	3,950	464	3,949	5		1	29
30	10	1,770	4,356	570	4,209	300	4,370	120	4,374	1,440	4,087	480	4,085	5		1	30
31	10	1,829	4,501	589	4,349	310	4,516	124	4,520	1,488	4,223	496	4,221	5		1	31

*1: The number of the Shard Memory option (DKC-F460I-S512) necessary is refer to table 1.1.2-3 in [INST01-60](#) and table 1.1.2-4 in [INST01-70](#). Please note that location of shared memory varies according to the purpose such as additional cache installation or additional LDEV installation.

Note: In addition to the Options listed in above table as necessary parts, the Power Cable Kit option, the AC Box Kit option, DKA option and the Channel options are required.

Blank Sheet

Blank Sheet

REV.1	Jun.2001	Feb.2002				
-------	----------	----------	--	--	--	--