

OPENPLATFORM SECTION

Contents

OPEN01-10	1. GENERAL
OPEN01-10	1.1 Product Outline and Features
OPEN01-10	1.1.1 Fibre attachment option
OPEN01-40	1.2 Basic Specifications
OPEN01-50	1.3 Terminology
OPEN01-70	1.4 Notice about maintenance operations
OPEN02-10	2. Interface Specification
OPEN02-10	2.1 Fibre Physical Interface Specification
OPEN02-50	2.2 Specifications of Fibre Channel High Performance Mode
OPEN02-50	2.2.1 Standard Performance mode (SP mode)
OPEN02-50	2.2.2 High Performance mode
OPEN02-60	2.2.3 Restrictions of High Performance mode
OPEN02-60	2.2.4 Restrictions of the change of Standard Performance mode and High Performance mode
OPEN02-70	2.2.5 Indication format of port
OPEN03-10	3. CONFIGURATION
OPEN03-10	3.1 System Configurations
OPEN03-10	3.1.1 Multiplatform Configuration
OPEN03-20	3.1.2 All Fibre Configuration
OPEN03-30	3.2 Channel Configuration
OPEN03-30	3.2.1 Fibre Channel Configuration
OPEN03-40	3.3 Fibre Addressing
OPEN03-40	3.3.1 Number of Hosts
OPEN03-50	3.3.2 Number of Host Groups
OPEN03-60	3.3.3 LUN (Logical Unit Number)
OPEN03-60	3.3.4 PORT INFORMATION
OPEN03-70	3.4 Logical Unit
OPEN03-70	3.4.1 Logical Unit Specification
OPEN03-90	3.4.2 Logical Unit Mapping of Fibre
OPEN03-100	3.4.3 LU Size Expansion (LUSE) Function
OPEN03-130	3.4.4 LUN Security

OPEN03-140	3.5 Volume Specification
OPEN03-140	3.5.1 Volume Specification
OPEN03-240	3.5.2 Intermix Specification
OPEN03-240	3.5.3 HMDE volume intermix within ECC group
OPEN03-240	3.5.3.1 HMDE volume intermix within ECC group
OPEN03-250	3.5.3.2 Intermix with 3390-3R
OPEN03-260	3.6 Volume Configuration
OPEN03-260	3.6.1 Volume Configuration
OPEN03-270	3.6.2 Intermix Volume Configuration
OPEN03-290	3.6.3 HMDE Volume Configuration
OPEN03-300	3.6.4 HMBR Volume Configuration
OPEN03-310	3.7 Open Volume Setting
OPEN03-310	3.7.1 Setting of open volume space
OPEN03-310	3.7.2 LUN setting
OPEN03-320	3.7.3 OPEN-V Setting
OPEN03-330	3.8 Host mode setting
OPEN04-10	4. Control Function
OPEN04-10	4.1 Cache Usage
OPEN04-20	4.2 SCSI Command Multi-processing
OPEN04-20	4.2.1 Command Tag Queuing
OPEN04-20	4.2.2 Concurrent data transfer
OPEN05-10	5. SCSI Commands
OPEN05-10	5.1 Fibre
OPEN06-10	6. HMDE (Hitachi Multiplatform Data Exchange)
OPEN06-10	6.1 Overview
OPEN06-20	6.2 Installation
OPEN06-40	6.3 Notes on Use
OPEN07-10	7. HMBR (Hitachi Multiplatform Backup/Restore)
OPEN07-10	7.1 Overview
OPEN07-20	7.2 System Configuration
OPEN07-30	7.3 Basic Specification
OPEN07-40	7.4 Backup Volume Specification
OPEN07-50	7.5 Precautions
OPEN08-10	8. HA Software Linkage Configuration in a Cluster Server Environment
OPEN08-10	8.1 Example of System Configurations
OPEN08-30	8.2 Configuration Using Host Path Switching Function

OPEN09-10	9. HORC (Hitachi Open Remote Copy)
OPEN09-10	9.1 Overview
OPEN09-20	9.2 Basic Specifications
OPEN09-80	9.3 Basic UR Specifications
OPEN09-120	9.4 HAM (High Availability Manager) Overview
OPEN09-130	9.5 Basic HAM Specifications
OPEN10-10	10. LUN installation
OPEN10-10	10.1 Overview
OPEN10-10	10.2 Specifications
OPEN10-20	10.3 Operations
OPEN11-10	11. LUN de-installation
OPEN11-10	11.1 Overview
OPEN11-10	11.2 Specifications
OPEN11-20	11.3 Operations
OPEN12-10	12. Prioritized Port Control (PPC)
OPEN12-10	12.1 Overview
OPEN12-20	12.2 Overview of Monitoring
OPEN12-30	12.3 Procedure (Flow) of Prioritized Port Control
OPEN13-10	13. Auto Alternate SCSI Path Mode
OPEN13-10	13.1 Overview
OPEN13-10	13.2 Micro-program Exchange process used in Alternate SCSI Path Mode
OPEN13-20	13.3 Settings required to operate in Auto Alternate SCSI Path Mode

1. GENERAL

1.1 Product Outline and Features

The open platform optional feature can assign a partial or full of disk volume area of the DKC disk subsystem for the Mainframe and Open system hosts by installing Fibre channel adapter (CHF) packages to the disk controller (hereinafter called DKC). This function enables a use of high reliable and high performance disk subsystem realized by the DKC for an open platform or Fibre system environment. This also provides the customers with a flexible and optimized system construction capability for their system expansion and migration.

1.1.1 Fibre attachment option

Some of the major features of this Fibre attachment option are listed below.

(1) HMRS (Hitachi Multiplatform Resource Sharing) function and Fibre interface connectivity

In addition to the conventional Channel interface (asynchronous (ESCON) channels), standard interface in the open systems, can be mounted as one controller.

At the same time Fibre channel interface can be mounted as one controller. This enables multiplatform system users to share the high reliable and high performance resource realized by the DKC disk subsystem.

The SCSI interface is complied with ANSI SCSI-3, a standard interface for various peripheral devices for open systems. Thus, the DKC can be easily connected to various open-market Fibre host systems (e.g. Workstation servers and PC servers).

DKC610 can be connected to open system via Fibre interface by installing Fibre Adapter (DKC-F610I-8FS/16FS/8US).

Fibre connectivity is provided as channel option of DKC610.

Fibre Adapter can be installed in any CHA location of DKC610 and can be co-exist with any other channel adapters.

(2) Fast and concurrent data transmission

Data can be read and written at a maximum speed of 8 Gbps with use of Fibre interface.

All of the Fibre ports can transfer data concurrently too.

(3) All Fibre configuration

All Fibre configuration is also allowed either with one CHF pair or two, three or full of 6 CHF pairs configuration.

These will provide more flexible use of the subsystem for open system environment.

(4) HMDE (Hitachi Multiplatform Data Exchange) support

By installing HMDE mto optional feature, data in the mainframe volumes can be read from open systems and written into the open system volumes. Another way, by installing HMDE otm optional feature, data can be transferred from open system to mainframe.

This enables faster data transmission of data base files between mainframe and open systems than currently used means such as network transfer.

The HMDE mto/otm feature is available through Fibre adapters.

(5) HMBR (Hitachi Multiplatform Backup/Restore) support

By using HMBR optional feature, data in the open system can be managed by the backup systems and utilities provided in the mainframe systems. This enables a use of rich and high reliable and high performance backup systems of mainframe world to the open system environment.

The HMBR feature is available through Fibre adapters.

(6) Customer assets guarantee (Upgrading paths)

The Fibre attachment options allow on-site upgrading of already installed channel-type DKC systems owned by customers.

(7) High performance

The DKC has two independent areas of nonvolatile cache memory and this mechanism also applies to the Fibre attachment option. Thus, compared with a conventional disk array controller used for open systems and not having a cache, this disk subsystem has the following outstanding characteristics:

- ① Cache data management by LRU control
- ② Adoption of DFW (DASD Fast Write)
- ③ Write data duplexing
- ④ Nonvolatile cache

(8) High availability

The DKC is fault-tolerant against even single point of failure in its components and can successively read and write data without stopping the system. This concept is also taken over to the Fibre attachment option, which ensures fault-tolerance against even single point of failure in its components, except the CHF. Fault-tolerance against CHF and Fibre cable failures depends on the multi-path configuration support of the host system too.

(9) High data reliability

The Fibre attachment option automatically creates a guarantee code of a unique eight byte data, adds it to host data, and writes it onto the disk as data. The data guarantee code is checked automatically on the internal data bus of the DKC to prevent data errors due to array-specific data distribution or integration control. Thus, the reliability of the data improves.

(10) TrueCopy Support

TrueCopy is a function to realize the duplication of open system data by connecting the two DKC615 subsystems or inside parts of a single DKC615 using the Fibre.

This function enables the construction of a backup system against disasters by means of the duplication of data including those of the host system or the two volumes containing identical data to be used for different purposes.

(11) HAM (High Availability Manager)

HAM is a function that provides a storage system that can instantly continue the user operation in an unplanned termination of the DKC due to external causes such as power failure in a place where the storage device is placed. HAM is formed in combination with the alternate path software (HDL) that supports this function, and prevents the storage device termination due to any cause beyond control that affects the user operation, and increases the availability of the entire information system including the operation application.

1.2 Basic Specifications

The basic specifications of the Fibre attachment are shown in Table 1.2-1.

Table 1.2-1 Basic specifications

Item		Specification
Host Channel	Max. # of Channels	80 (*1)
	Max. # of concurrent paths	96 (*1)
Data transfer		1, 2, 4 Gbps
RAID level		RAID5/RAID1
RAID configuration		RAID5
		RAID1
HDD		2R0HS
		1R0HS
		0R7HS
		600KS
		450KS
		400JS
		300JS/300KS
		146KS
		72KS
FLASH DRIVE		400S1
		200S1
		146S1
		72S1
Cache capacity	minimum	4 G bytes
	maximum	128 G bytes (*2)
	additional unit	4 G bytes

*1: All PCB are the 16FS.

*2: 1 G bytes DRAM.

1.3 Terminology

- (1) Arbitrated Loop
A configuration that allows multiple ports to be connected serially.
- (2) CHA
CHannel Adapter. A hardware package to connect with a channel interface.
- (3) CHF
CHannel adapter for Fibre. A hardware package to connect with Fibre interface.
- (4) Command descriptor block (CDB)
A command block in SCSI interface used to send requests from the initiator to a target.
- (5) DKA
DisK Adapter. A hardware package which controls disk drives within a DKC.
- (6) DKC
DisK Controller. A disk controller unit consisting of CHA, CHF, DKA, Cache and other components except DKU.
- (7) DKU
DisK Unit. Disk drives units.
- (8) Fabric
The entity which interconnects various N-Ports attached to it and is capable of routing frames.
- (9) FAL
File Access Library: A program package and provided as a program product for HMDE.
- (10) FCU
File Conversion Utility: A program package and provided together with FAL for HMDE.
- (11) HMBR
Hitachi Multiplatform Backup/Restore.
- (12) HMDE
Hitachi Multiplatform Data Exchange.
- (13) HMRS
Hitachi Multiplatform Resource Sharing.
- (14) HA configuration
High Availability configuration

(15) Initiator

The OPEN device (usually, a host computer) that requests another OPEN device to operate.

(16) Logical unit (LU)

The logical unit of division of the subsystem data area accessible from SCSI interface.

(17) Logical unit number (LUN)

Identifier for a logical unit. LUN0-2048 can be assigned.

(18) Logical volume or logical device (LDEV)

The disk pack image, formed on an array disk, that is compatible with that of a 3390-3 in terms of cylinder and track quantities and the track capacity.

(19) Point-to-Point

A configuration that allows two ports to be connected serially.

(20) Open device

Collectively refers to the host computer, peripheral control units, and intelligent peripherals that are connected to Fibre channel.

(21) Target

An Open device (usually, the DKC) that operates at the request of the initiator.

(22) VENDOR UNIQUE or VU

A manufacturer- or device-unique definable bit, byte, field, or code value.

(23) Initiator Port

A port-type used for MCU port of TrueCopy function.

(24) RCU Target Port

A port-type used for RCU port of TrueCopy function.
This port allows LOGIN of host computers and MCUs.

(25) Target port

A port-type which is different from “Initiator Port” and “RCU Target Port”.
This port is a normal target port which is used without configuration of TrueCopy.
This “Target port” allows LOGIN of host computers. It does not allow LOGIN of MCUs.

(26) External Port

Port attribute set when using it as initiator of Universal Volume Manager function.

1.4 Notice about maintenance operations

There are some notices about Fibre maintenance operations.

- (1) Before LUN path configuration is changed, Fibre I/O on the related Fibre port must be stopped.
- (2) Before Fibre channel adapter or LDEV is de-installed, the related LUN path must be de-installed.
- (3) Before Fibre channel adapter is replaced, the related Fibre I/O must be stopped.
- (4) When Fibre-Topology information is changed, pull out a Fibre cable between the port and SWITCH and put it back again. Before a change of Fibre-Topology information, pull out Fibre cable and put it back after completing the change.

2. Interface Specification

2.1 Fibre Physical Interface Specification

The physical interface specification supported for Fibre is shown in Table 2.1-1 and Table 2.1-2.

Table 2.1-1 Fibre Physical specification

No.	Item		Specification	Remark
1	Host interface	Physical interface	Fibre Channel	FC-PH,FC-AL
		Logical interface	SCSI-3	FCP,FC-PLDA
			Fibre	FC-AL
2	Data Transfer Rate	Optic Fibre cable	1, 2, 4 Gbps 2, 4, 8 Gbps	8FS/16FS 8US
3	Cable Length	Optic single mode Fibre	10km	Longwave laser (*)
		Optic multi mode Fibre	300m	Shortwave laser
4	Connector Type		LC: 8FS/16FS/8US	—
5	Topology		NL-Port (FC-AL) F-Port FL-Port	—
6	Service class		3	—
7	Protocol		FCP	—
8	Transfer code		8B/10B translate	—
9	# of hosts		255/Path	—
10	# of host Group		255/Path	—
11	# of maximum LU		2048/Path	—
12	PORT/PCB	16FS	8 Port	—
		8FS/8US	4 Port	—

SP Mode : Standard Performance Mode

HP Mode : High Performance Mode

Table 2.1-2 Port name of CHA side


Cluster	Port Name	Cluster	Port Name	Cluster	Port Name	Cluster	Port Name
CLS1 CHA Location	CL1-A	CLS1 CHA Location	CL1-E	CLS2 CHA Location	CL2-A	CLS2 CHA Location	CL2-E
	CL3-A		CL3-E		CL4-A		CL4-E
	CL5-A (*1)		CL5-E (*1)		CL6-A (*1)		CL6-E (*1)
	CL7-A (*1)		CL7-E (*1)		CL8-A (*1)		CL8-E (*1)
	CL1-B		CL1-F		CL2-B		CL2-F
	CL3-B		CL3-F		CL4-B		CL4-F
	CL5-B (*1)		CL5-F (*1)		CL6-B (*1)		CL6-F (*1)
	CL7-B (*1)		CL7-F (*1)		CL8-B (*1)		CL8-F (*1)

*1: The port location doesn't exist on 8FS/8US.

Table 2.1-3 Port name of DKA side

Cluster	Port Name	Cluster	Port Name
CLS1 DKA Location	CL9-E	CLS2 DKA Location	CLA-E
	CLB-E		CLC-E
	CLD-E (*1)		CLE-E (*1)
	CLF-E (*1)		CLG-E (*1)
	CL9-F		CLA-F
	CLB-F		CLC-F
	CLD-F (*1)		CLE-F (*1)
	CLF-F (*1)		CLG-F (*1)

*1: The port location doesn't exist on 8FS/8US.

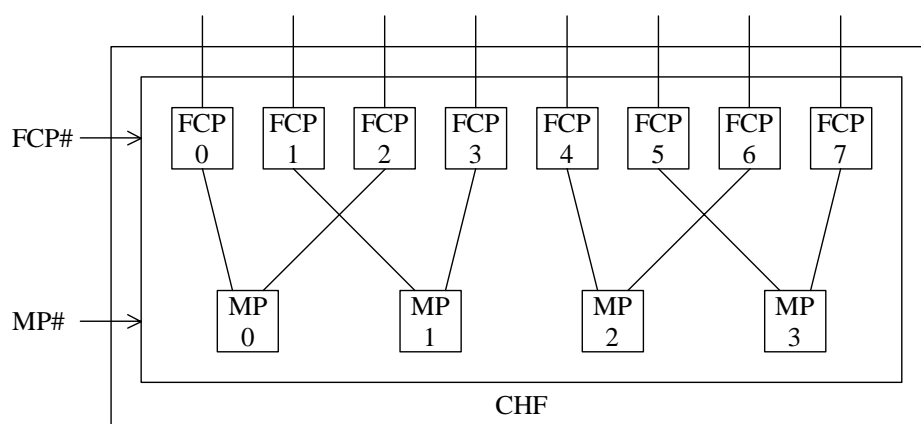

FCP#: x'0' to x'F' indicates the FCP number.

MP#: x'0' to x'7' indicates the MP number.

Fig. 2.1-1 16FS CHF package configuration

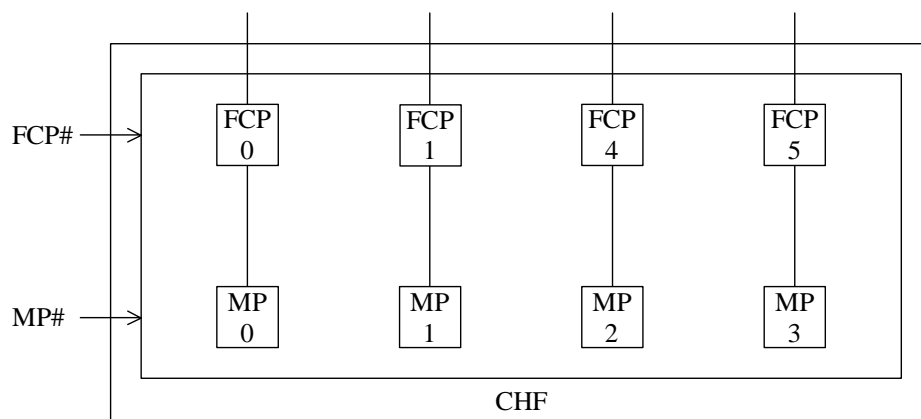


Fig. 2.1-2 8FS/8US CHF package configuration

2.2 Specifications of Fibre Channel High Performance Mode

2.2.1 Standard Performance mode (SP mode)

In the 8-port CHF, one CHPs required for two ports.

In the 4-port CHF, one CHPs required for one ports.

2.2.2 High Performance mode

To assign two CHPs to one port, a HUB is provided on the PCB and 2 Fibre channel port are connected to one port.

*: This mode is not supported in 8US

2.2.3 Restrictions of High Performance mode

The following restrictions are placed when using the High Performance mode:

- It looks as if two targets are connected to one port.
- The number of ports which can be used on the PCB drops.
- To make the most performance, accesses must be divided equally for the two targets.
- In the following cases, switching from the SP mode to the HP mode cannot be done.
 - When the settings of the Loop ID (FC-AL) for the 1st* and 2nd* are duplicated.
 - When the settings of the topology for the 1st* and 2nd* are different.
 - When the settings of the topology for the 1st* and 2nd* are Point To Point.
 - When the settings of the port-type for the 1st* and 2nd* are different.
 - When the settings of the channel speed are different.

(Eg.) At first you have to set both port's types same when 1st* is "Initiator Port", 2nd* port is "RCU Target Port".

And then you can change the SP/HP mode.

- When the TrueCopy path exists, the mode cannot be changed.
- When an I/O operation is being performed, the mode cannot be changed.

*: For the "1st" and "2nd" refer to Table 2.2.5-1 on page [OPEN02-70](#).

2.2.4 Restrictions of the change of Standard Performance mode and High Performance mode

- The change of Performance Mode is prohibited when the system is online.
You must shut down the hosts before the change of Performance Mode,
or, reboot the hosts after the change of Performance Mode.
- The host recognizes devices already used as new ones because the two mode have different device number for the host to recognize.
You can't continue to use the device after the change of the Performance Mode.
- If a port is configured as "Initiator Port", you have to remove a logical path of TrueCopy at first.
If a port is configured as "RCU Target Port", you have to remove R-Vols at first.
After either operation above, you can change SP/HP mode.

2.2.5 Indication format of port

Table 2.2.5-1 Indication Format of Port (CLS1 CHA Location)

Port Name	8FS Fibre (Standard) 8US Fibre	16FS Fibre (Standard)	High Performance Mode (This mode is not supported in 8US)
CL1-A	1A	1A	1A
CL3-A	3A	3A	3A (1A-2nd)
CL5-A	—	5A	5A
CL7-A	—	7A	7A (5A-2nd)
CL1-B	1B	1B	1B
CL3-B	3B	3B	3B (1B-2nd)
CL5-B	—	5B	5B
CL7-B	—	7B	7B (5B-2nd)
CL1-E	1E	1E	1E
CL3-E	3E	3E	3E (1E-2nd)
CL5-E	—	5E	5E
CL7-E	—	7E	7E (5E-2nd)
CL1-F	1F	1F	1F
CL3-F	3F	3F	3F (1F-2nd)
CL5-F	—	5F	5F
CL7-F	—	7F	7F (5F-2nd)

Table 2.2.5-2 Indication Format of Port (CLS1 DKA Location)

Port Name	8FS Fibre (Standard) 8US Fibre	16FS Fibre (Standard)	High Performance Mode (This mode is not supported in 8US)
CL9-E	9E	9E	9E
CLB-E	BE	BE	BE (9E-2nd)
CLD-E	—	DE	DE
CLF-E	—	FE	FE (DE-2nd)
CL9-F	9F	9F	9F
CLB-F	BF	BF	BF (9F-2nd)
CLD-F	—	DF	DF
CLF-F	—	FF	FF (DF-2nd)

Table 2.2.5-3 Indication Format of Port (CLS2 CHA Location)

Port Name	8FS Fibre (Standard) 8US Fibre	16FS Fibre (Standard)	High Performance Mode (This mode is not supported in 8US)
CL2-A	2A	2A	2A
CL4-A	4A	4A	4A (2A-2nd)
CL6-A	—	6A	6A
CL8-A	—	8A	8A (6A-2nd)
CL2-B	2B	2B	2B
CL4-B	4B	4B	4B (2B-2nd)
CL6-B	—	6B	6B
CL8-B	—	8B	8B (6B-2nd)
CL2-E	2E	2E	2E
CL4-E	4E	4E	4E (2E-2nd)
CL6-E	—	6E	6E
CL8-E	—	8E	8E (6E-2nd)
CL2-F	2F	2F	2F
CL4-F	4F	4F	4F (2F-2nd)
CL6-F	—	6F	6F
CL8-F	—	8F	8F (6F-2nd)

Table 2.2.5-4 Indication Format of Port (CLS2 DKA Location)

Port Name	8FS Fibre (Standard) 8US Fibre	16FS Fibre (Standard)	High Performance Mode (This mode is not supported in 8US)
CLA-E	AE	AE	AE
CLC-E	CE	CE	CE (AE-2nd)
CLE-E	—	EE	EE
CLG-E	—	GE	GE (EE-2nd)
CLA-F	AF	AF	AF
CLC-F	CF	CF	CF (AF-2nd)
CLE-F	—	EF	EF
CLG-F	—	GF	GF (EF-2nd)

3. CONFIGURATION

3.1 System Configurations

3.1.1 Multiplatform Configuration

The DKC can be connected to a Fibre cable as one of the devices and can exchange data with host via the Fibre cable. The conventional Channel open host systems can also be connected simultaneously with the Fibre cable. The possible system configurations with the Fibre attachment are shown below.

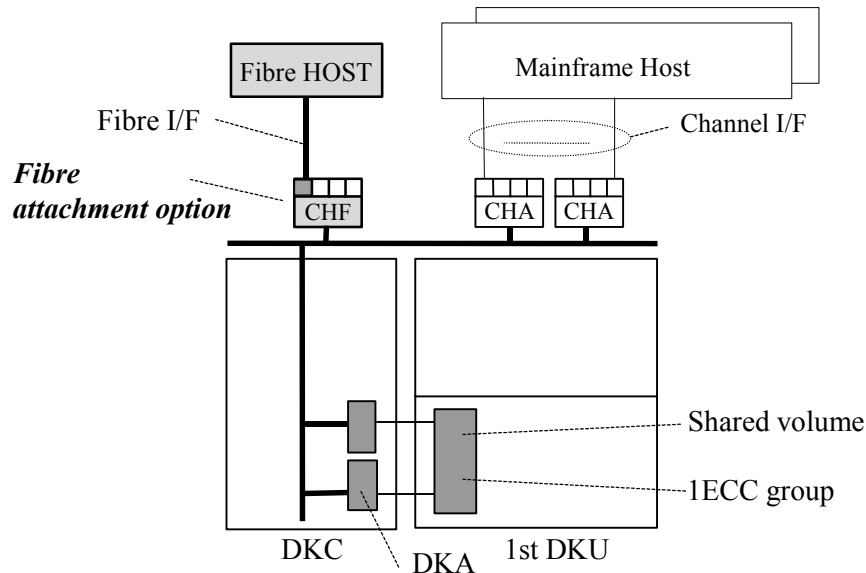


Fig. 3.1.1-1 multiplatform configuration example

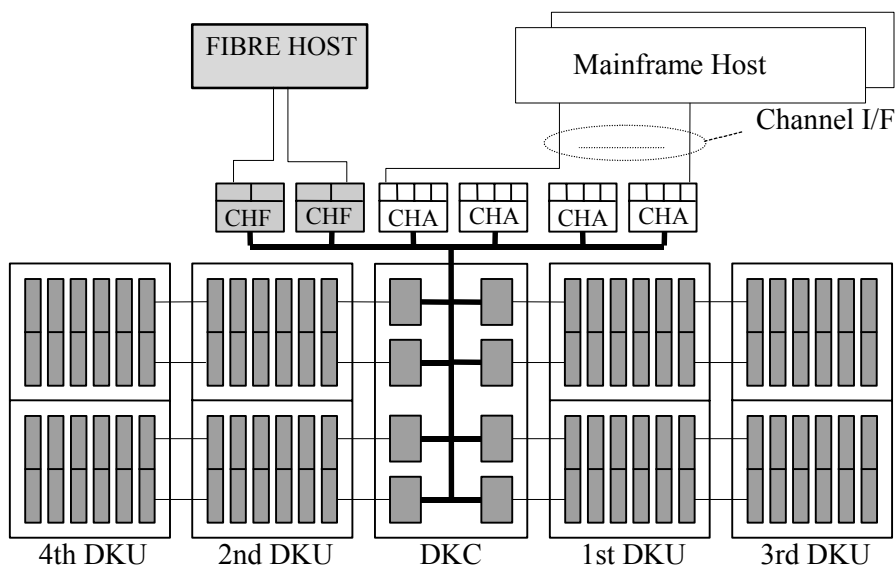


Fig. 3.1.1-2 multiplatform configuration example

3.1.2 All Fibre Configuration

The DKC can also have the All Fibre interface configuration installed only by CHF adapters. The possible system configurations for the All Fibre configuration are shown below.

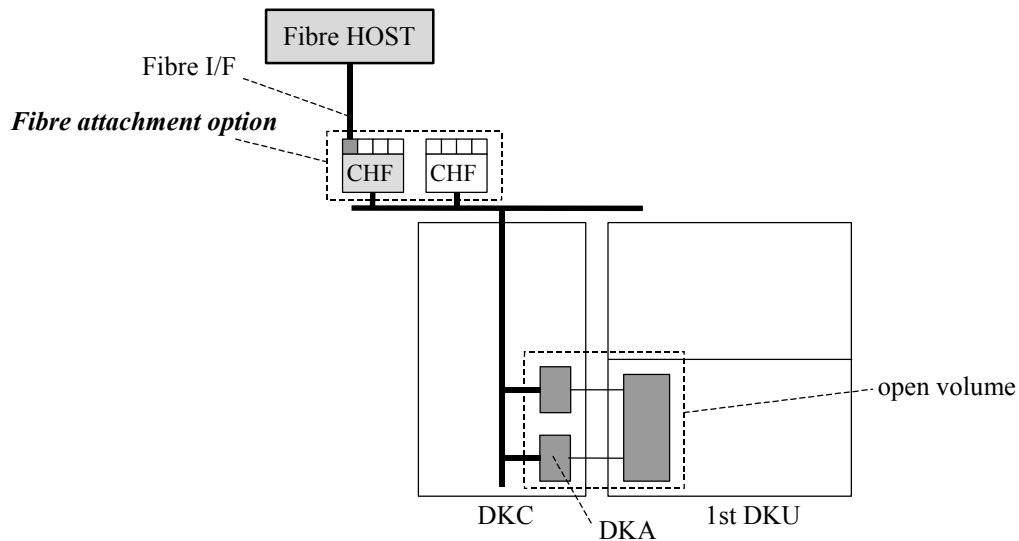


Fig. 3.1.2-1 Minimum system configuration for All Fibre

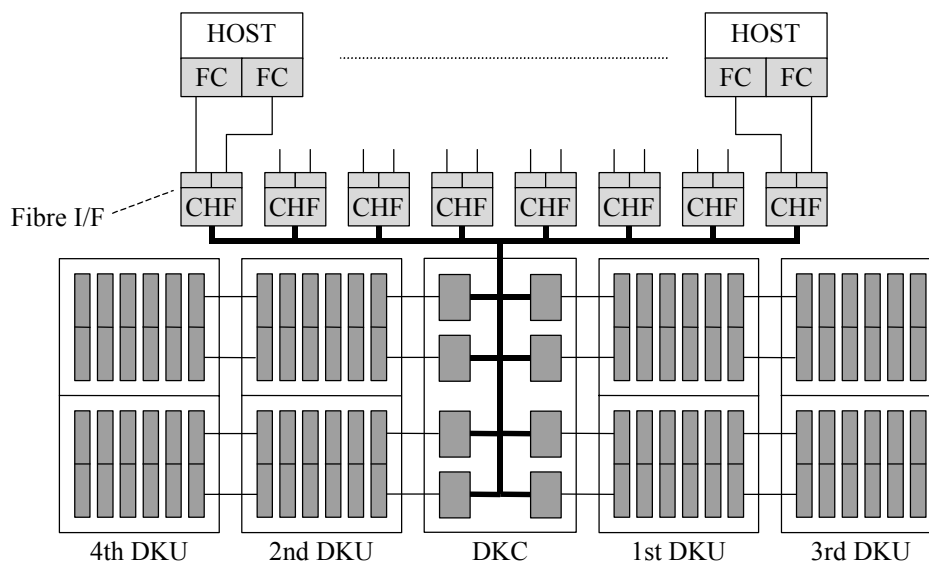


Fig. 3.1.2-2 Maximum system configuration example for All Fibre

3.2 Channel Configuration

3.2.1 Fibre Channel Configuration

The Fibre channel adapter (CHF) PCBs must be used in sets of two. Up to 31 PCBs of the CHA and/or CHF can be installed in the DKC in total.

In the All Fibre configuration, it is possible to assign the CHF PCB to every one of the 31 PCBs. Each CHF PCB has 31 Fibre channel ports.

Examples of channel configurations are shown in Table 3.2.1-1.

Table 3.2.1-1 Example of available channel configuration

No.	Basic	Addition 1	Addition 2	Addition 30	Addition 31	Remark
1	CHA	CHF	—	—	—	Minimum multiplatform
2	CHF	—	—	—	—	Minimum All Fibre
3	CHF	CHF	CHF	CHF	CHF	Maximum All Fibre

CHF: Fibre adapter, CHA: ESCON, —: empty

Table 3.2.1-2 Channel Configuration

No.	Premise	Additional 3	Additional 2	Additional 1	Basic	Remark
1	3	CHF	—	—	—	CHA+DKA SLOT
2	3	CHF	CHF	CHF	CHF	CHA+DKA SLOT

3.3 Fibre Addressing

Each Fibre device can set a unique Port-ID number within the range from 1 to EF.

An addressing from the Fibre host to the Fibre volume in the DKC can be uniquely defined with a nexus between them. The nexus through the Initiator (host) ID, the Target (CHF port) ID, and LUN (Logical Unit Number) defines the addressing and access path. The maximum number of LUNs that can be assigned to one port is 2048.

The addressing configuration is shown in the Fig. 3.3.3-1.

3.3.1 Number of Hosts


For Fibre channel, the number of connectable hosts is limited to 256 per Fibre port.

For MCU port of TrueCopy function, this limitation is as follows:

The number of MCU connections is limited to 16 per RCU Target port.

3.3.2 Number of Host Groups

You can define a host group admitted access for the some LU by LUN Security as a Host Group. For example, the two hosts in the hg-lnx group can only access the three LUs (00:00, 00:01, and 00:02). The two hosts in the hg-hpux group can only access the two LUs (02:01 and 02:02). The two hosts in the hg-solar group can only access the two LUs (01:05 and 01:06).

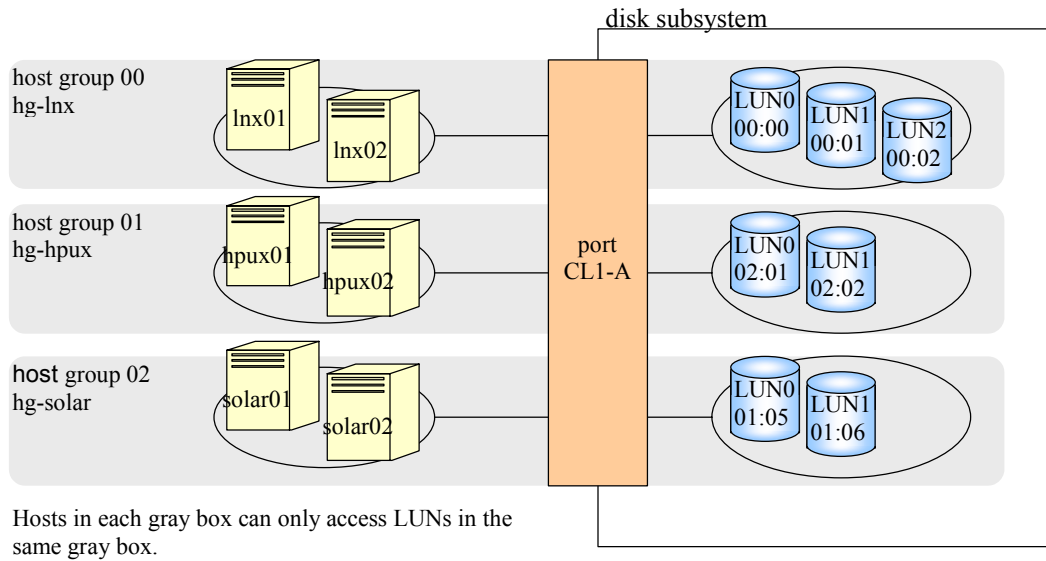

3.3.3 LUN (Logical Unit Number)

LUNs can be assigned from 0 to 2048 to each Fibre Port.

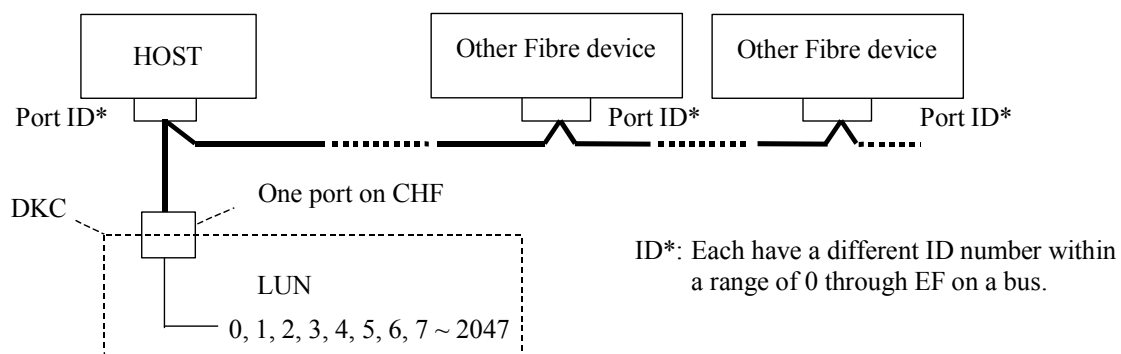


Fig. 3.3.3-1 Fibre addressing configuration from Host

3.3.4 PORT INFORMATION

A PORT address and the Topology can be set as PORT INFORMATION. The value of PORT address is EF and can be changed by user. Topology information is selected from “Fabric”, “FC-AL” or “Point to point”.

3.4 Logical Unit

3.4.1 Logical Unit Specification

The specifications of Logical Units supported and accessible from Open system hosts are defined in the Table 3.4.1-1.

Table 3.4.1-1 LU specification (1/4)

No	Item		Specification			
1	Volume name		OPEN-3	OPEN-8	OPEN-9	OPEN-E
2	Volume attribute		- OPEN volume - HMBR volume	- OPEN volume - HMBR volume	- OPEN volume - HMBR volume	- SCSI volume
3	Access right	Fibre host	Read/Write	Read/Write	Read/Write	Read/Write
		M/F host	Read/Write (need HMBR option)	Read/Write (need HMBR option)	Read/Write (need HMBR option)	—
4	Logical Unit (LU) size	G byte (10^9)	2.4 GB	7.3 GB	7.3 GB	14.5 GB
		G byte ($1,024^3$)	2.29 GB	6.84 GB	6.87 GB	13.56 GB
5	Block size		512 Bytes	512 Bytes	512 Bytes	512 Bytes
6	# of blocks		4,806,720	14,351,040	14,423,040	28,452,960
7	LDEV emulation name		OPEN-3	OPEN-8	OPEN-9	OPEN-E
8	LDEV size : LU size		1 : 1	1 : 1	1 : 1	1 : 1

Table 3.4.1-1 LU specification (2/4)

No	Item		Specification				
1	Volume name		OPEN-L	OPEN-V (Note1)	3390-3A	3390-3B	3390-3C
2	Volume attribute		- SCSI volume	- SCSI volume	- M/F volume - HMDE volume	- M/F volume - HMDE volume	- M/F volume - HMDE volume
3	Access right	Fibre host	Read/Write	Read/Write	Read/Write (need HMDE otm/mto option)	Read only (need HMDE mto option)	Read/Write (need HMDE otm/mto option)
		M/F host	—	—	Read/Write	Read/Write	Read only
4	Logical Unit (LU) size	G byte (10^9)	36.4 GB	(Note1)	—	—	—
		G byte ($1,024^3$)	33.94 GB	(Note1)	—	—	—
5	Block size		512 Bytes	512 Bytes	512 Bytes	512 Bytes	512 Bytes
6	# of blocks		71,192,160	(Note 1)	5,825,520	5,822,040	5,825,520
7	LDEV emulation name		OPEN-L	OPEN-V	3390-3A	3390-3B	3390-3C
8	LDEV size : LU size		1 : 1	1 : 1	1 : 1	1 : 1	1 : 1

Note1: OPEN-V is CVS basis. The default capacity of OPEN-V is nearly equals to the size of the parity group. So it depends on RAID level and DKU (HDD).

The capacity is limited by 2.812TB (1024^4), 3.019TB (10^{12}) or 6039,797,248 blocks logically.

Note2: “0” is added to the emulation type of the V-VOLs (ex. OPEN-0V).

When you create a Copy-on-Write Snapshot pair, specify the volume whose emulation type is displayed with “0” like OPEN-0V as the S-VOL.

Table 3.4.1-1 LU specification (3/4)

No	Item		Specification			
1	Volume name		OPEN-3×n (n=2 to 36)	OPEN-8×n (n=2 to 36)	OPEN-9×n (n=2 to 36)	OPEN-E×n (n=2 to 36)
2	Volume attribute		- LU size expansion	- LU size expansion	- LU size expansion	- LU size expansion
3	Access right	Fibre host	Read/Write	Read/Write	Read/Write	Read/Write
		M/F host	Read/Write (need HMBR option)	Read/Write (need HMBR option)	Read/Write (need HMBR option)	—
4	Logical Unit (LU) size	G byte (10^9)	OPEN-3×n	OPEN-8×n	OPEN-9×n	OPEN-E×n
		G byte ($1,024^3$)				
5	Block size		512 Bytes	512 Bytes	512 Bytes	512 Bytes
6	# of blocks		4,806,720×n	14,351,040×n	14,423,040×n	28,452,960×n
7	LDEV emulation name		—	—	—	—
8	LDEV size : LU size		1 : n	1 : n	1 : n	1 : n

Table 3.4.1-1 LU specification (4/4)

No	Item		Specification	
1	Volume name		OPEN-L×n (n=2 to 36)	OPEN-V×n (Note2) (n=2 to 36)
2	Volume attribute		- LU size expansion	- LU size expansion
3	Access right	Fibre host	Read/Write	Read/Write
		M/F host	—	—
4	Logical Unit (LU) size	G byte (10^9)	OPEN-L×n	OPEN-V×n
		G byte ($1,024^3$)		
5	Block size		512 Bytes	512 Bytes
6	# of blocks		71,192,160×n	(Note2)
7	LDEV emulation name		—	—
8	LDEV size : LU size		1 : n	1 : n

Note2: The maximum size of OPEN-V×n is up to 60TB (1024^4) or 128,849,011,200 blocks.

3.4.2 Logical Unit Mapping of Fibre

Each volume name, such as OPEN-3, OPEN-8, OPEN-9, 3390-3A, 3390-3B, 3390-3C, is also used as an emulation type name to be specified for each ECC group. When the emulation type is defined on an ECC group, Logical volumes (LDEVs) are automatically allocated to the ECC group from the specified LDEV#. After creating LDEVs, each LUN of Fibre port will be mapped on any location of LDEV within DKC. This setting is performed by SVP operation or Remote Console operation (option).

This flexible LU and LDEV mapping scheme enables the same logical volume to be set to multiple paths so that the host system can configure a shared volume configuration such as a High Availability (HA) configuration. In the shared volume environment, however, some lock mechanism need to be provided by the host systems.

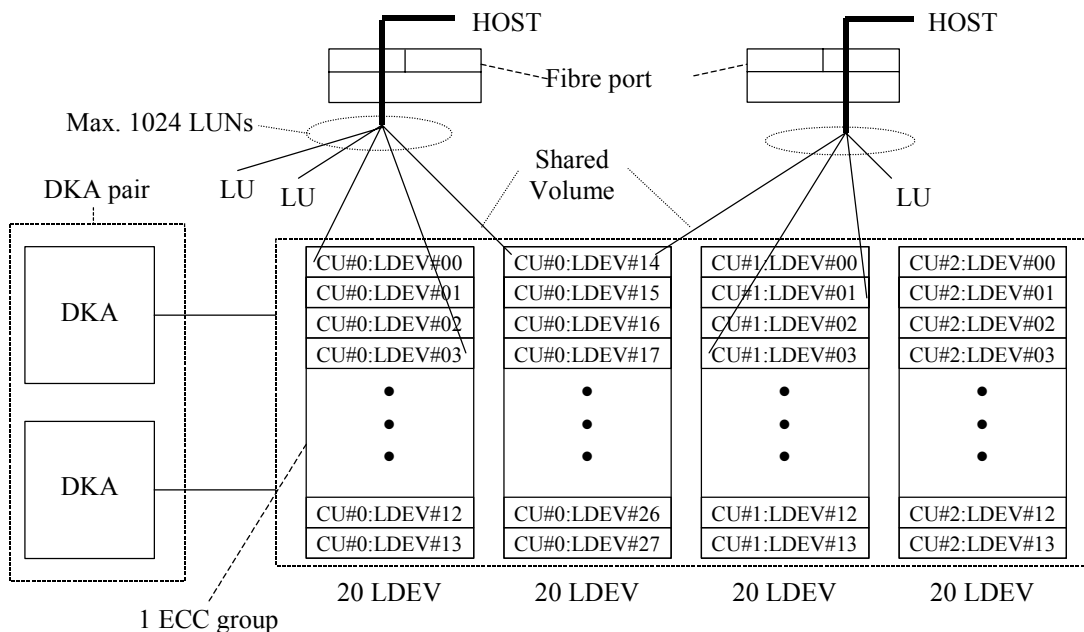


Fig. 3.4.2-1 LDEV and LU mapping for Fibre volume

3.4.3 LU Size Expansion (LUSE) Function

(1) Outline

This is a function to show the host the continuous LDEV of a volume exclusive for open system as a virtually large LU.

In the former configuration, one LU is one LDEV, but this expanding function can enlarge the LU size up to 265.8 G byte using OPEN-9×36 for example by showing the host two or more continuous LDEVs as a single LU.

Many LUs have been needed to cover the entire capacity of a disk subsystem before, but this function enables a small number of LUs to cover it from the viewpoint of host interface.

The MCU port (Initiator port) of TrueCopy function does not support LU size expansion.

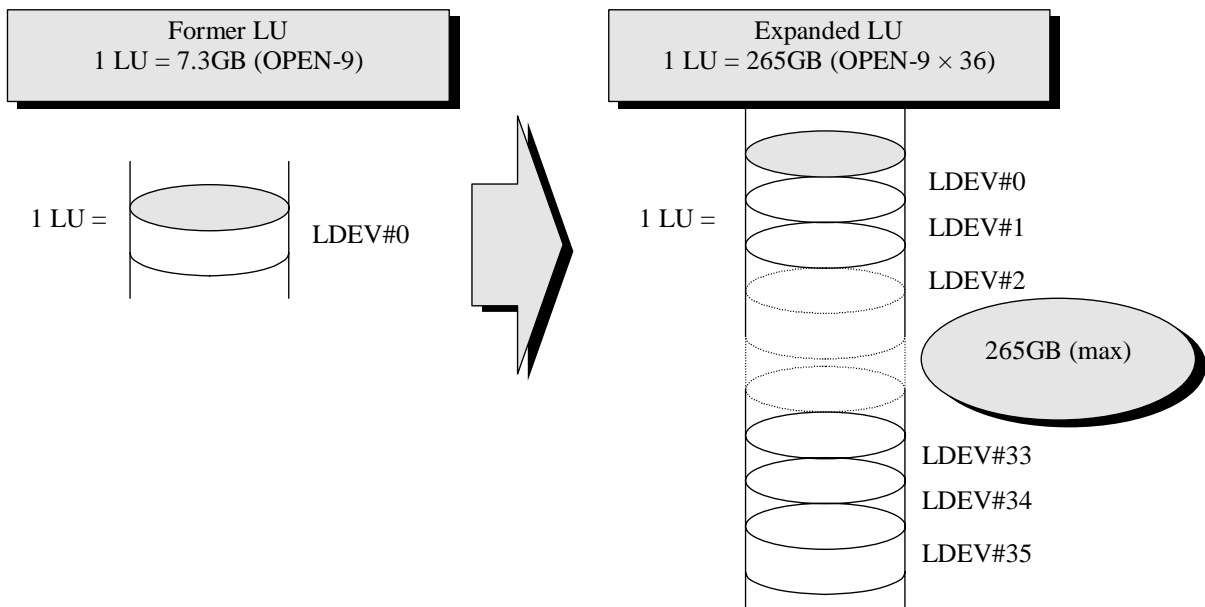


Fig. 3.4.3-1 Example of LU Size Expansion Function

(2) Specifications

Table 3.4.3-1 shows specifications for the LUSE. (1 KB = 1024 Byte)

Table 3.4.3-1 LUSE Specification(1/2)

Base volume	OPEN-3	OPEN-8	OPEN-9	OPEN-E	OPEN-L	OPEN-V (Note1)
LDEV Capacity	2.3 G byte	6.8 G byte	6.9 G byte	13.5 G byte	33.9 G byte	46.0 M byte ~ 2.8 T byte
Number of connectable LDEVs/LU	2 to 36					
LU Capacity	(2.3 G byte + 35 M byte) to 82.5 G byte	(6.8 G byte + 35 M byte) to 246.4 G byte	(6.9 G byte + 35 M byte) to 247.6 G byte	(13.5 G byte + 35 M byte) to 488.4 G byte	67.9 G byte to 1222.1 G byte	92.0 M byte to 60 T byte
Product name for responding to INQUIRY	OPEN-3×n	OPEN-8×n	OPEN-9×n	OPEN-E×n	OPEN-L×n	OPEN-V×n

Table 3.4.3-1 LUSE Specification(2/2)

Base volume	OPEN-3-CVS	OPEN-8-CVS	OPEN-9-CVS	OPEN-E-CVS
LDEV Capacity	35 M byte to 2.3 G byte	35 M byte to 6.8 G byte	35 M byte to 6.9 G byte	35 M byte to 13.5 G byte
Number of connectable LDEVs/LU	2 to 36			
LU Capacity	70 M byte to 82.5 G byte	70 M byte to 246.4 G byte	70 M byte to 247.6 G byte	70 M byte to 488.4 G byte
Product name for responding to INQUIRY	OPEN-3×n-CVS	OPEN-8×n-CVS	OPEN-9×n-CVS	OPEN-E×n-CVS

n: Number of connected LDEVs

Note1: OPEN-V is the volume of CVS basis.

Note2: LDEVs can be connected with different CU number and capacity though OPEN-L does not have CVS Volume type.

Note3: “0” is added to the emulation type of the V-VOLs (ex. OPEN-0V).

When you create a Copy-on-Write Snapshot pair, specify the volume whose emulation type is displayed with “0” like OPEN-0V as the S-VOL.

(3) Effects and restrictions of LUSE function

(a) Effects

- Restrictions of usable capacity owing to the number of the usable hosts is released.
 - Restriction of the host capacity
 - Restriction of capacity owing to restriction of the number of LUs of the HA software
- The disk connection function on the host side such as VxVM becomes unnecessary.
- Effect of LU size extending with CV.
 - LU of optional size can be configured.
 - The load of PDEV can be dispersed by the LUSE configuration of CV dispersed in ECC.
 - Performance can be improved by increasing the multiplex frequency of LDEV.

(b) Restrictions

- Some OSs are slow in disk accesses handling large data and may not be usable depending on environment. (Example: AIX is slow in accesses handling data larger than 2GB.)
- The capacity should be determined as necessary in a system designed to achieve a high-speed operation by making the LUs perform multiple operation.

(4) Notes on use

When the LU is expanded, the following restrictions are added to a case where no expansion is made, such as a change in capacity seen from the open host owing to the specification of the expansion.

- (a) The LU size cannot be changed while the LU is being used by the host. If you want to change the LU size, the host must be rebooted once. If the LU size once set is to be changed, shut down the host, change the LU size, then start up the host again.
- (b) If an LU to being used or expanded is reconfigured in a new configuration or as a expanded LU, data which had been used will be lost.
Perform physical replacement work of the disk including data backup, separation of the former LU, LU connection after the configuration change, and restoration of backup data.
- (c) When an LDEV in the LU is blocked, an LU blocking error does not occur unless an access is made to the blocked LDEV. When the access to the blocked LDEV is made, a blocking error occurs in the expanded LU.
- (d) The HMRS can use the LU whose size has been expanded. The LUSE volume can be used by the HMBR, however, all the volumes need to be backed up and restored.
- (e) The maintenance procedure when an error such as an LDEV blocking occurs is the same as before. Check the LDEV status from the SVP and perform the maintenance considering the relation between the LDEV and the LU.

3.4.4 LUN Security

(1) Outline

This function connects various kinds of servers into a segregated, secure environment via the switch in the Fibre channel port, and thus enables the storage and the server to be used in the SAN environment.

The MCU (initiator) port of TrueCopy does not support this function.

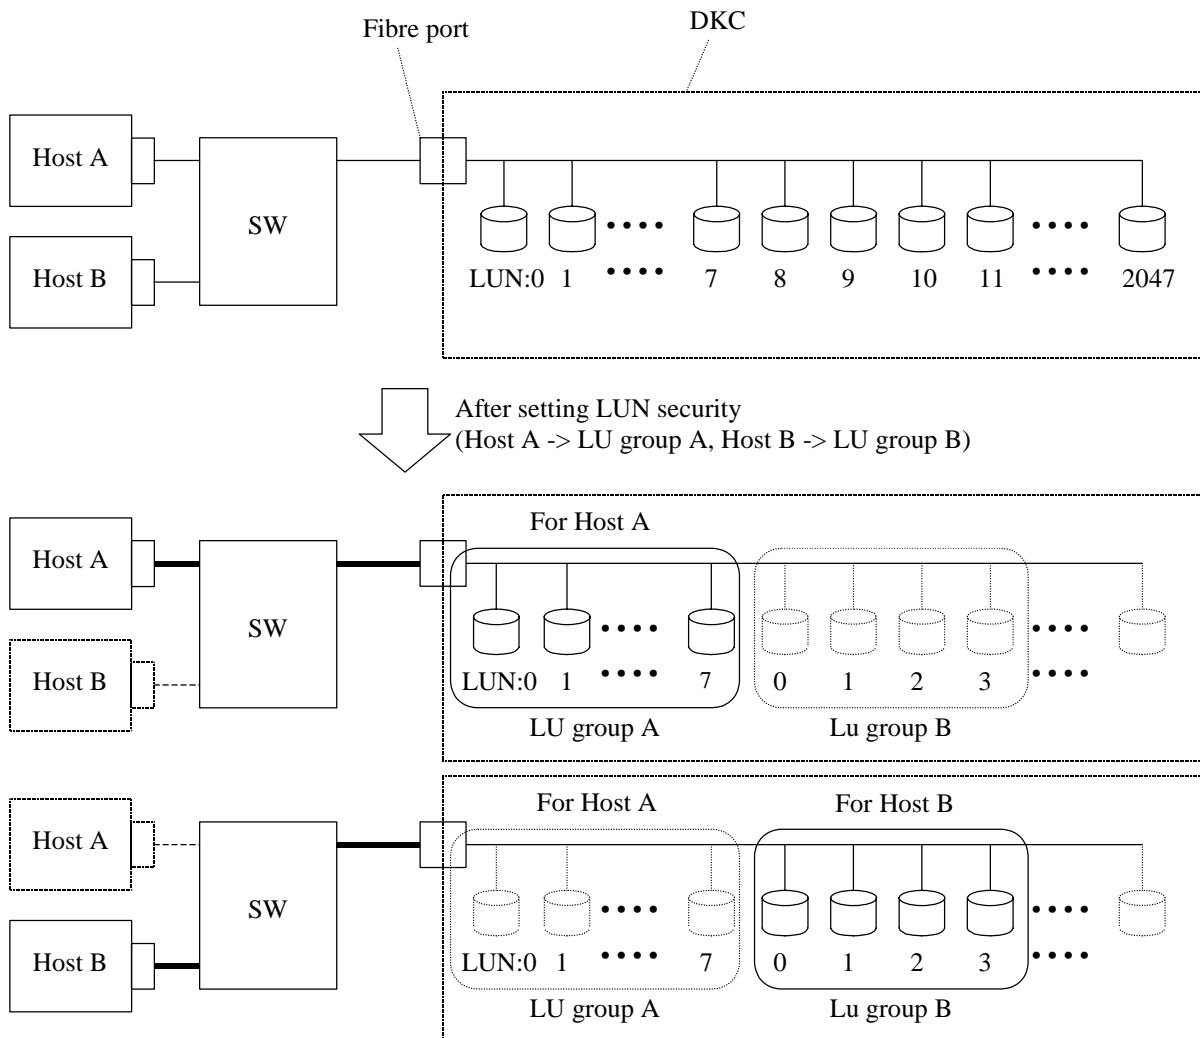


Fig. 3.4.4-1 LUN Security

3.5 Volume Specification

3.5.1 Volume Specification

Model Number of Disk drive and supported RAID Level are shown in Table 3.5.1-1.

The emulation types of disk controller and disk units of RAID500 are shown in Table 3.5.1-2 and after.

Table 3.5.1-1 List of RAID600 Model number

Model Number	Disk drive model	RAID Level
DKU-F605I-72S1	SDT2A-S072FC	RAID5 (3D+1P, 7D+1P)/
DKC-F605I-72KS	DKS2E-K72FC	RAID1 (2D+2D)/
	DKS2F-K72FD	RAID6 (6D+2P)
	DKS2G-K72FD	
	DKR2F-K72FC	
	DKR2G-K72FC	
	DKR2J-K72FD	
DKU-F605I-146S1	SDT2A-S146FC	
DKC-F605I-146KS	DKS2E-K146FC	
	DKS2F-K146FC	
	DKS2G-K146FD	
	DKR2F-K146FC	
	DKR2G-K146FC	
	DKR2J-K146FD	
DKU-F605I-200S1	SDT2A-S200FC	
	SDT2C-S200FC	
DKC-F605I-300JS	DKS2D-J300FC	
	DKS2E-J300FC	
	DKR2F-J300FC	
	DKR2G-J300FC	
	DKR2J-J300FC	
DKC-F605I-300KM	DKS2E-K300FC	
	DKS2F-K300FC	
	DKS2G-K300FC	
	DKR2G-K300FC	
	DKR2H-K300FC	
	DKR2J-K300FC	
DKC-F605I-300KS	DKS2E-K300FC	
	DKS2F-K300FC	
	DKS2G-K300FC	

(To be continued)

(Continued from the preceding page)

Model Number	Disk drive model	RAID Level
DKU-F605I-400S1	SDT2A-S400FC	
	SDT2C-S400FC	
DKC-F605I-400JS	DKS2E-J400FC	
	DKS2G-J400FD	
DKU-F605I-450KS	DKS2F-K450FC	
	DKS2G-K450FC	
	DKR2H-K450FC	
	DKR2J-K450FC	
DKU-F605I-600KS	DKS2G-K600FC	
	DKR2J-K600FC	
DKC-F605I-0R7HS	DKS2A-H0R7AT	
	DKR2B-H0R7AT	
	DKR2C-H0R7AD	
	DKR2D-H0R7AD	
DKC-F605I-1R0HS	DKR2B-H1R0AT	
	DKR2C-H1R0AD	
	DKR2D-H1R0AD	
DKC-F605I-2R0HS	DKS2C-H2R0AT	
	DKR2C-H2R0AT	
	DKR2D-H2R0AT	

Note: As for RAID1, the concatenation of two parity groups is possible (8HDDs).

In this case the number of volumes required is doubled.

Two concatenation and four concatenation (16HDDs and 32HDDs) of the RAID Groups are possible for RAID5 (7D+1P).

In this case, the number of volumes becomes twice or four times.

When OPEN-V is set in the parity group of the above-mentioned connection configuration, the maximum volume size becomes the parity cycle size of the source (2D+2D) or (7D+1P). It does not become twice or four times.

Note: The Subsystem capacity is different from one of SVP, because of $1\text{GB}=1000^2 \times 1000^2$ byte calculation.

Note: Striping group is created because maximum 2.99TB can only be set.

For OPEN-V, it's 2.99TB. For other than OPEN-V, it's 0.56TB. When a parity group has over maximum capacity, 2.99TB or 0.56TB, several striping groups will be created.

OPEN03-150

DKC6151

Rev.9 / Jun.2009, Oct.2009

Copyright © 2007, 2009, Hitachi, Ltd.

Table3.5.1-2 List of RAID600 Model Emulation Types for RAID5 (3D+1P) (1/2)

Emulation Type	DKC		—				
	DKU		OPEN-3	OPEN-8	OPEN-9	OPEN-E	OPEN-L
Storage capacity (GB/volume)			2.461	7.347	7.384	14.567	36.450
							(#1)
Number of volumes/ parity groups	DKC-F605I-2R0HS		—	—	—	—	2
	DKC-F605I-1R0HS		—	—	—	—	1
	DKC-F605I-0R7HS		—	—	—	—	1
	DKC-F605I-600KS		700	234	233	118	47
	DKC-F605I-450KS		535	179	178	90	36
	DKC-F605I-400JS		478	160	159	81	32
	DKC-F605I-400S1		478	160	159	81	32
	DKC-F605I-300JS/KM/KS		350	117	116	59	23
	DKC-F605I-200S1		239	80	79	40	16
	DKC-F605I-146KS		174	58	58	29	11
	DKC-F605I-146S1		174	58	58	29	11
	DKC-F605I-72KS		86	29	28	14	5
Maximum number of parity groups	DKC-F605I-2R0HS		—	—	—	—	59
	DKC-F605I-1R0HS		—	—	—	—	59
	DKC-F605I-0R7HS		—	—	—	—	59
	DKC-F605I-600KS		59	59	59	59	59
	DKC-F605I-450KS		59	59	59	59	59
	DKC-F605I-400JS		59	59	59	59	59
	DKC-F605I-400S1		8	8	8	8	8
	DKC-F605I-300JS/KM/KS		59	59	59	59	59
	DKC-F605I-200S1		8	8	8	8	8
	DKC-F605I-146KS		59	59	59	59	59
	DKC-F605I-146S1		8	8	8	8	8
	DKC-F605I-72KS		59	59	59	59	59
Maximum number of volumes	DKC-F605I-2R0HS		—	—	—	—	118
	DKC-F605I-1R0HS		—	—	—	—	59
	DKC-F605I-0R7HS		—	—	—	—	59
	DKC-F605I-600KS		41300	13806	13747	6962	2773
	DKC-F605I-450KS		31565	10561	10502	5310	2124
	DKC-F605I-400JS		28202	9440	9381	4779	1888
	DKC-F605I-400S1		3824	1280	1272	648	256
	DKC-F605I-300JS/KM/KS		20650	6903	6844	3481	1357
	DKC-F605I-200S1		1912	640	632	320	128
	DKC-F605I-146KS		10266	3422	3422	1711	649
	DKC-F605I-146S1		1392	464	464	232	88
	DKC-F605I-72KS		5074	1711	1652	826	295
Subsystem capacity (user area) (GB)	DKC-F605I-2R0HS		688	232	224	112	40
	DKC-F605I-2R0HS	Min	—	—	—	—	5909
		Max	—	—	—	—	348619 (348608)(*2)
	DKC-F605I-1R0HS	Min	—	—	—	—	2954
		Max	—	—	—	—	174310 (174305)(*2)
	DKC-F605I-0R7HS	Min	—	—	—	—	2216
		Max	—	—	—	—	130732 (130729)(*2)
	DKC-F605I-600KS	Min	1723	1719	1720	1719	1713
		Max	101639	101433	101508	101415	101076
	DKC-F605I-450KS	Min	1317	1315	1314	1311	1312
		Max	77681	77592	77547	77351	77420
	DKC-F605I-400JS	Min	1176	1176	1174	1180	1166
		Max	69405	69356	69269	69616	68818
	DKC-F605I-400S1	Min	1176	1176	1174	1180	1166
		Max	9411	9404	9392	9439	9331
	DKC-F605I-300JS/KM/KS	Min	861	860	857	859	838
		Max	50820	50716	50536	50708	49463
	DKC-F605I-200S1	Min	588	588	583	583	583
		Max	4705	4702	4667	4661	4666
	DKC-F605I-146KS	Min	428	426	428	422	401
		Max	25265	25141	25268	24924	23656
	DKC-F605I-146S1	Min	428	426	428	422	401
		Max	3426	3409	3426	3380	3208
	DKC-F605I-72KS	Min	212	213	207	204	182
		Max	12487	12571	12198	12032	10753
	DKC-F605I-72S1	Min	212	213	207	204	182
		Max	1693	1705	1654	1632	1458

- *1: The value of OPEN-V is the default one in the installation of parity group. In case of OPEN-V, storage capacity differs depending on RAID level and DKU (HDD) type because OPEN-V is CVS basis. The default volume size is nearly equal to that of a parity group.
- *2: The value in parentheses is capacity of the parity group with SATA W&V (Write & Verify) improved.

Table3.5.1-2 List of RAID600 Model Emulation Types for RAID5 (3D+1P) (2/2)

Emulation Type	DKC		—			
	DKU		3390-9A/9B/9C	3390-3A/3B/3C	3380-KA/KB/KC	3390-LA/LB/LC
Storage capacity (GB/volume)			8.924 (8.51) (*3)	2.975 (2.838) (*3)	1.957 (1.890) (*3)	29.185 27.800 (*3)
Number of volumes/ parity groups	DKC-F605I-2R0HS		—	—	—	100
	DKC-F605I-1R0HS		—	—	—	50
	DKC-F605I-0R7HS		—	—	—	37
	DKC-F605I-600KS		193	580	880	29
	DKC-F605I-450KS		147	443	673	22
	DKC-F605I-400JS		132	396	601	20
	DKC-F605I-400S1		132	396	601	20
	DKC-F605I-300JS/KM/KS		96	290	440	14
	DKC-F605I-200S1		66	198	300	10
	DKC-F605I-146KS		48	144	219	7
	DKC-F605I-146S1		48	144	219	7
	DKC-F605I-72KS		23	71	109	3
Maximum number of parity groups	DKC-F605I-2R0HS		—	—	—	59
	DKC-F605I-1R0HS		—	—	—	59
	DKC-F605I-0R7HS		—	—	—	59
	DKC-F605I-600KS		59	59	59	59
	DKC-F605I-450KS		59	59	59	59
	DKC-F605I-400JS		59	59	59	59
	DKC-F605I-400S1		8	8	8	8
	DKC-F605I-300JS/KM/KS		59	59	59	59
	DKC-F605I-200S1		8	8	8	8
	DKC-F605I-146KS		59	59	59	59
	DKC-F605I-146S1		8	8	8	8
	DKC-F605I-72KS		59	59	59	59
Maximum number of volumes	DKC-F605I-2R0HS		—	—	—	5900
	DKC-F605I-1R0HS		—	—	—	2950
	DKC-F605I-0R7HS		—	—	—	2183
	DKC-F605I-600KS		11387	34220	51920	1711
	DKC-F605I-450KS		8673	26137	39707	1298
	DKC-F605I-400JS		7788	23364	35459	1180
	DKC-F605I-400S1		1056	3168	4808	160
	DKC-F605I-300JS/KM/KS		5664	17110	25960	826
	DKC-F605I-200S1		528	1584	2400	80
	DKC-F605I-146KS		2832	8496	12921	413
	DKC-F605I-146S1		384	1152	1752	56
	DKC-F605I-72KS		1357	4189	6431	177
Subsystem capacity (user area) (GB)	DKC-F605I-72S1		184	568	872	24
	DKC-F605I-2R0HS	Min	—	—	—	5837
		Max	—	—	—	344383
	DKC-F605I-1R0HS	Min	—	—	—	2919
		Max	—	—	—	172192
	DKC-F605I-0R7HS	Min	—	—	—	2160
		Max	—	—	—	127422
	DKC-F605I-600KS	Min	1722	1726	1722	1693
		Max	101618	101805	101607	99871
	DKC-F605I-450KS	Min	1312	1318	1317	1284
		Max	77398	77758	77707	75764
	DKC-F605I-400JS	Min	1178	1178	1176	1167
		Max	69500	69508	69393	68877
	DKC-F605I-400S1	Min	1178	1178	1176	1167
		Max	9424	9425	9409	9339
	DKC-F605I-300JS/KM/KS	Min	857	863	861	846
		Max	50546	50902	50804	49936
	DKC-F605I-200S1	Min	589	589	587	557
		Max	4712	4712	4697	4670
	DKC-F605I-146KS	Min	428	428	429	409
		Max	25273	25276	25286	24107
	DKC-F605I-146S1	Min	428	428	429	409
		Max	3424	3424	3432	3272
	DKC-F605I-72KS	Min	205	211	213	175
		Max	12110	12462	12585	10331
	DKC-F605I-72S1	Min	205	211	213	175
		Max	1640	1688	1704	1400

*3: The value in parenthesis is the capacity for Main Frame Host.

OPEN03-170

DKC6151

Rev.9 / Jun.2009, Oct.2009

Copyright © 2007, 2009, Hitachi, Ltd.

Table3.5.1-3 List of RAID600 Model Emulation Types for RAID5 (7D+1P) (1/2)

Emulation Type	DKC		—				
	DKU		OPEN-3	OPEN-8	OPEN-9	OPEN-E	OPEN-L
Storage capacity (GB/volume)			2.461	7.347	7.384	14.567	36.450
							(#1)
Number of volumes/ parity groups	DKC-F605I-2R0HS		—	—	—	—	5
	DKC-F605I-1R0HS		—	—	—	—	3
	DKC-F605I-0R7HS		—	—	—	—	2
	DKC-F605I-600KS		1634	547	544	276	2
	DKC-F605I-450KS		1249	418	416	211	1
	DKC-F605I-400JS		1116	374	372	189	1
	DKC-F605I-400S1		1116	374	372	189	1
	DKC-F605I-300JS/KM/KS		817	273	272	138	1
	DKC-F605I-200S1		558	187	186	94	1
	DKC-F605I-146KS		407	136	135	69	1
	DKC-F605I-146S1		407	136	135	69	1
	DKC-F605I-72KS		202	67	67	34	1
Maximum number of parity groups	DKC-F605I-2R0HS		—	—	—	—	28
	DKC-F605I-1R0HS		—	—	—	—	28
	DKC-F605I-0R7HS		—	—	—	—	28
	DKC-F605I-600KS		28	28	28	28	28
	DKC-F605I-450KS		28	28	28	28	28
	DKC-F605I-400JS		28	28	28	28	28
	DKC-F605I-400S1		4	4	4	4	4
	DKC-F605I-300JS/KM/KS		28	28	28	28	28
	DKC-F605I-200S1		4	4	4	4	4
	DKC-F605I-146KS		28	28	28	28	28
	DKC-F605I-146S1		4	4	4	4	4
	DKC-F605I-72KS		28	28	28	28	28
Maximum number of volumes	DKC-F605I-2R0HS		—	—	—	—	140
	DKC-F605I-1R0HS		—	—	—	—	84
	DKC-F605I-0R7HS		—	—	—	—	56
	DKC-F605I-600KS		45752	15316	15232	7728	56
	DKC-F605I-450KS		34972	11704	11648	5908	28
	DKC-F605I-400JS		31248	10472	10416	5292	28
	DKC-F605I-400S1		4464	1496	1488	756	4
	DKC-F605I-300JS/KM/KS		22876	7644	7616	3864	28
	DKC-F605I-200S1		2232	748	744	376	4
	DKC-F605I-146KS		11396	3808	3780	1932	28
	DKC-F605I-146S1		1628	544	540	276	4
	DKC-F605I-72KS		5656	1876	1876	952	28
Subsystem capacity (user area) (GB)	DKC-F605I-2R0HS		808	268	268	136	52
	DKC-F605I-2R0HS	Min	—	—	—	—	13787
		Max	—	—	—	—	386044 (386031)(*2)
	DKC-F605I-1R0HS	Min	—	—	—	—	6894
		Max	—	—	—	—	193024 (193015)(*2)
	DKC-F605I-0R7HS	Min	—	—	—	—	5170
		Max	—	—	—	—	144768 (144762)(*2)
	DKC-F605I-600KS	Min	4021	4019	4017	4020	4010
		Max	112596	112527	112473	112574	112266
	DKC-F605I-450KS	Min	3074	3071	3072	3074	3062
		Max	86066	85989	86009	86062	85730
	DKC-F605I-400JS	Min	2746	2748	2747	2753	2734
		Max	76901	76938	76912	77089	76545
	DKC-F605I-400S1	Min	2746	2748	2747	2753	2734
		Max	10986	10991	10987	11013	10935
	DKC-F605I-300JS/KM/KS	Min	2011	2006	2008	2010	2005
		Max	56298	56160	56237	56287	56133
	DKC-F605I-200S1	Min	1373	1374	1373	1369	1349
		Max	5493	5496	5494	5477	5395
	DKC-F605I-146KS	Min	1002	999	997	1005	984
		Max	28046	27977	27912	28143	27556
	DKC-F605I-146S1	Min	1002	999	997	1005	984
		Max	4007	3997	3987	4020	3937
	DKC-F605I-72KS	Min	497	492	495	495	474
		Max	13919	13783	13852	13868	13268
	DKC-F605I-72S1	Min	497	492	495	495	474
		Max	1988	1969	1979	1981	1895

- *1: The value of OPEN-V is the default one in the installation of parity group. In case of OPEN-V, storage capacity differs depending on RAID level and DKU (HDD) type because OPEN-V is CVS basis. The default volume size is nearly equal to that of a parity group.
- *2: The value in parentheses is capacity of the parity group with SATA W&V (Write & Verify) improved.

Table3.5.1-3 List of RAID600 Model Emulation Types for RAID5 (7D+1P) (2/2)

Emulation Type	DKC		—			
	DKU		3390-9A/9B/9C	3390-3A/3B/3C	3380-KA/KB/KC	3390-LA/LB/LC
Storage capacity (GB/volume)			8.924 (8.51) (*3)	2.975 (2.838) (*3)	1.957 (1.890) (*3)	29.185 27.800 (*3)
Number of volumes/ parity groups	DKC-F605I-2R0HS		—	—	—	235
	DKC-F605I-1R0HS		—	—	—	117
	DKC-F605I-0R7HS		—	—	—	88
	DKC-F605I-600KS		450	1353	2000	69
	DKC-F605I-450KS		344	1034	1569	52
	DKC-F605I-400JS		308	925	1402	47
	DKC-F605I-400S1		308	925	1402	47
	DKC-F605I-300JS/KM/KS		225	676	1026	34
	DKC-F605I-200S1		154	462	701	23
	DKC-F605I-146KS		112	337	512	17
	DKC-F605I-146S1		112	337	512	17
	DKC-F605I-72KS		55	167	254	8
Maximum number of parity groups	DKC-F605I-72S1		55	167	254	8
	DKC-F605I-2R0HS		—	—	—	28
	DKC-F605I-1R0HS		—	—	—	28
	DKC-F605I-0R7HS		—	—	—	28
	DKC-F605I-600KS		28	28	28	28
	DKC-F605I-450KS		28	28	28	28
	DKC-F605I-400JS		28	28	28	28
	DKC-F605I-400S1		4	4	4	4
	DKC-F605I-300JS/KM/KS		28	28	28	28
	DKC-F605I-200S1		4	4	4	4
	DKC-F605I-146KS		28	28	28	28
	DKC-F605I-146S1		4	4	4	4
Maximum number of volumes	DKC-F605I-72KS		28	28	28	28
	DKC-F605I-72S1		4	4	4	4
	DKC-F605I-2R0HS		—	—	—	6580
	DKC-F605I-1R0HS		—	—	—	3276
	DKC-F605I-0R7HS		—	—	—	2464
	DKC-F605I-600KS		12600	37884	56000	1932
	DKC-F605I-450KS		9632	28952	43932	1456
	DKC-F605I-400JS		8624	25900	39256	1316
	DKC-F605I-400S1		1232	3700	5608	188
	DKC-F605I-300JS/KM/KS		6300	18928	28728	952
	DKC-F605I-200S1		616	1848	2804	92
	DKC-F605I-146KS		3136	9436	14336	476
Subsystem capacity (user area) (GB)	DKC-F605I-146S1		448	1348	2048	68
	DKC-F605I-72KS		1540	4676	7112	224
	DKC-F605I-72S1		220	668	1016	32
	DKC-F605I-2R0HS	Min	—	—	—	13717
		Max	—	—	—	384075
	DKC-F605I-1R0HS	Min	—	—	—	6829
		Max	—	—	—	191220
	DKC-F605I-0R7HS	Min	—	—	—	5137
		Max	—	—	—	143824
	DKC-F605I-600KS	Min	4016	4025	3914	4028
		Max	112442	112705	109592	112771
	DKC-F605I-450KS	Min	3070	3076	3071	3035
		Max	85956	86132	85975	84987
	DKC-F605I-400JS	Min	2749	2752	2744	2743
		Max	76961	77053	76824	76815
	DKC-F605I-400S1	Min	2749	2752	2744	2743
		Max	10994	11008	10975	10974
	DKC-F605I-300JS/KM/KS	Min	2008	2011	2008	1985
		Max	56221	56311	56221	55568
	DKC-F605I-200S1	Min	1374	1374	1372	1343
		Max	5497	5498	5487	5370
	DKC-F605I-146KS	Min	999	1003	1002	992
		Max	27986	28072	28056	27784
	DKC-F605I-146S1	Min	999	1003	1002	992
		Max	3996	4012	4008	3968
	DKC-F605I-72KS	Min	491	497	497	467
		Max	13743	13911	13918	13075
	DKC-F605I-72S1	Min	491	497	497	467
		Max	1964	1988	1988	1868

*3: The value in parenthesis is the capacity for Main Frame Host.

Table3.5.1-4 List of RAID600 Model Emulation Types for RAID1 (2D+2D) (1/2)

Emulation Type	DKC		—					
	DKU		OPEN-3	OPEN-8	OPEN-9	OPEN-E	OPEN-L	OPEN-V
Storage capacity (GB/volume)			2.461	7.347	7.384	14.567	36.450	(*1)
Number of volumes/ parity groups	DKC-F605I-2R0HS		—	—	—	—	—	2
	DKC-F605I-1R0HS		—	—	—	—	—	1
	DKC-F605I-0R7HS		—	—	—	—	—	1
	DKC-F605I-600KS		467	156	155	79	31	1
	DKC-F605I-450KS		357	119	118	60	24	1
	DKC-F605I-400JS		319	106	106	54	21	1
	DKC-F605I-400S1		319	106	106	54	21	1
	DKC-F605I-300JS/KM/KS		233	78	77	39	15	1
	DKC-F605I-200S1		159	53	53	27	10	1
	DKC-F605I-146KS		116	39	38	19	7	1
	DKC-F605I-146S1		116	39	38	19	7	1
	DKC-F605I-72KS		57	19	19	9	3	1
DKC-F605I-72S1		57	19	19	9	3	1	
Maximum number of parity groups	DKC-F605I-2R0HS		—	—	—	—	—	59
	DKC-F605I-1R0HS		—	—	—	—	—	59
	DKC-F605I-0R7HS		—	—	—	—	—	59
	DKC-F605I-600KS		59	59	59	59	59	59
	DKC-F605I-450KS		59	59	59	59	59	59
	DKC-F605I-400JS		59	59	59	59	59	59
	DKC-F605I-400S1		8	8	8	8	8	8
	DKC-F605I-300JS/KM/KS		59	59	59	59	59	59
	DKC-F605I-200S1		8	8	8	8	8	8
	DKC-F605I-146KS		59	59	59	59	59	59
	DKC-F605I-146S1		8	8	8	8	8	8
	DKC-F605I-72KS		59	59	59	59	59	59
DKC-F605I-72S1		8	8	8	8	8	8	
Maximum number of volumes	DKC-F605I-2R0HS		—	—	—	—	—	118
	DKC-F605I-1R0HS		—	—	—	—	—	59
	DKC-F605I-0R7HS		—	—	—	—	—	59
	DKC-F605I-600KS		27553	9204	9145	4661	1829	59
	DKC-F605I-450KS		21063	7021	6962	3540	1416	59
	DKC-F605I-400JS		18821	6254	6254	3186	1239	59
	DKC-F605I-400S1		2552	848	848	432	168	8
	DKC-F605I-300JS/KM/KS		13747	4602	4543	2301	885	59
	DKC-F605I-200S1		1272	424	424	216	80	8
	DKC-F605I-146KS		6844	2301	2242	1121	413	59
	DKC-F605I-146S1		928	312	304	152	56	8
	DKC-F605I-72KS		3363	1121	1121	531	177	59
DKC-F605I-72S1		456	152	152	72	24	8	
Subsystem capacity (user area) (GB)	DKC-F605I-2R0HS	Min	—	—	—	—	—	3939
		Max	—	—	—	—	—	232413 (232400)(*2)
	DKC-F605I-1R0HS	Min	—	—	—	—	—	1970
		Max	—	—	—	—	—	116206 (116201)(*2)
	DKC-F605I-0R7HS	Min	—	—	—	—	—	1477
		Max	—	—	—	—	—	87155 (87151)(*2)
	DKC-F605I-600KS	Min	1149	1146	1145	1151	1130	1153
		Max	67808	67622	67527	67897	66667	68009
	DKC-F605I-450KS	Min	879	874	871	874	875	881
		Max	51836	51583	51407	51567	51613	51985
	DKC-F605I-400JS	Min	785	779	783	787	765	788
		Max	46318	45948	46180	46410	45162	46468
	DKC-F605I-400S1	Min	785	779	783	787	765	788
		Max	6280	6230	6262	6293	6124	6301
	DKC-F605I-300JS/KM/KS	Min	573	573	569	568	547	576
		Max	33831	33811	33546	33519	32258	34002
	DKC-F605I-200S1	Min	391	389	391	393	365	394
		Max	3130	3115	3131	3146	2916	3150
	DKC-F605I-146KS	Min	285	287	281	277	255	288
		Max	16843	16905	16555	16330	15054	16963
	DKC-F605I-146S1	Min	285	287	281	277	255	288
		Max	2284	2292	2245	2214	2041	2300
	DKC-F605I-72KS	Min	140	140	140	131	109	143
		Max	8276	8236	8277	7735	6452	8431
DKC-F605I-72S1	Min	140	140	140	131	109	143	
	Max	1122	1117	1122	1049	875	1143	

- *1: The value of OPEN-V is the default one in the installation of parity group. In case of OPEN-V, storage capacity differs depending on RAID level and DKU (HDD) type because OPEN-V is CVS basis. The default volume size is nearly equal to that of a parity group.
- *2: The value in parentheses is capacity of the parity group with SATA W&V (Write & Verify) improved.

Table3.5.1-4 List of RAID600 Model Emulation Types for RAID1 (2D+2D) (2/2)

Emulation Type	DKC		—			
	DKU		3390-9A/9B/9C	3390-3A/3B/3C	3380-KA/KB/KC	3390-LA/LB/LC
Storage capacity (GB/volume)			8.924 (8.51) (*3)	2.975 (2.838) (*3)	1.957 (1.890) (*3)	29.185 27.800 (*3)
Number of volumes/ parity groups	DKC-F605I-2R0HS		—	—	—	67
	DKC-F605I-1R0HS		—	—	—	33
	DKC-F605I-0R7HS		—	—	—	25
	DKC-F605I-600KS		128	386	587	19
	DKC-F605I-450KS		98	295	448	15
	DKC-F605I-400JS		88	264	401	13
	DKC-F605I-400S1		88	264	401	13
	DKC-F605I-300JS/KM/KS		64	193	293	9
	DKC-F605I-200S1		44	132	200	6
	DKC-F605I-146KS		32	96	146	4
	DKC-F605I-146S1		32	96	146	4
	DKC-F605I-72KS		15	47	72	2
Maximum number of parity groups	DKC-F605I-72S1		15	47	72	2
	DKC-F605I-2R0HS		—	—	—	59
	DKC-F605I-1R0HS		—	—	—	59
	DKC-F605I-0R7HS		—	—	—	59
	DKC-F605I-600KS		59	59	59	59
	DKC-F605I-450KS		59	59	59	59
	DKC-F605I-400JS		59	59	59	59
	DKC-F605I-400S1		8	8	8	8
	DKC-F605I-300JS/KM/KS		59	59	59	59
	DKC-F605I-200S1		8	8	8	8
	DKC-F605I-146KS		59	59	59	59
	DKC-F605I-146S1		8	8	8	8
Maximum number of volumes	DKC-F605I-72KS		59	59	59	59
	DKC-F605I-72S1		8	8	8	8
	DKC-F605I-2R0HS		—	—	—	3953
	DKC-F605I-1R0HS		—	—	—	1947
	DKC-F605I-0R7HS		—	—	—	1475
	DKC-F605I-600KS		7552	22774	34633	1121
	DKC-F605I-450KS		5782	17405	26432	885
	DKC-F605I-400JS		5192	15576	23659	767
	DKC-F605I-400S1		704	2112	3208	104
	DKC-F605I-300JS/KM/KS		3776	11387	17287	531
	DKC-F605I-200S1		352	1056	1600	48
	DKC-F605I-146KS		1888	5664	8614	236
Subsystem capacity (user area) (GB)	DKC-F605I-146S1		256	768	1168	32
	DKC-F605I-72KS		885	2773	4248	118
	DKC-F605I-72S1		120	376	576	16
	DKC-F605I-2R0HS	Min	—	—	—	3911
		Max	—	—	—	230737
	DKC-F605I-1R0HS	Min	—	—	—	1926
		Max	—	—	—	113646
	DKC-F605I-0R7HS	Min	—	—	—	1459
		Max	—	—	—	86096
	DKC-F605I-600KS	Min	1142	1148	1149	1109
		Max	67394	67753	67777	65433
	DKC-F605I-450KS	Min	875	878	877	876
		Max	51599	51780	51727	51657
	DKC-F605I-400JS	Min	785	785	785	759
		Max	46333	46339	46301	44770
	DKC-F605I-400S1	Min	785	785	785	759
		Max	6282	6283	6278	6070
	DKC-F605I-300JS/KM/KS	Min	571	574	573	525
		Max	33697	33876	33831	30994
	DKC-F605I-200S1	Min	393	393	391	350
		Max	3141	3142	3131	2802
	DKC-F605I-146KS	Min	286	286	286	233
		Max	16849	16850	16858	13775
	DKC-F605I-146S1	Min	286	286	286	233
		Max	2288	2288	2288	1864
	DKC-F605I-72KS	Min	134	140	141	117
		Max	7898	8250	8313	6888
	DKC-F605I-72S1	Min	134	140	141	117
		Max	1072	1120	1128	936

*3: The value in parenthesis is the capacity for Main Frame Host.

Table3.5.1-5 List of RAID600 Model Emulation Types for RAID6 (6D+2P) (1/2)

Emulation Type	DKC		—					
	DKU		OPEN-3	OPEN-8	OPEN-9	OPEN-E	OPEN-L	OPEN-V
Storage capacity (GB/volume)			2.461	7.347	7.384	14.567	36.450	(*1)
Number of volumes/ parity groups	DKC-F605I-2R0HS		—	—	—	—	—	4
	DKC-F605I-1R0HS		—	—	—	—	—	2
	DKC-F605I-0R7HS		—	—	—	—	—	2
	DKC-F605I-600KS		1401	469	466	237	94	2
	DKC-F605I-450KS		1071	358	356	181	72	1
	DKC-F605I-400JS		957	320	319	162	64	1
	DKC-F605I-400S1		957	320	319	162	64	1
	DKC-F605I-300JS/KM/KS		700	234	233	118	47	1
	DKC-F605I-200S1		478	160	159	81	32	1
	DKC-F605I-146KS		349	117	116	59	23	1
	DKC-F605I-146S1		349	117	116	59	23	1
	DKC-F605I-72KS		173	58	57	29	11	1
DKC-F605I-72S1		173	58	57	29	11	1	
Maximum number of parity groups	DKC-F605I-2R0HS		—	—	—	—	—	28
	DKC-F605I-1R0HS		—	—	—	—	—	28
	DKC-F605I-0R7HS		—	—	—	—	—	28
	DKC-F605I-600KS		28	28	28	28	28	28
	DKC-F605I-450KS		28	28	28	28	28	28
	DKC-F605I-400JS		28	28	28	28	28	28
	DKC-F605I-400S1		4	4	4	4	4	4
	DKC-F605I-300JS/KM/KS		28	28	28	28	28	28
	DKC-F605I-200S1		4	4	4	4	4	4
	DKC-F605I-146KS		28	28	28	28	28	28
	DKC-F605I-146S1		4	4	4	4	4	4
	DKC-F605I-72KS		28	28	28	28	28	28
DKC-F605I-72S1		4	4	4	4	4	4	
Maximum number of volumes	DKC-F605I-2R0HS		—	—	—	—	—	112
	DKC-F605I-1R0HS		—	—	—	—	—	56
	DKC-F605I-0R7HS		—	—	—	—	—	56
	DKC-F605I-600KS		39228	13132	13048	6636	2632	56
	DKC-F605I-450KS		29988	10024	9968	5068	2016	28
	DKC-F605I-400JS		26796	8960	8932	4536	1792	28
	DKC-F605I-400S1		3828	1280	1276	648	256	4
	DKC-F605I-300JS/KM/KS		19600	6552	6524	3304	1316	28
	DKC-F605I-200S1		1912	640	636	324	128	4
	DKC-F605I-146KS		9772	3276	3248	1652	644	28
	DKC-F605I-146S1		1396	468	464	236	92	4
	DKC-F605I-72KS		4844	1624	1596	812	308	28
DKC-F605I-72S1		692	232	228	116	44	4	
Subsystem capacity (user area) (GB)	DKC-F605I-2R0HS	Min	—	—	—	—	—	11818
		Max	—	—	—	—	—	330896 (330881)(*2)
	DKC-F605I-1R0HS	Min	—	—	—	—	—	5909
		Max	—	—	—	—	—	165449 (165441)(*2)
	DKC-F605I-0R7HS	Min	—	—	—	—	—	4432
		Max	—	—	—	—	—	124085 (124081)(*2)
	DKC-F605I-600KS	Min	3448	3446	3441	3452	3426	3458
		Max	96540	96481	96346	96667	95936	96832
	DKC-F605I-450KS	Min	2636	2630	2629	2637	2624	2643
		Max	73800	73646	73604	73826	73483	74012
	DKC-F605I-400JS	Min	2355	2351	2355	2360	2333	2363
		Max	65945	65829	65954	66076	65318	66164
	DKC-F605I-400S1	Min	2355	2351	2355	2360	2333	2363
		Max	9421	9404	9422	9439	9331	9452
	DKC-F605I-300JS/KM/KS	Min	1723	1719	1720	1719	1713	1729
		Max	48236	48138	48173	48129	47968	48415
	DKC-F605I-200S1	Min	1176	1176	1174	1180	1166	1182
		Max	4705	4702	4696	4720	4666	4726
	DKC-F605I-146KS	Min	859	860	857	859	838	863
		Max	24049	24069	23983	24065	23474	24150
	DKC-F605I-146S1	Min	859	860	857	859	838	863
		Max	3436	3438	3426	3438	3353	3450
	DKC-F605I-72KS	Min	426	426	421	422	401	429
		Max	11921	11932	11785	11828	11227	12009
	DKC-F605I-72S1	Min	426	426	421	422	401	429
		Max	1703	1705	1684	1690	1604	1716

- *1: The value of OPEN-V is the default one in the installation of parity group. In case of OPEN-V, storage capacity differs depending on RAID level and DKU (HDD) type because OPEN-V is CVS basis. The default volume size is nearly equal to that of a parity group.
- *2: The value in parentheses is capacity of the parity group with SATA W&V (Write & Verify) improved.

Table3.5.1-5 List of RAID600 Model Emulation Types for RAID6 (6D+2P) (2/2)

Emulation Type	DKC		—				
	DKU		3390-9A/9B/9C	3390-3A/3B/3C	3380-KA/KB/KC	3390-LA/LB/LC	3390-MA/MB/MC
Storage capacity (GB/volume)			8.924 (8.51) (*3)	2.975 (2.838) (*3)	1.957 (1.890) (*3)	29.185 27.800 (*3)	58.370 (55.589) (*3)
Number of volumes/ parity groups	DKC-F605I-2R0HS		—	—	—	—	201
	DKC-F605I-1R0HS		—	—	—	—	100
	DKC-F605I-0R7HS		—	—	—	—	75
	DKC-F605I-600KS		386	1159	1761	118	59
	DKC-F605I-450KS		295	886	1346	90	45
	DKC-F605I-400JS		264	792	1203	80	40
	DKC-F605I-400S1		264	792	1203	80	40
	DKC-F605I-300JS/KM/KS		193	579	880	59	29
	DKC-F605I-200S1		132	396	601	40	20
	DKC-F605I-146KS		96	289	439	29	14
	DKC-F605I-146S1		96	289	439	29	14
	DKC-F605I-72KS		47	143	218	14	7
Maximum number of parity groups	DKC-F605I-72S1		47	143	218	14	7
	DKC-F605I-2R0HS		—	—	—	—	28
	DKC-F605I-1R0HS		—	—	—	—	28
	DKC-F605I-0R7HS		—	—	—	—	28
	DKC-F605I-600KS		28	28	28	28	28
	DKC-F605I-450KS		28	28	28	28	28
	DKC-F605I-400JS		28	28	28	28	28
	DKC-F605I-400S1		4	4	4	4	4
	DKC-F605I-300JS/KM/KS		28	28	28	28	28
	DKC-F605I-200S1		4	4	4	4	4
	DKC-F605I-146KS		28	28	28	28	28
	DKC-F605I-146S1		4	4	4	4	4
Maximum number of volumes	DKC-F605I-72KS		28	28	28	28	28
	DKC-F605I-72S1		4	4	4	4	4
	DKC-F605I-2R0HS		—	—	—	—	5628
	DKC-F605I-1R0HS		—	—	—	—	2800
	DKC-F605I-0R7HS		—	—	—	—	2100
	DKC-F605I-600KS		10808	32452	49308	3304	1652
	DKC-F605I-450KS		8260	24808	37688	2520	1260
	DKC-F605I-400JS		7392	22176	33684	2240	1120
	DKC-F605I-400S1		1056	3168	4812	320	160
	DKC-F605I-300JS/KM/KS		5404	16212	24640	1652	812
	DKC-F605I-200S1		528	1584	2404	160	80
	DKC-F605I-146KS		2688	8092	12292	812	392
Subsystem capacity (user area) (GB)	DKC-F605I-146S1		384	1156	1756	116	56
	DKC-F605I-72KS		1316	4004	6104	392	196
	DKC-F605I-72S1		188	572	872	56	28
	DKC-F605I-2R0HS	Min	—	—	—	—	11732
		Max	—	—	—	—	328506
	DKC-F605I-1R0HS	Min	—	—	—	—	5837
		Max	—	—	—	—	163436
	DKC-F605I-0R7HS	Min	—	—	—	—	4378
		Max	—	—	—	—	122577
	DKC-F605I-600KS	Min	3445	3448	3446	3444	3444
		Max	96451	96545	96496	96427	96427
	DKC-F605I-450KS	Min	2633	2636	2634	2627	2627
		Max	73712	73804	73755	73546	73546
	DKC-F605I-400JS	Min	2356	2356	2354	2335	2335
		Max	65966	65974	65920	65374	65374
	DKC-F605I-400S1	Min	2356	2356	2354	2335	2335
		Max	9424	9425	9417	9339	9339
	DKC-F605I-300JS/KM/KS	Min	1722	1723	1722	1722	1693
		Max	48225	48231	48220	48214	47396
	DKC-F605I-200S1	Min	1178	1178	1176	1167	1167
		Max	4712	4712	4705	4670	4670
	DKC-F605I-146KS	Min	857	860	859	846	817
		Max	23988	24074	24055	23698	22881
	DKC-F605I-146S1	Min	857	860	859	846	817
		Max	1144	1144	1144	1052	932
	DKC-F605I-72KS	Min	419	425	427	409	409
		Max	11744	11912	11946	11441	11441
	DKC-F605I-72S1	Min	419	425	427	409	409
		Max	1676	1700	1708	1636	1636

*3: The value in parenthesis is the capacity for Main Frame Host.

Table 3.5.1-6 The relation between OPEN-V capacity, RAID level and DKU type

DKU type		Capacity			Number of LDEV
		MB	CYL	Logical BlocKSR	
RAID5 (3D+1P)	DKC-F605I-2R0HS	5908869.4	6010812.8	11540760576	2
	DKC-F605I-1R0HS	2954450.4	3005422.4	5770411008	1
	DKC-F605I-0R7HS	2215846.1	2254075.2	4327824384	1
	DKC-F605I-600KS	1729179.9	1759012.8	3377304576	1
	DKC-F605I-450KS	1321698.5	1344501.2	2581442310	1
	DKC-F605I-400JS/S1	1181537.0	1201921.6	2307689472	1
	DKC-F605I-300JS/KM/KS	864589.2	879505.6	1688650752	1
	DKC-F605I-200S1	590769.2	600961.5	1153846164	1
	DKC-F605I-146KS/S1	431293.5	438734.4	842370048	1
	DKC-F605I-72KS/S1	214488.3	218188.8	418922496	1
RAID5 (7D+1P)	DKC-F605I-2R0HS	13787362.0	14025229.9	26928441344	5
	DKC-F605I-1R0HS	6893717.7	7012652.3	13464292352	3
	DKC-F605I-0R7HS	5170307.5	5259508.8	10098256896	2
	DKC-F605I-600KS	4034753.2	4104363.2	7880377344	2
	DKC-F605I-450KS	3083963.1	3137169.5	6023365390	1
	DKC-F605I-400JS/S1	2756919.7	2804483.7	5384608768	1
	DKC-F605I-300JS/KM/KS	2017374.8	2052179.7	3940185088	1
	DKC-F605I-200S1	1378461.6	1402243.6	2692307716	1
	DKC-F605I-146KS/S1	1006351.4	1023713.6	1965530112	1
	DKC-F605I-72KS/S1	500472.7	509107.2	977485824	1
RAID1 (2D+2D)	DKC-F605I-2R0HS	3939246.3	4007208.5	7693840384	2
	DKC-F605I-1R0HS	1969633.6	2003614.9	3846940672	1
	DKC-F605I-0R7HS	1477230.7	1502716.8	2885216256	1
	DKC-F605I-600KS	1152786.6	1172675.2	2251536384	1
	DKC-F605I-450KS	881132.3	896334.1	1720961540	1
	DKC-F605I-400JS/S1	787691.3	801281.1	1538459648	1
	DKC-F605I-300JS/KM/KS	576392.8	586337.1	1125767168	1
	DKC-F605I-200S1	393846.2	400641.0	769230776	1
	DKC-F605I-146KS/S1	287529.0	292489.6	561580032	1
	DKC-F605I-72KS/S1	142992.2	145459.2	279281664	1
RAID6 (6D+2P)	DKC-F605I-2R0HS	11817738.8	12021625.6	23081521152	4
	DKC-F605I-1R0HS	5908900.9	6010844.8	11540822016	2
	DKC-F605I-0R7HS	4431692.2	4508150.4	8655648768	2
	DKC-F605I-600KS	3458359.9	3518025.6	6754609152	1
	DKC-F605I-450KS	2643396.9	2689002.4	5162884620	1
	DKC-F605I-400JS/S1	2363074.0	2403843.2	4615378944	1
	DKC-F605I-300JS/KM/KS	1729178.4	1759011.2	3377301504	1
	DKC-F605I-200S1	1181538.5	1201923.1	2307692328	1
	DKC-F605I-146KS/S1	862586.9	877468.8	1684740096	1
	DKC-F605I-72KS/S1	428976.6	436377.6	837844992	1

*4: In case of OPEN-V, the relationship between Capacity[MB] and Cylinder number is as follows.

$$A[\text{MB}] = B[\text{Cyl}] * 15 * 128 * 512 / 1000 / 1000 \text{ (1MB = } 1000^2 \text{ byte)}$$

or

$$A[\text{MB}] = B[\text{Cyl}] * 15 * 128 * 512 / 1024 / 1024 \text{ (1MB = } 1024^2 \text{ byte)}$$

where A is the capacity by MB, B is that by Cylinder number.

The relationship between Capacity[MB] and Logical BlocKSR is as follows.

$$A[\text{MB}] = C * 512 / 1000 / 1000 \text{ (1MB = } 1000^2 \text{ byte)}$$

or

$$A[\text{MB}] = C * 512 / 1024 / 1024 \text{ (1MB = } 1024^2 \text{ byte)}$$

where C is the capacity by Logical BlocKSR.

3.5.2 Intermix Specification

Refer to 3.7.2 Emulation Device Type (2) of [THEORY03-300](#) about Intermix Specification.

3.5.3 HMDE volume intermix within ECC group

3.5.3.1 HMDE volume intermix within ECC group

- (1) Four emulation types of volume can coexist within one ECC group about each groups below.
 - ① 3390-3A, -3B, -3C, -3 (or 3390-3A, -3B, -3C, -3R)
 - ② 3390-9A, -9B, -9C, -9
 - ③ 3390-LA, -LB, -LC, -L
- (2) The type can be changed for each one volume within an ECC group.
- (3) The type can be changed by the emulation type change function of the SVP.
- (4) The emulation type change function allows any change of types among 3A, 3B, 3C, 3, and 3R.
- (5) At “define configuration and install” or installation of disk drives, device definition and LDEV-FMT are performed in units of ECC group with any type of 3A, 3B, 3C, 3, and 3R. Afterwards the type is changed for each one volume if necessary.
When the type change is completed, all volumes are initialized (a VTOC is created for volumes) from the mainframe system.
- (6) After the type change, the previous data is not assured.
After the type change, all volumes must be initialized (a VTOC must be created) from the mainframe system.
However, data is assured as before for the type change between 3390-3 and 3390-3R, and if you want to assure the data, all volumes must not be initialized (a VTOC must not be created). Any data is not assured for a type change other than that between 3390-3 and 3390-3R.

3.5.3.2 Intermix with 3390-3R


- (1) The 3390-3/-3A/-3B/-3C types can coexist within a subsystem.
Intermixing is allowed both within and beyond a 32-LDEV address boundary.
- (2) The 3390-3R/-3A/-3B/-3C types can coexist within a subsystem.
 - An intermixture of the 3390-3R and any of 3390-3A/-3B/-3C is allowed in units of 32-LDEV address boundary (with the same type within each boundary). It is not allowed within a 32-LDEV address boundary because of the restriction on the mainframe system.
 - An intermixture of the 3390-3A/-3B/-3C is allowed within and out of units of 32-LDEV address boundary.
- (3) The 3390-3 and 3390-3R cannot coexist within a subsystem.
 - When changing the type from 3390-3 to 3390-R and vice versa by the emulation type change function, the type must be changed not partially but totally, since the 3390-3 and 3390-3R cannot coexist within a subsystem.
The SVP rejects partial change.
 - The intermixture can be changed from that of the 3390-3/-3A/-3B/-3C to that of the 3390-3R/-3A/-3B/-3C (with an intermixture part of the 3390-3A/-3B/-3C remaining unchanged) and vice versa by the emulation type change function between 3390-3 and 3390-3R.

3.6 Volume Configuration

3.6.1 Volume Configuration

(1) Minimum Volume Configuration

Single Rack configuration

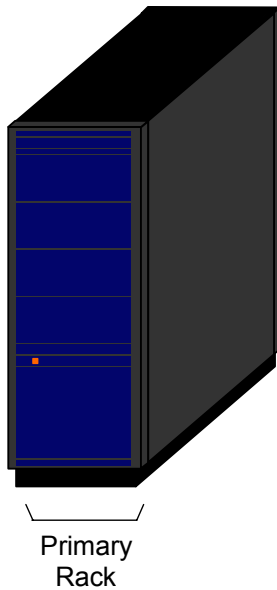


- 1 DKA Pair is installed
- 5 HDDs including 1 spare drive / 8 disk paths (1 ECC Group)

Fig. 3.6.1-1 Minimum volume configuration

(2) Maximum Volume Configuration

Twin Rack configuration

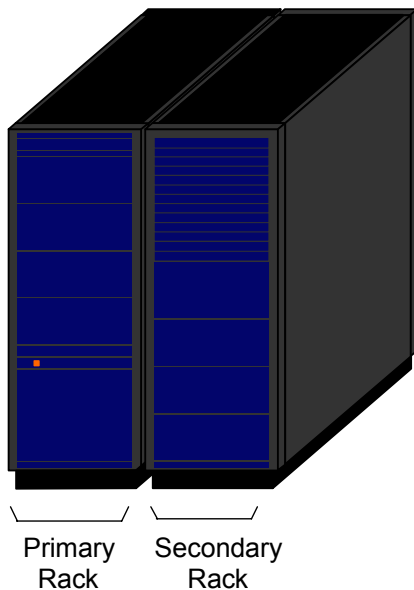

- 1 DKA Pair is installed
- 240 HDDs including 4 spares drives / 8 disk paths
(56 ECC Groups when 3D+1P is composed)
(28 ECC Groups when 7D+1P is composed)

Fig. 3.6.1-2 Maximum volume configuration

3.6.2 Intermix Volume Configuration

PDEV intermix of same parity group : ECC group
 PDEV intermix of different parity group : DKA pair
 RAID intermix : DKA pair
 LDEV intermix : ECC group
 MF/OPEN volume intermix : ECC group

(1) Typical LDEV intermix configuration

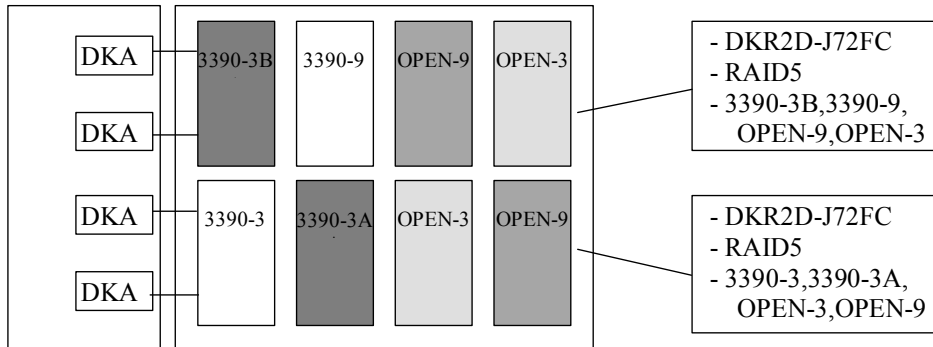


Fig. 3.6.2-1 Typical LDEV intermix configuration example

(2) Typical RAID intermix configuration

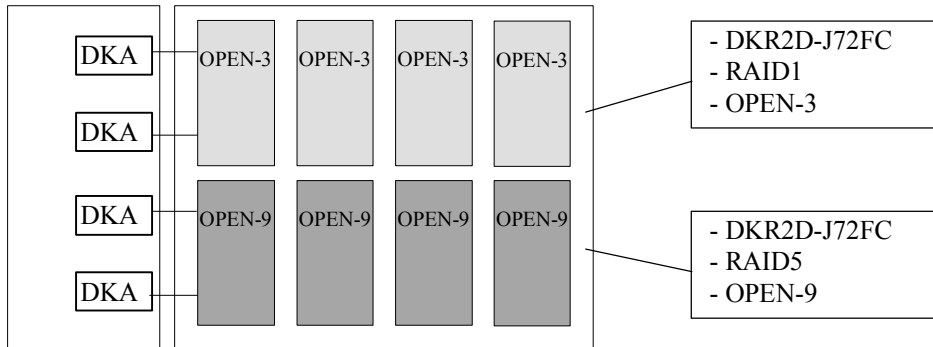


Fig. 3.6.2-2 Typical RAID intermix configuration example

(3) Typical PDEV intermix configuration

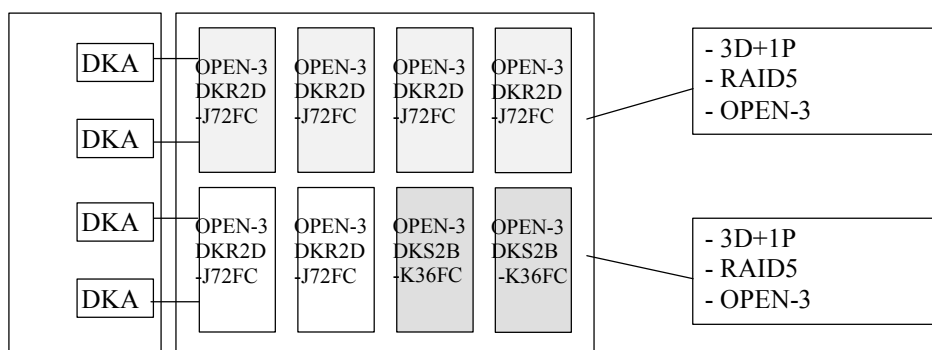


Fig. 3.6.2-3 Typical PDEV intermix configuration example

3.6.3 HMDE Volume Configuration

(1) Typical volume configuration for HMDE

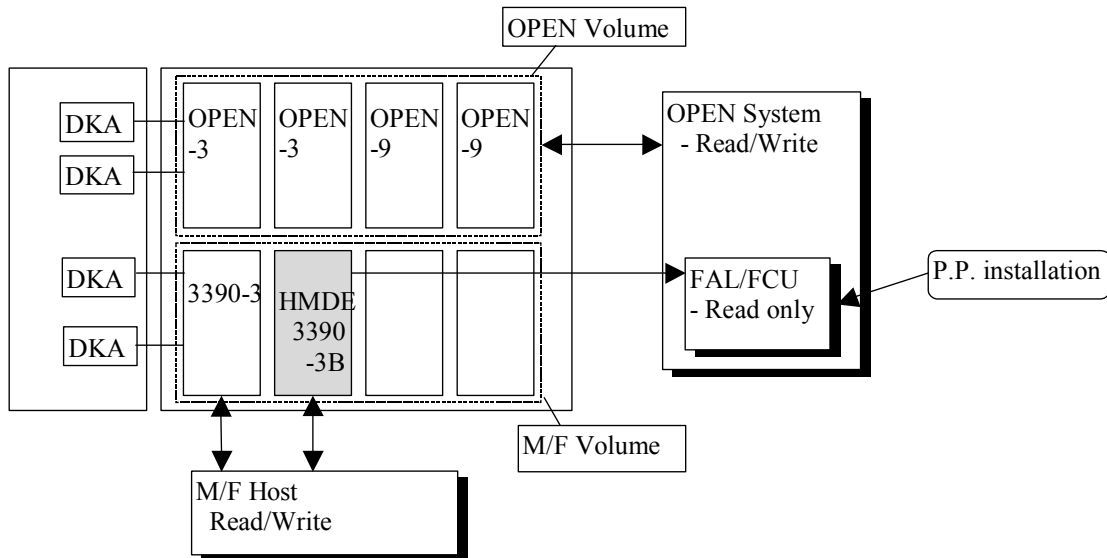


Fig. 3.6.3-1 Typical volume configuration for HMDE

(2) Valid volume configuration

The configuration shown in Fig. 3.6.3-2 is valid.

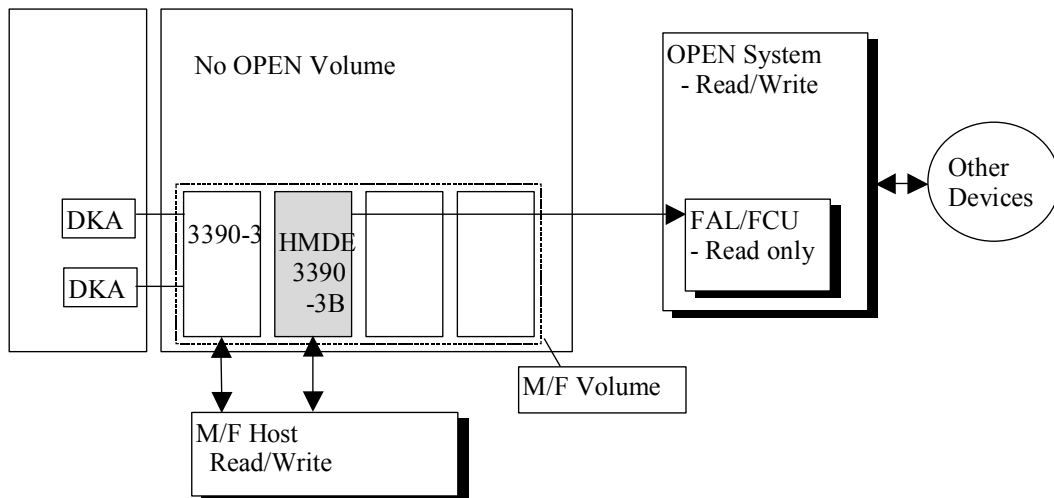


Fig. 3.6.3-2 Valid volume configuration for HMDE

3.6.4 HMBR Volume Configuration

(1) Typical volume configuration example for HMBR

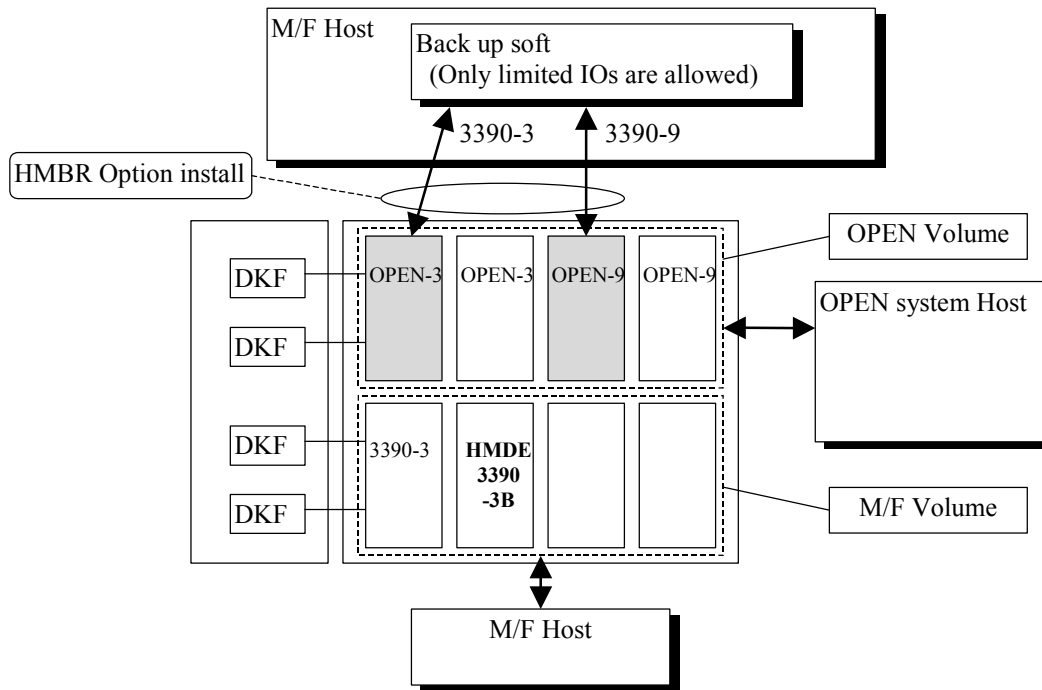


Fig. 3.6.4-1 Typical volume configuration for HMBR

(2) Valid volume configuration example for HMBR

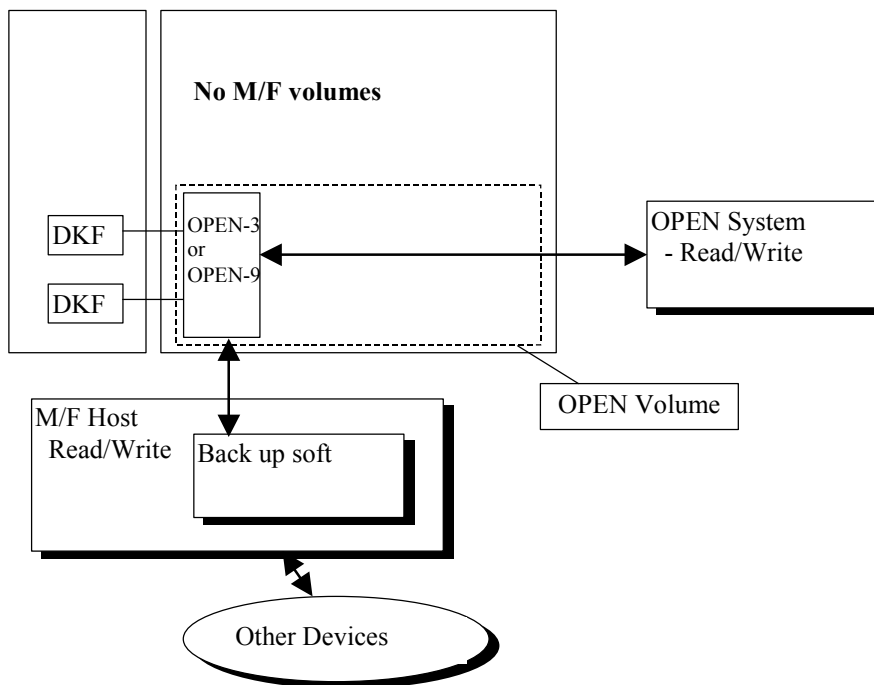


Fig. 3.6.4-1 Valid volume configuration for HMBR

3.7 Open Volume Setting

3.7.1 Setting of open volume space

The procedure of open volume setting is performed either by using the SVP or Remote Console function (optional feature).

3.7.2 LUN setting

- *LUN setting:*

- Select the CHF, Fibre port and the LUN, and select the CU# and LDEV# to be assigned to the LUN.
 - Repeat the above procedure as needed.
- The MCU port (Initiator port) of TrueCopy function does not support this setting.

Note 1: It is possible to refer to the contents which is already set on the SVP display.

Note 2: The above setting can be done during on-line.

Note 3: Duplicated access paths' setting from the different hosts to the same LDEV is allowed. This will provide a means to share the same volume among host computers. It is, however, the host responsibility to manage an exclusive control on the shared volume.


Refer to the INSTALLATION SECTION for more detailed procedures.

3.7.3 OPEN-V Setting

OPEN-V is CVS volume basis. The default capacity of OPEN-V is nearly equals to the size of the parity group. So it depends on RAID level and DKU(HDD) type.

In case of conform to LU configuration over 64.4GB of RAID450 which is set as OPEN-V*n automatically within a parity group, both CVS and LUSE setting is necessary for RAID500.

The following is the OPEN-V definition guidelines for the customizing capacity.

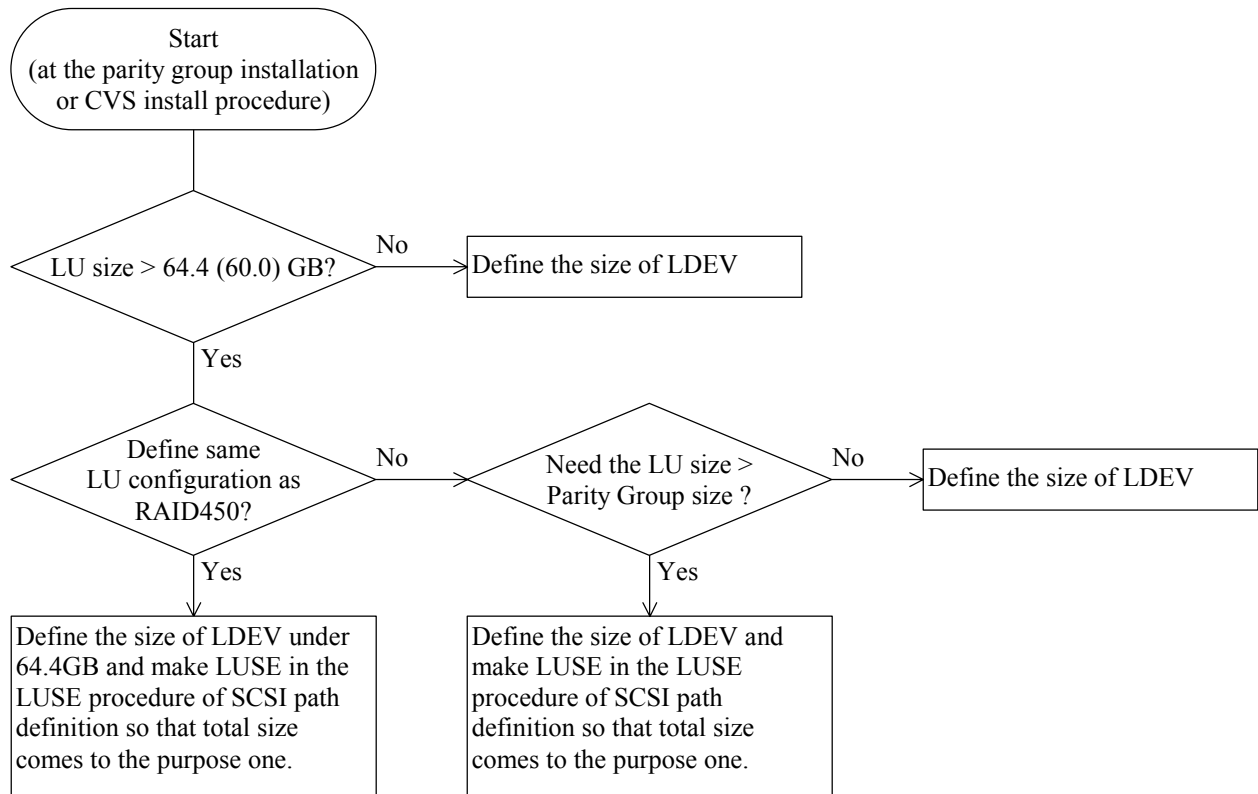

3.8 Host mode setting

It is necessary to set Host Mode by using SVP if you want to change a host system.
The meanings of each mode are follows.

*****HDS RAID Controller Models*****

MODE 00 : Standard mode (Linux)
 MODE 01 : VMWare host mode
 MODE 03 : HP-UX host mode
 MODE 05 : OpenVMS host mode
 MODE 07 : Tru64 host mode
 MODE 09 : Solaris host mode
 MODE 0A : NetWare host mode
 MODE 0C : Windows 2000/2003
 MODE 0F : AIX host mode
 MODE 21 : VMWare host mode (Online LUSE)
 MODE 2C : Windows 2000/2003 host mode (Online LUSE)
 MODE 4C : UVM connection host mode *1
 others : Reserved

*****HP RAID Controller Models*****

MODE 00 : Standard mode (Linux)
 MODE 01 : VMWare host mode
 MODE 05 : OpenVMS host mode
 MODE 07 : Tru64 host mode
 MODE 08 : HP-UX host mode
 MODE 09 : Solaris host mode
 MODE 0A : NetWare host mode
 MODE 0C : Windows 2000/2003, NonStop OS
 MODE 0F : AIX host mode
 MODE 21 : VMWare host mode (Online LUSE)
 MODE 2C : Windows 2000/2003 host mode (Online LUSE), NonStop OS (Online LUSE)
 MODE 4C : UVM connection host mode *1
 others : Reserved

Please set the HOST MODE OPTION if required.

Please see “LUN Management” ([INST05-950 to INST05-1450](#)). Also see the operational manual for more detailed information about the alternate link and HA software.

*1: If setting this mode to ON when DKC615I is being used as an External Storage, the data of the MF-VOL (Multi-platform VOL emulation only) in the DKC615I can be succeeded.

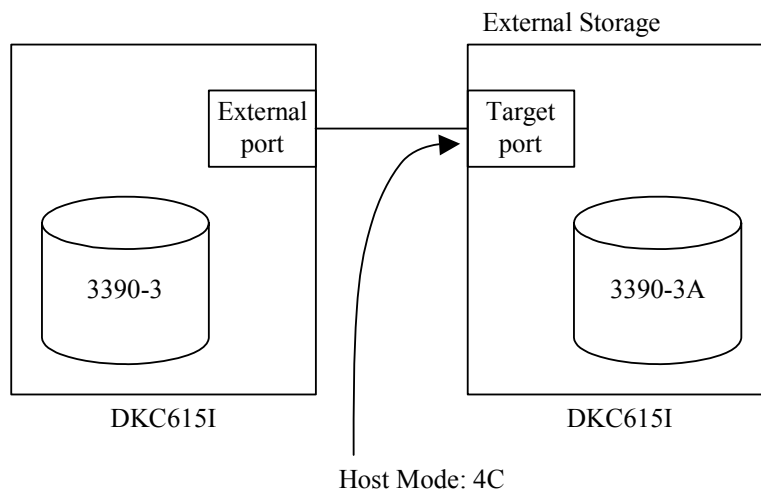


Fig. 3.8-1 Typical system configuration in MODE 4C

4. Control Function

4.1 Cache Usage

The DKC has two independent areas of non-volatile cache memory for the mainframe volumes. This mechanism also commonly applies to the OPEN volumes without any distinction. Thus, the high reliability and high performance realized by the following features can be commonly applied to the OPEN volumes.

- ① Cache data management by LRU control
Data that has been read out is stored into the cache and managed under LRU control. For upright transaction processing, therefore, a high cache hit ratio can be expected and a data-writing time is reduced for improved system throughput.
- ② Adoption of DFW (DASD Fast Write)
At the same time that the normal write command writes data into the cache, it reports the end of the write operations to a host. Data writing to disk is asynchronous with host access. The host, therefore, can execute the next process without waiting for the end of data writing to disk.
- ③ Write data duplexing
The same write data is stored into the two areas of a cache provided in the DKC. Thus, loss of DFW data can be avoided even one failure occurs in the cache.
- ④ Nonvolatile cache
The cache in the DKC is non-volatile by battery backup. Once data has been written into the cache, its non-volatility will maintain the data, even if a power interruption occurs. Under a standard system configuration having a fully charged battery pack, data is guaranteed for at least 36 hours

4.2 SCSI Command Multi-processing

4.2.1 Command Tag Queuing

The Command Tag Queuing function defined in the SCSI specification is supported. This function allows each Fibre port on CHF to accept multiple SCSI commands even for the same LUN. The DKC can process those queued commands in parallel because a LUN is composed of multiple physical disk drives.

The MCU port (Initiator port) of TrueCopy function can not support this function because it does not support a connection with a host computer.

4.2.2 Concurrent data transfer

Four Fibre ports on a CHF can perform the host I/Os and data transfer with maximum 4 Gbps transfer concurrently.

This is also applied among different CHFs.

The MCU port (Initiator port) of TrueCopy function can not support this function because it does not support a connection with a host computer.

5. SCSI Commands

5.1 Fibre

The DASD commands defined under the SCSI-3 standards and those supported by the DKC are listed in Table 5.1-1.

Table 5.1-1 SCSI-3 DASD commands and DKC-supported commands

Group	Op Code	Name of Command	Type	○:Supported	Remarks
0 (00 _H -1F _H)	00 _H	Test Unit Ready	CTL/SNS	○	
	01 _H	Rezero Unit	CTL/SNS	Nop	
	03 _H	Request Sense	CTL/SNS	○	
	04 _H	Format Unit	DIAG	Nop	
	07 _H	Reassign Blocks	DIAG	○	For RAID5, Nop
	08 _H	Read (6)	RD/WR	○	
	0A _H	Write (6)	RD/WR	○	
	0B _H	Seek (6)	CTL/SNS	Nop	
	12 _H	Inquiry	CTL/SNS	○	
	15 _H	Mode Select (6)	CTL/SNS	○	
	16 _H	Reserve	CTL/SNS	○	
	17 _H	Release	CTL/SNS	○	
	18 _H	Copy	—	—	
	1A _H	Mode Sense (6)	CTL/SNS	○	
	1B _H	Start/Stop Unit	CTL/SNS	Nop	
	1C _H	Receive Diagnostic Results	DIAG	—	
	1D _H	Send Diagnostic	DIAG	Nop	Supported only for self-test.
	1E _H	Prevent Allow Medium Removal	—	—	
	1F _H	Reserved code	—	—	
	Other	Vendor-unique	—	—	
1 (20 _H -3F _H)	25 _H	Read Capacity (10)	CTL/SNS	○	
	28 _H	Read (10)	RD/WR	○	
	2A _H	Write (10)	RD/WR	○	
	2B _H	Seek (10)	CTL/SNS	Nop	
	2E _H	Write And Verify (10)	RD/WR	○	Supported only Write for DKC615I.
	2F _H	Verify (10)	RD/WR	Nop	
	30 _H	Search Data High	—	—	
	31 _H	Search Data Equal	—	—	
	32 _H	Search Data Low	—	—	
	33 _H	Set Limits (10)	—	—	
	34 _H	Pre-Fetch (10)	—	—	
	35 _H	Synchronize Cache (10)	CTL/SNS	Nop	
	36 _H	Lock-Unlock Cache (10)	—	—	
	37 _H	Read Defect Data (10)	DIAG	○	No defect always reported.
	38 _H	Reserved code	—	—	
	39 _H	Compare	—	—	

Table 5.1-1 SCSI-2 DASD commands and DKC-supported commands (Continued)

Group	Op Code	Name of Command	Type	○:Supported	Remarks
1 (20 _H -3F _H)	3A _H	Copy And Verify	—	—	
	3B _H	Write Buffer	DIAG	○	
	3C _H	Read Buffer	DIAG	○	
	3D _H	Reserved code	—	—	
	3E _H	Read Long	—	—	
	3F _H	Write Long	—	—	
	Other	Vendor-unique	—	—	
2 (40 _H -5F _H)	40 _H	Change Definition	—	—	
	41 _H	Write Same	—	—	
	4C _H	Log Select	—	—	
	4D _H	Log Sense	—	—	
	50 _H	XD Write (10)	—	—	
	51 _H	XP Write (10)	—	—	
	52 _H	XD Read (10)	—	—	
	53 _H	XD Write Read (10)	—	—	
	55 _H	Mode Select (10)	CTL/SNS	○	
	56 _H	Reserve (10)	CTL/SNS	○	
	57 _H	Release (10)	CTL/SNS	○	
	5A _H	Mode Sense (10)	CTL/SNS	○	
	5E _H	Persistent Reserve IN	CTL/SNS	○	
	5F _H	Persistent Reserve OUT	CTL/SNS	○	
	Other	Reserved code	—	—	
3 (60 _H -7F _H)	7F _H /0001	Rebuild (32)	—	—	
	7F _H /0002	Regenerate (32)	—	—	
	7F _H /0003	XD Read (32)	—	—	
	7F _H /0004	XD Write (32)	—	—	
	7F _H /0005	XD Write Extend (32)	—	—	
	7F _H /0006	XD Write (32)	—	—	
	7F _H /0007	XD Write Read (32)	—	—	
	7F _H /0008	XD Write Extend (64)	—	—	
	Other	Reserved code	—	—	
4 (80 _H -9F _H)	80 _H	XD Write Extend (16)	—	—	
	81 _H	Rebuild (16)	—	—	
	82 _H	Regenerate (16)	—	—	
	83 _H	Extended Copy	CTL/SNS	○	
	84 _H	Receive Copy Result	CTL/SNS	○	
	85 _H	Access Control IN	—	—	
	86 _H	Access Control OUT	—	—	
	88 _H	Read (16)	RD/WR	○	
	8A _H	Write (16)	RD/WR	○	
	8C _H	Read Attributes	—	—	
	8D _H	Write Attributes	—	—	

Table 5.1-1 SCSI-2 DASD commands and DKC-supported commands (Continued)

Group	Op Code	Name of Command	Type	○:Supported	Remarks
4 (80 _H -9F _H)	8E _H	Write And Verify (16)	RD/WR	○	
	8F _H	Verify (16)	RD/WR	Nop	
	90 _H	Pre-Fetch (16)	—	—	
	91 _H	Synchronized Cache (16)	CTL/SNS	Nop	
	92 _H	Lock-Unlock Cache (16)	—	—	
	93 _H	Write Same (16)	—	—	
	9E/10 _H	Read Capacity (16)	CTL/SNS	○	
	Other	Vendor-unique	—	—	
5 (A0 _H -BF _H)	A0 _H	Report LUN	CTL/SNS	○	
	A3 _H /xx _H	Maintenance IN	CTL/SNS	—	
	A3 _H /05 _H	Report Device Identifier	CTL/SNS	○	
	A3 _H /0A _H	Report Target Port Groups	CTL/SNS	—	
	A3 _H /0B _H	Report Aliases	CTL/SNS	—	
	A3 _H /0C _H	Report Supported Operation Codes	CTL/SNS	—	
	A3 _H /0D _H	Report Supported Task Management Functions	CTL/SNS	—	
	A3 _H /0E _H	Report Priority	CTL/SNS	—	
	A3 _H /0F _H	Report Timestamp	CTL/SNS	—	
	A4 _H /XX _H	Maintenance OUT	CTL/SNS	—	
	A4 _H /06 _H	Set Device Identifier	CTL/SNS	—	
	A4 _H /0A _H	Set Target Port Groups	CTL/SNS	○	
	A4 _H /0B _H	Change Aliases	CTL/SNS	—	
	A4 _H /0E _H	Set Priority	CTL/SNS	—	
	A4 _H /0F _H	Set Timestamp	CTL/SNS	—	
	A7 _H	Move Medium Attached	—	—	
	A8 _H	Read (12)	RD/WR	○	
	AA _H	Write (12)	RD/WR	○	
	AE _H	Write And Verify (12)	RD/WR	○	However, only the Write operation.
	AF _H	Verify (12)	RD/WR	Nop	
	B3 _H	Set Limits (12)	—	—	
	B4 _H	Read Element Status Attached	—	—	
	B7 _H	Read Defect Data (12)	CTL/SNS	○	However, it always reports on Defect nothing.
	BA _H	Redundancy Group IN	—	—	
	BB _H	Redundancy Group OUT	—	—	
	BC _H	Spare IN	—	—	
	BD _H	Spare OUT	—	—	
	BE _H	Volume Set IN	—	—	
	BF _H	Volume Set OUT	—	—	
	Other	Reserved code	—	—	

Table 5.1-1 SCSI-2 DASD commands and DKC-supported commands (Continued)

Group	Op Code	Name of Command	Type	○:Supported	Remarks
6 (C0 _H -DF _H)	C0 _H ~D0 _H	Vendor-unique	—	—	
7 (E0 _H -FF _H)	E8 _H	Read With Skip Mask (IBM-unique)	CTL/SNS	—	
	EA _H	Write With Skip Mask (IBM-unique)	CTL/SNS	—	
	Other	Vendor-unique	—	—	

6. HMDE (Hitachi Multiplatform Data Exchange)

6.1 Overview

The Hitachi Multiplatform Data Exchange (HMDE) optional feature provides a function to enable the SAM files of the mainframe to be accessed by the open system host by executing the File Access Library (FAL) program or File Conversion Utility (FCU) program installed in the open system host. Accessible frame files are limited to the SAM files only.

The FCU program has code conversion function between EBCDIC and ASCII.

The FAL has disclosed API and users can incorporate the FAL program directly into a user program.

This optional feature is supplied as a program product (P.P.) that consists of the following programs:

- (1) File Access Library program
 - C language functions and a Header file for incorporation into a user program
- (2) File Conversion Utility program
 - An execution-format utility program that contains the access library

The program product is supplied separately for each platform of the open system. Table 6.1-1 lists platforms supported for using the HMDE.

Table 6.1-1 Platforms supported

#	Platform supported	OS	Window System
1	SUN	Solaris	Motif 1.2
2	HP	HP-UX, Tru64	Motif 1.2
3	IBM	AIX	Motif 1.2
4	(Not specified)	WindowsNT4.0/Windows2000 Windows2003	MFC
5	(Not specified)	Linux	MFC

6.2 Installation

(1) Installation of P.P.

For the method of installing the P.P. (containing FAL and FCU) and its detailed specifications, refer to the manual attached to the P.P.

(2) HMDE volume setting

Volumes whose emulation type is 3390-3A, 3390-3B, 3390-3C, 3390-9A, 3390-9B, 3390-9C, 3390-LA, 3390-LB, 3390-LC, 3390-MA, 3390-MB, 3390-MC, 3380-3A, 3380-3B and 3380-3C can be used for the HMDE operations. In addition to being accessible as 3390-3/9/L/M type volumes from the mainframe host in the same manner as before, the 3390-3B/9B/LB/MB type volumes permit read-only access from the open system host.

The 3390-3A/9A/LA/MA type volumes can be accessible as 3390-3/9/L/M from the mainframe host and permit a read/write access from the open system host. The 3390-3C/9C/LC/MC can be read only accessible as 3390-3/9/L/M from mainframe host and permit a read/write access from the open system host. The 3390-3C/9C/LC/MC permit creating and updating of VTOC.

The 3380-3B type volumes permit read-only access from the open system host. The 3380-3A type volumes can be accessible as 3380-3 from the mainframe host and permit a read/write access from the open system host. The 3380-3C can be read only accessible as 3380-3 from mainframe host and permit a read/write access from the open system host. The 3380-3C permit creating and updating of VTOC.

Table 6.2-1 HMDE volume specifications

#	Volume attribute	Emulation Type	Access right		Remarks
			Mainframe	Open system	
1	Mainframe volume	3390-3A/9A/LA/MA	R/W	R/W	HMDE volume
2		3390-3B/9B/LB/MB	R/W	R	HMDE volume
3		3390-3C/9C/LC/MC	R	R/W	HMDE volume
4		3380-3A	R/W	R/W	HMDE volume
5		3380-3B	R/W	R	HMDE volume
6		3380-3C	R	R/W	HMDE volume
7	Open volume	OPEN-3	(Backup/Restore)	R/W	HMDE volume
8		OPEN-E		R/W	HMDE volume
9		OPEN-9	(Backup/Restore)	R/W	HMDE volume
10		OPEN-L		R/W	HMDE volume
11		OPEN-8	(Backup/Restore)	R/W	HMDE volume
12		OPEN-V		R/W	HMDE volume

The 3390-3A, 3390-3B, 3390-3C, 3390-9A, 3390-9B, 3390-9C, 3390-LA, 3390-LB, 3390-LC, 3390-MA, 3390-MB, 3390-MC, 3380-3A, 3380-3B and 3380-3C type HMDE volumes can be set during initial installation or LDEV addition. To use volumes used by the mainframe and/or OPEN as the HMDE volumes, they must be set as the HMDE volumes by removing the corresponding ECC group once and then adding them again.

This procedure is the same as the ordinary one for setting emulation type of another drive.

The drive emulation type can be changed between 3390-3 and 3390-3A and 3390-3B and 3390-3C by change emulation operation. The drive emulation type can be changed between 3390-9 and 3390-9A and 3390-9B and 3390-9C by change emulation operation. The drive emulation type can be changed between 3390-L and 3390-LA and 3390-LB and 3390-LC by change emulation operation. The drive emulation type can be changed between 3390-M and 3390-MA and 3390-MB and 3390-MC by change emulation operation. The drive emulation type can be changed between 3380-3 and 3380-3A and 3380-3B and 3380-3C by change emulation operation.

(3) Setting from the open system host

- To access the HMDE volumes from the open system host, it is necessary to define the connection to the open system host and to set an OPEN path. The method of defining the OPEN path for the open system host is the same as that of the ordinary OPEN path definition with the SVP.
- Refer to the manual attached to the P.P. for the method of setting the open system host to enable it to access the HMDE volumes. This setting operation requires labeling of the HMDE volumes, for example.

6.3 Notes on Use

A like the ordinary mainframe volumes, the 3390-3B, 3390-3A, 3390-9B, 3390-9A, 3390-LB, 3390-LA, 3390-MB, 3390-MA, 3380-3B and 3380-3A type HMDE volumes can be accessed from the mainframe. The 3390-3C, 3390-9C, 3390-LC, 3390-MC and 3380-3C type HMDE volumes can be read only accessed any area except VTOC area from the mainframe.

If the OPEN path are not defined for 3390-3A/B, 3390-9A/B, 3390-LA/B, 3390-MA/B or 3380-3A/B, the volume can not be accessed from the open system host.

Sun/Solaris can not use 3390-MA, 3390-MB and 3390-MC.

7. HMBR (Hitachi Multiplatform Backup/Restore)

7.1 Overview

The Hitachi Multiplatform Backup/Restore (HMBR) optional feature allows an open system volume on the DKC disk subsystem to be read from the mainframe host by a volume unit as backup data. It also allows the backup data to be restoreFd from the mainframe host to the open system volume.

Any special additional software packages are not required to perform these functions on both mainframe host and open system host. The DKC disk subsystem can convert the different data block format between open system (fixed block length data) and mainframe system (CKD format data).

The HMBR has the following features:

- (1) Enabling the existing backup/restore programs such as “DFHSM and DFDSS” or “DFSMSHsm and DFSMSdss” in the mainframe to collect and restore the backup of open system data under the DKC Multiplatform disk subsystem in a unit of Logical Unit volume.
- (2) Performing the backup and restore operation with high data transfer rate of ESCON 17 MB/s between mainframe host and the DKC disk subsystem. Performing the backup and restore operation with high data transfer rate of FICON 100/200/400 MB/s between mainframe host and the DKC disk subsystem.
- (3) Providing the open systems with powerful backup functions being used on mainframe systems, such as backup file generation management, primary/secondary duplication management, and automatic backup control.
- (4) Offering various backup media to the system, such as disk drives, magnetic tapes, or magnetic tape libraries.

7.2 System Configuration

A system configuration example and functional overview are shown in the Fig. 7.2-1.

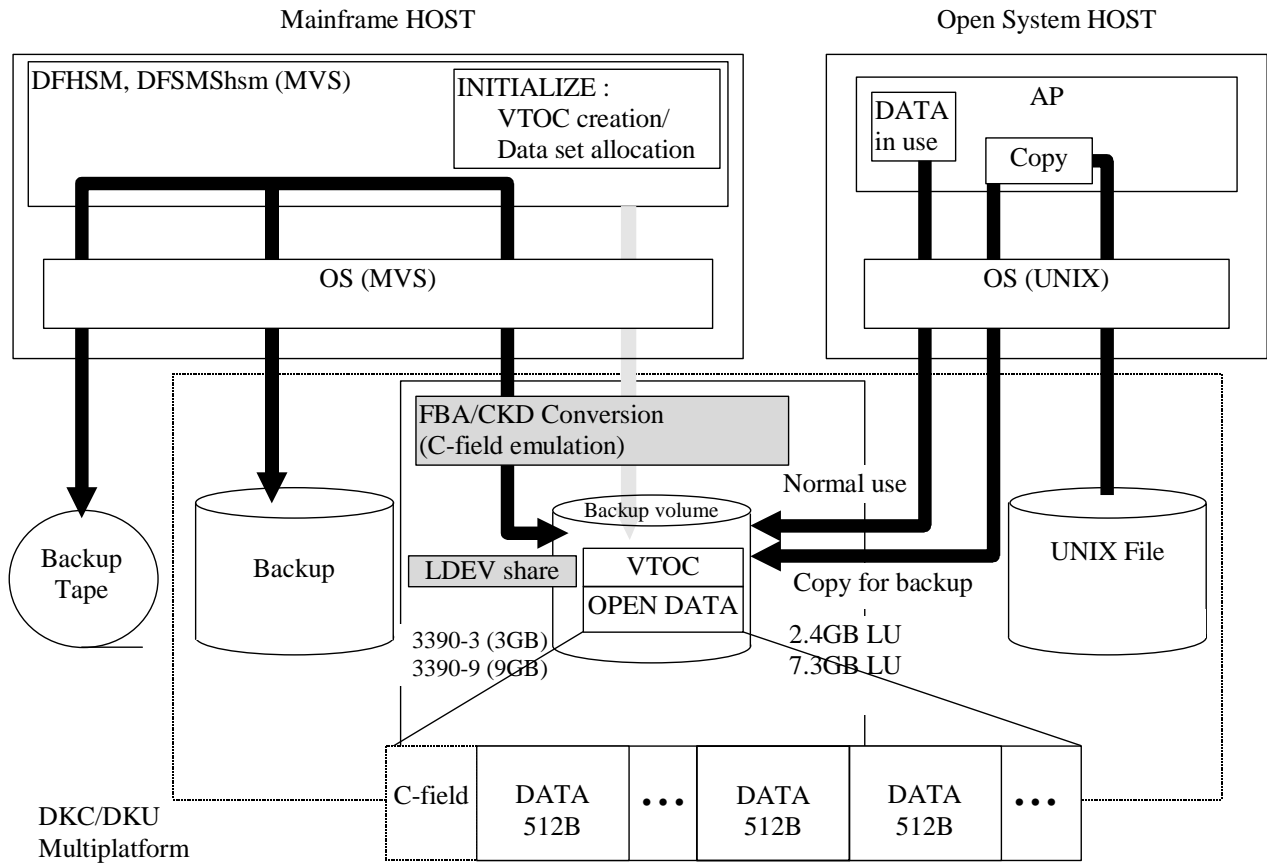


Fig. 7.2-1 System configuration example

7.3 Basic Specification

The basic specification of HMBR is shown in the Table 7.3-1.

Table 7.3-1 Basic specification of HMBR

No	Item		Specification		Remarks
1	Attached system	Mainframe	MVS/ESA		
2		Open system	SUN (Solaris 2.6) or later HP (HP-UX 10.x) or later IBM (AIX 4.2) or later Windows2000/Windows2003		
3	Backup software	Mainframe	DFHSM, DFDSS DFSMSHsm, DFSMSdss		
4	Device type	Mainframe	3390-3	3390-9	
5		Open system	OPEN-3 (LUN=2.4GB)	OPEN-8/9 (LUN=7.3GB)	
6	Maximum number of volumes for backup/restore		- As many Logical Units as specified for OPEN-3/9 for Open system.		
7	Setup for backup volume		- By installing HMBR option (on SVP), all Logical Units defined as OPEN-3/8/9 can be accessed from MVS		
8	Preparation before taking backup	VSN, VTOC creation	- ICKDSF (INIT)		
9		Dataset allocation	- IEFBR14		
10	Backup method		- Volume full tracks dump by using DFDSS and DFSMSdss.		
11	VTOC format		- Standard VTOC. Note: Do not use SMS for backup volumes since Index VTOC is used in SMS.		
12	VTOC allocation		- Cylinder 0, Head 1 to 14 (fixed location)		
13	Data set allocated	# of data sets	- One/VOL	- Three/VOL	
14		Extent	- Cylinder 1, Head 0 to User cylinder MAX.		
15	Restrictions for mainframe side utility programs		- Other utility programs than listed above are not allowed. - For Write type commands, other than those used by the above listed utility programs are rejected. (Only FORMAT WR with 16KB data length is allowed for write type command.) Read or Control type commands can be used. - Verify option is not allowed.		

7.4 Backup Volume Specification

(1) Setup for Backup Volume

Step-1: Set system option mode 109 by SVP.

Step-2: By setting the system option mode 109, all the Logical Units (OPEN-3, OPEN-8, and OPEN-9 type), already installed or newly installed, will be ready to be used for backup/restore from the mainframe host.

Note-1 Immediately after the system option mode 109 is de-installed, an access from the mainframe to OPEN-3, OPEN-8 or OPEN-9 will be rejected.

Note-2 The Logical Unit data already stored, which has been used before the installation of system option mode 109, can be used continuously for its original use and/or for backup/restore purpose.

(2) Access to Backup Volume

The specification applied to accessing the backup volume is shown in the Table 7.4-1.

Table 7.4-1 Specification of accessing the backup volume

No	Items	Specification
1	Volume type	- OPEN-3 (2.4GB), OPEN-8 (7.3GB), OPEN-9 (7.3GB)
2	Access from Open system	- No restriction.
3	Access from mainframe host	- Possible to Read/Write as 3390-3 for OPEN-3 and as 3390-9 for OPEN-8/9. - For Write type commands, only the following command is allowed: - Format Write with data length of 16 KB. - Other write type commands are rejected.

7.5 Precautions

(1) Preparations

<System generation>

The volume for HMBR is recognized as the 3390-3 or 3390-9 from the MVS system. Specify UNIT = 3390 using the IODEVICE macro when incorporating the volume into the MVS system.

This volume can be backed up or restored using only DFDSS from the MVS system. Access from other programs is rejected.

<Volume initialization>

Use the system utility to initialize the volume from the mainframe system.

You must create VTOC in Cylinder 0. This initialization works VSN be written in an area other than the area in the volume where the open system data is written, which does not damage the open system data.

<Dataset allocation>

After volume initialization, allocate a single dataset (for OPEN-3; three datasets for OPEN-9) to the volume from the mainframe system. The extent of the dataset is from cylinder 1, head 0 to the user cylinder end.

When executing backup or restoration of the open system data by using HMBR, the backup/restoration utility in the mainframe specifies VSN/DSN of the above volume and dataset for execution. Thus you can facilitate backup or restoration by assigning to VSN and DSN names related to the device file names in the open system of the volume (LU).

(2) Unmounting the volume

When obtaining backup by using HMBR, terminate the open system processing in advance and unmount the volume in order to assure consistency of the backup data. For backup of the volume connected to the AIX system, the varyoffvg command must be executed. If the backup utility in the mainframe is activated without doing this, the backup job may be halted awaiting operator intervention or the job may contain inconsistent, incomplete backup data.

(3) Volume exclusion

Though the volume as target for HMBR is an open volume and stores data in the open system, it also has VSN and can be accessed from the mainframe. Normally it is recommended to keep the volume off-line from the mainframe to prevent a data write from the mainframe that will damage the open system data. During backup or restoration, establish locks to prevent access to the HMBR-target volume (LU) from the open system.

(4) Backup unit

Unit of backup by HMBR is LU. Note that restoring backup data for recovery from damaged files will recover the state when backup was obtained, including other files (files which have not been damaged) within the same LU.

(6) Backup of the volume managed by LVM

Unit of data which can be backed up/restored by HMBR is the physical volume (LU) only. However, because the logical volume may be mapped over more than one physical volume, the consistency of the logical volume data is not assured by LU-based backup. When using HMBR in a system managed by such LVM, you must back up all physical volumes (LUs) comprising volume groups in the same occasion. This requires operational expertise as the following describes:

① **Study of physical/logical mapping (OPEN system)**

Use the commands of the OPEN system to check correspondence between the logical volume group and physical volume group (LU) for the backup target volume.

② **Creating the job control statement (JCL) (mainframe)**

From all physical volumes (LUs) comprising the backup-target volume group obtained in step ①, list the mainframe VSNs and DSNs corresponding to the device file names. When executing backup using the batch job format, create the JCL for executing the backup utility specifying VSNs and DSNs listed above.

③ **Unmounting the target logical volume**

Unmount all logical volumes in the backup-target volume group.

④ **Executing the mainframe backup utility**

Execute the mainframe backup utility to obtain backup of VSNs/DSNs corresponding to all physical volumes (LUs) comprising the backup-target volume group.

⑤ **Precautions**

In the above volume-group-based backup, all logical volumes in the volume group are backed up in the same occasion. Note that restoration is made on a per volume group basis and the entire volume group returns to the state when backup was obtained. When logical-volume-based backup or restoration is required, a volume group must contain only one logical volume.

When modification to the configuration of the logical volume or volume group is made (such as addition, deletion or splitting of logical volumes in a volume group, or addition of a new physical volume in a volume group), volume-group-based backup must be executed using the new configuration. If this is skipped and backup data obtained via HMBR is restored, only data entity is restored to the old LV/LG configuration. This may disrupt the consistency with the LVM management information stored separately from the data entity, causing damage to data.

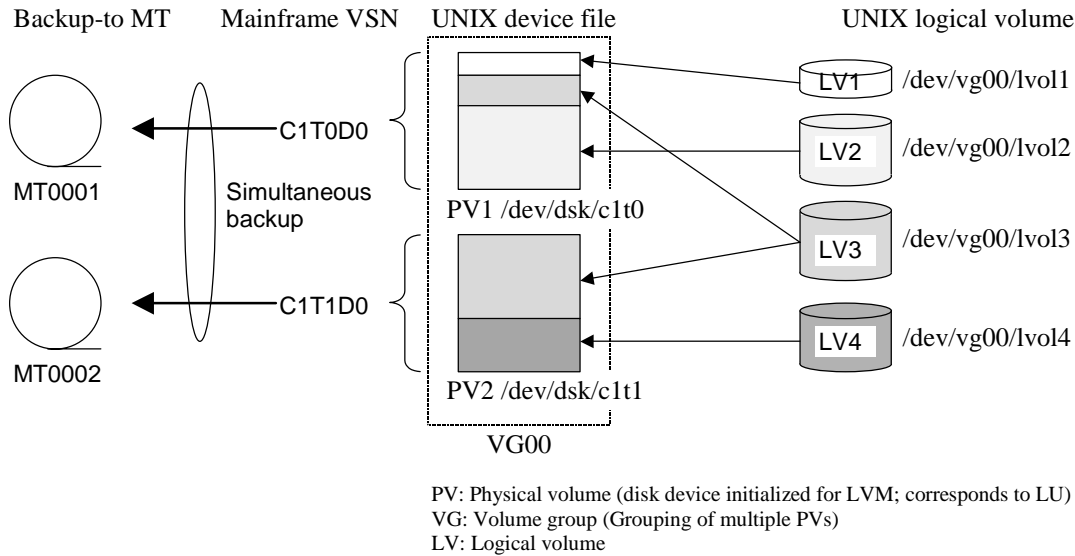


Fig. 7.5-1 Backup of Volumes managed by LVM

(7) Backup of database

To backup a database, first terminate its operation to place it off-line before making a backup. You must backup of all LUs where data files are stored at the same occasion. Follow the required backup method for each database management system to determine whether or not backup is required and the backup method for other files comprising the database (such as control file and log file). Follow the restoration procedure or approach for each database management system to determine when a log file must be used to restore the database to the state just before fault, or the synchronicity of the control file and data file must be restored.

(8) Backup of open volume

When obtaining backup by using HMBR, do not use verify option of mainframe utility.

(9) A method of the backup and restore operations for Windows system data is shown in the following.

<Backup>

- Delete a drive letter in the Logical Units by Disk Administrator.
- Re-allocate a drive letter to the Logical Units by Disk Administrator.
- Backup Windows system data by mainframe host.

<Restore>

- Delete a drive letter to the Logical Units by Disk Administrator.
 - Restore it from mainframe host to the Logical Units.
- Re-allocate drive letter to the Logical Units by Disk Administrator.

8. HA Software Linkage Configuration in a Cluster Server Environment

When this subsystem is linked to High-Availability software (HA software) which implements dual-system operation for improved total system fault-tolerance and availability, the open system side can also achieve higher reliability on the system scale.

8.1 Example of System Configurations

(1) Hot-standby system configuration

The HA software minimizes system down time in the event of hardware or software failures and allows processing to be restarted or continued. The basic system takes a hot-standby (asymmetric) configuration, in which, as shown in the figure below, two hosts (an active host and a standby host) are connected via a monitoring communication line. In the hot-standby configuration, a complete dual system can be built by connecting the Fibre cables of the active and standby hosts to different CHF Fibre ports.

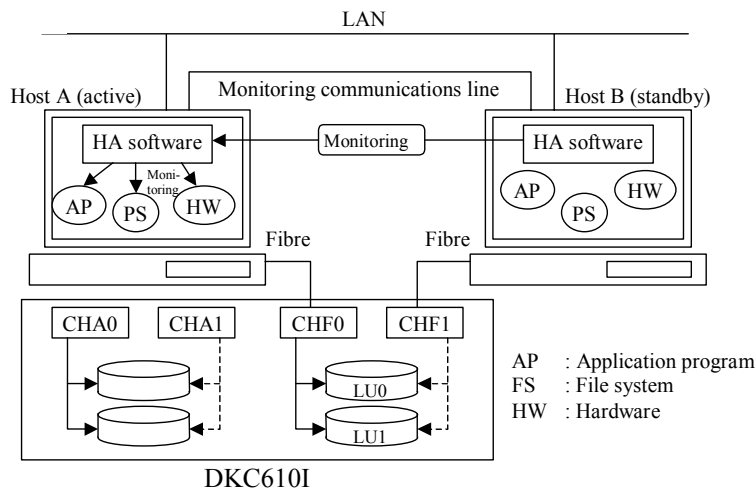



Fig. 8.1-1 Hot-standby configuration

- The HA software under the hot-standby configuration operates in the following sequence:
 - a. The HA software within the active host monitors the operational status of own system by using a monitoring agent and sends the results to the standby host through the monitoring communication line (this process is referred to as “heart beat transmission”). The HA software within the standby host monitors the operational status of the active host based on the received information.
 - b. If an error message is received from the active host or no message is received, the HA software of the standby host judges that a failure has occurred in the active host. As a result, it transfers management of the IP addresses, disks, and other common resources, to the standby host (this process is referred to as “fail-over”).
 - c. The HA software starts the application program concerned within the standby host to take over the processing on behalf of the active host.

- Use of the HA software allows a processing request from a client to be taken over. In the case of some specific application programs, however, it appears to the client as if the host that was processing the task has been rebooted due to the host switching. To ensure continued processing, therefore, a login to the application program within the host or sending of the processing request may need to be executed once again.

(2) Mutual standby system configuration


In addition to the hot-standby configuration described above, a mutual standby (symmetric) configuration can be used to allow two or more hosts to monitor each other. Since this subsystem has eight Fibre ports, it can, in particular, be applied to a large-scale cluster environment in which more than two hosts exist.

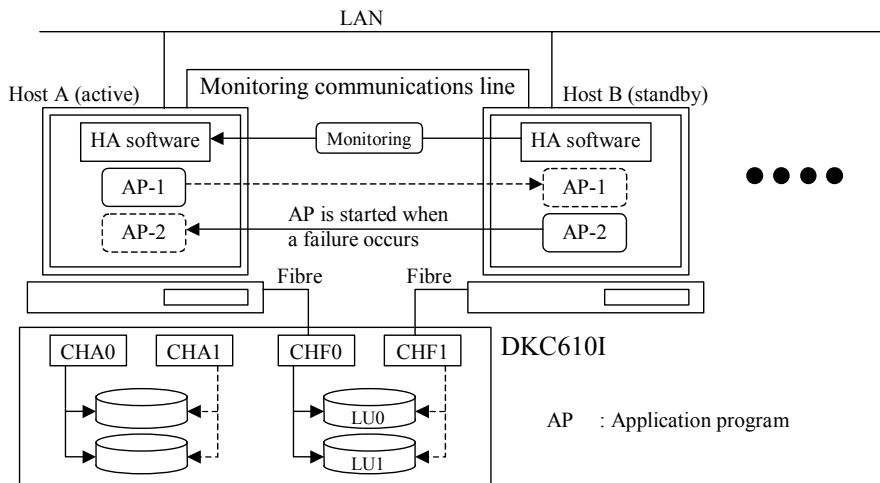

- In the mutual standby configuration, since both hosts operate as the active hosts, no resources exist that become unnecessary during normal processing. On the other hand, however, during a backup operation the disadvantages are caused that performance deteriorated and that the software configuration becomes complex.
- This subsystem is scheduled to support SUN Microsystems SUN CLUSTER, VERITAS Software Cluster server, Hewlett-Packard MC/ServiceGuard, and IBM HACMP and so on.

8.2 Configuration Using Host Path Switching Function

When the host is interlocked with the HA software and has a path switching capability, if a failure occurs in the Fibre adapter, Fibre cable, or DKC (Fibre ports and the CHF) that is being used, automatic path switching will take place as shown below.

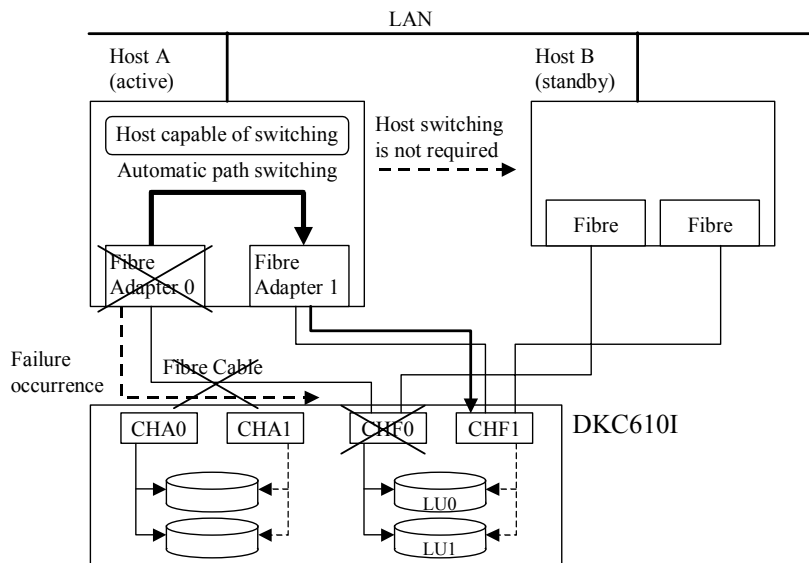

The path switching function enables processing to be continued without host switching in the event of a failure in the Fibre adapter, Fibre cable, array controller, or other components.

9. HORC (Hitachi Open Remote Copy)

9.1 Overview

The Hitachi Open Remote Copy function can remotely duplicate data (volumes) under the control of the subsystem by directly connecting the two DKC615Is. A backup system against disasters can be constructed by installing one of the two DKC615Is at the main site and the other at the recovery site and configuring the HA cluster on the server side by means of the HA (High Availability) software.

This function also enables the two volumes containing identical data to be used for different purposes by duplicating data (volumes) within the same DKC615I or between the two DKC615Is and separating the volumes in a primary-and-secondary relation at any time.

An online database can be backed up or batch programs can be executed while the database is being accessed. There are TrueCopy and Universal Replicator (UR) for HORC.

The TrueCopy makes various settings and it controls operations by means of the RAID manager/TrueCopy, which runs on the open system. The RAID manager/TrueCopy provides various commands for user applications to control the TrueCopy functions. Creation of a user shell script using these commands enables the TrueCopy control being interlocked with server's fail-over executed by the HA software.

There is Fibre channel interface of connection form between CUs.

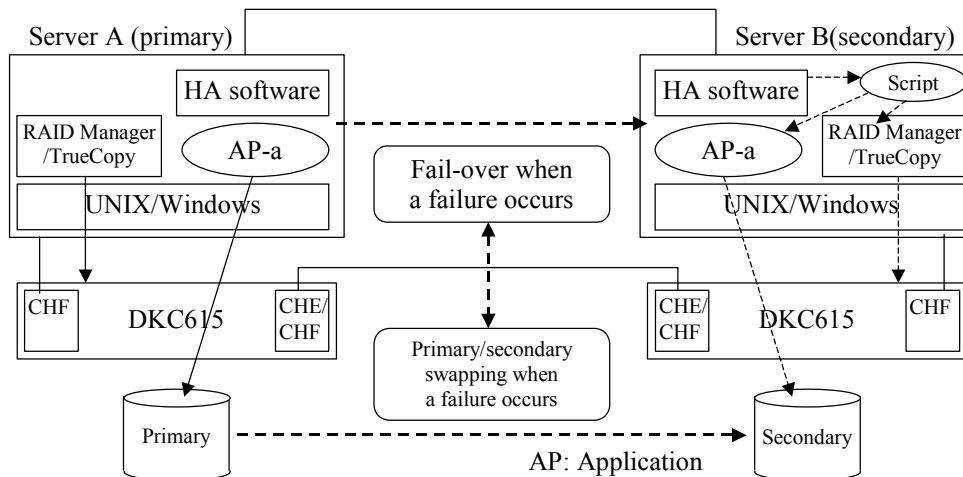


Fig. 9.1-1 Outline of TrueCopy Function and Example of Application to HA Configuration (Hot Standby Configuration)

9.2 Basic Specifications

Basic TrueCopy specifications are shown below.

Table 9.2-1 Basic Specifications of TrueCopy

No.	Item	Description	Remarks
1	Host interface on open system side	Fibre Channel	Conforming to base platform function.
2	Supporting OS platform	Conforming to base platform function.	
3	Connection between the CUs	Fibre Channel	
4	Means for setting the paired LU	RAID Manager/TrueCopy	
		Storage Navigator	
		WebConsole	
5	Number of LUs capable of the duplicated writing	Maximum 32768 pairs	Depending on emulation type
6	LU size capable of the duplicated writing (The paired VOL must be the same DEV type.)	All basic emulation types (include OPEN-V*)	
		LUSE	
		CVS	
7	Duplicated writing mode	Synchronized (Sync), Asynchronized (Async)	
8	Combination of the CUs	One-to-one correspondence N-to-one correspondence one-to-N correspondence	
9	Fence level	Data, Status, Never	Supports a function equivalent to the MF HRC.
10	Multiple DKC support	Yes	For CU#0 through CU#FE, TrueCopy pairs can be created.
11	Control of the MF HRC and the open HRC in DKC mixture (HMBR function)	Can be mixed	

*: Since OPEN-V is based on CVS, the capacity changes with RAID-level or DKU (HDD) type. Please refer to “3.4.1 Logical Unit Specification” for details.

(1) Means for setting the paired LU:

The following three means are provided:

- RAID Manager/TrueCopy
- SVP
- Storage Navigator

Not only the pairing but also a series of pair state changes are possible by using these three means. However, the user can use two means only: the command instruction from the RAID Manager/TrueCopy and the instruction from the remote console.

(2) LU size capable of the duplicated writing:

All emulation types' volumes are replicable.

(Condition: The primary volume and the secondary volume must have the same emulation type.)

If two LUSE volumes are paired with TrueCopy, a LUSE P-VOL must be paired with S-VOL of the same size and the same structure. For example, if a LUSE P-VOL is connected with the volumes of 1GB, 2GB, and 3GB in this order, you must specify the LUSE volume which has exactly the same size and the same connection order as the S-VOL.

(3) Copy Mode:

Async: The copy operation and the host I/O can be performed asynchronously, but it must to ensure the update sequence consistency of Write progress across multiple primary volumes (The data written late cannot be copied earlier.). In addition, when a failure occurs, the function (for multiple pairs) having multiple pairs blocked while keeping the update sequence consistency is available. In this way, the group composed of pairs, which are the control objects, is called Consistency Group.

(4) Fence level:

The TrueCopy, alike the HRC, supports three types of fence level: Data, Status, and Never. In case of TrueCopy Async, "Never" is displayed on SVP/Storage Navigator; "Async" is displayed on RAID Manager.

(5) Control of the HRC pairs and the TrueCopy pairs mixture:

Control of the mixture of the HRC pairs and the TrueCopy pairs is possible within the one DKC.

- S-VOL (secondary VOL) access:

- ① An RD access to the secondary VOL is permitted to accept the RD command issued to the disk label when the secondary server is started.
- ② In order to support the DataPlex function, write access to the secondary VOL is permitted on condition that the pair is being suspended.

Using the RAID Manager/TrueCopy or SVP, you can indicate the permission of write operation to S-VOL. After this indication, if the server performs any write operation to S-VOL, in Pair Resync (Resume) operation all tracks on P-VOL will be copied to S-VOL. If using SVP, the permission of write operation to S-VOL is executed by setting “S-VOL write Enable” on Suspend Pair display in the indication of S-VOL Suspend on MCU. Also, you can confirm using RAID manager/TrueCopy or SVP whether “S-VOL write Enable” on S-VOL is permitted or not.

- HMBR function for the TrueCopy paired VOL

- ① Overview

Open Remote Copy function makes possible to make a backup and restoration of TrueCopy pair volumes using a mainframe machine. (HMBR function for the TrueCopy paired VOL)

After suspending TrueCopy pairs by a TrueCopy command of RAID Manager/TT, you can make a backup from a mainframe machine. In this case the backup data is got from S-Vols. Therefore to make a backup, you don't have to stop processes from open systems to P-Vols.

Before restoring backup data, you must delete TrueCopy pairs and make them simplex volumes by a TrueCopy command of RAID Manager/TT. After restoring data, create TrueCopy pairs using the same volumes as P-Vols or S-Vols before deleting pairs. Thus you can create the same duplicated status as before.

- ② Preparation for Backup

Before making a backup of TrueCopy pair volumes using HMBR function, you need to set VSN, and to create VTOC from a mainframe machine as written in "7.5 Precautions". These operations must be done before TrueCopy pairs are created.

- ③ VSN, VTOC in TrueCopy pairs

By the initial copy of a TrueCopy pair, VSN and VTOC in the P-Vol are not copied to S-Vol. As a result, both P-Vol and S-Vol have different VSN and VTOC.

- ④ Write operation from a mainframe machine to TrueCopy pair volumes.

Once a TrueCopy pair is created, all write operations from a mainframe machine to the TrueCopy pair volume are rejected, except rewriting of VNS to S-Vol. Therefore a mainframe machine cannot erase original data written by an open system.

- ⑤ Others

While an initial copy for TrueCopy pairs is executed, the link between S-Vol and a mainframe machine should be off-line. If the link is on-line, the initial copy is aborted. While there exists any I/O from a mainframe machine to an open volume, don't start initial copy from the volume to another. When you start the copy operation, a mainframe I/O is aborted.

When you start initial copy, you need to stop a mainframe I/O to a open volume which is to be a P-Vol of a TrueCopy pair.

(6) Restriction for Connecting with Former Model of Storage System

When you connect the storage systems with the following combinations, the range you can specify for each model is restricted.

- DKC615I and DKC460I
- DKC615I and DKC510I

When you connect DKC615I and DKC460I, you may specify as shown in Table 9.2-2.

Table 9.2-2 Range You Can Specify when You Connect DKC615I and DKC460I

Restriction Item	DKC615I ^{*1}	DKC460I ^{*1} (21-06-43-xx/xx)
Port number	From 1A to GR	From 1A to 4R
LUN	From 0000 to 03FF	From 0000 to 01FF
LDKC ^{*2} :CU:LDEV	From 00:00:00 to 00:3F:FF	From 00:00 to 1F:FF

*1: It does not affect to the value whether the model connects as MCU or RCU.

*2: LDKC number is applied only for DKC615I.

When you connect DKC615I and DKC510I, you may specify as shown in Table 9.2-3.

Table 9.2-3 Range You Can Specify when You Connect DKC615I and DKC510I

Restriction Item	DKC615I ^{*1}	DKC510I ^{*1} (50-07-85-xx/xx)
Port number	From 1A to GR	From 1A to GR
LUN	From 0000 to 03FF	From 0000 to 03FF
LDKC ^{*2} :CU:LDEV	From 00:00:00 to 00:3F:FF	From 00:00 to 3F:FF

*1: It does not affect to the value whether the model connects as MCU or RCU.

*2: LDKC number is applied only for DKC615I.

(7) Planned Outage of TrueCopy Asynchronous Components

Please refer to [THEORY03-1990](#) for the procedure when the subsystem stops planning with the TrueCopy asynchronous pair formed.

◆ Restrictions:

(1) Command device:

- ① The TrueCopy provides users with a command to enable a state change and status display of the TrueCopy pair from the server.
- ② Assign a special LUN called a command device so that the DKC615I can receive this pair state change and pair status display commands.
- ③ Users cannot use the command device. A command device with a capacity of 2.4GB within the subsystem cannot be used (when the OPEN3 is assigned as a command device). If you install the micro version supporting CVS function for Open volume, you can specify CVS volume as command device. In this case, the minimum capacity of command device is 35MB.
- ④ Use the WebConsole to specify the command device.

(2) Flashing updated data in the server:

When the TrueCopy is used as a DataPlex function, split the primary/secondary paired VOL. A Sync command or the like must be issued before splitting it and a file system buffer must be flashed when acquiring a backup from the secondary VOL. Thus, the latest backup can be acquired.

(3) P-VOL (primary VOL) access:

Pair suspend operation (pairsplit-P option) from RAID Manager/TrueCopy can be executed to TrueCopy pair volumes but can't be executed to TrueCopy Async pair volumes.

9.3 Basic UR Specifications

Basic UR specifications are shown below.

Table 9.3-1 Basic Specifications of UR

No.	Item	Description	Remarks
1	Host interface on open system side	Fibre Channel	Conforming to base platform function.
2	Supporting OS platform	Conforming to base platform function.	
3	Connection between the CUs	Fibre Channel	
4	Means for setting the Journal volume	Storage Navigator	
		WebConsole	
5	Number of setting Journal volumes in a Journal Group	64 volumes	
6	LU type for setting the Journal volume	OPEN-V*	
		CVS	
7	Means for setting the paired LU	RAID Manager/UR	
		Storage Navigator	
		WebConsole	
8	Number of LUs capable of the duplicated writing	Maximum 32768 pairs	
9	LU size capable of the duplicated writing (The paired VOL must be the same DEV type.)	OPEN-V*	
		LUSE	
		CVS	
10	Duplicated writing mode	Asynchronized (Async)	
11	Combination of the CUs	One-to-one correspondence	
12	Multiple DKC support	Yes	For CU#0 through CU#FE, UR pairs can be created.

*: Since OPEN-V is based on CVS, the capacity changes with RAID-level or DKU (HDD) type.
Please refer to “3.4.1 Logical Unit Specification” for details.

(1) Means for setting the paired LU:

The following three means are provided:

- RAID Manager/UR
- WebConsole
- Storage Navigator

Not only the pairing but also a series of pair state changes are possible by using these three means. However, the user can use two means only: the command instruction from the RAID Manager/UR and the instruction from the remote console.

(2) LU size capable of the duplicated writing:

The replicable volume is only OPEN-V.

(Condition: The primary volume and the secondary volume must have the same emulation type.)

If two LUSE volumes are paired with UR, a LUSE P-VOL must be paired with S-VOL of the same size and the same structure. For example, if a LUSE P-VOL is connected with the volumes of 1GB, 2GB, and 3GB in this order, you must specify the LUSE volume which has exactly the same size and the same connection order as the S-VOL.

(3) Copy Mode:

UR: The copy operation and the host I/O can be performed asynchronously, but it must to ensure the update sequence consistency of Write progress across multiple primary volumes (The data written late cannot be copied earlier.). In addition, when a failure occurs, the function (for multiple pairs) having multiple pairs blocked while keeping the update sequence consistency is available. In this way, the group composed of pairs, which are the control objects, is called Consistency Group.

(4) Means for setting the Journal Volume:

The following two means are provided.

- WebConsole
- Storage Navigator

Not only the setting Journal volume but also Journal Group options are possible to be changed by using these two means. However, the user can use only instruction from the remote console.

(5) Connections DKC510 Subsystem

Usable configurations depending on combinations of models of MCU and RCU to be connected are shown in the following table.

Descriptions following the (1), (2), and (3) in the table express extents of the usable ports, DEV#'s, and LUNs respectively.

Also, descriptions on the left and right of a slash (/) express the extents of the usable models of the MCU and RCU respectively.

• When MCU is DKC615I, RCU is DKC510I

	DKC510I
(1) Port#	1A ~ GR / 1A ~ GR
(2) DEV#	00:00:00 ~ 00:3F:FF / 00:00 ~ 3F:FF
(3) LUN#	0000 ~ 07FF / 0000 ~ 03FF

• When RCU is DKC615I, MCU is DKC510I

	DKC510I
(1) Port#	1A ~ GR / 1A ~ GR
(2) DEV#	00:00 ~ 3F:FF / 00:00:00 ~ 00:3F:FF
(3) LUN#	0000 ~ 03FF / 0000 ~ 07FF

(6) Planned Outage of TrueCopy Asynchronous Components

Please refer to [THEORY03-1990](#) for the procedure when the subsystem stops planning with the UR pair formed.

◆ Restrictions:

(1) Command device:

- ① The UR provides users with a command to enable a state change and status display of the UR pair from the server.
- ② Assign a special LUN called a command device so that the DKC615I can receive this pair state change and pair status display commands.
- ③ Users cannot use the command device. A command device with a capacity of 2.4GB within the subsystem cannot be used. If you install the micro version supporting CVS function for Open volume, you can specify CVS volume as command device. In this case, the minimum capacity of command device is 35MB.
- ④ Use the WebConsole to specify the command device.

(2) Flashing updated data in the server:

When the UR is used as a DataPlex function, split the primary/secondary paired VOL. A Sync command or the like must be issued before splitting it and a file system buffer must be flashed when acquiring a backup from the secondary VOL. Thus, the latest backup can be acquired.

(3) S-VOL (secondary VOL) access:

- ① An RD access to the secondary VOL is permitted to accept the RD command issued to the disk label when the secondary server is started.
- ② In order to support the DataPlex function, write access to the secondary VOL is permitted on condition that the pair is being suspended.
Using the RAID Manager/UR or SVP, you can indicate the permission of write operation to S-VOL. After this indication, if the server performs any write operation to S-VOL, in Pair Resync (Resume) operation all tracks on P-VOL will be copied to S-VOL. If using SVP, the permission of write operation to S-VOL is executed by setting “S-VOL write Enable” on Suspend Pair display in the indication of S-VOL Suspend on MCU.
Also, you can confirm using RAID Manager/UR or SVP whether “S-VOL write Enable” on S-VOL is permitted or not.


9.4 HAM (High Availability Manager) Overview

The High Availability Manager function can duplicate data (volumes) under the control of the subsystem by directly connecting the two DKC615s as much as The Hitachi Open remote Copy.

When the trouble occurs in active DKC615, it is necessary to run your applications to the HORC function. However, the HAM can operate failover by the automatic operation.

There is Fibre channel interface of connection form between CUs.

Outline of High Availability Manager

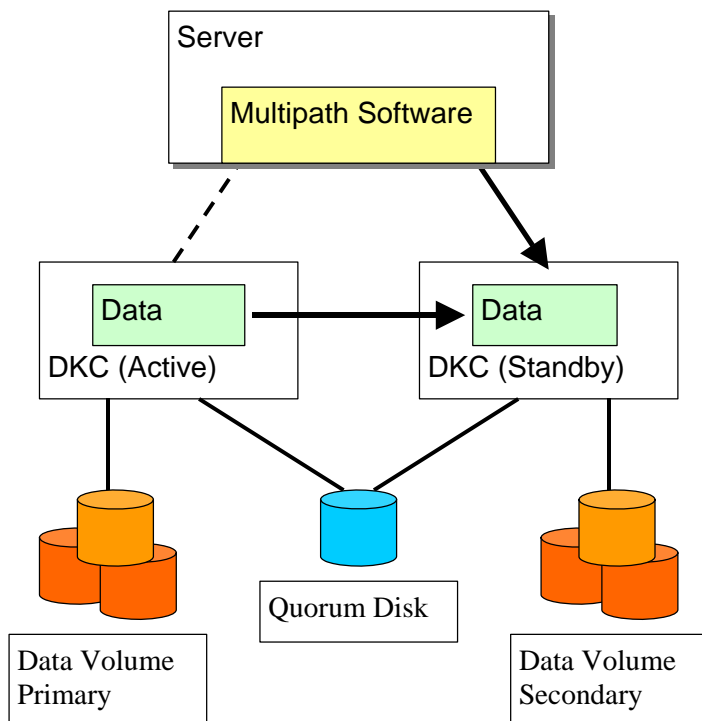

9.5 Basic HAM Specifications

Basic HAM specifications are shown below.

No.	Item	Description	Remarks
1	Host interface on open system side		Conforming to the HORC
2	Supporting OS platform	Windows2000 (x86/IPF)	
3		Windows2003 (x86/x64/IPF)	
4		Windows2008 (x86/x64/IPF)	
5	Supporting Multipath Software	HDLM	
6	Connection between the CUs	Fibre Channel	Conforming to the HORC
7	Number of LUs capable of the HAM Volume	Maximum 32768 pairs	Conforming to the HORC
8	LU type for setting the HAM volume	All	
9		CVS Volume	
10	Means for setting the paired LU	Storage Navigator	
11		WebConsole	
		RaidManager *1	
12	Fence level	Never	
13	Number of LUs capable of the Quorum disk	Maximum 128	
14	LU type for setting the Quorum Disk	Only Extent Volume	
15	Means for setting the Quorum disk	Storage Navigator	
16		WebConsole	

*1: When you use RaidManager, the HAM volumes is seen as the TrueCopy volumes.

◆ Means for setting the paired LU:

The following three means are provided:

- RAIDManager/UR
- WebConsole
- Storage Navigator

When you use RaidManager, the HAM volumes is seen as the TrueCopy volumes. Operation is available in RaidManager, Suspend, SwapSuspend, Resync, ReverseResync Only.


Not only the pairing but also a series of pair state changes are possible by using WebConsole or Storage Navigator.

However, the user can use two means only: the command instruction from the RAIDManager/UR and the instruction from the remote console.


◆ Connected block diagram

Connected composition example is shown in the following.


(a) Direct

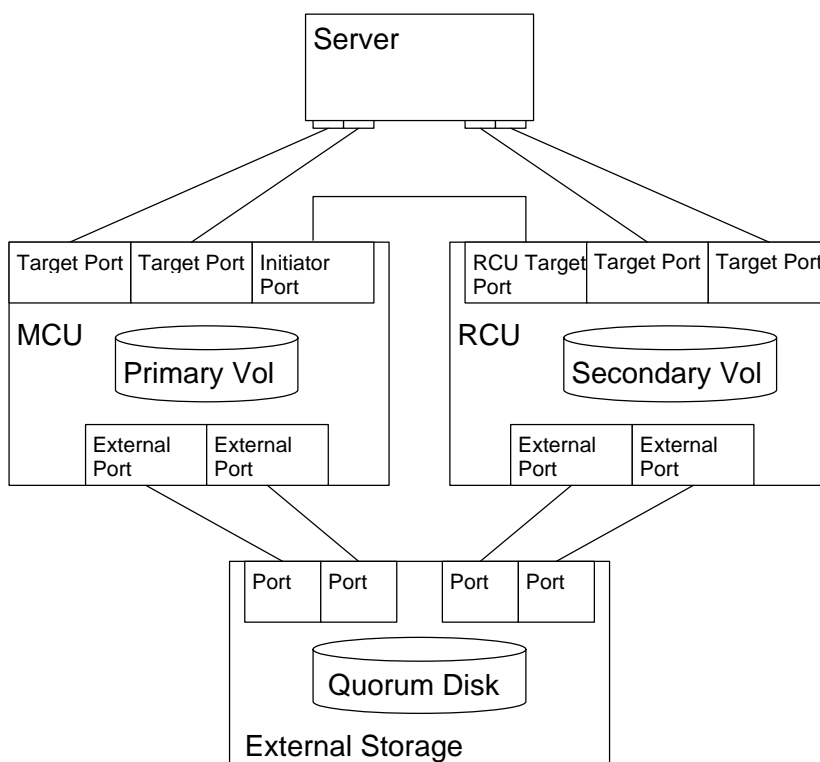

(b) Between switch

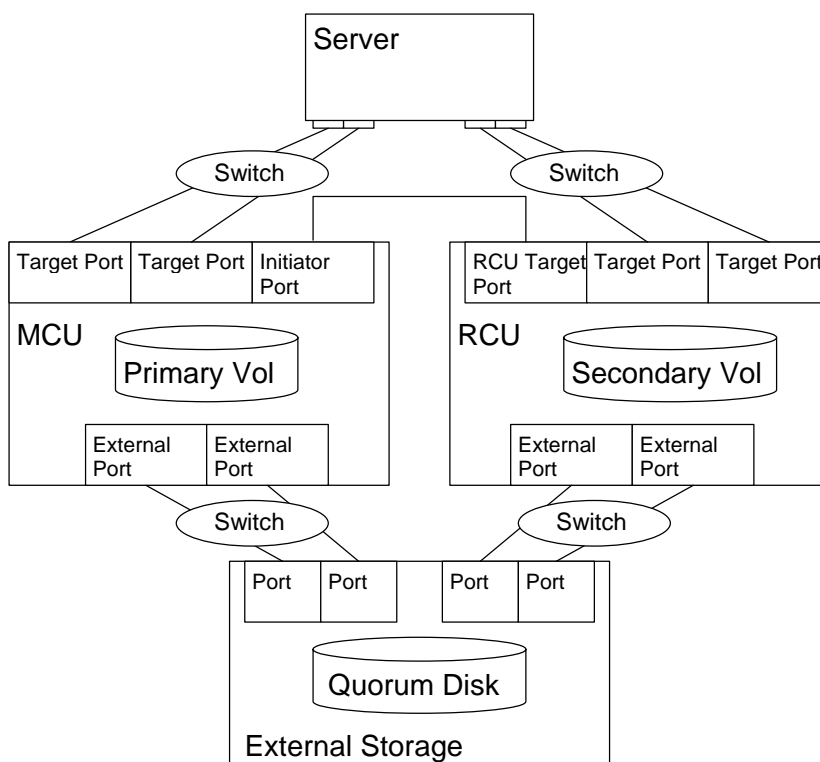

(c) When you use the external storage for primary vol or secondary vol.

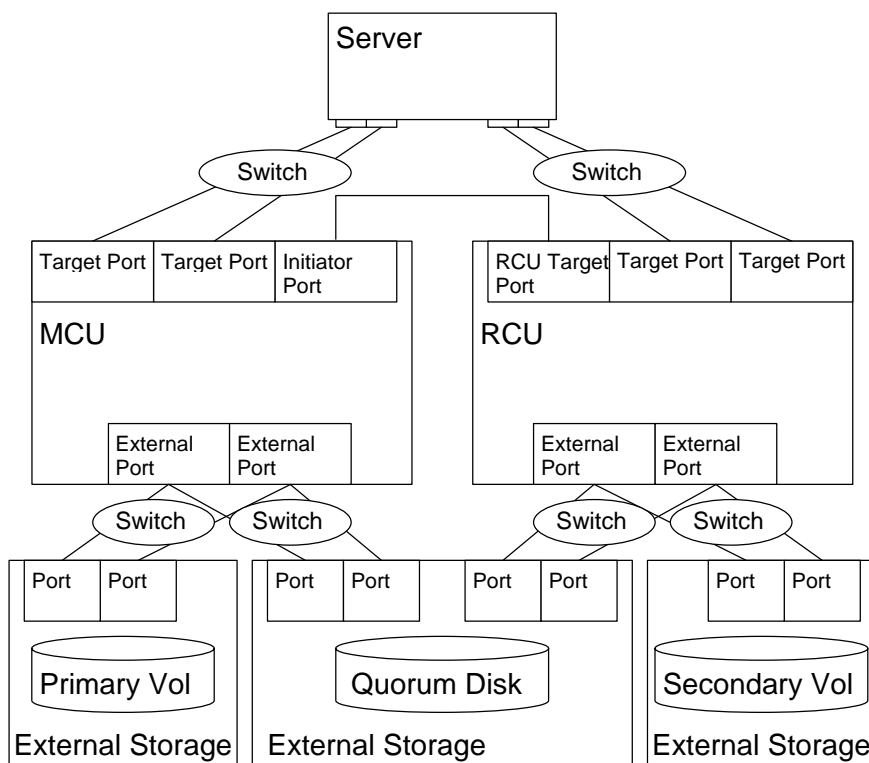

10. LUN installation

10.1 Overview

LUN installation feature makes it enable to add LUNs to DKC615I Fibre ports while I/Os are still running.

Some host operations are required before the added volumes are recognized and become usable from the host operating systems.

MCU port (Initiator port)/External of TrueCopy function does not support LUN installation.

10.2 Specifications

(1) General

- (a) LUN installation feature supports Fibre interface.
- (b) LUN installation is supported.
- (c) LUN installation can be executed by SVP or by Web Console.
- (d) Some operating systems require reboot operation to recognize the newly added volumes.
- (e) When new LDEVs should be installed for LUN installation, install the LDEVs by SVP first. Then add LUNs by LUN installation from SVP or Web Console.
- (f) MCU (Initiator port)/External port of TrueCopy function does not support LUN installation.

(2) Platform support

Host Platforms supported for LUN installation are shown in Table 10.2-1.

Table 10.2-1 Platform support level.

Support level	FIBRE
(A) LUN installation and LUN recognition.	Solaris, HP-UX, AIX, Windows2000, Windows2003
(B) LUN installation only. Reboot is required before new LUNs are recognized.	Linux
(C) LUN installation is not supported. Host must be shutdown before installing LUNs and then must be rebooted.	—

10.3 Operations

(1) Operations

Step 1: Execute LUN installation from SVP or from JAVA = “Web Console”.

Step 2: Check whether or not the initiator platform of the Fibre port supports LUN recognition with Table 10.3-1.

Support (A) -> Execute LUN recognition procedures in Table 10.3-1

Not support (B) -> Reboot host and execute normal install procedure.

(2) Host operations

Host operations for LUN recognition are shown in Table 10.3-1.

Table 10.3-1 LUN recognition procedures outline for each platform

Platform	LUN recognition procedures
HP-UX	(1) ioscan (check device added after IPL) (2) insf (create device files)
Solaris	(1) /usr/sbin/drvconfig (2) /usr/sbin/devlinks (3) /usr/sbin/disks (4) /usr/ucb/ucblinks
AIX	(1) Devices-Install/Configure Devices Added After IPL By SMIT
Windows2000 Windows2003	Automatically detected

11. LUN de-installation

11.1 Overview

LUN de-installation feature makes it enable to delete LUNs to DKC615I Fibre ports while I/Os are still running.

MCU (Initiator port)/External port of TrueCopy function does not support Online LUN de-installation.

11.2 Specifications

(1) General

- (a) LUN de-installation feature supports Fibre interface.
- (b) LUN de-installation can be used only for the ports on which LUNs are already existing.
- (c) LUN de-installation can be executed by SVP or by “Web Console”.
- (d) When LUNs should be de-installed for LUN de-installation, stop Host I/O of concerned LUNs.
- (e) If necessary , execute backup of concerned LUNs.
- (f) De-install concerned LUNs from HOST.
- (g) In case of AIX, release the reserve of concerned LUNs.
- (h) In case of HP-UX do not delete LUN=0 under existing target ID.
- (i) MCU (Initiator port)/External port of TrueCopy function does not support Online LUN de-installation.

Note: If LUN de-installation is done without stopping Host I/O, or releasing the reserve, it would fail. Then stop HOST I/O or release the reserve of concerned LUNs and try again. If LUN de-installation would fail after stopping Host I/O or releasing the reserve, there is a possibility that the health check command from HOST is issued. At that time, wait about three minutes and try again.

(2) Platform support

Host platforms supported for LUN de-installation are shown in Table 11.2-1.

Table 11.2-1 Support platform

Platform	OS	Fibre
HP	HP-UX	○
SUN	Solaris	○
RS/6000	AIX	○
PC	Windows 2000 Windows2003	○

(example) ○: support, ×: not support

11.3 Operations

(1) Operations

Step 1: Confirm whether or not the initiator platform of the FIBRE port supports LUN de-installation with Table 11.2-1.

Support :Go to Step 2.

Not support :Go to Step 3.

Step 2: If HOST MODE of the port is not 00 or 04 or 07 use, go to Step 4.

Step 3: Stop Host I/O of concerned LUNs.

Step 4: If necessary, execute backup of concerned LUNs.

Step 5: De-install concerned LUNs form HOST.

Step 6: In case AIX, release the reserve of concerned LUNs.

If not, go to Step 7.

Step:7 Execute LUN de-installation from SVP or from Remote “Web Console”.

(2) Host operations

Host operations for LUN de-installation procedures are shown in Table 11.3-1.

Table 11.3-1 LUN de-installation procedures outline for each platform

Platform	LUN de-installation procedures
HP-UX	mount point:/01, volume group name:vg01 (1) umount /01 (umount) (2) vgchange -a n vg01 (deactive volume groups) (3) vgexport /dev/vg01 (export volume groups)
Solaris	mount point:/01 (1) umount /01 (unmout)
AIX	mount point:/01, volume group name:vg01, device file name:hdisk1 (1) umount /01 (umount) (2) rmfs -r" /01 (delete file systems) (3) varyoffvg vg01 (vary off) (4) exportvg vg01 (export volume groups) (5) rmdev -I 'hdisk1' '-d' (delete devime files)

12. Prioritized Port Control (PPC)

12.1 Overview

The Prioritized Port Control (PPC) feature allows you to use the DKC for both production and development. The assumed system configuration for using the Prioritized Port Control option consists of a single DKC that is connected to multiple production servers and development servers. Using the Prioritized Port Control function under this system configuration allows you to optimize the performance of the development servers without adversely affecting the performance of the production servers.

MCU port (Initiator port) of Fibre Remote Copy function does not support Prioritized Port Control (PPC).

The Prioritized Port Control option has two different control targets: fibre port and open-systems host's World Wide Name (WWN). The fibre ports used on production servers are called prioritized ports, and the fibre ports used on development servers are called non-prioritized ports. Similarly, the WWNs used on production servers are called prioritized WWNs, and the WWNs used on development servers are called non-prioritized WWNs.

Note: The Prioritized Port Control option cannot be used simultaneously for both the ports and WWNs for the same DKC. Up to 224 ports or 2048 WWNs can be controlled for each DKC.

The Prioritized Port Control option monitors I/O rate and transfer rate of the fibre ports or WWNs. The monitored data (I/O rate and transfer rate) is called the performance data, and it can be displayed in graphs. You can use the performance data to estimate the threshold and upper limit for the ports or WWNs, and optimize the total performance of the DKC.

■ Prioritized Ports and WWNs

The fibre ports or WWNs used on production servers are called prioritized ports or prioritized WWNs, respectively. Prioritized ports or WWNs can have threshold control set, but are not subject to upper limit control. Threshold control allows the maximum workload of the development server to be set according to the workload of the production server, rather than at an absolute level. To do this, the user specifies whether the current workload of the production server is high or low, so that the value of the threshold control is indexed accordingly.

■ Non-Prioritized Ports and WWNs

The fibre ports or WWNs used on development servers are called non-prioritized ports or prioritized WWNs, respectively. Non-prioritized ports or WWNs are subject to upper limit control, but not threshold control. Upper limit control makes it possible to set the I/O of the non-prioritized port or WWN within a range that does not affect the performance of the prioritized port or WWN.

12.2 Overview of Monitoring

■ Monitoring Function

Monitoring allows you to collect performance data, so that you can set optimum upper limit and threshold controls. When monitoring the ports, you can collect data on the maximum, minimum and average performance, and select either per port, all prioritized ports, or all non-prioritized ports. When monitoring the WWNs, you can collect data on the average performance only, and select either per WWN, all prioritized WWNs, or all non-prioritized WWNs.

The performance data can be displayed in graph format either in the real time mode or offline mode. The real time mode displays the performance data of the currently active ports or WWNs. The data is refreshed in every minute, and you can view the varying data in real time. The offline mode displays the stored performance data. The data can be stored for up to one week, and can be displayed in increments ranging from five minutes, one hour, one day, or one week. A graph is plotted per unit of one minute regardless of the displayed scale (unit of grid).

■ Monitoring and Graph Display Mode

When you activate the Prioritized Port Control option, the Select Mode panel where you can select either Port Real Time Mode, Port Offline Mode, WWN Real Time Mode, or WWN Offline Mode opens. When you select one of the modes, monitoring starts automatically and continues unless you stop monitoring. However, data can be stored for up to one week. To stop the monitoring function, exit the Prioritized Port Control option, and when a message asking if you want to stop monitoring is displayed, select the Yes button.

- The Port/WWN Real Time Mode is recommended if you want to monitor the port or WWN performance for a specific period of time (within 24 hours) of a day to check the performance in real time.
- The Port/WWN Offline Mode is recommended if you want to collect certain amount of the port or WWN performance data (maximum of one week), and check the performance in non-real time.

To determine a preliminary upper limit and threshold, run the development server by using the performance data collected from the production server that was run beforehand and check the changes of performance of a prioritized port. If the performance of the prioritized port does not change, set a value by increasing an upper limit of the non-prioritized port. After that, recollect and analyze the performance data. Repeat these steps to determine the optimized upper limit and threshold. (See Fig. 12.3-1.)

12.3 Procedure (Flow) of Prioritized Port Control

To perform the prioritized port control, determine the upper limit to the non-prioritized port by checking that the performance monitoring function does not affect production. Fig. 12.3-1 shows the procedures for prioritized port control.

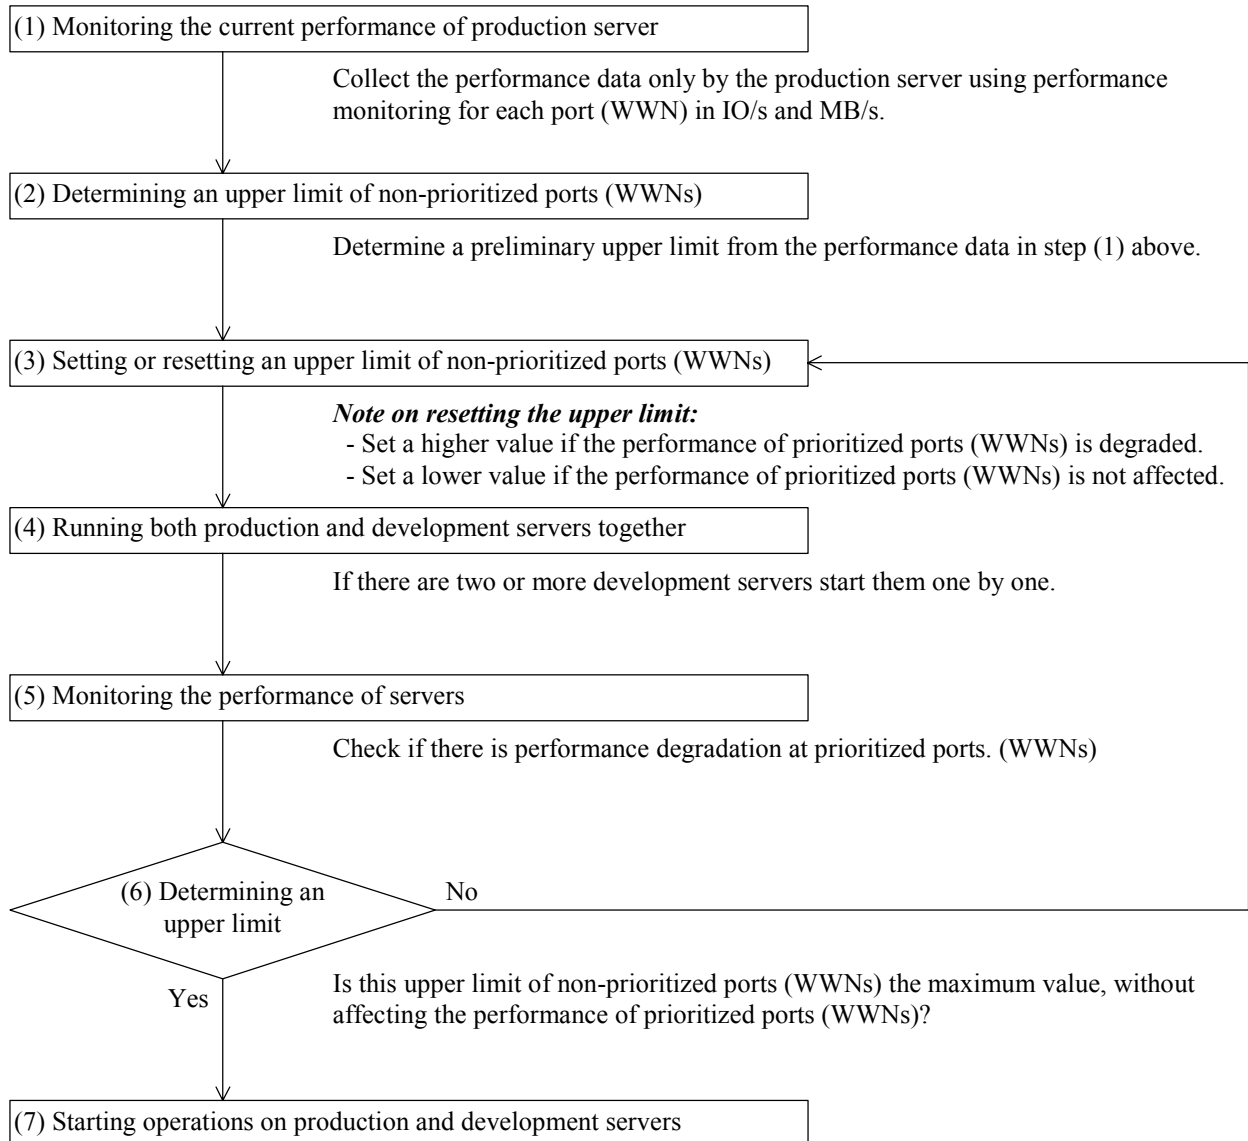


Fig. 12.3-1 Flow of Prioritized Ports Control

13. Auto Alternate SCSI Path Mode

13.1 Overview

An enhancement was made to both the RAID500 SVP program and HDLM version 5.4 (or higher) to assist the microcode exchange in an automatic alternate path mode.

The microcode exchange process for an MP (microprocessor) requires the microcode to be loaded into each MP and then that MP must be rebooted to activate the new code. During the reboot time, this MP is offline.

13.2 Micro-program Exchange process used in Alternate SCSI Path Mode

When using Alternate SCSI Path mode the new micro-program is loaded into the MPs on Cluster1. When these MPs reboot, the MPs go offline, HDLM senses the lost path and automatically switches these paths to their alternate in Cluster2. A Wait Time function has been added which will allow these paths to fail over and then allow time for the reboot to finish before attempting recovery of the path. It is therefore important to set both the Wait Time value via the SVP (per formula in MM) and also to set Automatic Fail Back (AFB) mode in HDLM.

After the Fail Back time, which depends on alternate path software, has passed (Wait Time needs to be set accordingly), the blocked processor will be recovered, and the alternate path will be recovered. When the blocked MPs have recovered, the process will continue on the remaining MPs in Cluster2.

13.3 Settings required to operate in Auto Alternate SCSI Path Mode

For setting values of Wait Time in Auto Alternate Path Mode and the settings of the Auto Fail Back feature in HDLM, see [MICRO04-50](#).

Note: When this feature is used, the alternate path software may report a path failure to the OS at the time of MP reboot. When the user enables the trap report of the path failure, it may be reported. Therefore, the customer must full understand that these errors will be logged.