

Lucent Technologies
Bell Labs Innovations



DACS II
Release 9.0 PDS
1.544 Mb/s Interface
Quick Reference Guide

365-353-283
Issue 1.0
October 1999

Copyright © 1999 Lucent Technologies

All Rights Reserved

Printed in U.S.A

This material is protected by the copyright and trade secret laws of the United States and other countries. It may not be reproduced, distributed or altered in any fashion by any entity (either internal or external to Lucent Technologies), except in accordance with applicable agreements, contracts, or licensing, without the express written consent of the Customer Training and Information Products organization and the business management owner of the material.

Notice

Every effort was made to ensure that the information in this document was complete and accurate at the time of printing. However, information is subject to change.

Mandatory Customer Information

Security Statement

In rare instances, unauthorized individuals make connections to the telecommunications network through the use of remote access features. In such event, applicable tariffs require that the customer pay all network charges for traffic. Lucent Technologies cannot be responsible for such charges, and will not make any allowance or give any credit for charges that result from unauthorized access.

Documentation Ordering Information

The ordering number for this document is Lucent Technologies 365-353-283. To order this document, call the Lucent Technologies Customer Information Center in Indianapolis, Indiana, on 1-888-582-3688. For more ordering information, refer to "How to Order Documentation" in the section "About this Document."

Trademarks

5ESS and *SLC*[®] is a registered trademark of Lucent Technologies.

COMMON LANGUAGE is a registered trademark and CLEI, CLLI, CLCI, and CLFI are trademarks of Bell Communications Research, Inc.

American Express is a registered trademark of American Express Company.

MasterCard is a registered trademark of Mastercard International Inc.

Visa is a registered trademark of VISA International Service Association.

Customer Assistance and Technical Support Telephone Number

Lucent Technologies provides technical assistance 24 hours a day, seven days a week. For technical assistance within the United States, call 1-800-225-RTAC. For technical assistance in Europe, call the Netherlands Technical Support Organization (TSO) at 31-3587-1555. For technical assistance in the Far East, call the Singapore TSO at 65-241-0880. If your country of origin provides local technical support, please contact them directly.

Documentation Support Telephone Number

Lucent Technologies provides a telephone number for you to report errors or to ask questions about the information in this document. The support telephone numbers are:

Outside the United States - 1-317-322-6847
Inside the United States - 1-800-645-6759

Acknowledgements

This document was developed by the Lucent Technologies Customer Training and Information Products Organization.

How Are We Doing?

Document Title: DACS II Rel.9.0, PDS 2.048 Mb/s Int. Quick Ref. Guide_

Document No.: _____ 365-353-283 _____

Issue No. _____ 1.0 _____ Date: _____ October 1999 _____

Lucent Technologies welcomes your feedback on this Customer Information Product (CIP). Your comments can be of great value in helping us to improve our CIPs.

1. Please rate the effectiveness of this CIP in the following areas:

	Excellent	Good	Fair	Poor	Not Applicable
Ease of Use					////////////////////
Clarity					////////////////////
Completeness					////////////////////
Accuracy					////////////////////
Organization					////////////////////
Appearance					////////////////////
Examples					
Illustrations					
Overall Satisfaction					////////////////////

2. Feel free to write any comments below or on an attached sheet.

If we may contact you concerning your comments, please complete the following:

Name: _____ Telephone Number: _____


Company/Organization: _____ Date: _____

Address: _____


When you have completed this form, please return to address on back or Fax to: 732 949-5000.

cut

Lucent Technologies
Bell Labs Innovations

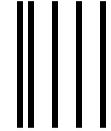

NO POSTAGE
NECESSARY
IF MAILED
IN THE
UNITED STATES

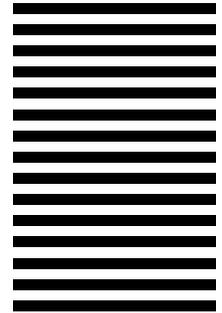

BUSINESS REPLY MAIL

FIRST CLASS PERMIT NO. 1999 GREENSBORO, NC

POSTAGE WILL BE PAID BY ADDRESSEE

DOCUMENTATION SERVICES
2400 Reynolda Road
Winston-Salem, NC 27199-2029



Contents

	About This Document	vii
1	Link/Login/Logoff Commands	1-1
2	Provisioning Commands	2-1
3	Performance Monitoring Commands	3-1
4	Cross-Connect Commands	4-1
5	Macro and Map Commands	5-1
6	Roll Commands	6-1

Contents

7 Change Commands [7-1](#)

8 Remove Commands [8-1](#)

9 Restore Commands [9-1](#)

10 C-Bit Processing Commands [10-1](#)

11 Test Access Commands [11-1](#)

12 Troubleshooting Commands [12-1](#)

13 Miscellaneous Commands [13-1](#)

Contents

14 Denial Codes

[14-1](#)

Contents

About this Document

Background

Purpose The purpose of this manual is to provide an intermediate or expert DACS II user/administrator with quick access to DACS II commands.

The *DACS II Quick Reference Guide* provides a listing and syntax for input commands used by the craft personnel involved in the daily operation and maintenance of the Digital Access and Cross-connect System II.

**Intended
Audiences** This document is for reference by a technician or craftsperson who already understands the commands and needs a reminder of syntax.

How to Use this Document

Accessing the Information

There are two ways to access the information in this document:

- This index in the back of the manual
 - The overall table of contents in the front of the manual.
-

Prerequisites

Before you use this document, you should have completed the DACS II Operation and Maintenance course (TR3521 or TR3621).

If you were not able to take either training course, you should carefully study the information in the *DACS II Operation and Maintenance Manual*. You should also become familiar with the reasons that a command could be denied; this information is presented in Chapter 1 of the *DACS II Operation and Maintenance Manual* and under the appropriate command in the *DACS II Command and Message Manual*.

Manual Contents

Overview This manual contains DACS II commands only. For additional reference or procedural information, refer to the DACS II Operation and Maintenance Manual.

Contents The contents of the *DACS II Quick Reference Guide* are listed below:

- **Chapter 1 - Link/Login/Logoff Commands**

This chapter contains commands for adding user logins, logging in and logging off the DACS II, changing link provisioning options, and connecting data communications equipment to the DACS II.

- **Chapter 2 - Provisioning Commands**

This chapter contains the commands to provision Network Processing Modules (NPMs), Network Processing Circuits (NPCs), Timing References, and Administrative Links.

- **Chapter 3 - Performance Monitoring Commands**

This chapter contains commands for setting threshold values for certain parameters that are used to monitor the performance of the transmission lines that are connected to the DACS II.

(Continued on next page)

Manual Contents (Continued)

Contents, Continued

- **Chapter 4 - Cross-connect Commands**

This chapter contains the commands to establish various types of 64 kbit/s, Clear-DS1, and Channelized DS1 cross-connections, and to disconnect these cross-connections.

- **Chapter 5 - Macro and Map Commands**

This chapter contains the commands to create, activate, change, and delete macro files and cross-connection maps.

- **Chapter 6 - Roll Commands**

This chapter contains the commands to perform and disconnect the various facility and DS0 circuit rolls.

- **Chapter 7 - Change Commands**

This chapter contains the commands to perform changes to various cross-connections, circuit and alarm parameters, NPC types and other options.

- **Chapter 8 - Remove Commands**

This chapter contains the commands to remove links, NPCs, units, and TSIs.

- **Chapter 9 - Restore Commands**

This chapter contains the commands to restore links, NPCs, units, and TSIs.

(Continued on next page)

Manual Contents (Continued)

**Contents,
Continued**

- **Chapter 10 - C-Bit Processing Commands**
This chapter contains the commands to operate the C-Bit processing feature.
 - **Chapter 11 - Test Access Commands**
This chapter contains the commands to establish test ports and 64 kbit/s test connections.
 - **Chapter 12 - Troubleshooting Commands**
This chapter contains commands for isolating and clearing various DACS II troubles.
 - **Chapter 13 - Miscellaneous Commands**
This chapter contains miscellaneous DACS II commands.
 - **Chapter 14 - Denial Codes**
This chapter lists the denial codes and their meanings. This information is useful in determining problems with the DACS II.
-

Manual Conventions

Special Font Used

This manual uses special fonts for the user to differentiate computer input/output. The **constant width bold font** indicates message formats, keywords, letter representations of parameters, parameter values, and messages as they would appear on a DACS II terminal screen.

Related Documentation

Related DACS II Documents

The following documents support the DACS II system:

- DACS II Installation Manual:
 - IPH903 (DACS II CEF)
 - IPH903I (DACS II ESBF)

Audience: Customers planning to install the equipment

Content: Customer installation instructions.

- DACS II Release 7.0 Product Description Manuals:
 - 365-353-085 (24 Channel)
 - 365-353-086 (30 Channel)

Audience: Network planners, engineers, and others that need to know how the DACS II works and fits into the network.

Content: Features, applications, and description and other reference information.

(Continued on next page)

Related Documentation (Continued)

Related DACS II Documents, Continued

- DACS II Release 9.0 Operation and Maintenance Manuals:
 - 365-353-261 (PDS)
 - 365-353-271 (MML)
 - 365-353-281 (PDS 2.048-Mb/s Interface)
 - 365-353-291 (MML 2.048-Mb/s Interface)

Audience: End-user maintenance personnel.

Contents: Procedures to operate and maintain the DACS II.

- DACS II Release 9.0 Command and Message Manuals:
 - 365-353-262 (PDS)
 - 365-353-272 (MML)
 - 365-353-282 (PDS 2.048-Mb/s Interface)
 - 365-353-292 (MML 2.048-Mb/s Interface)

Audience: End-user maintenance personnel

Content: Description of each software input message and its response along with a description of each system output report.

(Continued on next page)

Related Documentation (Continued)

Related DACS II Documents, Continued

- DACS II Release 9.0 Quick Reference Guides:
 - 365-353-263 (PDS)
 - 365-353-273 (MML)
 - 365-353-283 (PDS 2.048-Mb/s)
 - 365-353-293 (MML 2.048-Mb/s)

Audience: End-user maintenance personnel

Content: Abbreviated list of system commands and parameters.

- DACS II Release 9.0 Software Release Description:
 - Comcode C108460080 (??)

Audience: End-user maintenance personnel

Content: Upgrade procedures for the new software release, status of problems fixed in previous releases, and operating issues for the specified software release.

(Continued on next page)

Related Documentation (Continued)

Related DACS II Documents, Continued

- X.50/X.57 Subrate Application
Release 1.0.3 for DACS II
Release 1.0.4 for DACS II ISX
MML 2.048 Mbit/s Interface
User's Manual

— 365-350-101 (MML)

Audience: End-user maintenance personnel

Content: Complete manual describing how to install and operate the X.50/X.57 Subrate application on the DACS II or DACS II ISX. Commands and messages describing how to perform subrate cross-connects and subrate test access are included.

(Continued on next page)

Related Documentation (Continued)

Related DACS II Documents, Continued

- DDS Subrate and MJU Application
Release 1.0.4 for DACS II
Release 1.0.5 for DACS II ISX
User's Manual
 - 365-350-110 (PDS)
 - 365-350-111 (MML)

Audience: End-user maintenance personnel

Content: Complete manual describing how to install and operate the DDS Subrate and MJU application on the DACS II or DACS II ISX. Commands and messages describing how to perform DDS subrate cross-connects, subrate test access, and subrate MJU operations are included.

(Continued on next page)

Related Documentation (Continued)

Related DACS II Documents, Continued

- Digital Multipoint Bridge (DMB)
DSP Platform Application
Release 1.0.2 for DACS II
Release 1.0.3 for DACS II ISX
User's Manual
 - 365-353-144 (PDS)
 - 365-353-154 (MML)

Audience: End-user maintenance personnel

Content: Complete manual describing how to install and operate the DMB application on the DACS II or DACS II ISX. Commands and messages describing how to perform DMB cross-connects and DMB test access operations are included.

How to Order Documentation

Overview To order additional copies of this document, orders can be placed:

- By Mail
 - By Telephone
 - By Fax
 - Via the World Wide Web.
-

**Ordering
by Mail** To order by Mail, send a letter to:

Lucent Technologies
Customer Information Center
Attention: Order Entry Section
2855 N. Franklin Road
P. O. Box 19901
Indianapolis, IN 46219

(Continued on next page)

How to Order Documentation (Continued)

Ordering by Telephone

To order by Telephone (Monday through Friday), call:

- Within the United States of America:
1-888-LUCENT-8 (7:30 a.m. to 6:30 p.m. EST)
(1-888-582-3688)
 - Australia and all European countries:
Toll 317-322-6416
 - Far East, North America, and other:
Toll 317-322-6646
-

Ordering by Fax

To order by Fax, fax a letter to:

- Within the United States of America:
1-317-322-6484
 - All International countries:
Toll 317-322-6699
-

How to Order Documentation (Continued)

Ordering Via the World Wide Web

The Lucent CIC maintains a netsite that can be used for ordering Lucent customer information products. The netsite address for the Lucent CIC homepage is:

<http://www.lucentdocs.com/>

Once you access the Lucent CIC homepage, clicking on the Documents selection will take you to the area through which numerous types of customer information products can be located, ordered, and/or downloaded.

RBOC and BOC Orders

Regional Bell Operating Companies (RBOC) and Bell Operating Companies (BOC) must process orders through their company documentation coordinator.

Commer- cial Customer Orders

For commercial customers, a check, money order, purchase order number, or charge card number (*VISA*^{®*} bank card, *American Express*^{®†} credit card services, or *Master Card*^{®‡} bank card) is required with all orders.

Checks must be made payable to Lucent Technologies.

* Registered trademark of VISA International Service Association

† Registered Trademark of American Express Company

‡ Registered Trademark of Mastercard International Incorporated

How to Order Documentation (Continued)

Lucent Technolo- gies Orders

Lucent Technologies entities should use Form IND 1-80.80 FA, available through the Customer Information Center.

Standing Order Customers

One-time orders include a binder (if applicable) and the document contents for the current issue in effect at the time of order. After placing a one-time order, you can request a standing order for any document revisions *of that software release*.

Documents for new software releases do *not* go to standing-order customers. You will only get those documents if you order the new software release.

How to Comment on This Document

Using the Feedback Form

A feedback form is located at the beginning of this publication, immediately after the title page. Please fill out the feedback form and return it (postage free) to the address on the back.

Without the Feedback Form

If the feedback form is missing, send comment on this publication to:

Lucent Technologies
DACS II Documentation Coordinator
Attn: Tabatha Wright
Room 1B-320
101 Crawfords Corner Road
Holmdel, NJ 07733-3030 USA

Electronic Documentation

Overview Documentation for DACS II and DACS II ISX is now available in electronic form, on CD-ROM (compact disk, read-only memory). CD-ROM has many advantages over traditional paper documentation, including cost savings, search and retrieve capability, and the assurance of the most current documentation.

CD-ROM is available by annual subscription (on standing order).

**Ordering a
CD-ROM** To order a CD-ROM, call your Technical Information Resource Manager, your Lucent Technologies Account Executive, or the Lucent Technologies Customer Information Center (1-888-582-3688).

**Pricing
Informa-
tion** For pricing information, contact your Lucent Technologies Network Systems Account Executive or the Lucent Technologies Customer Information Center (1-888-582-3688).

**Technical
Informa-
tion** For technical information, call Lucent Technologies Documentation Support:

Outside the United States - 1-800-645-6759
Inside the United States - 1-317-322-6847

Link/Login/Logoff Commands

1

**Add Link,
X.25,
Protocol,
Data Link,
Layer
Parameters** [l.36003]

```
ADD::LINK j[,K b][,T1 ee][,T3 ggg]\  
[,N2 aa][,FRMAD {A|B}]!
```

**Add Link,
Protocol,
Baud** [l.36001]

```
ADD::LINK j,PTCOL {S|X|T|M}[,BAUD bb]\  
[,ALM k][,BS e]\[,ENQ q][,XON x][,INIT]!
```

If the protocol is Snider:

```
ADD::LINK j,PTCOL S[,BAUD bb][,ALM k]\  
[,BS e][,ENQ q]\[,XON x][,INIT]!
```

If the protocol is X.25:

```
ADD::LINK j,PTCOL X[,ALM k][,INIT]!
```

If the protocol is TABS:

```
ADD::LINK j,PTCOL T[,BAUD bb][,ALM k][,INIT]!
```

If the protocol is Modified Snider:

```
ADD::LINK j,PTCOL M[,ALM k][,INIT]!
```

Add X.25 [l.36005]

Link

Parameters

```
ADD::LINK j[mm][,W c][,P ddd][,T20 iii]\
[,T22 jjj]\[,T23 kkk][,T25 lll][,T26 mmm]\
[,R20 nn][,R22 p]\[,R23 qq][,R25 r]\
[,DBIT v][,VC(ppss,gghh)]!
```

Add User/ [l.36103]

Link

Language,

NPC

**Addressing
and Priority**

```
ADD::{USER <user id>|LINK j[mm][,INCL]|ALL}\
[,LANG {M|P|F}][,NPCAD {E|X|H}]\
[,LEV(a,b,c,d,e,f)]\
[,{RMON|RMOFF}][,RLK {A|I}][,INIT]!
```

Add User [l.36101]

```
ADD::USER <user id>[,NEW]\
[,PASSWD <user password>]!
```

If the command is entered on a Snider link:

```
ADD::USER <user id>[,NEW]!
```

DACS II then generates the message below and a dialog is started.

```
PASSWD: (The frame administrator enters user  
password.)
```

```
REENTER PASSWD: (The frame administrator again  
enters the user password.)
```

Note that the user password is not echoed by DACS II.

**Change User
Password** [l.38301]

```
CHG::PASSWD[,OLD <old password>, \  
NEW <new password>]!
```

If the user is on a Snider protocol administrative link, the command is entered as follows:

```
CHG::PASSWD!
```

DACS II will then prompt the user for the old and new password:

```
OLD PASSWD: (user enters the old password)  
NEW PASSWD: (user enters the new password)  
PASSWD: (user re-enters the new password for  
verification)
```

**Change
User/Link
Screening** [l.38401]

```
CHG::{USER <user id>|LINK j[mm][,INCL]}\  
[,SCR n[,GR(a,b,c,d,e,f)]][,{MCON|MCOFF}]\  
[,INIT]!
```

Delete Use [l.37101]r

```
DLT::USER <user id>!
```

**Log On To
DACS II**

[1.39001]

```
LOGIN::USER <user id>[,PASSWD <user password>]!
```

If the user is on a Snider protocol administrative link, the command is entered as follows:

```
LOGIN::USER <user id>!
```

DACS II will then prompt for the following:

```
PASSWD: <user enters the user password>
```

**Log Off User
or Link**

[1.39101]

```
LOGOFF::{USER <user id>|LINK j[mm][,INCL]}!
```

Provisioning Commands

2

Add Network Processing Circuit [I.36021]
ADD::NPC { [s]abc-[t]def|[s]abc[, [s]ghi]...\
[, [t]def] }!
ADD::NPC { uvmnpwxkqr | uvmnp[, edfgh]...[, wxkqr] }!

Configure Frame [I.35021]
CFR::FRAME!

Configure Synchronizer [I.35011]
CFR::SYNC a, FPLL!

Deprovision NPC [I.32341]
DGRTH::NPC [s]abc[-[t]def]!
DGRTH::NPC uvmnp[-uvkqr]!

Deprovision Test-Access Group NPC [I.32401]
DGRTH::NPC [s]abc,NPCTG rrr[,TGR]!
DGRTH::NPC uvmpn,NPCTG rrr[,TGR]!

Deprovision Test Port NPC [I.32381]
DGRTH::NPC [s]abc,NPCTP n[,TPR]!
DGRTH::NPC uvmpn,NPCTP n[,TPR]!

Deprovision Synchronizer Time Base [I.32101]
DGRTH::SYNC,TB!

Deprovision Synchronizer Timing Link Interface [I.32121]
DGRTH::SYNC,TLI m[,SSP a]!

Deprovision Test Access Group [I.32421]
DGRTH::TG mmm[-nnn]!

Provisioning Commands

**Deprovision
Test Port** [l.32411]

DGRTH::TP kk!

**Deprovision
Unit** [l.32211]

DGRTH::UNIT [q]q!

**Deprovision
Facility
Terminating
Module
Interface** [l.32321]

DGRTH::UNIT [q]q,FTMI d!

**Provision
Frame** [l.30101]

GRTH::FRAME fg[,CHAR m][,UID <uid>!]

**Provision
Test Access
Group NPC** [l.31401]

GRTH::NPC [s]abc,NPCTG rrr!

GRTH::NPC uvmp,NPCTG rrr!

**Provision
Test Port
NPC** [l.31381]
GRTH::NPC [s]abc,NPCTP n!
GRTH::NPC uvmnp,NPCTP n!

**Provision
Digital
Signal
Processing
Unit NPC** [l.31331]
GRTH::NPC [s]abc[-[t]def],TYPE mnxyz!
GRTH::NPC uvmnp[-wkkqr],TYPE mnxyz!

**Provision
Digital
Signal
Processing
Unit NPC** [l.31351]
GRTH::NPC [s]abc,TYPE mnxyz!
GRTH::NPC uvmnp,TYPE mnxyz!

**Provision
NPC** [l.31362]
GRTH::NPC [s]abc[-[t]def][,TYPE mnxyz]\
[,OPTS(rr/m[,rr/m...])][,IW X'pq[r]]\
[,AIS {MI|PMA|DMA|PMC}][,LEV s]!

GRTH::NPC uvmnp[-uvkqr][,TYPE mnxyz]\
[,OPTS(rr/m[,rr/m...])][,IW X'pq[r]]\
[,AIS {MI|PMA|DMA|PMC}][,LEV s]!

Provision NPC [l.31363]

```
GRTH::NPC [s]abc[-[t]def][,TYPE mnxyz]\
[,OPTS(rr/m[,rr/m...])][,IW X'pq[r]]\
[,AIS {MI|PMA|DMA|PMC}][,LEV s]!
```

```
GRTH::NPC uvmp[-uvkqr][,TYPE mnxyz]\
[,OPTS(rr/m[,rr/m...])][,IW X'pq[r]]\
[,AIS {MI|PMA|DMA|PMC}][,LEV s]!
```

Provision Synchronizer Time Base [l.31101]

```
GRTH::SYNC,TB,TYPE TBpqr!
```

Provision Clock Reference Oscillator [l.31111]

```
GRTH::SYNC,TLI 3,TYPE TBpqr!
```

Provision Synchronizer Timing Link Interface [l.31121]

```
GRTH::SYNC,TLI m,{TYPE texyz,SSP a,\
SRC p[,NPC [0]abc]|TYPE TDxyz}!
```

```
GRTH::SYNC,TLI m,{TYPE texyz,SSP a,\
SRC p[,NPC uvmp]|TYPE TDxyz}!
```

Provision Test-Access Group [l.31421]
GRTH::TG mmm,NPCTG (rrr,eee[-fff];sss,\
www[-xxx])[,<tc>]!

Provision Test Port [l.31411]
GRTH::TP kk[,<tc>]!

Provision Facility Terminating Module Interface [l.31321]
GRTH::UNIT [q]q,FTMI d,IMP <imp>!

Provision a Unit [l.31211]
For DACS II Non-CEF frames:
GRTH::UNIT q[,TYPE utxyz]\
[,CONN(a[,b[,c[,d[,e [,f]]]]]]]!)!
For DACS II CEF frames:
GRTH::UNIT [q]q[,TYPE utxyz]!

Test Port Release [l.27002]
TTST::TPR,ALL[,OOS]!

Performance Monitoring Commands

3

**Set Errored
Block
Threshold
Ratio** [l.38631]
CHG::ERB ee,TYPE mn!

**Utility Clear
Counter or
State of
NPC** [l.56011]
UTL::CLR,<parameter>,ALL!

**Utility Clear
Hardware/
Software
Error
Recovery
Log File** [l.56061]
UTL::CLR,ERR,{HWER|SWER}!

**Utility Clear
Counter or
State of
NPC** [l.56001]
UTL::CLR,<parameter>,NPC [s]abc[-[t]def]!
UTL::CLR,<parameter>,NPC uvmnp[-wxkqr]!

**Utility Clear
DA/TA/PA
NPC
Parameters** [I.56071]

UTL::CLR,{NPC [s]abc[-[t]def]|ALL},\
<parameter>,AI aaaaa[,MONDAT dddd]\
[,MONTIM tttt]!

UTL::CLR,{NPC uvmnp[-wxkqr]|ALL},<parameter>,\
AI aaaaa\[,MONDAT dddd][,MONTIM tttt]!

**Clear
Facility
Performance
Parameters** [I.56051]

UTL::CLR,NPC [s]abc,PARAMS!
UTL::CLR,NPC uvmnp,PARAMS!

**Utilities,
Alarm
Reporting** [I.51101]

UTL::INIT,ALM a!

**Query
Performance
Monitoring
Data for DA,
TA, and PA
Type NPCs** [I.56091]

UTL::QRY,{NPC [s]abc[-[t]def]|ALL},\
<parameter>,AI aaaaa[,LV 111111111]\
[,MONDAT dddd][,MONTIM tttt]!

UTL::QRY,{NPC uvmnp[-wxkqr]|ALL},<parameter>,\
AI aaaaa\[,LV 111111111][,MONDAT dddd]\
[,MONTIM tttt]!

Retrieve [I.51071]
Performance
Monitoring UTL: :QRY, TOD[,CFA][,MONDAT]!
Report
Schedule

Cross-Connect Commands

4

Broadcast [l.13002]
**Cross-
Connection** BCON::FROM [s]abcddd[-eee],\
TO [t]ghijjj[-kkk][,<tc>]\[,<sc>]\
[, {NTR|LPD|CONV}][,NAM][,{CUS|INCL}][,RDC]!

BCON::FROM uvmpddd[-eee],\
TO wxkqrjjj[-kkk][,<tc>]\[,<sc>]\
[, {NTR|LPD|CONV}][,NAM][,{CUS|INCL}][,RDC]!

Broadcast [l.13021]
**Cross-
Connection** BCON::FROM [s]abc,TO [t]def[,RDC][,{CUS|INCL}]\
[, {NTR|LPD|CONV}]!

BCON::FROM uvmpnp,TO wxkqr[,RDC][,{CUS|INCL}]\
[, {NTR|LPD|CONV}]!

Broadcast Cross-Connection [l.13001]

```
BCON::FROM [s]abcd[ddd[-eee],TOX ([t]ghijjj\  
[, [t]klmnn, ...)] [, <tc>] [, <sc>]\  
[, {NTR|LPD|CONV}] \ [, NAM] [, {CUS|INCL}] [, RDC]!
```



```
BCON::FROM uvmp[ddd[-eee],TOX (wxkqrjjj\  
[, edhfgn, ...)] [, <tc>] [, <sc>]\  
[, {NTR|LPD|CONV}] \ [, NAM] [, {CUS|INCL}] [, RDC]!
```

Broadcast Cross-Connection [l.13011]

```
BCON::FROM [s]abc,\  
TOX ([t]def[, [u]ghi[, [v]jkl][...]])\  
[, RDC] [, {CUS|INCL}] [, {NTR|LPD|CONV}]!
```



```
BCON::FROM uvmp,\  
TOX (wxkqr[, edfhg][, stmno][, ...])\  
[, RDC] [, {CUS|INCL}] [, {NTR|LPD|CONV}]!
```

Broadcast Disconnection [l.15201]

```
BDIS::FROM [s]abcd[ddd[-eee],\  
TO [t]ghijjj[-kkk] [, CONV] \ [, OOS] [, DCC] [, INCL]!
```



```
BDIS::FROM uvmp[ddd[-eee],\  
TO wxkqrjjj[-kkk] [, CONV] \ [, OOS] [, DCC] [, INCL]!
```

**Broadcast
Disconnec-
tion**

```
[l.15231]
BDIS::FROM [s]abc,\
TO [t]ghi[,OOS][,INCL][,CONV]!

BDIS::FROM uvmpnp,TO wxkqr[,OOS][,INCL][,CONV]!
```

**Broadcast
Disconnec-
tion**

```
[l.15211]
BDIS::FROM [s]abcddd[-eee],\
TOX ([t]ghijjj[,u]klmnn . . .)[,CONV][,OOS]\
[,DCC][,INCL]!

BDIS::FROM uvmpddd[-eee],\
TOX (wxkqrjjj[,edhfgnnn, . . .)[,CONV][,OOS]\
[,DCC][,INCL]!
```

**Broadcast
Disconnec-
tion**

```
[l.15221]
BDIS::FROM [s]abc,\
TOX ([t]ghi[,u]jkl[,v]mno)[...])\
[,OOS][,INCL][,CONV]!

BDIS::FROM uvmpnp,\
TOX (wxkqr[,edhfg][,opqrs][...])\
[,OOS][,INCL][,CONV]!
```

**One-Way
Cross-
Connect
Terminated
Multipoint
Circuit** [l.12121]

```
OCNT::FROM [s]abcd[ddd[-eee],TO [t]ghij[jj[-kkk],\  
MPM(fmd,tmd)[,<tc>][,NAM][,{CUS|INCL}][,RDC]!  
  
OCNT::FROM uvmp[ppddd[-eee],TO wxkqr[jjj[-kkk],\  
MPM(fmd,tmd)[,<tc>][,NAM][,{INCL|CUS}][,RDC]!
```

**One-Way
Cross-
Connection
Terminate** [l.12101]

```
OCNT::FROM [s]abcd[ddd[-eee],\  
TO [t]ghij[jj[-kkk][,<tc>][,<sc>][,NAM][,RDC]\  
[, {CUS|INCL}][,PRIOUT]!  
  
OCNT::FROM uvmp[ppddd[-eee],\  
TO wxkqr[jjj[-kkk][,<tc>][,<sc>][,NAM][,RDC]\  
[, {CUS|INCL}][,PRIOUT]!
```

**Terminated
One-Way
Cross-
Connect** [l.12131]

```
OCNT::FROM [s]abc,TO [t]ghi[,RDC][,{CUS|INCL}]\  
[,PRIOUT]!  
  
OCNT::FROM uvmp,TO wxkqr[,RDC][,{CUS|INCL}]\  
[,PRIOUT]!
```

**One Way
Cross-
Connection** [l.11121]

```
OCON::FROM [s]abcddd[-eee],TO [t]ghijjj[-kkk],\  
MPM(fmd,tmd),<tc>[,{CUS|INCL}][,RDC]!
```

```
OCON::FROM uvmpnpddd[-eee],TO wxkqrjjj[-kkk],\  
MPM(fmd,tmd)[,<tc>][,NAM][,{INCL|CUS}][,RDC]!
```

**One Way
Cross-
Connection** [l.11101]

```
OCON::FROM [s]abcddd[-eee],\  
TO [t]ghijjj[-kkk][,<tc>][,<sc>][,NAM][,RDC]\  
[,{CUS|INCL}][,PRIOUT]!
```

```
OCON::FROM uvmpnpddd[-eee],\  
TO wxkqrjjj[-kkk][,<tc>][,<sc>][,NAM][,RDC]\  
[,{CUS|INCL}][,PRIOUT]!
```

**One-Way
Non-
Channelized
Digital
Signal Cross
Connect** [l.11131]

```
OCON::FROM [s]abc,TO [t]ghi[,RDC][,{CUS|INCL}]\  
[,PRIOUT]!
```

```
OCON::FROM uvmpnp,TO wxkqr[,RDC][,{CUS|INCL}]\  
[,PRIOUT]!
```

**One-Way
Multipoint
Disconnection**

```
[l.15102]
ODIS::FROM [s]abcddd[-eee],
TO [t]ghijjj[-kkk][,INCL]\[,OOS][,DCC]!

ODIS::FROM uvmpddd[-eee],\
TO wxkqrjjj[-kkk][,INCL]\[,OOS][,DCC]!
```

**One-Way
Disconnect**

```
[l.15101]
ODIS::FROM [s]abcddd[-eee],\
TO [t]ghijjj[kkk][,INCL]\[,OOS][,DCC][,PRIOUT]!

ODIS::FROM uvmpddd[-eee],\
TO wxkqrjjj[-kkk][,INCL]\[,OOS][,DCC][,PRIOUT]!
```

**One-Way
Disconnect**

```
[l.15111]
ODIS::FROM [s]abc,\
TO [t]ghi[,OOS][,INCL][,PRIOUT]!

ODIS::FROM uvmp,\
TO wxkqr[,OOS][,INCL][,PRIOUT]!
```

**Two-Way
Cross-
Connect
Terminate,
From, To,
Multipoint
Mode** [l.12021]

```
TCNT::FROM [s]abcdddd[-eee],TO [t]ghijjj[-kkk],\  
MPM(fmd,tmd)[,<tc>][,NAM][,NTR m][,RDC]\  
[,{CUS|INCL}]!  
  
TCNT::FROM uvmpddd[-eee],TO wxkqrjjj[-kkk],\  
MPM(fmd,tmd)[,<tc>][,NAM][,NTR m][,RDC]\  
[,{CUS|INCL}]!
```

**Two-Way
Cross-
Connection
Terminated** [l.12001]

```
TCNT::FROM [s]abcdddd[-eee],\  
TO [t]ghijjj[-kkk][,<tc>][,<sc>]\  
[ NAM][,{CUS|INCL}][,RDC][,PRIOUT]!  
  
TCNT::FROM uvmpddd[-eee],\  
TO wxkqrjjj[-kkk][,<tc>][,<sc>]\  
[ NAM][,{CUS|INCL}][,RDC][,PRIOUT]!
```

**Two Way
Cross-
Connection
Terminate** [l.12051]

```
TCNT::FROM [s]abcdddd,TO [t]ghijjj\  
[,{PFW(abcdefg,ijklmno)|NFW}]!  
  
TCNT::FROM uvmpddd,TO wxkqrjjj\  
[,{PFW(abcdefg,ijklmno)|NFW}]!
```

**Terminated
Two-Way
Cross
Connect** [l.12031]

TCNT::FROM [s]abc,TO [t]ghi[,RDC][,{CUS|INCL}]\
[,PRIOUT]!

TCNT::FROM uvmpnp,TO wxkqr[,RDC][,{CUS|INCL}]\
[,PRIOUT]!

**Two-Way
C-Bit Cross-
Connects** [l.11041]

TCON::FROM [s]abc,CB[,CUS][,RDC][,INCL]!
TCON::FROM uvmpnp,CB[,CUS][,RDC][,INCL]!

**Two-Way
Cross-
Connect
From, To
Multipoint
Mode** [l.11021]

TCON::FROM [s]abcdddd[-eee],TO [t]ghijjj[-kkk],\
MPM(fmd,tmd)[,<tc>][,NAM],[NTR m][,RDC]\
[, {CUS|INCL}]!

TCON::FROM uvmpnpddd[-eee],TO wxkqrjjj[-kkk],\
MPM(fmd,tmd)[,<tc>][,NAM],[NTR m][,RDC]\
[, {CUS|INCL}]!

**Two-Way
Cross-
Connection** [l.11001]

```
TCON::FROM [s]abcddd[-eee],\  
TO [t]ghijjj[-kkk][,<tc>][,<sc>][[ ,NAM]\  
[,{CUS|INCL}][ ,RDC][ ,PRIOUT]!  
  
TCON::FROM uvmpddd[-eee],\  
TO wxkqrjjj[-kkk][,<tc>][,<sc>][[ ,NAM]\  
[,{CUS|INCL}][ ,RDC][ ,PRIOUT]!
```

**Two-Way
Cross-
Connection** [l.11051]

```
TCON::FROM [s]abcddd,TO [t]ghijjj\  
[,{PFW(abcdefg,ijklmno)|NFW}]!  
  
TCON::FROM uvmpddd,TO wxkqrjjj\  
[,{PFW(abcdefg,ijklmno)|NFW}]!
```

**Two-Way
Non-
Channelized
Digital
Signal Cross
Connection** [l.11011]

```
TCON::FROM [s]abc,\  
TO [t]ghi[ ,RDC][,{CUS|INCL}][[ ,PRIOUT]!  
  
TCON::FROM uvmp,\  
TO wxkqr[ ,RDC][,{CUS|INCL}][[ ,PRIOUT]!
```

**Disconnect
TS16 and
C-Bit NPC** [l.15004]

TDIS::FROM [s]abc,CB[,INCL][,OOS]!
TDIS::FROM uvmnp,CB[,INCL][,OOS]!

**Two-Way
Disconnec-
tion** [l.15002]

TDIS::FROM [s]abcddd,\
TO [t]ghijjj[,INCL][,OOS][,DCC]!

TDIS::FROM uvmnpddd,\
TO wxkqrjjj[,INCL][,OOS][,DCC]!

**Disconnec-
tion, Cross-
Connect
Circuits** [l.15001]

TDIS::FROM [s]abcddd[-eee],TO [t]ghijjj[-
kkk][,INCL]\[,OOS][,DCC][,PRIOUT]!

TDIS::FROM uvmnpddd[-eee],TO wxkqrjjj[-
kkk][,INCL]\[,OOS][,DCC][,PRIOUT]!

**Two-Way
Disconnec-
tion** [l.15011]

TDIS::FROM [s]abc,TO
[t]ghi[,OOS][,INCL][,PRIOUT]!

TDIS::FROM uvmnp,TO
wxkqr[,OOS][,INCL][,PRIOUT]!

Macro and Map Commands

5

Activate [I.39201]
Alternate
Maps ACT::

Change [I.38501]
Macro
Space CHG::{MACRO|MAP},SPACE sss!

Delete Lines [I.19051]
From
Macro DELETE[::{<starting line>|END}\
[-{<ending line>|END}]!]

Delete [I.37201]
Macro DLT::{MACRO <macro name>|MAP <map name>}\
[,USER <user id>!]

**Edit Delete
Map** [l.37001]

```
DLT::NPC {[s]abc-[t]def|[s]abc[, [s]ghi]...\  
[,[t]def]}!
```

```
DLT::NPC {uvmnp-wxkqr|uvmnp[,abcde]...\  
[ ,wxkqr]}!
```

**Create
Picture
Alternate
Map** [l.19031]

```
ED::CRET,MAP <new map name>,\  
PIC <reference map name>!
```

**Create or
Edit a Macro
Or Map** [l.19001]

```
ED::{MACRO <macro name>|MAP <map name>}!
```

**Execute
Macro** [l.39301]

```
EXC::MACRO <macro name>[, (<p1>[,<p2>[,<p3>\  
[,...[,<p10>]]]])]!
```

**Query Line
Number** [l.19071]

```
LINE!
```

**List Macro
Contents** [I.19061]

```
LIST[::{<starting line>|END}\  
[-{<ending line>|END}] ]!
```

**Move Macro
Lines** [I.19091]

```
MOVE::FROM {<starting line>|END}\  
[-{<ending line>|END}],\  
TO {<destination line>|END}!
```

**Save
Component
Commands** [I.19081]

```
SAVE!
```

Stop Macro [I.39311]

```
STOP::MACRO[,LINK 1[mm]]!
```

Roll Commands

6

**Configure
Digroup
Circuits** [l.35001]
CFR::XC s[,INCL]!

**DS0 Circuit
Roll - Bridge
Command** [l.14021]
SW::BCAST,OLD [s]abcddd[-eee],\
NEW [t]ghijjj[-kkk][,INCL]!

SW::BCAST,OLD uvmpddd[-eee],\
NEW wxkqrjjj[-kkk][,INCL]!

**Facility Roll
- Bridge
Command** [l.14061]
SW::BCAST,OLD [s]abc,NEW [t]ghi[,INCL]!
SW::BCAST,OLD uvmp,NEW wxkqr[,INCL]!

DS0 Circuit [l.14041]
Roll -
Disconnect SW::DISC [s]abcddd[-eee][,OOS]!
Command SW::DISC uvmpddd[-eee][,OOS]!

Facility Roll [l.14081]
- Disconnect
Command SW::DISC [s]abc[,OOS]!
SW::DISC uvmp[,OOS]!

DS0 Circuit [l.14031]
Roll- Roll
Command SW::ROLL,OLD [s]abcddd[-eee],\
NEW [t]ghijjj[-kkk]\[,INCL][,FRC][,OOS]!

SW::ROLL,OLD uvmpddd[-eee],\
NEW wxkqrjjj[-kkk][,INCL][,FRC][,OOS]!

Facility Roll [l.14071]
- Roll
Command SW::ROLL,OLD [s]abc,NEW [t]ghi[,INCL][,FRC]\
[,OOS][,TWAY]!

SW::ROLL,OLD uvmp,NEW wxkqr[,INCL][,FRC]\
[,OOS][,TWAY]

Change Commands

7

Configure Synchronizer [I.35013]
CFR::SYNC,{MASTER|SLAVED}!

Configure Synchronizer Stratum [I.35012]
CFR::SYNC,STRATUM {STR2|STR3|TOLL|LOCAL}!

Change Circuit Parameters [I.17011]
CHG::FROM [s]abc,TO [t]ghi\
[,NOT [u]rst],{TLA|TLR}\{F|T|B|A}[,INCL]!

CHG::FROM uvmpn,TO wkkqr[,NOT edhfg],\
{TLA|TLR}{F|T|B|A}[,INCL]!

Change Cross-Connect Termination Status [l.17001]

```
CHG::FROM [s]abcddd[-eee],TO [t]ghijjj[-kkk]\
[,NOT [u]rstvvv},{TLA|TLR} {F|T|B|L|G|A}\
[,INCL]!
```

```
CHG::FROM uvmpdd[-eee],TO wxkqrjjj[-kkk]\
[,NOT edhfgvvv},{TLA|TLR} {F|T|B|L|G|A}[ ,INCL]!
```

Change Circuit Parameters [l.17002]

```
CHG::FROM [s]abcddd,TO [t]ghijjj\
[,TLP(snn,smm)][,NG nn][,ES ee][,INCL]!
```

```
CHG::FROM uvmpdd,TO wxkqrjjj[,TLP(snn,smm)]\
[,NG nn][,ES ee][,INCL]!
```

Change NPC AIS Alarm Option [l.38281]

```
CHG::NPC [s]abc[-[t]ghi],ALMOPT,AIS\
{MI|PMA|DMA|PMC}[ ,LEV s]!
```

```
CHG::NPC uvmp[-wxkqr],ALMOPT,AIS\
{MI|PMA|DMA|PMC}[ ,LEV s]!
```

Change NPC Loopback [l.38341]

```
CHG::NPC [s]abc[-[t]def],LPBK [d]t!
```

```
CHG::NPC uvmp[-wxkqr],LPBK [d]t!
```

Change Commands

Change NPC [l.38324]
Non Frame-
Word CHG::NPC [s]abc[-[t]def],NFS abcdefghi!
Setting CHG::NPC uvvmp[-uvkqr],NFS abcdefghi!

Change NPC [l.38221]
Options
CHG::\
NPC [s]abc,{OPTS(rr/m[,rr/m][...])|THMODE hhh}!

CHG::\
NPC uvvmp,{OPTS(rr/m[,rr/m][...])|THMODE hhh}!

Change NPC [l.38321]
Time Slot
Zero CHG::NPC [s]abc[-[t]def],TS0 abcdefgh!
CHG::NPC uvvmp[-uvkqr],TS0 abcdefgh!

Change [l.38323]
Time Slot
Zero CHG::NPC [s]abc[-[t]def],TS0M abcdefgh!
Monitor CHG::NPC uvvmp[-wvkqr],TS0M abcdefgh!

**Change NPC
Type** [l.38211]

```
CHG::NPC [s]abc,TYPE mnxyz[,IW X'pq[r]]!  
CHG::NPC uvmpnp,TYPE mnxyz[,IW X'pq[r]]!
```

**Change/Set
Options** [l.38201]

```
CHG::SETOP rr,{TYPE mn|ALL},\  
NPCOP(set1,set2,set3)!
```

**Change
Circuit
Parameters** [l.18001]

```
CHG::SWCH,TOX\  
([s]abcddd[, [t]ghijjj,[u]klmnnn,...))[ ,INCL]!  
  
CHG::SWCH,TOX\  
(uvmpnddd[,wxkqrjjj,edhfgnnn,...))[ ,INCL]!
```

**Change
Switch,TOX** [l.18011]

```
CHG::SWCH,TOX([s]ghi[, [t]jkl][,[v]mno][...])\  
[ ,INCL]!  
CHG::SWCH,TOX(uvmpn[,wxkqr][ ,edhfg][...])\  
[ ,INCL]!
```

Change Priorities and/or Type, Synchronizer or NPC [l.38011]
CHG::SYNC,TLI m,SSP b,{TYPE texyz|NPC [0]abc}!
CHG::SYNC,TLI m,SSP b,{TYPE texyz|NPC uvmpnp}!
CHG::SYNC,TLI,\SRC(i/(a,b)[,j/(c,d)[,k/(e,f)[,l/(g,h)]])!

Change Type, Options [l.38231]
CHG::TYPE mnxyz,\{OPTS(rr/m[,rr/m][...])|THMODE hhh}!

Change Type and Threshold Mode [l.38291]
CHG::TYPE mn,THMODE hhh!

Change Connectivity [l.38101]
CHG::UNIT q,CONN(a[,b[,c[,d[,e[,f]]]])!

Remove Commands

8

**Remove
Cross-
Connect
Buffer (Non-
CEF Only)** [1.33202]
RMV::CCB sf!

**Remove
Clock
Control
Interface** [1.33251]
RMV::CCI s!

**Remove
Cross-
Connect
Network
Interface** [1.33201]
RMV::CCNI s!

**Remove
ETSI** [1.33261]
RMV::ETSI sqq!

Remove Commands

**Remove
ETSIs All** [l.33271]
RMV::ETSI S,ECCN s,ALL!

**Remove
Link** [l.33011]
RMV::LINK j!

**Remove
Main
Controller** [l.33001]
RMV::MC!

**Remove
NPCs** [l.33351]
RMV::NPC [s]abc[-[t]def][,SIDE s][,INCL]!
RMV::NPC uvvnp[-uvkqr][,SIDE s][,INCL]!

**Remove
PMEM or
SMEM** [l.33211]
RMV::{SMEM|PMEM}!

**Remove
Synchro-
nizer** [l.33101]
RMV::SYNC a!

Remove Commands

Remove Synchronizer Time Base as a Clock Reference Oscillator [l.33111]
RMV::SYNC, TLI 3, CRO!

Remove Synchronizer's TLI or SSP [l.33121]
RMV::SYNC a, TLI m[, SSP b]!

Remove Time Slot Interchange [l.33221]
RMV::TSI sft!

Remove All TSIs in Cross-Connect Side (Non-CEF Only) [l.33241]
RMV::TSIS, CCN s, ALL!

Remove All Unit Connected TSIs (Non-CEF Only) [l.33231]
RMV::TSIS, CCN s, UNIT q\
[, CONN(a[, b[, c[, d[, e[, f]]]])]!]

Remove Commands

**Remove Unit
Format
Converter** [l.33331]
RMV::UNIT [q]q,FC sb!

**Remove
FTMI or
DSPI** [l.33321]
RMV::UNIT [q]q,{FTMI d|DSPI}!

**Remove
Unit
Controller** [l.33311]
RMV::UNIT [q]q,UC!

Restore Commands

9

**Restore
Cross-
Connect
Buffer** [1.34202]
RST::CCB sf!

**]Restore
Control and
Clock
Interface** [1.34251]
RST::CCI s!

**Restore
Cross-
Connect
Network
Interface** [1.34201]
RST::CCNI s!

**Restore
Expanded
Time Slot
Interchanger** [1.34261]
RST::ETSI sqq!

Restore Commands

**Restore All
ETSI** [1.34271]
RST::ETSI,ECCN s,ALL!

**Restore
Administ-
rative Link** [1.34011]
RST::LINK j!

**Restore
Main
Controller** [1.34001]
For Normal Operations:
RST::MC[,{MCOND|NOJRN|FRC}]!
For Installation and Product Evaluation Only
(Can be used only if the Lucent security warning feature bit is
set):
RST::MC,CLR[,ALL]!

**Restore NPC
Monitor** [1.34361]
RST::NPC [s]abc,MON!
RST::NPC uvwnp,MON!

Restore Commands

**Restore
NPCs** [I.34351]

```
RST::NPC [s]abc[-[t]def][,SIDE s]!  
RST::NPC uvmp[-uvkqr][,SIDE s]!
```

**Restore NPC
Time Slot 0
Monitor** [I.34371]

```
RST::NPC [s]abc,TS0M!  
RST::NPC uvmp,TS0M!
```

**Restore
PMEM and/
or SMEM** [I.34211]

```
RST:: {PMEM|SMEM[ {,CLR[ [,FRC[ [,BKGRND] ] ] } ] }!
```

**Restore
Synchro-
nizer** [I.34101]

```
RST::SYNC a!
```

**Restore
Clock
Reference
Oscillator** [I.34111]

```
RST::SYNC,TLI 3,CRO!
```

Restore Commands

Restore Synchronizer's Timing Link Interface [l.34121]
RST::SYNC a, TLI m[, SSP b]!

Restore Time Slot Interchange [l.34221]
RST::TSI sft!

Restore Time Slot Interchanges [l.34241]
RST::TSIS, CCN s, ALL!

Restore TSI For Unit (Non-CEF Only) [l.34231]
RST::TSIS, CCN s, \
UNIT q [, CONN(a[, b[, c[, d[, e[, f]]]])]!]

Restore Unit [l.34331]
RST::UNIT [q]q, FC sb!

Restore FTMI or DSP [l.34321]
RST::UNIT [q]q, {FTMI d|DSP!}!

Restore Unit [l.34311]
Controller

RST::UNIT [q]q,UC!

C-Bit Processing Commands

10

**Change Bit-
C-Off To** [l.38335]

CHG::BCOFF,TO [s]abcddd[-eee]!
CHG::BCOFF,TO uvmnpddd[-eee]!

**Change Bit-
C To** [l.38333]

CHG::BC X'abcd, TO [s]abcddd[-eee]!
CHG::BC X'abcd, TO uvmnpddd[-eee]!

**Change
Director
DACS To** [l.38331]

CHG::DD(m,w),TO [s]abcddd[-eee]!
CHG::DD(m,w),TO uvmnpddd[-eee]!

Test Access Commands

11

Non-Channelized Test, Monitor, Split, Loop [I.20101]

```
CTST::<tmode>,FAD ([s]abc[,[t]def])[,AIS]\
[,INCL]!
```

```
CTST::<tmode>,FAD (uvmnp[,wxkqr])[,AIS][,INCL]!
```

Non-Channelized Test FAD, Emode, Fmode [I.20111]

```
CTST::FAD ([s]abc[,[t]def]){[,EMODE <emode>]\
[,FMODE <fmode>]}[,INCL]!
```

```
CTST::FAD (uvmnp[,wxkqr]){[,EMODE <emode>]\
[,FMODE <fmode>]}[,INCL]!
```

Non-Channelized Test Access (Monitor, Split, or Loop) [I.20001]

```
CTST::<tmode>,FAD ([s]abc[,[t]def]),\
FROM [u]ghi\[,TO [v]jkl][,AIS][,INCL]!
```

```
CTST::<tmode>,FAD (uvmnp[,wxkqr]),\
FROM eghij[,TO jklmn][,AIS][,INCL]!
```

Non-Channelized Test Hub [I.20031]
CTST::HUB,FAD [s]abc,TO [t]jkl[,INCL]!
CTST::HUB,FAD uvmnp,TO wxkqr[,INCL]!

Non-Channelized Loop Test Access Facility [I.20301]
CTST::LPBKT,FAD [s]abc[,INCL]!
CTST::LPBKT,FAD uvmnp[,INCL]!

Non-Channelized Test NPC Release [I.20202]
CTST::TNR,ALL[,OOS]!

Non-Channelized Test NPC Release [I.20201]
There are two alternate formats depending upon the number of FADs specified.

CTST::TNR,FAD [s]abc[,OOS]!
CTST::TNR,FAD ([s]abc[, [t]def)][,OOS]!

CTST::TNR,FAD uvmnp[,OOS]!
CTST::TNR,FAD (uvmnp[,wxkqr)][,OOS]!

Test Access Commands

**Nx64 kbit/s
Two-Way
Test Access,
Hub** [l.24021]
TTST::HUB,TO ([s]abcdddd,[t]ghijjj),\
TG mmm[,<tc>]!

TTST::HUB,TO (uvmnpddd,wxkqrjjj),TG mmm[,<tc>]!

**Two-Way
Test Access,
Hub** [l.24001]
TTST::HUB,TO [t]ghijjj,TP kk[,<tc>][,NAM]!
TTST::HUB,TO uvmnpjjj,TP kk[,<tc>][,NAM]!

**Nx64 kbit/s
Looped Test
Access** [l.29021]
TTST::LPD,TG mmm[,<tc>]!

**Looped Test
Access** [l.29001]
TTST::LPD,TP kk,<tc>!

**]Nx64 kbit/s
Two-Way
Test Access,
Monitor** [l.21031]
TTST::MON,TG mmm!

Test Access Commands

**Two-Way
Test Access,
Monitor** [l.21001]
TTST::MON[,TO [t]ghijjj][,<tc>][,NAM],TP kk!
TTST::MON[,TO uvmpjjj][,<tc>][,NAM],TP kk!

**Nx64 kbit/s
Two-Way
Test Access,
Monitor** [l.21021]
TTST::MON,\nTO [t]ghi(jjj[-kkk][,lll,...])[,<tc>],TG mmm!
TTST::MON,\nTO wxkqr(jjj[-kkk][,lll,...])[,<tc>],TG mmm!

**Nx64 kbit/s
Two-Way
Test Access,
Split** [l.23021]
TTST::SPL,TG mmm!

**Two-Way
Test Access** [l.23001]
TTST::SPL,TP kk!

**Nx64 kbit/s
Two-Way
Test Access,
Test Access
Group
Release** [l.27021]
TTST::TGR,TG mmm[-nnn][,OOS]!

**Two-Way
Test Access** [I.25101]

TTST::TLA m[,NOT [t]rstvvv],TP kk!
TTST::TLA m[,NOT uvmpvqv],TP kk!

**Nx64 kbit/s
Two-Way
Test Access,
Terminate-
And-Leave-
Active** [I.25121]

TTST::TLA m,TG mmm!

**Two-Way
Test Access** [I.25501]

TTST::TLR m[,NOT [t]rstvvv],TP kk!
TTST::TLR m[,NOT uvmpvqv],TP kk!

**Nx64 kbit/s
Two-Way
Test Access,
Terminate-
And-Leave-
Release** [I.25521]

TTST::TLR m,TG mmm!

**Two-Way
Test Access** [I.27001]

TTST::TPR,TP kk[,OOS]!

Troubleshooting Commands

12

Query Facility Alarms [l.81001]
AUD::QRY,{CFA|CGA}!

Diagnose Cross-Connect Buffer [l.41211]
DGN::CCB s[,CFT X'vwxy]!

Diagnostics, CCI and BT Packs [l.41251]
DGN::CCI s[,CFT X'vwxy]!

Diagnose CCNI [l.41201]
DGN::CCNI s[,CFT X'vwxy]!

**Diagnose
Communi-
cations
Interface** [I.41031]
DGN::CI[,CFT X'vwxy]!

**Diagnose
ETSI** [I.41261]
DGN::ETSI sqq[,CFT X'vwxy]!

**Diagnose All
ETSIs on
ECCNSide** [I.41271]
DGN::ETSI S,ECCN s,ALL!

**Diagnose
Link** [I.41011]
DGN::LINK a[,CFT X'vwxy]!

**Diagnose
Main
Controller** [I.41001]
DGN::MC[,CFT X'vwxy]!

**Diagnose
Main
Processor** [I.41021]
DGN::MP[,CFT X'vwxy]!

**Diagnose
Network
Processing
Circuits** [l.41361]
DGN::NPC [s]abc-[t]def!
DGN::NPC uvmpn-uvkqr!

**Diagnose
NPC** [l.41351]
DGN::NPC [s]abc[,SIDE s][,CFT X'vwxy]!
DGN::NPC uvmpn[,SIDE s][,CFT X'vwxy]!

**Diagnose
Memory
Card** [l.41051]
DGN:: {PMEM|SMEM}\
[, {CFT X'vwxy|EXCT|DBASE}][,VERIFY]!

**Diagnose
Synchro-
nizer** [l.41101]
DGN::SYNC a!

**Diagnose
Synchro-
nizer** [l.41111]
DGN::SYNC,TLI 3,CRO!

Diagnose Synchronizer Timing Link Interface [l.41121]
DGN::SYNC a,TLI m[,SSP b]!

Diagnose Time Slot Interchange [l.41221]
DGN::TSI sft[,CFT X'vwxy]!

Diagnose Time Slot Interchanges [l.41241]
DGN::TSIS,CCN s,ALL!

Diagnose Time Slot Interchanges [l.41232]
DGN::TSIS,CCN s,\nUNIT q,[,CONN(a[,b[,c[,d[,e[,f]]]]]])]!

Diagnose DSPU [l.41341]
DGN::UNIT [q]q,DSPI[,CFT X'vwxy]!

Diagnose Format Converter [l.41331]
DGN::UNIT [q]q,FC sb[,CFT X'vwxy]!

Diagnose Facility Terminating Module Interface [1.41321]
DGN::UNIT [q]q,FTMI d[,CFT X'vwxy]!

Diagnose UnitOnUC [1.41311]
DGN::UNIT [q]q,UC[,CFT X'vwxy]!

Clear Power Supply or Backup Failure [1.56052]
UTL::CLR,PWR pp!

Utility Location [1.56401]
UTL::LOC,<entity>!

Utility Query All [1.56031]
UTL::QRY,<parameter>,ALL!

Query All Common Equipment [1.53104]
UTL::QRY,ALL,COMMON!

Query All [I.53101]

UTL::QRY,ALL[,UNIT [q]q]!

Utility [I.56021]

**Query,
Alarm
Option,
AIS**

UTL::QRY,ALMOPT,NPC [s]abc[-[v]ghi],AIS!

UTL::QRY,ALMOPT,NPC uvmp[-wxkqr],AIS!

Utility [I.53111]

**Query
Alarms**

UTL::QRY,ALMS!

Utility [I.53151]

**Query
Alarms**

UTL::QRY,ALMS,DBASE!

Query [I.52101]

**Broadcast
All**

UTL::QRY,BCAST,ALL!

Utility [1.52111]
Query
Broadcast UTL::QRY,BCAST,FROM [s]abcddd!
UTL::QRY,BCAST,FROM uvmnpddd!

Utility [1.52121]
Query
Broadcast UTL::QRY,BCAST,FROM [s]abc!
From UTL::QRY,BCAST,FROM uvmnp!

Query Bit-C [1.56351]
NPC
UTL::QRY,BC s,{NPC [s]abc[-[t]def]|ALL}!
UTL::QRY,BC s,{NPC uvmnp[-wkkqr]|ALL}!

Utility [1.56353]
Query Bit-C
To UTL::QRY,BC s,TO [s]abcddd!
UTL::QRY,BC s,TO uvmnpddd!

Query [1.52011]
Partial
Cross- UTL::QRY,CMAP [s]abc[-[t]def]!
Connect UTL::QRY,CMAP uvmnp[-wkkqr]!
Map

Utility [I.51091]
Query
Configure UTL::QRY,CNFR!

Query [I.51031]
Date
UTL::QRY,DATE!

Utility [I.56341]
Query
Director UTL::QRY,DD [s]abcddd[-fff]!
DACS II UTL::QRY,DD uvmnpddd[-fff]!

Utility [I.56343]
Query
Director UTL::QRY,{DD,NPC [s]abc[-[t]def]|DDCT,ALL}!
DACS UTL::QRY,{DD,NPC uvmnp[-wxkqr]|DDCT,ALL}!
NPC

Query Full [I.52031]
Cross-
Connect UTL::QRY,DMAP!
Map

**Utility
Query
Equipage,
Common** [I.53109]
UTL::QRY,EQD,COMMON!

**Utility
Query,
Equipment
Conne-
ctivity** [I.53031]
UTL::QRY,EQD,CONN!

**Utilities,
ETSIs** [I.53022]
UTL::QRY,EQD,ETISIS!

**Query
Equipped
NPCs** [I.53041]
UTL::QRY,EQD,NPCS[,{TOTAL|UNIT [q]q}]!

**Utility
Query
Equipped** [I.53021]
UTL::QRY,EQD,TSIS!

**Utility
Query Entity
Equipage** [I.53108]
UTL::QRY,EQD[,UNIT [q]q]!

**Utilities,
Equipment
Status** [I.53011]
UTL::QRY,EQD,UNITS!

**Query
Software/
Hardware
Error
Recovery** [I.55011]
UTL::QRY,ERR,{SWER|HWER}[,{INT mn|\
[DATE moda[ce]yr,]TOD hrmnsc}][,TN X'dddd]\
[,EVENT X'eeee][,ERCL{HARD|TRANS|APPINT}]\
[,ENTY <entity>]!

**Utility
Query Error
Source
Register** [I.55401]
UTL::QRY,ESR,CCN s!

**Query ECCN
Error Source
Register** [I.55411]
UTL::QRY,ESR,ECCN s!

**Query Error
Source
Register
Main
Processor** [I.55111]
UTL::QRY,ESR,MP!

Utility [I.55601]
Query ESR
for FTU or UTL::QRY,ESR,NPC [s]abc[,SIDE s]!
Subrate UTL::QRY,ESR,NPC uvmp[,SIDE s]!
NPC

Utility [I.55501]
Query Error
Source UTL::QRY,ESR,UNIT [q]q!
Register

Query Error [I.55531]
Source UTL::QRY,ESR,UNIT [q]q,DSPI!
Register

Query Error [I.55521]
Source UTL::QRY,ESR,UNIT [q]q,FC sb!
Register

Query Error [I.55511]
Source UTL::QRY,ESR,UNIT [q]q,FTMI d!
Register
FTMI

Query [I.51121]
Feature
Package UTL::QRY,FPKG!

Utility [I.52051]
QueryFrom

UTL::QRY, FROM [s]abcddd[-eee]!
UTL::QRY, FROM uvmpddd[-eee]!

Utility [I.52071]
QueryFrom

UTL::QRY, FROM [s]abc!
UTL::QRY, FROM uvmp!

Utility [I.54131]
Query List
Macro

UTL::QRY, LIST, MACRO <macro name>\
[,USER <user id>]!

Utility [I.54101]
Query List
Map

UTL::QRY, LIST, MAP <name>[,USER <user id>]!

Query Log [I.54011]

UTL::QRY, LOG[,ALL]!

Utility [I.53131]
Query
Loopback UTL::QRY,LPBK,NPC [s]abc[-[t]def]!
UTL::QRY,LPBK,NPC uvmp[-wxkqr]!

Query Macro [I.54211]
Attributes
UTL::QRY,MACRO,ATTR[, {USER <user id>|ALL}]!

Utility [I.54221]
Query
Macro/Map UTL::QRY, {MACRO|MAP},SPACE[, \\
Space {USER <user id>|ALL|SYSTEM}]!

Utility [I.54121]
Query
Macro UTL::QRY,MACRO <name>[,USER <user id>]!

Utility [I.54201]
QueryMap
UTL::QRY,MAP,ATTR[, \\
{ALL|USER <user id>|MAPNM <name>}]!

Note: Only the DACS II frame administrator can use the ALL option.

Utility Query Markings [I.52201]
UTL::QRY,MARK [s]abc[-[t]def]!
UTL::QRY,MARK uvmnp[-wxkqr]!

Query Channel Marks [I.52211]
UTL::QRY,MARK [s]abcjjj[-kkk]!
UTL::QRY,MARK uvmnpjjj[-kkk]!

Retrieve Memory Status [I.51001]
UTL::QRY,MEMSTAT!

Query NPC Non Frame-Word Setting [I.56324]
UTL::QRY,NFS,NPC [s]abc[-[t]def]!
UTL::QRY,NFS,NPC uvmnp[-wxkqr]!

Query Network Processing Circuit Parameter [I.56041]
UTL::QRY,<parameter>,NPC [s]abc[-[t]def]!
UTL::QRY,<parameter>,NPC uvmnp[-wxkqr]!

Utility [I.54111]
Query NPC
Map UTL::QRY,NPC,MAP <name>[,USER <user id>!]

Utility [I.53091]
Query Test-
Access UTL::QRY,NPCTG rrr[-sss]!
GroupNPC

Utility [I.53051]
Query
Options UTL::QRY,OPT[, {TYPE mn|ALL}],NPCS!
NPCs

Utility [I.53105]
Query Status
Common UTL::QRY, {PEST|FAIL|OOS},COMMON!
Equipment

Utility [I.53103]
Query Status
of Entities/ UTL::QRY, {PEST|FAIL|OOS}[,UNIT [q]q]!
Equipment

Utility [I.52081]
Query Roll
DS0 UTL::QRY,ROLL,DS0,\
{NPC [s]abc[-[t]def]|ALL[,UNIT [q]q]}!

UTL::QRY,ROLL,DS0,\
{NPC uvmpnp[-wxkqr]|ALL[,UNIT [q]q]}!

Utility [I.52091]
Query Roll
DS1 UTL::QRY,ROLL,DS1,\
{NPC [s]abc[-[t]def]|ALL[,UNIT [q]q]}!

UTL::QRY,ROLL,DS1,\
{NPC uvmpnp[-wxkqr]|ALL[,UNIT [q]q]}!

Query User/ [I.54001]
Link
Screening UTL::QRY,SCR,\
Option {LINK j[mm[-jnn]]|USER <user id>|LINKS|USERS}!

Query Trunk [I.52601]
Signaling
Conversion UTL::QRY,SIGST abcddd!
State UTL::QRY,SIGST uvmpnpddd!

Utility [I.51131]
Query
Sequence UTL::QRY, SQN!

Utility [I.54340]
Query State
Alarm Cut UTL::QRY, STATE, ACO!
Off

Utility [I.56311]
QueryState
UTL::QRY, STATE, NPC [s]abc[-[t]def]!
UTL::QRY, STATE, NPC uvmnp[-wxkqr]!

Utility [I.56314]
Query NPC
State UTL::QRY, STATE, NPC [s]abc[-[t]def]!
UTL::QRY, STATE, NPC uvmnp[-wxkqr]!

Utility [I.56301]
Query
Synchro-
nizer State UTL::QRY, STATE, SYNC!

**Query Link
Status and
Protoco** [I.55113]
UTL::QRY,STR,LINK j[mm[-jnn]]!

**Utility
Query,
Synchronizer** [I.55201]
UTL::QRY,STR,SYNC a!

**Utility
Query,
Timing Link
Interface** [I.55311]
UTL::QRY,STR,SYNC a,TLI m!

**Utility
Query SSP** [I.55321]
UTL::QRY,STR,SYNC a,TLI m,SSP b!

**Utility
Query,
Status
Register** [I.55191]
UTL::QRY,STR,XC a!

**Utility
Query,
Synchronizer** [I.53001]
UTL::QRY,SYNC,TYPE!

**Utility
Query Test-
Access
Group** [I.53081]
UTL::QRY,TGS mmm[-nnn]!

**Query
Destination
Cross-
Connect** [I.52041]
UTL::QRY,TO [s]abcddd[-eee]!
UTL::QRY,TO uvmpddd[-eee]!

**Non-
Channelized
Utility
Query To** [I.52061]
UTL::QRY,TO [s]abc!
UTL::QRY,TO uvmp!

**Utility
Query, Test
Ports** [I.53061]
UTL::QRY,TPS!

**Query Time
Slot Zero
Monitor** [I.56323]
UTL::QRY,TSOM,NPC [s]abc[-[t]def]!
UTL::QRY,TSOM,NPC uvmp[-wxkqr]!

**Query NPC
Time Slot
Zero** [I.56321]
UTL::QRY,TS0 s,NPC [s]abc[-[t]def]!
UTL::QRY,TS0 s,NPC uvmpnp[-wxkqr]!

**Utility
Query
Equaliza-
tion, Impe-
dance** [I.53071]
UTL::QRY,UNIT [q]q,FTMI b[,IMP]!

**Utility
Query
Who** [I.51041]
UTL::QRY,WHO!

**Query Cross-
Connect
Status Bus** [I.55181]
UTL::QRY,XCSB[,UNIT [q]q]!

**Utility,
Recover
Password** [I.51081]
UTL::RCY,PASSWD!

Miscellaneous Commands

13

Abort [l.55711]

ABT!

Append [l.19041]

**Component
Command**

APPEND[::<line number>|END}]!

Copy NPC [l.31521]

COPY::NPC [s]abc,TO [t]def[-[u]ghi]!
COPY::NPC uvmp,TO wxkqr[-ghikl]!

Delete [l.37301]

**Feature
Package
Identi-
fication**

DLT::FPKG nnnnnnnn!

Miscellaneous Commands

**Alarm
Cutoff** [I.51111]

UTL::ACO!

**Backup
Memory
Transfer** [I.55701]

UTL::BMTR, FROM <from>, TO <to>[, {EXCT|INCL}]!

UtilityBoot [I.58001]

UTL::BOOT, FRAME[, CLR]!

Set Date [I.51021]

UTL::DATE <new-date>[, FORMAT ggg][, INT ii]!

**Set DACS II
System** [I.51011]

**Clock or
Daily
Facility
Alarm
Reporting
Time** UTL::[TOD hrmnsc][, {CFA|PRIM X'ghij|MONDAT}]!

**Upgrade
Frame**

[I.55731]

UTL: :UPGRD!

cc	<i>Explanation</i>
00	No conditions
01	Assignment of single priority to multiple SSPs Backup required before executing this command Invalid range for specified NPC type No FADs were activated by link n No test ports were activated by link n Subject entity is equipped
02	Invalid NPC type for AIS insertion Manual Pending is Active One or more FADs could not be released One or more test ports could not be released Subject entity is not equipped
03	DS3U NPC already In-Service No RDC or CUS circuits and INCL keyword used Subject entity is in service
04	This NPC type does not allow unframed Clear-DS1 MONDAT keyword is invalid for this feature No NPC's out of service and OOS keyword used Subject entity is out of service
05	This NPC type does not allow Payload Invalid parameter combination Invalid use of CONV keyword Subject entity is pested This NPC type does not allow unframed Clear-DS1

cc	<i>Explanation</i>
06	Device failed to format Invalid range for specified FROM NPC type Mismatch between MXR and MIU HDW types
07	Device failed to initialize Invalid range for specified TO NPC type Mismatch between MXR and NPC types
08	Cannot remove own link Invalid FROM NPC type for AIS insertion Mismatch between service MXR and protection MXR types
09	Invalid TO NPC type for AIS insertion Last link in service Wrong MXR type grown for this MIU
0A	All CBTYPE NPCs out of service or failed DGN on subject entity failed Minor Slip threshold disabled before Major Slip threshold
0B	Another signal already active prevents this signal from being sent BOOT on subject entity failed Invalid CEPT NPC
0C	DGN on subject entity denied PM scheduling report is already inhibited for this entity The MONDAT and MONTIM parameters can not both be specified
0D	PM scheduling report is already allowed for this entity Unpesteing error registers for subj. entity failed
0E	No equalization for CEPT FTMI Only one parameter is allowed The specified parameter is not applicable to operation mode of the RT
0F	Frame time is not set Side specified for non-duplicated NPC
10	NPC out of service or failed RT's alarm exists Unit is not equipped
11	NPC not equipped

cc	<i>Explanation</i>
	PMEM type no longer supported
	UC is out of service
12	Active CCN side not IS or failed or pested or hardware OOS First and Last NPCs are outside unit boundary
	UC is in service but failed
13	FTMI is not equipped First and Last NPCs are outside a module boundary
	Unit not equipped, not in service, or failed
14	1 hr \geq 24 hr for DM opt CCB not eqd, not IS, or failed or inactive side CCB not eqd or not IS FTMI is out of service
	OFFSET range is invalid
15	15 min \geq 24 hr for SERS opt FTMI not equipped, not in service, or failed
	NPC is unequipped
16	15 min \geq 24 hr for ERS opt FC not eqd, not IS, or failed or inactive side FC not eqd or not IS Only up to 4 historical data registers are allowed
	SYNC TB is not equipped
17	15 min \geq 24 hr for US opt Command did not execute for any entity specified in the command SYNC is out of service
	TSI not eqd, not IS, or failed or inactive side TSI not eqd or not IS
18	15 min \geq 24 hr for SLIP opt CCNI is out of service DSPI not equipped, not in service, or failed DSPI not in service or failed
	Exceeded limit of reports with accum. interval of 15 min. or less
19	Exceeded maximum limit of PM reports Mate CCN side is out of service
	Test ports must be on CAS
1A	Mate SYNC is out of service Report already exists

cc	<i>Explanation</i>
	Required FLI not equipped, not in service, or failed The facility parameter not programmable for specified x or z parameter
1B	CCN side s is in service Historical data can not be specified Required MXR not equipped, not in service, or failed Two digroups from same bank added to different FTMI's
1C	CCN side s is out of service Reqd FMT not eqd,not IS,or failed,or inact side FMT not eqd, or not IS
1D	Level field is not allowed Required MIU not equipped, not in service, or failed
1E	Customer control or red circuit exists Monitored Date field is not allowed
1F	FTMI is in service but failed Scheduled reporting for this NPC is inhibited
20	Line format types are incompatible Only DAILY for accumulation interval is allowed Option rr/m has not been set up on 2nd database Software Identification Block is not readable
21	Minor >= major for SLIP opt Only 15MIN for accumulation interval is allowed Software Identification Block failed comparison Trunk conditioning is invalid
22	FMC cannot be cross-connected in this format FTMI is PESTED Minor <= major for BER opt Release number mismatch
23	Minor >= major for COFA opt No PM data available Point number mismatch
24	Monitored Time field is not allowed PDI Version number mismatch Unit type error

cc	<i>Explanation</i>
25	Accumulation Interval field is missing FTMI type error Invalid FPI value
26	Feature deactivation would leave system with core software NPC type error
27	Disable not allowed - supports another feature Illegal connectivity specified Only historical data can be specified
28	Connectivity contains unequipped units Feature is active Scheduling report could not be found
29	Feature not enabled IW is UMUX (18) but NPC not type DE4yz This signal is already being sent
2A	DMI combined with T1DM Database not loaded Deny Clear-2MB for Alternate Maps Incorrect pack type in slot
2B	Bit c not settable Database corrupt Maj Min BER threshold is 7, but not in T1DM or Fe mode Reading Feature Package Id from PMEM failed
2C	Write to CPR failed Writing Feature Package Id to PMEM failed Not allowed for clear 2MB
2D	RTF keyword is used without DGA TS0 is crossconnected to TS0
2E	RTF keyword and the operation mode does not match Bit value not allowed for NPC type
2F	Channels assigned, cannot be grown as test port TS0 connected to nonTS0 in Mode 2 - "a" should be "-" or "b" The RT id entered is not a retrofit one
30	NPC not provisioned for CAS

cc	<i>Explanation</i>
	No signals active Termination is already assigned Unit is not FTU type
31	Accumulation Interval field is not allowed Failed to switch SYNC side NPC not provisioned for NSA
32	Bit 3 provisioned for use as RAI3 Termination is under test Threshold value is out of range
33	Bit 4 provisioned for use as RAIS NPC not DA or TA type. Termination is a test port Wrong TLI type
34	NPC type option xyz is unassigned Termination is under customer control (CUS)
35	Invalid use of INCL keyword NPC has active circuit Termination is protected (RDC)
36	The mate FLI is OOS and Protection MIU is equipped DSPI not equipped INCL keyword needed when restricted Insertion Word specified TD on one(both) sync(s) is not equipped or not in-service Termination is not connected as indicated The mate FLI is OOS and Protection MXR is IS
37	DSPI out-of-service Major/Minor BER threshold value is invalid for SLC NPCs Selected FLI has LOC with at least one inservice MXR The mate FLI is OOS and at least one Service MXR is equipped Two confs. were prev. connected or the concat. cause BRD-BBL loop
38	Deny SP Type NPCs for Alternate Maps FC not equipped The selected FLI is IS and Pested and at least 1 Service MXR is eqd

cc	<i>Explanation</i>
39	Unselected FLI has LOS with at least one inservice MXR An autonomous switch is in progress MXR LOS with unselected FLI Not enough TSIs for CCB test
3A	Signaling state of the trunk failed for the channel Bit 4 provisioned for use as RBER Invalid FPI value Invalid poll time
3B	No unmapped slots on a bus Bit 5 provisioned for use as SFI Not valid for frame administrator Unspecified L2 address
3C	Bits 3 through 8 are provisioned for Transmic 1G Duplicate L2 address TS0 specified with width not 1
3D	Alarm bits cannot be passed through or inverted Illegal test access mode for TS0 No mapped slots on a tsi
3E	DSPI failed Mapped slots exist on a tsi TS16 specified for test with width not 1
3F	Conference exists in a DMB G4 to G4.1 retrofit failed Illegal test access mode for TS16
40	CCN denied request FC out of service Not enough DSPPs are equipped Only one channel allowed to have this language Signaling processing is not activated for the channel The service FLI is out of service or pested (TOSRVC option)
41	Failed to boot subject CCN side Language "F" provisioned for this channel Not enough DSPPs are in service

cc	<i>Explanation</i>
42	The protection FLI is out of service or pested (TOPRTN option) Change not valid DSPP not in service, or failed RST failed to boot program
43	The service FLI is already selected (TOSRVC option) (NPC) Hardware mismatch RST failed to boot DB
44	The protection FLI is already selected (TOPRTN option) Trying to change in NTR direction Invalid direction specified for NTST TLA/TLR NPC not IU/TI type
45	Service MXR is not equipped A DMB on the Unit is OOS IU/TI type NPC failed NPC not provisioned as DGA
46	Service MXR is out of service Failed to boot CONF file NPC Failed or Out of Service Service MIU is out of service Virtual SLC NPC not provisioned
47	Failed to boot DB IU/TI type NPC Invalid channel number Protection MXR is out of service
48	Bad PRIM X'efgh values Failed to boot journal--recurrence indicates database corruption Invalid SLC Mode-III channel number Protection MIU is not equipped
49	FAC keyword is invalid for this feature Failed to boot unit Protection MIU is out of service Test group unequipped
4A	PRIM keyword is invalid for this feature

cc	<i>Explanation</i>
	Red circuit, INCL not entered SMEM error, boot from PMEM The protection MMFG is serving another facility Channel part of a TP or TG
4B	Customer controlled circuit, INCL not entered PMEM error, boot from SMEM The Service MMFG is already under protection The common bit(s) is(are) not set in both FAC & PRIM Channel already under test
4C	BCON BBL has one or more legs under test Both FAC and PRIM values(keywords) are required Failed to boot CI The Service MMFG is not under protection
4D	DSPI is in service Gateway test access not supported MP database not consistent with Configuration file The switch is allowed (not inhibited)
4E	IW option is not allowed for new type of Clear-DS1 NPC RTBC conference exists The switch is already inhibited
4F	BER must not be less than 4 for Clear DS1 NPC is not part of a one-way connection Inconsistent BCON width for test access
50	CPR in buffer overflow condition Can't run test on active side Invalid MIU/MXR type specified Trunk conditioning doesn't match that of conference Invalid channel designation for BCON
51	C-bit modify function is disabled CUS flag doesn't match that of conference General boot failure (vanilla flavor) TG width incompatible with circuit The pair MXR is not equipped

cc	<i>Explanation</i>
52	CPR is not equipped Database is empty FDL selected with width not 1 RDC flag doesn't match that of conference The MMFG is protected
53	CPR is out of service Database is not empty TO side of two-way to be converted is not an FTU NPC The associated MMFG is under protection (for Service MIUs) Inconsistent HUB width for specified TG
54	Conversion leg is terminated Cross-connect to CPR is required The MIU is already equipped Invalid mode for TLA/TLR
55	Invalid CFT code Some associated NPCs are equipped Width of existing two way does not match conference width Circuit already terminated
56	FROM is a two-way and no CONV specified The MXR is in service Unrunnable CFT code Circuit not terminated
57	Designated TG or circuit to be tested in process of being rolled FROM is not a backbone leg SIDE must be specified for substrate NPC
58	DSPU is not equipped NPC is OOS for a TGR command and OOS keyword not specified SLC 96 MD 1 RT DGP requires mate NPC to be unequipped Specified width does not match existing conference width
59	DSPU unit controller is out of service Invalid TC specification NTR invalid since existing conference is not already NTR Number of DGPs on each unit is limited to 32

cc	<i>Explanation</i>
5A	DSPU unit controller is failed LPD invalid since existing conference is not already LPD NPC unequipped, out of service or failed
5B	C-bit modify function is active TO is not a leg of this/any conference Channel is OCON in opposite direction
5C	Can't disconnect return leg unless entire conference disconnected Inconsistent or invalid circuit type for Nx64Kbit TA NPC providing timing to inservice SSP
5D	Inconsistent Signaling on CEPT NPCTGs Sync source NPC is not inservice TO is the backbone leg of a conference
5E	Sync source NPC is not equipped TO is a part of the same conference as a previous TO Invalid test access mode
5F	Conference is NTR: has no switchable return leg Input channel out of range (SLC not supported)
60	Conference is LPD: has no switchable return leg Selectable AIS not valid for specified NPC(s) type User macro/map space is full Circuit contains mapped channels for HUB request
61	All NPC(s) are either not valid or not grown System macro/map space is full TO is already the return leg Not all FROM channels on same NPC
62	File is being accessed IU type NPC(s) cannot be provisioned for Minor Alarm Invalid channel number NPC type mismatch None of the designated NPCTG(s) are equipped
63	File already exists NPC is a DGP NPC is a channelized NPC

cc	<i>Explanation</i>
64	None of the designated TG(s) are equipped File doesn't exist/can't be accessed Frame is not in MCOND NPC is a non-channelized NPC NPC is already grown and added as SLC digroup TG width too large for single NPCTG
65	Another NPC is grown and added as this digroup Command invalid while backup in progress Ending channel is out of range Link being used is not Link 1
66	DGP designated to bank without data link Map/macro file write deferred until backup is completed TG number previously assigned User login-id is not DAX
67	DGA is not added Improper roll command sequence NPC(s) actual type incompatible with TYPE keyword and/or alarm type User logged off during session
68	Incorrect language/addressing mode NDL option is used without DGA New NPC already cross-connected or mapped channel(s) exist on New
69	Incorrect number of parameters Mapped parity channel(s) on new Use of this NPC is RESERVED for SLC 96 MD 1
6A	NPC type is not DS type New in CGA or PBA No macro is currently executing
6B	Invalid line number No mapped channel on old Operation mode and digroup name don't match
6C	File is empty Framing format, digroup name & operational mode don't match

cc	<i>Explanation</i>
6D	Old and New channel on same NPC and within the range Counting sequence and operational mode don't match
6E	One NPC is a non-channelized type and the other is not DGA with NDL option is not provisioned with D4 or ESF framing format No edit session active
6F	Old or new is a non-channelized type in a DS0 command Adding two digroups from one bank on same DDC The OLD or NEW NPC is already being rolled. The session is terminated due to maintenance operation
70	Digroups from same bank have different modes NPC invalid type One of the FAR end channels is being rolled Some circuits not activated,cleared or pictured Try to add a BBL to VC,but the VC already has backbone
71	Digroups from same bank have different counting sequence NPC is a Facility Access Digroup The reference map does not exist Try to delete a BBL leg from VC;however, VC has no BBL leg Unmapped channel(s) on old
72	Digroups from same bank are added to two different FTUs Invalid test mode for an unmapped test session One of the far NPC(s) is SLC The NPC of VC BBL leg doesn't match that in the input command The map is not valid
73	Both sides of CCN are OOS Channel has a FAR, which is within the range Invalid PWR/MISC alarm level Invalid test mode for a one-way test session The first channel of VC BBL leg doesn't match that in the input cmd
74	At least one UC is OOS or At least one UC is failed Old and new are the same NPC in a DS1 command PWR/MISC alarm is specified to a digroup other than DGA

cc	<i>Explanation</i>
75	Try to delete a BRD leg from VC; however, VC has no BRD leg At least one UC is not the correct type Old and new channels have not been paired by a BCAST command.
76	Test session already exists The input BRD leg is not in VC AIS not entered for SPLTE/SPLTF/SPLTEF/LOOPE/LOOPF Alarm option and bank mode don't match Channel or NPC not bridged The first channel of VC BRD leg doesn't match that in the input cmd
77	Obsolete circuit type Tried to disconnect a nonexisting VC Unassigned operational mode
78	Protection switch process failed Ranges of old and new do not match Try to operate a ONE-WAY conference with a TWO-WAY input command
79	DCTN conference channel cannot be rolled DGA/DGP of RT/DL Mode I must be assigned to one DDC NPC is not a Facility Access Digroup Try to operate a TWO-WAY conference with an ONE-WAY input command
7A	Mode I RT/DL IDs don't match for DGA/DGP on same DDC NPC is not an E-end Testport/testgroup channel cannot be rolled The NPC to delete has not been previously added to map
7B	Channel out of bound in a BCON/v.c Invalid change from previous mode Other NPC on this DDC not the same digroup for Mode I DGA/DGP
7C	Different DSxyz types are used for DGA/DGP on same DDC for Mode I Logical conflicts found in the map NPC is not a F-end Parity channel out of bound on new

cc	<i>Explanation</i>
7D	Can't start new session - previous session still verifying Not first channel in a BCON/virtual conf The NDL options are different for DGA's on the same DDC for Mode I
7E	Bank id number not found Framed/Unframed clear 2Mbit/s NPC invalid for Automatic CRC-4 Insufficient data for setting up a conference
7F	NPC is not added No OOS keyword is given for out-of-service NPC Unframed clear 2Mbit/s NPC invalid for TS0 processing
80	Database conference width does not match the range in input command Framed/Unframed clear 2Mbit/s NPC invalid for Transmic 1G, 2G Inconsistent channel range width NPC number and bank id don't match Some TSIs to degrow are in service
81	Conference Port is currently registered to a different channel Frame ID is protected Framed/Unframed clear 2Mbit/s NPC invalid for Firmware Timing Invalid input BBL as fmd in ONE-WAY command NPC number and digroup name don't match
82	Can not use 12-th TP when NPCTP is in the T1DM or DMI mode DL ffff is used w/ operational mode other than Mode I Invalid input BRD as tmd in ONE-WAY command Unframed clear 2Mbit/s NPC invalid for Bit 4 used as RA IS/RBER
83	Attention: preceding ccode 83 is an anomaly - see problem list Conference Port is already registered to the same group of channels Invalid input BBL in terminated TWOWAY/ONEWAY command Language is not allowed NPC type is inconsistent with FTMI type Option not programmable for this NPC type
84	Channel(s) is already registered Incompatible types of NPCs on a circuit pack

cc	<i>Explanation</i>
	Mate NPC is not equipped NPC is non-channelized Problem occurred while accessing SMEM or unformatted SMEM Trying to add or delete a leg when a conference is under test
85	IW not allowed to be specified in Clear 2Mbit/s Input BRD (BBL) has same NPC and channel as BBL (BRD) NPC has been designated as NPCTP New bank id is an assigned one Problem occurred while accessing PMEM Using the 24th channel of a T1DM NPC
86	Attempt to remove DGA w/o INCL keyword or prior prot. sw. request NPC is NPCTG and chan 24 is used in a TG;Can't change to T1DM or DMI NPC number out of range Source does not contain requested information Using the 24th channel of a DMI NPC
87	Copy source NPC is not equipped DGP is protecting a primary digroup NPC as 12th test port can not change to DMI nor T1DM
88	Conference port is not registered NPC is not a NPCTP Report interval is not an integral number of accumulation interval SMEM is a normal SMEM
89	Can't delete because not all associated NPCs of the RT are entered Conference port is currently connected Interval is not valid/not available NPC is not designated for this NPCTP/NPCTG
8A	Problem occurred while accessing BOTH_MEM Mismatch between channel 0 crossconnect and keywords NPCTP is not grown
8B	x & z parameters on DSxyz are inconsistent Channels and conference port do not match Digroup name and bank id don't match

cc	<i>Explanation</i>
	PMEM not in service or not ready
	Test port is not idle or frame is not inservice
8C	DB MP or units ram error
	Digroup is protected
	The two FADS entered are not associated with one another.
8D	Clear gateway test access disallowed.
	DB PMEM error OP-CL-RD-WR-SK
	RT/DL has unrestored DGA
8E	Attempt to add to a null transmitting port
	DB can't send or receive mail
	DGA protected; use INCL to remove, or unswitch protection
	No mapped circuit under test; emode/fmode can't be changed.
8F	Can't lock or unlock ram database
	NPC not deleted
	Number of transmitting ports does not match existing conference
	One-way circuit under test; emode can't be changed.
90	Can't mount or unmount BOTH_MEM
	DB can't get the slave mail box
	Invalid change parameter combinations
	NDL option is specified for DGA
	The total number of receiving ports specified exceeds the max.
	Emode/fmode can't be changed under current test mode.
91	Can't mount or unmount SMEM
	Can't mount or unmount password recovery card
	Duplicate ports specified
	Option not programmable for this NPC type
	SR NPC was specified - not allowed
	Sync is not configured yet
92	Boot TLI failed
	Can't mount or unmount PMEM
	Transmitting port cannot be dropped
93	All digroups not out of service
	PA NPC threshold already in inhibit mode

cc	<i>Explanation</i>
	SMEM is not present TB type in hardware mismatches DB The conference does not exist
94	Conference port is not in conference circuit Mate RT/DL mode is different PA NPC threshold already in allow mode SMEM unit is not restored
95	Invalid option, mailbox or flag Range overlapping between FROM and TO or between two TOs TG East/West type inconsistent with each other or circuit
96	Conference already exists Subject PWR to be cleared is not failed Unit(s) OOS, and additional backup required Incompatible HUB feature types
97	Conference port cannot be dropped out of conference by switch command Entity can't be addressed in this configuration User quit the menu Option LOCAL already exists
98	Checksums verification failed Error in input Test Port release failed Unable to verify Configuration file since MP DB not loaded Option REMOTE already exists
99	G1 SMEM for SMEM->PMEM w/journals No Facility Line Interface (FLI) is In Service Unit type (xyz) not supported Can't change option, protection switch is active
9A	Formatter (FMT) on active CCN side is Out-Of-Service Can't change option, inhibition is active Hub id not set when MJU pack grown
9B	INCL must be specified for SRDC ckts Termination is under test or is a test port or group

cc	<i>Explanation</i>
	The MXR is not grown
9C	Parity channel cannot be within the range of a DS0 command. SRDC timeslots are allocated on this NPC
	The MMFG is already In-Service
9D	Attempt to remove a Service MIU which is under protection NPC containing channel 000 is invalid type.
	Current hub id specified in command
9E	MONDAT set to ALL is not allowed
9F	MONTIM set to ALL is not allowed
	Current error corrector pack type specified in command
A0	Illegal LEG LEG combination No SAFE alarm for DGP Not a CRO TLI TS16 specified for CAS TG
	The selected MXR associated with the NPC is Out-Of-Service
A1	CRO type TLI (SSP portion not required) Illegal BBL BBL combination Loop back inhibited for digroup NPC has been designated as NPCTG
	The parameter specified does not match with the NPC type
	The selected MXR associated with the NPC is In-Service but failed
A2	All channels assigned, cannot be grown as NPCTG Illegal BRD BRD combination SSP number is illegal The requested digroup is carrying service
	The selected MIU associated with the NPC is Out-Of-Service
A3	Channels assigned, cannot be grown as test group Illegal SYM BRD combination LLB not initiated SSP number required
	The selected MIU associated with the NPC is In-Service but failed
	Transmic 1G NPC designated as SYNC source invalid
A4	Both syncs are in-service

cc	<i>Explanation</i>
	Firmware timing invalid for Transmic 1G NPC Illegal BRD SYM combination NPC is not a NPCTG
A5	The MXR diagnostics failed (Timing Distributor) TLI is not equipped AIS keyword incompatible with NPC type Autonomous loopback is active on DGA FPI on SMEM does not match one on PMEM Illegal BBL SYM combination
A6	Test group is not idle or frame is not In Service Deny SLC for Alternate maps Illegal SYM BBL combination Invalid switch request for DCLU Test group release failed
A7	The MIU diagnostics failed Deny non-channelized NPCs for Alternate Maps LEG mode was assigned to a DSPU-type NPC on the input NPC has been designated as NPCTP Sync 0 is not in-service The MIU boot failed
A8	A DMB mode was assigned to a FTU-type NPC on the input NPCTG not grown Sync 1 is not in-service The MMFG is Out Of Service
A9	Both syncs are out-of-service Circuits TCONed itself cannot be UTST Cross-connect not consistent with feature package INCL not specified and at least one NPC In Service No unmapped time slot
AA	Trying to add a BBL to a DMB conference that already has one DSPP pack UC Failed or Out of Service NPC is NPCTG, changing to CAS/NSA is not allowed Range entered without FRC keyword

cc	<i>Explanation</i>
	Syncs are equipped
AB	Trying to add a broadcast leg to a conference set up as SYM Bad sync mode DSPP pack FTMI Failed or Out of Service FRC specified for protection, and service MMFG is In Service
AC	Trying to add a SYM leg to conference set up as broadcast DSPP pack NPC Failed or Out of Service No protection is available for the Service MMFG Timing Extractor type TLI (need SSP info)
AD	Trying to add a BBL leg to a conference set up as SYM Not Timing Extractor type TLI (not SSP) The Protection MMFG is selected, and auto. switchback is unavailable
AE	A substrate circuit pack is specified in the command line MXR is failed NPC used as a timing reference Wrong TLI type (need CRO grow command)
AF	3 Timing Distributor type TLIs are equipped Delete or change a leg from a conference that has no leg MIU is failed Number of SLC RT's on each unit is limited to 80
B0	Bad use of INCL, cannot override the current state of the conference Combination of bit g (b7) and h (b8) is invalid FLI is out of service Unit 1 denied request
B1	Bad use of INCL, cannot use keyword on conf.-to-conf. connection FMT is out of service Illegal priority value Unit 2 denied request
B2	Illegal SSP type (not same as other SSPs) MXR is out of service Transmission parameters in command will not change existing settings

cc	<i>Explanation</i>
B3	Unit 3 denied request MIU is already in service Trying to change level out on BRD leg Unit 4 denied request X option is illegal
B4	NPC is channelized type Trying to change level in on BBL leg Unit 5 denied request Y option is illegal
B5	CPR circuit pack specified in the command NPC is a test port Unit 6 denied request Z option is illegal
B6	C-bit operations are enabled Sync architecture is same TO side is not a DMB type NPC The MXR boot failed
B7	Cannot perform DMB CHG on input direction F No DSP unit equipped Some TLIs are still equipped The associated MXR is In-Service but pested
B8	CRO is still equipped Cannot perform DMB CHG on input direction T No CBTYPE NPC equipped
B9	Cannot perform DMB CHG on input direction B No CBTYPE NPC capacity remaining Timing Extractor type TLIs are present
BA	Inactive side NPC out of service and inactive side in service TLI 3 or 4 still equipped
BB	Timeslot channel numbering not allowed with CAS
BC	DGA and DGB must be specified together in the command SSP with 0 priority present
BD	DGC and DGD must be specified together in the command

cc	<i>Explanation</i>
	Looped Circuit Access not allowed
	SSP with non 0 priority present
BE	Hardware mismatch or not present
	NPC type option Y is invalid for SLC-96 NPC
BF	MIU is not equipped
	Sync mode is same
C0	Cannot perform DMB CHG on input direction L
	NPC addressing scheme selected is not allowed in the configuration file
	Sync stratum is same
C1	Cannot perform DMB CHG on input direction G
	Stratum not allowed
C2	Cannot perform DMB CHG on input direction A
	ETSI cannot be initialized when ECCN side is OOS or inservice but pested
	SSP type(options) same
C3	Can't perform DMB CHG because NTR flag set on FROM side
	Wrong SSP type(Timing Extractor type)
	XMIT continuity test won't be run: CFT code specified
C4	Can't perform DMB CHG because NTR flag set on TO side
	Sync architecture different
	XMIT continuity test won't be run: no XMIT timeslots available
C5	Option NOT leg can not appear with F, T, or B
	RCV continuity test won't be run: no available IS NPCS for FC/FMT
	Some priority values required
C6	No available timeslots on any inservice NPCS associated with FC/ FMT
	Option NOT leg is not a FTU leg
	Some priority values not required
C7	Option NOT leg is not in conference
	Priority values are same
	RCV continuity test won't be run: no DMB timeslots available
C8	Exceeded depth limit of 6 on broadcast conference concatenation
	RCV continuity test won't be run: at least one timeslot in use

cc	<i>Explanation</i>
	Sync pack denied command
C9	CATP due to skipping continuity test for FMT In-service NPC change not allowed Syncs failed to cross couple
CA	The INCL keyword is needed for DGA Connectivity can not be specified for CEF unit Mate sync pack denied command New NPC same as existing one
CB	No protection switch is currently active NPC parameter only valid with TU type TLI Protection entity out of service or failed Skip error summary since adjacent pack not in service or pested
CC	Sync not completely reset NPC is still provisioned to provide sync timing Protection entity is unequipped
CD	RCV continuity test won't be run: SYNC OOS or pested Data link failed NPC not designated as sync timing source
CE	Subject NPC does not support CEPT BER feature CCI is out of service Far end failed to respond
CF	NPC already allocated as sync timing source MIU is out of service NPC already grown as non-synchronization source
D0	SYNC is inservice but failed Command is Frame administrator (DAX) only. FROM NPC is not provisioned as DGA
D1	CCI is not present Cannot create any more users Protection switch existing is autonomous
D2	TO NPC is not provisioned as DGA ETSI is not present Protection switching is already inhibited

cc	<i>Explanation</i>
	User has been created
D3	CCNI is inservice but failed Corresponding NPC for FROM virtual channel is not provisioned Protection switching is already allowed User does not exist
D4	A user is already logged in on the link/vc Active CCN side is out of service CCI is inservice but failed Corresponding NPC for TO virtual channel is not provisioned
D5	Boot in progress, can't service request CCB is not equipped No user is logged in on the link/vc
D6	CCB is out of service Incorrect or missing password Invalid FROM channel number
D7	CCB is inservice but failed Cannot execute privileged command Invalid TO channel number
D8	Cannot remove Frame administrator ETSI is not equipped
D9	ETSI is out of service Invalid FROM channel number range User has logged in somewhere
DA	ETSI is inservice but failed Invalid TO channel number range User is not logged in
DB	FC is inservice but failed User still owns files
DC	A loopback is active on the FROM termination No zeros allowed for DAX privilege
DD	A loopback is active on the TO termination FMT is in service but failed Password recovery card is not READ-only

cc	<i>Explanation</i>
DF	Command and protocol are inconsistent FLI is inservice but failed Unmatched channel range
E0	Bad FAC value entered ETSI not equipped, not in service, or failed Hardware database mismatch
E1	Unmatched channel range involving SLC Mode III termination A locally switched channel is specified as BBL, LEG, or BRD No Memory Backup Has Been Scheduled Virtual circuit is not specified for X.25 link
E2	Attempt to one way cross-connect a locally switched channel Invalid link number specified
E3	Attempt to broadcast a locally switched channel Can't Use LCN 0/LGN 0 - designated as a supervisory channel only Invalid keyword(s) combination specified
E4	One way unassigned channel/NPC in QRY,TO Broadcast unassigned channel/NPC in QRY,TO Invalid NPC addressing scheme specified NPC already has Equipment Loopback
E5	RT-DCLU cross-connect with different ids Adding DL DGP forbidden for SLC 96 MD 1 Invalid combination of "x" and "z" values No user/link needs to be changed
E6	RT-DCLU cross-connect with different channel number Cross-connect a non Mode I channel to DCLU DB SMEM error OP-CL-RD-WR-SK No DL digroups can be added until the associated RT bank is created
E7	Cross-connect a non SLC channel to DCLU Invalid combination of "x" and "y" values PMEM not restored
E8	Other FLI is OOS SC invalid for cross-connection specified

cc	<i>Explanation</i>
E9	MUX or TRB invalid for cross-connection specified There are no INS MXRs to run test on
EA	AIS invalid for cross-connection specified XON/XOFF flow control is supported only on Snider link
EB	ENQ/ACK flow control is supported only on Snider link NAM invalid for cross-connection specified
EC	Invalid channel 000 cross-connection specified
ED	Invalid channel 031 cross-connection specified OLD termination is not mapped
EE	Trunk type is not allowed in the circuit specified
EF	Invalid circuit type SSC circuit pack is still equipped; pull-out/remove SSC Software does not contain Enhanced CEPT feature
F0	Clock absent for XPC to loop back Range not allowed for circuit type SSC Diagnostic Failure
F1	File has already been cleared PMEM and SMEM synchronization fail Parameter only valid with PA, PB, or PC type NPCs
F2	Invalid NPC number specified Not a DACS II compatible Flash Card
F3	Flash Card is empty Maximum number of CPRs have already been grown for this unit
F4	OLD and NEW channels cannot be the same PMEM and SMEM are different
F5	Conference first channel doesn't match input Flash Card is not present INCL keyword needed to perform this command
F6	Flash Card is bad Leg type mismatch T1DM or DMI mode and channel 24 is connected
F7	Corresponding NPC for virtual channel is not provisioned OLD data channel cannot be parity channel type

Denial Codes

cc	<i>Explanation</i>
F8	OLD and NEW Data and Parity channels partially overlap
F9	Cannot clear journals for OOS unit Mate NPC (DGA/DGP) is in service
FA	SSC software out of date The mode of the RT is not applicable
FB	PMEM verification failed
FC	Invalid executable on card Superuser logged on ZBTSI option is only valid with the ESF mode
FD	Command not allowed Line Loop Back is active NPC range crosses unit boundary
FE	AIS entered for MONE/MONF/MONEF/SPLTA/SPLTB/SPLTAB Change to non-ESF digroup with 16-state cross-connect
FF	Change to T1DM digroup with cross-connect that is not TRSP DB retrofit fail Termination is in process of being rolled

cccc	<i>Explanation</i>
0000	No conditions
0001	CEC bit on PRISM not cleared
0002	Firmware error
0003	Transmit underrun threshold exceeded
0004	Bad EMXR Acknowledgement
0005	Timeout while waiting for msg from EMXR
0006	RAM data error
0007	Invalid code checksum
0008	Error in PRISM register
0009	Error in HSCC register
000A	EPROM checksum error

cccc	<i>Explanation</i>
000B	Timer 1 error
000C	Timer 2 error
000D	DUART error
000E	MIU access error
000F	CPU internal bus error
0010	CPU parallel bus parity error
0011	CPU serial bus parity error
0012	FLI register bit stuck
0013	FLI lock and key alarm
0014	MXR DS3 loss of signal
0015	MXR unknown error
0020	BX Access Error
0021	BX Ram Parity Over Low Byte
0022	BX Ram Parity Over High Byte
0023	Fan Bank Zero Error Flag
0024	D5 Spare Bit Error
0025	Fan Bank One Error Flag
0026	D7 Spare Bit Error
0027	BX stuck summary bit
0028	Unknown interrupt from BX
0029	Error from side 0 bus extension
002A	Error from side 1 bus extension
002B	Unknown interrupt from MTC
002C	MTC stuck summary bit
002D	Unused bits on MTC pack
002E	Error due to unused bit
002F	Error due unknown reasons
0030	Power Failure
0031	Sanity Time-out
0032	BX stuck CCNI summary bit
0033	FMT TF control bus error
0034	MXR M23 summary stuck error
0035	FMT multiple TF network data error

cccc	<i>Explanation</i>
0036	FMT single TF network data error
0037	FMT TF device or clock receiver error
0038	FMT multiple TF clock error
0039	FMT single TF sync error
003A	FMT multiple TF sync error
003B	FLI access error
003C	FLI communication link error
003D	DPC ROM error
003E	DPC loss of timing
003F	OOS RAM test ran while IS
0040	Bus Error Alarm
0041	CIA Device Error
0042	CIB Device Error
0043	CIC Device Error
0044	Pack can't be accessed
0045	Loss of timing alarm
0046	Chip ID Comparison
0047	Data Strobe Signal
0048	Address Parity Error
0049	FC Stuck Bit on FTMI
004A	DDC Stuck Bit on FTMI
004B	FTMI lost clock
004C	FC can't be accessed
004D	Timer Error
004E	Circuit ID Error
004F	Transmit Formatter Error
0050	Receiver Formatter Error
0051	Sanity Timer Interrupt
0052	RF bus error
0053	NPC bus error
0054	NPC can not be accessed
0055	NPC is alarming on FC
0056	Facility Processor Sanity Error

cccc	<i>Explanation</i>
0057	SYNC Error
0058	Channel controller loss of clock
0059	Channel controller frame sync error
005A	CC configuration register error
005B	CC instruction ram error
005C	CC parity error
005D	CC transmit data error
005E	CC receiver data error
005F	CC exercise error
0060	CC summary bit error
0061	Hard RAM error
0062	Hard ROM check error
0063	Hard Error stuck bit
0064	Transceiver A stuck bit
0065	Transceiver A transmit slip
0066	Transceiver A Error
0067	Transceiver B stuck bit
0068	Transceiver B transmit slip
0069	Transceiver B Error
006A	Circuit ID Error
006B	Facility errors
006C	NPC address parity error
006D	DSPI access error (e.g. pack not there)
006E	DSPI bus data parity error
006F	DSPI bus address parity error
0070	DMB access error (e.g. pack not there)
0071	DMB serial access error (pack not there)
0072	DMB parallel access error
0073	DMB bits stuck in exercise register
0074	DMB data processing error
0075	Multiple data parity error, CCB problem
0076	DMB clock error
0077	Multiple clock errors, CCB/SYNC problem

cccc	<i>Explanation</i>
0078	DMB FIFO error
0079	Possible power failure on side
007A	DMB control memory error 0 (used for trans)
007B	DMB control memory error 1 (used for trans)
007C	Control Memory 0 control ram parity error
007D	Control Memory 1 control ram parity error
007E	Control Memory 0 control interface error
007F	Control Memory 1 control interface error
0080	Control Memory 0 loss of sync error
0081	Control Memory 1 loss of sync error
0082	Control Memory 0 DMB input data parity error
0083	Control Memory 1 DMB input data parity error
0084	DMB conference error 0 (used for trans)
0085	DMB conference error 1 (used for trans)
0086	Conference 0 control interface error
0087	Conference 1 control interface error
0088	Conference 0 control ram parity error
0089	Conference 1 control ram parity error
008A	Conference 0 DMB input data parity error
008B	Conference 1 DMB input data parity error
008C	Conference 0 DMB device (chip) error
008D	Conference 1 DMB device (chip) error
008E	Bad Ram Data in DMB device (bits alarms)
008F	Bad Ram Data in DMB device (bits alarms)
0090	CCNI access error (cannot access pack)
0091	High data byte bus parity error
0092	Low data byte bus parity error
0093	Address bus parity error
0094	Autonomous switch enable error
0095	Bus status register parity error
0096	CCNI stuck register bit, summary set, no other alarms
0097	MXR communication link error
0098	CPR serial access error

cccc	<i>Explanation</i>
0099	CPR clock error
009A	CPR processor interface failure
009B	CPR input data interface error
009C	CPR D-Bit interface parity error
009D	CPR control memory failure
009E	CPR control memory or state machine failure
009F	CPR FIFO FRDY/FFULL stuck bit
00A0	CCB packid error, wrong pack, can't read pack
00A1	CCB sync pulse error
00A2	CCB clock error
00A3	CCB input port alarm error
00A4	CCB zero bit is stuck at 1
00A5	Corresponding CCNI bit is stuck
00A6	MXR channel controller transmit data error
00A7	MXR channel controller receiver data error
00A8	MXR channel controller exercise error
00A9	MXR channel controller stuck bit error
00AA	MXR transceiver framer error
00AB	MXR transceiver receive sync error
00AC	MXR transceiver transmitter error
00AD	MXR M23 device error
00AE	MXR M12 device error
00AF	MXR M12 summary stuck error
00B0	Pack id error, can't read pack
00B1	TSI stuck bit, summary bit set, no devices alarming
00B2	TSI device error
00B3	TSI device id error, cannot read device
00B4	Illegal exercise bits set
00B5	Bus address error
00B6	Device clock error
00B7	Device control ram parity error
00B8	Output data parity error (from an FTM)
00B9	Corresponding CCNI bit is stuck

cccc	<i>Explanation</i>
00BA	FLI loss of clock
00BB	FLI loss of signal
00BC	FLI circuit id error
00BD	FLI frame sync or internal error
00BE	FLI address bus parity error
00BF	MJU serial access error
00C0	MJU clock error
00C1	MJU processor interface failure
00C2	MJU input data interface failure
00C3	MJU error correction circuitry failure
00C4	MJU control memory failure
00C5	MJU output block failure
00C6	MJU sampling circuitry failure
00C7	MJU control memory or state machine failure
00C8	SRM serial access error
00C9	SRM clock error
00CA	SRM processor interface failure
00CB	SRM input data interface failure
00CC	SRM error correction block failure
00CD	SRM control memory failure
00CE	SRM multiplexor block failure
00CF	SRM output block failure
00D0	CPU RAM Parity error
00D1	Source of error is unknown
00D2	Source of error was not found
00D3	Stuck bit in register
00D4	Bad UBX pack
00D5	Illegal/unknown condition code
00D6	MIU communication link error
00D7	FMT communication link error
00D8	MXR ROM error
00D9	MXR LCA error
00DA	MXR queue overflow

cccc	<i>Explanation</i>
00DB	MXR channel controller loss of clock
00DC	MXR channel controller frame sync error
00DD	MXR channel controller configuration register error
00DE	MXR channel controller instruction ram error
00DF	MXR channel controller parity error
00E0	Hardware database mismatch
00E1	Hardware Failure
00E2	Hardware Boot Failed
00E3	Can't access link
00E4	Transmit Time-out Read/write eeprom error
00E5	Receiver Time-out
00E6	softerr failure which forces link removal
00E7	Unit could not be reset
00E8	Unit failed sanity check
00E9	failure to insert TCC
00EA	failure to remove TCC
00EB	failed to switch CCN sides
00EC	NPC's facility queue overflow condition
00ED	Duplex entity failed diagnostics
00EE	Lost Clear-To-Send signal on X.25 links
00EF	Frame Audit reboot DDC failure
00F0	FMT access error
00F1	FMT timing error
00F2	FMT link id error
00F3	FMT bus timeout
00F4	FMT serial address parity error
00F5	FMT 0-4TF timing error
00F6	FMT 0-4TF timing error
00F7	FMT error summary 1 stuck bit
00F8	FMT timing error, RF data parity
00F9	FMT error summary 2 stuck bit
00FA	FMT lock override, active select or kill parity

cccc	<i>Explanation</i>
00FB	FMT FIFO or control PROM error
00FC	FMT RF control bus error
00FD	FMT RF port and monitor alarms
00FE	FMT RF port alarm; no monitor alarms
0101	CCI pack is not present
0102	Can't communicate to CCI pack(incorrect version number)
0103	CCI pack's summary is set but has no errors
0104	CCIERR bit is stuck in system status reg
0105	TSIERR bit is stuck in system status reg
0106	PUERR bit is stuck in system status reg
0107	Bus Terminator pack is not present
0108	The 32 MHz clock is out of lock
0109	CCI 240 sync is misaligned with frame sync
010A	CCI loss of 240 Frame Sync
010B	CCI loss of 8 KHz Frame Sync
010C	CCI detected Address Parity error
010D	CCI detected low byte data parity error
010E	CCI detected high byte data parity error
010F	CCI -5.2 power supply has failed
0110	CCI detected Bus Status Parity error
0111	CCI Peripheral Unit Alarm
0112	SYNC summary is set on CCI circuit pack
0118	DSPI not in service, or failed
0120	ETSI pack is not present
0121	Can't communicate to ETSI pack (incorrect version number)
0122	ETSI pack's summary is set on CCI but has no errors
0123	ETSI loss of 32.768 MHz clock
0124	ETSI loss of 240 frame sync
0125	ETSI Rcv MDX summary stuck bit
0126	ETSI control RAM summary stuck bit
0127	ETSI TX MDX summary stuck bit
0128	ETSI loss of Vdd (3.3v) power
0129	Peripheral unit port alarm (RCV MDX)

cccc	<i>Explanation</i>
012A	Receive MDX data source time slot parity error
012B	Receive MDX sync error
012C	Receive MDX address parity error
012D	Receive MDX write data parity error
012F	Receive MDX can't be accessed (incorrect chip Id)
0130	Transmit MDX data parity error
0131	Transmit MDX data source time slot parity error
0132	Transmit MDX sync error
0133	Transmit MDX address parity error
0134	Transmit MDX write data parity error
0135	Transmit MDX can't be accessed (incorrect chip Id)
0137	Control RAM parity error
0138	Control RAM sync alarm
0139	Control RAM port alarm
013A	Control RAM BIST flag is set
013B	Data RAM BIST flag is set
013C	Control RAM address parity error
013D	Control RAM write data parity error
013E	Control RAM device can't be accessed (incorrect chip Id)
013F	Control RAM circuit pack parity
0140	Control RAM device is in reset state
0141	Control RAM port alarm summary is stuck
0142	ETSI TRD3ST exercise bit is set
0143	ETSI ready high error on CCI
0144	ETSI ready time-out error on CCI(ETSI can't be accessed)
0145	Control RAM stuck bit error
016D	Invalid FPA state
016E	Invalid DDC pack id
01E1	MXR access error (can't access pack)
01E2	MXR hard error stuck bit
01E3	MXR facility error stuck bit
01E4	MXR pack is in reset state
01E5	MXR PIF Bus Parity Error

cccc	<i>Explanation</i>
01E6	MXR loss of clock from unselected FLI
01E7	MXR 45MHz is not phase locked to system clock
01E8	MXR firmware error
01E9	MXR HSCC device error
01EA	MXR PIF I/O device error
01EB	MXR M13 summary stuck bit error
01EC	MXR transceiver summary stuck bit error
01ED	MXR program error
01EF	MXR RAM error
01F0	EMXR Timer error
01F1	EMXR DUART error
01F2	MIU got reset
01F3	Timeout for Yellow Inhibit/Enable Request
01F4	Queue overflow error
01F5	Packet layer parameters are mismatched between DACS II and the network
01F6	Failed to write XPC register
01F7	Transmit time-out because Clear To Send lost
01F8	R20 counter reaches limit
01F9	T3 timer expires
01FA	Too many interrupts or illegal interrupt from XPC
021C	FMT not eqd, not IS, or failed, or inact side FMT not eqd, or not IS
0220	Software Identification Block is not readable
0221	Software Identification Block failed comparison
0222	Release number mismatch
0223	Point number mismatch
0224	PDI Version number mismatch
0491	Can't mount or unmount SMEM
0492	Can't mount or unmount PMEM
04C5	RCV continuity test won't be run: no available IS NPCS for FC/FMT
04C6	No available timeslots on any of the inservice NPCS associated with FC/FMT
052F	TS0 connected to nonTS0 in Mode 2 - "a" should be "-" or "b"
055A	NPC unequipped, out of service or failed

cccc	<i>Explanation</i>
0568	New NPC already cross-connected or mapped channel(s) exist on New
056C	Old and New channel on same NPC and within the range
05AA	Integrated Test Set is currently active on TG
05AB	TLA/TLR invalid with ITS test groups
05AC	Both ITS TG bundles must be on same TG193B card
05EE	Can't RST MC CLR when a unit is equipped
06B3	Initialization of application in progress, retry command later
0770	ITS TG Already Generating
0771	ITS TG Not Generating
0772	TG not in TSG ON mode
0773	ITS TG Already Monitoring
0774	ITS TG Not Monitoring
0775	ITS TG is Idle
0776	ITS NPC Hardware Error
0777	TG in TSM ON mode
E000	CCNI summary bit set; no more info
E001	Sync says its down
E002	Sync says its time base is down
E003	SYNC autonomously restarted itself
E004	MP-SYNC communications failure
E005	Failed to lock sync to timing reference
E100	Unknown DPLL error
E101	ROM checksum error
E102	RAM data error, RAM address line stuck
E103	Phase/frequency output latch error
E104	Loss of energy on output of frequency synth.
E105	Loss of energy on output of phase shifter
E106	Loss of energy on generated SYNC pulse
E107	Loss of energy on time base strobe signal
E108	Interrupt controller error
E109	Interrupt holding register error
E10A	Uart error

cccc	<i>Explanation</i>
E10B	Control data readable output latch error
E200	Unknown time base error
E201	Time base loss of energy detector
E202	TB i/o err. cant read TB packid or oven monitor
E203	Time base frequency drift
E204	Both syncs time base oven is cold
E205	Time base oven is cold
E300	Unknown PLL error,link went down before reading status
E301	PLL end of range
E302	PLL excessive phase error (125 uSec out of phase)
E303	PLL real time violations
E304	PLL fast start time out
E305	PLL end of range implicating TL
E400	Unknown mate error, link went down before read status
E401	Mate out of service
E402	Mate sync hardware error
E403	Cross couple loss of energy
E404	Cross couple loss of energy
E405	Mate link down
E406	Cross couple real time violation
E407	Cross couple fast lock range
E408	Cross couple frequency offset error
E409	Cross couple out of lock
E500	TLI error, link went down before status read
E501	TLI hardware error
E600	TL error reported, unknown
E601	TL out of service or loss of signal
E602	Timing Extractor type TLI has hardware problem
E603	Timing Extractor type TLI has autobaud failure
E700	CRO error, unknown due to link, SYNC error
E701	CRO loss of energy detected SYNC error
E702	CRO loss of energy CRO error
E703	CRO frequency offset

Denial Codes

cccc	<i>Explanation</i>
E704	CRO declared OOS
E805	TL error cleared
E806	TLI error cleared
EF00	Unknown what sync switched to
EF01	SYNC switched to NORMAL mode
EF02	SYNC switched to HOLDOVER
EF03	SYNC switched to FAST mode
EF04	SYNC switched TLIs/SSPs
EF05	SYNC switched to cross couple

Index

A

- Abort, [13-1](#)
- Activate Alternate Maps, [5-1](#)
- Add
 - Link, Protocol, Baud, [1-1](#)
 - Link, X.25, Protocol, Data Link, Layer Parameters, [1-1](#)
 - Network Processing Circuit, [2-1](#)
 - NPC Addressing and Priority, [1-2](#)
 - User, [1-2](#)
 - User/Link Language, [1-2](#)
 - X.25 Link Parameters, [1-2](#)
- Administrative Link, Restore, [9-2](#)
- Alarm Cutoff, [13-2](#)
- All TSIs in Cross-Connect Side (Non-CEF Only, Remove, [8-3](#))
- All Unit Connected TSIs (Non-CEF Only), Remove, [8-3](#)
- Alternate Maps
 - Activate, [5-1](#)
 - Create Picture, [5-2](#)
- Append Component, [13-1](#)

B

- Backup Memory Transfer, [13-2](#)
- Broadcast Cross-Connection, [4-1](#), [4-2](#)
- Broadcast Disconnection, [4-2](#), [4-3](#)

C

- Change
 - Bit-C To, [10-1](#)
 - Bit-C-Off To, [10-1](#)
 - Circuit Parameters, [7-1](#), [7-2](#), [7-4](#)
 - Connectivity, [7-5](#)
 - Cross-Connect Termination Status, [7-2](#)
 - Director DACS To, [10-1](#)
 - Macro Space, [5-1](#)
 - NPC AIS Alarm Option, [7-2](#)
 - NPC Loopback, [7-2](#)
 - NPC Non Frame-Word Setting, [7-3](#)
 - NPC Options, [7-3](#)
 - NPC Time Slot Zero, [7-3](#)
 - NPC Type, [7-4](#)
 - Options, [7-4](#)
 - Priorities and/or Type, Synchronizer or NPC, [7-5](#)
 - Switch, TOX, [7-4](#)
 - Time Slot Zero Monitor, [7-3](#)
 - Type, Options, [7-5](#)
 - Type/Threshold Mode, [7-5](#)
 - User Password, [1-3](#)
 - User/Link Screening, [1-3](#)
- Circuit Disconnection, [4-10](#)
- Circuit Parameters, Change, [7-2](#), [7-4](#)
- Clear Backup Failure, 125
- Clear Facility Performance Parameters, [3-2](#)
- Clear Power Supply, 125
- Clock Control Interface, Remove, [8-1](#)
- Clock Reference Oscillator, Restore, [9-3](#)
- Configure Digroup Circuits, [6-1](#)
- Configure Frame, [2-1](#)
- Configure Synchronizer, [2-1](#), [7-1](#)
- Configure Synchronizer Stratum, [7-1](#)

Contents of Document, ix
Control and Clock Interface, Restore, [9-1](#)
Conventions Used, xii
Copy NPC, [13-1](#)
Create Picture Alternate Map, [5-2](#)
Create/Edit a Macro or Map, [5-2](#)
Cross, [4-4](#)
Cross-Connect Buffer (Non-CEF Only),
Remove, [8-1](#)
Cross-Connect Buffer, Restore, [9-1](#)
Cross-Connect Map, Query Full, 128
Cross-Connect Map, Query Partial, 127
Cross-Connect Network Interface,
Remove, [8-1](#)
Cross-Connect Network Interface,
Restore, [9-1](#)
Cross-Connection
Broadcast, [4-1](#), [4-2](#)
Change Termination Status, [7-2](#)
One-Way, [4-5](#)
One-Way Non-Channelized Digital
Signal, [4-5](#)
One-Way Terminated, Multipoint,
[4-4](#)
One-Way, Terminate, [4-4](#)
Two-Way, [4-9](#)
Two-Way Multipoint, Terminate, [4-7](#)
Two-Way Non-Channelized Digital
Signal, [4-9](#)
Two-Way, C-Bit, [4-8](#)
Two-Way, Multipoint, [4-8](#)
Two-Way, Terminate, [4-7](#) [4-8](#)

D

Delete Feature Package Identification,
[13-1](#)
Delete Lines From Macro, [5-1](#)
Delete Macro, [5-1](#)
Delete User, [1-3](#)
Deprovision
Facility Terminating Module Inter-

face, [2-3](#)
NPC, [2-1](#)
Synchronizer Time Base, [2-2](#)
Synchronizer Timing Link Interface,
[2-2](#)
Test Access Group, [2-2](#)
Test Port, [2-3](#)
Test Port NPC, [2-2](#)
Test-Access Group NPC, [2-2](#)
Unit, [2-3](#)
Diagnose
All ETSIs on ECCN Side, 122
CCI and BT Packs, 121
CCNI, 121
Communications Interface, 122
Cross-Connect Buffer, 121
DSPU, 124
ETSI, 122
Facility Terminating Module Inter-
face, 125
Format Converter, 124
Link, 122
Main Controller, 122
Main Processor, 122
Memory Card, 123
Network Processing Circuits, 123
NPC, 123
Synchronizer, 123
Synchronizer Timing Link Interface,
124
Time Slot Interchange, 124
Time Slot Interchanges, 124
Unit On UC, 125
Disconnect DS0 Circuit Roll, [6-2](#)
Disconnect Facility Roll, [6-2](#)
Disconnection
Broadcast, [4-2](#), [4-3](#)
Circuits, [4-10](#)
One-Way, [4-6](#)
One-Way, Multipoint, [4-6](#)
TS16 and C-Bit NPC, [4-10](#)
Two-Way, [4-10](#)
Document Contents, ix
DS0 Circuit Roll, [6-2](#)
Bridge, [6-1](#)

Disconnect, [6-2](#)

E

Edit Delete Map, [5-2](#)
Emode, Non-Channelized Test FAD,
[11-1](#)
Error Recovery, Software/Hardware
Query, 1210
ETSI, Remove, [8-1](#)
ETSIs
 Restore All, [9-2](#)
ETSIs, Remove All, [8-2](#)
Execute Macro, [5-2](#)
Expanded Time Slot Interchanger,
 Restore, [9-1](#)

F

Facility Alarm, Set Daily Reporting Time,
[13-2](#)
Facility Roll, [6-2](#)
 Bridge, [6-1](#)
 Disconnect, [6-2](#)
Fmode, Non-Channelized Test FAD,
[11-1](#)
Frame, Configure, [2-1](#)
Frame, Provision, [2-3](#)
FTMI/DSPI, Remove, [8-4](#)
FTMI/DSPI, Restore, [9-4](#)

G

Glossary, IN1

H

How to Comment on This Document,
 xxiii
How to Order Documentation, xix
Hub, Two-Way Test Access, [11-3](#)
Hub, Two-Way Test Access, Nx64 kbit/s,
[11-3](#)

L

Link, Remove, [8-2](#)
List Macro Contents, [5-3](#)
Log Off User/Link, [1-4](#)
Log On To DACS II, [1-4](#)
Looped Test Access, [11-3](#)
Looped Test Access, Nx64 kbit/s, [11-3](#)

M

Macros
 Change Space, [5-1](#)
 Create/Edit, [5-2](#)
 Delete Lines, [5-1](#)
 Execute, [5-2](#)
 List Contents, [5-3](#)
 Move Lines, [5-3](#)
 Stop, [5-3](#)
Main Controller, Remove, [8-2](#)
Main Controller, Restore, [9-2](#)
Maps
 Create/Edit, [5-2](#)
 Edit Delete, [5-2](#)
Monitor, Two-Way Test Access, [11-4](#)
Move Macro Lines, [5-3](#)

N

Network Processing Circuit, Add, [2-1](#)
Non-Channelized Loop Test Access Facility, [11-2](#)
Non-Channelized Test Access, [11-1](#)
Non-Channelized Test Hub, [11-2](#)
Non-Channelized Test NPC Release, [11-2](#)
NPC Monitor, Restore, [9-2](#)
NPC Time Slot 0 Monitor, Restore, [9-3](#)
NPCs, Remove, [8-2](#)
NPCs, Restore, [9-3](#)
Nx64 kbit/s, Test Access, [11-3](#)
Nx64 kbit/s, Two-Way Test Access, [11-3](#) [11-4](#) [11-5](#)

O

One-Way Cross-Connect Terminated Multipoint Circuit, [4-4](#)
One-Way Cross-Connection, [4-5](#)
One-Way Cross-Connection, Terminate, [4-4](#)
One-Way Disconnection, [4-6](#)
One-Way Multipoint Disconnection, [4-6](#)
One-Way Non-Channelized Digital Signal Cross-Connect, [4-5](#)

P

Password Recovery, 1220
PMEM/SMEM, Remove, [8-2](#)
PMEM/SMEM, Restore, [9-3](#)
Provision
 Clock Reference Oscillator, [2-5](#)
 Digital Signal Processing Unit NPC, [2-4](#)
 Facility Terminating Module Inter-

 face, [2-6](#)
 NPC, [2-4](#), [2-5](#)
 Synchronizer Time Base, [2-5](#)
 Synchronizer Timing Link Interface, [2-5](#)
 Test Access Group, [2-6](#)
 Test Access Group NPC, [2-3](#)
 Test Port, [2-6](#)
 Test Port NPC, [2-4](#)
 Unit, [2-6](#)
Provision Frame, [2-3](#)

Q

Query
 Alarm Option, AIS, 126
 Alarms, 126
 All, 125, 126
 All Common Equipment, 125
 Bit-C NPC, 127
 Bit-C To, 127
 Broadcast, 127
 Broadcast All, 126
 Broadcast From, 127
 Channel Marks, 1214
 Common Equipage, 129
 Common Equipment Status, 1215
 Configure, 128
 Cross-Connect Status Bar, 1220
 Date, 128
 Destination Cross-Connect, 1219
 Director DACS II, 128
 Director DACS NPC, 128
 DS0 Roll, 1216
 DS1 Roll, 1216
 ECCN Error Source Register, 1210
 Entity Equipage, 129
 Equalization, 1220
 Equipage Status, 1210
 Equipment Connectivity, 129
 Equipped, 129
 Equipped NPCs, 129
 Error Source Register, 1210, 1211

- Error Source Register FTMI, 1211
- Error Source Register Main Processor, 1210
- ESR for FTU/Subrate NPC, 1211
- ETSIs, 129
- Facility Alarms, 121
- Feature Package, 1211
- From, 1212
- Full Cross-Connect Map, 128
- Impedance, 1220
- Line Number, [5-2](#)
- Link Status and Protocol, 1218
- Location, 125
- Log, 1212
- Loopback, 1213
- Macro, 1213
- Macro Attributes, 1213
- Macro List, 1212
- Macro/Map Space, 1213
- Map, 1213
- Map List, 1212
- Markings, 1214
- Memory Status, 1214
- Network Processing Circuit Parameter, 1214
- Non-Channelized, To, 1219
- NPC Map, 1215
- NPC Non Frame-Word Setting, 1214
- NPC Options, 1215
- NPC State, 1217
- NPC Time Slot Zero, 1220
- Partial Cross-Connect Map, 127
- Performance Monitoring Data for DA/TA/PA Type NPCs, [3-2](#)
- Performance Monitoring Report Schedule, [3-3](#)
- Sequence, 1217
- Software/Hardware Error Recovery, 1210
- SSP, 1218
- State, 1217
- State Alarm Cut Off, 1217
- Status of Entities/Equipment, 1215
- Status Register, 1218
- Synchronizer, 1218

- Synchronizer State, 1217
- Test Ports, 1219
- Test-Access Group, 1219
- Test-Access Group NPC, 1215
- Time Slot Zero Monitor, 1219
- Timing Link Interface, 1218
- Trunk Signaling Conversion State, 1216
- User/Link Screening Option, 1216
- Who, 1220

R

- Recover Password, 1220
- Related Documentation, xiii
- Release Test Port, [2-6](#)
- Remove
 - All ETSIs, [8-2](#)
 - All TSIs in Cross-Connect Side (Non-CEF Only), [8-3](#)
 - All Unit Connected TSIs (Non-CEF Only), [8-3](#)
 - Clock Control Interface, [8-1](#)
 - Cross-Connect Buffer (Non-CEF Only), [8-1](#)
 - Cross-Connect Network Interface, [8-1](#)
 - ETSI, [8-1](#)
 - FTMI/DSPI, [8-4](#)
 - Link, [8-2](#)
 - Main Controller, [8-2](#)
 - NPCs, [8-2](#)
 - PMEM/SMEM, [8-2](#)
 - Synchronizer, [8-2](#)
 - Synchronizer Time Base/Clock Reference Oscillator, [8-3](#)
 - Synchronizer TLI/SSP, [8-3](#)
 - Time Slot Interchange, [8-3](#)
 - Unit Controller, [8-4](#)
 - Unit Format Converter, [8-4](#)
- Restore
 - Administrative Link, [9-2](#)
 - All ETSIs, [9-2](#)

Clock Reference Oscillator, [9-3](#)
 Control and Clock Interface, [9-1](#)
 Cross-Connect Buffer, [9-1](#)
 Cross-Connect Network Interface,
[9-1](#)
 Expanded Time Slot Interchanger,
[9-1](#)
 FTMI/DSPI, [9-4](#)
 Main Controller, [9-2](#)
 NPC Monitor, [9-2](#)
 NPC Time Slot 0 Monitor, [9-3](#)
 NPCs, [9-3](#)
 PMEM/SMEM, [9-3](#)
 Synchronizer, [9-3](#)
 Synchronizer Timing Link Interface,
[9-4](#)
 Time Slot Interchange, [9-4](#)
 Time Slot Interchanges, [9-4](#)
 TSI For Unit (Non-CEF Only), [9-4](#)
 Unit, [9-4](#)
 Unit Controller, [9-5](#)
 Retrieve Memory Status, 1214
 Retrieve Performance Monitoring Report
 Schedule, [3-3](#)
 Roll, DS0 Circuit, [6-2](#)
 Roll, Facility, [6-2](#)

S

Save Component, [5-3](#)
 Set Daily Facility Alarm Reporting Time,
[13-2](#)
 Set Date, [13-2](#)
 Set Errored Block Threshold Ratio, [3-1](#)
 Set Options, [7-4](#)
 Stop Macro, [5-3](#)
 Synchronizer Time Base/Clock Refer-
 ence Oscillator, Remove, [8-3](#)
 Synchronizer Timing Link Interface,
 Restore, [9-4](#)
 Synchronizer TLI/SSP, Remove, [8-3](#)
 Synchronizer, Configure, [2-1](#)
 Synchronizer, Remove, [8-2](#)

Synchronizer, Restore, [9-3](#)

T

Terminate-And-Leave-Active, Test
 Access, [11-5](#)
 Terminate-And-Leave-Release, Test
 Access, [11-5](#)
 Terminated Multipoint, One-Way
 Cross-Connection, [4-4](#)
 Test Access
 Hub, Non-Channelized, [11-2](#)
 Looped, [11-3](#)
 Looped, Nx64 kbit/s, [11-3](#)
 Non-Channelized FAD, Emode/
 Fmode, [11-1](#)
 Non-Channelized, Loop, [11-1](#)
 Non-Channelized, Loop Facility,
 [11-2](#)
 Non-Channelized, Monitor, [11-1](#)
 Non-Channelized, NPC Release,
 [11-2](#)
 Non-Channelized, Split, [11-1](#)
 Nx64 kbit/s, Monitor, [11-3](#) [11-4](#)
 Nx64 kbit/s, Split, [11-4](#)
 Two-Way, [11-4](#), [11-5](#)
 Two-Way, Hub, [11-3](#)
 Two-Way, Monitor, [11-4](#)
 Two-Way, Nx64 kbit/s, [11-5](#)
 Two-Way, Nx64 kbit/s, Hub, [11-3](#)
 Test Port Release, [2-6](#)
 Time Slot Interchange, Remove, [8-3](#)
 Time Slot Interchange, Restore, [9-4](#)
 Time Slot Interchanges, Restore, [9-4](#)
 TOX, Change Switch, [7-4](#)
 TS16 and C-Bit NPC Disconnection,
[4-10](#)
 TSI For Unit (Non-CEF Only), Restore,
[9-4](#)
 Two-Way Cross-Connection, [4-9](#)
 Two-Way Cross-Connection, C-Bit, [4-8](#)
 Two-Way Cross-Connection, Multipoint,
[4-8](#)

Two-Way Cross-Connection, Terminate, [4-7](#) [4-8](#)
Two-Way Cross-Connection, Terminate, Multipoint, [4-7](#)
Two-Way Disconnection, [4-10](#)
Two-Way Non-Channelized Digital Signal Cross-Connection, [4-9](#)
Two-Way Test Access, [11-4](#), [11-5](#)
Two-Way Test Access, Hub, [11-3](#)
Two-Way Test Access, Monitor, [11-4](#)
Two-Way Test Access, Monitor Nx64 kbit/s, [11-3](#), [11-4](#)
Two-Way Test Access, Nx64 kbit/s, [11-5](#)
Two-Way Test Access, Split Nx64 kbit/s, [11-4](#)

U

Unit Controller, Remove, [8-4](#)
Unit Controller, Restore, [9-5](#)
Unit Format Converter, Remove, [8-4](#)
Unit, Restore, [9-4](#)
Upgrade Frame, [13-3](#)
User Password, Change, [1-3](#)
User/Link Screening
 Change, [1-3](#)
Utilities, Alarm Reporting, [3-2](#)
Utility Boot, [13-2](#)
Utility Clear Counter, State of NPC, [3-1](#)
Utility Clear DA/TA/PA NPC Parameters, [3-2](#)
Utility Clear Hardware/Software Error Recovery Log File, [3-1](#)

X

X.25 Link Parameters, Add, [1-2](#)