

46032-05

RELAY MODULE

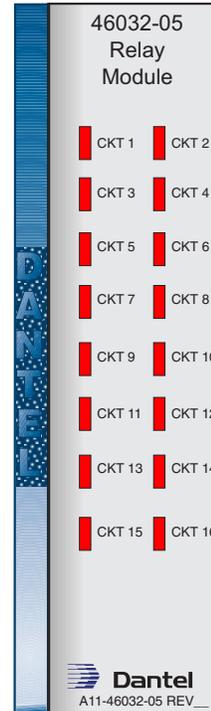


Table of Contents

Ordering Information	2
General Description	2
Circuit Description	2
Installation	4
Operation	5
Technical Specifications	5
Warranty	6

About this Practice:

This practice has been reissued to:

- Meet ISO 9001 requirements.

Reissued Practices: Updated and new content can be identified by a banner in the outside margin.

Issue date: January 1999

UPDATED

CAUTION

- Install or remove modules from the shelf only when the power is off. If you install a module in the shelf with the power on, the internal circuitry may suffer damage and the product warranty will be void.
- Remove and install circuit boards only in a static-safe environment (use antistatic wrist straps, smocks, footwear, etc.).
- Keep circuit boards in their antistatic bags when they are not in use.
- Do not ship or store circuit boards near strong electrostatic, electromagnetic, magnetic, or radioactive fields.
- For more complete information on electrostatic discharge safety precautions, refer to Bellcore™ Technical Reference # TR-NWT-000870.

ORDERING INFORMATION

NOTE: This section lists the different options available for this product. To order any of the available options, contact Dantel Inside Sales through our toll-free number, **1-800-432-6835**.

OPTION NUMBER	FEATURES
A11-46032-05	Relay Module

GENERAL DESCRIPTION

This practice describes the 46032-05 Relay module and supports installation and maintenance to the change-out level. The 46032-05 Relay Module uses 16 Form-A (normally open) relays to control external switching operations. Each relay is operated by the presence of +5VDC.

The front panel provides 16 LED indicators to visually monitor the internal relay activity.

This module operates on -21 to -56 VDC input power.

CIRCUIT DESCRIPTION

The 46032-05 Relay Module functional schematic is shown in Fig. 1. Refer to Table A for the individual relay pin-outs.

Relays K1 through K16 have Form-A (normally open) contacts which provide controlled switching for external applications. Relay activity is monitored separately by 16 LEDs on the front panel which light when the corresponding circuit is energized.

A separate buffer/inverter amplifier is used to operate each relay. This allows the application of +5 VDC to make the module TTL compatible.

CIRCUIT DESCRIPTION

FIG. 1 - FUNCTIONAL SCHEMATIC, 46032-05 RELAY MODULE

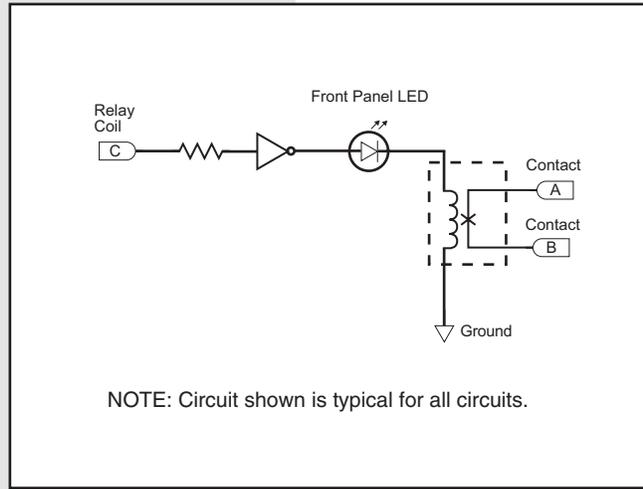



TABLE A - PC PIN NUMBER, 46032-05 RELAY MODULE

RELAY NUMBER	RELAY COIL C	CONTACT A	CONTACT B
1	37	1	2
2	38	3	4
3	39	5	6
4	40	7	8
5	41	9	10
6	42	11	12
7	43	13	14
8	44	15	16
9	45	19	20
10	46	21	22
11	47	23	24
12	48	25	26
13	49	27	28
14	50	29	30
15	51	31	32
16	52	33	34
-Battery Ground	35		
	17		

INSTALLATION

Install the module in the proper slot in the shelf. The shelf is normally pre-wired at the factory. If necessary, refer to Figs. 1 and 2 and Table A for edge connector pin designations.

FIG. 2 - EDGE CONNECTOR PIN DESIGNATION, 46032-05

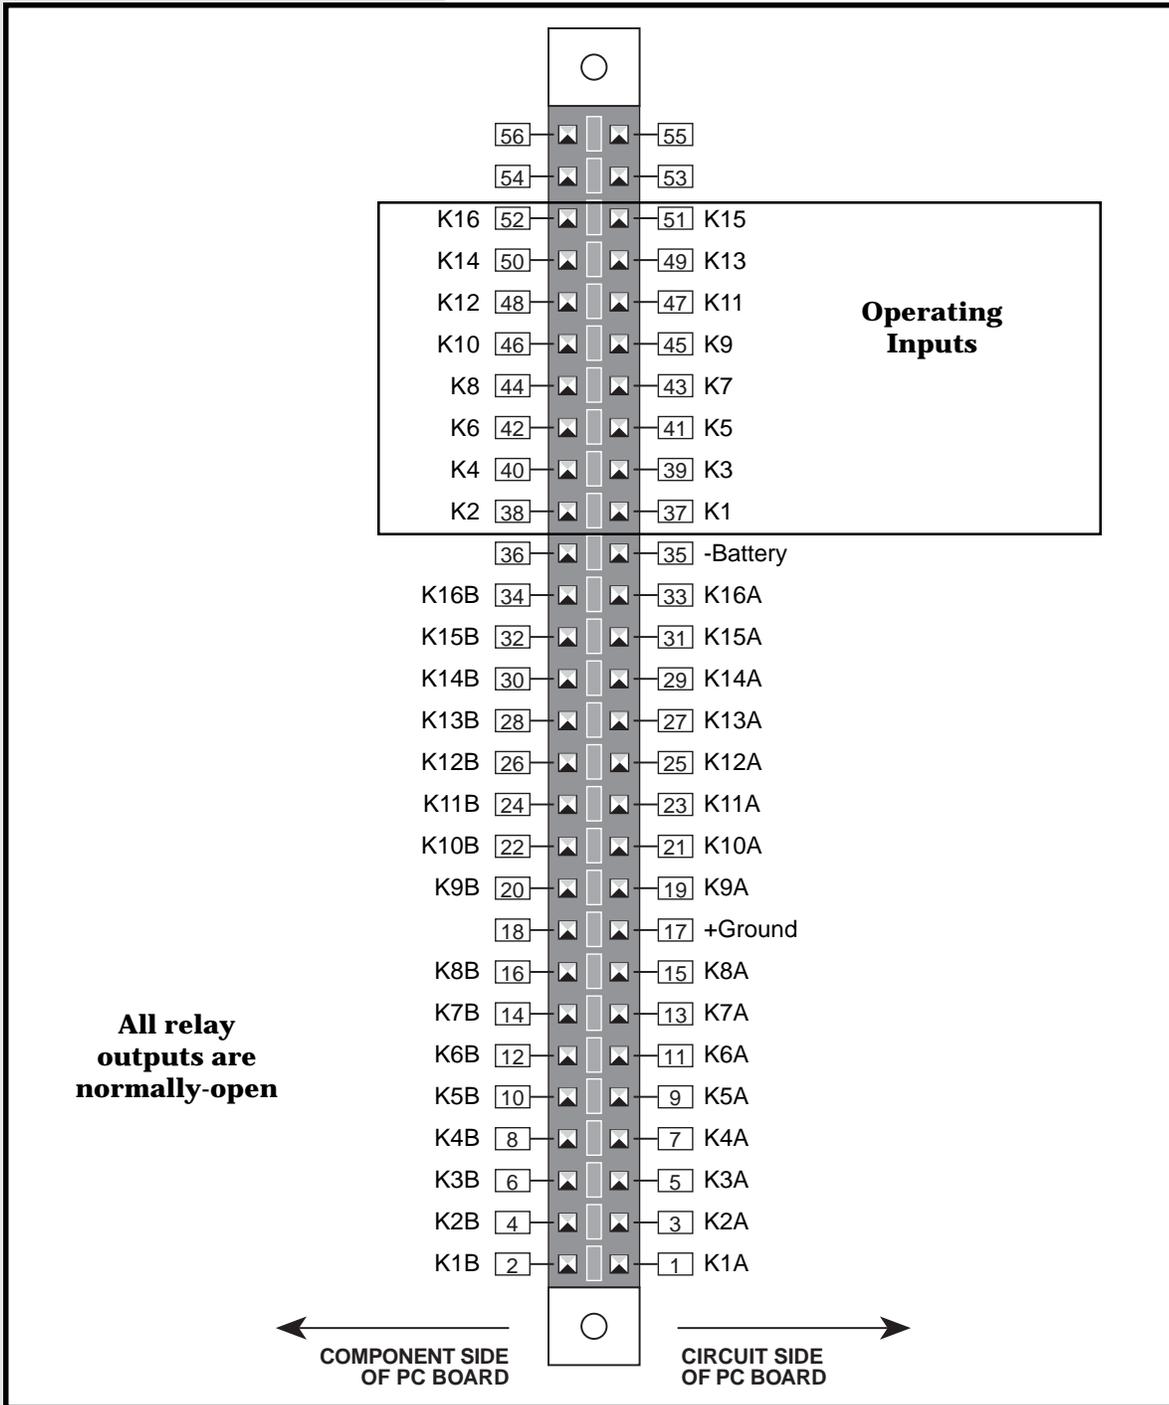

OPERATION

The relays operate on presence of +5 VDC. There is no latching capability. The relay contacts open when that voltage is removed. The individual LED should light on the front panel as power is applied to each relay. This, however, does not verify correct relay contact operation — only that voltage is applied to that individual relay.

TECHNICAL SPECIFICATIONS

DESCRIPTION	DESCRIPTION			
Input Voltage Range	-21 to -56 VDC			
Current Requirements	@ -21VDC	@ -24 VDC	@ -48 VDC	@ -56 VDC
No relays Operating	0.0 mA	0.0 mA	0.0 mA	0.0 mA
One Relay Enabled	7.4 mA	8.4 mA	10.4 mA	11.6 mA
All Relays Enabled	118.0 mA	134.0 mA	172.8 mA	185.6 mA
Heat Dissipation	@ -21VDC	@ -24 VDC	@ -48 VDC	@ -56 VDC
One Relay Enabled	0.5 Btu/Hr	0.7 Btu/Hr	1.8 Btu/Hr	2.2 Btu/Hr
All Relays Enabled	8.5 Btu/Hr	11.0 Btu/Hr	28.3 Btu/Hr	35.5 Btu/Hr
Relay Contacts				
Current Rating	1 Amp @ 30 VDC			
Resistance	0.1 Ohm			
Operating Temperature	0° to 55° C.			
Physical Dimensions	1.4" x 6.0" x 5.6"			
Weight	7.5 Ounces			

WARRANTY

LIMITED WARRANTY

The Seller warrants that the standard hardware products sold will be free from defects in material and workmanship and perform to the Seller's applicable published specifications for a period of 18 months for hardware, and 3 months for software, from the date of the original invoice. The liability of the Seller hereunder shall be limited to replacing or repairing, at its option, any defective products which are returned F.O.B. to the Seller's plant, (or, at the Seller's option, refunding the purchase price of such products). In no case are products to be returned without first obtaining permission and a customer return authorization number from the Seller. In no event shall the Seller be liable for any consequential or incidental damages.

Equipment or parts which have been subject to abuse, misuse, accident, alteration, neglect, unauthorized repair or installation are not covered by warranty. The Seller shall make the final determination as to the existence and cause of any alleged defect. No warranty is made with respect to custom equipment or products produced to the Buyer's specifications except as specifically stated in writing by the Seller in the contract for such custom equipment.

This warranty is the only warranty made by the Seller with respect to the goods delivered hereunder, and may be modified or amended only by a written instrument signed by a duly authorized officer of the Seller and accepted by the Buyer.

Warranty and remedies on products not manufactured by the Seller are in accordance with warranty of the respective manufacturer. THE SELLER MAKES NO OTHER WARRANTY OF ANY KIND WHATSOEVER, EXPRESSED OR IMPLIED; AND ALL IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE WHICH EXCEEDS THE AFORESAID OBLIGATIONS IS HEREBY DISCLAIMED BY THE SELLER.

IN CASE OF DIFFICULTY

If you experience difficulty with this equipment, check the following, as appropriate:

1. **Switch settings**
2. **Signal levels**
3. **Software configuration**
4. **Connections between Dantel's equipment and your equipment.**

If there is still a problem, substitute equipment that is known to be good. For additional assistance, call Dantel's Technical Field Service Department weekdays, 6 A.M. to 5 P.M. pacific time:

1-800-4DANTEL (1-800-432-6835).

If a thorough checkout shows a piece of equipment has malfunctioned, you may return it to the factory. For repairs and emergency replacements, obtain a Return Material Authorization (RMA) number from the Customer Service Representative at **1-800-4DANTEL (1-800-432-6835)**.

To ensure expedient processing of your order, provide a purchase order number and shipping and billing information when requesting an RMA number. Also, when the units are returned to Dantel, include a description of the failure symptoms for each unit returned. Send defective equipment to:

Dantel, Inc. • 2991 North Argyle Avenue • Fresno, California 93727-1388

