




DEFINITY[®] Communications System Generic 1

Enhanced 7407D (7407D02C) Voice Terminal User's Guide

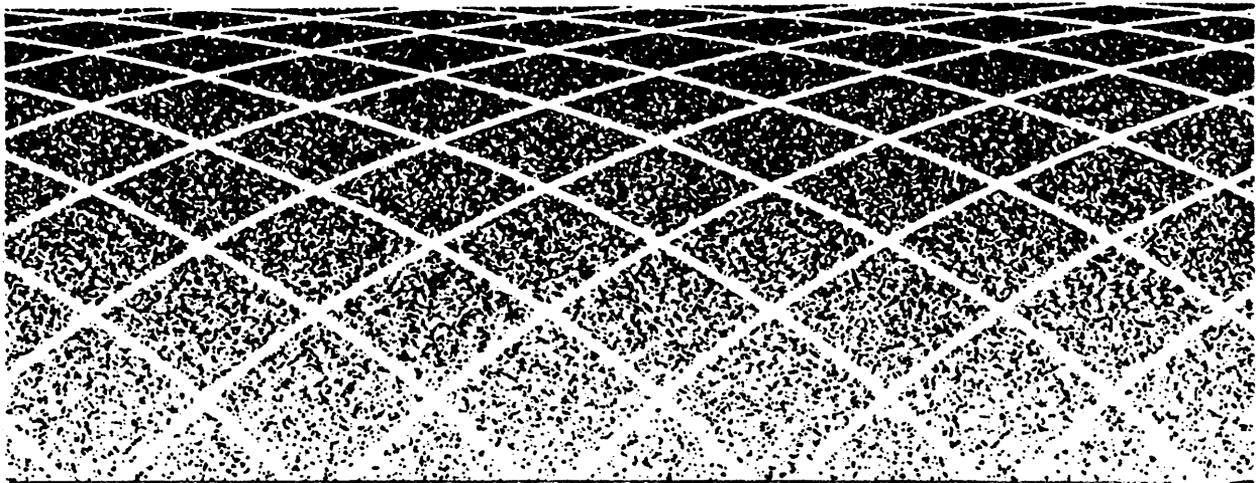

NOTICE

While reasonable efforts were made to ensure that the information in this document was complete and accurate at the time of printing, AT&T can assume no responsibility for any errors. Changes or corrections to the information contained in this document may be incorporated into future issues.

TO ORDER COPIES OF THIS DOCUMENT

Contact: AT&T Customer Information Center
2855 North Franklin Road
P.O. Box 19901
Indianapolis, IN 46219
1-800-432-6600,
In Canada: 1-800-255-1242

Order: Document No. 555-204-738
Issue 1, January 1990

For more information about AT&T documents, see *Business Communications Systems Publications Catalog* (555-000-010).

HEARING AID COMPATIBILITY

This equipment is compatible with the inductively coupled hearing aids prescribed by the Federal Communications Commission (FCC).

Prepared by
AT&T Technical Publication Department
Middletown, New Jersey 07748

© 1990 AT&T
All Rights Reserved
Printed in USA

Contents

Your Enhanced 7407D (7407D02C) Voice Terminal	1
What the Features Do	4
How to Use the Features	7
Voice Features	9
Abbreviated Dialing (AD)	9
Automatic Callback	11
Bridging	11
Call Coverage	12
Call Forwarding All Calls	13
Call Park	13
Call Pickup	14
Conference	14
Drop	15
Hold	15
Intercom	16
Last Number Dialed	16
Leave Word Calling (LWC)	17
Message	17
Mute	18
Priority Calling	18
Select Ring	19
Self-Test	20
Send All Calls	20
Speaker	21
Speakerphone	22
Transfer	23
Voice Message Retrieval	23
Display Features	25
Inspect	26
Integrated Directory	26
Message Retrieval	27
Normal	28
Stored Number	28
Time	29
Tones and Their Meanings	30
Key Words to Know	31
Quick Reference Lists	33

Your Enhanced 7407D (7407D02C) Voice Terminal

The Enhanced 7407D (7407D02C) voice terminal is comprehensively equipped so that you can make the best use of the many features of the AT&T DEFINITY™ Communications System Generic 1. This enhanced version of the 7407D voice terminal also provides you with an improved display that increases contrast and viewing angle, a speakerphone/headset jack so you can attach an external speakerphone or headset to your voice terminal, and a Volume control button that allows you an easily accessible way of raising or lowering both the ringer and the speaker or speakerphone volume.

Familiarize yourself with your Enhanced 7407D voice terminal shown in Figure 1 and explained on the following page.

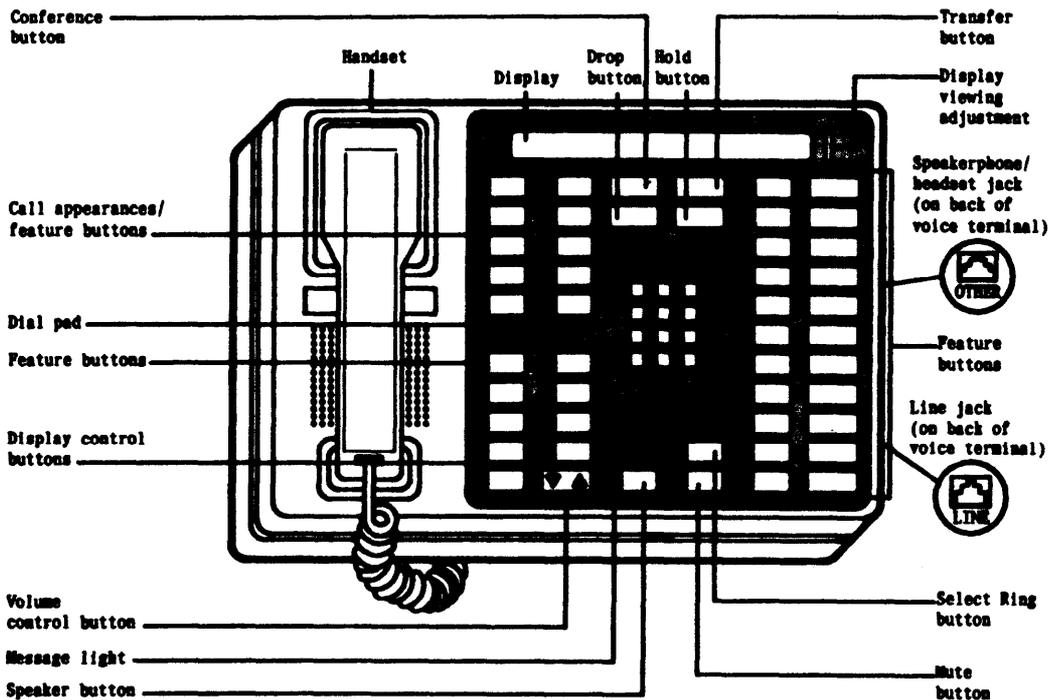


Figure 1. Enhanced 7407D (7407D02C) Voice Terminal

Starting at the top of Figure 1 and continuing clockwise:

Handset	For placing and answering calls (also known as the receiver).
Display	A built-in 2-line, 80-character display.
Drop button	For disconnecting from a call or dropping the last party added to a conference call.
Conference button	For setting up conference calls.
Hold button	For putting a call on hold.
Transfer button	For transferring a call to another voice terminal.
Display viewing adjustment	A thumbwheel for adjusting the viewing angle of the display.
Speakerphone/headset jack (on back of voice terminal)	Located on the back of your voice terminal near the center. This jack is used for connecting an external speakerphone (or, possibly, a headset) to your voice terminal. The jack is labeled "OTHER."
Feature buttons	Each of these 22 buttons accesses features and is labeled with a feature name.
Line jack (on back of voice terminal)	Located on the back of your voice terminal just to the right of the center. This jack is used for connecting a line cord to your voice terminal. The jack is labeled "LINE."
Select Ring button	For accessing the Select Ring feature.
Mute button	For turning off the microphone of the built-in speakerphone or the handset so the other person cannot hear you. Note: If your voice terminal is set for the Speaker (listen-only) feature, pressing the Mute button will affect only the handset.
Speaker button	For accessing the speaker or the built-in speakerphone and microphone combination. Note: Your voice terminal can be set for either the Speaker (listen-only) feature or the Speakerphone (listen and talk) feature. Check with your System Manager to see how your Speaker button is to be used.
Message light	A red light which goes on steadily when a message has been left for you.
Volume control button	For adjusting the volume of the speaker or the built-in speakerphone when you are on a call, or for adjusting the tone for the tone ringer when you are on-hook.

Display control buttons	Each of these 7 buttons accesses display features and is labeled with a feature name.
Feature buttons	Each of these 2 buttons accesses a feature and is labeled with a feature name.
Dial pad	The standard 12-button pad for dialing the telephone numbers and accessing features.
Call appearances/ feature buttons	At least 3 of these 10 buttons are devoted to handling incoming and outgoing calls (call appearances) and are labeled with an extension number; the remainder access features (feature buttons) and are labeled with a feature name. Each has a red light to tell you the line is being used or that this is the line you will get when you lift the handset. The green light next to each call appearance and feature button tells you the line or feature is being used.

What the Features Do

Here are brief descriptions of 29 features, including what each one does and how you might want to use it. The first 23 are voice features and the final 6 are display features.

Voice Features

Abbreviated Dialing Allows you to store selected telephone numbers for quicker and easier dialing. Each number can be a complete or partial telephone number, an extension number, or a trunk or feature code. There are 4 possible types of lists—personal, group, system, and enhanced—and you can have a total of 3 lists. Numbers on a personal list are programmable by you; numbers on all other lists are programmable only by the System Manager. Use as a timesaver for dialing frequently called, lengthy, or emergency numbers.

Automatic Callback Sends you a special 3-burst ring tone indicating that a previously busy or unanswered extension is now available. Use to avoid constant redialing when you wish to speak to someone as soon as possible. **Note:** Can be used only for extensions, not outside numbers.

Bridging Permits you to answer or join in calls to someone else's extension by pressing a **bridged appearance button** on your voice terminal. This button can be any call appearance button labeled with another user's primary extension number, as assigned to you by your System Manager. Use to assist in handling calls for a designated co-worker.

Call Coverage Provides automatic redirection of certain calls to your voice terminal for answering. (Your System Manager determines which calls will be sent to you.) Use to answer calls for other extensions for whom you provide coverage.

Call Forwarding All Calls Temporarily forwards all your calls to another extension or to an outside number. Use when you will be away from your voice terminal and you want your calls to be forwarded to a telephone number of your choice.

Call Park Puts a call on hold at your voice terminal, for retrieval at any extension. Use when you need to go elsewhere to get information during a call, or whenever you wish to complete a call from a different location. Also, if the call received is for someone else, use it to hold the call until the called party can answer it from the nearest available voice terminal.

Call Pickup Lets you answer a call at your voice terminal for another extension in your pickup group. Use when you wish to handle a call for a group member who is absent or otherwise unable to answer. **Note:** You can only use this feature if you and the called party have been assigned to the same pickup group by your System Manager.

Conference Allows you to add parties to a call, so that you can conduct a 6-way conversation. (If you wish to conference more than 6 parties, call your attendant for assistance.) Use to set up time-saving conferences, or to spontaneously include a party important to a discussion.

Drop Disconnects from a call without requiring you to hang up the handset or press the switchhook. Can also be used with the Conference feature to disconnect the last party added. Use whenever you are using the handset and want to continue using it for another action after ending a call.

Hold Temporarily disconnects from a call, holding it until you can return to it. While a call is on hold, you can place another call, activate another feature, answer a waiting call, or leave your voice terminal to do another task. Use when you have a call that you don't wish to drop, but which you have to interrupt briefly to do something else.

Intercom Gives you quick access to specified extensions. With Automatic Intercom, you can call a predetermined partner by pressing a single feature button. With Dial Intercom, you can call any member of a predetermined group of users by pressing a feature button and then dialing the group member's 2- or 3-digit code. Use to rapidly dial frequently called numbers.

Last Number Dialed Automatically redials the last number you dialed, either an extension or an outside number. Use to save time in redialing a busy or unanswered number.

Leave Word Calling (LWC) Leaves a message for another extension to call you back. The called party will be able to dial Message Center, AUDIX, or a covering user to retrieve a short, standard message which gives your name and extension, the date and time you called, and the number of times you called. Use any time you wish to have someone call you back; it will help cut down on repeated call attempts.

Message Turns on your Message light to let you know that a caller has left a message for you. You can then follow your System Manager's local message retrieval procedures to get your message. See **Message Retrieval** in the **Display Features** section.

Mute Turns off the microphone of the built-in speakerphone or the handset. Use when you want to confer with someone in the room with you, but you do *not* want the other party on the call to hear your conversation.

Priority Calling Allows you to call another extension with a distinctive 3-burst ring to indicate that your call requires immediate attention. Use when you have important or timely information for someone.

Select Ring Allows you to select your own personalized ring from among 8 available ringing patterns. Use to distinguish your ring from that of other nearby voice terminals.

Self-Test Activates the lights and ringer of your voice terminal. Use when you want to test their operation.

Send All Calls Temporarily sends all your calls to the extension of a person designated to answer them when you cannot (perhaps a secretary or receptionist). Use when you will be away from your desk for awhile, or when you do not wish to be interrupted by telephone calls.

Speaker Allows you to place calls or access other voice features without lifting the handset. However, in order to speak to the other party, you must use the handset. Use with feature activities that require *listening only*, such as on-hook dialing, monitoring calls on hold and group listening situations. **Note:** Your voice terminal has either the Speaker (listen-only) *or* the Speakerphone function. Check with the System Manager to see how your voice terminal is set.

Speakerphone Allows you to place and answer calls or access other voice features without lifting the handset. Use any time you prefer hands-free communication, both speaking and listening or for group conference situations. **Note:** Your voice terminal may be set for the Speaker (listen only) feature. Check with the System Manager.

Transfer Transfers a call from your voice terminal to another extension or outside number. Use when your caller needs to speak further with someone else. **Note:** Calls from an outside number to your voice terminal can be transferred only to an extension, *not* to another outside number.

Voice Message Retrieval Gives you messages (via computerized voice) left for you through Leave Word Calling or as entered by a covering user. If authorized by your System Manager, you may also retrieve messages for one or more of your co-workers. Use to hear all messages received while you were away.

Display Features

Inspect Shows you call-related information for an incoming call when you are already active on a call. Use to identify and screen new calls.

Integrated Directory Searches for the extension of another user by allowing you to key in the user's name with the dial pad. Use as a handy quick reference source for extension number information.

Message Retrieval Allows you to retrieve messages left for you that have turned on your Message light. Will also let you retrieve messages for other voice terminals not equipped with a display (if you are authorized as a systemwide message retriever by your System Manager). Use to quickly and conveniently check messages, even when you are already on a call.

Normal Identifies current call appearance, calling/called party, and calling/called number. Use to see who is calling you and, when placing a call, to verify the number you have dialed.

Stored Number Allows you to check the number stored on an Abbreviated Dialing button or as an item on an Abbreviated Dialing list. Also lets you see what number you last dialed (via Last Number Dialed feature). Use to verify Abbreviated Dialing list items before placing a call or reprogramming a number, and to make sure that Last Number Dialed is appropriate to use.

Time Shows you the date and time, and also allows you to measure elapsed time. Use as a handy calendar and clock, and to keep track of time spent on a call or task.

How to Use the Features

The procedures which follow give short, step-by-step instructions for using each of the voice and display features. For your convenience, features in each category are listed alphabetically.

Special Instructions

The first time you use these procedures, you will need to customize them for yourself by following the directions. Your System Manager can supply the information required.

- To the right of each feature name is a box. For each feature that you have, mark a [✓] in the blank box as a reminder. (Voice features Conference, Drop, Hold, Message, Mute, Select Ring, Self-Test, and Transfer and display features Message Retrieval and Normal are already marked for you.) Ask your System Manager if your voice terminal is set for the Speaker (listen only) or the Speakerphone (speak and listen) feature, and then place a check in the box beside that feature also.
- You can activate and cancel most of the voice features by dialing 2- or 3-digit codes (if they are not already assigned to a button). In the blanks provided within the procedures, write in the feature code numbers.

Note: If you receive an **intercept tone** (high-pitched, alternating high and low tone) while attempting to operate any feature, you have taken too much time to complete a procedural step. Hang up, get dial tone, and begin again at Step 1.

Conventions

The following conventions are used in the procedures:

- | | |
|--|--|
| Gray Type | Procedural steps in gray type are steps that you should follow if you do not have a button assigned for the feature. |
| [<u>xxxxx</u>] | This box represents a call appearance button which is used exclusively for placing, receiving, or holding calls. The button has a red light and a green light and is labeled with an extension number (shown as [<u>xxxxx</u>]). |
| [<u>Feature</u>] and
[<u>Feature xxxxx</u>] | Each of these boxes represents a button that has a feature assigned to it. The button is labeled with the feature name, sometimes followed by an extension number or a person's name (shown as [<u>xxxxx</u>]). |
| [<u>DISPLAY INFORMATION</u>] | A white box containing fully capitalized words represents information shown on the display. |

For a list of glossary terms, see the section titled **Key Words to Know**.

Quick Reference Lists

Following the procedures is a set of quick reference lists. Use them to record your feature and trunk codes, Abbreviated Dialing personal list items, and frequently called miscellaneous extensions. Once you have completed it, remove the page from the booklet (tear along the perforation), and keep the lists near your voice terminal.

Voice Features

Handset and Speaker

When placing/answering calls or using the voice features, you have the option of doing so **off-hook** (by lifting the handset) or **on-hook** (by pressing [**Speaker**]). If your voice terminal is set for the Speakerphone feature, pressing [**Speaker**] simultaneously activates the built-in microphone so that you can place *and* answer calls without lifting the handset.

Abbreviated Dialing (AD)

To program/reprogram AD button

Note: AD buttons must first be assigned by System Manager.

- 1 On a separate sheet of paper, jot down the outside numbers, extensions, and/or feature codes you want to program
Note: Each AD button will hold one complete telephone number or feature code.
- 2 Pick up handset
- 3 Press [**Program**]
or Dial AD Program code _____ [dial tone]
- 4 Press [**AD_xxxxx**] to be programmed [dial tone]
- 5 Dial outside number, extension, or feature code you want to store (up to 24 digits)

- 6 Press [**#**] [confirmation tone]
 - Repeat Steps 2-4 to program additional buttons
- 7 Hang up or press [**Drop**] to end programming

To place an AD call

- 1 Press selected [**AD_xxxxx**] [ringback tone]
 - Call is dialed (silently)

To program/reprogram an outside number, extension, or feature code into a personal list

Item	Number
1	9-555-4280 (home)
2	ext 6344 (guard)
3	9-919-755-0000 (print shop)
4	*60 (msg retrieval)

- 1 On a separate sheet of paper, jot down the outside numbers, extensions, and/or feature codes you want to program as items on your personal list(s) (see example to the left)

Note: Each telephone number or feature code is stored as a separate item.

- 2 Pick up handset
- 3 Press [Program]
or Dial AD Program code _____ [dial tone]
- 4 Press [Personal List]
or Dial Personal List code (1, 2, or 3) [dial tone]
- 5 Dial list item (1, 2, 3...) [dial tone]
- 6 Dial number you want to store (up to 24 digits)
- 7 Press [#] [confirmation tone]
 - Repeat Steps 3-5 if you want to program additional items on the same list; press [Drop] and begin again at Step 1 if you want to program items on another list

- 8 Hang up or press [Drop] to end programming

Note: Record your personal list items on the Abbreviated Dialing list in the back of this booklet; group, system, and enhanced lists can be obtained from your System Manager.

To place a call using an AD list button or code

- 1 Press [Personal List] or [Group List] or [System List]
or Dial appropriate AD List code:
 - List 1 _____
 - List 2 _____ [dial tone]
 - List 3 _____

Note: An [Enhanced List] may also be available; see your System Manager.

- 2 Dial desired list item (1, 2, 3...)
 - Call is dialed

Automatic Callback



To place another call to an extension that was busy, did not answer, or returned a call waiting ringback tone

- 1 Press [**Auto Callback**] during call attempt [confirmation tone]
 - Green light is on until callback is completed or canceled

Note: If you send your calls to coverage after activating Automatic Callback, your callback calls will still ring at your extension and will *not* be redirected to coverage.

- 2 Hang up or press [**Drop**]
 - You get a 3-burst priority ring when both you and the called extension are idle; when you answer, regular ringing is sent to the called party

Note: Automatic Callback is automatically canceled after 30 minutes.

To cancel Automatic Callback

- 1 Press [**Auto Callback**] again [dial tone]
 - Green light goes off

Bridging



To answer a bridged call

- 1 Press [**xxxxx**] of bridged call

Note: If your terminal has Ringing Appearance Preference, this step is not necessary; you will automatically be connected to the call when you lift the handset.

- 2 Pick up handset or press [**Speaker**]

To prevent other bridged terminals from entering a call (on a per call basis)

- 1 Press [**Exclusion xxxxx**] while connected to the call

Note: Pressing [**Exclusion xxxxx**] again reactivates bridging.



To answer a call for a co-worker for whom you are a coverage point

- 1 Press [**xxxxx**] of incoming call when ring begins or green light flashes

Note: The call is *not* at your terminal until the light is flashing.

To leave a message for a co-worker to call the original caller's extension

- 1 Press [**Coverage Callback**] while connected to the call [confirmation tone]

Note: To leave a message for a co-worker to call *you*, activate Leave Word Calling instead.

To talk privately with co-worker after answering a redirected call

- 1 Press [**Transfer**]
 - Call is put on hold
- 2 Press [**Consult**] or Dial co-worker's extension [priority ring to co-worker]

Note: You can privately discuss call; if co-worker is not available, press the fluttering [**xxxxx**] to reconnect to call.

- 3 Press [**Transfer**] again to send call to co-worker or press [**Conference**] make it a 3-party call

Call Forwarding All Calls

To temporarily redirect all calls to an extension or outside number of your choice

- 1 Press [**Call Forward**]
or Dial Call Forward code _____ [dial tone]

Note: If you have console permission, next dial the extension number whose calls are to be forwarded; receive dial tone.

- 2 Dial extension or number where calls will be sent
[confirmation tone]

Note: Some voice terminals have restrictions on where calls can be forwarded (see your System Manager).

- 3 Hang up or press [**Drop**]

Note: You may hear ring-ping tone as each call is forwarded.

To cancel Call Forwarding

- 1 Press [**Call Forward**] again
or Dial Call Forward Cancel code _____
[confirmation tone]

Call Park

To park a call at your extension (for retrieval at any extension)

- 1 Press [**Transfer**] [dial tone]
- 2 Press [**Call Park**]
or Dial Call Park code _____
[confirmation tone]
- 3 Press [**Transfer**] again
 - Call is parked

To retrieve parked call from any extension

- 1 Dial Answer Back code _____ [dial tone]
- 2 Dial extension where call is parked
[confirmation tone]
 - If returning to call parked at your terminal, dial your own extension

Note: If you receive intercept tone, parked call has been disconnected or retrieved by another party.

Call Pickup



To answer a call placed to a member of your pickup group

- 1 Press [**Call Pickup**] or Dial Call Pickup code _____
 - You are connected to ringing call

To pick up a call while you are active on another call

- 1 Press [**Hold**]
 - Present call put on hold
 - Green light flutters
- 2 Press [**Call Pickup**]
 - Called voice terminal stops ringing
 - You are connected to ringing call

Note: To return to held call after completing present call, press fluttering [**xxxxx**].

Conference



To add another party to a call (for a total of up to 6 parties)

- 1 Press [**Conference**] [dial tone]
 - Present call put on hold and you are given a new call appearance; all other parties remain connected to each other
- 2 Dial number of new party and wait for answer

Note: You can privately discuss the call with the new party at this time; if no answer or busy, press fluttering [**xxxxx**] to return to the held call.

- 3 Press [**Conference**] again
 - All parties now connected
 - Repeat Steps 1-3 for additional conference connections

To add a call you've put on hold to another call you're connected to

- 1 Press [**Conference**] [dial tone]
 - Held call light flutters; active call light remains on
- 2 Press [**xxxxx**] of call on hold
- 3 Press [**Conference**] again

Drop



To disconnect from a normal call, or to drop the last party added to a conference call

- 1 Press [**Drop**]

Note: Parties other than the last one must disconnect to be released from the conference call.

Hold



To keep a call waiting while you answer another call, make a call, or perform some other task

- 1 Press [**Hold**]
 - Green light flutters

Note: If you put a conference call on hold, the other parties remain connected.

To answer a new call while active on another

- 1 Press [**Hold**]
- 2 Press [**xxxxx**] of incoming call

To return to held call

- 1 Press [**xxxxx**] of held call

Intercom

To make a call to your predetermined Automatic Intercom partner

- 1 Press [**lcom Auto xxx**] [ringback tone]
 - Special intercom ring is sent

Note: If call is unanswered, press [**Go to Cover**] while call is ringing if you want to redirect it to coverage.

To dial a call to a member of your Dial Intercom group

- 1 Press [**lcom Dial xxx**]
- 2 Dial group member's 1- or 2-digit code [ringback tone]
 - Special intercom ring is sent

Note: If call is unanswered, press [**Go to Cover**] while call is ringing if you want to redirect it to coverage.

To answer any intercom call

- 1 Pick up handset or press [**Speaker**]
 - You are connected to call

Note: If you are active on another call, first press [**Hold**], then press flashing [**xxxxx**].

Last Number Dialed

To automatically redial the last number you dialed (extension, outside number, or trunk/feature code)

- 1 Press [**Last Dialed**] or Dial Last Number Dialed code _____ (up to 24 digits)

Leave Word Calling (LWC)



To leave a message *after* dialing an extension (when call is not answered, or you hear a coverage or busy tone, or you have been put on hold)

- 1 Press [**LWC**] any time after you complete dialing [confirmation tone]

- Message light comes on called voice terminal

Note: If reorder tone is heard, message is not stored; try again.

Note: To do this, you must have a [**LWC**] button.

To leave a message *before* dialing an extension (called extension will not ring)

- 1 Press [**LWC**] or Dial Leave Word Calling code _____ [dial tone]

- 2 Dial the extension [confirmation tone]

- Message light comes on called voice terminal
-

To cancel a Leave Word Calling message

- 1 Press [**Cancel LWC**] or Dial Leave Word Calling Cancel code _____ [dial tone]

Note: You cannot cancel messages for an AUDIX subscriber.

- 2 Dial the extension [confirmation tone]

Note: If reorder tone is heard, message is not deleted try again.

Message



To retrieve a message when your Message light is on

- 1 See the **Message Retrieval** procedures under the **Display Features** heading



Note: Use the Mute button in one of the following ways.

- If your voice terminal has the Speakerphone feature, use the Mute button to turn off the microphone associated with the built-in speakerphone *or* the handset.
- If your voice terminal has the Speaker (listen-only) function, the Mute button affects only the handset.

This feature has no effect on an external speakerphone.

To prevent the other party from hearing you

- 1 Press [**Mute**]
 - Red light goes on and other party cannot hear you
- 2 When you are ready to resume conversation with the other party, press [**Mute**] again
 - Red light goes off and other party can hear you again

Note: The Mute feature turns off automatically when you hang up, or switch from the speakerphone to the handset or from the handset to the speakerphone.

Priority Calling



To place a priority call (3-burst ring)

- 1 Press [**Priority**]
or Dial Priority Calling Code _____ [dial tone]
- 2 Dial the extension

Note: If your call is not answered and you wish to redirect it to coverage, press [**Go to Cover**] while call is ringing.

To send the priority call waiting tone (3-burst) when you hear a call waiting ringback tone

- 1 Press [**Priority**]
- 2 Wait for called party to answer

Note: If you still receive a call waiting ringback tone, wait a few minutes and try again.



To select a personalized ring

- 1 Press [**Select Ring**] (while on-hook)
 - Green light goes on
- 2 Press [*]
 - Green light winks; current ring pattern plays and repeats every 4 seconds
 - Display Shows [**PERSONAL RING #x**] (x will be a number from 1 to 8)
- 3 Adjust ringer volume if desired
 - To raise the volume, press the right half of the Volume control button labeled [▲]; to lower the volume, press the left half of the Volume control button labeled [▼]
 - Display shows [**RINGER L>>>> H**] (There are 8 possible volume settings. On the display, 1 arrow is the lowest setting, and 8 arrows is the highest setting)
- 4 Repeat Step 2 to cycle through all 8 ring patterns

- 5 Press [**Select Ring**] again when you hear the desired ring pattern
 - Your new ring is set; green light goes off

Note: If you receive a call during selection, process is interrupted and you must begin again.



To test the lights and ringer of your voice terminal

- 1 Press [**Select Ring**] (while on-hook)
 - Green light goes on
- 2 Press and hold [**Drop**]
 - All columns of lights next to buttons above and to right of dial pad go on steadily
 - Ringer sounds
- 3 Release [**Drop**] to end test
 - Ringer and lights return to pretest state

Note: If ringer or lights do *not* respond during test, notify your System Manager.

Send All Calls

To send all calls (except priority calls) immediately to coverage

- 1 Press [**Send All Calls**]
or Dial Send All Calls code _____
[confirmation tone]

Note: You may hear a ring-ping tone as each call is forwarded.

To cancel Send All Calls

- 1 Press [**Send All Calls**] again
or Dial Send All Calls Cancel code _____
[confirmation tone]



Note: Your voice terminal is set for either the Speaker (listen-only) or the speakerphone (listen and talk) function. Check with your System Manager to see which of these two features you can use.

Use the following procedures if your voice terminal is set for the Speaker (listen only) feature.

To place a call without lifting the handset, or to use speaker with any listening-only activity (such as, monitoring a call on which you have been put on hold or for group listening)

- 1 Press [**Speaker**]
- 2 Place call or access selected feature
- 3 Adjust speaker volume if necessary
 - To raise the volume, press the the right half of the Volume control button labeled [**▲**]; to lower the volume, press the left half of the Volume control button labeled [**▼**]
 - If you have a display, it shows [**SPEAKER L>>>> H**] (There are 8 possible volume settings. On the display, 1 arrow is the lowest setting and 8 arrows is the highest setting)

Note: In order for the other party to hear you, you must speak through the handset.

To mute the microphone associated with the handset so the other party cannot hear you

- 1 Press [**Mute**]
 - Red light goes on and other party cannot hear you
- 2 Press [**Mute**] again to resume talking to other party through handset
 - Red light goes off and other party can hear you again

To change from speaker to handset

- 1 Lift handset and talk

To change from handset to speaker

- 1 Press [**Speaker**]
- 2 Hang up handset

To end a call

- 1 Press [**Speaker**]



Note: If you are uncertain whether your voice terminal is set for the Speaker (listen only) feature or the Speakerphone (listen and talk) feature, check with your System Manager.

Use the following procedures if your voice terminal is set for the Speakerphone (speak and listen) feature.

To place/answer a call without lifting the handset, or to use speakerphone with my feature

- 1 Press [**Speaker**]
 - Green light next to [**Speaker**] goes on
- 2 Place or answer call, or access selected feature
- 3 Adjust speaker volume if necessary
 - To raise the volume, press the right half of the Volume control button labeled [**▲**]; to lower the volume, press the left half of the Volume control button labeled [**▼**]
 - If you have a display, it shows [**SPEAKER L>>>> H**] (There are 8 possible volume settings. On the display, 1 arrow is the lowest setting and 8 arrows is the highest setting)

Note: The Volume control button does *not* affect an external speakerphone.

- 4 Press [**Speaker**] again to hang up
 - Green light goes off

To prevent other party from hearing you

- 1 Press [**Mute**]
 - Red light goes on and party cannot hear you
- 2 Press [**Mute**] again to resume talking to party
 - Red light goes off and other party can hear you again

Note: The Mute feature can also turn off the microphone associated with the handset.

To change from speakerphone to handset

- 1 Lift handset and talk
 - Green light next to [**Speaker**] goes off

To change from handset to speakerphone

- 1 Press [**Speaker**]
 - Green light next to [**Speaker**] goes on
- 2 Hang up handset



To send present call to another extension or outside number

- 1 Press [Transfer]
 - Present call put on hold
 - 2 Dial extension or number that call is to be transferred to [ringback tone]
 - Remain on line and announce call if desired; if no answer or number dialed is busy, return to held call by pressing its [xxxx]
 - 3 Press [Transfer] again
 - Call is sent to the dialed extension or number
- Note:** Only calls from another extension can be sent to an outside number; you *cannot* transfer a call from an outside number to another outside number.
- 4 Hang up or press [Drop]

Voice Message Retrieval



To retrieve your voice messages when your Message light is on

- 1 Dial the Voice Message Retrieval code _____ [dial tone]
- 2 Press [#] [voice prompting]

Note: Do *not* press [#] if calling from someone else's extension; instead, dial your own extension number and (if prompted) your security code.

- 3 Move through the messages with these dial pad buttons (press [#] to retrieve first message):

[#] NEXT (read next message)

[3] DELETE (erase from storage)

[4] HELP (request assistance)

[5] REPEAT (read message again)

[8] CALL (call back named extension)

Note: When you call back an extension with [8], be sure to also delete the message with [3] either before you place the call or after you complete it; otherwise, the message will remain in storage.

4 Hang up or press [**Drop**]

To retrieve voice messages
for a co-worker

- 1 Dial Voice Message Retrieval Coverage code [dial tone]
- 2 Dial co-worker's extension [dial tone]
 - Dial co-worker's security code also, if prompted

Note: The security code must be dialed within 10 seconds or you will receive an intercept tone. Begin again at Step 1 if this happens.

- 3 Move through the messages with dial pad buttons previously listed
- 4 Hang up or press [**Drop**]

Display Features

Activating and Clearing the Display

Your display is *automatically* activated when you press a call appearance or feature button which requires displayed information. The display screen is usually cleared by pressing [**Normal**], or, for some features, the display automatically returns to normal mode after the information has been displayed for a designated number of seconds. To clear the display after using the Timer feature, you must press [**Timer**] a second time.

Normal Mode

In normal mode, the display shows call information for the current active call appearance button:

- You may have as many as 10 call appearance buttons. Beginning with the first button in the upper left-hand corner of your faceplate and going down, the display identifies the first 5 buttons as **a** through **e**; the 5 buttons in the second column are identified as **f** through **j**. When the display shows [**a=**], it represents call information for the first call appearance button. The next button down would be shown as [**b=**], and so on, continuing through [**j=**] if all 10 of these buttons are used for call appearances.
- When you dial an extension, that number is shown and then replaced by the called party's name and extension.
- When a call is received from another extension, the caller's name is shown; when a call is received from outside, [**OUTSIDE CALL**] or a trunk identifier is shown.
- The display remains in in normal mode until you activate one of the other display features. After using any of these features, return to normal mode by pressing [**Normal**].

Inspect



- To see who's calling while on a call
- 1 Press [**Inspect**]
 - Name and number of caller shown if from extension; [**OUTSIDE CALL**] or other trunk source shown if from outside

Note: New caller information is shown for 30 seconds when call is received then display returns to normal mode.

-
- To see who's on hold while on a call
- 1 Press [**Inspect**]
 - 2 Press [**xxxxx**] of held call
 - You remain connected to present call

-
- To answer new call while on a call
- 1 Press [**Normal**] (if not already in normal mode)
 - Finish present call or put on hold
 - 2 Press [**xxxxx**] of new call

Integrated Directory



- To search directory for a name
- 1 Press [**Directory**]
 - 2 Key in selected name with dial pad:
last name, comma (use [**,**]), first name or initial
- Note:** For Q dial [**z**] (PRS); for Z dial [**9**] (WXY).
- 3 Press [**Next Message**] for each successive directory name you wish to see
 - To search for a new name, begin at Step 1

-
- To place a call to name shown
- 1 Press [**Return Call**] while name is shown
 - Speakerphone is automatically activated unless you lift handset instead

-
- To leave directory and return to normal display
- 1 Press [**Normal**]



To see your messages when your Message light is on (while on-hook off-hook, or on a call)

- 1 Press [**Message Retrieve**]
- 2 Press [**Next Message**] to see first message (and then for each following message)

To return a call to message sender

- 1 Press [**Return Call**] while any part of message is shown
 - Speakerphone is automatically activated unless you lift handset instead

To erase a message

- 1 Press [**Delete**] while any part of message is shown

To see co-worker's messages (can be during call with co-worker)

- 1 Press [**Covr Msg Retrieve**]
- 2 Dial co-worker's extension
- 3 Press [**Next Message**] to see first message (and then for each following message)

Note: You must first be designated as a systemwide message retriever by your System Manager.

To return call for co-worker to displayed extension (while on call with co-worker)

- 1 Press [**Transfer**]
 - Co-worker is put on hold
- 2 Press [**Return Call**] while any part of message is shown
- 3 Press [**Transfer**]
 - Co-worker is connected to call attempt

To erase a message

- 1 Press [**Delete**] while any part of message is shown

To leave Message Retrieval and return to normal display

- 1 Press [**Normal**]



To return to normal display after using any display feature

- 1 Press [**Normal**]
 - Display will show call information for active call appearance

Stored Number

To see number stored on an AD button

- 1 Press [**Stored**]
- 2 Press selected [**AD_xxxxx**]
 - Stored number shown
- 3 Press [**Normal**] to return to normal display or repeat Step 2 to see another stored number

To see number stored as a list item

- 1 Press [**Stored**]
- 2 Press [**Personal_List**] or [**Group_List**] or [**System_List**] or Dial appropriate AD list code:
 - List 1 _____
 - List 2 _____
 - List 3 _____

Note: An [**Enhanced_List**] may be available; see your System Manager.
- 3 Dial selected list item (**1, 2, 3...**)
 - Stored number shown
- 4 Press [**Normal**] to return to normal display or begin again at Step 2 to see another stored number

To see number you last dialed

- 1 Press [**Stored**]
- 2 Press [**Last_Dialed**] or Dial Last Number Dialed code _____

To see date and time

- 1 Press [Date/Time]
 - Display returns to normal mode after a few seconds
-

To see elapsed time
(hours, minutes, seconds)

- 1 Press [Timer]
 - Green light comes on
- 2 Press [Timer] again to stop timer and clear display
 - Green light goes off

Tones and Their Meanings

Ringing tones are produced by an incoming call. **Handset tones** are those which you hear through the handset (receiver).

Ringing Tones

- **1 ring** — A call from another extension.
 - **2 rings** — A call from outside or from the attendant.
 - **3 rings** — A priority call from another extension, or from an Automatic Callback call you placed.
 - **ring-ping (half ring, not repeated)** — A call redirected from your voice terminal to another because Send All Calls or Call Forwarding All Calls is active.
-

Handset Tones

- **busy tone** — A low-pitched tone repeated 60 times a minute; indicates the number dialed is in use.
- **call waiting ringback tone** — A ringback tone with a lower-pitched signal at the end; indicates that the extension called is busy, but the called party has been given a call waiting tone.
- **call waiting tone** — One, two, or three beeps of high-pitched tone, not repeated; indicates an incoming call is waiting to be answered. Number of beeps designates the source: 1 for an internal call, 2 for an outside or attendant call, 3 for a priority call.
- **confirmation tone** — Three short bursts of tone; indicates a feature activation or cancellation has been accepted.
- **coverage tone** — One short burst of tone; indicates your call will be sent to another extension to be answered by a covering user.
- **dial tone** — A continuous tone; indicates dialing can begin.
- **intercept/time-out tone** — An alternating high and low tone; indicates a dialing error, a denial of the service requested, or a failure to dial within a preset interval (usually 10 seconds) after lifting the handset or dialing the previous digit.
- **recall dial tone** — Three short bursts of tone followed by a steady dial tone; indicates the feature request has been accepted and dialing can begin.
- **reorder tone** — A fast busy tone repeated 120 times a minute; indicates all *trunks* are busy.
- **ringback tone** — A low-pitched tone repeated 15 times a minute; indicates the number dialed is being rung.

Key Words to Know

activate To begin or turn on the operation of a feature.

attendant The person who handles incoming and outgoing calls at the main telephone console.

AUDIX Audio Information Exchange, an optional voice mail and message service which provides coverage for calls to you by recording callers' messages and reporting Leave Word Calling messages.

call appearance A button used exclusively to place, receive, or hold calls. It has an assigned extension number and is equipped with a red light and a green light.

console permission The authorization (from your System Manager) to initiate Call Forwarding All Calls for an extension other than your own.

coverage Automatic redirection of calls from an unanswered voice terminal to another voice terminal. Redirection could be to the extension of a receptionist, secretary, co-worker, AUDIX, or Message Center. A person who provides coverage is a covering user.

DEFINITY Communications System Generic 1 The AT&T switch to which you are connected. It transmits and receives voice and data signals for all communications equipment in your network.

dial pad The 12 pushbuttons you use to dial a number and access features.

enhanced list One of the 4 types of Abbreviated Dialing lists; programmable only by the System Manager. Contains telephone numbers useful to all system members, and stores each of those numbers as a 1-, 2-, or 3-digit list item.

extension A dialing number of 1 to 5 digits assigned to each voice terminal connected to your DEFINITY Generic 1.

feature A special function or service, such as Conference, Hold, Send All Calls, etc.

feature code A dial code of 1, 2, or 3 digits which you use to activate or cancel the operation of a feature.

group list One of the 4 types of Abbreviated Dialing lists; programmable by the System Manager or a controller of the list. Contains telephone numbers useful to members of a specific group, and stores each of those numbers as a 2-digit list item.

handset The handheld part of the voice terminal which you pick up, talk into, and listen from. Also known as the **receiver**.

message retriever A person authorized by the System Manager to retrieve messages for other users.

off-hook When the handset is removed from the cradle (for example, when you lift the handset to place or answer a call).

on-hook When the handset is left on the cradle (for example, when you use the speakerphone).

party A person who places or answers a call.

personal list One of the 4 types of Abbreviated Dialing lists; programmable by the System Manager or by you, the user. Contains telephone numbers of your choice, and stores each of them as a single-digit list item.

personal list item One of the 10 available slots on an Abbreviated Dialing personal list. The first 9 personal list items are given digits 1 to 9, with 0 for the tenth item.

pickup group A group of telephone users who can answer calls for each other through the Call Pickup feature. Group members are determined by the System Manager and are usually located in the same work area or perform similar job functions.

priority call An important or urgent call which sends a special 3-burst ring.

program/reprogram To use your dial pad to assign a telephone number to a personal list item or an [**AD_xxxxx**] for Abbreviated Dialing.

retrieve To collect telephone messages with the Message or Voice Message Retrieval features. (Also, with Call Park, to resume a call from an extension other than the one where the call was first placed or received.)

ringer The device that produces the electronic ringing sound in your voice terminal.

stored number A telephone number which has been programmed and stored as a 1-, 2-, or 3-digit list item for use with Abbreviated Dialing. It can be a complete or partial telephone number, an extension number, or a trunk or feature code. Once programmed, a number can be accessed by first dialing the list, then the list item digit(s) under which it is stored. If the number is stored on an [**AD_xxxxx**] button, the number can be accessed by simply pressing that button.

switch The device which makes connections for all voice and data calls for a network, and also contains software for features. Also known as a **system, switching system, or PBX** (private branch exchange). (Your switch is an **AT&T DEFINITY Communications System Generic 1**.)

system list One of the 4 types of Abbreviated Dialing lists; programmable only by the System Manager. Contains telephone numbers helpful to all system users, and stores each of those numbers as a 2-digit list item.

System Manager The person responsible for specifying and managing the operation of features for all the voice and data equipment in your network.

trunk A telecommunications channel between your DEFINITY Generic 1, and the local or long distance calling network. Trunks of the same kind connecting to the same endpoints are assigned to the same **trunk group**.

trunk code A dial code of 1, 2, or 3 digits which you dial to access a trunk group to place a outside call.

voice terminal A telephone equipped with an array of specially designed features (for example, speakerphone, display, administrable buttons, etc.) and functional capabilities that distinguish it from a conventional telephone.

Quick Reference Lists

Feature Codes			
Feature	Code	Feature	Code
ABBREVIATED DIALING List 1		CALL PICKUP	
List 2		LAST NUMBER DIALED	
List 3		LEAVE WORD CALLING	
Program		Cancel	
CALL FORWARDING ALL CALLS		PRIORITY CALLING	
Cancel		SEND ALL CALLS	
CALL PARK		Cancel	
Answer Back		VOICE MESSAGE RETRIEVAL	
		Coverage	

Trunk Codes	
Description	Code

Miscellaneous	
Description	Extension
Attendant	

Abbreviated Dialing*			
Item No.	Personal List 1	Personal List 2	Personal List 3
	Name	Name	Name
1			
2			
3			
4			
5			
6			
7			
8			
9			
0			

* You can have an many as 3 personal lists, and each list can have either 5 or 10 items; see your System Manager.

