

**BELL SYSTEM PRACTICES**  
**Outside Plant Construction**  
**and Maintenance**

**SECTION G61.405.1**  
**Issue 3, May, 1955**  
**AT&TCo Standard**

## **DISTRIBUTION TERMINALS**

### **REPLACEMENT PARTS**

<b>Contents</b>	<b>Page</b>
1. General .....	1
2. Replacement Parts for No. 8 Type Terminals.....	2
3. Replacement Parts for No. 14 Type Terminals.....	3
4. Replacement Parts for C Type Terminals.....	4
5. Replacement Parts for F Type Terminals.....	5
6. Replacement Parts for NA Type Terminals.....	6
7. Replacement Parts for NC, NE and NF Type Terminals .....	7
8. Oversize Slip Covers for F and 14 Type Terminals..	9

#### **1. GENERAL**

1.01 This section covers replacement parts that are available for making field repairs on various types of distribution cable terminals. It is being reissued to cover additional repair parts for NC, NE, and NF Cable Terminals.


1.02 Field repairs to terminals are restricted to those parts which can be removed with little or no interruption to service.

1.03 The drawings of the various terminals shown in this section give the piece part number and name of each replacement part available for field repairs. This information can be used in the preparation of requisitions.

## 2. REPLACEMENT PARTS FOR NO. 8 TYPE TERMINALS

2.01 Parts are indicated below:


### No. 8 TYPE TERMINAL

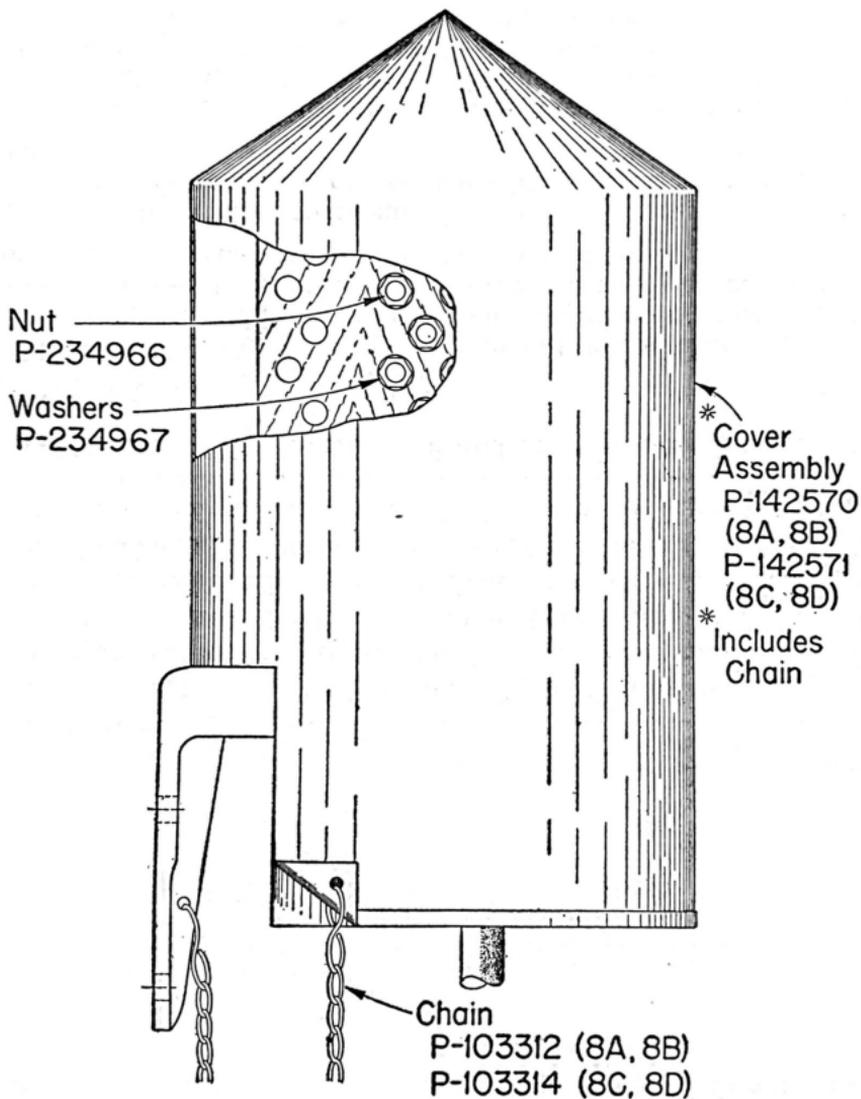

### 3. REPLACEMENT PARTS FOR NO. 14 TYPE TERMINALS

3.01 Parts are indicated below:


#### 14 TYPE TERMINALS

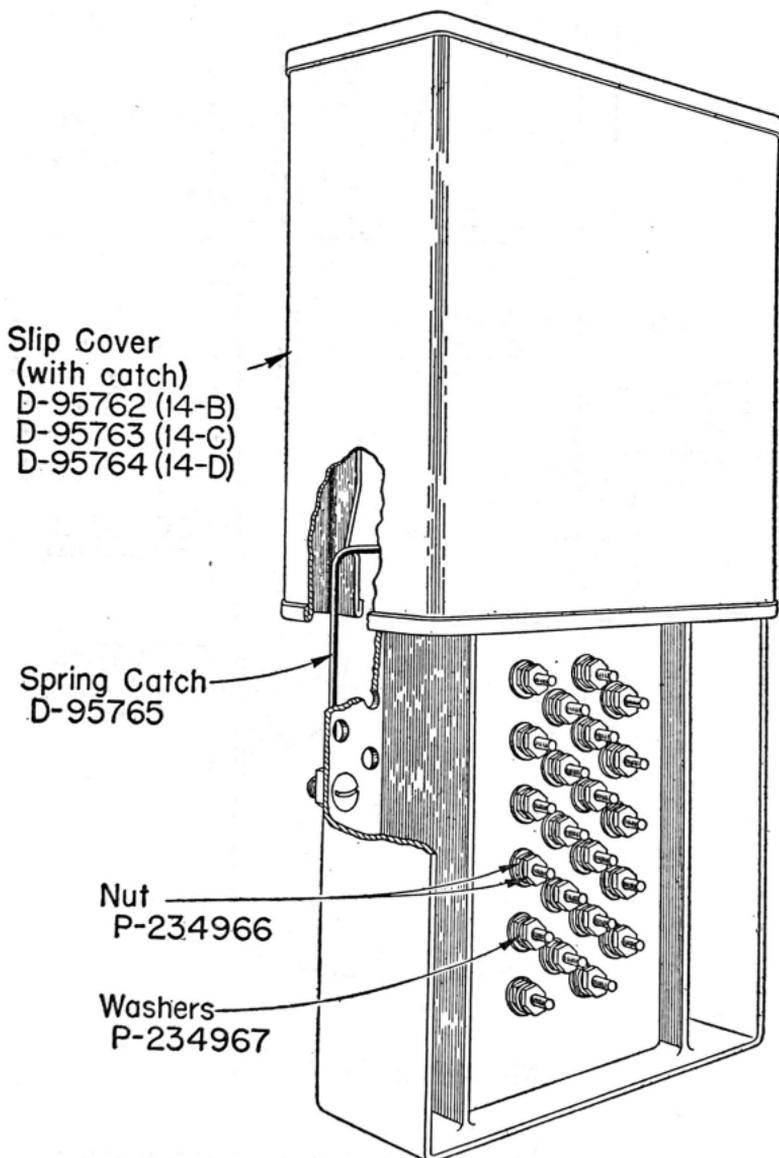

#### 4. REPLACEMENT PARTS FOR C TYPE TERMINALS

4.01 Parts are indicated below:


#### C TYPE TERMINAL

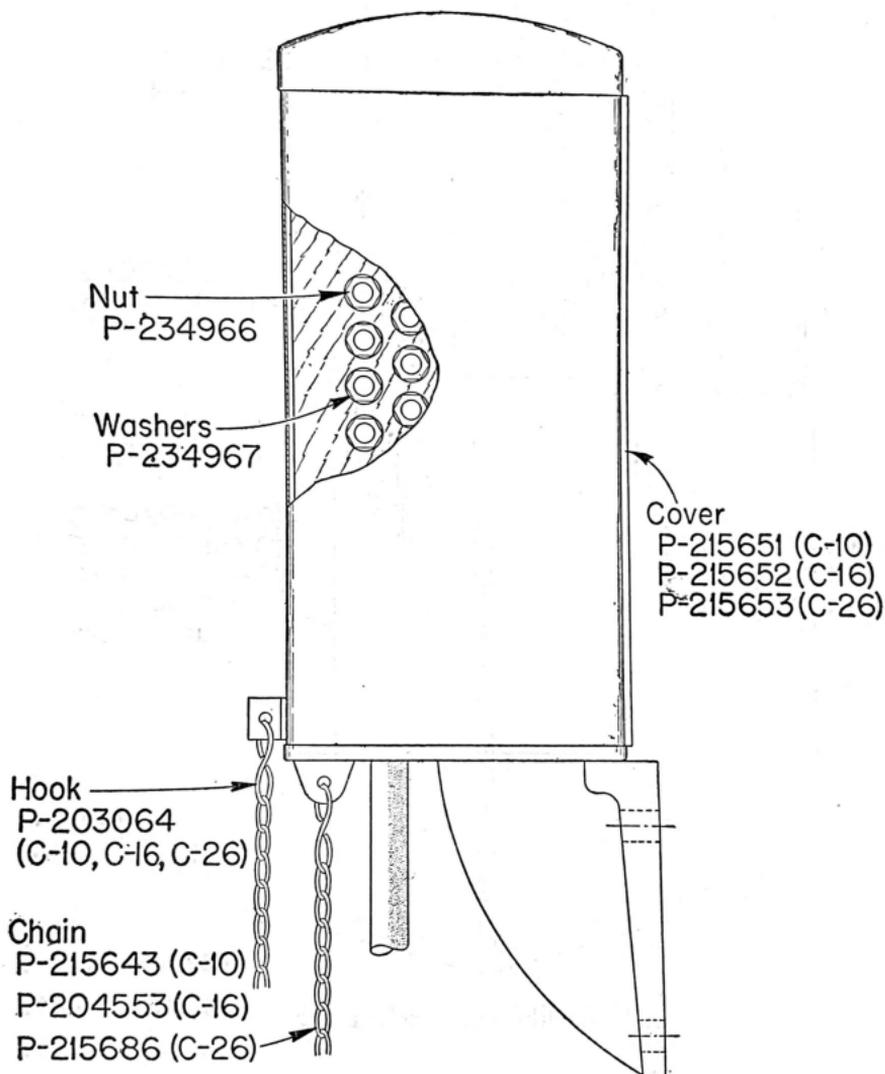

## 5. REPLACEMENT PARTS FOR F TYPE TERMINALS

5.01 Parts are indicated below:


### F TYPE TERMINAL

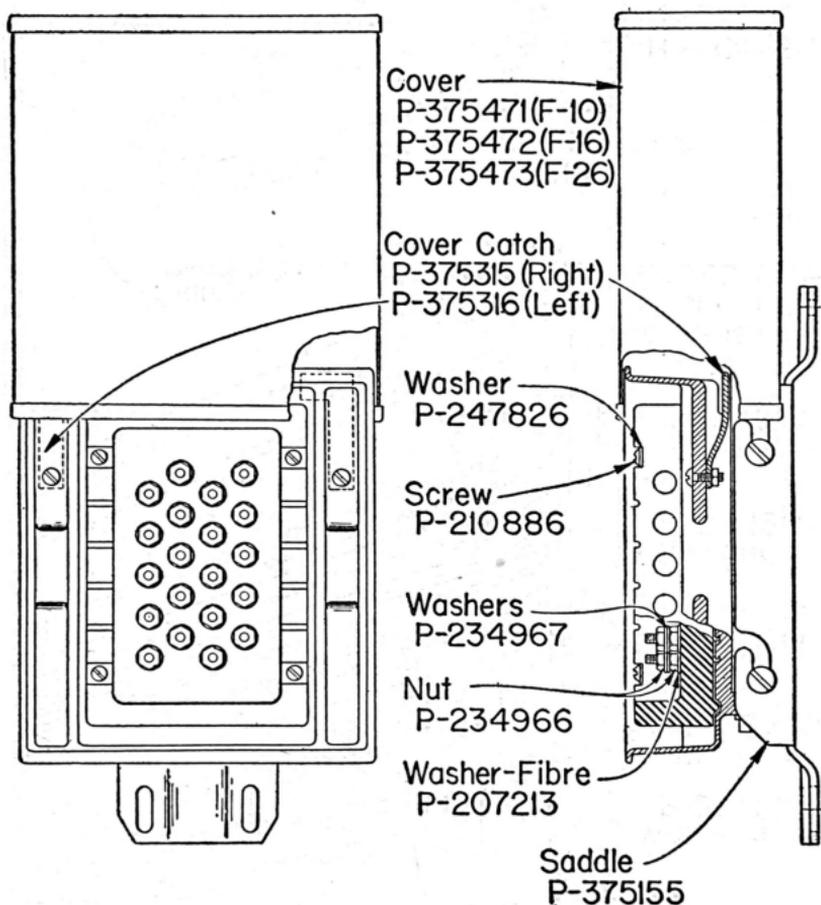

## 6. REPLACEMENT PARTS FOR NA TYPE TERMINALS

6.01 Parts are indicated below:


### NA TYPE TERMINAL

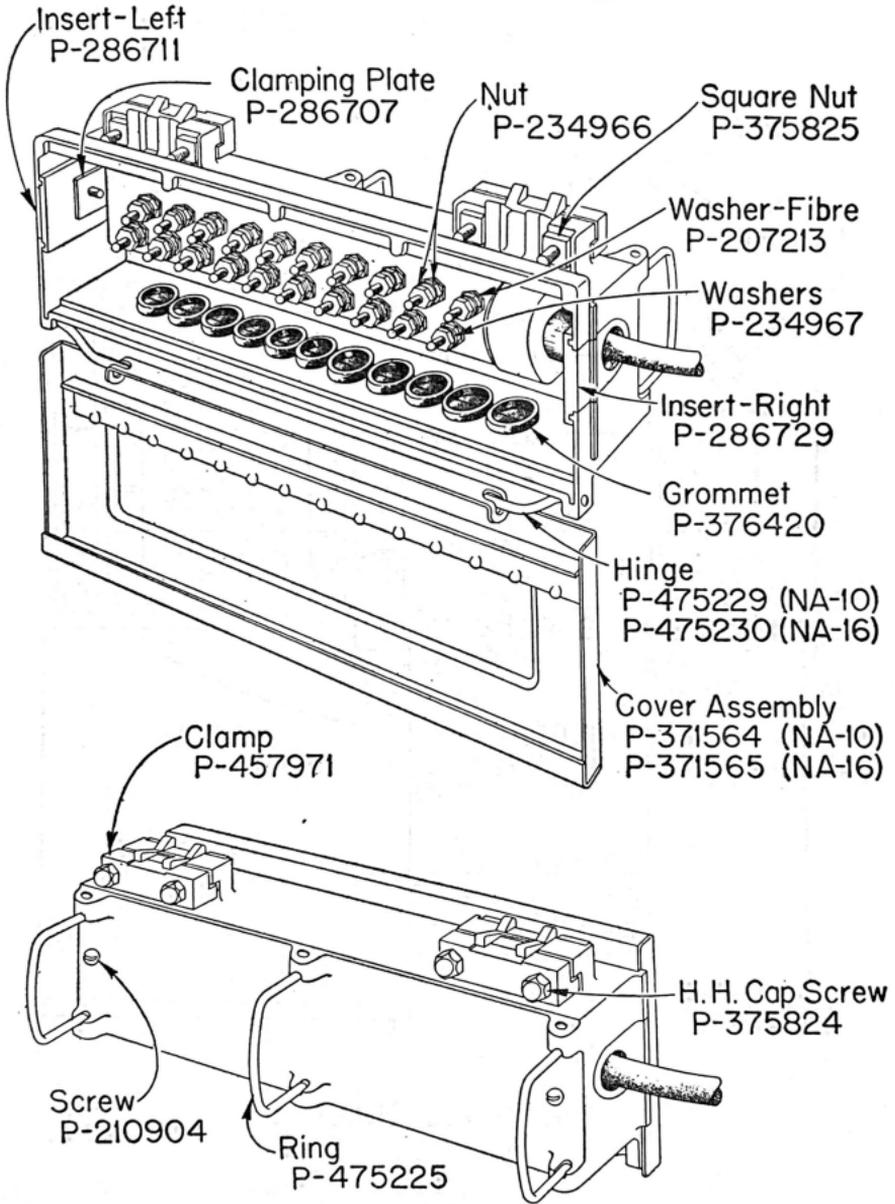


## 7. REPLACEMENT PARTS FOR NC, NE AND NF TYPE TERMINALS

7.01 Parts are indicated below:

### NC, NE AND NF TYPE TERMINALS 10-16 PAIR SIZES

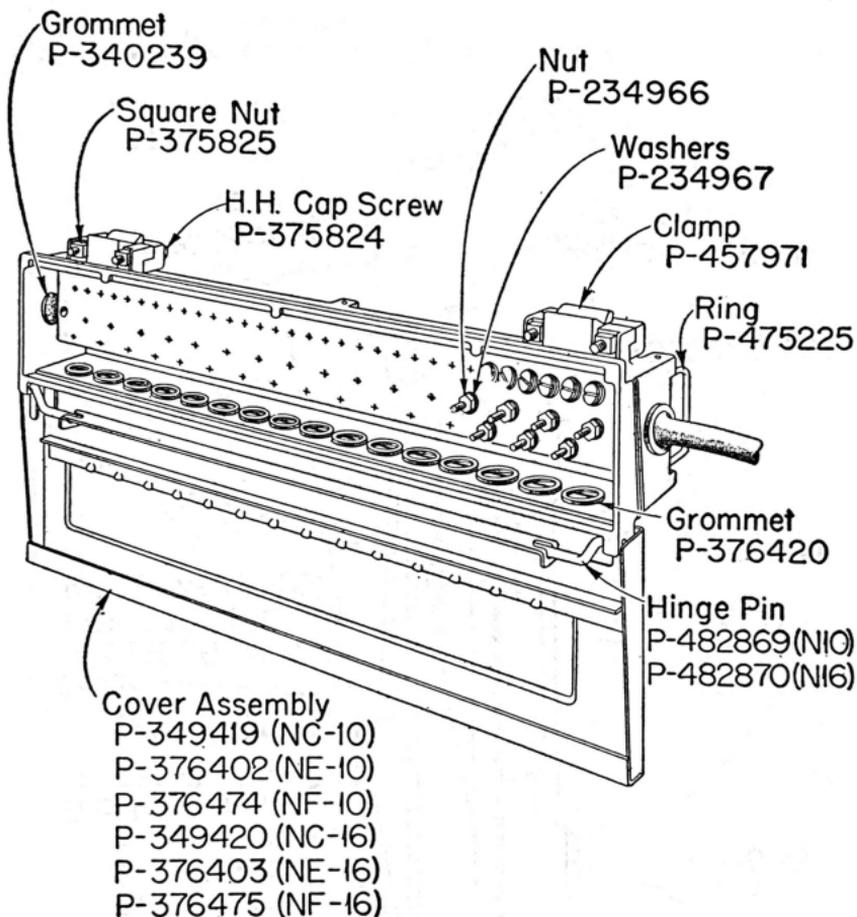

## NC, NE AND NF TYPE TERMINALS 26 PAIR SIZE

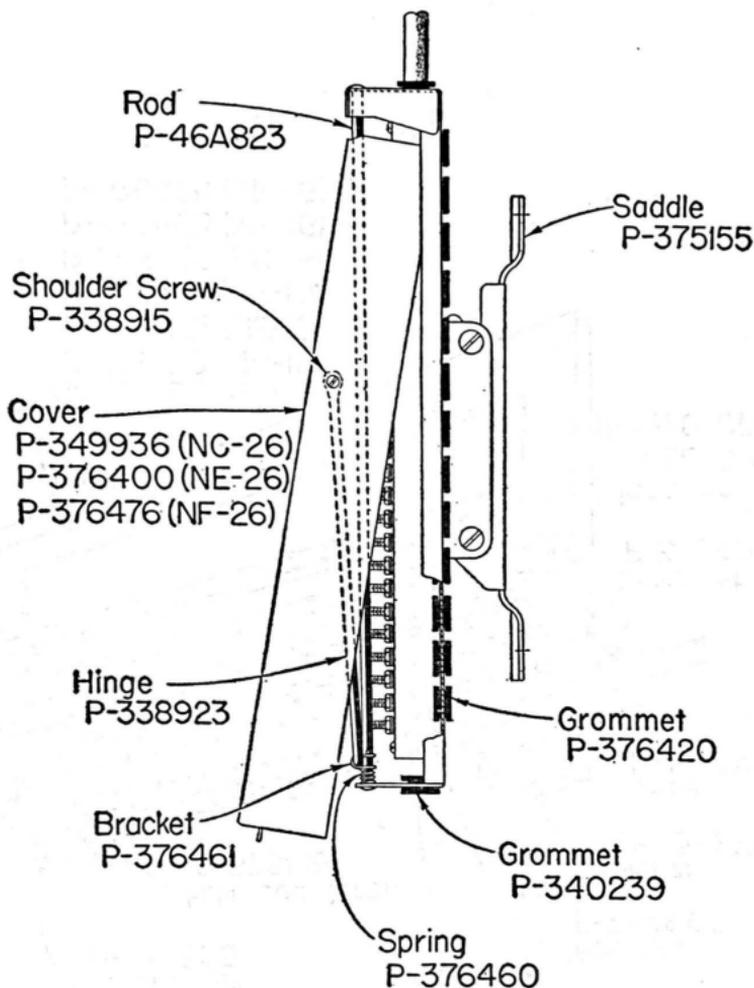

7.02 To repair missing or damaged covers on N26 terminals proceed as follows:

- (1) Remove the two vertical rods in the terminal by filing down the upset ends of the rods.

**Note:** In the initial production of N26 terminals the rods were fastened to the terminal housing by means of screws on the ends.

- (2) Assemble the component parts of the cover on new P46A823 rods as shown in the illustration for N26 terminal in Paragraph 7.01.


(3) Place the rods of the new cover assembly in the holes of the housing which were vacated with the removal of the old rods.

(4) Secure the new rods to the housing by upsetting the ends with a hammer held against one end while striking the other end with a second hammer. The P46A823 rod is made of aluminum alloy so that only light hammer blows are needed to upset the ends.

## 8. OVERSIZE SLIP COVERS FOR F AND 14 TYPE TERMINALS

8.01 Where heavy wiring in F and 14 type terminals makes it difficult to raise or lower the regular size slip covers, these covers may be replaced with oversize slip covers.

### OVERSIZE SLIP COVERS FOR F AND 14 TYPE CABLE TERMINALS

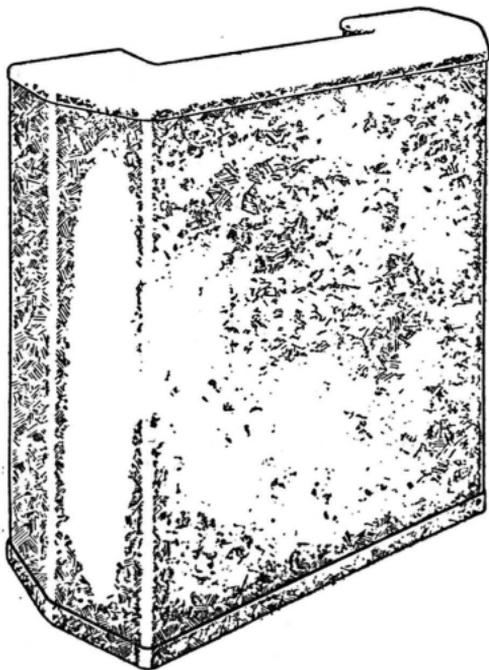

<u>Terminal Size</u>
F16 and 14C
F26 and 14D

<u>Slip Cover</u>
P-19A661
P-19A662

8.02 In replacing covers on 14 type terminals, it may be necessary to install a D-95765 spring catch if a terminal is not already so equipped.

**G61.405.1**