



User Manual

mydlink™ Camera Video Recorder

DNR-202L

Preface

D-Link reserves the right to revise this publication and to make changes in the content hereof without obligation to notify any person or organization of such revisions or changes. Information in this document may become obsolete as our services and websites develop and change.

Manual Revisions

Revision	Date	Description
1.0	August 19, 2013	• Initial release for Revision A1

Trademarks

D-Link and the D-Link logo are trademarks or registered trademarks of D-Link Corporation or its subsidiaries in the United States or other countries. All other company or product names mentioned herein are trademarks or registered trademarks of their respective companies.

Copyright © 2013 D-Link Corporation.

All rights reserved. This publication may not be reproduced, in whole or in part, without prior expressed written permission from D-Link Corporation.

Table of Contents

Preface	2	Video Playback.....	35
Manual Revisions	2	Video Playback Control.....	36
Trademarks.....	2	Configuration.....	37
Product Overview.....	5	Using the Configuration Interface.....	37
Package Contents.....	5	Live Video	38
Introduction.....	6	Playback	40
Minimum Requirements	6	Search Recordings.....	42
Features.....	7	Save Recording to AVI	44
Hardware Overview	8	Save Snapshot.....	45
Assembly and Installation	9	Print Snapshot	45
Attaching External Drives	9	Setup	46
Software Installation	10	Network Setup.....	49
Adding Cameras After Initial Setup.....	16	Add Camera	50
HDD Viewer Software Installation	20	Audio and Video.....	51
HDD Viewer Software Interface	21	Event Setup.....	52
Search Recordings.....	22	Time and Date Setup.....	53
mydlink Portal.....	23	Maintenance.....	54
NVR Status Icons	24	User Management.....	54
Settings	25	System	55
Live Video	26	Firmware Update	56
Playback.....	27	Hard Drive Configuration.....	57
Search Recordings.....	28	Status	58
Status	29	Camera Status.....	58
NVR Info.....	30	System Info.....	59
mydlink View - NVR App.....	31	Logs	60
First Use of mydlink View - NVR	32	Support	61
Live View	32	LED and Alarm Overview	62

Technical Specifications	63
Contacting Technical Support	65
Warranty.....	66
Registration.....	72

Product Overview

Package Contents



DNR-202L mydlink Camera Video Recorder



Power adapter



Ethernet cable



Quick Install Guide

If any of the above items are missing, please contact your reseller.

Note: Using a power supply with a different voltage than the one included with your product will cause damage and void the warranty for this product.

Introduction

The DNR-202L is a Network Video Recorder (NVR) that can support up to four network cameras recording M-JPEG, MPEG4, or H.264, with a storage option of up to two attached USB hard disks. The NVR can record video from network cameras directly to disk storage without the need for a dedicated PC.*

Powered by mydlink technology, the DNR-202L can be easily setup for Internet access. It supports real-time monitoring and playback from anywhere via an Internet browser and mobile app. The DNR-202L can keep recording at the same time users are viewing a live feed or searching video playback. Exceptional video management and playback capability is what makes the DNR-202L an excellent video recording solution.

***Note:** A computer is required for downloading and using the Setup Wizard. You can later access the video with your mobile device(s).

Minimum Requirements

Computer with:

- Microsoft Windows® 8, 7, Vista®, XP SP 2, or Mac OS® X (10.5)
- Pentium 4 – 2.4 GHz or above; at least 512MB RAM
- Internet Explorer 8, Firefox, Chrome, or Safari 5

For Internet Access:

- Cable or DSL Modem
- Broadband Internet Connection

For Mobile Apps:

- mydlink View - NVR app requires iOS 5.1.1 and above or Android 4.01 and above

For Storage:

- External USB Hard Drive(s)

Features

Comprehensive IP Surveillance Solution

1. **Total Solution:** The D-Link DNR- 202L is a Network Video Recorder (NVR) capable of 24/7 recording without requiring a dedicated PC. The DNR-202L can manage multiple network cameras, providing direct access to view live video or play recorded video using a web browser, from anywhere, anytime. The device itself is light-weight and compact.
2. **Easy to Use:** A user-friendly GUI simplifies network and camera setup, allowing users to easily access multiple cameras for configuration, viewing, recording, and playback purposes.
3. **Centralized Interface for Configuration:** The DNR-202L provides a flexible and economic solution for managing and configuring multiple network cameras on a centralized web interface.
4. **Megapixel Resolution Support:** The major advantage of digital over analog video is its higher resolution. The DNR-202L supports high resolution megapixel recording for sharper images with high clarity.
5. **Empowered by mydlink technology:** The DNR-202L can be easily setup for Internet access to your personal account at mydlink.com. It supports real-time monitoring and playback from anywhere using any Internet-connected computer, iPhone, iPad, or Android device.

Powerful Event Management

1. **Camera Status:** The camera status page displays connection, recording, frame rate, and bit rate information for each camera. Meanwhile, the estimated available recording time is also available for quick reference.
2. **Flexible Event Management:** Event setup is another key feature of the DNR-202L. The NVR can monitor all of the cameras for motion detection. The NVR centrally controls the e-mail notifications and recording from all connected cameras.


Instant Live View

1. **Full Screen:** Enlarge the display to full screen for live view and recorded video.
2. **Camera Name and Status on OSD:** Camera name and recording status are displayed via OSD to aid in identification.
3. **PTZ/Audio Support:** Users can control pan/tilt/zoom (PTZ) functions from within the interface using the provided interface buttons.
4. **Preset Point:** Presets from within the interface can be set to instantly restore a previously saved viewpoint.
5. **Digital Zoom:** Videos can be enlarged by using digital zoom.

Intelligent Playback

1. **AVI Output:** During playback, if you see video that needs to be exported, you can easily export video in the convenient AVI format.
2. **Playback Speed Control:** Playback speed control allows for up to 32x speed fast forward or fast backward play. The step playback option displays one frame at a time.
3. **Image Enhancement:** Users can enhance the recorded video with controls such as brightness, contrast, and sharpness.
4. **Print Picture:** If a printer is connected to the user's PC, the NVR can also print the selected still image.

Hardware Overview

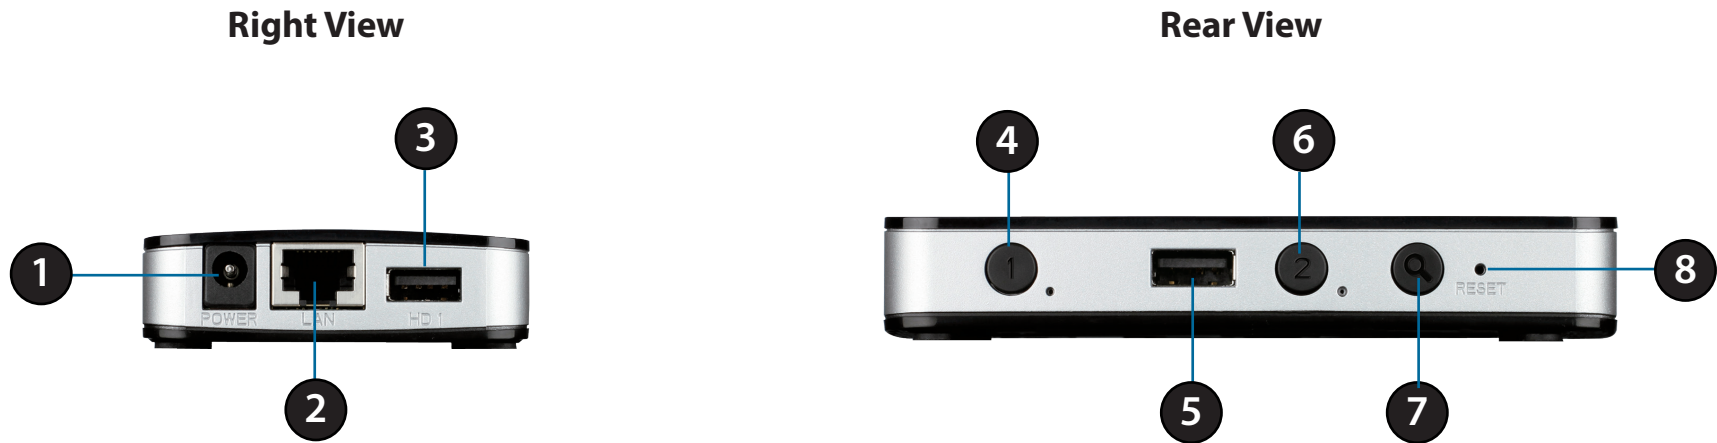

1	Power Receptor	Connect the provided power adaptor
2	Ethernet Port	Connect one end of the provided Ethernet cable
3	USB Port for HDD 1	Attach an external USB Hard Disk (HDD) to this port to save recorded streams
4	HDD 1 Release Button	Press this button to release the HDD attached to the USB Port for HDD 1
5	USB Port for HDD 2	Attach an external USB HDD to this port to save recorded streams
6	HDD 2 Release Button	Press this button to release the HDD attached to the USB Port for HDD 2
7	Auto Scan Key	Press this button to automatically scan for cameras on the network
8	Reset Button	Use a paper clip to press and hold the recessed button for 10 seconds to reset the device to factory default settings

Assembly and Installation

Attaching External Drives

Step 1

Place the DNR-202L on a non-slip flat surface.

Step 2

Connect the provided power adaptor to the DNR-202L. Plug the power adaptor into a wall outlet or power strip.

Step 3



Attach one end of the provided Ethernet cable to the Ethernet port on the NVR. Attach the other end to your network. The DNR-202L will test for an Internet connection. When an Internet connection is established, the Power & Network LED on the top of the NVR will start blinking.

Note: If you do not connect an Ethernet cable, the DNR-202L will beep.

Step 4

Attach an external USB HDD to the USB HDD1 port. The NVR will mount the HDD and beep once.

Note: When you want to remove an HDD, press and hold the HDD release button for at least three seconds. The NVR will release the HDD and emit a long beep. You can now unplug the USB cable.

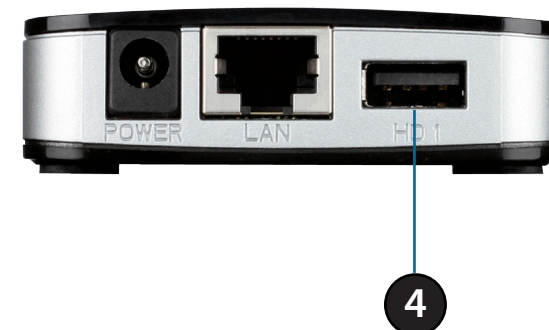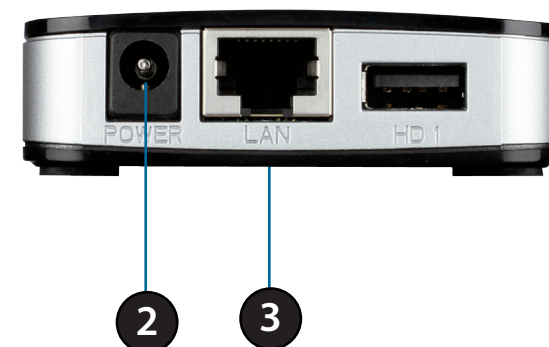

Software Installation

Step 1

Open your web browser and go to **<http://www.mydlink.com/support>**. Click on the **Storage** tab, and then select the **DNR-202L** from the row of products. From the *Wizard* column, select a link to the preferred **Setup Wizard**.

Note: Make sure your cameras have been installed on the network before starting the Wizard.

Windows Users:

Click the **Start** button to launch the *Setup Wizard*.

Mac OS® X Users:

Double-click the **DNR-202L Setup Wizard** file to start the *Setup Wizard*. When the wizard appears, click the **Start** button to begin.



Step 2

Accept the *End User Licence Agreement* and follow the on-screen prompts. The *Setup Wizard* allows you to click on the **Back** arrow to review a previous step, or click on the **Next** arrow to proceed.



Step 3


Select your NVR from the list, then click **Next**. If you have multiple NVRs, you can identify them by the *MAC Address* printed on the label on the bottom of the device.



Step 4

By default the **Admin ID** is *admin* and the password is blank.

Create and confirm an *NVR Password* for your device. Click **Next** to continue.

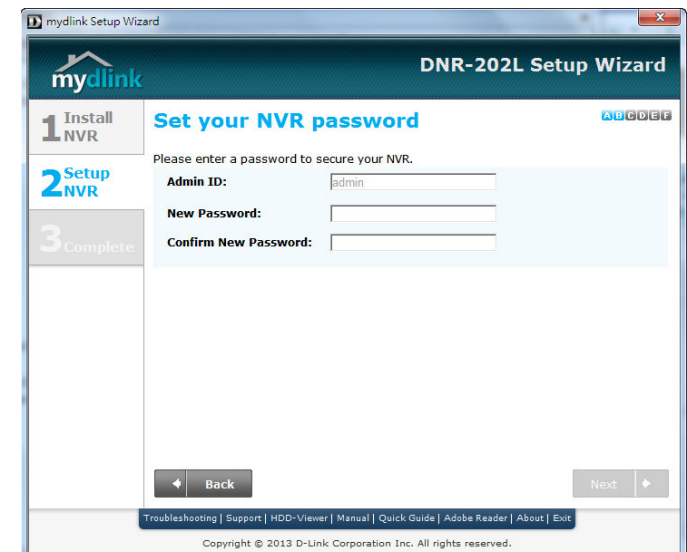


Step 5

The *Setup Wizard* will scan for attached storage devices and ask if you wish to format the devices found.

Note: Select **Skip** if you don't want to change the HDD configuration.

Click **Next** to continue.

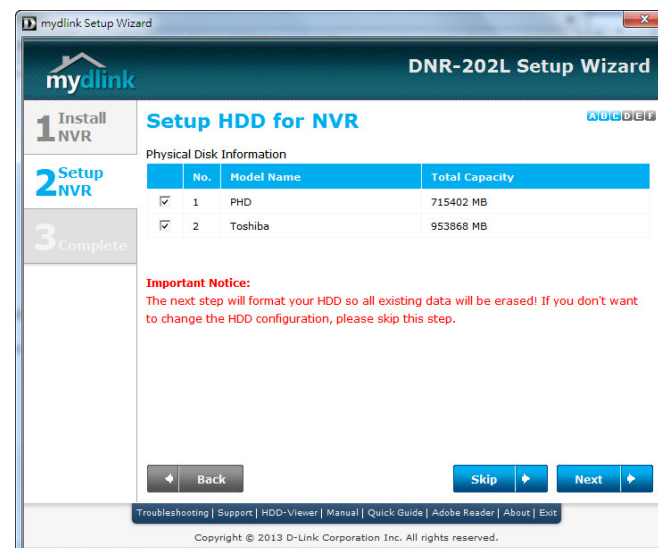


Step 6

Setup your Internet connection. The default selection, **DHCP**, obtains IP address information automatically from your ISP (Internet Service Provider).

Select **Static IP** to manually enter your IP address information provided by your ISP, or if you prefer to set a static address within your home network. After you enter the required configuration information, click **Next** to continue.

Note: You can select **DHCP** if you are unsure of which settings to choose.

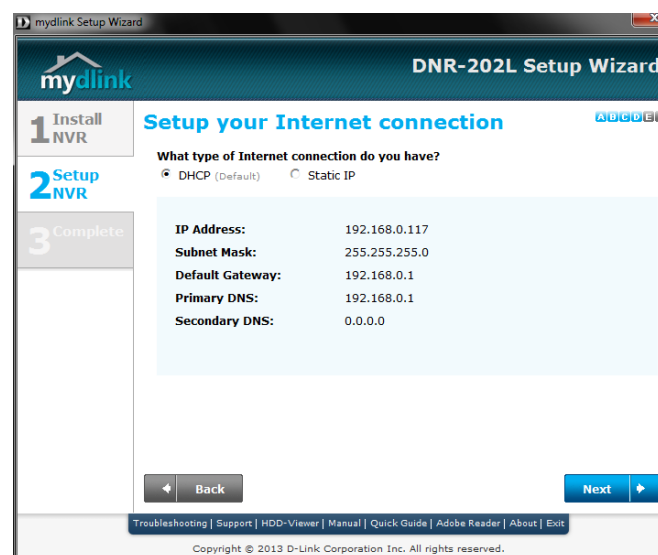

Step 7

To use the mydlink Cloud Services, you must have an account. The *Setup Wizard* will guide you through the process of connecting your NVR to a mydlink account. If you already have a mydlink account, enter your **E-mail** address and **Password** and click **Next** to continue. Skip to the instructions on the next page.


Otherwise select **No, I need to sign up for a new account** and enter the required information.

Note: To learn more about free mydlink Cloud services, visit www.mydlink.com.

Click **Next** to continue.

Step 8


The wizard will automatically search for and then list all available cameras in your network. If a camera is registered with mydlink, the camera password is verified.

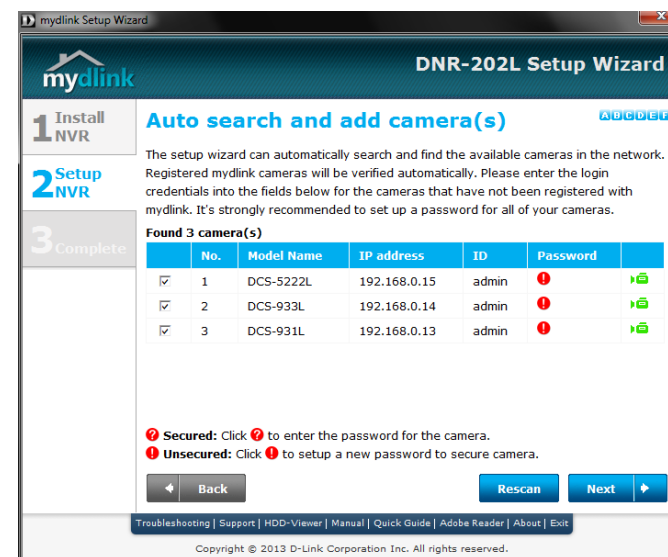

If the camera was not registered with mydlink, and you see a red question mark (?) it means the camera has been secured. Click on the red question mark (?) to enter your camera password. If you see a red exclamation point (!), it means the camera is unsecured. Create a password for the camera.


Click **Next** to continue.

Note: It is strongly advised that you set up passwords for all of your cameras.

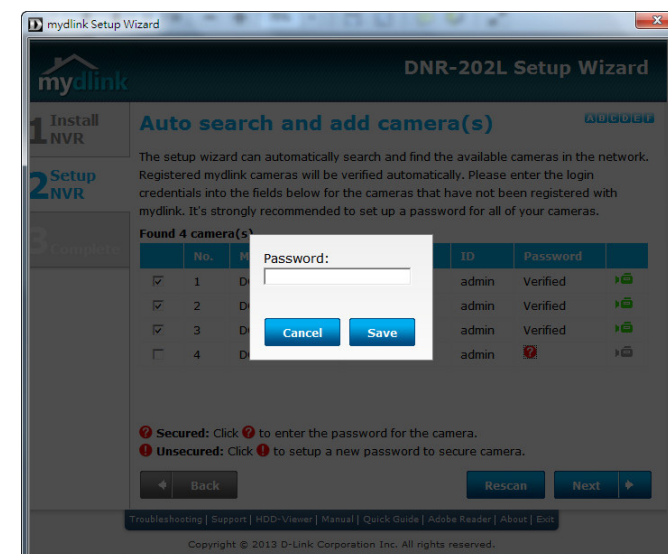


You can preview each camera by clicking on the green camera icon in the last column of the camera list. When finished with the preview, click on **Close**.

Click **Next** to continue.

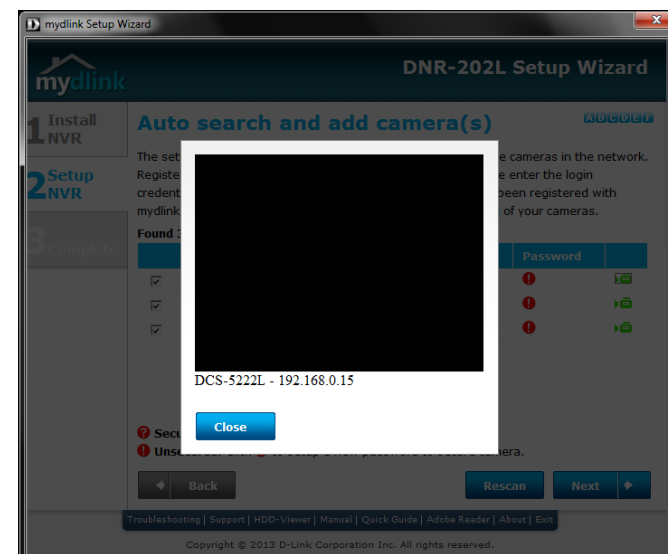

Step 9

Your NVR setup is complete. You can click on **Go to NVR** for further configuration. To review your options, refer to ["Using the Configuration Interface" on page 37](#) or click **Finish**.

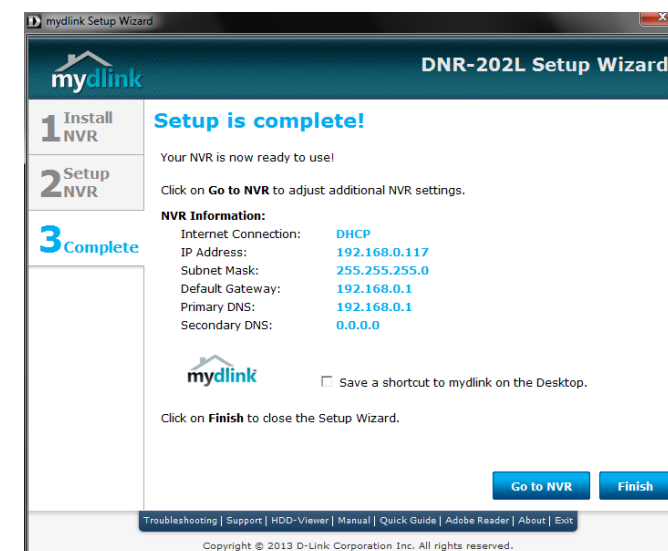

Adding Cameras After Initial Setup

Step 1


Open your web browser and go to **<http://www.mydlink.com/support>**. Click on the **Storage** tab, and then select the **DNR-202L** from the row of products. Then from the *Wizard* column, select the link to the preferred **Setup Wizard**.

At the welcome page, click on the **Skip** button.



Step 2

Follow the on-screen prompts to ensure the NVR is plugged in and powered on.

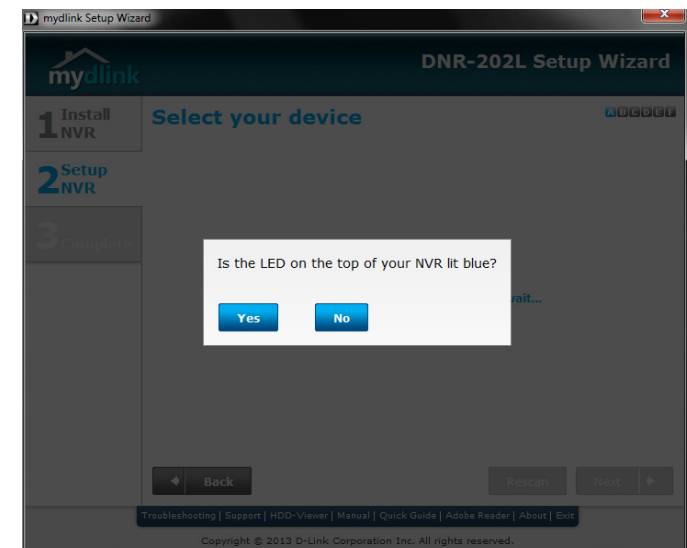


Step 3

Select your NVR from the list, then click **Next**. If you have multiple NVRs, you can identify them by the MAC Address printed on the label on the bottom of your device.




Step 4

Confirm the password for your device. Check the box if you want to change the password. Click **Camera Search** to continue.

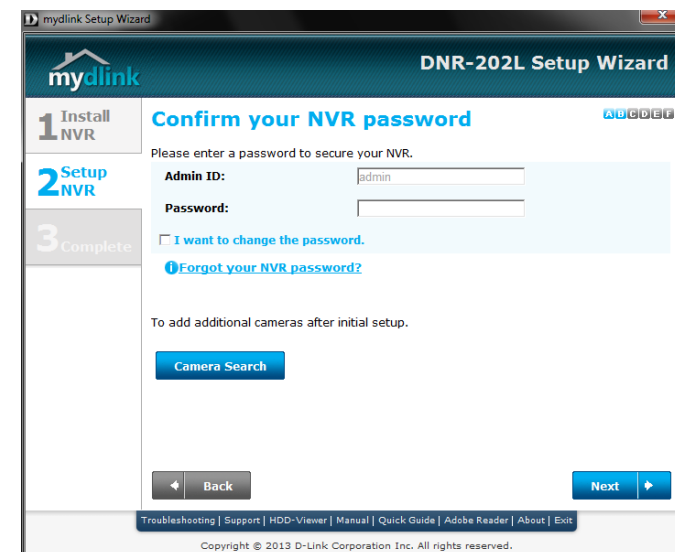

Step 5


The wizard will automatically search for and then list all available cameras in your network, including any cameras you have added. If a camera is registered with mydlink, the camera password is verified.

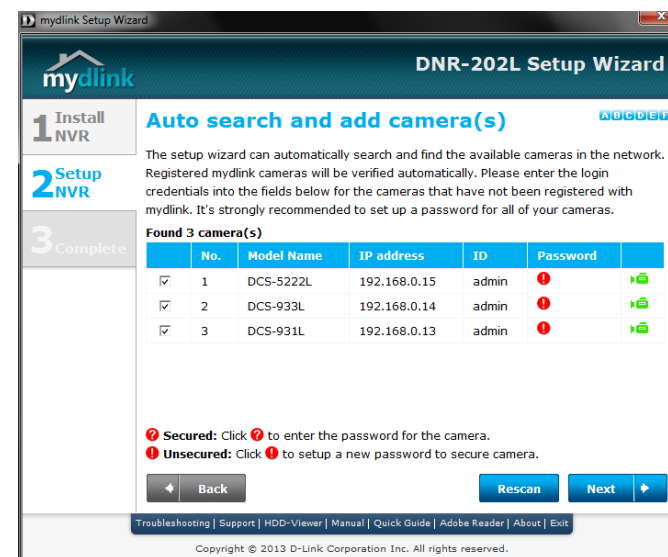

If the camera was not registered with mydlink, and you see a red question mark (?), it means the camera has been secured. Click on the red question mark (?) to enter your camera password. If you see a red exclamation point (!), it means the camera is unsecured. Create a password for the camera.


Click **Next** to continue.

Note: It is strongly advised that you set up passwords for all of your new cameras.

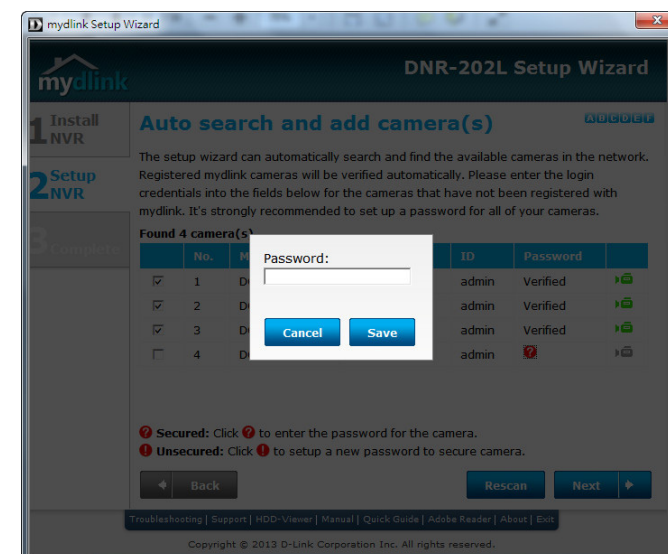

Step 6

Your NVR setup is complete. You can click on **Go to NVR** for further configuration. To review your options, refer to ["Using the Configuration Interface" on page 37](#) or click **Finish**.

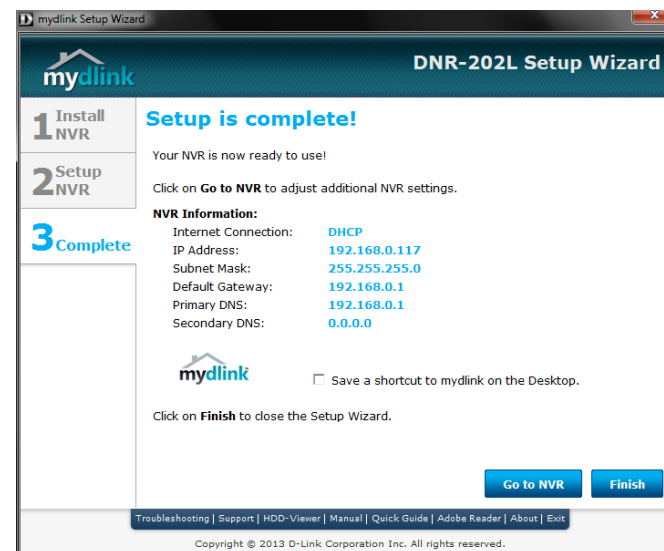

HDD Viewer Software Installation

Your DNR-202L comes with a convenient application to assist you in managing your recorded video. If you have the HDD Viewer installed, you will be able to remove a USB HDD from the DNR-202L and plug it into your computer to review recorded video. This section will guide you through the easy-to-use *HDD Viewer Setup Wizard*.

Step 1

Attach the hard disk containing the DNR-202L video recordings you wish to view to your computer.


Step 2

Open your web browser and go to **<http://www.mydlink.com/support>**. Click on the **Storage** tab, and then select the **DNR-202L** from the row of products. Click on the link to download the **HDD Viewer Setup Wizard**.

Step 3





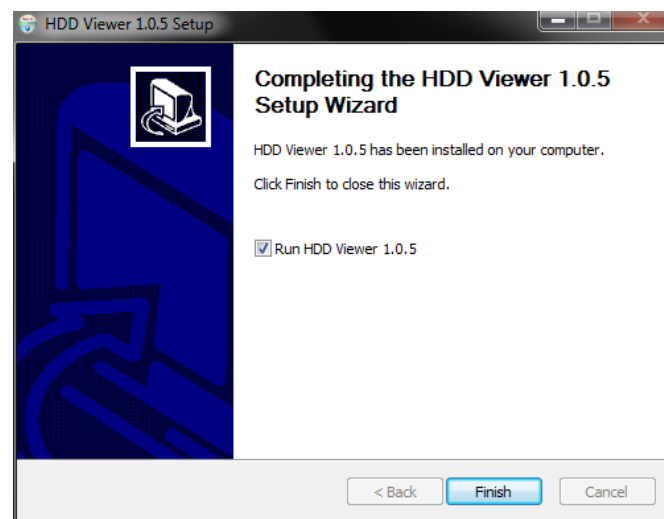









Follow the on-screen prompts to install the software. You will see a message that says, *HDD Viewer has been installed on your computer*.


Make sure the box is checked by *Run HDD Viewer*. Click **Finish** to close the *HDD Viewer Setup Wizard*.



HDD Viewer Software Interface


The HDD Viewer application enables you to view, search and, backup your recorded videos from a simple interface, using your computer. The interface controls are described below.

	Open Recording Search Menu	Use this button for the <i>Open Recording Search</i> . Refer to "Search Recordings" on page 22 .
	Display Single feed	Use this button to switch to a single camera feed in the video display area.
	Display 2 x 2 feed	Use this button to switch to a 2 x 2 camera feed in the video display area.
	Actual Size	Use this button to display the video recording in it's native resolution.
	Full Screen	Use this button to switch to a full-screen view of the video recording.
	On Screen Display Settings	Use this button to configure the various settings for the <i>On Screen Display</i> .
	Save as AVI	Use this button to export the video as an AVI file.
	Print Image	Use option this to print a still image.
	Save as Image	Use this option to save a still image.
	Image Enhancement	Use this option to apply image enhancements.
	Backup Data	Use this option to make a backup of your video recording.
	Volume	Use the slider to adjust the playback volume.
	Close Application	Use this button to close the application.
	Minimize Application	Use this button to minimize the application.

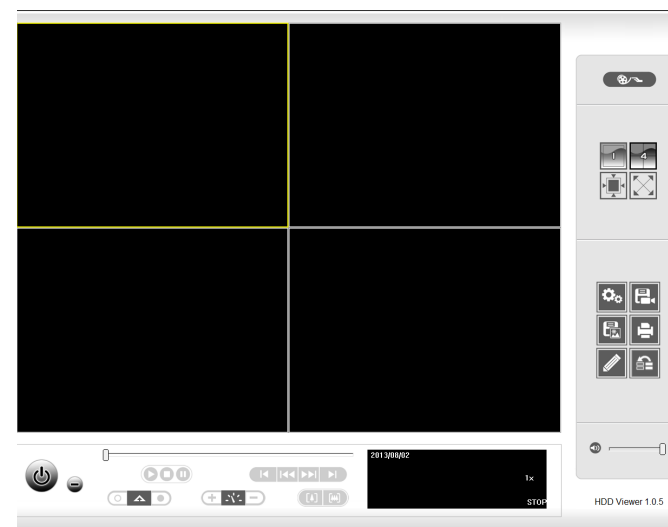

Search Recordings


From HDD Viewer application, click the **Open Recording Search** button to access the *Date/Time Searching* window, to locate the video recordings that you would like to review.

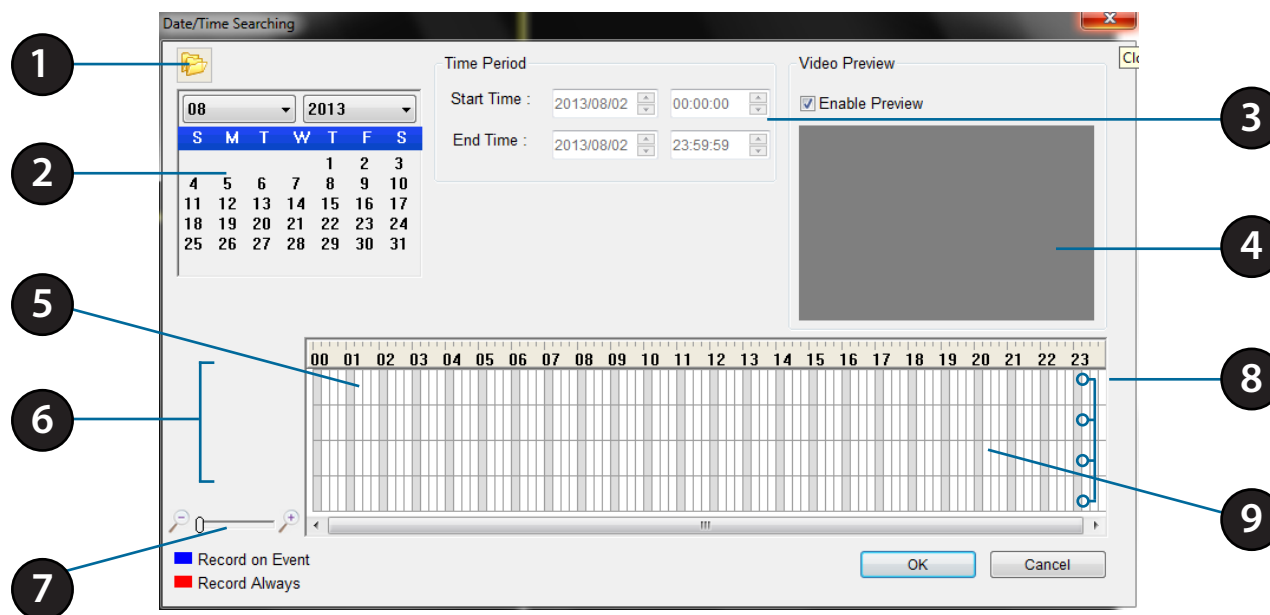


1	Select Folder	Use this button to navigate to your video recordings folder. The default folder name is <i>avdata</i> on your USB hard disk.
2	Date Selection Area	Select the year, month and day of the recording you wish to view. Dates with recordings available for playback are highlighted blue or red.
3	Time Range Selection	Select a Start Time and End Time for the recording you wish to view.
4	Video Preview	When Enable Preview is checked, this area will display a preview.
5	Timeline	This timeline will adjust according to the level of zoom selected.
6	Available Streams	This area will display a list of the recording devices.
7	Zoom Slider	Use the zoom slider control to zoom in and out of the timeline.
8	Available Recordings	Recordings are graphed below the timeline. Blue bars indicate an event was recorded. Red bars indicate the camera is set to always record.
9	Selected Period	Click within the timeline to select a recording period.

mydlink Portal

After registering your NVR with a mydlink account in the *NVR Setup Wizard*, you will be able to remotely access your NVR from the www.mydlink.com website. When you log in to your mydlink account, you will see the *My Devices* page. Click on the **Connect** button and enter your DNR-202L user name and password to complete the login process. The default user name is *admin*.

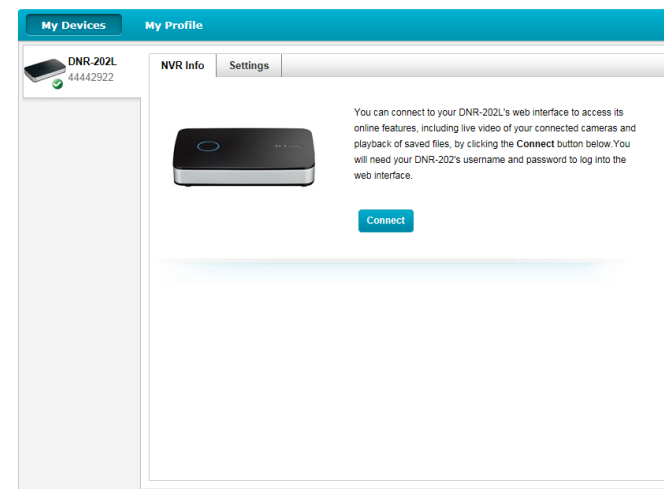


When you connect to the NVR, you will see the *Live Video* page. (Refer to "[Live Video](#)" on page 26.)

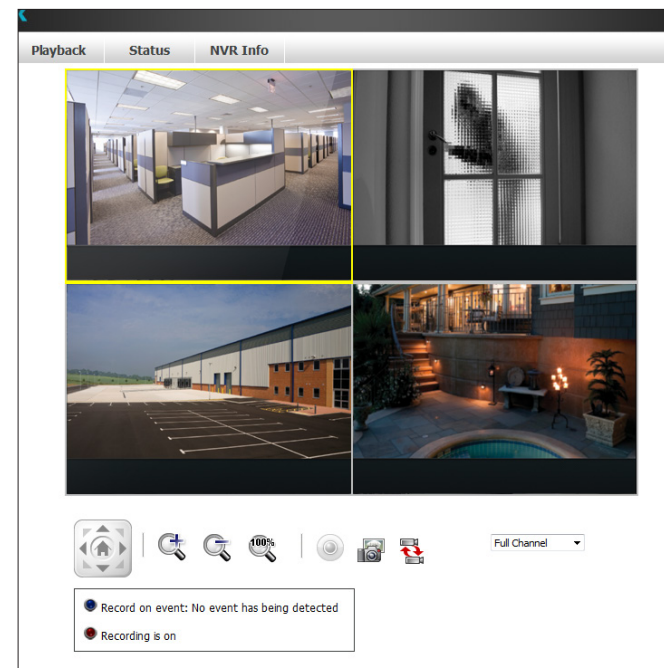

NVR Status Icons

From the *My Devices* page, you can view the online status of each of your NVRs. Your online status will be one of the following:

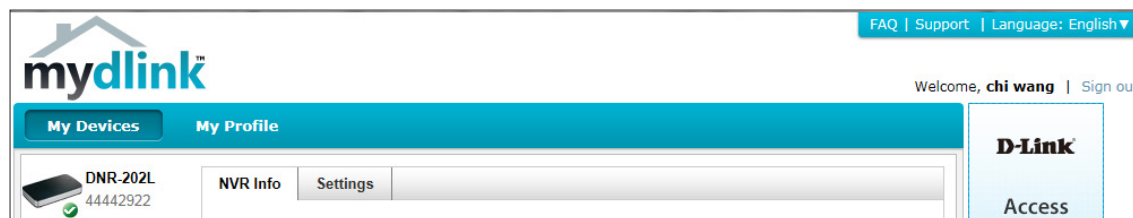

A green check mark indicates that your NVR is online and ready to use.



A yellow exclamation point indicates that your NVR is online, but the NVR password has changed. You will need to enter your new NVR password to access your NVR again.



A red cross indicates that your NVR is offline and currently cannot be accessed remotely.


If your NVR is offline, try the following:

- Check to make sure that the Internet connection to your NVR is working properly.
- Try restarting your router.
- Check your NVR's cable connections and make sure they are secure.
- Check to make sure that the LED on your NVR is lit solid blue.

If you still cannot access your NVR, reset your NVR and run the *Setup Wizard* again from <http://www.mydlink.com/support>. Refer to "[Software Installation](#)" on page 10.

Settings

Click on the **Settings** tab to see *General Information* about your NVR.

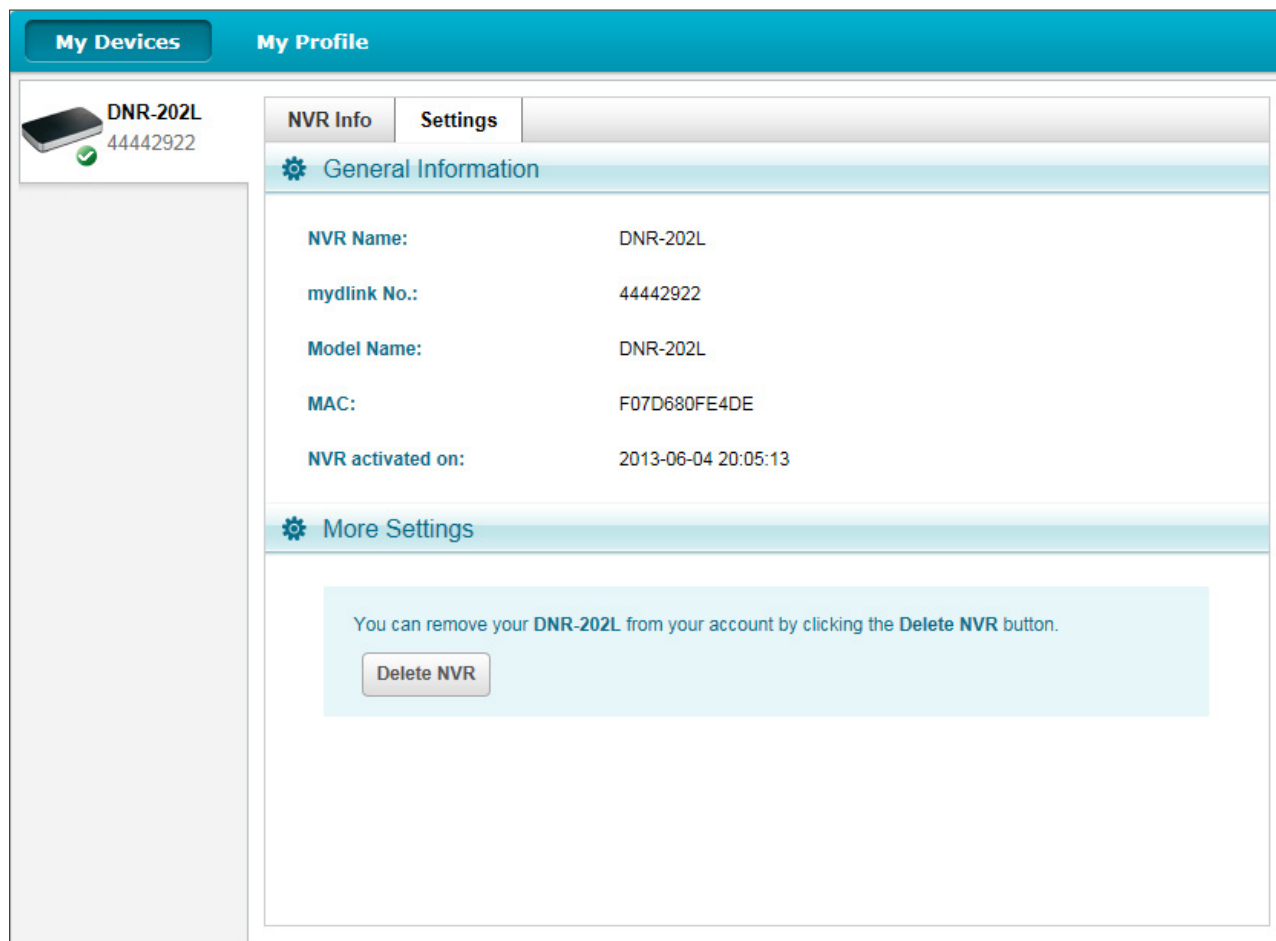








Note: If you would like to remove your NVR from your mydlink account, click on the **Delete NVR** button and enter your mydlink password. Your NVR will be reset to the factory default settings

Live Video

After you connect to your NVR, the *Live Video* tab will be selected by default and will display the *Live Video* feed. You can select a specific camera from the drop-down list, or you can choose to view all the available channels.





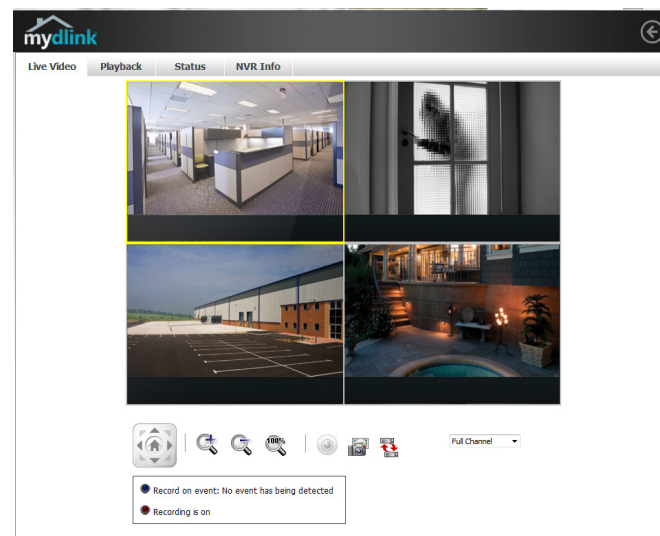





The *Live Video* controls are described in the table below.


	Control Pad	The <i>Control Pad</i> is used to pan, tilt, and zoom (PTZ) a PTZ camera.
	Zoom Control	Use the plus and minus buttons to zoom in or out.
	Actual Size	Use this control to view video in its native resolution.
	Record	Use this control to start/stop recording.
	Save to Image	Use this option to save a snapshot image.
	Glance	Use this button to toggle the glance mode. In glance mode, the NVR will cycle briefly through each connected camera.



Playback


Click the **Playback** tab to review pre-recorded videos. The *Playback* controls are described in the table below.

	Playback Seeker	Use the playback seeker to quickly jump to a specific point in the recording.
	Volume Control	Adjust the slider to increase or decrease the audio volume.
	Open Recording	Click on this control to open the <i>View Recorded Files</i> window. See "Search Recordings" on page 28 .
	Pause Playback	Use this control to pause the current playback.
	Stop Playback	Use this control to stop the current playback.
	Rewind/Forward	Use these controls to step back one frame or advance forward by one frame.
	Speed Down/Up	Use these controls to slow down or speed up the playback.
	Zoom Control	Use the + and - buttons to zoom in or out.
	Actual Size	Use this control to view video in it's native resolution.
	Save to Image	Use this option to save a snapshot image.

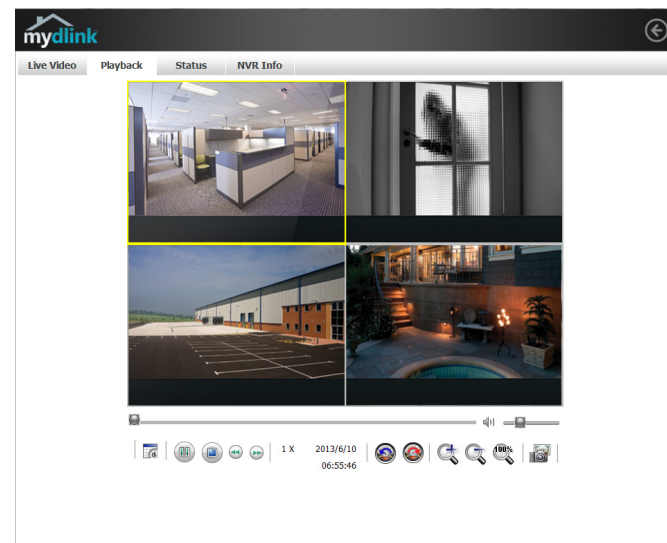

Search Recordings

From the *Playback* page, click on **Open Recording** to access the *View Recorded Files* window, and select the video recordings that you would like to review.

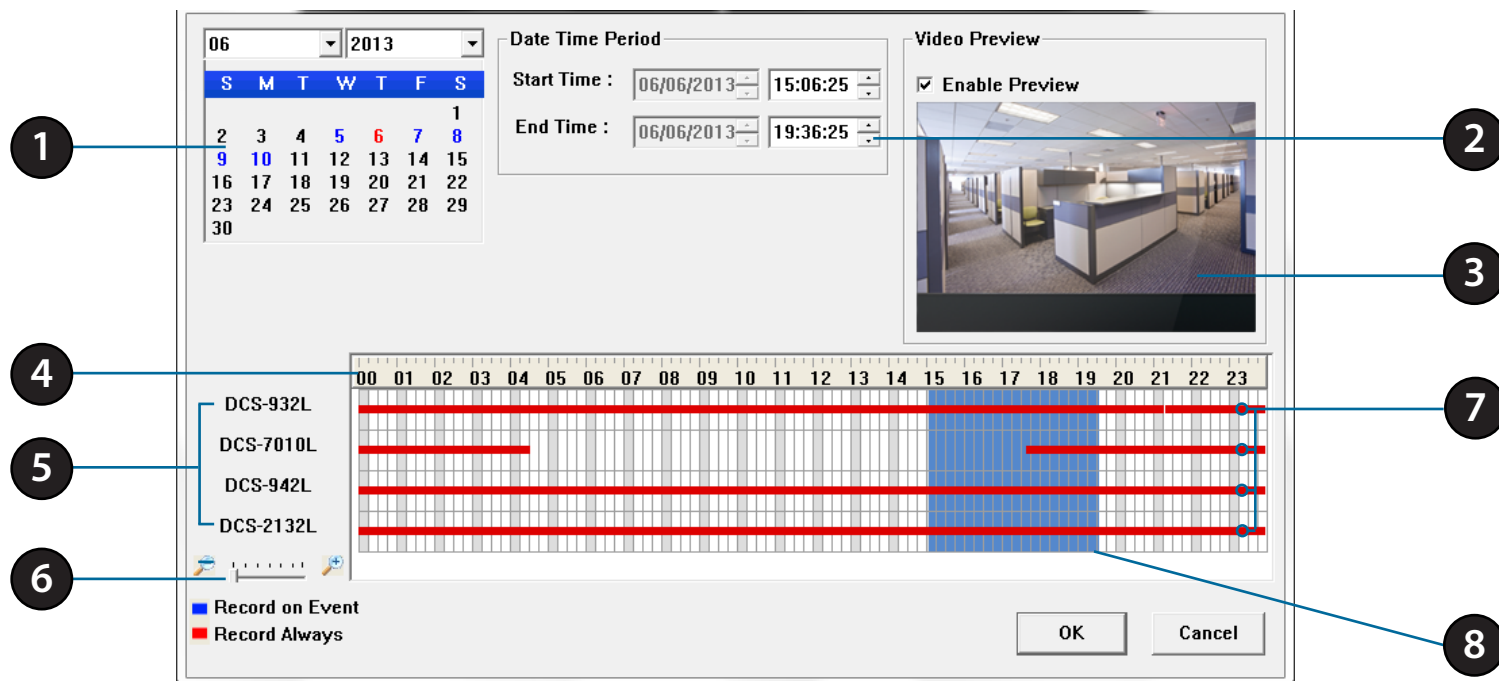

1	Date Selection Area	Select the year, month and day of the recording you wish to view. Dates with recordings available for playback are highlighted blue or red.
2	Time Range Selection	Select a Start Time and End Time for the recording you wish to view.
3	Video Preview	When Enable Preview is checked, this area will display a preview.
4	Timeline	This timeline will adjust according to the level of zoom selected.
5	Available Streams	This area lists the recording devices available.
6	Zoom Slider	Use the zoom slider control to zoom in and out of the timeline.
7	Available Recordings	Recordings are graphed below the timeline. Blue bars indicate an event was recorded. Red bars indicate the camera is set to always record.
8	Selected Period	Click within the timeline to select a recording period.

Status

Click the **Status** tab to view both *Disk Status* and *Camera Status* for devices connected to the NVR.


Name: This shows the name given to the USB storage device attached to the USB1 or USB2 port.

Total Hard Drive Capacity: This shows the total amount of storage space available on the USB storage device attached to the USB1 or USB2 Port.


Used Space: This shows the currently used storage space of the USB storage device attached to the USB1 or USB2 Port.

Unused Space: This shows the amount of space available for recording on the USB storage device attached to the USB1 or USB2 Port.

Status: This shows if the USB storage device attached to the USB1 or USB2 port is currently being recorded to.

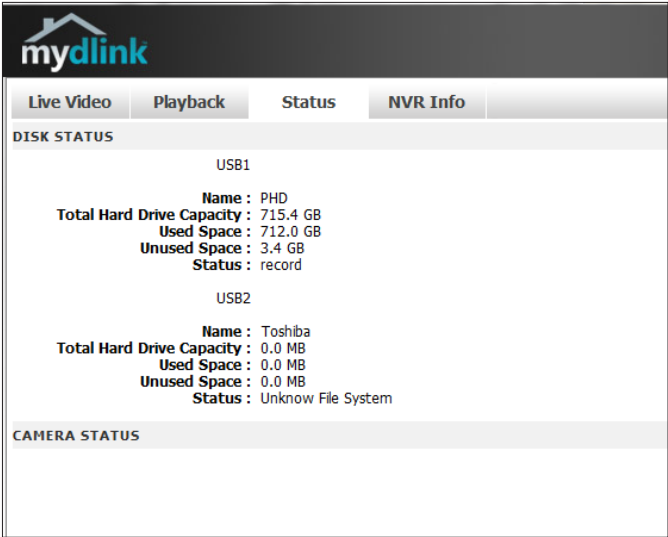

Click the **Camera Status** heading to view the status of the cameras connected to the NVR.

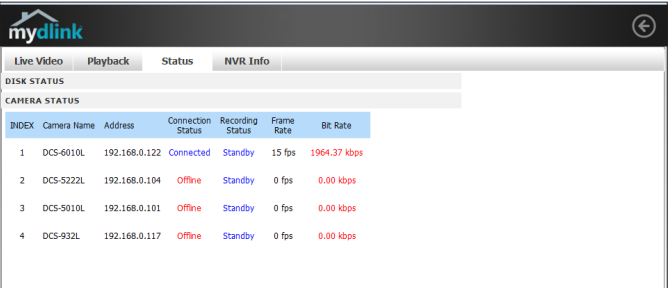

NVR Info

Click the *NVR Info* tab to view information about your NVR. This page also provides access to your NVR's configuration interface.

NVR Name: The Device Name is a unique name that can help you to identify your NVR.


mydlink No.: Displays the mydlink number of your device.

Model Name: Displays the *Model Name* of your device.

MAC Address: Displays the *MAC Address* of your device.

NVR activated on: Displays the time and date that your device was added to mydlink.

Advanced Settings: Clicking on the **Advanced Settings** button allows you to access your NVR's configuration interface. To open your NVR's configuration interface, click on the button and enter your user name and password.

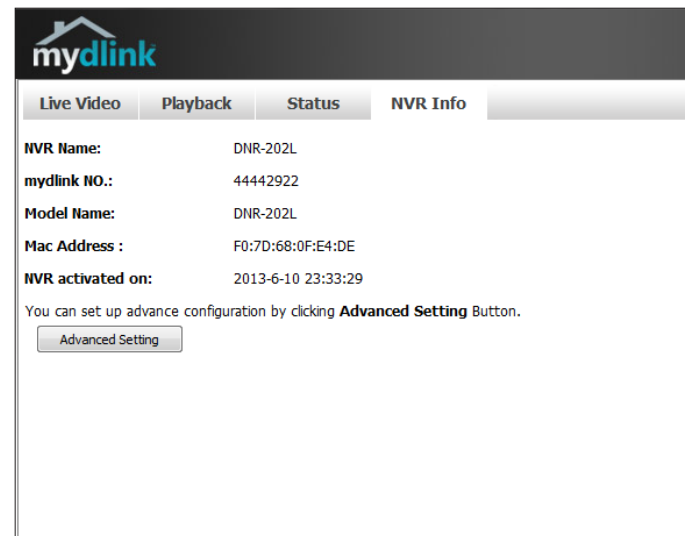


mydlink View - NVR App

Search for *mydlink View - NVR* to download and install the app on your smartphone or tablet when connected to the Internet.



System Requirements: mydlink View - NVR app requires: iOS version 5.1.1 or above or Android version 4.01 or above.


When the download has been completed, launch the *mydlink View - NVR* app and log in to your mydlink account. Select your **DNR-202L** from the device list to remotely access the live video from the connected cameras. You can also playback recorded videos and manually enable or disable recording.

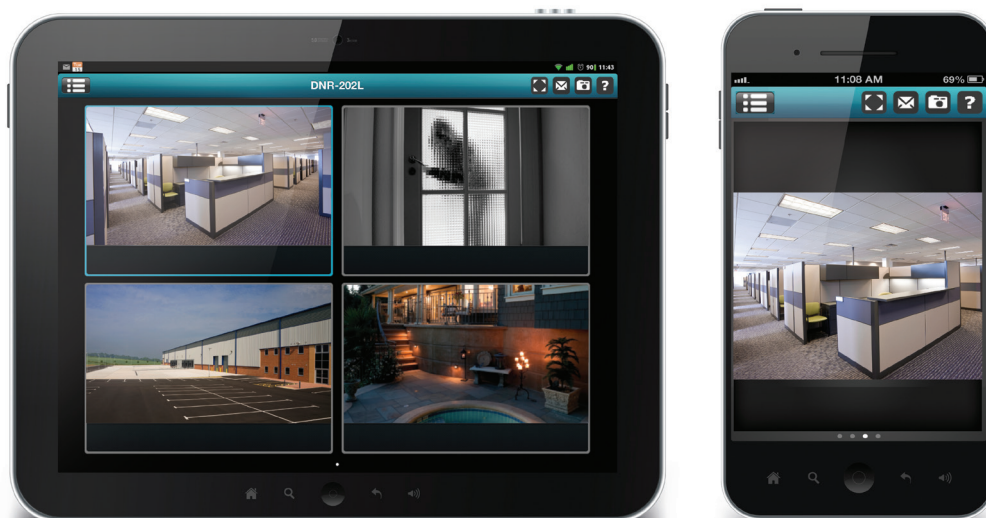

First Use of mydlink View - NVR


Before using the *mydlink View - NVR* app for the first time, make sure you add your DNR-202L to your mydlink account. Then you will be able to view live video from your DNR-202L and playback your recorded video.

When you start the *mydlink View - NVR* app, your DNR-202L should be displayed in the Device list on the left-hand side of the screen.

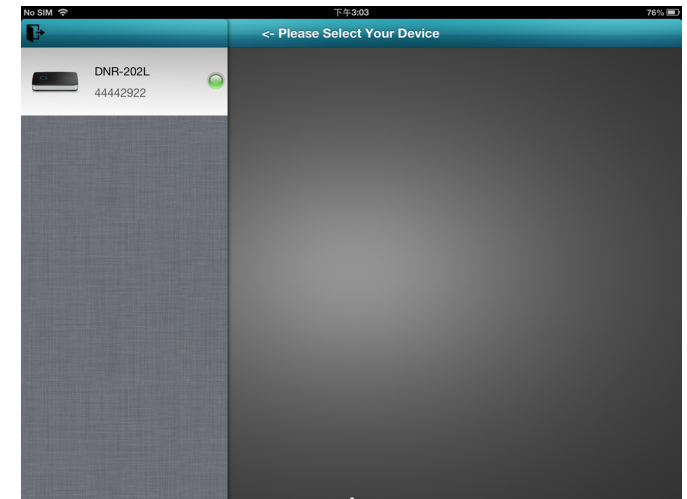

Live View

Tap on the **DNR-202L** icon and the *mydlink View - NVR* app will display the *Live Video* from connected cameras. Your viewing options are described on pages that follow.

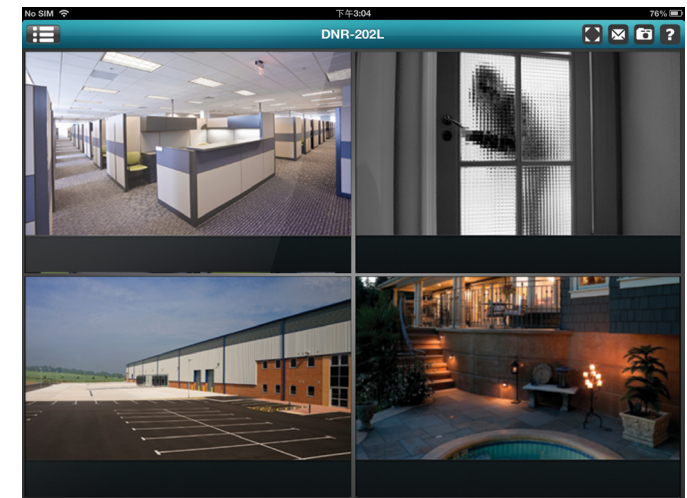


iPhone/iPod Touch Grid View

On an iPhone or an iPod touch with *mydlink View - NVR*, you will see the Device List of your mydlink account on the main screen. Tap on the **DNR-202L** to see the four-grid view.

iPad Grid View


On an iPad with *mydlink View - NVR*, you can expand or shrink the **Device List** of your mydlink account at the left-hand side of the screen.

Tap on the **DNR-202L** to display the *Live Video* view. Double-tap on one of the grids to go to single-channel mode of the *Live Video* screen. Double-tap again to return back to the four-grid view.

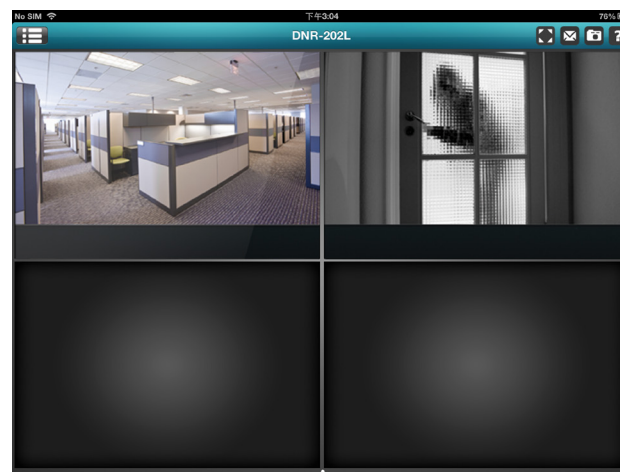

Channel Selection

- In single-channel mode, you can swipe through the video channels. By swiping to the right, you will see previous channels, and swiping to the left you will see the next video channel. You can use this method to view full-frame video from each of the cameras connected to the DNR-202L.
- Double-tap on one of the channels to select a single-channel *Live Video* stream.
- Tap on the **My Device** button to return to the Device List of your mydlink account.

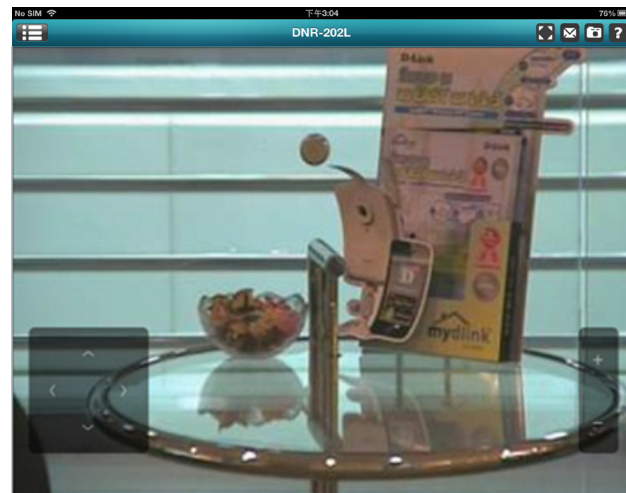

1. Recording Enable/Disable

In single-channel mode, tap on the video stream once and tap the recording button to manually enable/disable recording.

2. Pan Tilt Zoom (PTZ)

To access the PTZ controls, tap on the video stream once while streaming single-channel video, and tap on the **PTZ** button (📷). The Pan Tilt Control panel will appear. Tap on the **PTZ** button again when you want to disable the Pan Tilt Control panel.

1	Pan Tilt Control	Tap on the directional arrows to pan and tilt the camera
2	Zoom	Pinch zoom by moving finger and thumb together or apart

Note: The PTZ control function must be enabled on the camera connected to the DNR-202L in order for mydlink View - NVR to control the PTZ function. See "Live Video" on page 38 for more information.

3. Video Stretch


In Live View or Playback mode, tap on the video **Stretch** button (📺) to expand the video to full-screen. Tap the button again to disable **Stretch**.

Note: This function may alter the aspect ratio of the video.

4. Snapshot

While streaming in single-channel mode, tap the **Snapshot** button (📷) to capture an image. The image will be saved to the device's picture storage area. When viewing video in four-grid view, tap the **Snapshot** button (📷) to take snapshots of all the channels. These images will be saved to the device's camera roll.


Note: The saved snapshot(s) will be at the original resolution of the IP camera video.

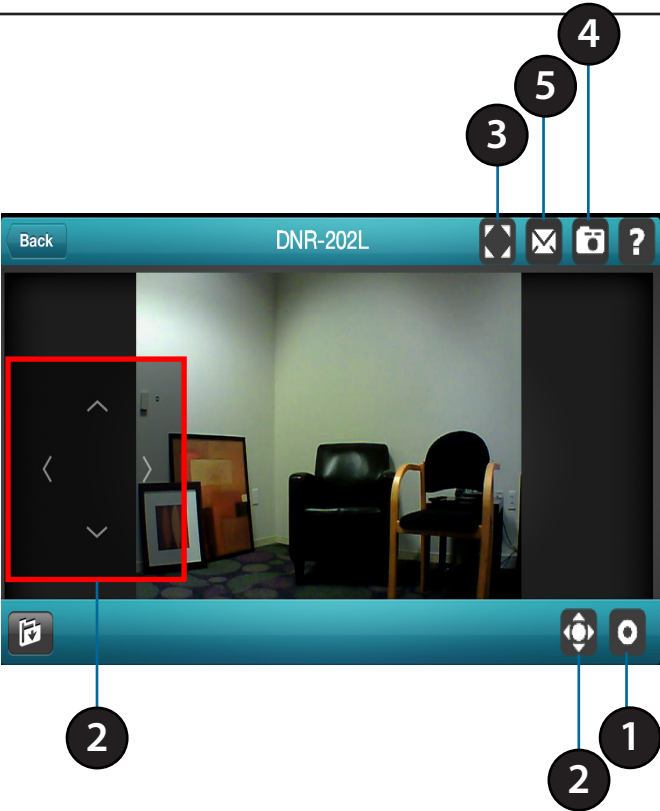

5. E-Mail

While streaming in single-channel mode, tap the e-mail button (✉) to capture a snapshot and insert it into an e-mail. Complete the **To**, **Cc/Bcc** fields as required. Tap **Send** to send the e-mail with the snapshot attached. You can tap **Cancel** to cancel the operation.

When watching video in four-grid view, tap the e-mail button (✉) to capture a snapshot of all the channels. All the snapshots will be inserted into a single e-mail. Complete the **To**, **Cc/Bcc** fields as required. Tap **Send** to send the e-mail with snapshots attached. You can tap **Cancel** to cancel the operation.

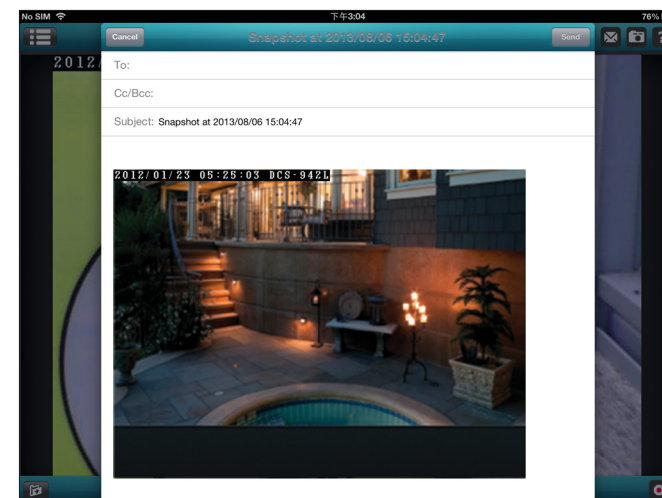


Video Playback

The video playback function is only available in single-view mode. Tap the screen once and you will see the button control bar.

Tap the **Open Recording** button (📺) on the left side of the button control bar to bring up the *Playback* selection panel.

Use the *Playback* selection panel to scroll through your video recordings archive. Scroll to select the **Date** and **Time** of the recording you wish to view, and tap **Play**.

Note: Times with video recordings available for playback will be highlighted in red.

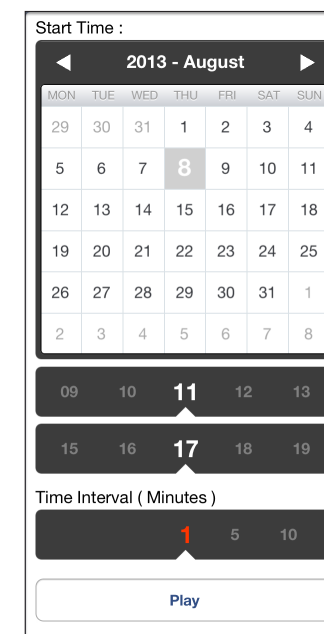


Video Playback Control

While the video recording is playing in single-channel mode, tap the playback control button (◀ || ▶) to control the direction of the video playback.

The three control buttons are:

1. **Rewind** for one second (◀)
2. **Play/pause** toggle (||)
3. **Step forward** for one second (▶)

Use speed control buttons (− 32X +) to adjust the speed of video playback, from real time through to 32x speed.

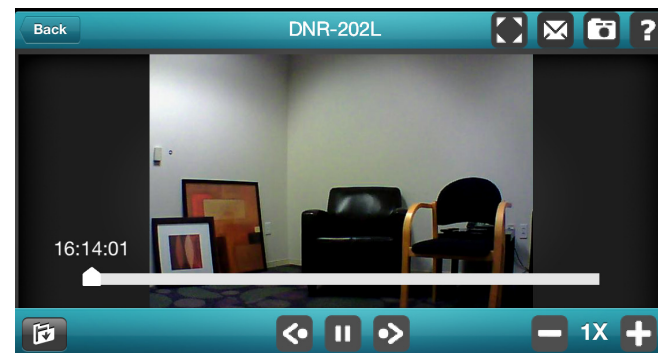

Note: The quality of display will vary according to network bandwidth availability.


Configuration

Using the Configuration Interface

After completing the *Setup Wizard*, you are ready to use your NVR. The NVR's built-in web configuration utility is designed to allow you to easily access and configure your DNR-202L.


Step 1

After initial setup, when the *Setup is Complete*, you have the option to **Go to NVR** to adjust additional NVR settings. Click on **Go to NVR**, or write down the IP Address of the NVR so you can later enter it into a web browser to open the configuration interface.

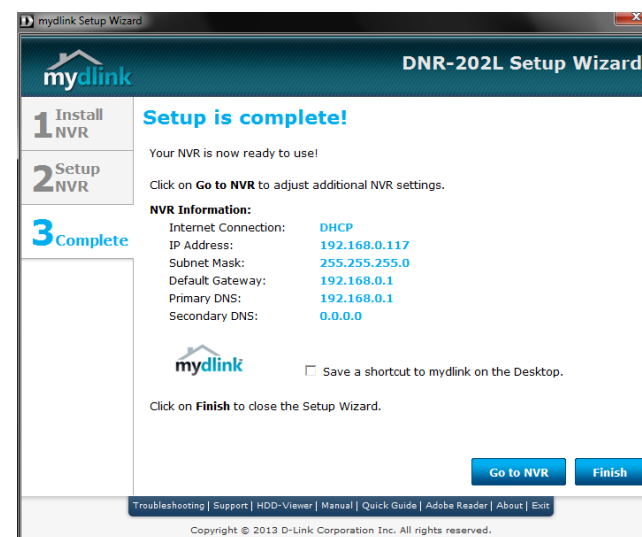

Step 2


Log in to access the configuration interface. User name is **Admin**. If you did not create a password in the *Setup Wizard*, the password is blank by default. Click **OK**.

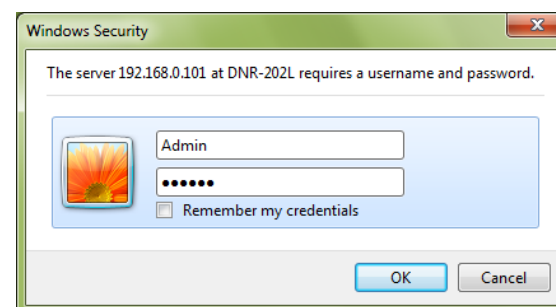

Live Video

This screen shows the NVR's *Live Video* feeds. You may select an icon, described in the list below, to operate whichever camera is selected from the list on the upper right side of the *Live Video* screen.

	Recording Toggle	Use this button to start/stop recording. When the camera is recording, this indicator will change color.
	On Screen Display	Use this button to configure the various settings for the <i>On Screen Display</i> (OSD).
	Display Single feed	Use this button to switch to a single camera feed in the <i>Live Video</i> display area.
	Display 2 x 2 feed	Use this button to switch to a 2 x 2 camera feed in the <i>Live Video</i> display area.
	Full Screen	Use this button to switch to a full-screen view of the <i>Live Video</i> feed.
	Glance Toggle	Use this button to toggle glance mode. In glance mode the NVR will cycle briefly through each connected camera.
	Control Pad	The <i>Control Pad</i> is used to pan, tilt, and zoom (PTZ) a PTZ camera.
	Zoom Control	Use the plus and minus buttons to zoom in or out.
	Auto/Manual Focus	Use this control to choose between automatic and manual focus control.
	Focus Near/Far	Use this control to choose between far or near focus.
	Preset Path	Use this option to toggle the <i>Preset Path</i> function.
	Auto-Pan	Use this option to toggle auto-panning function.


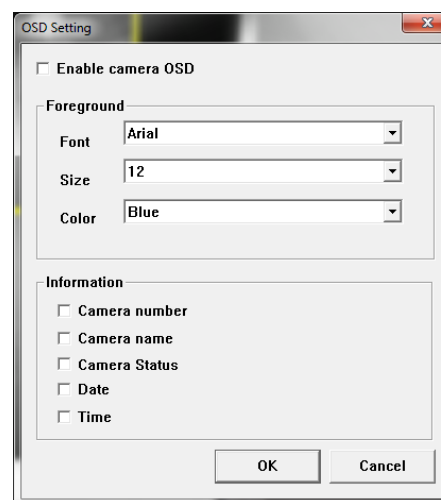


Reject: This option allows the user to safely disconnect or unmount an attached HDD.

Format: This option allows the user to format an attached HDD.





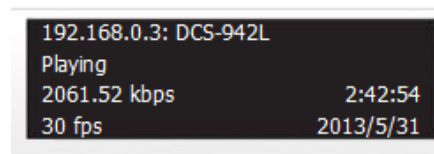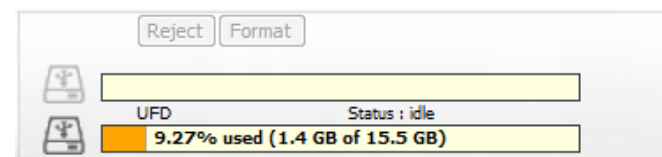






HDD Status: The status bar displays the status of attached HDD. When no HDD is attached, the icon will appear grayed out.


Information Area: This area will update in real-time to display relevant information about the selected video feed.








Playback

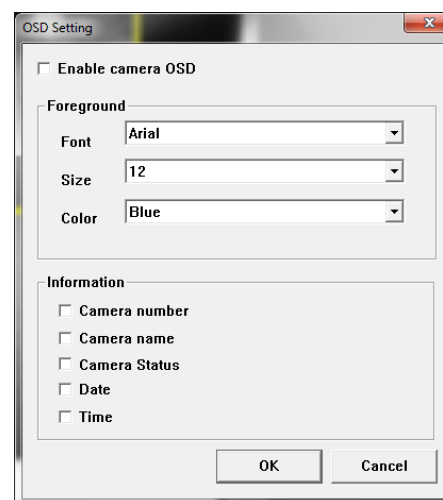Click the Playback tab to see the NVR's recorded video. You may select an icon, described in the list below, in order to play back, adjust, and export the recorded video.

	Open Recording	Click on this control to open the <i>View Recorded Files</i> window. (" Search Recordings " on page 42)
	Display Single feed	Use this button to switch to a single camera feed in the video display area.
	Display 2 x 2 feed	Use this button to switch to a 2 x 2 camera feed in the video display area.
	Actual Size	Use this button to display the video recording in it's native resolution.
	Full Screen	Use this button to switch to a full-screen view of the video recording.
	On Screen Display (OSD) Settings	Use this button to configure the various settings for the <i>On Screen Display</i> .
	Save as AVI	Use this button to export the video as an AVI file.
	Print Image	Use option this to print a still image.
	Save as Image	Use this option to save a still image.
	Image Enhancement	Use this option to apply image enhancements.
	Volume	Use the slider to adjust the playback volume.




	Play/Stop/Pause	Select a camera and click this button to Play , Stop , or Pause the video.
	Speed	Click the plus or minus button to increase or decrease the playback speed.
	Cue In/Cue Out	Click the Cue In or Cue Out button to set the start and end points for the video you are reviewing.
	Step Forward/Reverse	Click to pause the playback and move to next frame or previous frame.
	Zoom In/Zoom Out	Click to Zoom In or Zoom Out .



Search Recordings

From the *Playback* page, click the **Open Recording** button to access the *View Recorded Files* window and select the video recordings you would like to review. Step-by-step instructions are on the next page.

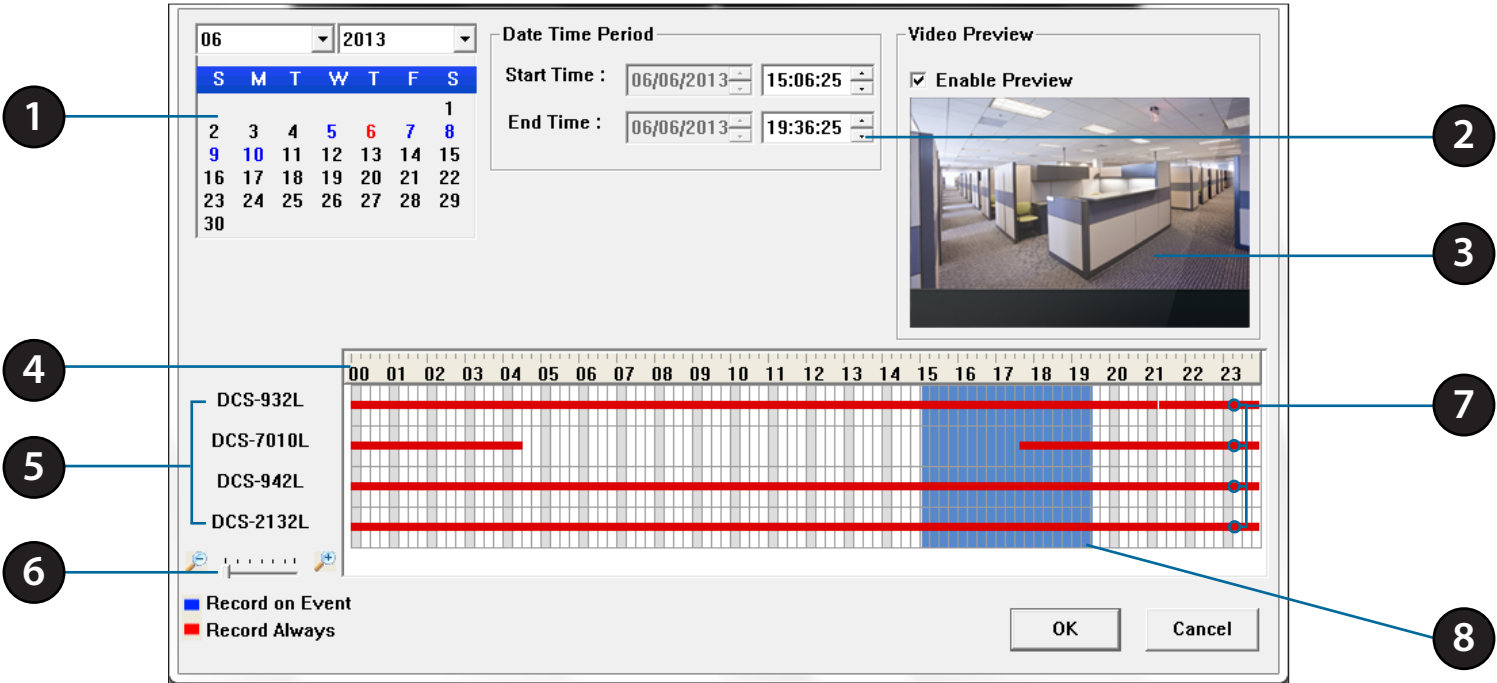

1	Date Selection Area	Select the year, month and day of the recording you wish to view. Dates with recordings available for playback are highlighted.
2	Time Period Selection	Select a Start Time and End Time for the recording you wish to view.
3	Video Preview	When Enable Preview is checked, this area will display a preview.
4	Timeline	This timeline will adjust according to the level of zoom selected.
5	Available Streams	This area lists the recording devices available.
6	Zoom Slider	Use the zoom slider control to zoom in and out of the timeline.
7	Available Recordings	Recordings are graphed below the timeline. Blue bars indicate an event was recorded. Red bars indicate the camera is set to always record.
8	Selected Period	Click within the timeline to select a recording period.

Step 1:

From the date selection area at the top left of the *View Recorded Files* window, select the date(s) for the recording(s) you would like to review. The dates highlighted on the timetable indicate available recorded video.

Step 2:

Color bars shown in the timeline area differentiate recording types. Red indicates the camera is set to *Record Always*, and blue means the camera will only *Record on Event*. This should help with your selection of video clips.

Step 3:

Select a time period using the **Start Time** and **End Time** within the *Date Time Period*. Alternatively, you can select a range from the timeline.

Step 4:


Select the **Enable Preview** option for a preview of the video you select.

Step 5:

Highlight the video clip(s) you would like to review by left-clicking and dragging the time period in the timeline area. The scale of the timeline can be modified using the magnifying glass icons at the bottom left of the screen.

Step 6:

Click **OK** to begin playback.

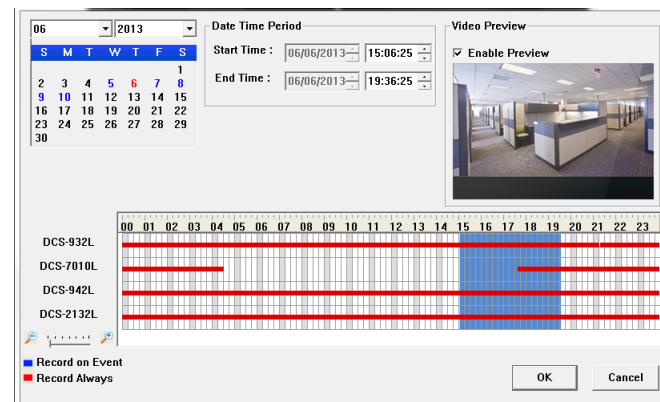

Save Recording to AVI

There may be video recorded by your camera during a specific time period that you would like to save. You can search and playback following the steps on the previous page. After determining which video recording(s) you would like to save, you can export the video clip in AVI format as described below.

Step 1:

During playback, users can select the camera from which they would like to save a video clip.



Step 2:

Set the **Cue In** and **Cue Out** points. the cue in and cue out time will be shown on the information window. Then click the **Save Video** button.



Step 3:

Click on **Browser** and choose the folder where you would like to save the file.

Step 4:


Input the file name and click the **Save** button.

Step 5:

Select the **Export Format**.

Step 6:

Click the **OK** button.

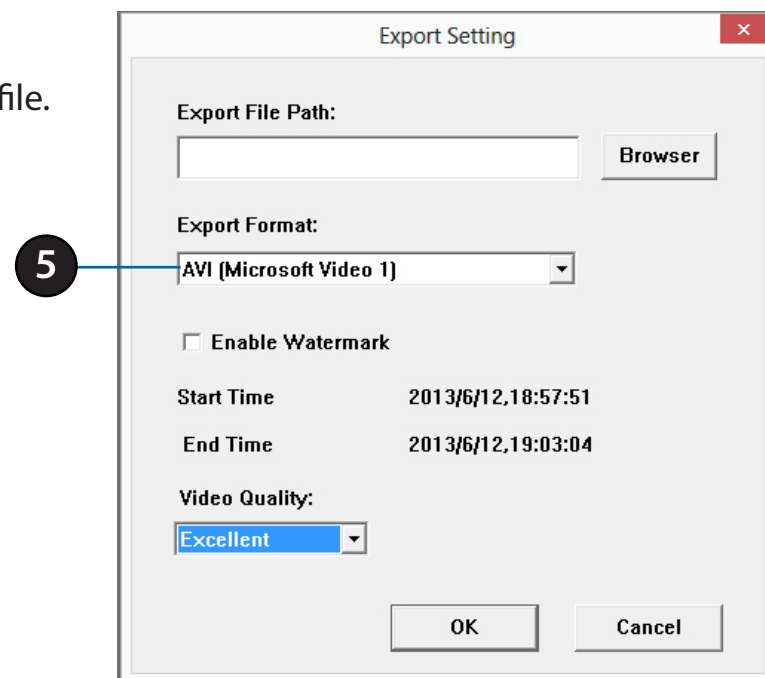

Save Snapshot

Step 1:

During playback, users can save an image from a selected camera.

Step 2:

Users can click on the **Image Enhancement** button to adjust the output of the image. The *Image Enhancement* window has sliders for adjustment of **Brightness** and **Contrast**.

Step 3:

Click the **Save Image** button when the desired image appears on the screen.

Step 4:

Click the **Save Image** button again to select the folder where you would like to save the file.

Step 5:


Choose the desired image format.

Step 6:

Enter the file name.

Step 7:

Click the **Save** button.

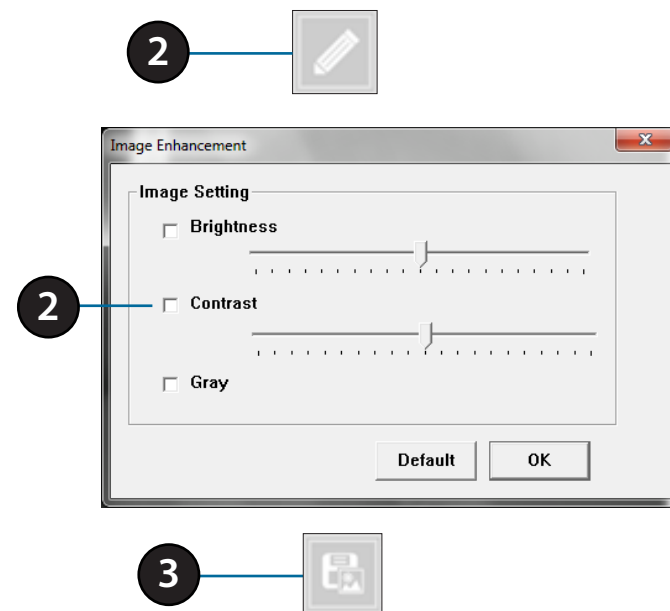

Print Snapshot

Step 1:

During playback, user can print a selected image. Playback video to select an image.

Step 2:

Click the **Print** button when the desired image appears on the screen.


Step 3:

Select the desired print settings.



Setup

Click the **Setup** tab if you want to adjust basic settings using the *Setup Wizard*. Click **Run Wizard** to launch the *Setup Wizard*.

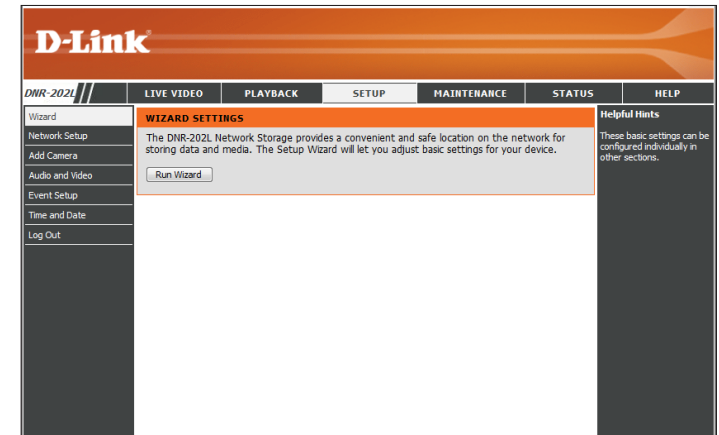


Click **Next** to begin the *Setup Wizard*.




STEP 1:

Enter a **Password** for your device. Click **Next** to continue.

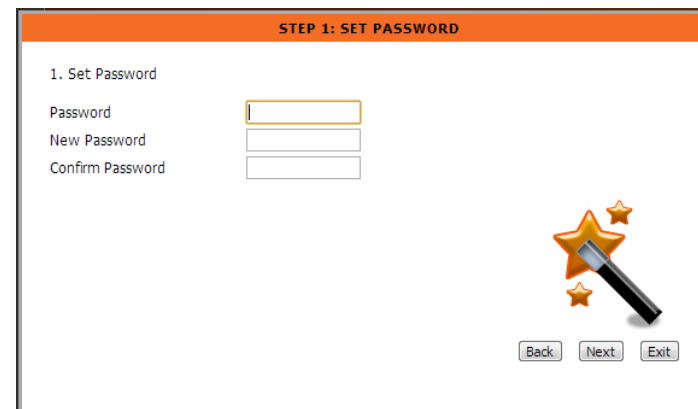

STEP 2:

Choose your **Time Zone** from the drop-down menu. Click **Next** to continue.

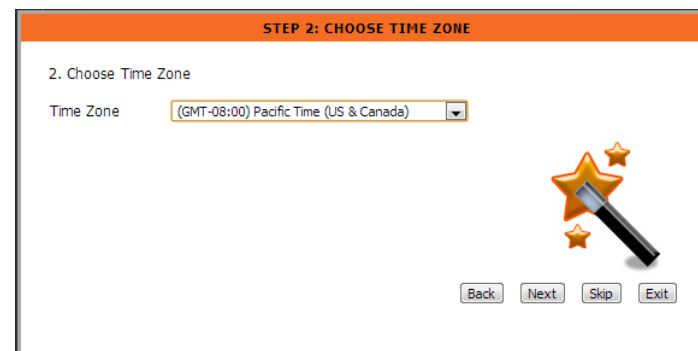


STEP 3:

Choose your network **Connection Type**. Select **Static IP** if your Internet Service Provider (ISP) has provided you with connection settings, or if you wish to set a static address within your home network.


Note: Select **DHCP** if you are unsure of which settings to choose.

Click **Next** to continue.

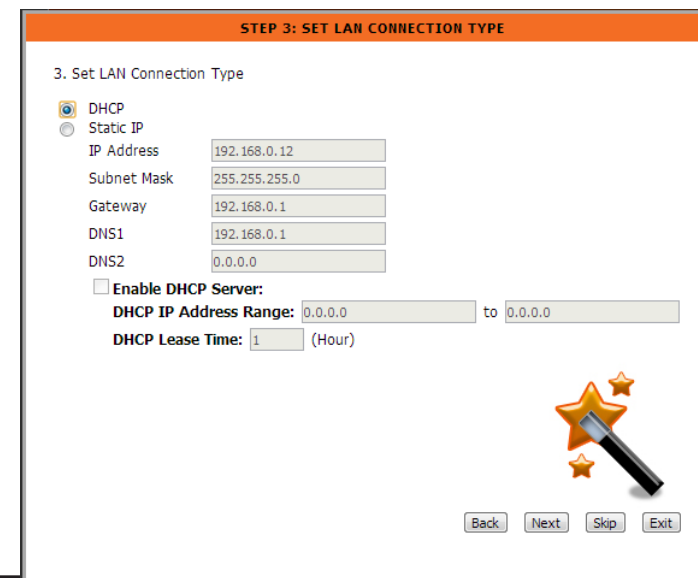

STEP 4:

Enter a **Name** for your device. Click **Next** to continue.

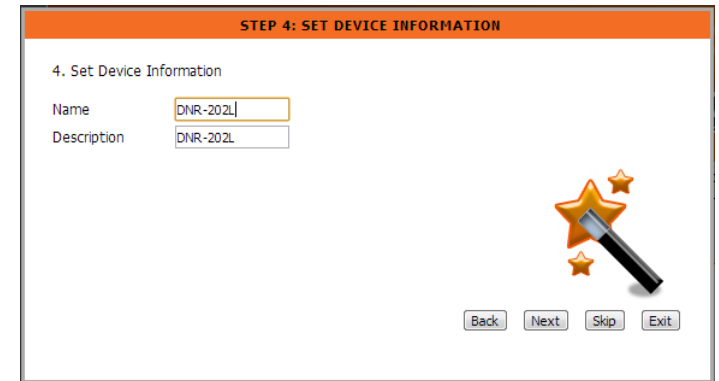

STEP 4: SET DEVICE INFORMATION

4. Set Device Information

Name

Description

Back Next Skip Exit

STEP 5:

Click **Finish** to complete the setup process. Wait a few moments while the DNR-202L saves your settings.



STEP 5: FINISH

5. Finish

Back Finish Exit

Network Setup

DHCP: Select this connection if you have a DHCP server running on your network and would like a dynamic IP address to be automatically updated to your NVR.

Static IP: You may obtain a static or fixed IP address and other network information from your network administrator for your NVR. A *Static IP* address will simplify access to your NVR in the future.

IP Address: The *Static IP* address.

Subnet Mask: The default value *255.255.255.0* is used to determine if the destination is in the same subnet.

Gateway: The *Gateway* forwards frames to destinations in a different subnet. Invalid gateway settings may cause the failure of transmissions to a different subnet.


DNS1: Primary domain name server that translates names to IP addresses.

DNS2: Secondary domain name server to backup the primary one.

Enable DHCP server: Check to enable the DHCP server. If your network doesn't have DHCP server, enable NVR DHCP server for easier local network setup.

DHCP IP Address Range: Enter the **DHCP IP Address Range**.

DHCP Lease Time: Enter the **DHCP Lease Time** in hours.

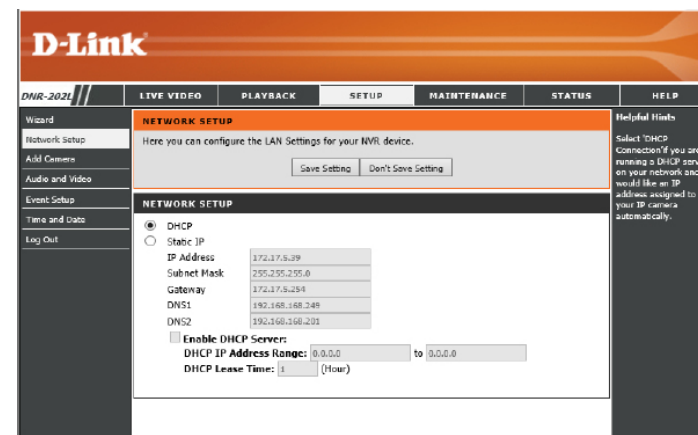

Add Camera

Step 1:

Under *Camera Search*, click the **Search** button to search for UPnP cameras. The addresses, *Vendor* and *Model* names of all the available cameras will appear below the *Camera Search* heading. Click the **+** icon to add a camera into your *Camera List*.

Note: If a cameras is already on the *Camera List*, it will be listed in red below the *Camera Search* heading.

Step 2:

After clicking the **+** icon, the *Camera Setting* window will appear.

Step 3:

Enter the **Camera Name**, **Administrator Name**, and **Password** for the camera.

Note:

- Some cameras will limit the login authority to the administrator only.
- To add cameras without the UPnP function, click **None** or the space in between lines, under the *Camera Name* heading in the *Camera List*. The *Camera Setup* menu will appear. Enter the **IP Address** manually.
- You may not be able to see all the cameras on your first search. It may take a moment for the devices to respond to the UPnP request. Click **Search** again if cameras are not immediately displayed.

Step 4:

Click the **Save Setting** button to add the selected camera.

Step 5:

Check to make sure the updated information is displayed in the *Camera List*.

Step 6:

Repeat steps 2 through 5 to add additional cameras to your list.

D-Link

NVR-202L // LIVE VIDEO PLAYBACK SETUP MAINTENANCE STATUS HELP

ADD CAMERA

Click the Search button to list out the connecting IP cameras in the network. Click the camera name from the list to show the camera's setting window. In the pop-up window, you can modify the settings of the camera.

CAMERA LIST

INDEX	Camera Name	Address	Port	Vendor	Model
1	DCS-942L	192.168.0.3	80	D-Link	DCS-942L
2	DCS-932L	192.168.0.5	80	D-Link	DCS-932L
3	DCS-5222L	192.168.0.6	80	D-Link	DCS-5222L
4	None				
5	None				
6	None				
7	None				
8	None				

CAMERA SEARCH

Search

Address	MAC	Vendor	Model
192.168.0.5	f0:7d:68:06:e0:5c	D-Link	DCS-932L
192.168.0.3	f0:7d:68:07:df:ae	D-Link	DCS-942L
192.168.0.6	f0:7d:68:0c:ca:c4	D-Link	DCS-5222L

Page 1 / 1

Helpful Hints

To add a camera:

- Click + to add a camera into the list. The camera setting page appears.
- Select the camera you want to add.
- Enter the camera name, user name and password details. Please input user name (admin is the user name for every D-Link's camera) and password in order to access and configure the cameras using the NVR's UI.

Camera Channel: Select the number of analog camera supported by one video server from the list.

Vendor: Displays the manufacturer's name.

Notes

Some cameras will limit the login authority to the administrator only.

You may not be able to see all the cameras on your first search. It takes time for the devices to respond to request. Please click search again.

CAMERA SEARCH

Camera Name DCS-932L Model DCS-932L

Address 192.168.0.5 Port 80

Administrator Name Password

INDEX Camera 4

Save Setting

Close

Audio and Video

This section will allow you to configure and modify the audio and video parameters for each camera.

Step 1:

Select the camera which you would like to modify from the camera list.

Step 2:

NVR will display the parameters for the selected camera. You can modify the information on this page.

Name: The **Name** of the camera.

Video Format: Select the **Video Format** the camera supports.

Frame rate: Select the Frame Rate of the camera.

Resolution: Select the resolution of the camera.

Quality: Select the image quality.

Audio: Check the **Enable Audio** option to enable audio recording.

Go to Web: Click on the link to the right of the *Model* name to connect to the web page for the selected network camera for advanced setup. For example, motion detection should be configured via the camera web interface to enable the NVR to receive the trigger message.

Step 3:

Click the **Save Setting** button.

Note: The system will adjust the frame rate automatically based on the maximum frame rate which that camera can support.

The screenshot shows the D-Link NVR-202L Web Interface. The top navigation bar includes tabs for LIVE VIDEO, PLAYBACK, SETUP, MAINTENANCE, STATUS, and HELP. The left sidebar contains a menu with options like Wizard, Network Setup, Add Camera, Audio and Video (selected), Event Setup, Time and Date, and Log Out. The main content area is titled 'AUDIO AND VIDEO' and contains a message: 'You may wish to modify the parameters in this page or directly go to the camera web site. The NVR will display all the necessary information of the selected camera.' Below this are 'Save Setting' and 'Don't Save Setting' buttons. The 'CAMERA PARAMETER' section shows the following settings for camera DCS-942L: Name (DCS-942L), Video Format (H.264 selected), Frame Rate (30), Resolution (640x480), Quality (Constant bit rate selected, 2M), and Audio (Enable Audio checked). At the bottom is a 'CAMERA LIST' table with columns: INDEX, Camera Name, Address, Vendor, Model, and Original Web. The table lists four cameras, with the first one (DCS-942L) highlighted in yellow.

INDEX	Camera Name	Address	Vendor	Model	Original Web
1	DCS-942L	192.168.0.3	D-Link	DCS-942L	Go to Web
2	DCS-932L	192.168.0.5	D-Link	DCS-932L	Go to Web
3	DCS-5222L	192.168.0.6	D-Link	DCS-5222L	Go to Web
4	None				

Event Setup

This page is where you specify how you would like to receive event notifications from your DNR-202L. An event can be triggered by various sources, such as motion detection or digital input. When an event is triggered, a specified action will be performed.

Enable Email Account: Check this box if you would like to receive event notifications via e-mail.

Email addresses: Enter the configuration for the email server account. These settings are specific to your e-mail provider. *

Motion: This option allows you to receive notifications when motion is detected during camera live video monitoring.

DI Trigger: This option will allow you to receive notifications when there is an external trigger input to the camera.

Loss: This option will allow you to receive notifications when a camera loses network connection.

Alert Mail: Check the **Alert Mail** box to have e-mail sent to a specified SMTP account after a camera event is triggered.

Interval: This setting allows you to specify how long, in seconds, you would like to receive e-mail notifications from your NVR.

Event Record: Check the **Event Record** box to have specified events recorded.

pre-event: Specify the period to save recorded data before the camera event takes place.

post-event: Specify the period to save recorded data after a camera event takes place.

Enable Recording schedule: Check to **Enable Recording Schedule**, and choose the days of the week and the start/end time for scheduled recording.

***Note:** If you don't know the configuration of your e-mail account, do a web search for your SMPT (Simple Mail Transfer Protocol) settings with the name of your e-mail provider.

Time and Date Setup

Time Zone: Select your **Time Zone** from the drop-down menu.

Enable Daylight Saving: Check this box to **Enable Daylight Saving** time.

Auto Daylight Saving: Select this option and the clock is adjusted automatically according to daylight saving of the selected time zone.

Set Date and Time Manually: Select this option to configure the daylight saving date and time manually.

Offset: Sets the amount of time to be added or removed when daylight saving time is enabled.

Synchronize with NTP Server: Check the box to enable the camera to synchronize time settings with an NTP (Network Time Protocol) server.

NTP Server: Select the **NTP Server** that is closest to your location.

Set the Date and Time Manually: This option allows you to **Set date and time manually**.

Set Time from My Computer: This will synchronize the date and time information from your PC.

The screenshot shows the D-Link DNR-202L Web Interface. The top navigation bar includes links for LIVE VIDEO, PLAYBACK, SETUP, MAINTENANCE, STATUS, and HELP. The left sidebar contains a menu with options: Wizard, Network Setup, Add Camera, Audio and Video, Event Setup, Time and Date, and Log Out. The main content area is titled 'SYSTEM TIME SETTINGS' and contains the following sections:

- TIME ZONE:** A dropdown menu is set to '(GMT+08:00) Taipei'. Below it, there are radio buttons for 'Enable Daylight Saving' (unchecked), 'Auto Daylight Saving' (checked), and 'Set date and time manually' (unchecked). An 'Offset' dropdown is set to '+2:00'. There are also fields for 'Start time' and 'End time' with dropdowns for Month, Week, Day of week, Hour, and Minutes.
- NTP SERVER:** A checkbox 'Synchronize with NTP Server' is checked. Below it, the 'NTP SERVER' field is set to 'ntp.dlink.com.tw'. There is a 'Select NTP Server' dropdown and a 'Save Settings' button.
- SET THE DATE AND TIME MANUALLY:** A checkbox 'Set date and time manually' is checked. Below it, there are dropdowns for Year (2013), Month (5), Day (31), Hour (2), Minute (55), and Second (6). There is a 'Set Time From My Computer' button and a 'Save Settings' button.

On the right side of the interface, there is a 'Helpful Hints' section with the following text:

- Using the NTP option** will guarantee the time to be accurate provided that the shareCenter is connected to the Internet and your DNS values (in Network Management > LAN Setup) are valid.
- Time Zone:** Select your time zone from the drop-down menu.
- Enable Daylight Saving:** Select this to enable the daylight saving time.
- Auto Daylight Saving:** When you select it, the clock is automatically adjusted according to the daylight saving time of the selected time zone.
- Offset:** Select the time offset. If your location observes daylight saving time.
- Synchronize with NTP Server:** With the option selected, the camera will synchronize the time settings with the NTP server over the Internet whenever the camera starts up. If the timeserver cannot be reached, no time settings will be applied.
- NTP Server:** Network Time Protocol (NTP) synchronizes the IP camera with an Internet time server. Choose the one that is closest to your location.

Maintenance

User Management

The Administrator can configure all functions of the NVR, as well as set user access to the NVR. The Administrator account cannot be deleted. The default password for **admin** is blank.

New Password: Set a **New Password** for the administrator account. Click **Save** to save the new password

User Name: Enter **User Name** for new user account.

New Password: Enter the **New Password** for the new account.

User List: All the existing user accounts will be listed here. Select the name from the drop-down menu and click **Delete** to delete user accounts from the list. You may want to reserve at least one user account as a guest account.

The screenshot shows the D-Link NVR-202L web interface. The top navigation bar includes tabs for LIVE VIDEO, PLAYBACK, SETUP, MAINTENANCE (selected), STATUS, and HELP. The left sidebar lists navigation options: User, System, Firmware Update, H.D.D, and Log Out. The main content area is titled 'ADMIN' and contains the following sections:

- ADMIN PASSWORD SETTING:** Includes input fields for 'New Password' and 'Retype Password', with a 'Save' button. A red text label indicates '63 characters maximum' for the new password.
- ADD USER ACCOUNT:** Includes input fields for 'User Name', 'New Password', and 'Retype Password', with an 'Add' button. Red text labels indicate '63 characters maximum' for both the new password and the retype password.
- USER LIST:** Includes a dropdown menu labeled '-- User list --' and a 'Delete' button.

A 'Helpful Hints' sidebar on the right states: 'For security purposes, it is recommended that you change the password for your administrator account. Be sure to write down the new password to avoid having to reset the IP camera in the event that it is forgotten.'

The bottom of the interface is labeled 'NVR'.

Note: Setting a password after the first login is strongly recommended. If the administrator password is lost, you may hold the reset button on the rear panel of the device to reset the NVR to factory defaults. This will erase all the previously-saved settings.

System

The System settings section allows you to restart the system or reset the device to its factory default settings. Restoring the unit to factory settings will erase all settings, including any rules that you created.

Restart: If the NVR is malfunctioning or crashes unexpectedly, click the **Restart** button. Restarting the NVR will take about 90 seconds.

Restore: Click **Restore** to reset all configurations to factory default.

Save: Click **Save** so that all the configuration settings can be saved as a file.


Load User can restore the configuration from a file after resetting to factory default.

Configuration: Click the **Browse** button to select the configuration file and restore it by clicking the **Load** button.

Idle Time: When an administrator enters any of the Setup pages (except the *Live Video* and *Playback* pages) the NVR will count the idle time where the user is inactive. After the idle time exceeds a specified period of time, the NVR will force the user to logout and request login authentication again for security. Specify the period of idle time here, in minutes.

Buzzer: Click **On** to enable buzzer, or **Off** to disable. (See "[LED and Alarm Overview](#)" on page 62.)

Enable Auto Plugin: Click **Enable Auto Plugin** to enable the device to automatically add verified cameras found on the network.

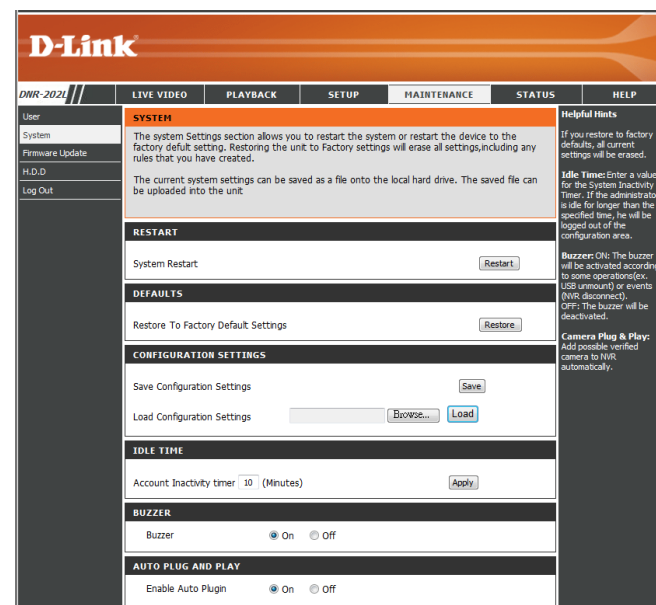

Firmware Update

You can update the firmware for your DNR-202L from this page. It is recommended you keep your firmware up-to-date for improved performance of the device.

Click on the **D-Link Support Page** link to check for the latest available firmware.

Download and save the latest firmware to your local hard drive of your computer. Click the **Browse** button to search the local hard drive for the firmware update file. Click **Load** to upgrade the firmware.

The screenshot displays the D-Link DNR-202L web interface. At the top is the D-Link logo. Below it is a navigation bar with tabs: LIVE VIDEO, PLAYBACK, SETUP, MAINTENANCE (selected), STATUS, and HELP. On the left is a sidebar menu with options: User, System, Firmware Update (selected), H.D.D, and Log Out. The main content area is titled 'FIRMWARE UPDATE' and contains the following text: 'A new firmware upgrade may be available for your DNR-202L. It is recommended to keep your DNR-202L firmware up-to-date to maintain and improve the functionality and performance of your storage device.' Below this, it says 'Click D-Link Support Page to check for the latest available firmware.' and 'To upgrade the firmware on your DNR-202L, please download and save the latest firmware version from the D-Link Support Page to your local hard drive. Locate the file on your local hard drive by clicking the Browse button. Once you have found and opened the file using the browse button, click the Apply button to start the firmware upgrade.' There is a section titled 'CURRENT FIRMWARE INFORMATION' showing 'Current NVR Firmware Version : v1.00.16' and 'Firmware Date : May 3 2013'. At the bottom, there is a 'Firmware Path' field with a 'Browse...' button and a 'Load' button. On the right side, there is a 'Helpful Hints' section with text about firmware updates and a link to the support page.


D-Link		
DNR-202L	LIVE VIDEO PLAYBACK SETUP MAINTENANCE STATUS HELP	
User	FIRMWARE UPDATE	Helpful Hints Firmware updates are released periodically to maintain and improve the functionality of your DNR-202L and also to add new features. If you run into a problem with a specific feature of the DNR-202L, check our support site by clicking on the Support Page link and see if an updated firmware is available for your DNR-202L.
System	A new firmware upgrade may be available for your DNR-202L. It is recommended to keep your DNR-202L firmware up-to-date to maintain and improve the functionality and performance of your storage device.	
Firmware Update	Click D-Link Support Page to check for the latest available firmware.	
H.D.D	To upgrade the firmware on your DNR-202L, please download and save the latest firmware version from the D-Link Support Page to your local hard drive. Locate the file on your local hard drive by clicking the Browse button. Once you have found and opened the file using the browse button, click the Apply button to start the firmware upgrade.	
Log Out	CURRENT FIRMWARE INFORMATION	
Current NVR Firmware Version : v1.00.16 Firmware Date : May 3 2013 Firmware Path : <input type="text"/> <input type="button" value="Browse..."/> <input type="button" value="Load"/>		

Hard Drive Configuration

This page displays information about the USB external storage for the DNR-202L. It also allows the user to configure the attached USB storage devices.

Click on **Enable Automatic Overwrite** to enable circular recording. Click on the **Format** button to format the USB storage device.

Note: All data will be erased from the attached USB storage device during formatting.

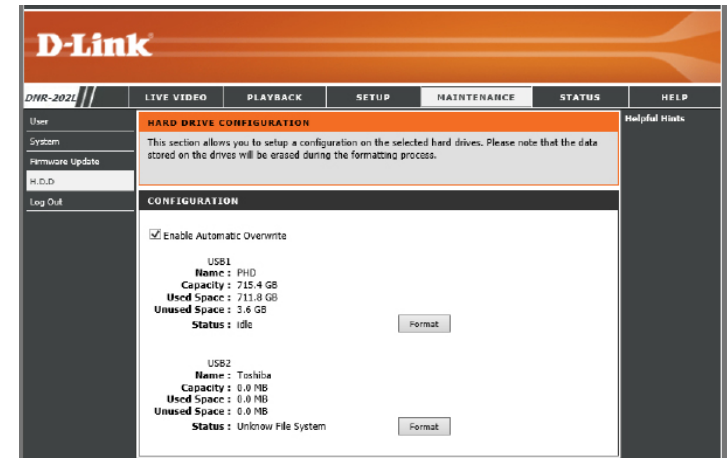

Status

Camera Status

This page displays and allows you to change both the connection and recording status of your cameras.


- Connection Status:

Shows the camera connection status.
- Recording Status:

Shows the recording schedule and current recording status of the cameras. If the camera is disconnected, the field will say *No Record*. However, the recording may continue, but produce blank video.
- Frame Rate:

Displays the frame rate of the camera.
- Bit Rate:

Displays the transmission bit rate of the camera.

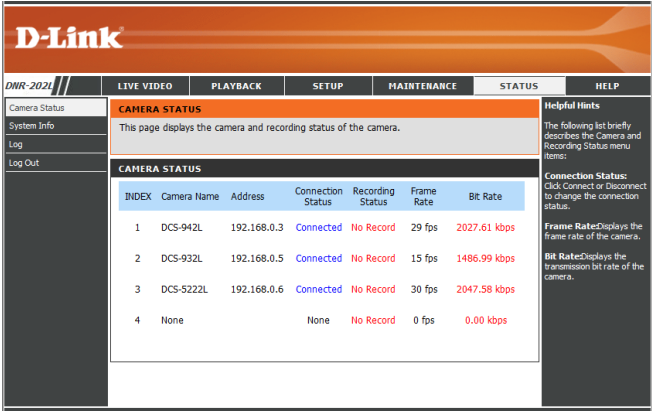

Note: If the Frame Rate or Bit Rate is too low, check the your network configuration between cameras and NVR. If the bit rate is too high, it will cause the Live Video display to slow down or lag. You should modify the quality or bit rate setting in the camera web GUI accordingly.

System Info


This page displays a summary information about your DNR-202L.

- LAN Information:

Displays the local network settings of the NVR, including *IP Address*, *Subnet Mask* and *Mac Address*.
- Device Information:

Displays the device *Name*, *Current RX/TX*, and *System Up Time* of the NVR.
- Volume Information:

Displays the hard drive information, including the *Name* (disk mode), *Total Hard Drive Capacity*, *Used Space* and *Unused* drive space, as well as the drive *Status*.

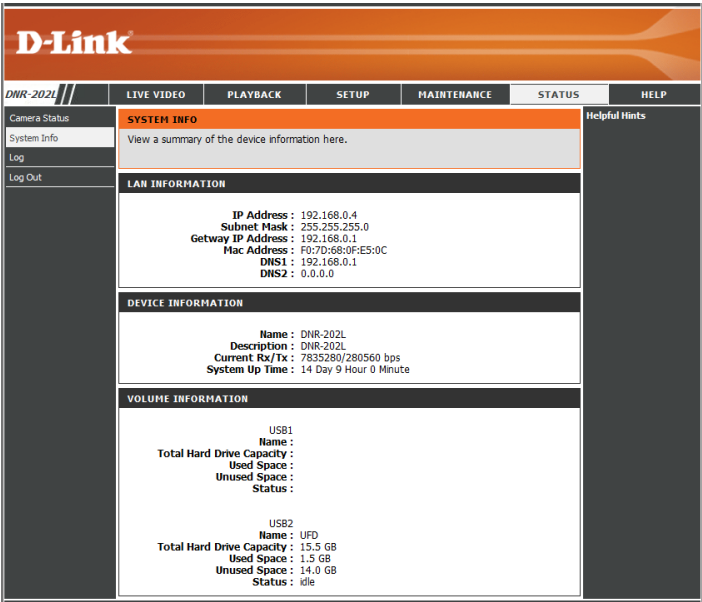

Logs

This page displays the system event list of your DNR-202L. The **System Log** for your device will include the following information:

1. User login/logout
2. Modify/delete account
3. System restart
4. System reset to default
5. System firmware update

First Page: Click to display the **First Page**.

Previous 10: Click to display the previous 10 pages.

Next 10: Click to display the next 10 pages.

Last Page: Click to go to the **Last Page**.

Clear: Clears all of the log contents.

Download: Click on this button to **Download** logs.


The screenshot shows the D-Link DNR-202L web interface. The top navigation bar includes links for LIVE VIDEO, PLAYBACK, SETUP, MAINTENANCE, STATUS, and HELP. The left sidebar contains links for Camera Status, System Info, Log, and Log Out. The main content area displays the 'LOGS' section, which includes a message: 'The screen displays the system event list of your DNR-202L.' Below this is a table of log entries.

Date	Time	Info
2013/05/31	02:52:56	admin login Ok from 192.168.0.2
2013/05/31	02:52:27	system change admin password.
2013/05/31	02:39:56	admin login Ok from 192.168.0.2
2013/05/30	18:15:54	admin login Ok from 192.168.0.2
2013/05/30	18:15:26	camera device 192.168.0.6 added/modified to ch 3.
2013/05/30	18:15:24	camera device 192.168.0.5 added/modified to ch 2.
2013/05/30	18:15:24	camera device 192.168.0.5 removed from ch 3.
2013/05/30	18:15:23	camera device 192.168.0.3 added/modified to ch 1.
2013/05/30	18:08:35	camera device 192.168.0.6 added/modified to ch 1.
2013/05/30	18:08:35	camera device 192.168.0.5 added/modified to ch 3.

Below the table are navigation buttons: First page, Previous 10, Next 10, Last page, Clear, and Download. On the right side of the interface, there is a 'Helpful Hints' section with the text: 'We recommend that you frequently check the logs for system/hard drive errors.'

Support

The DNR-202L *Help Menu* provides a list of support topics. Click the links to view the helpful tips.

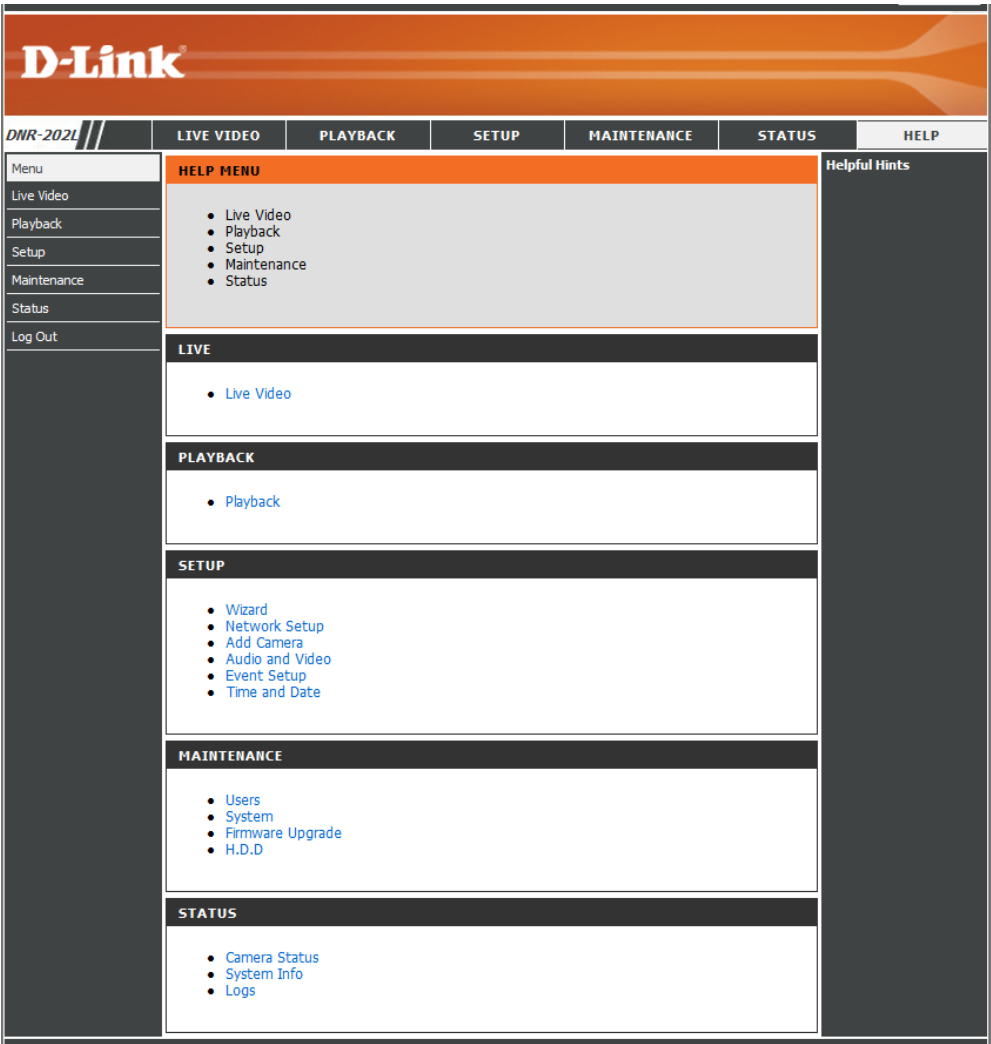

LED and Alarm Overview


LED	Color	Status	Description
Power & Network LED	Red	Off	Power down
		On	Power on
		Blinking	FW update
	Blue (Network)	Off	Network failure
		On	Network Link Connected
		Blinking	Traffic
USB1 LED	Green	Off	HDD1 disabled
		On	HDD1 enabled
		Blinking	Read / Write HDD1
USB2 LED	Green	Off	HDD2 disabled
		On	HDD2 enabled
		Blinking	Read / Write HDD2

Key	Trigger Method	Description
USB1 button	Press button for 3 seconds	Un-mount HDD1, Buzzer will beep (long).
		USB1 LED off.
USB2 button	Press key2 for 3 seconds button	Un-mount HDD2, Buzzer will beep (long).
		USB2 LED off.
Auto scan button	Auto scan function- Press scan button for 3 seconds	Start auto scan IP Cameras in local network.
		Buzzer will beep (long).
	Camera Echo function- Press scan button for 0.5 second	Echo IP Camera found (1 beep for 1st camera found, 2 beeps for 2nd, 3 beeps for 3rd, 4 beeps for 4th).
		Buzzer will beep (short).
Reset button	Press reset pin for 10 seconds	Reset to factory default.
		Buzzer will beep (long).

Technical Specifications

Technical Specifications		
Network Video Recorder		
Video Format	• H.264/MPEG-4/MJPEG for live streaming	• JPEG for still images
Audio support	• G.711	• G.726
Reset Button	• Reset to factory default	
Auto Scan Key	• IP Camera Finder (press for 3 seconds)	
External Device Interfaces	• 10/100 BASE-TX Fast Ethernet port	• 2 x USB 2.0 ports for external HDD storage
Video Management		
Live View/Playback Interface	• HTTP Web Browser/mydlink.com Portal/mydlink View - NVR app	
Live View and Playback Display Modes	• 1 and 4 channels display	
Recording Modes	• Schedule, Manual, Event (Motion)	• Continuous
Recording Performance	• H.264/MPEG4 720P @ 30 FPS : 32 Mbps	
Video Setting	• Resolution/Quality/Frame Rate/Compression Format/Audio On and Off	
Playback Control	• Play, Stop, Pause, Forward, Backward, Next, Previous	
Export Formats	• Video: AVI	• Image : JPEG
Network		
Physical Interface	• RJ45 10/100 LAN Ethernet (auto MDI/MDIX)	
Network Protocols	<ul style="list-style-type: none"> • IPV4, ARP, TCP, UDP, ICMP • DHCP Client • DNS Client • HTTP Server • HTTPS • SMTP 	<ul style="list-style-type: none"> • RTP • RTCP • RTSP • NTP • UPnP
Security		
User Management	• Administrator password authentication	
Automatic Logoff	• Idle user timeout on configuration pages	

Appendix B: Technical Specifications

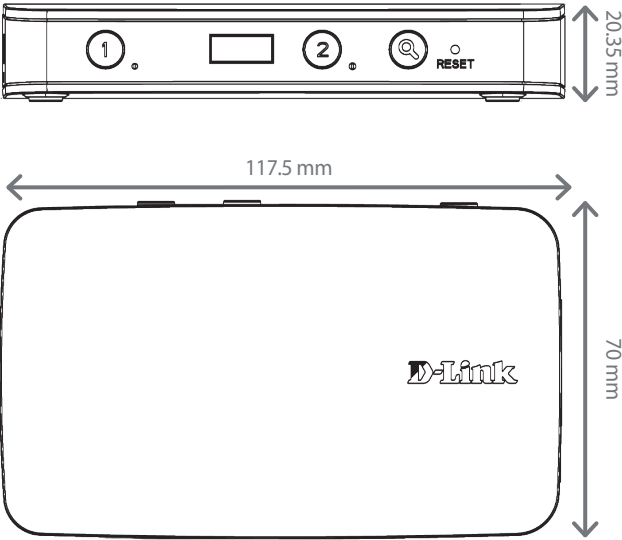System		
System Requirements	<ul style="list-style-type: none">• Microsoft Windows®: 8, 7, Vista®, or XP SP2	<ul style="list-style-type: none">• Mac OS® X (10.5 or higher)
Browser Requirements	<ul style="list-style-type: none">• Internet Explorer 8 or higher	<ul style="list-style-type: none">• Firefox, Chrome, Safari 5 or higher
Mobile Support	<ul style="list-style-type: none">• Android 4.01 and above	<ul style="list-style-type: none">• iOS 5.1.1 and above
Remote Management	<ul style="list-style-type: none">• Remote live view and playback via web browser	<ul style="list-style-type: none">• Configuration interface accessible via web browser
System Log	<ul style="list-style-type: none">• Status of active users	<ul style="list-style-type: none">• Login history
Certifications	<ul style="list-style-type: none">• CE• FCC	<ul style="list-style-type: none">• CE LVD• C-Tick
Physical		
Weight	<ul style="list-style-type: none">• 90 g	
External Power Adapter	<ul style="list-style-type: none">• Input: 5 V DC, 3 A	<ul style="list-style-type: none">• Consumption: 8.5 watts ± 5 % (include 2 x 2.5 HDD)
Temperature	<ul style="list-style-type: none">• Operating: 0 to 40 °C	<ul style="list-style-type: none">• Storage: -20 to 70 °C (-4 to 158 °F)
Humidity	<ul style="list-style-type: none">• Operating: 10% to 90% non-condensing	<ul style="list-style-type: none">• Storage: 5% to 95% non-condensing
Dimensions	 <p>The technical drawing shows two views of the D-Link DNR-202L device. The top view is a horizontal rectangle with a width of 117.5 mm and a height of 20.35 mm. It features a circular indicator labeled '1', a rectangular slot, a circular indicator labeled '2', a circular button with a magnifying glass icon, and a small circular button labeled 'RESET'. The front view is a rounded rectangle with a width of 117.5 mm and a height of 70 mm, featuring the D-Link logo in the bottom right corner.</p>	

Contacting Technical Support

U.S. and Canadian customers can contact D-Link technical support through our web site or by phone.

Before you contact technical support, please have the following ready:

- Model number of the product (e.g. DNR-202L)
- Hardware Revision (located on the label on the bottom of the device (e.g. rev A1))
- Serial Number (s/n number located on the label on the bottom of the device).

You can find software updates and user documentation on the D-Link website as well as frequently asked questions and answers to technical issues.

For customers within the United States:

Phone Support:

(877) 453-5465

Internet Support:

<http://support.dlink.com>

For customers within Canada:

Phone Support:

(800) 361-5265

Internet Support:

<http://support.dlink.ca>

Warranty

Subject to the terms and conditions set forth herein, D-Link Systems, Inc. ("D-Link") provides this Limited Warranty:

- Only to the person or entity that originally purchased the product from D-Link or its authorized reseller or distributor, and
- Only for products purchased and delivered within the fifty states of the United States, the District of Columbia, U.S. Possessions or Protectorates, U.S. Military Installations, or addresses with an APO or FPO.

Limited Warranty:

D-Link warrants that the hardware portion of the D-Link product described below ("Hardware") will be free from material defects in workmanship and materials under normal use from the date of original retail purchase of the product, for the period set forth below ("Warranty Period"), except as otherwise stated herein.

- One (1) Year Limited Warranty

The customer's sole and exclusive remedy and the entire liability of D-Link and its suppliers under this Limited Warranty will be, at D-Link's option, to repair or replace the defective Hardware during the Warranty Period at no charge to the original owner or to refund the actual purchase price paid. Any repair or replacement will be rendered by D-Link at an Authorized D-Link Service Office. The replacement hardware need not be new or have an identical make, model or part. D-Link may, at its option, replace the defective Hardware or any part thereof with any reconditioned product that D-Link reasonably determines is substantially equivalent (or superior) in all material respects to the defective Hardware. Repaired or replacement hardware will be warranted for the remainder of the original Warranty Period or ninety (90) days, whichever is longer, and is subject to the same limitations and exclusions. If a material defect is incapable of correction, or if D-Link determines that it is not practical to repair or replace the defective Hardware, the actual price paid by the original purchaser for the defective Hardware will be refunded by D-Link upon return to D-Link of the defective Hardware. All Hardware or part thereof that is replaced by D-Link, or for which the purchase price is refunded, shall become the property of D-Link upon replacement or refund.

Limited Software Warranty:

D-Link warrants that the software portion of the product ("Software") will substantially conform to D-Link's then current functional specifications for the Software, as set forth in the applicable documentation, from the date of original retail purchase of the Software for a period of ninety (90) days ("Software Warranty Period"), provided that the Software is properly installed on approved hardware and operated as contemplated in its documentation. D-Link further warrants that, during the Software Warranty Period, the magnetic media on which D-Link delivers the Software will be free of physical defects. The customer's sole and exclusive remedy and the entire liability of D-Link and its suppliers under this Limited Warranty will be, at D-Link's option, to replace the non-conforming Software (or defective media) with software that substantially conforms to D-Link's functional specifications for the Software or to refund the portion of the actual purchase price paid that is attributable to the Software. Except as otherwise agreed by D-Link in writing, the replacement Software is provided only to the original licensee, and is subject to the terms and conditions of the license granted by D-Link for the Software. Replacement Software will be warranted for the remainder of the original Warranty Period and is subject to the same limitations and exclusions. If a material non-conformance is incapable of correction, or if D-Link determines in its sole discretion that it is not practical to replace the non-conforming Software, the price paid by the original licensee for the non-conforming Software will be refunded by D-Link; provided that the non-conforming Software (and all copies thereof) is first returned to D-Link. The license granted respecting any Software for which a refund is given automatically terminates.

Non-Applicability of Warranty:

The Limited Warranty provided hereunder for Hardware and Software portions of D-Link's products will not be applied to and does not cover any refurbished product and any product purchased through the inventory clearance or liquidation sale or other sales in which D-Link, the sellers, or the liquidators expressly disclaim their warranty obligation pertaining to the product and in that case, the product is being sold "As-Is" without any warranty whatsoever including, without limitation, the Limited Warranty as described herein, notwithstanding anything stated herein to the contrary.

Submitting A Claim (USA):

The customer shall return the product to the original purchase point based on its return policy. In case the return policy period has expired and the product is within warranty, the customer shall submit a claim to D-Link as outlined below:

- The customer must submit with the product as part of the claim a written description of the Hardware defect or Software nonconformance in sufficient detail to allow D-Link to confirm the same, along with proof of purchase of the product (such as a copy of the dated purchase invoice for the product) if the product is not registered.
- The customer must obtain a Case ID Number from D-Link Technical Support at 1-877-453-5465, who will attempt to assist the customer in resolving any suspected defects with the product. If the product is considered defective, the customer must obtain a Return Material Authorization ("RMA") number by completing the RMA form and entering the assigned Case ID Number at <https://rma.dlink.com/>.

- After an RMA number is issued, the defective product must be packaged securely in the original or other suitable shipping package to ensure that it will not be damaged in transit, and the RMA number must be prominently marked on the outside of the package. Do not include any manuals or accessories in the shipping package. D-Link will only replace the defective portion of the product and will not ship back any accessories.
- The customer is responsible for all in-bound shipping charges to D-Link. No Cash on Delivery (“COD”) is allowed. Products sent COD will either be rejected by D-Link or become the property of D-Link. Products shall be fully insured by the customer and shipped to D-Link Systems, Inc., 17595 Mt. Herrmann, Fountain Valley, CA 92708. D-Link will not be held responsible for any packages that are lost in transit to D-Link. The repaired or replaced packages will be shipped to the customer via UPS Ground or any common carrier selected by D-Link. Return shipping charges shall be prepaid by D-Link if you use an address in the United States, otherwise we will ship the product to you freight collect. Expedited shipping is available upon request and provided shipping charges are prepaid by the customer. D-Link may reject or return any product that is not packaged and shipped in strict compliance with the foregoing requirements, or for which an RMA number is not visible from the outside of the package. The product owner agrees to pay D-Link’s reasonable handling and return shipping charges for any product that is not packaged and shipped in accordance with the foregoing requirements, or that is determined by D-Link not to be defective or non-conforming.

Submitting A Claim (Canada):

The customer shall return the product to the original purchase point based on its return policy. In case the return policy period has expired and the product is within warranty, the customer shall submit a claim to D-Link as outlined below:

- Customers need to provide their receipt (proof of purchase) even if the product is registered. Without a receipt, no warranty service will be done. The registration is not considered a proof of purchase.
- The customer must submit with the product as part of the claim a written description of the Hardware defect or Software nonconformance in sufficient detail to allow D-Link to confirm the same, along with proof of purchase of the product (such as a copy of the dated purchase invoice for the product) if the product is not registered.
- The customer must obtain a Case ID Number from D-Link Technical Support at 1-800-361-5265, who will attempt to assist the customer in resolving any suspected defects with the product. If the product is considered defective, the customer must obtain a Return Material Authorization (“RMA”) number by completing the RMA form and entering the assigned Case ID Number at <https://rma.dlink.ca/>.
- After an RMA number is issued, the defective product must be packaged securely in the original or other suitable shipping package to ensure that it will not be damaged in transit, and the RMA number must be prominently marked on the outside of the package. Do not include any manuals or accessories in the shipping package. D-Link will only replace the defective portion of the product and will not ship back any accessories.

- The customer is responsible for all in-bound shipping charges to D-Link. No Cash on Delivery (“COD”) is allowed. Products sent COD will be rejected by D-Link. Products shall be fully insured by the customer and shipped to D-Link Networks, Inc., 2525 Meadowvale Boulevard Mississauga, Ontario, L5N 5S2 Canada. D-Link will not be held responsible for any packages that are lost in transit to D-Link. The repaired or replaced packages will be shipped to the customer via Purolator Canada or any common carrier selected by D-Link. Return shipping charges shall be prepaid by D-Link if you use an address in Canada, otherwise we will ship the product to you freight collect. Expedited shipping is available upon request and provided shipping charges are prepaid by the customer. D-Link may reject or return any product that is not packaged and shipped in strict compliance with the foregoing requirements, or for which an RMA number is not visible from the outside of the package. The product owner agrees to pay D-Link’s reasonable handling and return shipping charges for any product that is not packaged and shipped in accordance with the foregoing requirements, or that is determined by D-Link not to be defective or non-conforming.
- RMA phone number: 1-800-361-5265 Hours of Operation: Monday-Friday, 9:00AM – 9:00PM EST

What Is Not Covered:

The Limited Warranty provided herein by D-Link does not cover:

Products that, in D-Link’s judgment, have been subjected to abuse, accident, alteration, modification, tampering, negligence, misuse, faulty installation, lack of reasonable care, repair or service in any way that is not contemplated in the documentation for the product, or if the model or serial number has been altered, tampered with, defaced or removed; Initial installation, installation and removal of the product for repair, and shipping costs; Operational adjustments covered in the operating manual for the product, and normal maintenance; Damage that occurs in shipment, due to act of God, failures due to power surge, and cosmetic damage; Any hardware, software, firmware or other products or services provided by anyone other than D-Link; and Products that have been purchased from inventory clearance or liquidation sales or other sales in which D-Link, the sellers, or the liquidators expressly disclaim their warranty obligation pertaining to the product.

While necessary maintenance or repairs on your Product can be performed by any company, we recommend that you use only an Authorized D-Link Service Office. Improper or incorrectly performed maintenance or repair voids this Limited Warranty.

Disclaimer of Other Warranties:

EXCEPT FOR THE LIMITED WARRANTY SPECIFIED HEREIN, THE PRODUCT IS PROVIDED “AS-IS” WITHOUT ANY WARRANTY OF ANY KIND WHATSOEVER INCLUDING, WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT.

IF ANY IMPLIED WARRANTY CANNOT BE DISCLAIMED IN ANY TERRITORY WHERE A PRODUCT IS SOLD, THE DURATION OF SUCH IMPLIED WARRANTY SHALL BE LIMITED TO THE DURATION OF THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE. EXCEPT AS EXPRESSLY COVERED UNDER THE LIMITED WARRANTY PROVIDED HEREIN, THE ENTIRE RISK AS TO THE QUALITY, SELECTION AND PERFORMANCE OF THE PRODUCT IS WITH THE PURCHASER OF THE PRODUCT.

Limitation of Liability:

TO THE MAXIMUM EXTENT PERMITTED BY LAW, D-LINK IS NOT LIABLE UNDER ANY CONTRACT, NEGLIGENCE, STRICT LIABILITY OR OTHER LEGAL OR EQUITABLE THEORY FOR ANY LOSS OF USE OF THE PRODUCT, INCONVENIENCE OR DAMAGES OF ANY CHARACTER, WHETHER DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL (INCLUDING, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF GOODWILL, LOSS OF REVENUE OR PROFIT, WORK STOPPAGE, COMPUTER FAILURE OR MALFUNCTION, FAILURE OF OTHER EQUIPMENT OR COMPUTER PROGRAMS TO WHICH D-LINK'S PRODUCT IS CONNECTED WITH, LOSS OF INFORMATION OR DATA CONTAINED IN, STORED ON, OR INTEGRATED WITH ANY PRODUCT RETURNED TO D-LINK FOR WARRANTY SERVICE) RESULTING FROM THE USE OF THE PRODUCT, RELATING TO WARRANTY SERVICE, OR ARISING OUT OF ANY BREACH OF THIS LIMITED WARRANTY, EVEN IF D-LINK HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THE SOLE REMEDY FOR A BREACH OF THE FOREGOING LIMITED WARRANTY IS REPAIR, REPLACEMENT OR REFUND OF THE DEFECTIVE OR NONCONFORMING PRODUCT. THE MAXIMUM LIABILITY OF D-LINK UNDER THIS WARRANTY IS LIMITED TO THE PURCHASE PRICE OF THE PRODUCT COVERED BY THE WARRANTY. THE FOREGOING EXPRESS WRITTEN WARRANTIES AND REMEDIES ARE EXCLUSIVE AND ARE IN LIEU OF ANY OTHER WARRANTIES OR REMEDIES, EXPRESS, IMPLIED OR STATUTORY.

Governing Law:

This Limited Warranty shall be governed by the laws of the State of California. Some states do not allow exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the foregoing limitations and exclusions may not apply. This Limited Warranty provides specific legal rights and you may also have other rights which vary from state to state.

Trademarks:

D-Link is a registered trademark of D-Link Corporation/D-Link Systems, Inc. Other trademarks or registered trademarks are the property of their respective owners.

Copyright Statement:

No part of this publication or documentation accompanying this product may be reproduced in any form or by any means or used to make any derivative such as translation, transformation, or adaptation without permission from D-Link Corporation/D-Link Systems, Inc., as stipulated by the United States Copyright Act of 1976 and any amendments thereto. Contents are subject to change without prior notice.

Copyright ©2012 by D-Link Corporation/D-Link Systems, Inc. All rights reserved.

CE Mark Warning:

This is a Class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

FCC Statement:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

For detailed warranty information applicable to products purchased outside the United States, please contact the corresponding local D-Link office.

Registration

Register your product online at registration.dlink.com



Product registration is entirely voluntary and failure to complete or return this form will not diminish your warranty rights.

Version 1.0
August 19, 2013