




Acer Iconia A100 I/O Board Replacement

Use this step-by-step guide to replace the I/O Board in your Acer Iconia Tab A100 device.

Written By: Bree Abernathy

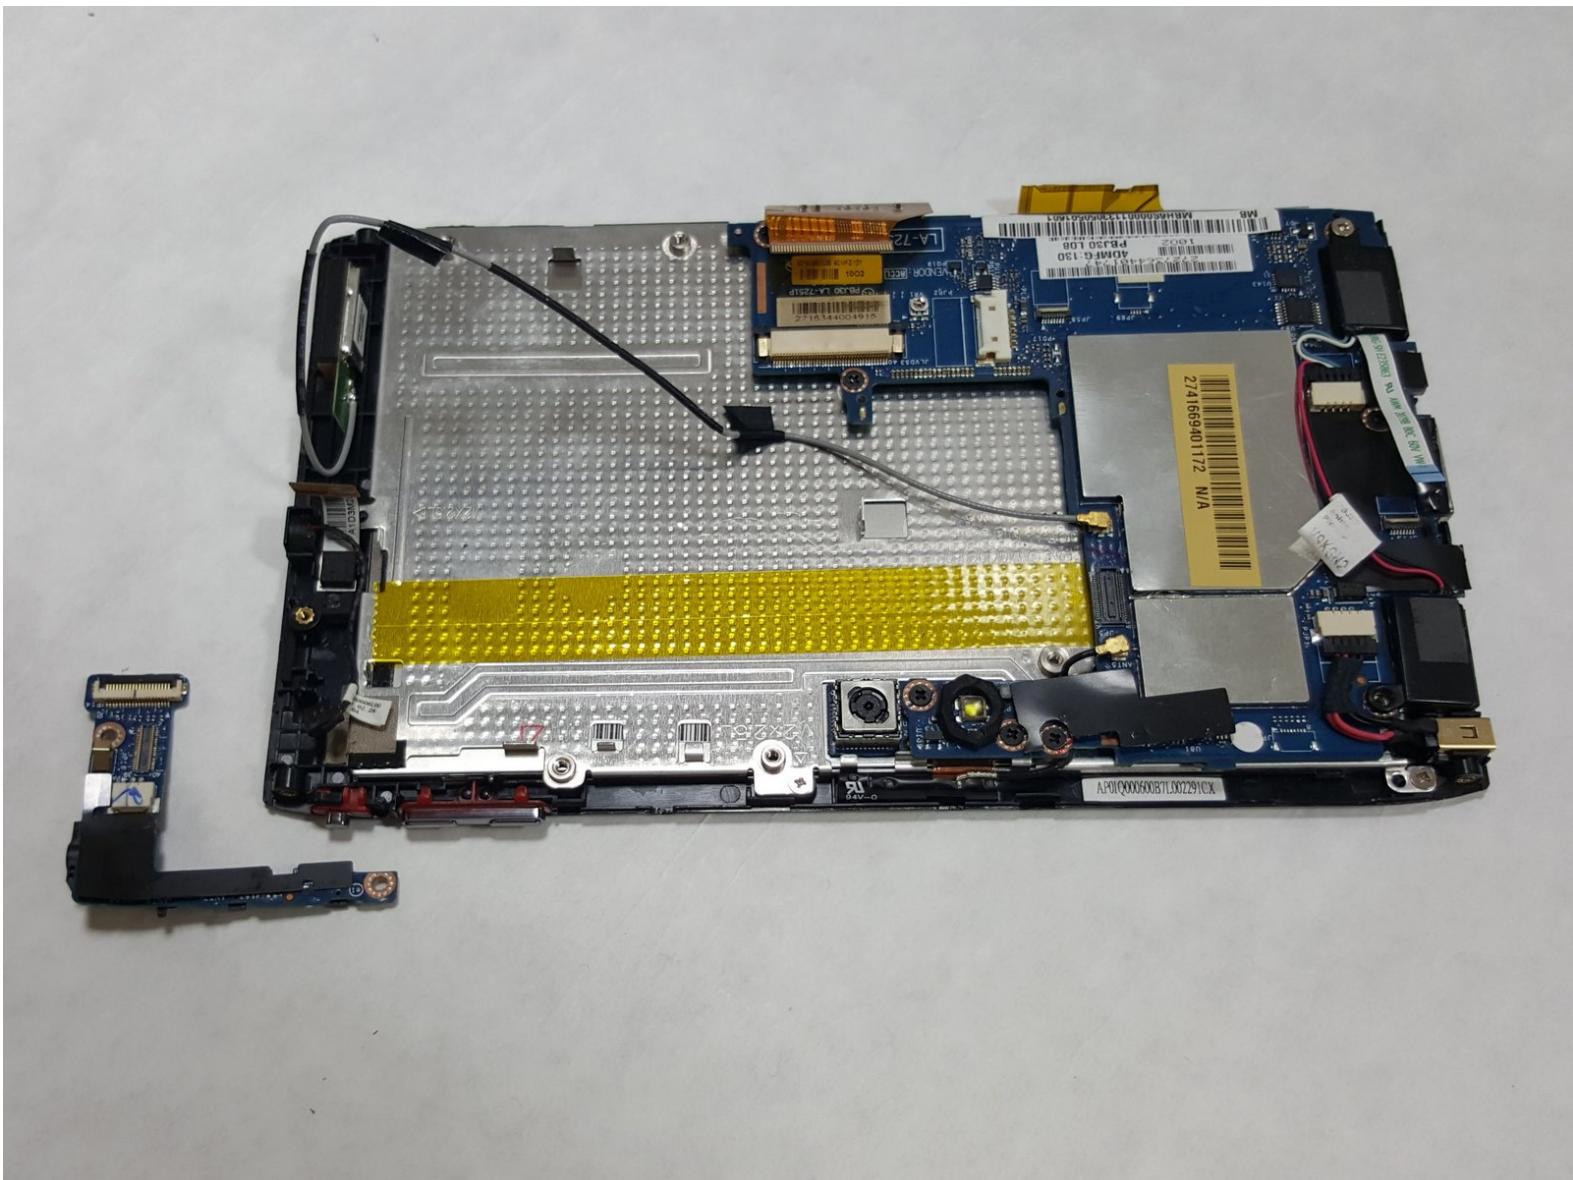

INTRODUCTION

While I/O Board failure is uncommon, if the light sensor, microphone, RF and 3G are all failing, you may need to replace the I/O Board in your Acer Iconia Tab A100.


TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #00 Screwdriver](#) (1)
- [Metal Spudger](#) (1)

PARTS:

- [4mm philips screws](#) (1)

Step 1 — Battery

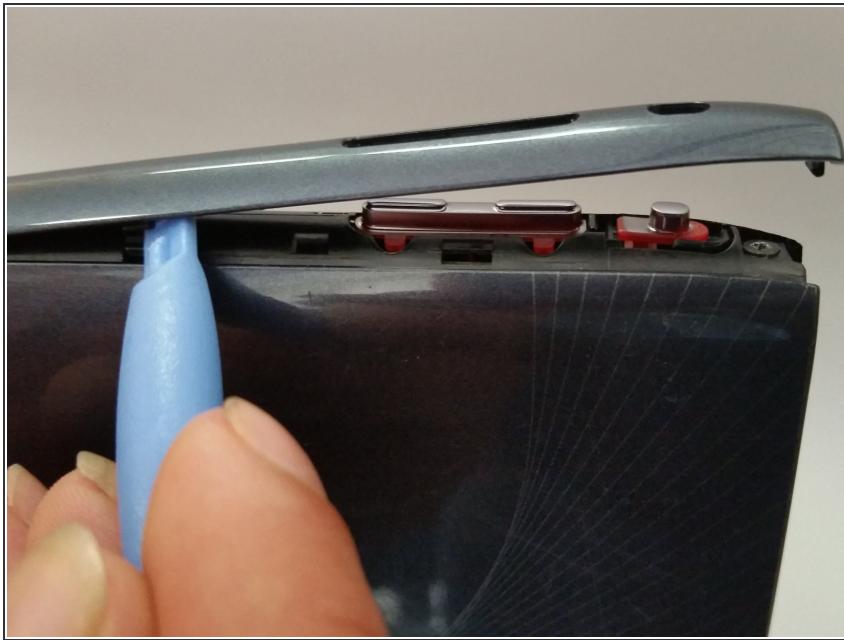

- Start at any side of the tablet.
- Begin to take apart the tablet ,with a plastic opening tool, along the sides of the tablet.
- Work your way around the tablet.

i There are four side pieces in total.

Step 2



- Placed on each end of the tablet are 4mm Philips screws.
- Unscrew the 4mm Phillips screws with a Phillips #00 Screwdriver.

star There are five 4.0mm screws in total (including the 4mm Phillips screw at the bottom of the tablet).

Step 3



- Carefully separate the back piece from the device using a plastic opening tool.
- Remember to open along the entire perimeter of the tablet.

Step 4




- Turn the tablet over to locate the battery.
- Locate the large blue and black object at the bottom of the tablet with the plus and minus sign.

Step 5



- Unscrew the 4mm screws located around the battery.
- There are five in total.

Step 6

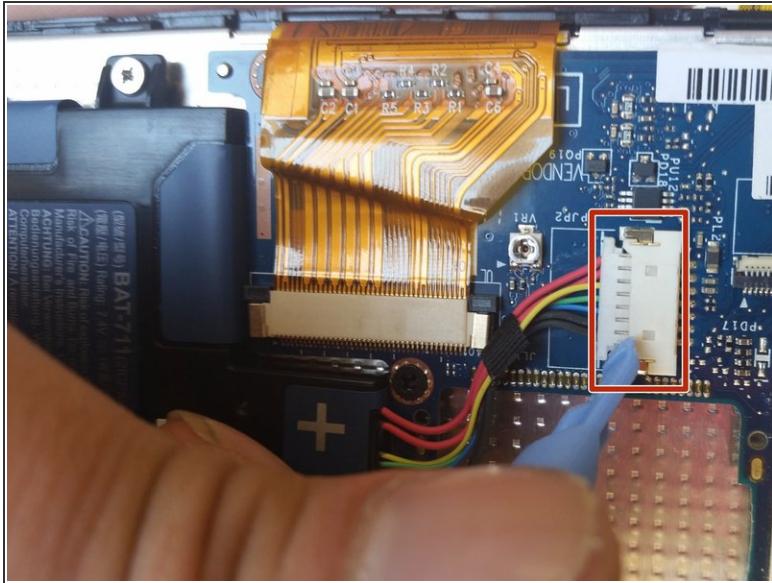


- Locate the battery cables and the tip of a plastic spudger or opening tool to gently push the connector head out of its socket.
- Use your fingers or the flat edge of a plastic opening tool to lift the battery up and off of the device.

⚠ Be sure to not have any water around the device while removing the battery.


⚠ Be sure to be cautious while removing the battery and remove carefully; avoid ripping the wires attached to the battery.

Step 7 — I/O Board

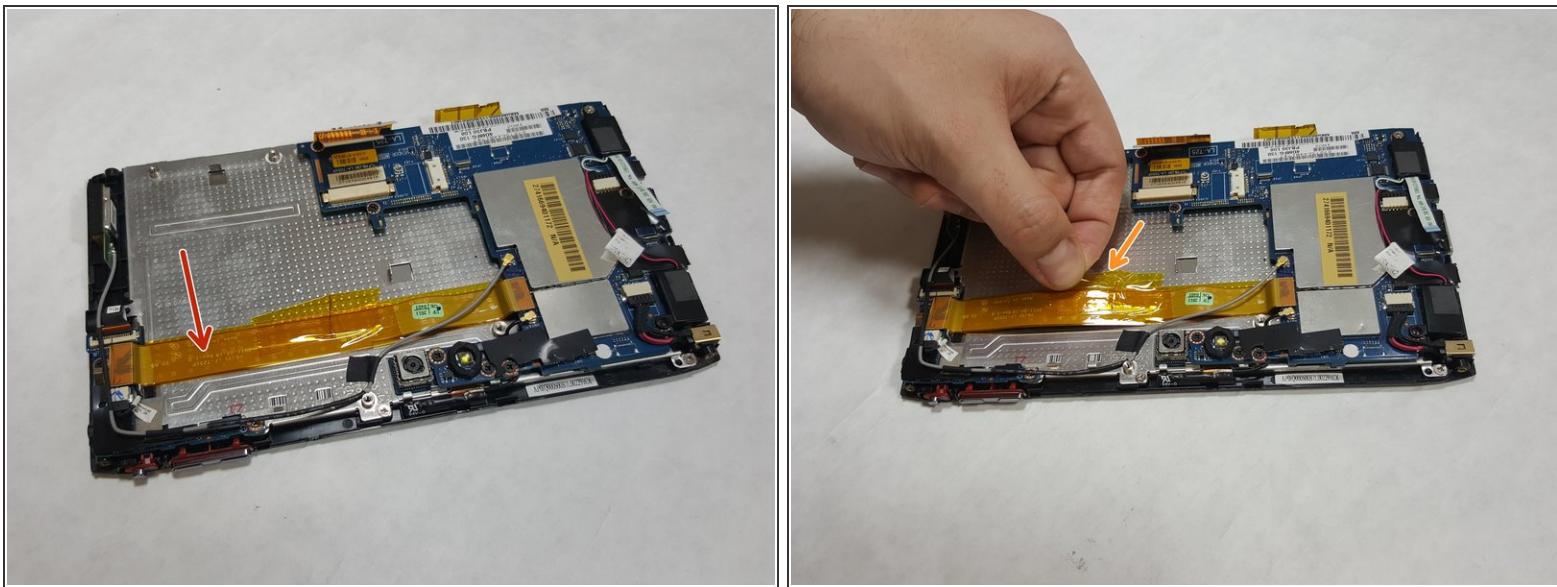

- Locate the I/O Board FPC (a long orange strip) .
- Gently peel off any tape securing the FPC to the main plate.

Step 8

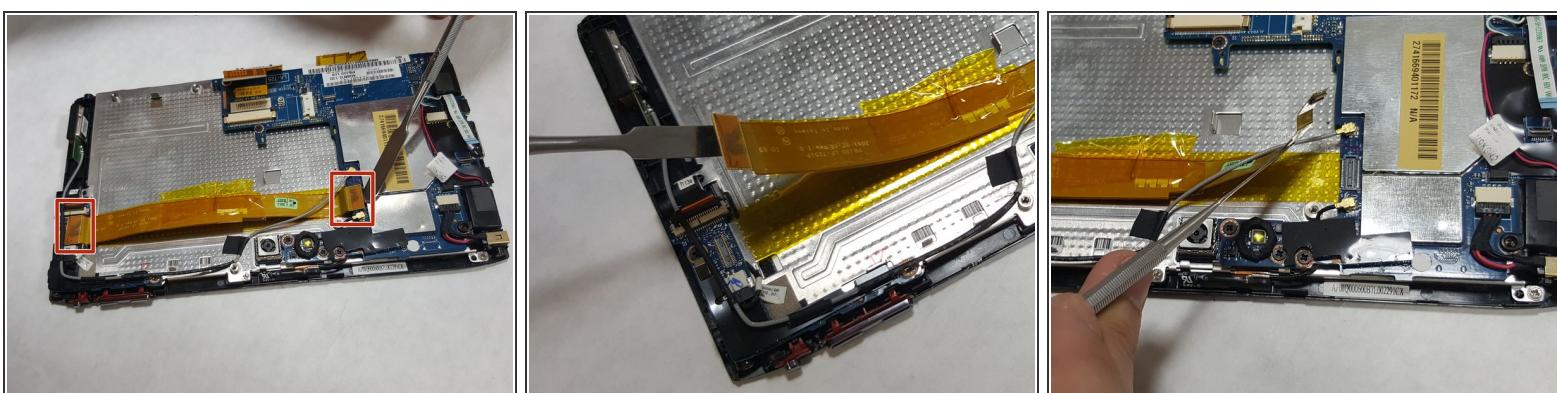

- Locate the two connectors at each end of the FPC.
- Use the flat edge of a spudger tool or your fingernail to gently pry each connector straight upwards out of its socket, then remove the FPC cable from the unit.


⚠ While a metal spudger tool is shown here, it is best to use a *plastic* spudger / opening tool when possible, and only use a metal spudger as a last resort!

You should now see the yellow-colored strip on the metal base marking the location of the FPC

This document was generated on 2019-09-16 07:36:06 PM (MST).





Step 9

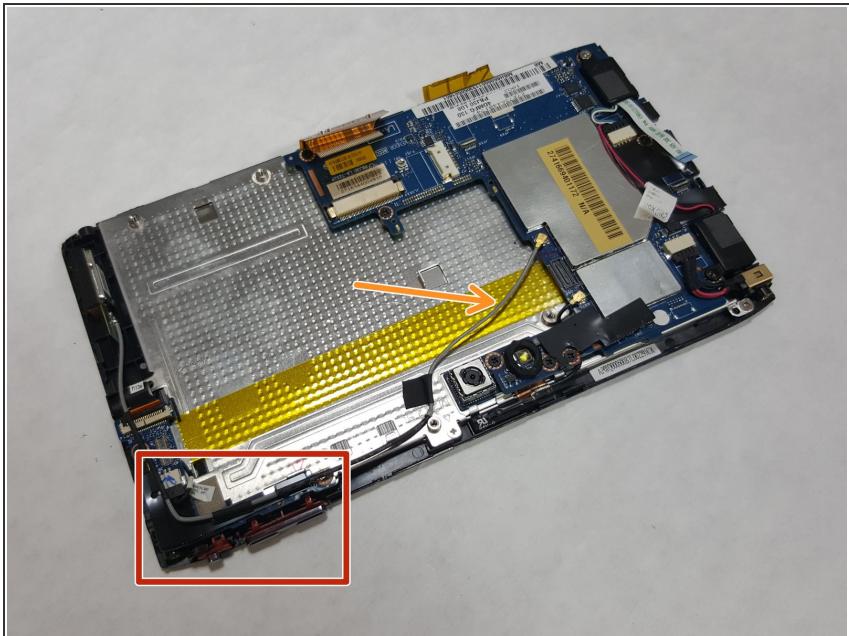

- Locate the L-shaped I/O Board.
- Locate the gray 3G Antenna wire.

i If the gray 3G Antenna wire is connected to your I/O Board, disconnect it. If for some reason the 3G Antenna wire is *already disconnected* from the I/O Board (as it was in this device) simply lift it out of the way.


Step 10

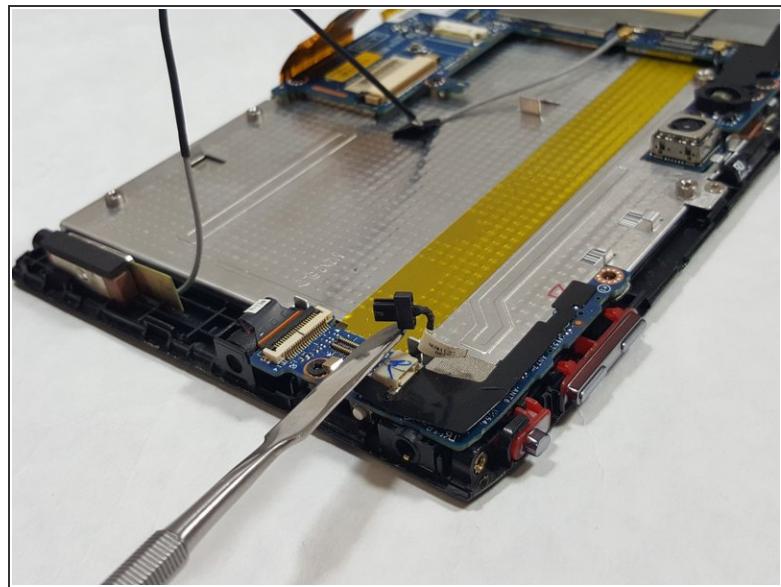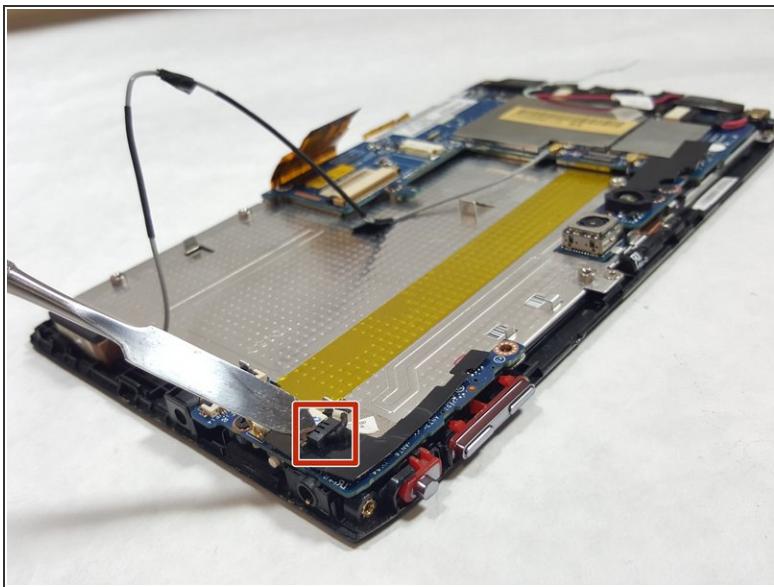

- Locate the microphone cable.
- You should be able to gently pull it out of its socket using only your fingers.



i The spudger is used in the photo merely to hold up / identify the disconnected mic cable head.

Step 11

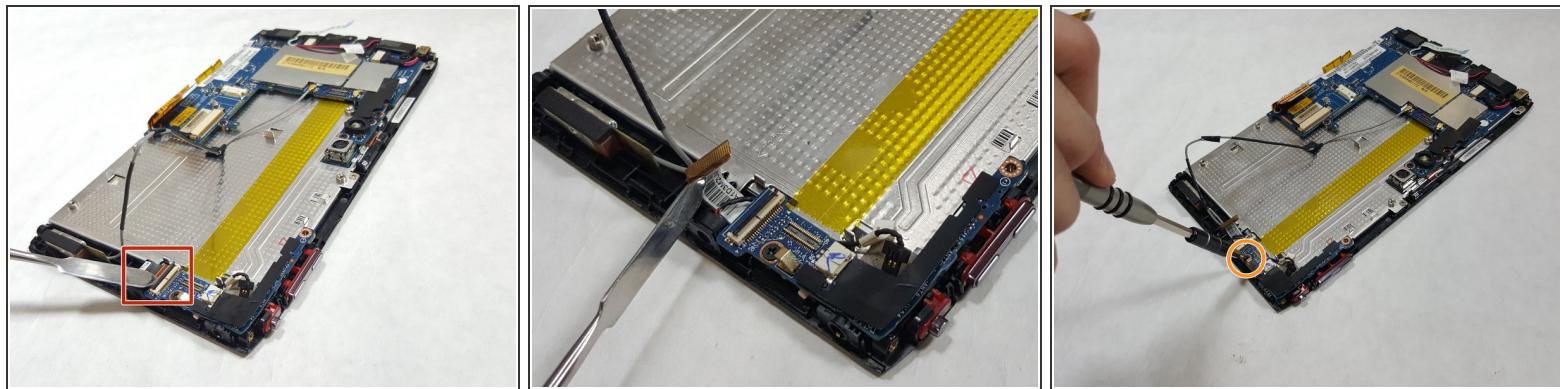

- Locate the light sensor connector.
 - Use the tip of a spudger or your fingernail to lift up and flip the small retaining flap on the connector. The light sensor ribbon cable should now be free, so simply pull it out.
- **(i)** This is a **ZIF (zero insertion force)** connector, which requires no force to remove / plug in the connector.
- **⚠** Please make sure you lift up on the small retaining flap on the connector, not the connector itself!
- Use a Phillips #00 screwdriver to unscrew the single 3.0mm Phillips screw next to the light sensor connector.

Step 12

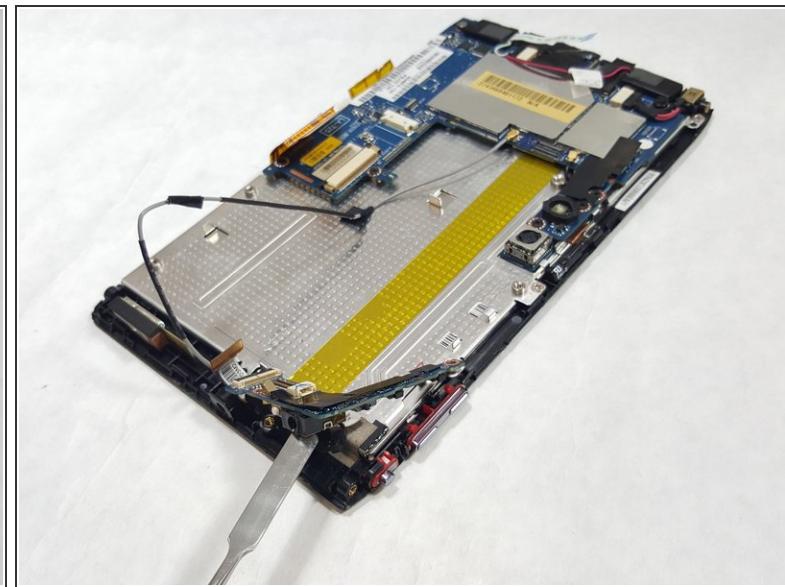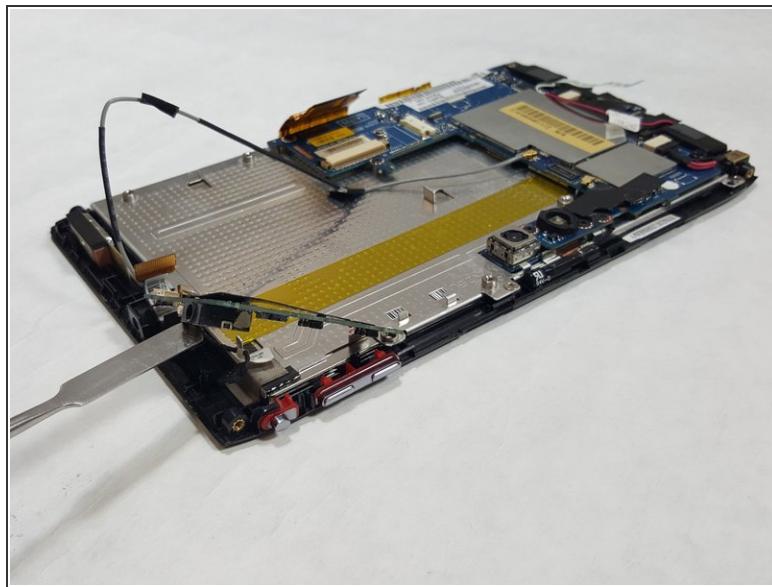

- Carefully lift the I/O Board off the device.

To reassemble your device, follow these instructions in reverse order.