



Lenovo YOGA 730-15IKB Battery Replacement

This guide describes the steps required to replace the battery on a Lenovo YOGA 730-15IKB.

Written By: Mathew Shaham



This document was generated on 2020-04-06 08:54:38 AM (MST).

INTRODUCTION


Follow this guide to replace or remove the battery in your Lenovo YOGA 730-15IKB. The battery powers the computer when the charger is not plugged in. It is a wise idea to unplug the battery before touching any component inside the computer to avoid hurting the laptop or yourself.

If your computer is running out of battery quickly or will not power on when it is not plugged in, you might need to replace your battery. See the [troubleshooting page](#) for more advice.

TOOLS:

- [T5 Torx Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)
- [Phillips #1 Screwdriver \(1\)](#)

Step 1 — Bottom Cover

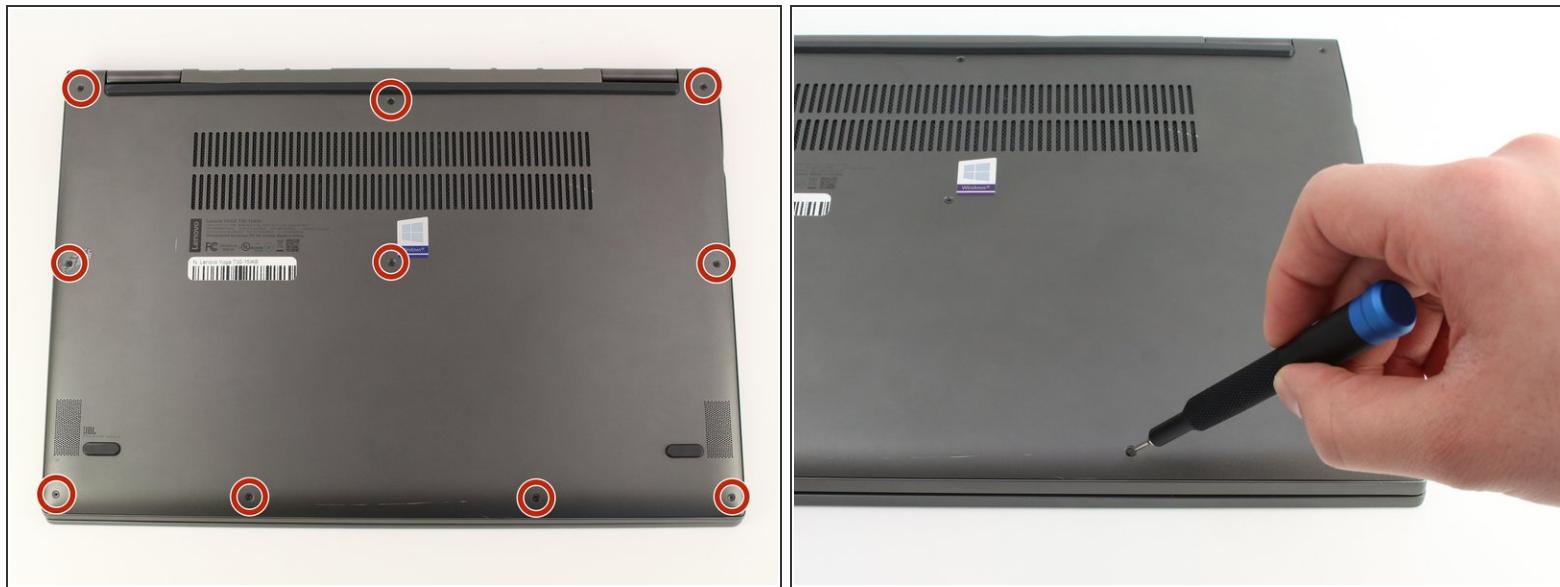

⚠ Turn off the computer and unplug the charger before going any further.

- Flip the laptop over so you can see the underside.
- Remove ten 7mm T5 Torx screws.

Step 2




- Pry up the bottom cover with an opening tool.
- Start at the front edge of the cover and make your way along the sides.

Step 3



- Pull the bottom cover up and away from the back hinges.


Step 4 — Battery

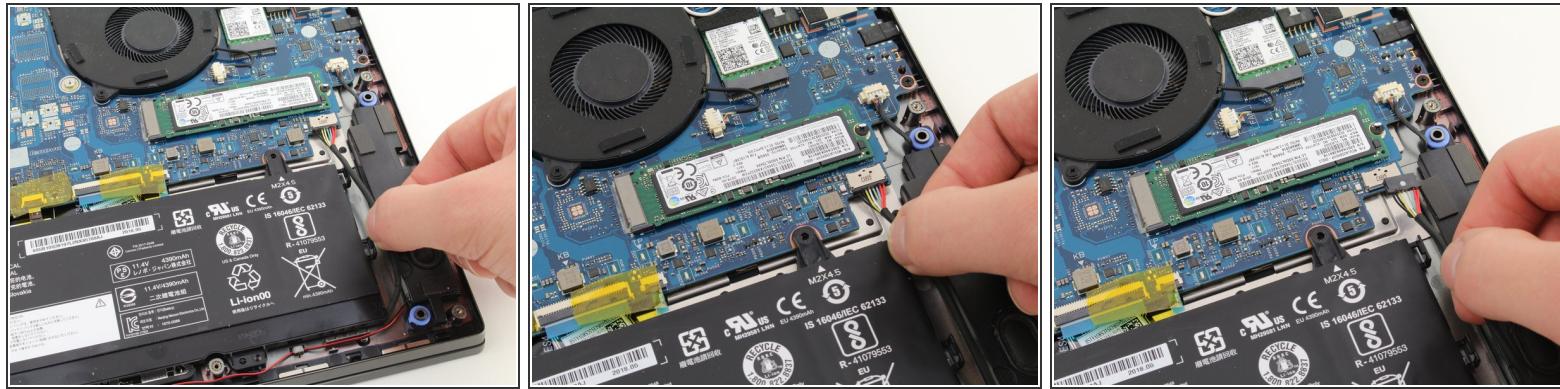

- Remove the battery connector by tugging and wiggling the battery wire using your fingers or a pair of tweezers.

⚠ Unplug the cable gently as the eight wires on the connector are very small and delicate.

Step 5

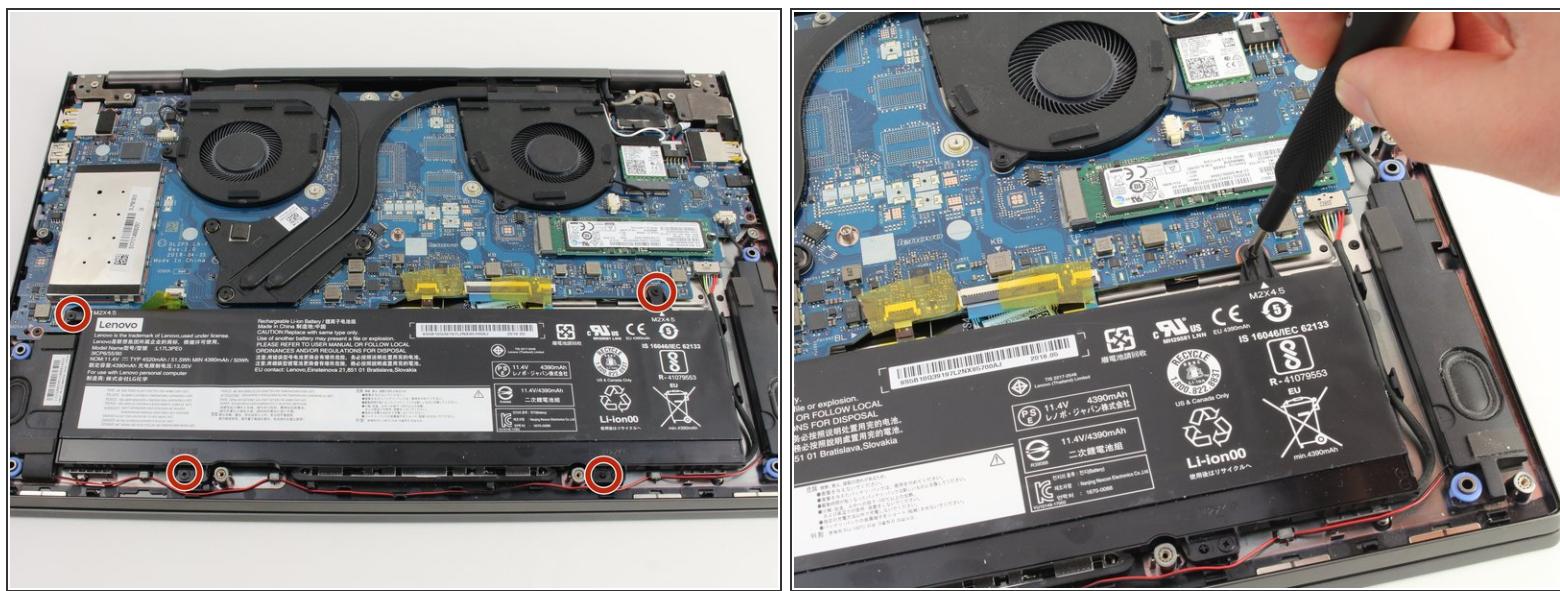

- Remove four 4mm Phillips #1 screws.

Step 6



- Pull the battery up and out of the chassis.



Handle the battery carefully.

Touching the terminal may cause electric shock. Puncturing the battery may cause it to catch fire.

To reassemble your device, follow these instructions in reverse order.