




Lenovo Yoga Tab 3 10 Battery Replacement

Use this guide to replace the battery.

Written By: Phanudej

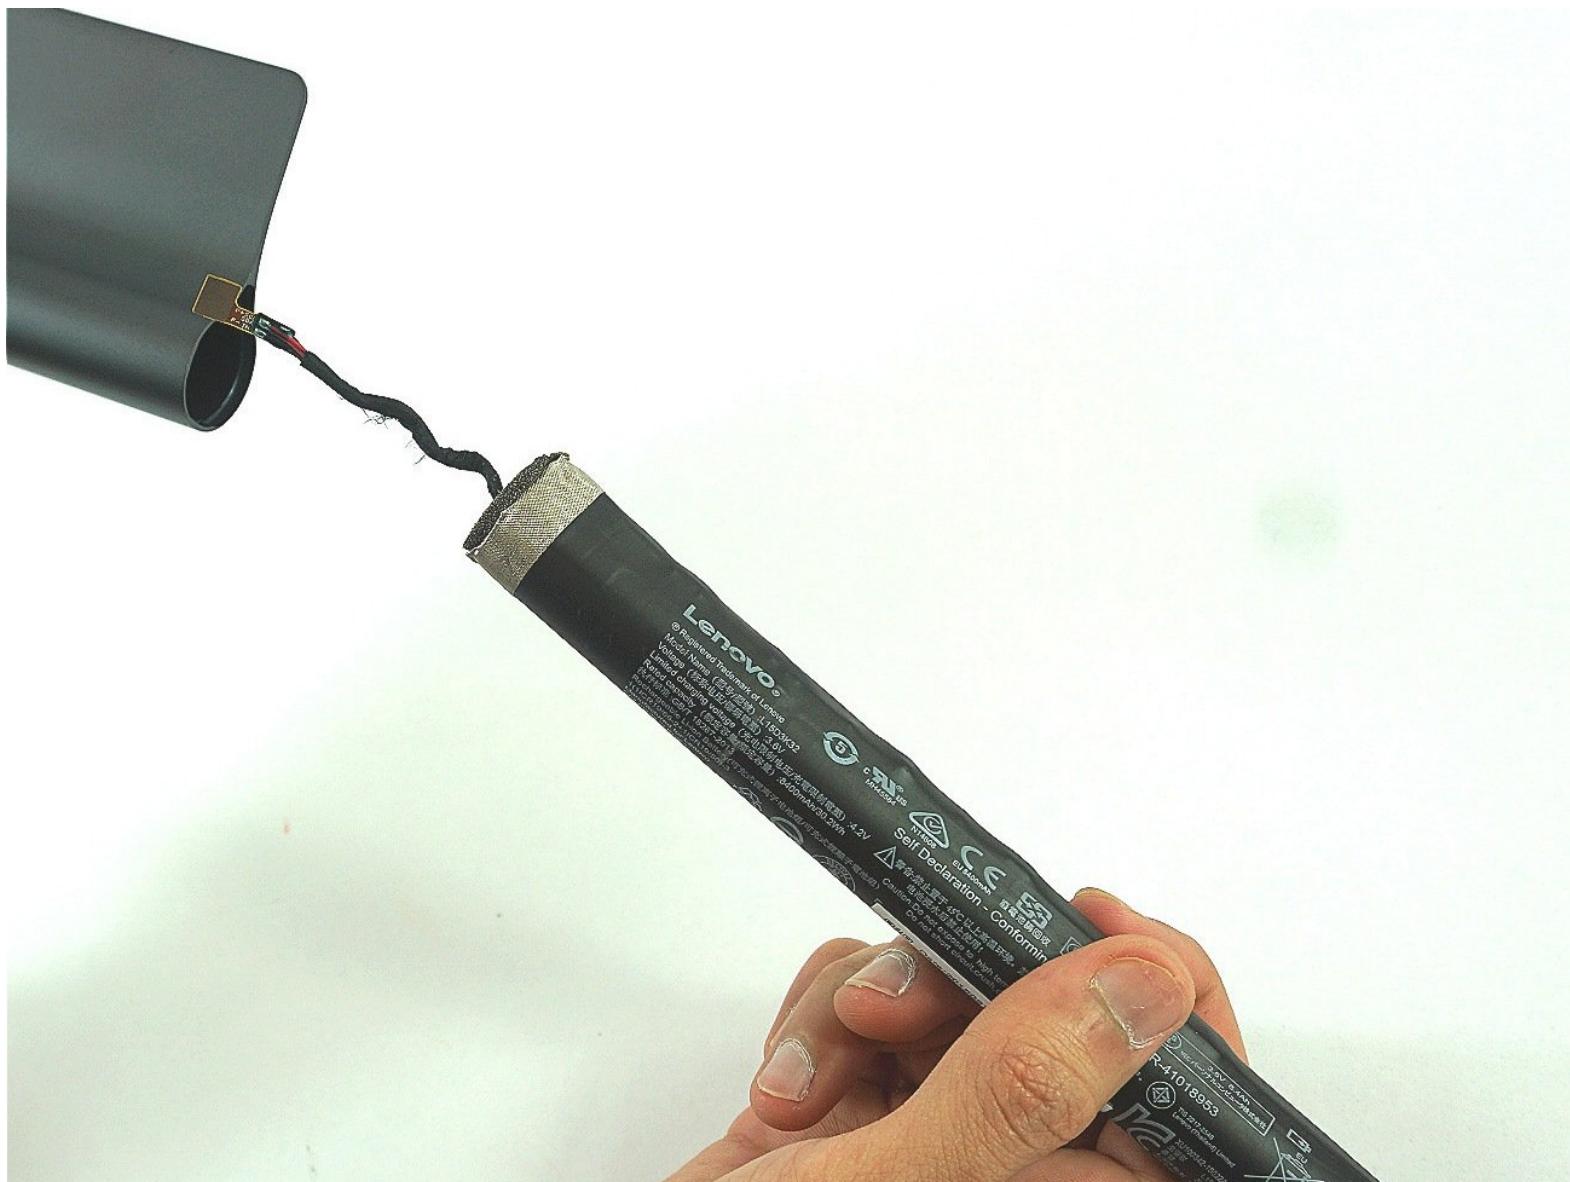

 **TOOLS:**

- **Tweezers** (1)
- **Phillips #000 Screwdriver** (1)

Step 1 — Back Cover



- Open the built-in kickstand.

Step 2




- Remove the sticker located directly under the the built-in kickstand to reveal two 0.75 mm screws.
- Remove the microSD card slot cover. Remove any microSD card (if inserted).
- Using a Phillips head screwdriver, remove the three 0.75 mm screws.

Step 3




- Orient the device so the screen is facing you.
- Carefully insert the spudger along the seam between the screen and back cover and gently separate the back cover from the device frame.
- Continue to detach the backplate from the frame by moving the spudger around the perimeter.
- *(i)* Some force will be required to detach the small plastic braces securing the backplate to the device.

Step 4 — Battery

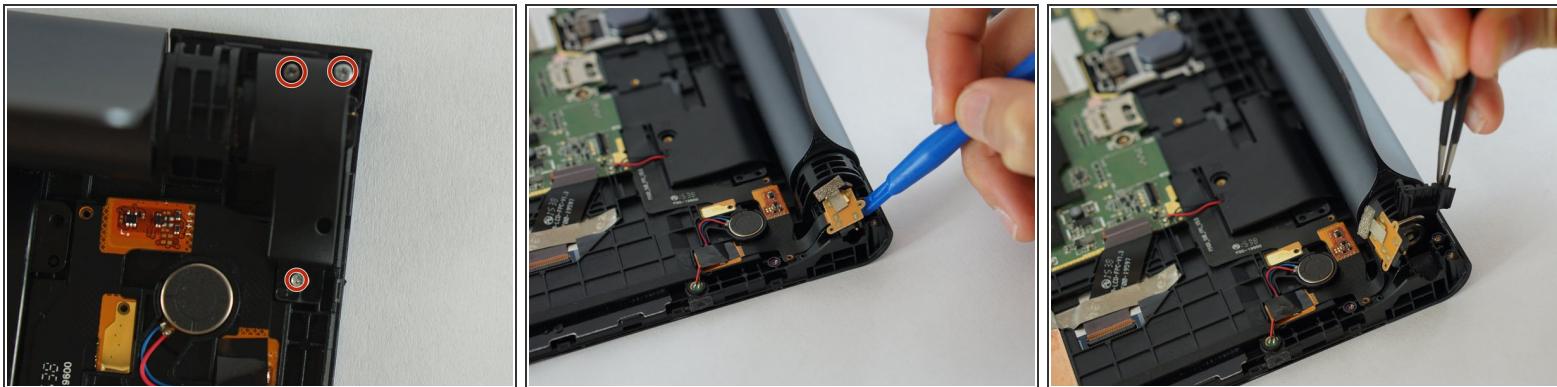

- Remove the 3 screws in the auxiliary port cover and lift the plastic piece.
- Carefully pull back the auxiliary module to move it out of the way.
- Remove the plastic block in front of the hinge.

Step 5

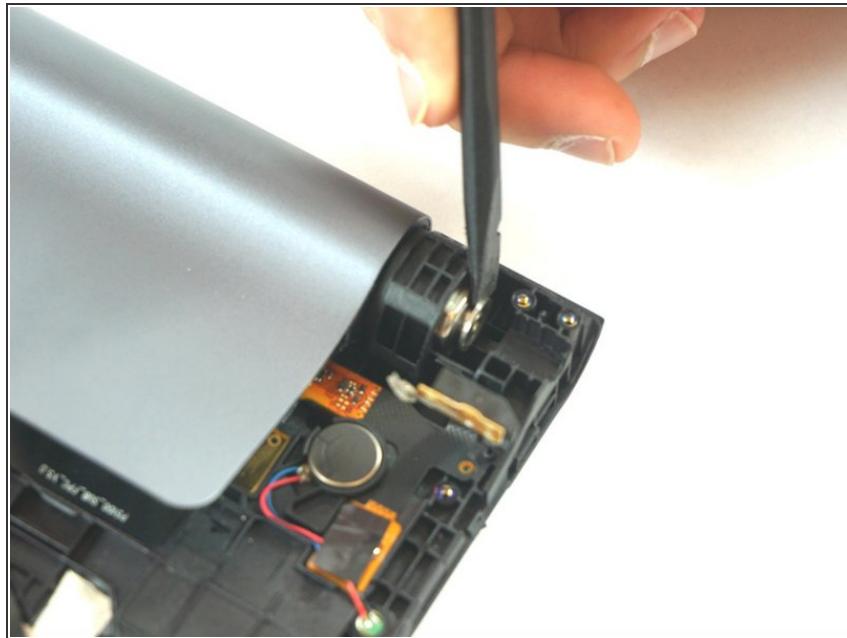


- Use a spudger to pry the locking mechanism.

Step 6



- Lift and pull to detach the battery compartment.

Step 7

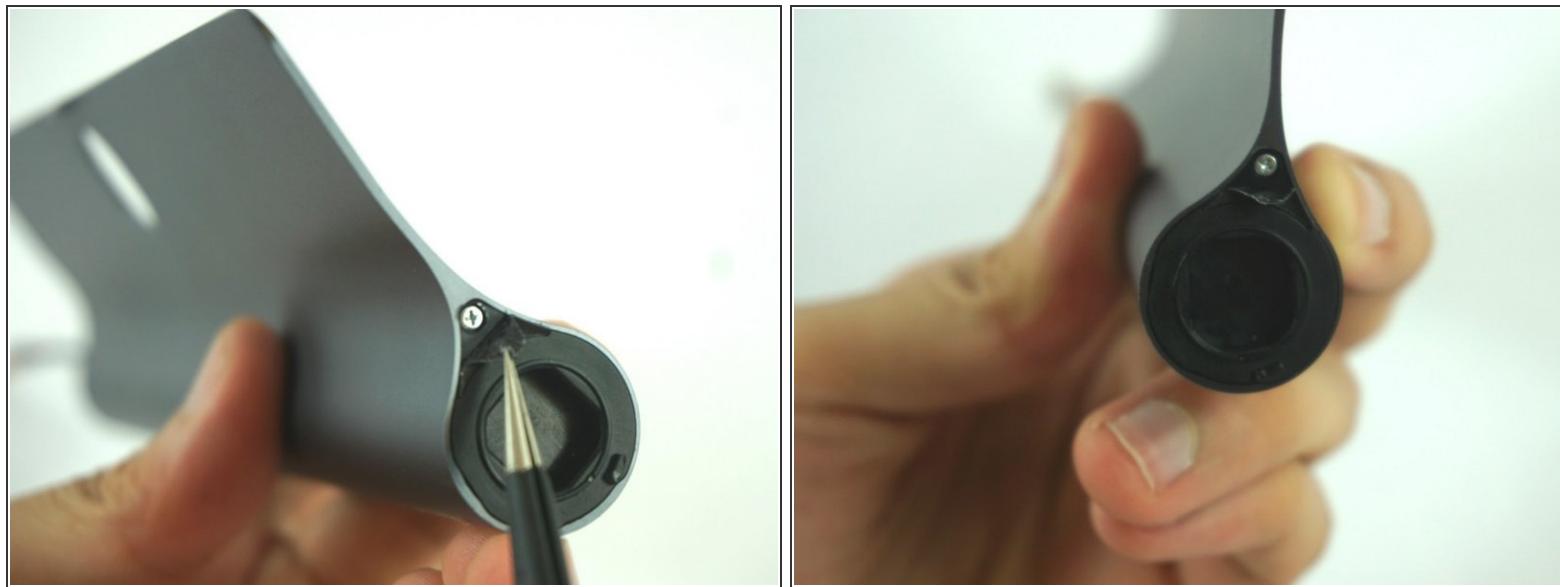

- Use tweezers to lift the tape covering the screw.
- *i* If using sharp-ended tweezers, try to avoid damaging the thin tape material.

Step 8



- Use a small phillips-head screwdriver to remove the screw.

Step 9



- Open the cover and remove the battery.
- ⓘ Pay careful attention to the battery's cable located on the opposite side during removal.

To reassemble your device, follow these instructions in reverse order.