



Written By: Andrew Mercier



# INTRODUCTION

As this replacement guide works on an internal component of the Xoom Wifi, completion of prior steps to remove external parts is necessary.



## TOOLS:

- [T5 Torx Screwdriver](#) (1)
  - [T6 Torx Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-


## Step 1 — Back Cover Disassembly



- There are two 6.6 mm screws that hold ports into place as well as the back panel. Remove these with a T5 Torx screwdriver.




## Step 2

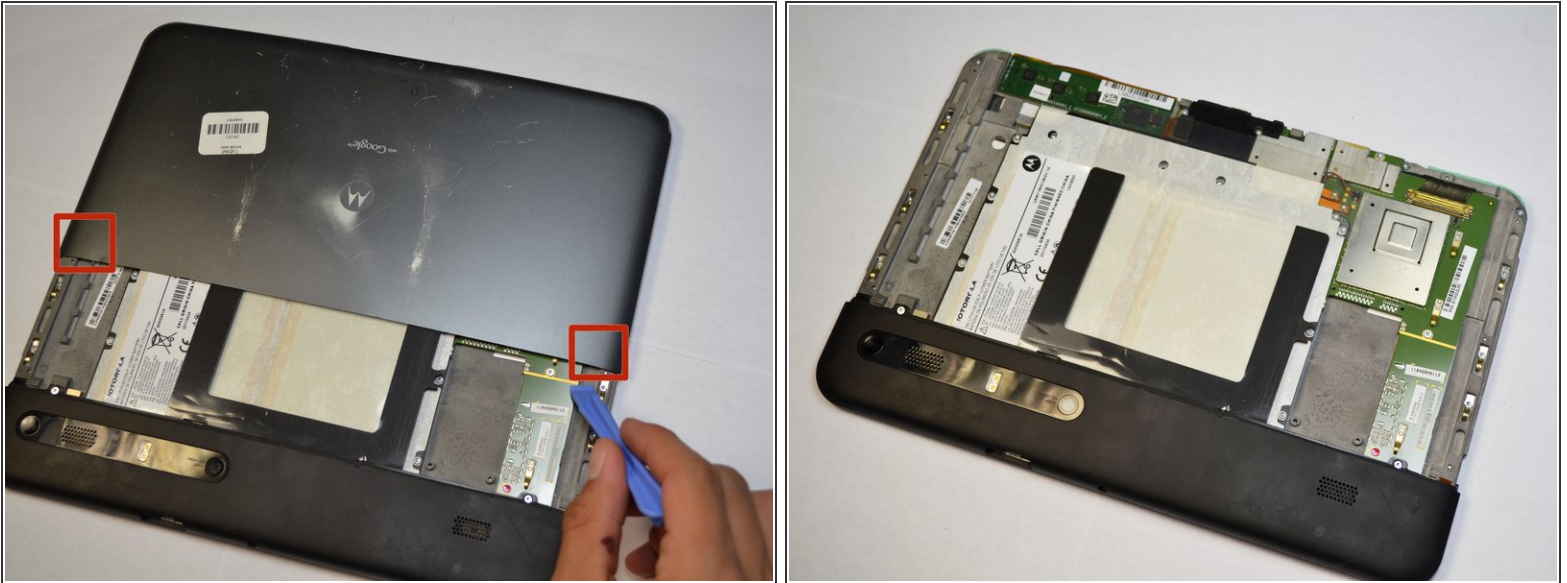



- Apply light pressure with hand and slide the back plate till it stops in this position.
- There is a flex clip on both sides that need to be pushed down in order for the plate to slide off completely. Use a plastic opening tool to release the flex clips. They are located under the back cover near the sides.
- As soon as the clips are released the back should slide off.

## Step 3

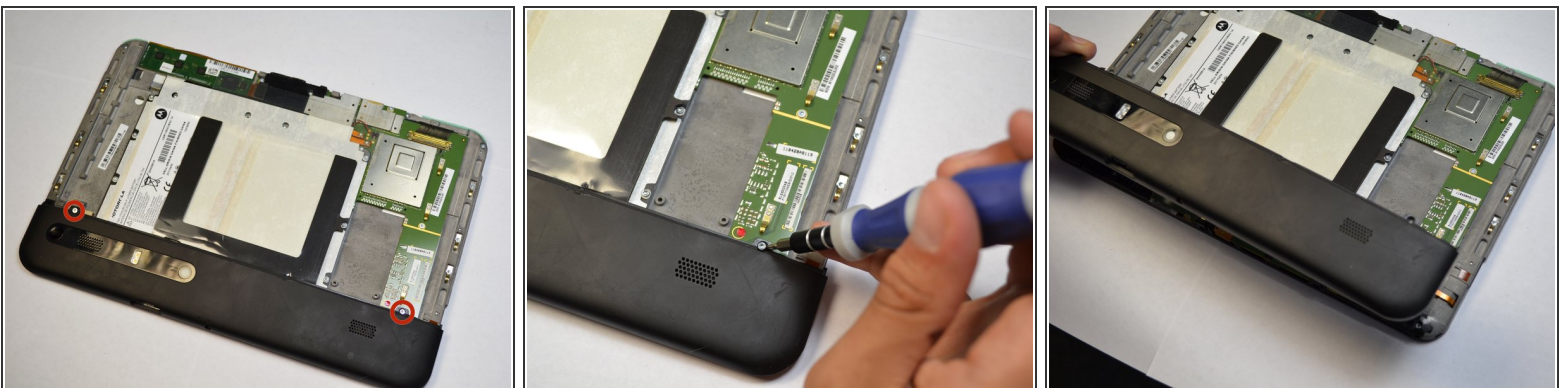



- Remove last two 4.2 mm screws from the remaining back piece with a T5 Torx screwdriver.
- Once both screws are taken out, lift the rest of the backing out of the way.

## Step 4 — Battery

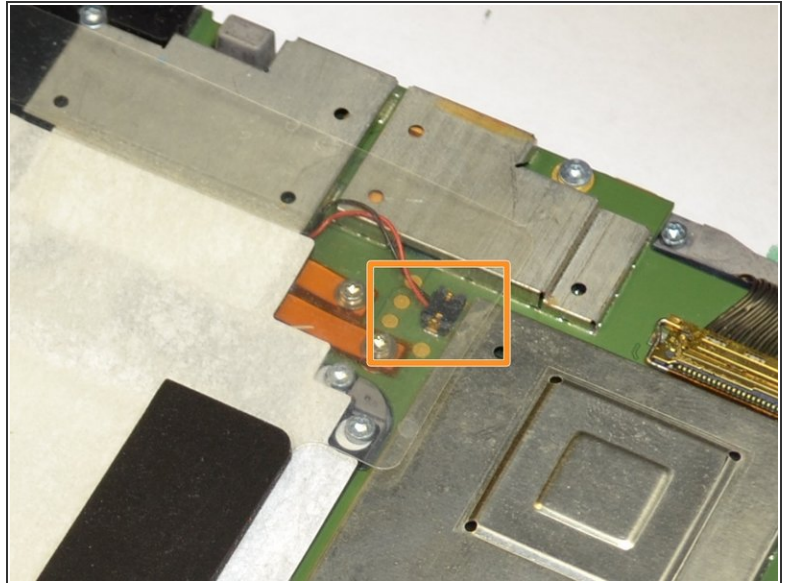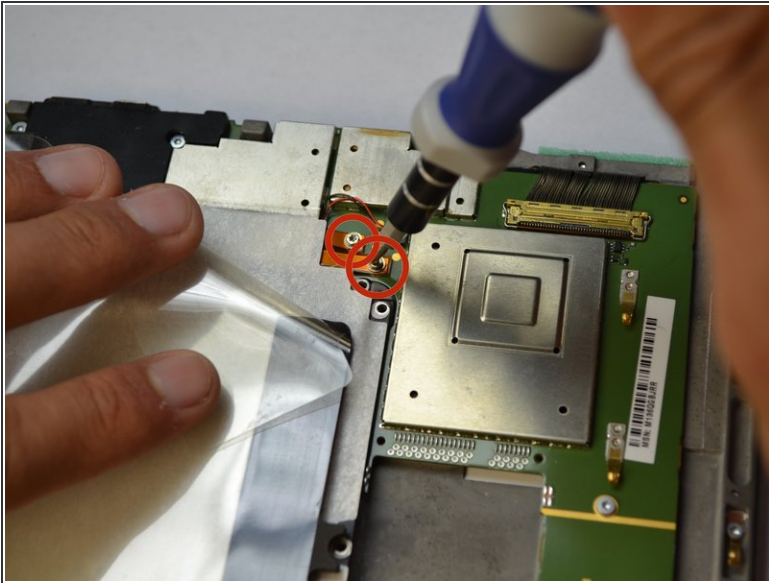

- Remove the two battery leads with a T-5 Torx screwdriver.
- Grab the red and black wires with your fingers and gently lift to disconnect black wire connector from the motherboard.

## Step 5

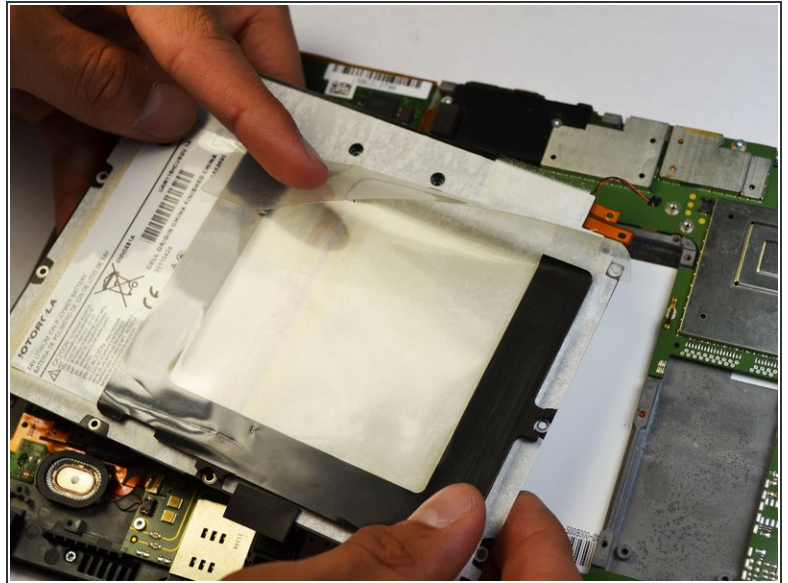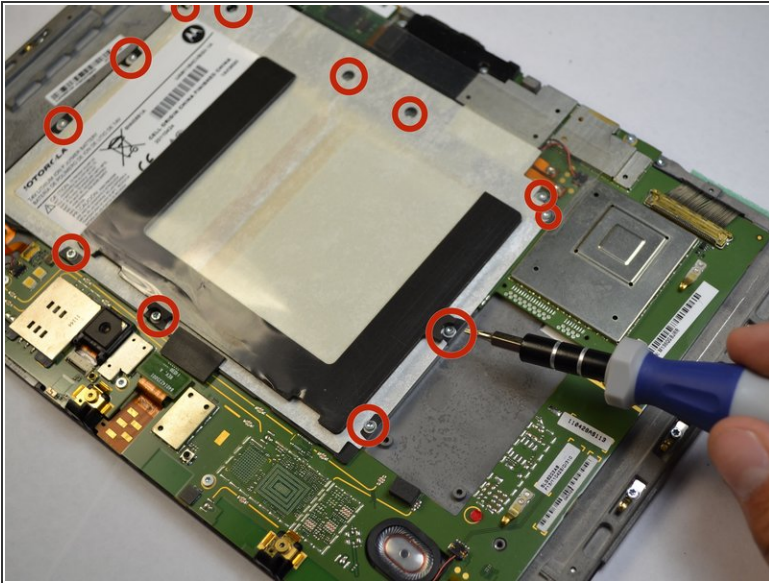

- All that holds the battery in are twelve screws. Remove them with a T-6 Torx screwdriver.
- The battery should lift out easily.

To reassemble your device, follow these instructions in reverse order.