




# Sonos Connect Bottom Motherboard Replacement

This guide will show the necessary steps to replace the bottom motherboard.

Written By: Clark Snyder

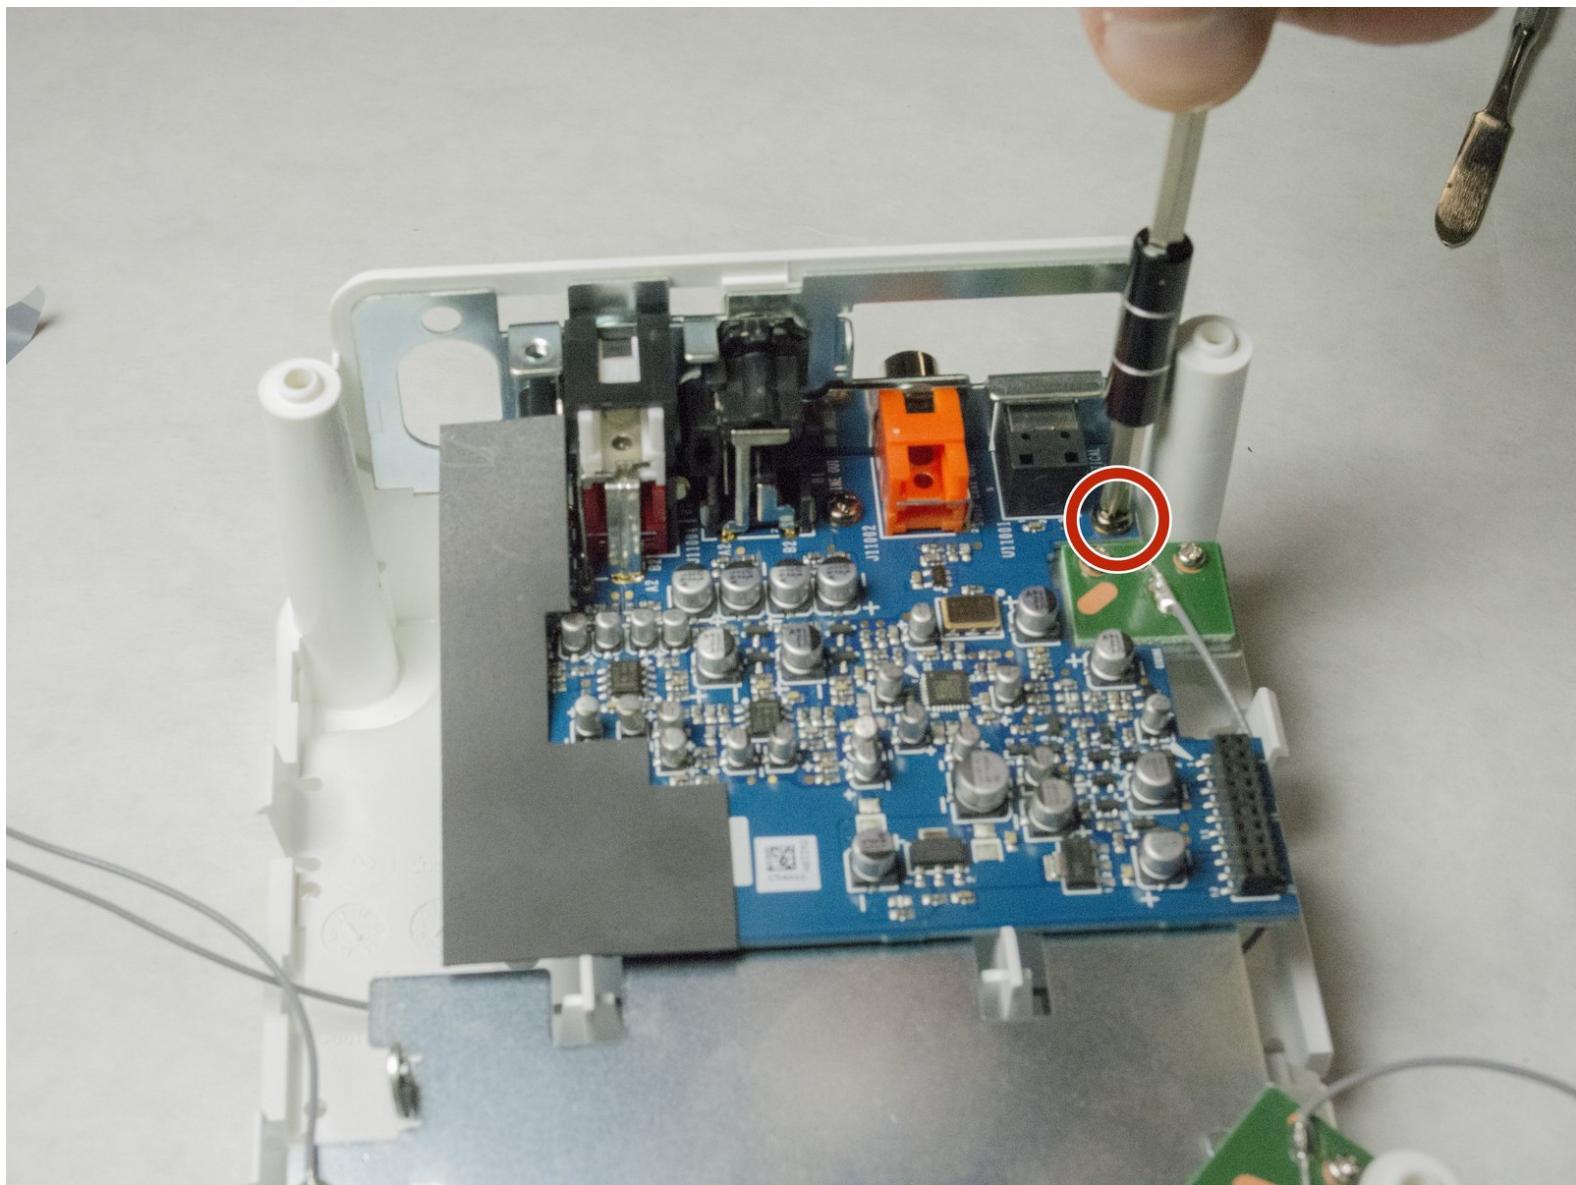

## INTRODUCTION

There are two boards for the device, a green top level and a blue lower level. This guide will show the steps to replace the bottom motherboard.

Metal spudgers and similar pry tools can puncture an unprotected battery, potentially causing a fire. When working with electronics, it's important to choose a tool that's ESD-safe to avoid accidental damage to the device. The metal spudger is great when you need serious prying power, but the regular black nylon spudger or a plastic opening tool should be used whenever possible.

## TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [Spudger](#) (1)
- [Screwdriver](#) (1)
- [Phillips #1 Screwdriver](#) (1)

## Step 1 — WIFI Card



- Start by using a spudger or plastic opening tool to remove the bottom cover.

⚠ When working with electronics, it's important to choose a tool that's ESD-safe to avoid accidental damage to the device. The regular black nylon spudger or a plastic opening tool should be used whenever possible.


- Once enough of the glue is removed, peel the cover off by hand,

## Step 2



- Remove the four 7.5mm length Philips head screws under the rubber cover.

## Step 3

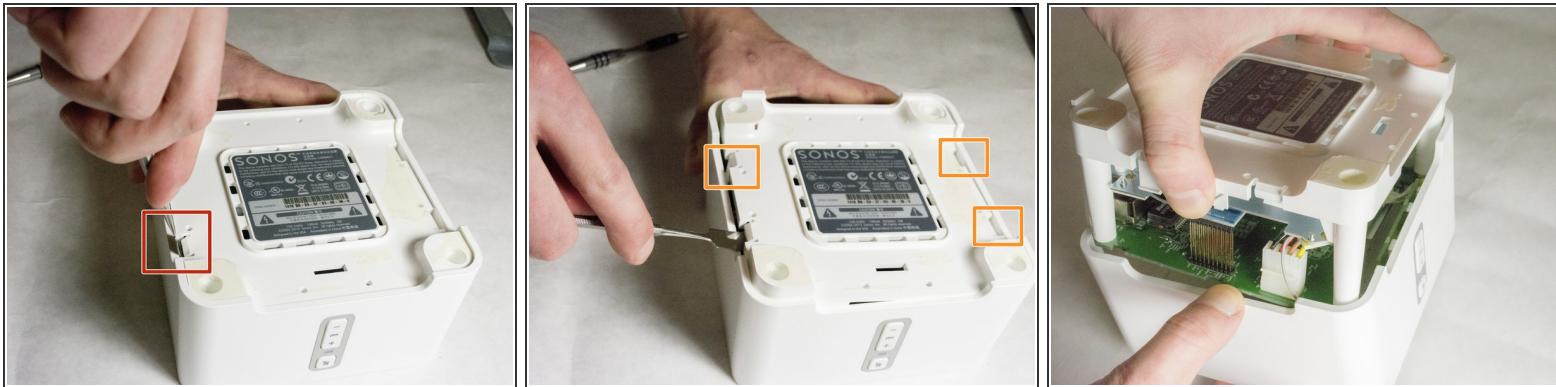


- Use a nylon spudger to unsnap the bottom from the sides.
- Pry until the remaining three points are unsnapped.
- Once unsnapped, lift the cover.

## Step 4




- Remove the connection for the front buttons to fully remove the cover.

## Step 5

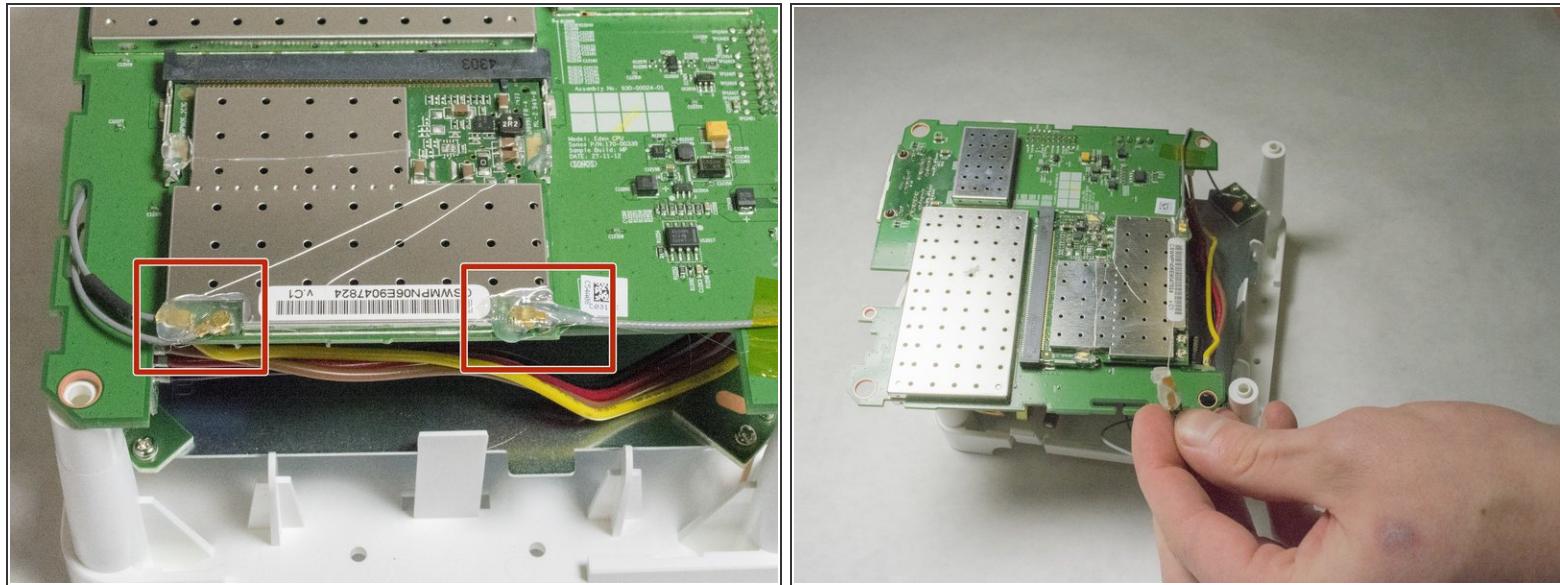


- Use a plastic opening tool or spudger to remove the adhesive covering the the WIFI connectors.
- Gently pull the wires at the connection point to disconnect them from the motherboard.

## Step 6

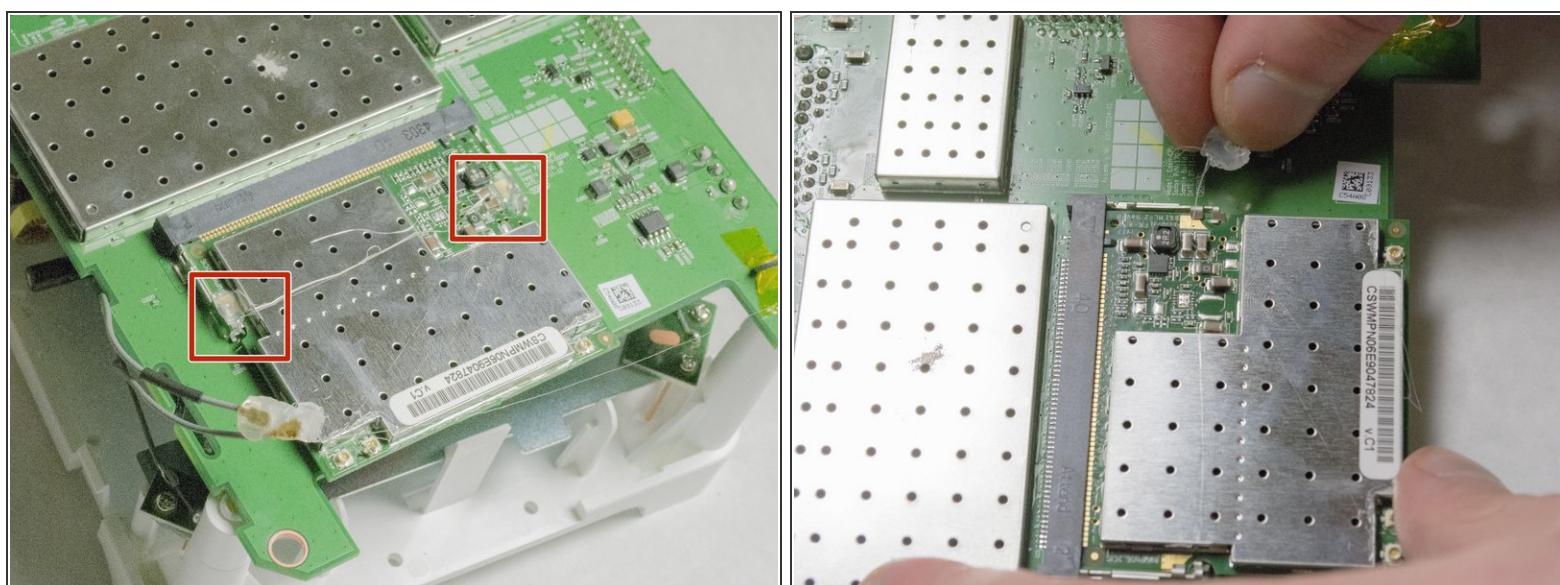

- Remove the two pieces of glue holding the WIFI card in place.


## Step 7

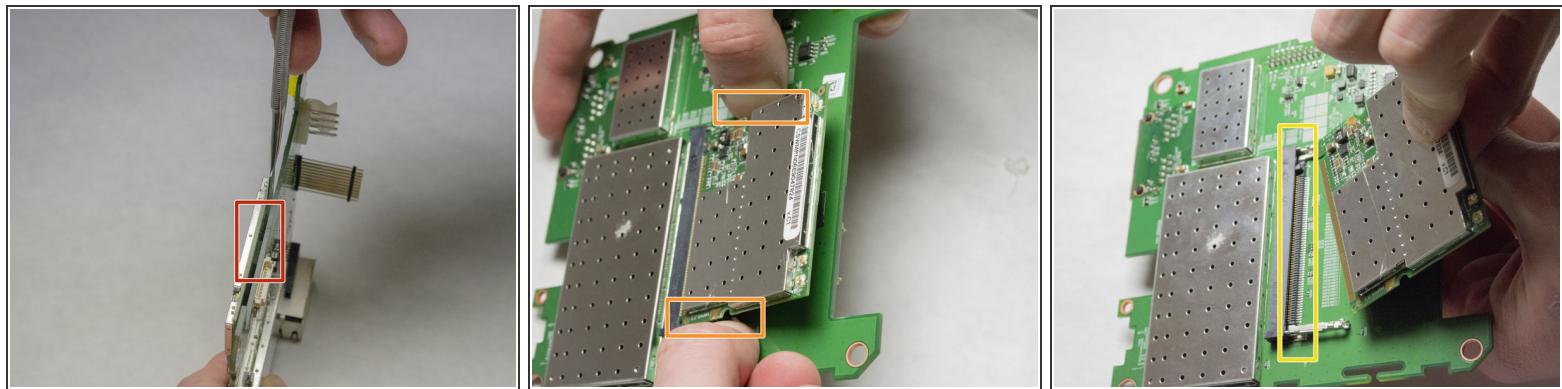

- Scrape the glued pad underneath the WIFI card to separate the card from the board.
- Push apart the two clips holding the WIFI card in the connection.
- Pull the WIFI card out of the connection.


When putting the new WIFI card in, put the card in the connector first, then push downward until it clicks.

## Step 8 — Top Motherboard

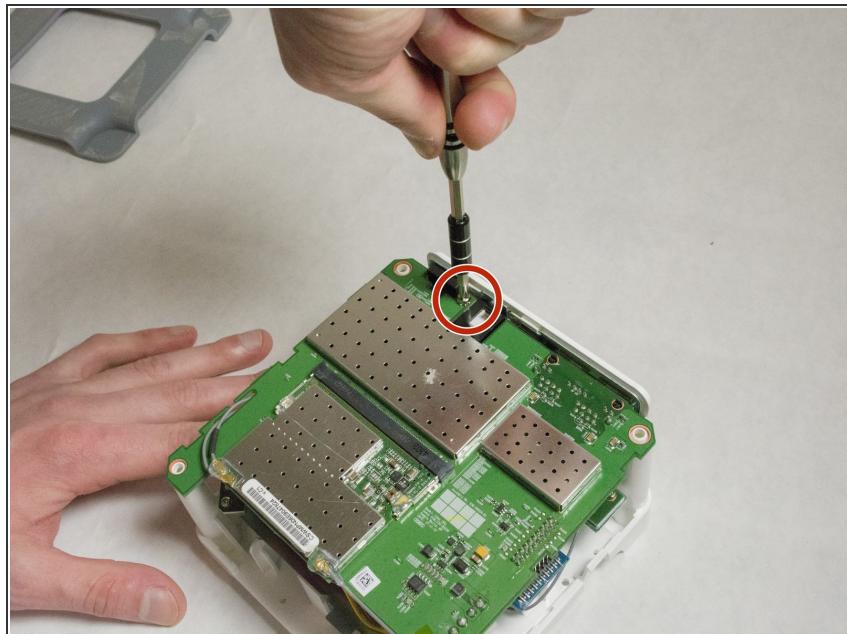


- Remove the 7mm length Phillips screw holding the board in place.

## Step 9

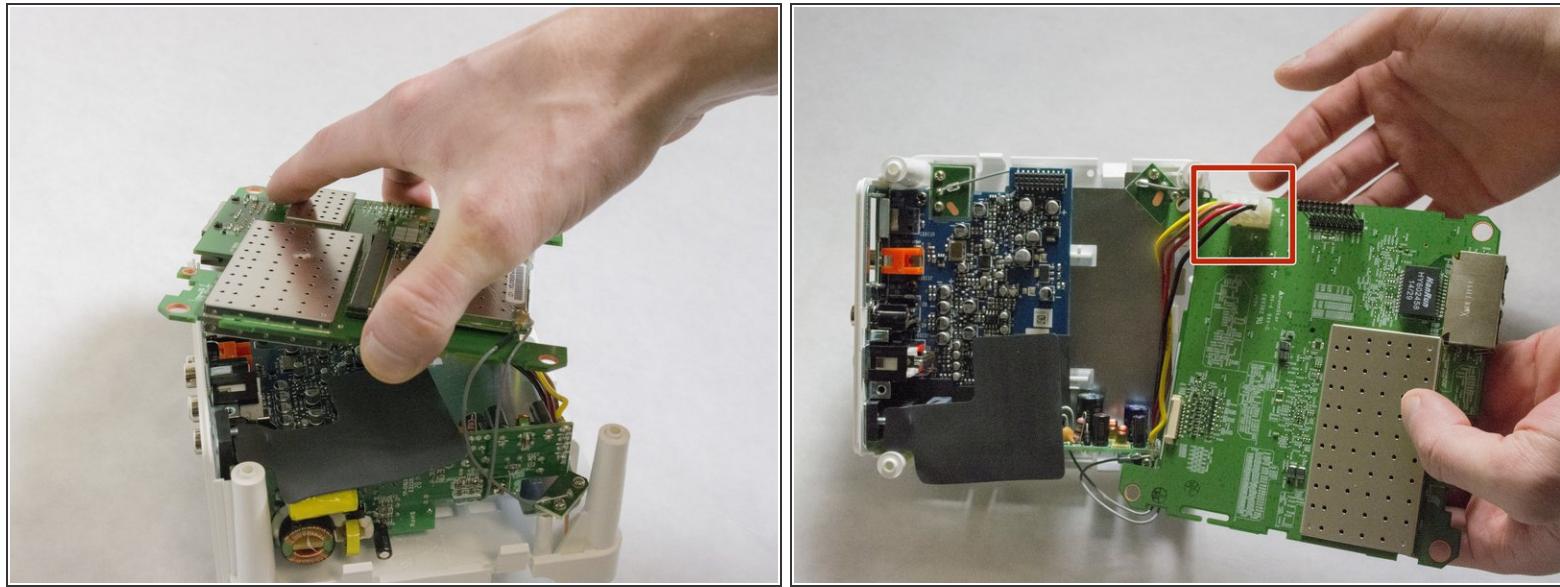



- Flip the board over to access the Molex Cable.

## Step 10

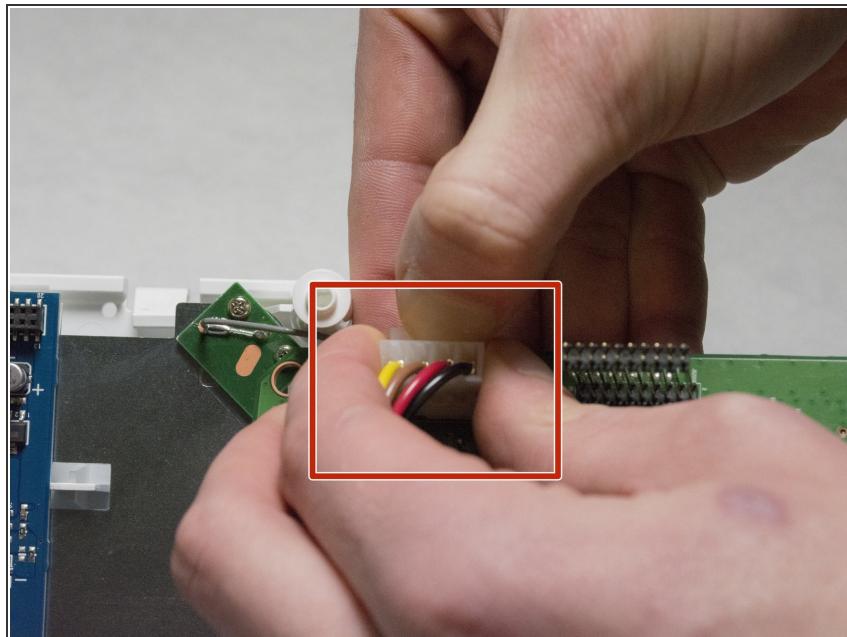



- Disconnect the Molex Cable from the top motherboard.

## Step 11 — Internal Power Supply

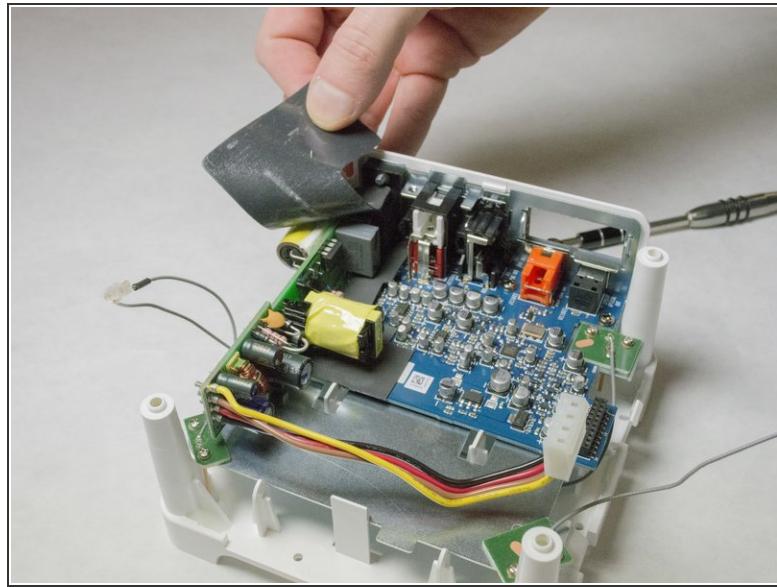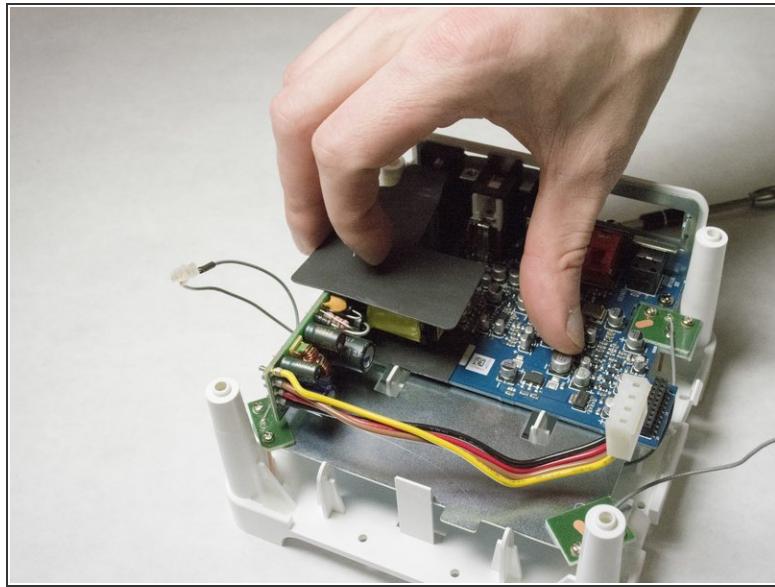

- Remove foam protective insulator from the bottom board.

## Step 12

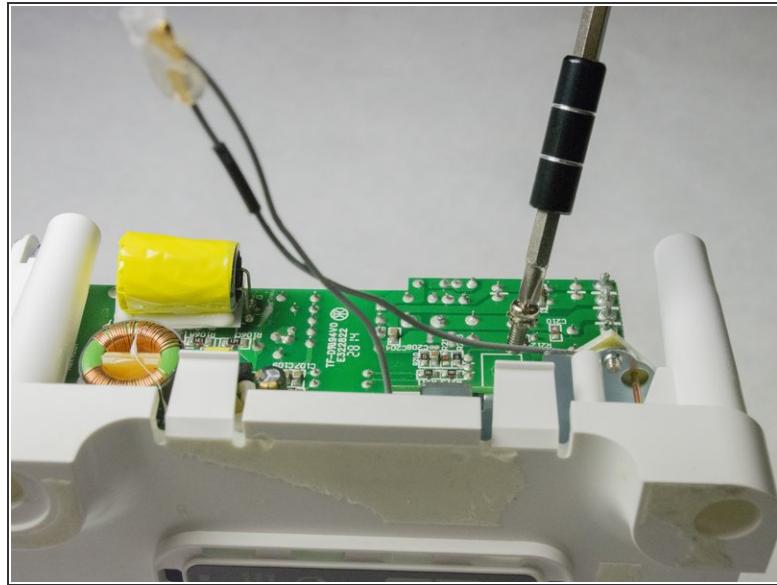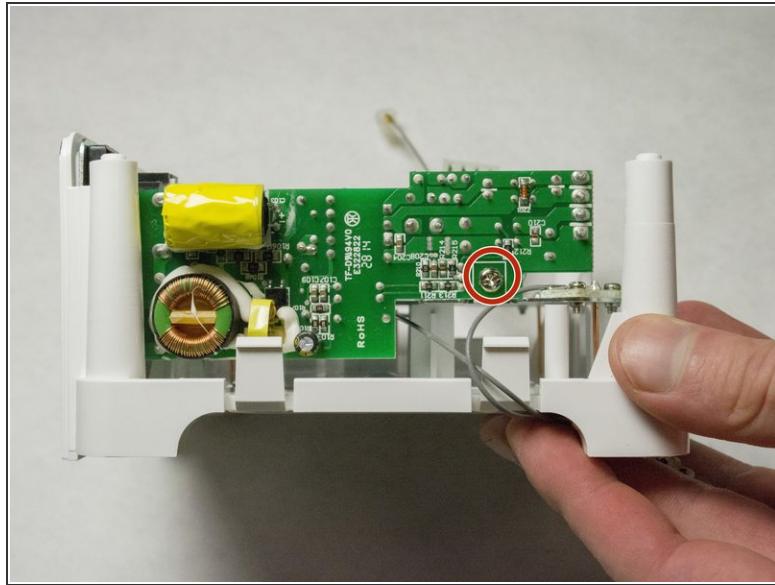


- Picture shows the side of the device.
- Remove the 7mm length Phillips screw from the power supply motherboard.

## Step 13





- Remove the adhesive backed rear label by using a spudger.
- Remove the two 8mm length screws as shown.

## Step 14

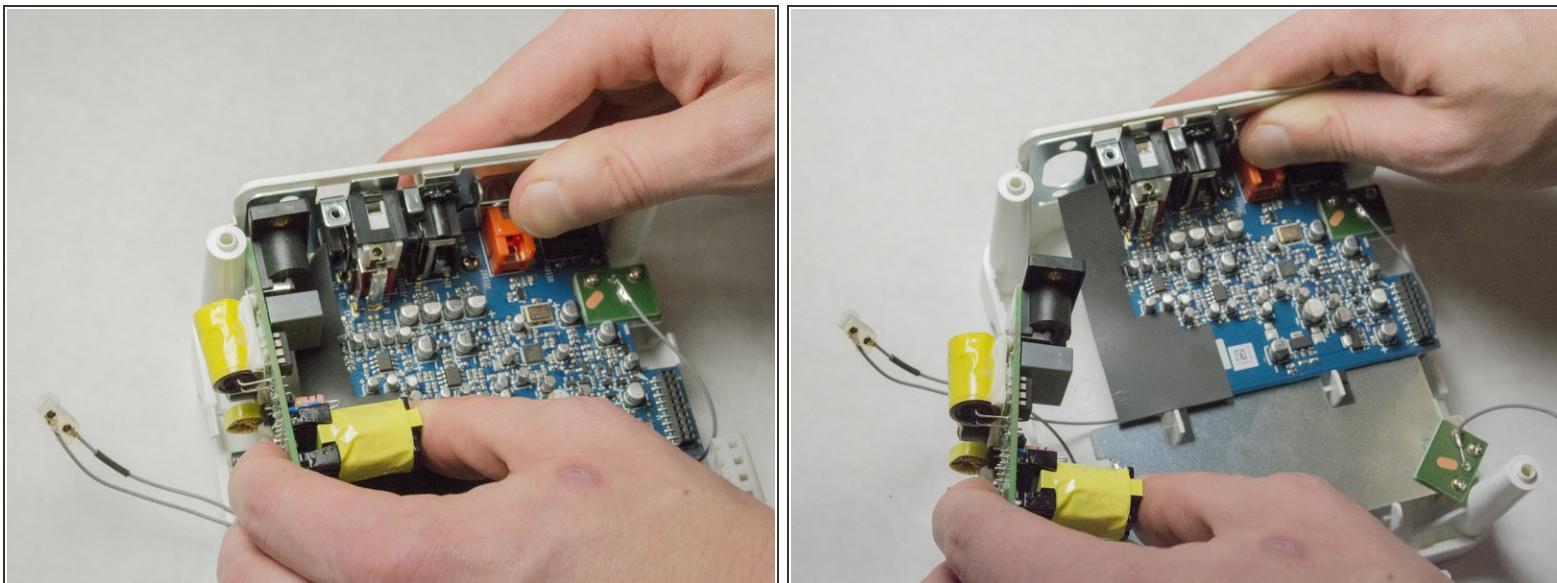

- Pull the power supply out of the back of the device.

## Step 15 — Bottom Motherboard

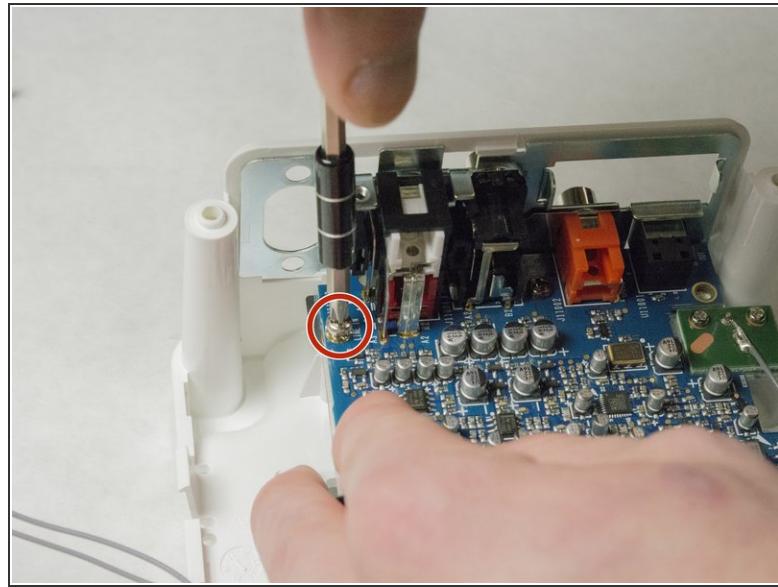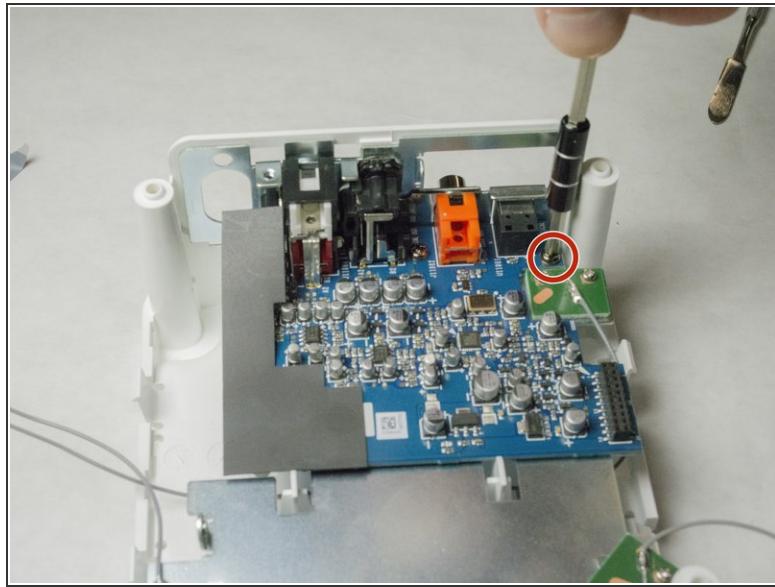

- Remove the two 7.5mm length screws on the top of the board.


## Step 16



- Remove the other two 8mm length screws on the back of the device. You might have already removed

the screws for the power supply,  
and that's OK!

## Step 17

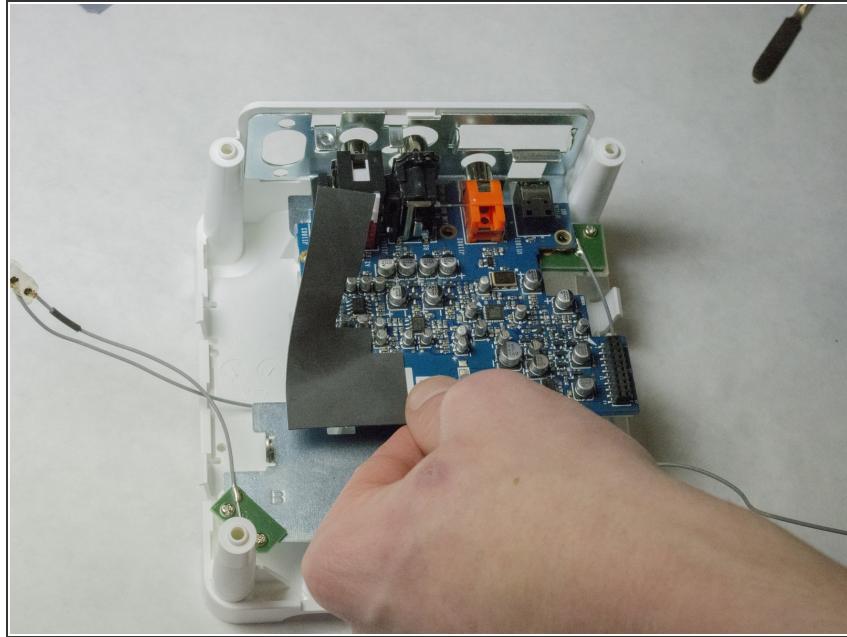

- Slide the board out from the plastic casing.

***i*** You must pull the board out from back to front, because of the plugs on the back of the board.

To reassemble your device, follow these instructions in reverse order.