




Waring 51BL29 Motor Replacement

In this guide you will learn how to replace your burnt out motor.

Written By: Dean Becker

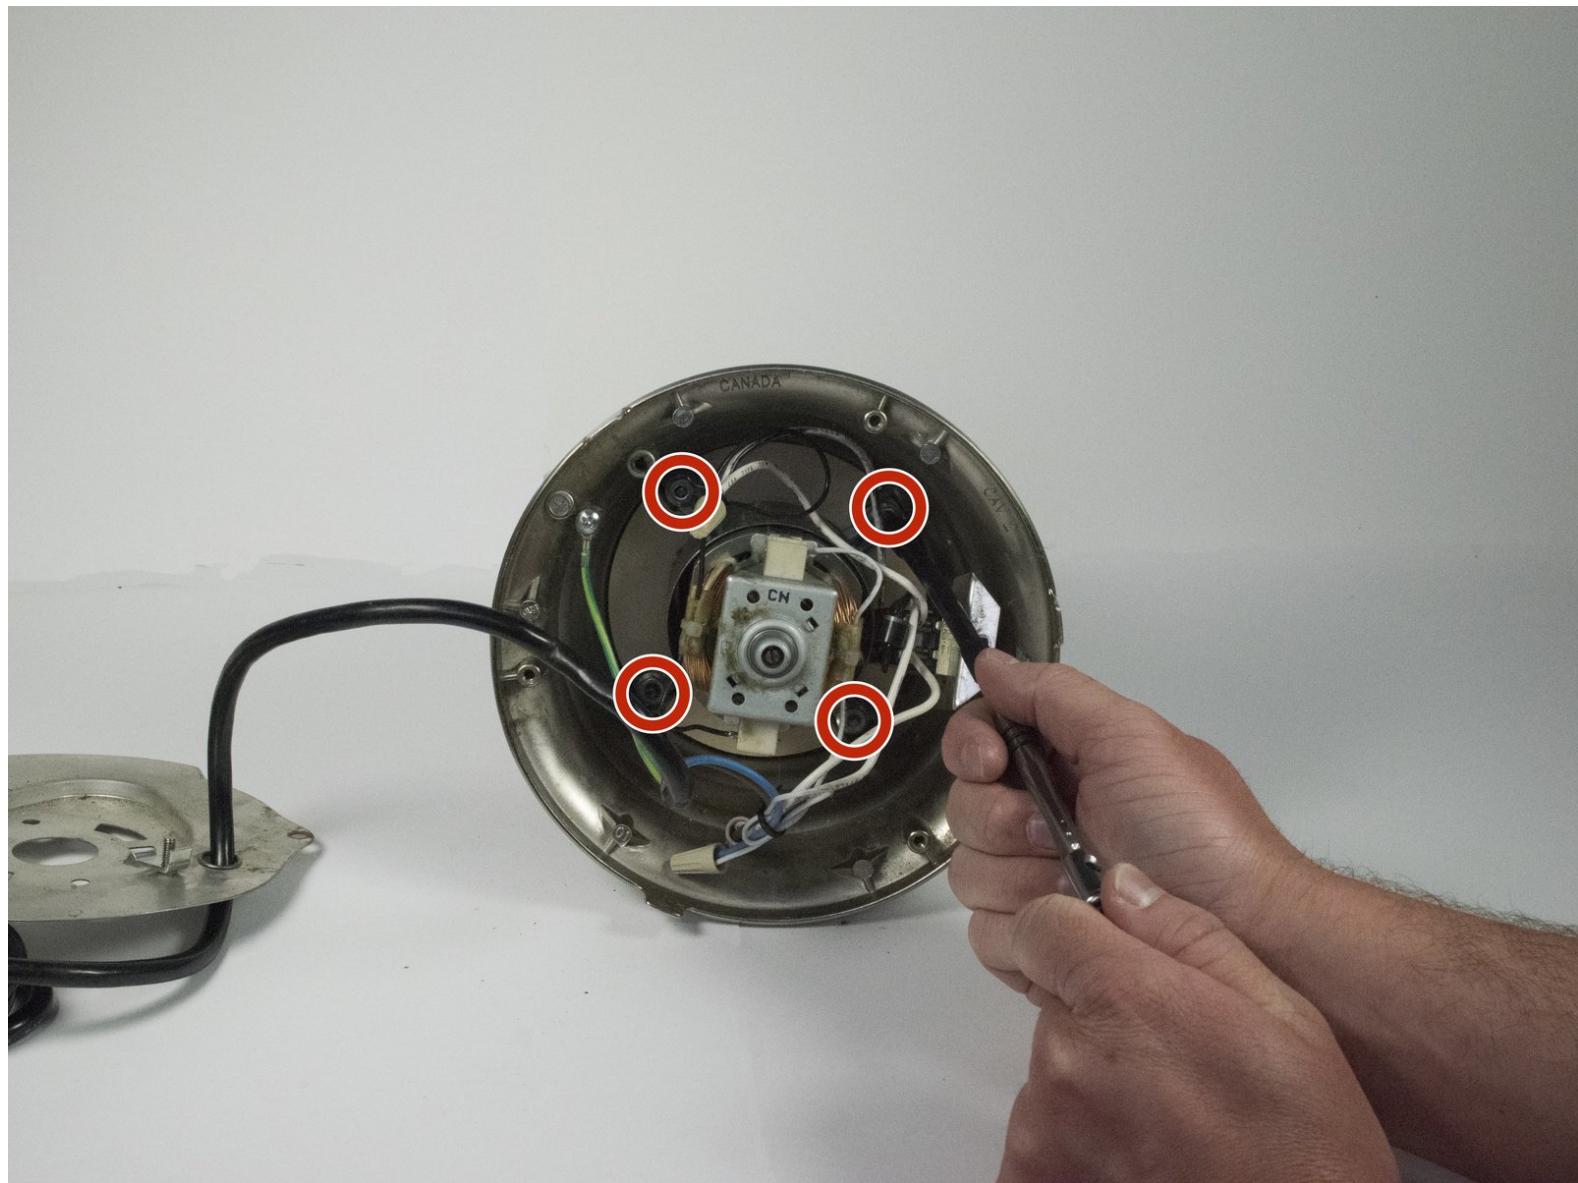


INTRODUCTION

The motor is the main component of the blender underneath the bottom plate. This guide will walk you through how to remove it step-by-step.

TOOLS:

- Flathead Screwdriver (1)
- Phillips Head Screwdriver: Size PH1 (1)
- Socket 9mm (1)
- Socket Wrench Extension, 3/8" Drive (1)

Step 1 — Bottom Panel

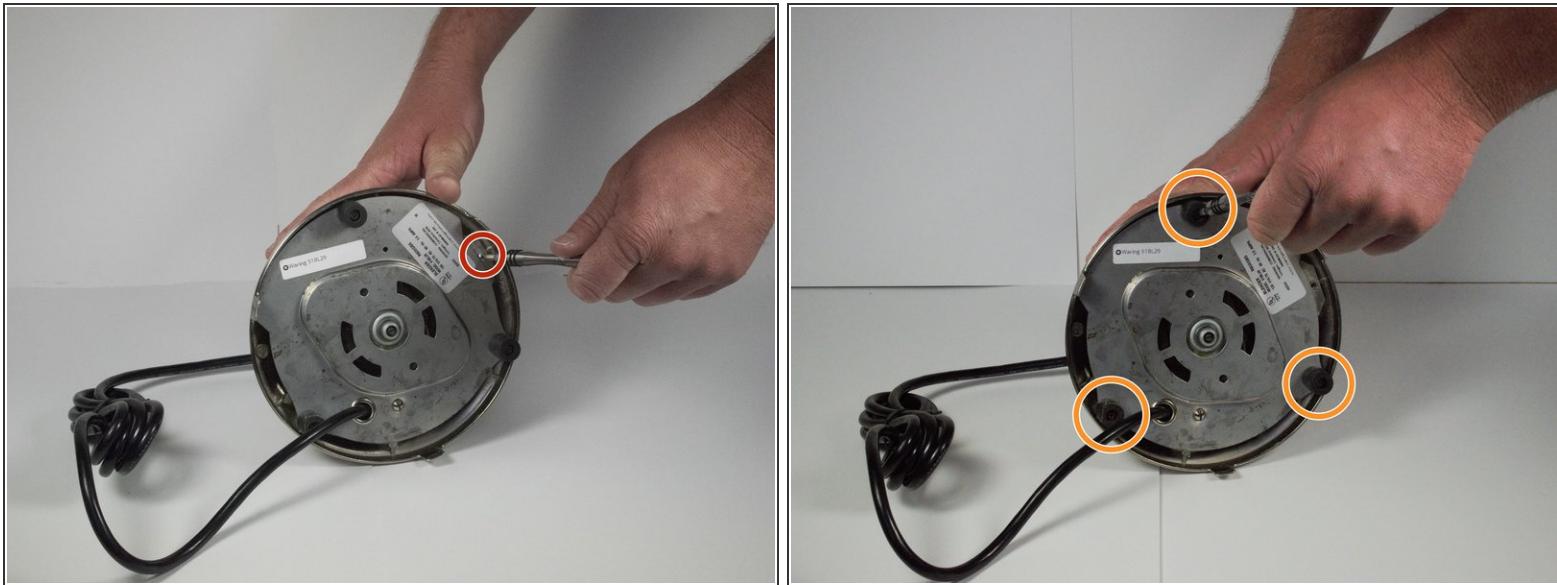

- Turn the blender on its side so the bottom panel is facing you.
- Unscrew the 22mm Phillips #1 screw on the indent of the panel.
- Unscrew the 3 screws in the rubber holes.

Step 2



- Remove the bottom panel.

Step 3 — Drive Coupling



- Place the screwdriver in the head of the middle flat-head screw.

Step 4



- Unscrew this screw while holding the coupling with your other hand and not allowing it to rotate.


⚠ Keep in mind that this screw is reverse threaded so you will have to unscrew it "righty loosey".

Step 5




- Once the coupling mechanism has been loosened all the way, gently pull it off the top of the blender.

Step 6 — Motor

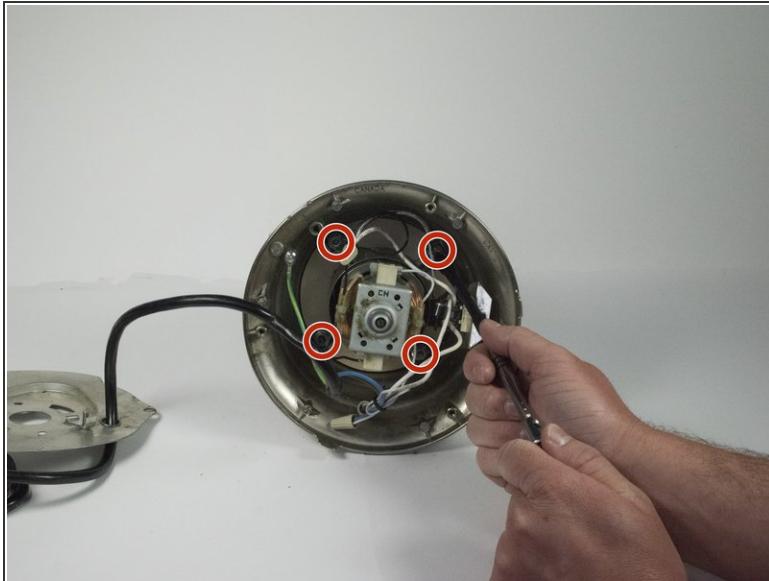

- Unscrew the four nuts in the bottom of the motor cavity.
- Wiggle the motor until it is free and you can remove it.

Step 7

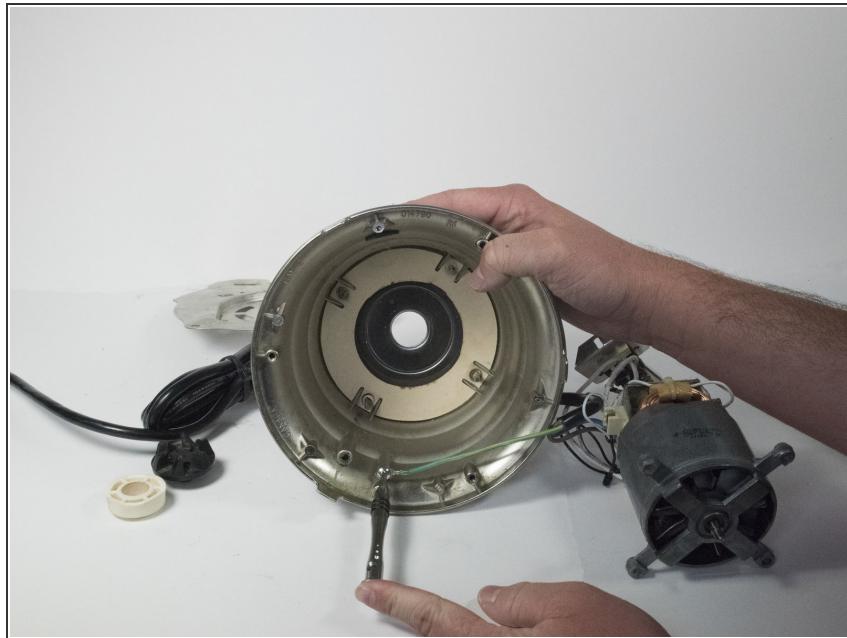

- Once motor is pulled out, unscrew the 8 mm screw for the green wire from the base of the blender.

Step 8



- Unscrew each white wire cap in order to free the motor from the power cord.
- Once wire caps are removed, separate wires carefully.

To reassemble your device, follow these instructions in reverse order.