



# iPhone 4 Volume Button Replacement

Replace the metal portion of the volume buttons on your iPhone 4.

Written By: Walter Galan



## INTRODUCTION

This guide is for replacing the metal portion of the volume buttons, not the electronic switches.

### TOOLS:

- [P2 Pentalobe Screwdriver iPhone \(1\)](#)  
*If iPhone has external Pentalobe screws.*
- [Phillips #000 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)
- [Tweezers \(1\)](#)

### PARTS:

- [iPhone 4 Volume Button \(1\)](#)

## Step 1 — Rear Panel



**⚠** Before you begin, discharge your iPhone battery below 25%. A charged lithium-ion battery can catch fire and/or explode if accidentally punctured.

- Power off your iPhone before beginning disassembly.
- Your iPhone 4 rear cover may have either two #000 Phillips screws or Apple's 5-Point "Pentalobe" screws ([second image](#)). Check which screws you have, and ensure you also have the correct screwdriver in order to remove them.
- Remove the two 3.6 mm Pentalobe or Phillips #000 screws next to the dock connector.
- **(i)** Be sure the driver is well seated when removing Pentalobe screws, they are very easy to strip.

## Step 2



- Push the rear panel toward the top edge of the iPhone.

**(i)** The panel will move about 2 mm.

## Step 3



- Pinch the rear panel with your fingers and lift it away from the iPhone. Alternatively, use a [Small Suction Cup](#).
- ⚠** Be careful not to damage the plastic clips attached to the rear panel.
- 📌** If you are installing a new rear panel, be sure to remove the plastic protective sticker from the inside of the camera lens and the sticker from the large black area near the lens.

## Step 4 — Battery



- Remove the single 2.5 mm Phillips screw securing the battery connector to the logic board.

**i** Some devices may have two screws, one of which holds down the contact pad which is located above the screw indicated in red in the photo.

## Step 5



- Use a plastic opening tool to gently pry the battery connector up from its socket on the logic board.

**i** Pry from the top and bottom of the connector bracket—there isn't as much of an overhang on the sides, and you may damage the connector.

**!** Be very careful to only pry up on the battery connector and not the socket on the logic board. If you pry up on the logic board socket, you may break it entirely.


- Remove the metal clip covering the antenna connector.

## Step 6



- Use the clear plastic pull tab to gently lift the battery out of the iPhone.
- ⚠ If the tab breaks before the battery is freed, carefully slide a spudger under the battery tab to release the adhesive. Prying in other places may cause damage.
- ⓘ If your replacement battery came in a plastic sleeve, remove it before installation by pulling it away from the ribbon cable.
- Before reconnecting the battery connector, be sure the contact clip (shown in red) is properly positioned next to the battery connector.
- ⓘ Before reassembly, clean metal-to-metal contact points with a de-greaser such as windex. The oils from your fingers have the potential to cause wireless interference issues.
- ⓘ Perform a [hard reset](#) after reassembly. This can prevent several issues and simplify troubleshooting.


## Step 7 — Volume Button

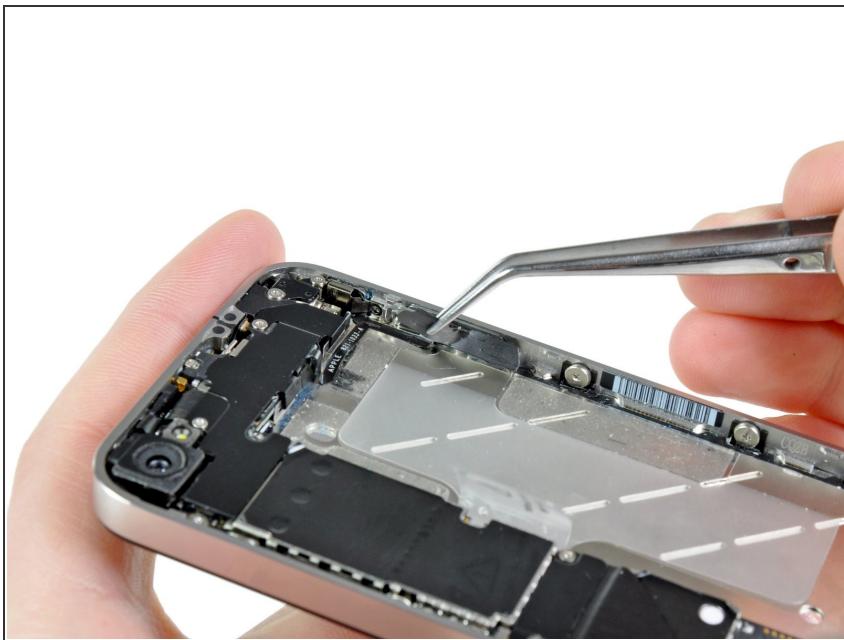

- Use a pair of tweezers to remove the small strip of tape covering the back of the volume buttons.

**⚠** Be sure to peel the tape starting from nearest the top of the phone.

## Step 8

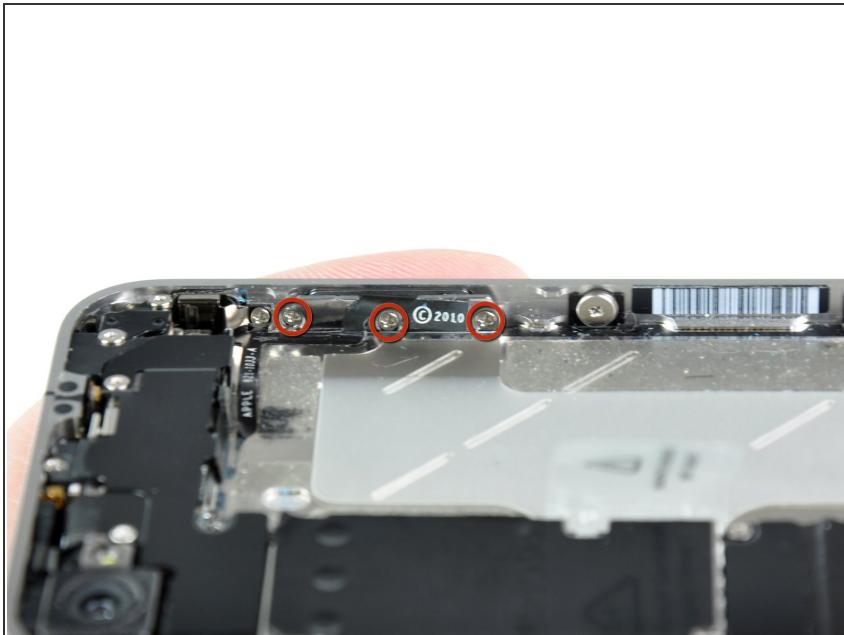

- Remove the three Phillips screws securing the volume button bracket to the outer case.

## Step 9

- Use a pair of tweezers to gently pull the volume button bracket slightly away from the outer case.



## Step 10

- Remove the volume button from the iPhone.



To reassemble your device, follow these instructions in reverse order.