



# iPhone 6 Plus Audio Control and Rocker Switch Buttons Replacement

Replace the Audio Control and Rocker Switch Buttons in your iPhone 6 Plus.

Written By: Walter Galan



## INTRODUCTION

Use this guide to replace the audio control and rocker switch buttons.

This guide requires removing the battery. When reinstalling the battery, refer to [this guide](#) to replace your battery's adhesive strips. The battery is pretty tightly secured in the device, but reinstalling it properly will keep it from rattling.

### TOOLS:

- Spudger (1)
- Tweezers (1)
- P2 Pentalobe Screwdriver iPhone (1)
- iSlack (1)
- iFixit Opening Tools (1)
- Suction Handle (1)
- iOpener (1)
- Plastic Cards (1)
- SIM Card Eject Tool (1)
- Phillips #000 Screwdriver (1)

### PARTS:

- iPhone 6 Plus Case Button Set (1)

## Step 1 — Pentalobe Screws



**⚠** Before disassembling your iPhone, discharge the battery below 25%. A charged lithium-ion battery can catch fire and/or explode if accidentally punctured.

- Power off your iPhone before beginning disassembly.
- Remove the two 3.6 mm P2 Pentalobe screws next to the Lightning connector.

## Step 2 — iSclack Opening Procedure



**i** The next two steps demonstrate using the [iSclack](#), a great tool for safely opening the iPhone 6 Plus that we recommend for anyone doing more than one repair. **If you aren't using the iSclack, skip down two steps.**

- If the plastic depth gauge is attached at the center of the iSclack, remove it now—it's not needed for larger phones like the iPhone 6 Plus.
- Close the handle on the iSclack, opening the suction cup jaws.
- Place the bottom of your iPhone in between the suction cups.

**i** Position the iSclack's upper suction cup against the display, near the home button.

- Open the handles to close the jaws of the iSclack. Center the suction cups and press them firmly onto the top and bottom of the iPhone.

**i** If your display or back glass is badly cracked, [covering it with a layer of clear packing tape](#) may help the suction cups adhere. The iSclack also includes two pieces of tape for this purpose.

## Step 3



- Hold onto your iPhone securely and close the handle of the iSclack to separate the suction cups, pulling the front panel up from the rear case.
- The iSclack is designed to safely open your iPhone enough to separate the pieces, but not enough to damage any of the display cables.
- Peel the two suction cups off your iPhone.
- **Skip the next three steps and continue on to Step 7.**

## Step 4 — Front Panel Assembly



- If you don't have an iSlack, use a single suction cup to lift the front panel:
- Press a suction cup onto the screen, just above the home button.

● **i** Be sure the cup is pressed securely onto the screen to get a tight seal.

● **i** If your display is badly cracked, [covering it with a layer of clear packing tape](#) may allow the suction cup to adhere. Alternatively, very strong tape may be used instead of the suction cup. If all else fails, you can superglue the suction cup to the broken screen.

## Step 5



- While holding the iPhone down with one hand, pull up on the suction cup to slightly separate the front panel assembly from the rear case.
- **⚠** Take your time and apply firm, constant force. The display assembly is a much tighter fit than most devices.
- Using a plastic opening tool, begin to gently pry the rear case down, away from the display assembly, while continuing to pull up with the suction cup.
- **ⓘ** There are several clips attaching the front panel assembly to the rear case, so you may need to use a combination of the suction cup and plastic opening tool to free the front panel assembly.

## Step 6



- Pull the plastic nub to release the vacuum seal on the suction cup.
- Remove the suction cup from the display assembly.


## Step 7



- Pull the home button end of the front panel assembly away from the rear case, using the top of the phone as a hinge.
- Open the display to about a 90° angle, and lean it against something to keep it propped up while you're working on the phone.
- Add a rubber band to keep the display securely in place while you work. This prevents undue strain on the display cables.

**(i)** In a pinch, you can use an unopened canned beverage to hold the display.

## Step 8

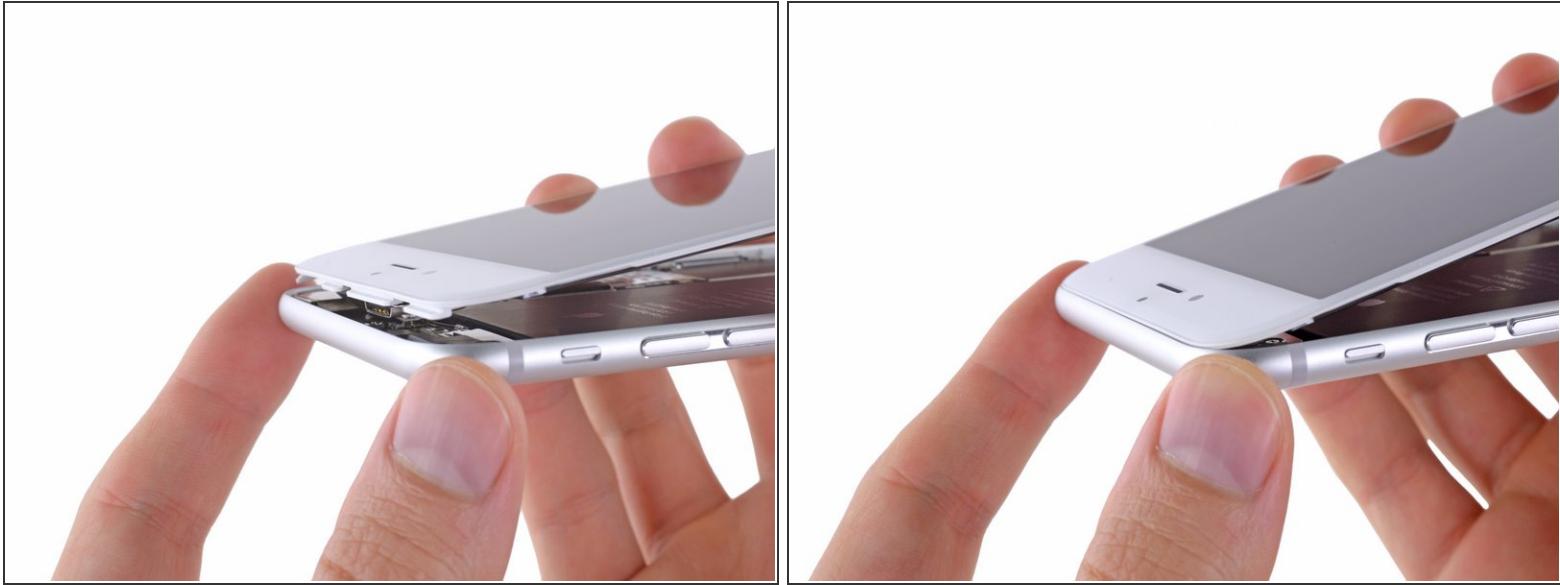

- ⓘ Several clips along the top edge of the front panel form a partial hinge, allowing the front panel assembly to swing open like a book.
- ⚡ During reassembly, align the clips just below the top edge of the rear case. Then, slide the front panel upward until its top edge is flush with that of the rear case.

## Step 9



- Remove the following Phillips screws from the battery connector bracket:
  - One 2.3 mm screw
  - One 3.1 mm screw

## Step 10



- Remove the metal battery connector bracket from the iPhone.

## Step 11



- Use a clean fingernail or the edge of an opening tool to gently pry the battery connector up from its socket on the logic board.

**⚠** Take care to **only** pry up on the battery connector, and not the socket on the logic board. If you pry up on the logic board socket, you may break the connector entirely.

## Step 12



- Remove the following Phillips screws securing the front panel assembly cable bracket:
  - Three 1.2 mm screws
  - One 1.5 mm screw
  - One 2.9 mm screw


**⚠ Do not attempt to insert longer screws into the red marked screw holes. Doing so may result in irreparable damage to the logic board.**

## Step 13



- Remove the front panel assembly cable bracket from the logic board.


## Step 14

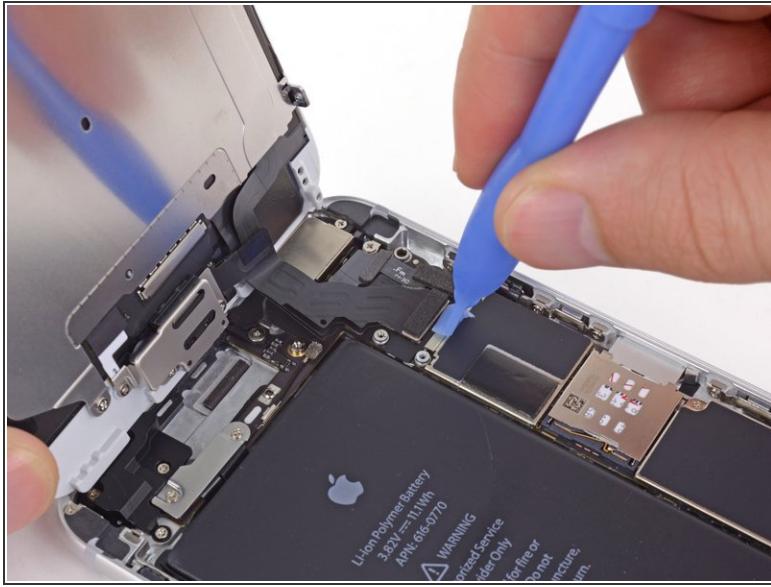

⚠ In the next four steps, take care to pry up **only** on the cable connectors, and not on their sockets on the logic board.

- While still supporting the front panel, use a fingernail or the edge of an opening tool to disconnect the front-facing camera and earpiece speaker connector.


## Step 15

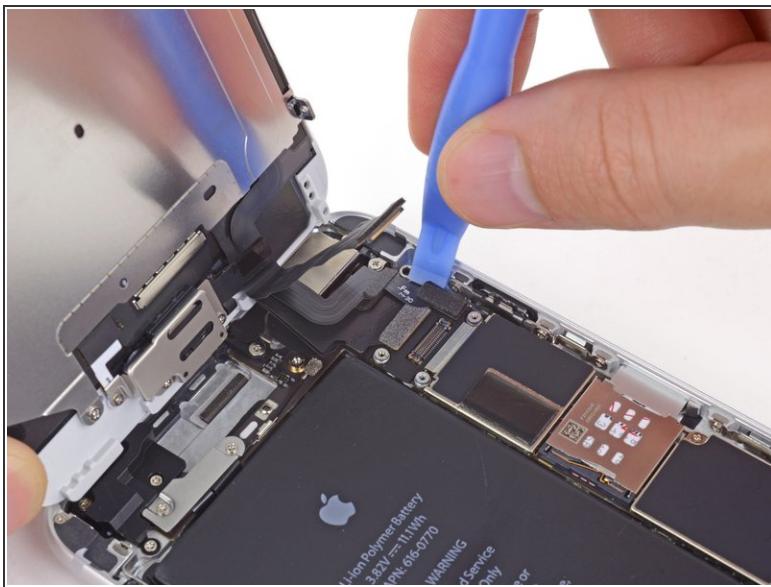

- Disconnect the home button cable connector.

This document was generated on 2020-04-14 01:06:10 AM (MST).



## Step 16

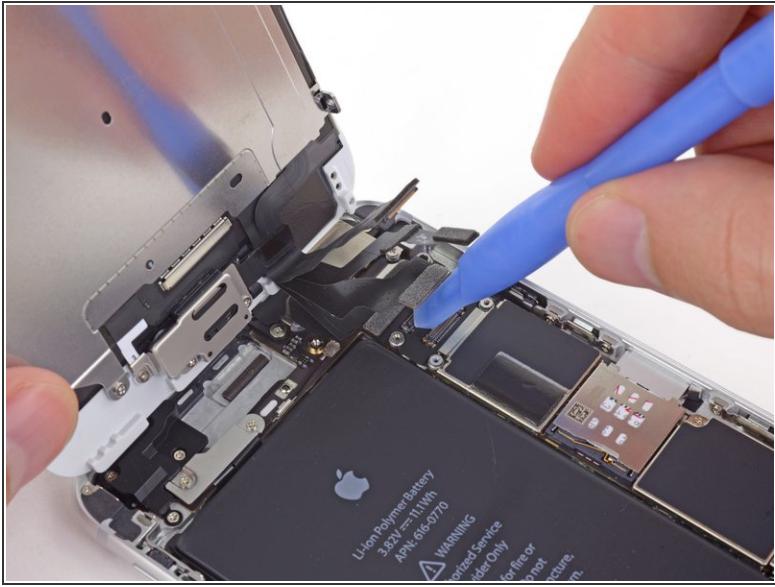

⚠ Make sure the battery is disconnected before you disconnect or reconnect the cable in this step.

- Use a plastic opening tool to disconnect the display data cable connector.
- When reassembling your phone, the display data cable may pop off the connector. This can result in white lines or a blank screen when powering your phone back on. If that happens, simply reconnect the cable and power cycle your phone. The best way to power cycle your phone is to [disconnect and reconnect the battery connector](#).


## Step 17

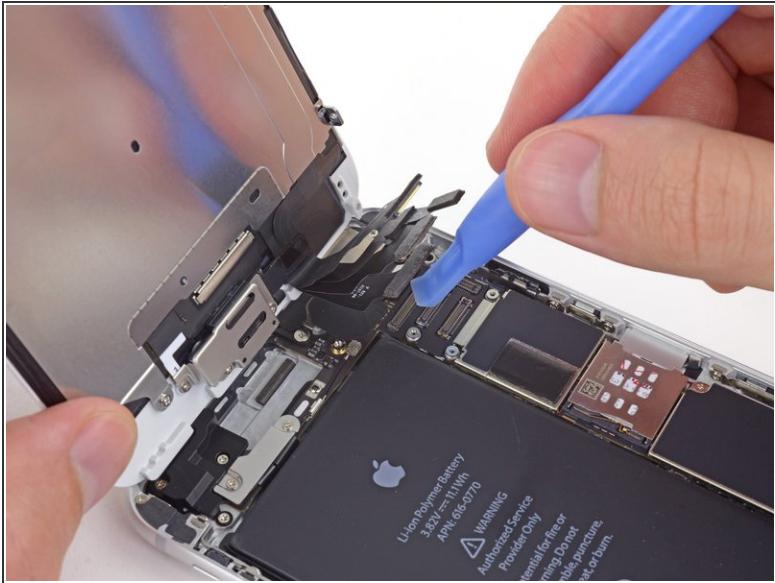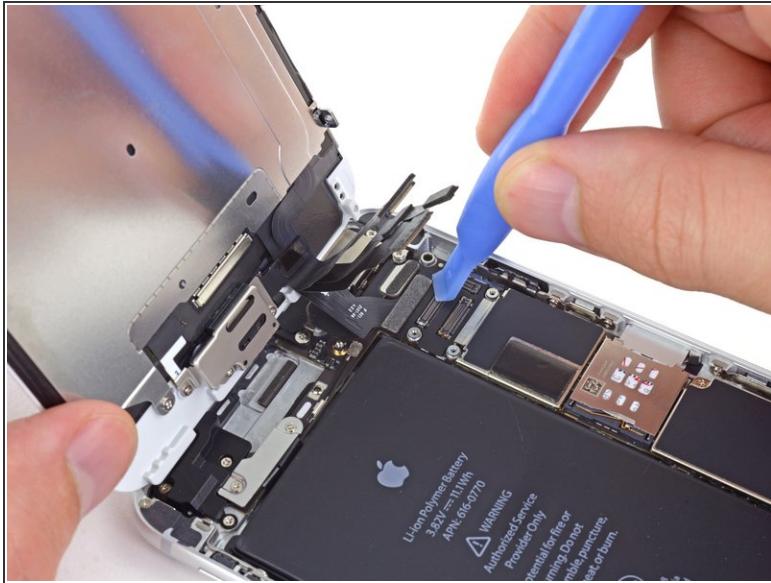

- Finally, disconnect the digitizer cable connector.

- ★ When reconnecting the digitizer cable, **do not press the center of the connector**. Press one end of the connector, then press the opposite end. Pressing in the center of the connector can bend the component and cause digitizer damage.

## Step 18

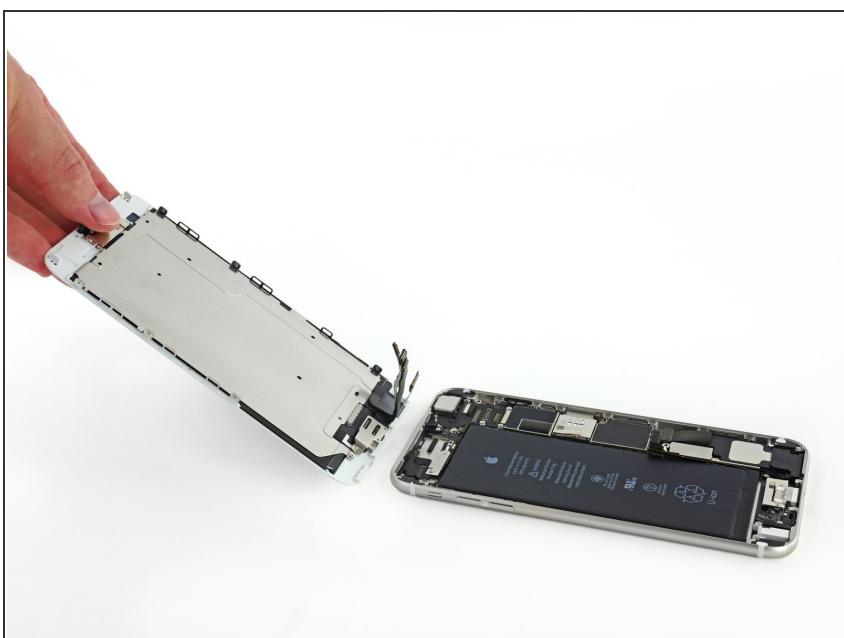

- Remove the front panel assembly from the rear case.


## Step 19 — Battery



- Peel back the first battery adhesive tab from the bottom right edge of the battery.

 Use your fingers or blunt tweezers. Be extra careful when working near the battery; puncturing a lithium-ion battery can release dangerous chemicals and cause a fire.

## Step 20

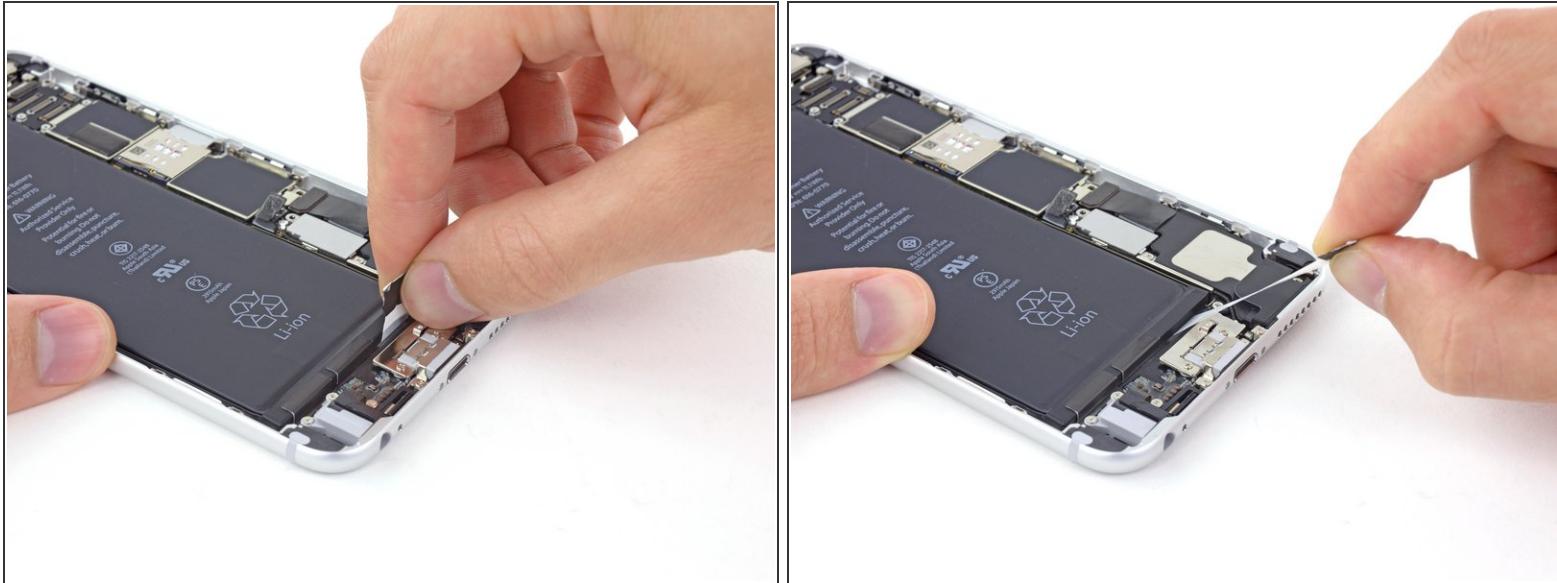

**⚠** Try to keep the strips flat and unwrinkled during this procedure; wrinkled strips will stick together and break instead of pulling out cleanly.


- Very slowly, pull and stretch one adhesive strip away from the battery, toward the bottom of the iPhone.
- **(i)** Allow the strip to stretch out before pulling any harder. If you can't feel it stretching, ease up, or it will break.
- Pull at as low of an angle as you can without snagging the adhesive strip on any of the components along the lower edge of the phone.
- Don't press down on the battery as you pull the strip.

**(i)** The strip will stretch to many times its original length. Continue pulling slowly until it releases and slips out from underneath the battery.

**(i)** If the battery adhesive tabs break during the removal process, use your fingers or blunt tweezers to retrieve the remaining length of adhesive, and continue pulling.

**⚠** If any of the adhesive strips break underneath the battery and cannot be retrieved, try to remove the remaining strips, and then **proceed as instructed below**.

## Step 21

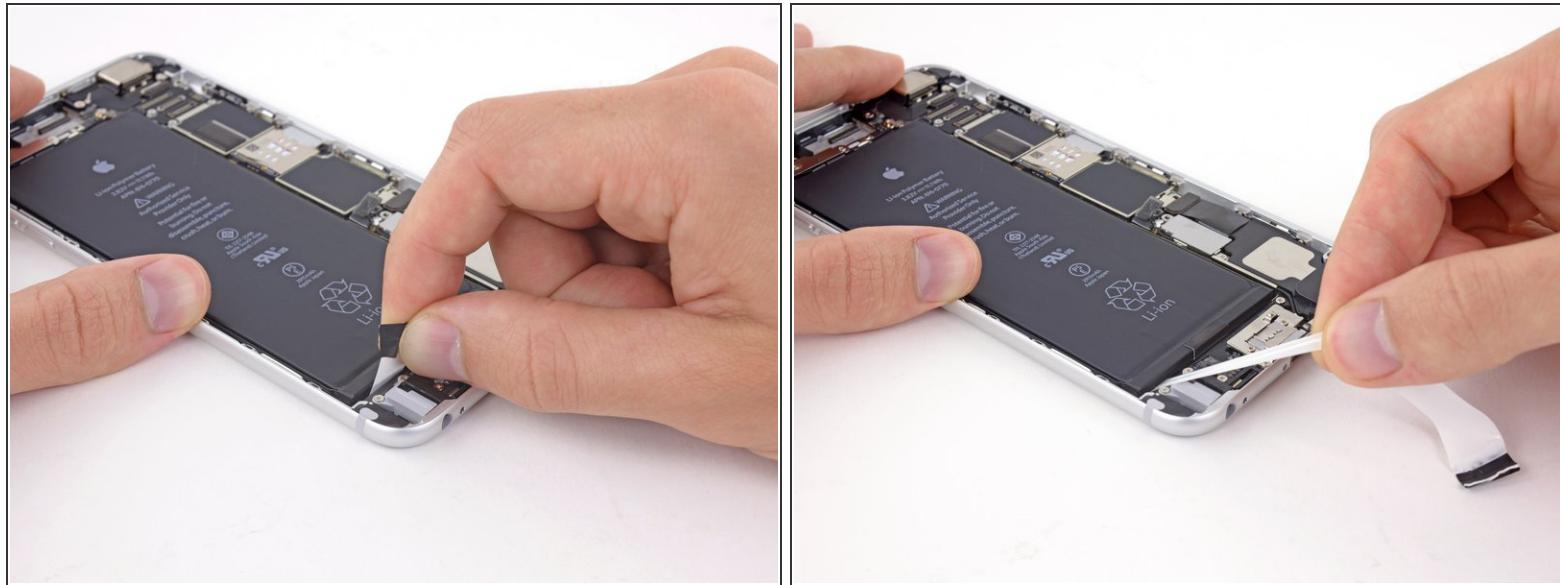

- Peel back the second battery adhesive tab from the other side of the battery.
- Again, pull and slowly stretch the adhesive tab to slide it out from between the battery and the rear case.
- Continue pulling the adhesive tab until it releases completely from the battery. If it breaks, try to retrieve the remaining length and continue pulling, or proceed as instructed below.

## Step 22



- Peel back the final battery adhesive tab from the bottom edge of the battery.
- Gently pull the battery adhesive tab upward and away from the battery, allowing the adhesive strip to slowly slide out from between the battery and the rear case.

**⚠** Place one hand over the battery as the final strip comes out, or it may fling the battery out of the iPhone.

- Continue pulling until the final strip comes free from the iPhone.
  - If you removed all three adhesive strips successfully, [\*\*skip over the next two steps\*\*](#).

**⚠** If any of the adhesive strips broke off underneath the battery and could not be retrieved, **continue with the next step below**.

## Step 23



- If any of the adhesive strips broke off and the battery remains stuck to the rear case, [prepare an iOpener](#) or use a hair dryer to heat the rear case directly behind the battery.

## Step 24



- Flip the iPhone back over and insert a plastic card between the left side of the battery and the rear case.

**⚠** Don't pry under the topmost section of the battery, near the volume up button and mute switch, or you may damage the [audio controls cable](#), which is adhered to the rear case just beneath the battery.

**⚠** Do not pry against the logic board, or you may permanently damage your iPhone.



Be careful to keep the card as flat as possible to avoid bending the battery, which may damage it and cause it to release dangerous chemicals.


- Press the card in farther to break up the adhesive behind the battery.
- **(i)** Alternatively, a piece of dental floss may be used to separate the battery from the rear case. A stronger alternative to dental floss is an unwound guitar string, such as a 0.009 E string from a 12-string set.
- Thread the floss or string underneath one end of the battery and pull side to side in a sawing motion to separate the adhesive.

## Step 25



- Remove the battery from the iPhone.
- **(i)** If your replacement battery came in a plastic sleeve, remove the sleeve before installation by pulling it away from the the ribbon cable.
- **(i)** If your new battery doesn't have adhesive preinstalled, refer to [this guide](#) to replace the adhesive strips.
- **(i)** Perform a [hard reset](#) after reassembly. This can prevent several issues and simplify troubleshooting.

## Step 26 — Antenna Assembly

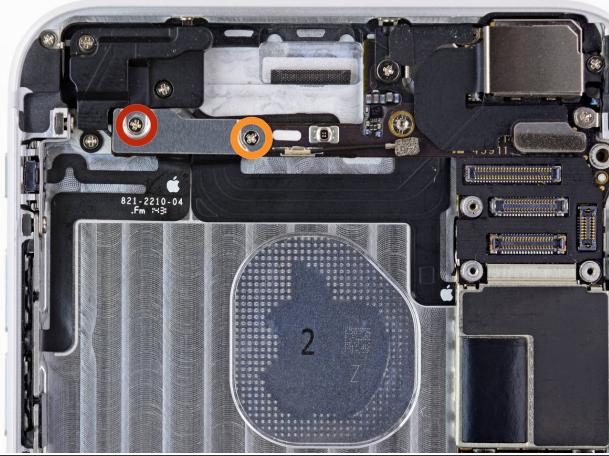

- Remove the following screws securing the antenna bracket to the rear case:
  - One 1.5 mm Phillips #00 screw
  - One 2.8 mm Phillips #00 screw

## Step 27




- Grasp the antenna bracket with a pair of tweezers and lift it off the iPhone.

## Step 28

- Carefully pry the antenna connector up off the logic board with a plastic opening tool.




## Step 29

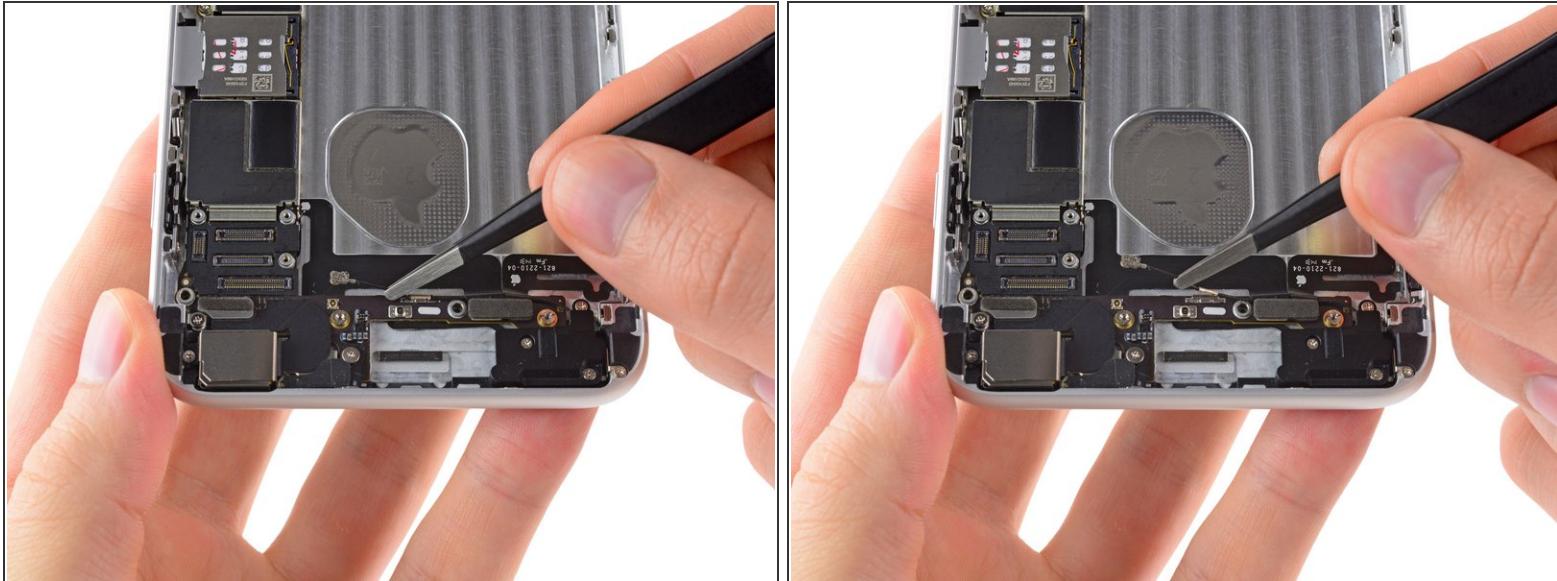


- Grasp the antenna connector with a pair of tweezers and gently lift it from its retaining clip on the logic board.

## Step 30

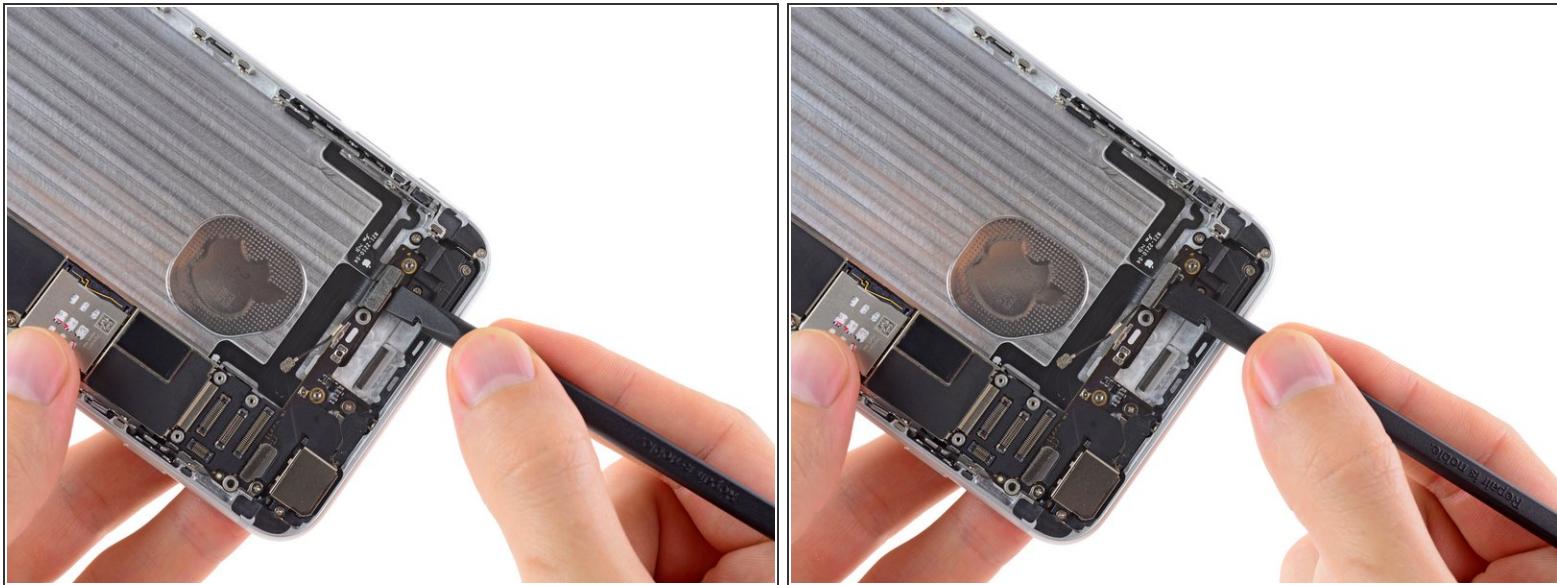

- ⓘ The two connectors may be coupled by a single adhesive tab. If this is the case, then they may detach as a pair.
- Disconnect the power button cable and audio control cable connectors from their respective sockets on the logic board.

## Step 31

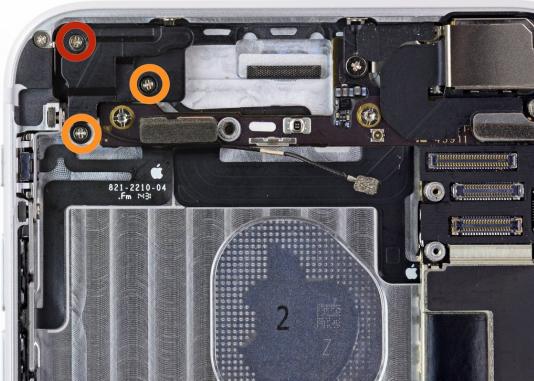



- Remove the following screws securing the top cellular antenna to the rear case:
  - One 2.8 mm Phillips #00 screw
  - Two 1.6 mm Phillips #00 screws

## Step 32




- Use a pair of tweezers to grasp and remove the top cellular antenna out of the iPhone.
- ☒ During reassembly, make sure to place the small washer in the top left corner of the antenna assembly.

## Step 33 — Audio Control and Rocker Switch Cable

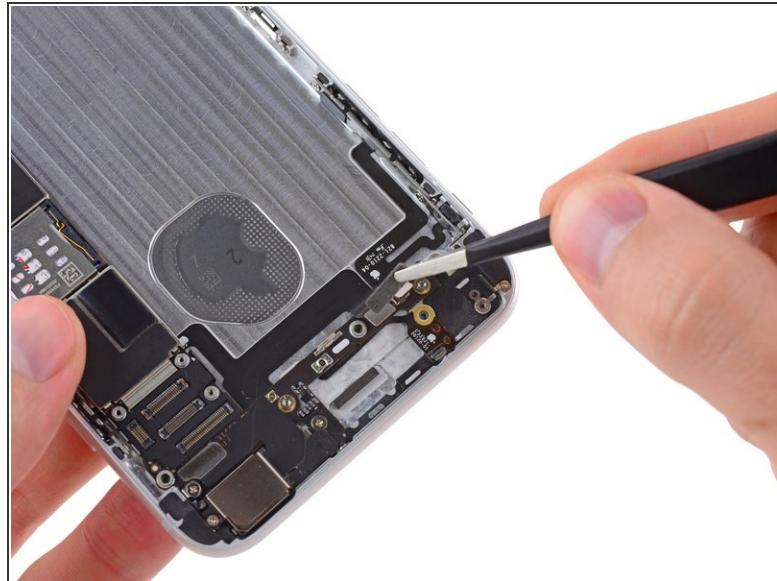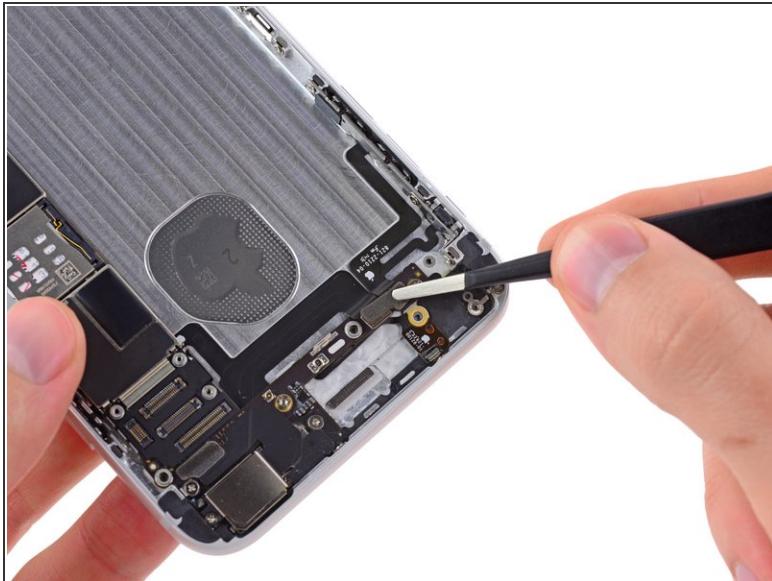

- Use a pair of tweezers to peel the single adhesive tab that resides on top of both the power button and audio control/rocker switch cable connectors.

## Step 34

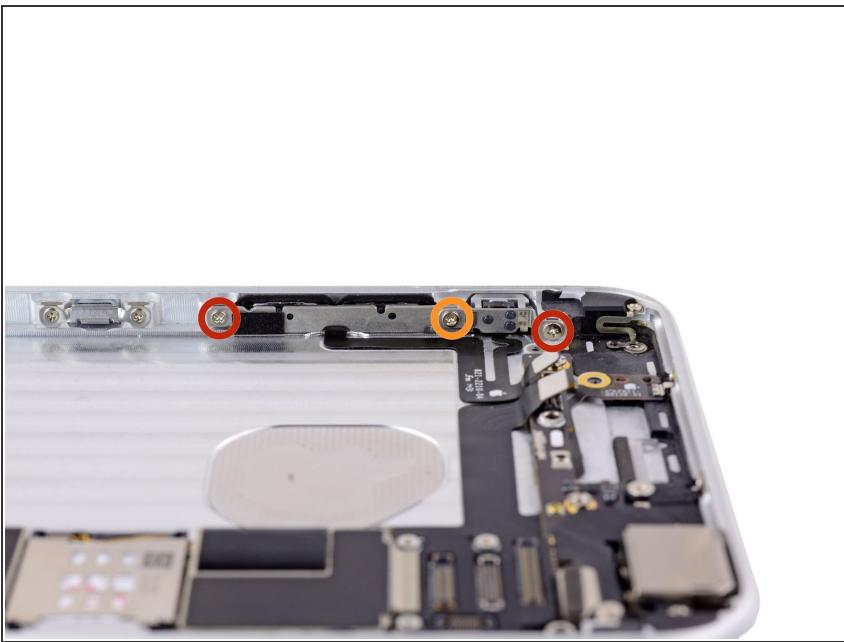

- Remove the following screws securing the audio control and rocker switch cable to the rear case:
  - Two 2.0 mm Phillips #00 screws
  - One 2.5 mm Phillips #00 screw


## Step 35



- Grasp the audio control and rocker switch cable with a pair of tweezers.
- Slowly peel the audio control and rocker switch cable off the rear case.


**⚠** Peel with care. The cable is secured to the rear case with mild adhesive.

## Step 36 — Audio Control and Rocker Switch Buttons

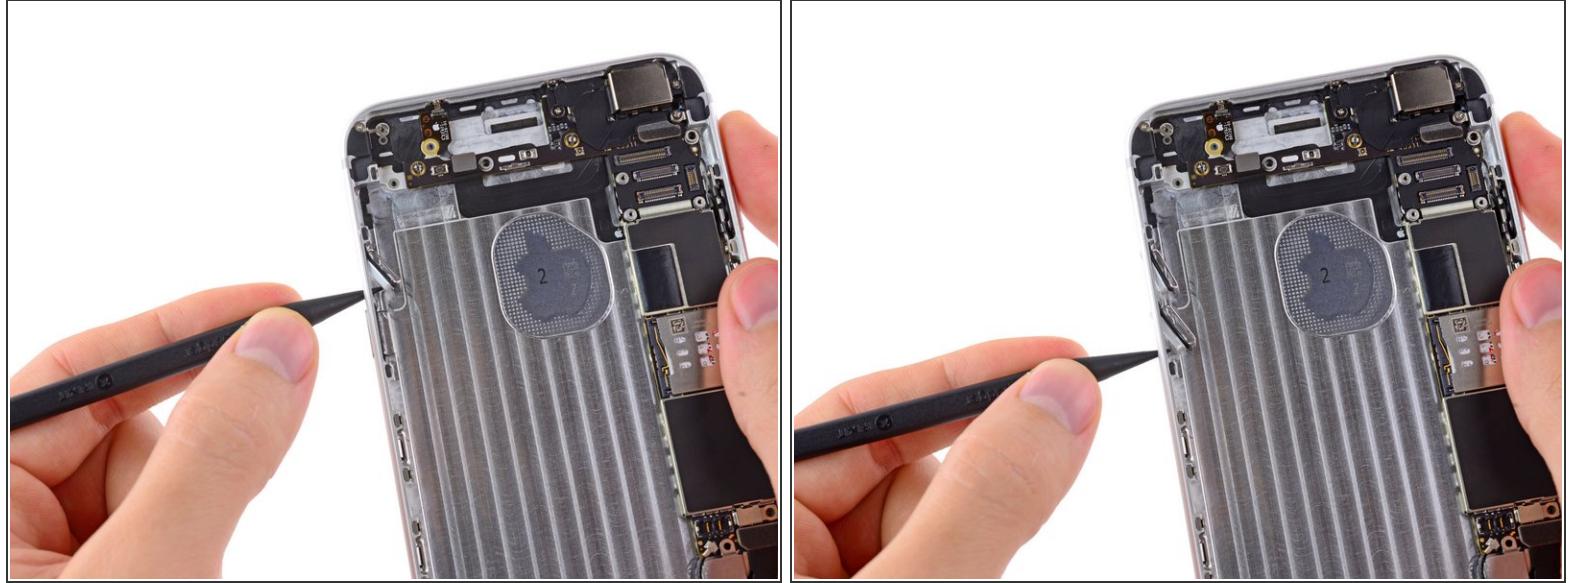

- Use the tip of a spudger to push the audio control and rocker switch buttons out of their recess on the rear case.

## Step 37

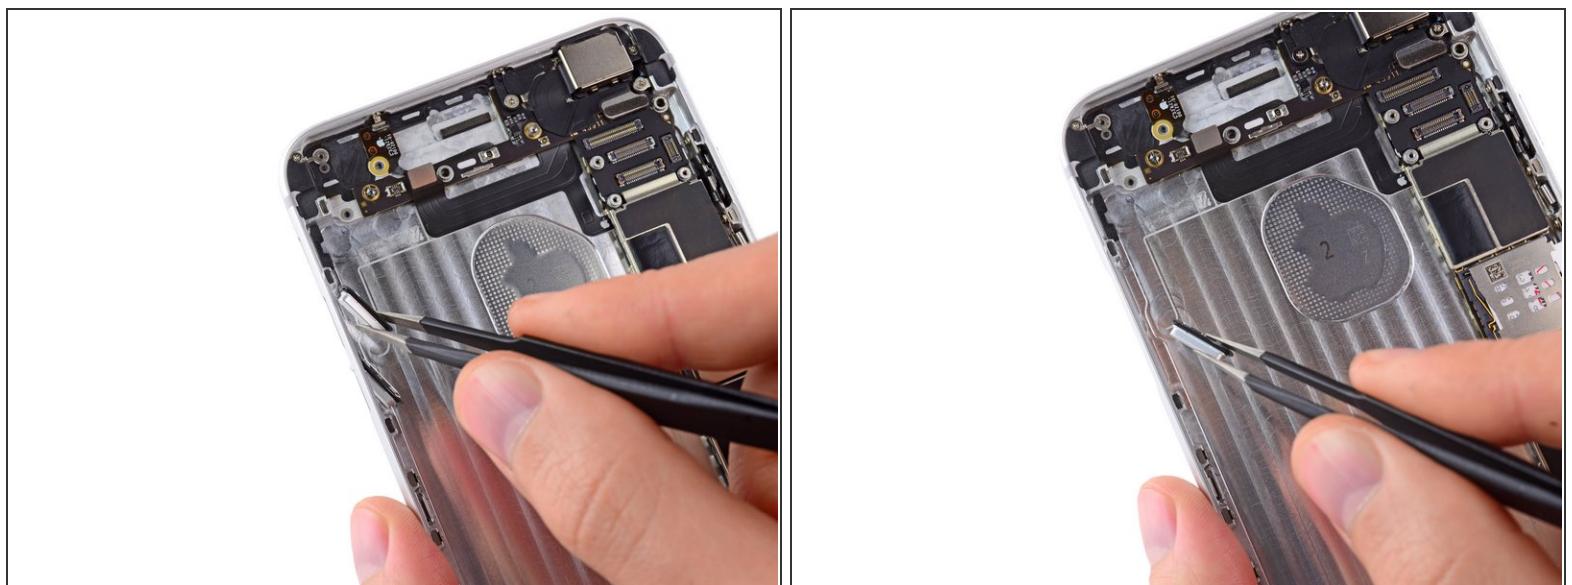

- Gently grasp both top and bottom audio control buttons with a pair of tweezers and remove them from the iPhone.

To reassemble your device, follow these instructions in reverse order.