


Installation and User's Guide

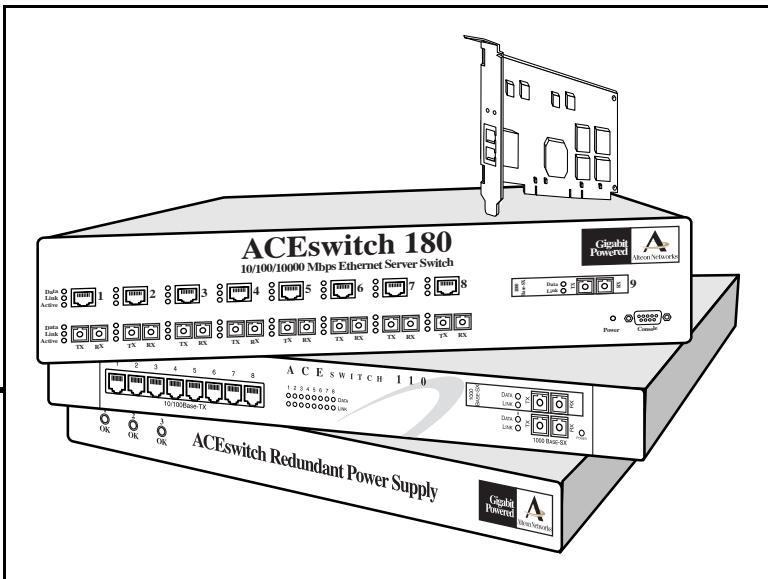

CACHEdirector™ Web Cache Redirection Switch

Part Number: 050054, Revision A

January 1999


Alteon Networks
THE SERVER SWITCHING COMPANY
50 Great Oaks Boulevard
San Jose, California 95119
408-360-5500 Main
408-360-5501 Fax
www.alteon-networks.com

Copyright 1999 Alteon Networks, Inc., 50 Great Oaks Boulevard, San Jose, California 95119, USA. All rights reserved. Part Number: 050054, Revision A.

This document is protected by copyright and distributed under licenses restricting its use, copying, distribution, and decompilation. No part of this document may be reproduced in any form by any means without prior written authorization of Alteon Networks. Documentation is provided "as is" without warranty of any kind, either express or implied, including any kind of implied or express warranty of non-infringement or the implied warranties of merchantability or fitness for a particular purpose.

U.S. Government End Users: This document is provided with a "commercial item" as defined by FAR 2.101 (Oct 1995) and contains "commercial technical data" and "commercial software documentation" as those terms are used in FAR 12.211-12.212 (Oct 1995). Government End Users are authorized to use this documentation only in accordance with those rights and restrictions set forth herein, consistent with FAR 12.211-12.212 (Oct 1995), DFARS 227.7202 (JUN 1995) and DFARS 252.227-7015 (Nov 1995).

Alteon Networks, Inc. reserves the right to change any products described herein at any time, and without notice. Alteon Networks assumes no responsibility or liability arising from the use of products described herein, except as expressly agreed to in writing by Alteon Networks, Inc. The use and purchase of this product does not convey a license under any patent rights, trademark rights, or any other intellectual property rights of Alteon Networks, Inc.

CACHEdirector™ is a trademark of Alteon Networks, Inc. in the United States and other countries.

Regulatory Compliance

FCC Class A Notice: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: 1. This device may not cause harmful interference. 2. This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Do not make mechanical or electrical modifications to the equipment.

VCCI Class 1: The equipment is Type 1 Data Processing Equipment and is intended for use in commercial and industrial districts. It has been tested and found to comply with VCCI technical requirements for the purpose of protection against electronic interference. When used in residential districts or their peripheral areas, radio, and TV receiver units may be subject to radio interference. The operation should be done in accordance with the Instruction Manual.

CE Notice: The CE mark on this equipment indicates that this equipment meets or exceeds the following technical standards: EN50082-1, EN55022, EN60555-2, EN61000-4-1, EN61000-4-2, EN61000-4-3, EN61000-4-4, and EN61000-4-5.



Safety Information

Caution—Product Contains a Lithium Battery. Batteries are not customer replaceable parts. They may explode if mishandled. Do not dispose of the battery in fire. Do not disassemble or recharge.

Caution—Alteon Networks products are designed to work with single-phase power systems having a grounded neutral conductor. To reduce the risk of electric shock, do not plug Alteon Networks products into any other type of power system. Contact your facilities manager or a qualified electrician if you are not sure what type of power is supplied to your building.

Caution—Not all power cords have the same ratings. Household extension cords do not have overload protection and are not meant for use with computer systems. Do not use household extension cords with your Alteon Networks product.

Caution—Your Alteon Networks product is shipped with a grounding type (three-wire) power cord. To reduce the risk of electric shock, always plug the cord into a grounded power outlet.

Caution—The CACHEdirector uses a 3A/250V fast-acting fuse. For continued protection against the risk of fire, replace only with the same type and rating fuse.

Attention—Utiliser un fusible de recharge de même type.

Nordic Lithium Battery Cautions

(Norge) ADVARSEL—Litiumbatteri - Eksplosjonsfare. Ved utskifting benyttes kun batteri som anbefalt av apparatfabrikanten. Brukt batteri returneres apparatleverandøren.

(Sverige) WARNING—Explosionsfara vid felaktigt batteribyte. Använd samma batterityp eller en ekvivalent typ som rekommenderas av apparattillverkaren. Kassera använt batteri enligt fabrikantens instruktion.

(Danmark) ADVARSEL! Litiumbatteri - Eksplosjonsfare ved fejlagtig håndtering. Udkiftning må kun ske med batteri af samme fabrikat og type. Levér det brugte batteri tilbage til leverandøren.

(Suomi) VAROITUS—Paristo voi räjähtää, jos se on virheellisesti asennettu. Vaihda paristo ainoastaan laitevalmistajan suosittelemaan tyyppiin. Hävitä käytetty paristo valmistajan ohjeiden mukaisesti.

Taiwan EMC Statement:

警告使用者：

這是甲類的資訊產品，在居住的環境中使用時，可能會造成射頻干擾，在這種情況下，使用者會被要求採取某些適當的對策。





Contents

Preface vii

Who Should Use This Book vii
How This Book Is Organized vii
Contacting Alteon Networks viii

Preparing for Installation 1-1

Features 1-1
Physical Description 1-2
 Front Panel 1-2
 Rear Panel 1-3

Installing the CACHEdirector 2-1

Preparing for Installation 2-2
CACHEdirector Installation Procedure 2-3
Connecting Cables to Network Ports 2-5

Testing the CACHEdirector 3-1

Connecting a Terminal to the Switch 3-1
Establishing a Console Connection 3-3
Troubleshooting 3-3
 Link LED Does Not Light 3-3
 Temperature Sensor Error Message 3-4

Specifications A-1

Supported Standards A-1
Port Specifications A-1
Physical Characteristics A-1
Power Requirements A-2
Environmental Specifications A-2
Certifications A-2



Preface

This manual describes the features and installation process of the CACHEDirector hardware.

For full documentation on configuring and using the switch's software features, see the *CACHEDirector Release Notes* and the *ACElinate Software User's Guide*.

Who Should Use This Book

This manual is intended for network installers and system administrators engaged in configuring and maintaining a network. It assumes that you are familiar with Ethernet concepts, IP addressing, the IEEE 802.1d Spanning-Tree Protocol, and SNMP configuration parameters.

How This Book Is Organized

Chapter 1, “Preparing for Installation,” provides a brief overview of the CACHEDirector, including a description of switch features, ports, and LEDs.

Chapter 2, “Installing the CACHEDirector,” describes how to install the switch, and how to connect network cables.

Chapter 3, “Testing the CACHEDirector,” describes how to connect a terminal for viewing system messages, and provides suggestions for troubleshooting.

Appendix A, “Specifications,” describes the physical characteristics of the CACHEDirector.

Contacting Alteon Networks

Use the following information to access Alteon Networks Online, customer support, or sales.

- Web access:

<http://www.alteon-networks.com>

This is the URL of Alteon Networks Online Information. This web site includes product information, software updates, release notes, and white papers. The web site also includes access to Alteon Networks Customer Support for accounts under warranty or that are covered by a maintenance contract.

- E-mail access:

support@alteon-networks.com

E-mail access to Alteon Networks Customer Support is available to accounts that are under warranty or covered by a maintenance contract.

- Telephone access to Alteon Networks Customer Support:

1-888-Alteon0 (or 1-888-258-3660)
1-408-360-5695

Telephone access to Alteon Networks Customer Support is available to accounts that are under warranty or covered by a maintenance contract. Normal business hours are 8 a.m. to 6 p.m. PST.

- Telephone access to Alteon Networks Sales:

1-888-Alteon2 (or 1-888-258-3662), and press 2 for Sales
1-408-360-5600, and press 2 for Sales

Telephone access is available for information regarding product sales and upgrades.



Preparing for Installation

The CACHEDirector provides innovative value-added services for Web Cache Redirection, while simultaneously functioning as a 10/100 Mbps network switch. This chapter lists describes the hardware features of the CACHEDirector.

Features

- Eight ports selectable between 10 and 100 Mbps Ethernet at half- or full-duplex
- Concurrent Layer 2 and Layer 4 switching
- Application Redirection allows the interception and redirection of client/server IP requests
- VLAN support for up to 16 VLANs per switch
- Configuration and management is performed via local console port (DCE), Telnet, or through the ACEview web-based user interface for direct browser-to-switch interaction.
- Command line interface setup facility reduces the initial setup time
- TFTP download to Flash memory for software updates and upgrades
- Switching Processor (SP) capability to learn up to 1023 MAC addresses
- Master Forwarding Database supports up to 1023 MAC address entries per switch
- IEEE 802.1d Spanning-Tree Protocol support
- IEEE 802.3x Flow Control support for full-duplex ports
- IEEE 802.1Q Frame Tagging on all ports when VLANs are enabled
- SNMP support: RFC 1213 MIB-II, RFC 1493 Bridge MIB, RFC 1398 Ethernet-like MIB, and RFC 1573 Interface Extensions MIB compliant. Alteon Networks Enterprise MIB supporting the configuration and monitoring of all Alteon Networks specific features.
- Hot Standby Support for L4 Switching

Physical Description

Front Panel



Figure 1-1 CACHEdirector Front Panel

The front panel of the CACHEdirector has eight RJ-45 ports for connecting 10/100 Mbps Ethernet segments. The ports are auto-negotiating and support half- or full-duplex operation.

Each port has three LEDs. The following table describes the LED states:

Table 1-1 Front Panel Port LEDs

LED	State	Description
Data	Blinking	Data detected on the port
	Off	No data detected on the port
Link	On	Good link
	Off	No link; could be a result of a bad cable or bad connector
	Blinking	Port has been disabled by software
Status	On/Off	Reserved for future functions. Currently same as Link.
All three port LEDs	Flashing in sequence	When no connection is detected on the port, the port LEDs will light in sequence, from the bottom LED to the top.

The green Power LED lights when the CACHEdirector is on and receiving proper power.

There is also a female DB-9 serial connector labeled “Console” for the console (DCE) connection to the switch.

Rear Panel

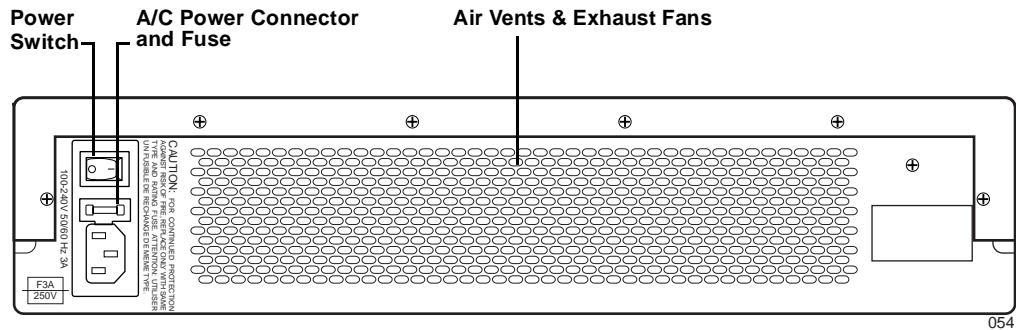


Figure 1-2 CACHEDirector Rear Panel

The rear panel of the CACHEDirector has the following components:

- A power switch
- A fuse housing
- An A/C power connector



Installing the CACHEdirector

This chapter tells you how to install the CACHEdirector. It also gives suggestions for troubleshooting.

The CACHEdirector is shipped with the following items:

- An A/C power cord
- Two mounting brackets (for rack mounting)
- Four rubber feet (for tabletop placement of the switch)
- Six Phillips screws for installing the mounting brackets

Switch installation involves these tasks:

- Unpacking the switch
- Mounting the switch
- Connecting the power cord and plugging it into a power outlet
- Connecting network cables to the switch
- Powering on the switch

Preparing for Installation

Before installing the CACHEdirector:

- 1. Unpack the switch from the box.**
- 2. Turn the power switch to the OFF (O) position.**
- 3. Choose a suitable location to install the switch**



CAUTION—Observe the following precautions when selecting a site and installing the switch:

The ambient temperature of an operating CACHEdirector must not exceed 40°C. When installing the switch in a closed or multi-unit rack assembly, please consider that the operating ambient temperature of the switch may be higher than the ambient temperature of the room. Take any appropriate steps to ensure that the switch does not overheat.

For proper air circulation, the vents on the front, back, and sides of the switch should not be blocked or obstructed by cables, panels, rack frames, or other materials.

Do not place or rack-mount the switch in any way which would exceed the maximum weight bearing capacity of the surface or rack, or which would cause potentially hazardous uneven mechanical loading.

Avoid overloading your electrical supply circuits. Electrical ratings are printed on the nameplates of all your equipment. Be sure that your supply circuits and wiring can support the rated power draw of whatever equipment is used.

Make sure the equipment is properly grounded electrically, and that power connections are safe, particularly when using power strips.

CACHEdirector Installation Procedure

1. Always observe the precautions outlined in the manuals for this and all other equipment you are installing (see above).
2. Determine where the unit will be mounted from the following options:
 - To mount the unit into an equipment rack, connect the two mounting brackets to the switch using the supplied screws as shown in Figure 2-1, and install the switch as shown in Figure 2-2 using the appropriate screws for your rack-mount system (four 10-32, 12-24, M5X.8-6H, or M6X1-6H type screws).

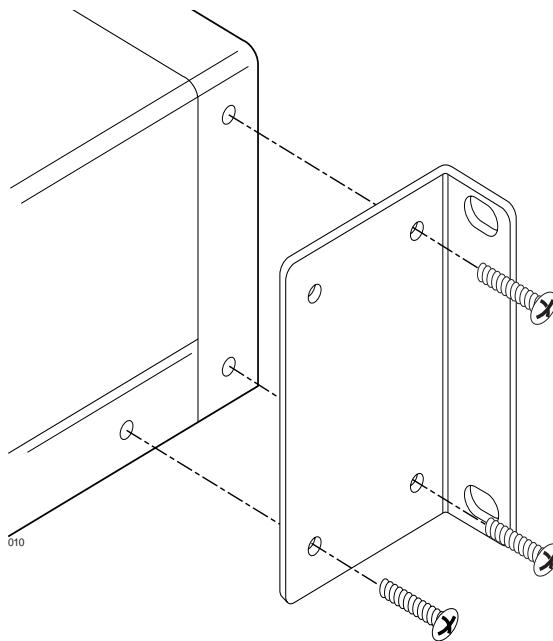


Figure 2-1 Position Mounting Brackets for Rack Mount

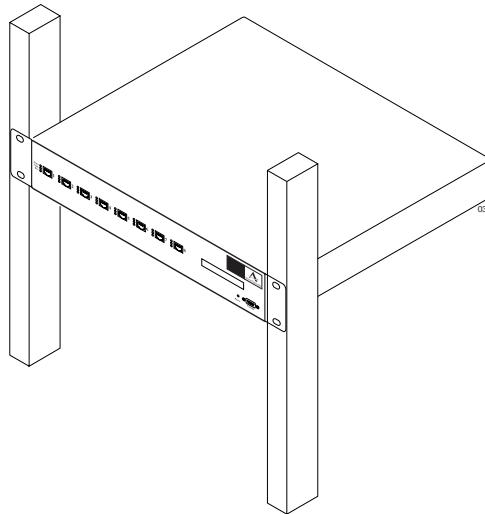


Figure 2-2 Rack Mounted CACHEdirector

- To place the unit on a tabletop, attach the four rubber feet to the bottom of the switch.

NOTE – Do not use the rubber feet for a rack mount installation.

3. Connect the power cord to the CACHEdirector, verify that the power switch is in the off position, and plug the cord into a properly fused outlet.



CAUTION—The switch uses a 3A/250V fast-acting fuse. For continued protection against risk of fire, replace only with the same type and rating fuse. French: *Attention—Utiliser un fusible de recharge de même type.*

4. Connect the Ethernet cables to the switch.

See “Connecting Cables to Network Ports” on page 2-5 for specifics.

5. Power on (I) the switch.

NOTE – All three LEDs will flash in an animated sequence on any port where no connection is detected on the jack. This is normal behavior, and indicates that the switch is ready to detect port connections.

Connecting Cables to Network Ports

The RJ-45 jacks are used for connecting 10/100 Mbps Ethernet segments. All ports are auto-negotiating and support half- and full-duplex operation. The port LEDs light to indicate various port connection conditions (see [Table 1-1 on page 1-2](#)).

Use a straight-through cable on the 10/100 Mbps ports if the device attached to the port is a computer. If the device is a switch, hub, or router, use a crossover cable. See Figure 2-3 for cabling details. You can use a straight-through cable with a switch, hub, or router if it has an “uplink” enable/disable switch that you can set.

Straight-through cable		Crossover cable	
CACHEdirector 10/100 Mbps Port	Computer Port	CACHEdirector 10/100 Mbps Port	Hub, Switch, or Router Port
pin 1	_____	pin 1	_____
pin 2	_____	pin 2	_____
pin 3	_____	pin 3	_____
pin 6	_____	pin 6	_____

Figure 2-3 Pin assignments for 10/100 Mbps port cables



Testing the CACHEdirector

The CACHEdirector console port is used for receiving important system information and for configuring the switch. This chapter explains how to connect a terminal to collect system information. For instructions on using the console to view and configure switch settings, see the *CACHEdirector Release Notes* and the *ACElerate Software User's Guide*.

Connecting a Terminal to the Switch

To establish a console (DCE) connection with the CACHEdirector, the following is required:

- An ASCII terminal or a computer running ASCII terminal emulation software set to the parameters shown in Table 3-1.

Table 3-1 Console Configuration Parameters

Parameter	Value
Baud Rate	9600
Data Bits	8
Parity	None
Stop Bits	1

- A standard serial cable with a male DB9 connector (see Table 3-2).

Table 3-2 Pinouts for DB9 Serial Connector

DB9 Serial Connector	Pin	Description
	1	DCD
	2	RxD
	3	TxD
	4	DTR
	5	Ground
	6	DSR
	7	RTS
	8	CTS
	9	Not used






Figure 3-1 and Figure 3-2 show the pin assignments for the console to use to configure serial cables to terminal connectors with 9-pin or 25-pin connectors.

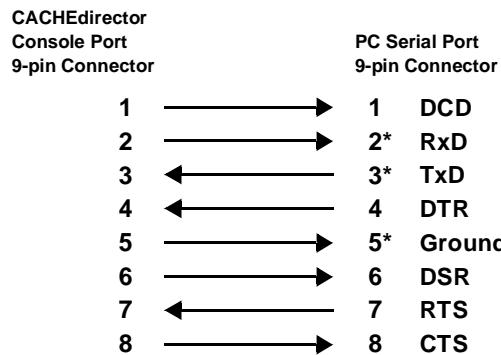

Note: Only the pins for RxD, TxD, and Ground are required.

Figure 3-1 9-pin to 9-pin Connector Pin Assignments

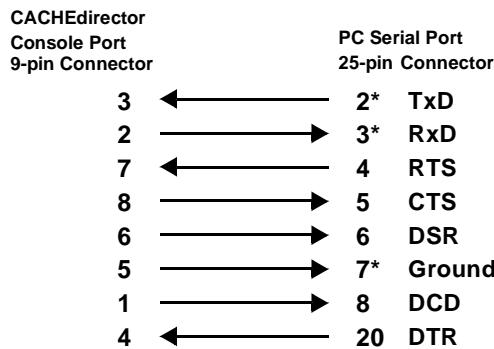

Note: Only the pins for RxD, TxD, and Ground are required.

Figure 3-2 9-pin to 25-pin Connector Pin Assignments

Establishing a Console Connection

- 1. Connect the terminal to the Console port using the serial cable.**
- 2. Power on the terminal.**
- 3. To establish the connection, press <Enter> a few times on your terminal.**
- 4. Enter the password when prompted.**

The default administrator password is `admin`. Once your password is verified, the Main menu is displayed. For instructions on using the menus to configure the switch, see the *CACHEdirector Release Notes* and the *ACElereate Software User's Guide*.

Troubleshooting

This section contains information about possible problems that may occur or error messages that might display if the switch is not properly installed or configured.

Link LED Does Not Light

Symptom: The “Link” LED (green) does not light. When you check the Link state (see the *ACElereate Software User's Guide*), the status is reported as “down.”

Cause: A port configuration mismatch between two devices or a cable problem.

- Port configuration mismatch. If the switch port is configured with a specific speed or duplex mode (for example, 100 Mbps, full duplex) check to see that the other device is set to the same configuration. If the switch port is configured to auto-negotiate, check to see that the other device is also set to auto-negotiate. Refer to the *ACElereate Software User's Guide* for more information about setting speed and mode.
- Cable problem. Make sure you are using the correct type of cable to connect the switch to other devices. Refer to Figure 2-3 for information about crossover cables for connecting switches, hubs, or routers to the CACHEdirector.



Temperature Sensor Error Message

The following message is displayed on the console if the CACHEdirector temperature exceeds the temperature threshold. Immediate attention is required.

```
Temperature at sensor xxx exceeds threshold
Current temperature is xx °C    Threshold is xx°C
```

Actions:

- Make sure that the air circulation vents on the front, back, and sides of the switch are free from obstruction by cables, panels, rack frames, or other materials.
- Make sure that all four cooling fans inside the switch are running. The fans are located behind the ventilation grill at the rear of the switch. The exhaust from all four fans should be blowing outward with roughly equal air pressure (although it is normal for the exhausts to have different temperatures). You can also use a flashlight to check whether the fan blades are moving. If any fan stops during switch operation, contact customer support.
- Remember that units in a closed or multi-unit rack assembly may have an operating ambient temperature higher than the ambient temperature of the room. The ambient temperature of an operating CACHEdirector must not exceed 40°C. If the operating ambient temperature cannot be lowered before this maximum is reached, turn off the switch and let it cool.
- It may be necessary to cool the room to a lower temperature or provide a fan for greater air circulation. Resolve the room's cooling and circulation problems before turning the switch back on.

Specifications

Supported Standards

- Spanning Tree Protocol (IEEE 802.1d)
- Logical Link Control (IEEE 802.2)
- 10Base-T/100Base-TX (IEEE 802.3, 802.3u)
- Flow Control (IEEE 802.3x)
- Frame Tagging (IEEE 802.1Q) on all ports when VLANs are enabled
- SNMP (RFC 1213 MIB-II, RFC 1493 Bridge MIB, RFC 1398 Ethernet-like MIB, RFC 1573 Interface Extensions MIB compliant)

Port Specifications

Port	Connector	Media	Maximum Distance
10Base-T	RJ-45	Cat. 3, 4, or 5 UTP	100 meters (325 feet)
100Base-TX	RJ-45	Cat. 5 UPT	100 meters (325 feet)
Console (DCE)	Female DB-9	RS-232C (serial)	25 meters (80 feet)

Physical Characteristics

Characteristic	Measurement
Width	43.18 cm (17.00 inches) (Standard 19" EIA rack mountable)
Height	8.81 cm (3.47 inches)
Depth	45.72 cm (18.00 inches)
Weight	8 kg (18 lb)

Power Requirements

Specification	Measurement
Auto-ranging power supply	100-240VAC @ 50-60 Hz, 3A
Maximum power consumption	80 Watts 3A @ +5VDC

Environmental Specifications

Condition	Operating Specification	Storage Specification
Temperature	0° to 40° C (+32° to +104° F)	-40° to +85° C (-40° to +185° F)
Relative humidity	5 to 85% non-condensing (40° C, 16 hour dwells at extremes)	5 to 95% non-condensing 10° C/hour
Altitude	up to 3,050 meters (10,000 feet)	up to 10,750 meters (35,000 feet)
Shock	10g, 1/2 sine wave, 11 msec	60g, 1/2 sine wave, 11 msec
Vibration, peak to peak displacement	0.005 in. max (5 to 32 Hz)	0.1 in. max (5 to 17 Hz)
Vibration, peak acceleration	0.25g (5 to 500 Hz) (Sweep Rate = 1 octave/minute)	0.25g (5 to 500 Hz) (Sweep Rate = 1 octave/minute)

Certifications

Category	Compliance
Emmisions	FCC, CFR 47 Part 15, Subpart A ANSI C63.4D11.4 1991 FCC OST 55 VCCI Class 1 CISPR 16, CISPR 22 CSA C108.8-M1983 (R1989) EN55022 CE EN6100-3-2, EN60555-2
Safety	UL 1950, CUL DIN/VDE 0805 CSA 22.2, No. 950-93 IEC 950 EN 60950 TUV EMKO-TSE (74-SEC) 207/94 Nordic Deviations to EN 60950

